

Instruction Manual Fourth Edition



IAI Corporation



Please Read Before Use

Thank you for purchasing our product.

This Instruction Manual describes all necessary information items to operate this product safely such as the operation procedure, structure and maintenance procedure.

To ensure the safe operation of this product, please read and fully understand this manual. The enclosed DVD in this product package includes the Instruction Manual for this product. For the operation of this product, print out the necessary sections in the Instruction Manual or display them using the personal computer.

After reading through this manual, keep this Instruction Manual at hand so that the operator of this product can read it whenever necessary.

[Important]

- This Instruction Manual is original.
- The product cannot be operated in any way unless expressly specified in this Instruction Manual. IAI shall assume no responsibility for the outcome of any operation not specified herein.
- Information contained in this Instruction Manual is subject to change without notice for the purpose of product improvement.
- If you have any question or comment regarding the content of this manual, please contact the IAI sales office near you.
- Using or copying all or part of this Instruction Manual without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the sentences are registered trademarks.
- DeviceNet is a registered mark of ODVA.
- CC-Link, CC-Link IE and SSCNET is a registered mark of Mitsubishi Electric Corporation.
- PROFIBUS is a registered mark of Siemens.
- CompoNet is the registered trademark of OMRON Corporation.
- EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
- EtherNet/IP is a trademark used under the license of ODVA.
- PROFINET is a trademark used under the license of PROFIBUS Association.
- MECHATROLINK is a registered mark of MECHATROLINK Association.

Construction of Instruction Manual for Each Controller Model and This Manual

MCON-C/CG



Table of Overall Contents

Name for	Each Parts and Their Functions In this section, explains the functions and conditions of the connectors and LED lamps located on the front of the controller.	13
Chapter 1	Specifications Check In this chapter, explains about the specifications, current amperage, model codes and so on for the products.	19
Chapter 2	Wiring In this chapter, explains about the connections to actuators and external devices.	37
Chapter 3	Operation In this chapter, explains the details of each operation such as the initial settings, how to set up in the position data or parameter data, control signals in each mode and how to make operation.	。 63
Chapter 4	Vibration Suppress Control Function In this chapter, explains about the vibration suppress control function to reduce vibration caused by the actuator.	259
Chapter 5	Collision Detection Feature In this chapter, explains the setup and tuning for collision detection feature.	265
Chapter 6	Power-Saving Function In this chapter, explains the feature to reduce the power consumption.	269
Chapter 7	Absolute Reset and Absolute Battery In this chapter, explains the procedures for absolute reset and replacement of battery.	275
Chapter 8	Parameter In this chapter, explains how to set up or fine-tune the controller settings.	283
Chapter 9	Troubleshooting In this chapter, explains how to act in errors and contents of them.	325
Chapter 1	0 Appendix In this chapter, explains compliance with safety categories, model codes of connectable actuators, etc.	349
Chapter 1	1 Warranty In this chapter, explains about the Warranty.	465



Table of Contents

Starting Pr Safety Gui Precaution Internation CE Markin UL Name for E	ocedures de s in Operation al Standards Compliances g Each Parts and Their Functions	· 1 · 8 12 12 12 13
Actuator A	xes	17
Chapter 1	Specifications Check ······	19
1.1	Product Check	19
1.1.1	Parts	19
1.1.2	Teaching Tool	21
1.1.3	Instruction manuals related to this product, which are contained in	
	the instruction manual (DVD)	21
1.1.4	How to Read the Model Nameplate	22
1.1.5	How to read the model	23
1.2	List of Basic Specifications	24
1.3	Calculation for Power Capacity	26
1.4	Specifications for each Field Network	27
1.4.1	Specifications of CC-Link Interface	27
1.4.2	Specifications of CC-Link IE Field Interface	27
1.4.3	Specifications of Componet Interface	27
1.4.4	Specifications of DeviceNet Interface	28
1.4.5	Specifications of EtherNet/ID Interface	28
1.4.6	Specifications of EtherNet/IP Interface	28
1.4.7	Specifications of PROFIBUS-DP Interface	29
1.4.8	Specifications of PROFINE FIO Interface	29
1.4.9		29
1.4.10		29
1.4.11	Specifications of SSCNET II/H Interface	29
1.5	External Dimensions	30
1.5.1	Controller Main Unit	30
1.5.2	Absolute Battery Box	31
1.6	Option	32
1.6.1	Absolute Battery Box	32
1.6.2	Regenerative Resistor Unit (RER-1)	33
1.7	Installation and Storage Environment.	34
1.8	Noise Elimination and Mounting Method	35
Chapter 2	Wiring	37
2 1	Wiring Diagram (Connection of construction devices)	37
2.1	Circuit Diagram	38
2.2	Wiring Method	46
231	Connection to Power Input Connector	46
232	Wiring Layout of System I/O Connector	47
2.3.3	Connection of Drive Cutoff/Emergency Stop Input Connector	48
2.3.4	Connecting with Actuator	49
2.3.5	Connection of Absolute Battery Connector	52
2.3.6	Connection of External Brake Connector	53
2.3.7	Connection of SIO Connector	54
2.3.8	Wiring Layout of Field Network Connector	55

Chapter 3	Operation	63
3.1	Basic Operation	63
3.1.1	Basic Operation Methods	63
3.1.2	Parameter Settings	67
3.2	Initial Setting	68
3.2.1	Operation Mode Setting (Setting in gateway parameter setting tool)	68
3.2.2	Parameter Settings (Setting on RC PC Software)	74
3.3	Setting of Position Data	76
3.4	Field Network Type Address Map	84
3.4.1	PLC Address Construction by each Operation Mode	84
3.4.2	Example for each Field Network Address Map	87
3.4.3	Gateway Control Signals (Common for all operation modes)	. 105
3.4.4	Control Signals for Simple Direct Mode	. 108
3.4.5	Control Signals for Positioner 1 Mode	113
3.4.6	Control Signals for Direct Indication Mode	118
3.4.7	Control Signals for Positioner 2 Mode	. 125
3.4.8	Control Signals for Positioner 3 Mode	. 129
3.4.9	Control Signals for Positioner 5 Mode	. 132
3.4.10	Control Signals for Remote I/O Mode	. 136
3.4.11	About Commands (Position Data Read/Write and Alarm Axis Read)	. 140
3.5	Input and Output Signal Process for Field Network	. 159
3.6	Power Supply	. 161
3.7	Control and Functions of Input and Output Signals of Modes Other than	
a = 1	Remote I/O Mode	. 163
3.7.1	Input and Output Signal Functions	. 163
3.7.2	Operation for Positioner 1/Simple Direct Modes	. 180
3.7.3	Operation for Direct Indication Mode	. 182
3.7.4	Operation for Positioner 2, Positioner 3 and Positioner 5 Modes	. 184
3.8	Control and functions of Input and output signals of Remote I/O Mode	. 186
3.8.1	Operation Supportive Signal = Patterns 0 to 2, 4 and 5 in common	. 186
3.8.2	Operation with the Position No. Input = Operations of PIO Patterns 0 to 2	. 195
3.8.3	Direct Position Specification (Solenoid Valve Mode 1) = Operation of	045
201	PIU Pallern 4	. 215
3.0.4	Direct Position Specification (Solehold Valve Mode 2) – Operation of	007
2.0	PIU PalleIII 5	. 221
3.9 2.0.1	Stortup of Tool	. 231
3.9.1	Stallup of 1001	. 231
3.9.2	Explanation of Eurotiona	230
3.9.3	Operation Mode Setting	. 240
3 10	Field Network Status LEDs	2/18
3.10	CC-Link	2/18
3 10 2	CC-Link IE Field	240
3 10 3	CompoNet	250
3 10 4	DeviceNet	251
3 10 5	EtherCAT	252
3 10 6	EtherNet/IP	254
3 10 7	PROFIBUS-DP	255
3 10 8	PROFINET IO	256
3 10 9	EtherCAT Motion	257
3 10 1		257
3 10 1	1 SSCNETπ/H	257
5.10.1		. 201
Chapter 4	Vibration Suppress Control Function	259
4.1	Setting Procedure	. 261
4.2	Settings of Parameters for Vibration Suppress Control	. 262
4.3	Setting of Position Data	. 263

Chapter 5	Collision Detection Feature	265
5.1	Collision Detection Judgement	265
5.2	Settings	266
5.3	Adjustment.	266
Chapter 6	Power-saving Function	269
6.1	Automatic Servo-off and Full Servo Functions	269
6.1.1	Setting of periods taken until automatic servo OFF	270
6.1.2	Set of power-saving mode	270
6.1.3	Status of positioning complete signal in selection of automatic servo OFF	271
6.2	Selecting Automatic Current Reduction Feature	272
6.2.1	Process When Feature is Active	273
6.2.2	Caution	273
Chapter 7	Absolute Reset and Absolute Battery	275
7.1	Absolute Reset	275
7.2	Absolute Battery (for Simple Absolute Type).	279
7.2.1	Absolute encoder backup specifications	280
7.2.2	Absolute Battery Charge.	280
7.2.3	Absolute Battery Voltage Drop Detection	281
Chapter 8 8.1 8.2 8.3 8.3.1 8.3.2	Parameter Parameter List Detail Explanation of Parameters Servo Adjustment Adjustment of Pulse Motor and Servo Motor Adjustment of Brushless DC Electric Motor	283 284 289 321 321 321 323
Chapter 9 9.1 9.2 9.2.1 9.2.2 9.2.3 9.2.4 9.3 9.3.1 9.4 9.4.1 9.4.2 9.4.3	Troubleshooting Action to Be Taken upon Occurrence of Problem Fault Diagnosis. Impossible operation of controller. Positioning and speed of poor precision (incorrect operation) Generation of noise and/or vibration. Impossible Communication. Gateway Alarm Gateway Alarm Codes Driver Alarm Alarm Level. Simple Alarm Code Alarm Codes for Driver Board (Each Axis)	325 327 327 328 329 329 330 330 333 333 333 333 333
Chapter 10 10.1 10.2 10.3 10.3.1 10.3.2 10.3.3 10.4 10.4.1 10.4.2 10.4.3 Correl Pressi Rotatio	 Appendix Conformity to Safety Category When Connecting Power Supply with + Grounding Maintenance Consumed Parts Maintenance Information Replacement of Fan List of Specifications of Connectable Actuators Specifications for Pulse Motor Type Actuator Specifications for Servo Motor Type Actuator Specifications for Brushless DC Electric Motor Actuator ation diagram of speed and loading capacity Ing Force/Gripping Force and Current Limit Value Ing Speed and Output torque / Allowable inertial moment 	349 360 361 361 362 363 363 363 393 400 401 452 462

Chapter 11	Warranty	465
11.1	Warranty Period	465
11.2	Scope of the Warranty	465
11.3	Honoring the Warranty	465
11.4	Limited Liability	465
11.5	Conditions of Conformance with Applicable Standards/Regulations, Etc., and	466
11.6	Other Items Excluded from Warranty	466
Change Hi	story	467

Starting Procedures ("PC" stated in this section means "RC PC software".) When using this product for the first time, make sure to avoid mistakes and incorrect wiring by

When using this product for the first time, m referring to the procedure below.	nake sure to avoid mistakes and incorrect wiring by
Check of Packed Items [Refer to Section 1.1.1]	$N_0 \rightarrow$
Have all the items been delivered?	Contact your local IAI distributor.
Installation and Wiring [Refer to Chapter 1 and 2] Perform the installation of and wiring for the actuator] r and controller.
Point Check Item	
Is frame ground (FG) connected?	Has the noise countermeasure been taken?
Power Supply and Alarm Check Connect the PC, put the operation mode setting swit Select "Teach Mode 1 Safety Speed Valid / Prohibit F	tch to [MANU] side, and then turn the power ON. PIO Startup" in the PC software.
Check Item [Refer to Name for Each Parts and Their Is SYS in Status LEDs turned ON in green?	r Functions 12)] No \rightarrow Connect the PC software, confirm the alarm code, and remedy the indicated situation.
↓ Yes	
Initial Setting 1) Have the field network and operation mode condu 2) Set up the parameters (operation patterns) for eac	ucted with the gateway parameter setting tool. [Refer to Section 3.2.1] ch axis on the PC software. [Refer to Section 3.2.2]
\downarrow	
Servo ON Turn the servo ON for all the connected axes by ope	erating a teaching tool such as PC.
Please perform this process with the actuator away Move the actuator away from interfering surroundir or interfering objects when the servo is turned ON. The slider may get slightly dropped by self-weight i Be careful not to pinch the hand or damage the wo	γ from the mechanical end or interfering objects as much as possible. ngs. It may generate an alarm if the actuator hit the mechanical end if servo ON and OFF is repeatedly performed at the same position. ork.
↓ Check Item [Refer to Name for Each Parts and Their Fu Is SYS* on the status LED display for the driver on the number indicated for the servo-on turned ON in gree	unctions 7).] $N_0 \rightarrow$ If an alarm gets generated, check the content of the alarm on the PC and have a counteraction.
1 Yes	
Safety Circuit Check Does the emergency stop circuit (drive cutoff circuit) properly and turn the servo OFF?	work $\underbrace{No \rightarrow}$ Check the emergency stop circuit.
↓Yes	
Position Data Setting (except for direct indication Set the position ^(*) , velocity and acceleration/decelera *Setting is unnecessary in simple direct mode	i mode) ition in each position table. [Refer to Section 3.3]
\downarrow	
 Test Run Adjustment 1 1) Cancel the emergency stop, do not put a work piece the PC. 	ce on, set to low speed and check the operation with commands from
2) Put on a work piece, set to the automatic operation	n speed, and then check the operation with the command from the PC.
↓	
$\begin{array}{c} \mbox{Check Item} & \mbox{No} \rightarrow & \mbox{Check} \\ \mbox{Any vibration or abnormal noise?} & \mbox{the act} \end{array}$	if there is any problem with the installation of the actuator and the condition of tuator use exceeds the ranges of the rated values. Adjust the servo if necessary.
↓ Link to Field Network (For Field Network Type: Se 1) Assign MCON to the host controller, put the operation r 2) Once the link is established to the master unit, turr (Control can be held from the field network while M	ections 3.4) mode setting switch to AUTO side, and then turn the power ON again. n ON MON Signal in the gateway control signals. ION Signal is ON)
↓ Yes	
Test Run Adjustment 2 Output an operation command from the host (such a	s PLC) to check by the system operation.

Safety Guide

"Safety Guide" has been written to use the machine safely and so prevent personal injury or property damage beforehand. Make sure to read it before the operation of this product.

Safety Precautions for Our Products

The common safety precautions for the use of any of our robots in each operation.

No.	Operation Description	Description
No.	Operation Description Model Selection	 Description This product has not been planned and designed for the application where high level of safety is required, so the guarantee of the protection of human life is impossible. Accordingly, do not use it in any of the following applications. Medical equipment used to maintain, control or otherwise affect human life or physical health. Mechanisms and machinery designed for the purpose of moving or transporting people (For vehicle, railway facility or air navigation facility) Important safety parts of machinery (Safety device, etc.) Do not use the product outside the specifications. Failure to do so may considerably shorten the life of the product. Do not use it in any of the following environments. Location where there is any inflammable gas, inflammable object or explosive Place with potential exposure to radiation Location where radiant heat is added from direct sunlight or other large heat source Location where there is any corrosive gas (sulfuric acid or hydrochloric acid) Location subject to direct vibration or impact For an actuator used in vertical orientation, select a model which is
		part may drop when the power is turned OFF and may cause an accident such as an injury or damage on the work piece.

No.	Operation Description	Description
2	Transportation	 When carrying a heavy object, do the work with two or more persons or utilize equipment such as crane. When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. When in transportation, consider well about the positions to hold, weight and weight balance and pay special attention to the carried object so it would not get hit or dropped. Transport it using an appropriate transportation measure. The actuators available for transportation with a crane have eyebolts attached or there are tapped holes to attach bolts. Follow the instructions in the instruction manual for each model. Do not step or sit on the package. Do not put any heavy thing that can deform the package, on it. When using a crane capable of 1t or more of weight, have an operator who has qualifications for crane operation and sling work. When using a crane or equivalent equipments, make sure not to hang a load that weighs more than the equipment's capability limit. Use a hook that is suitable for the load. Consider the safety factor of the hook in such factors as shear strength. Do not get on the load that is hung on a crane. Do not stand under the load that is bung up with a crane.
3	Storage and Preservation	 The storage and preservation environment conforms to the installation environment. However, especially give consideration to the prevention of condensation. Store the products with a consideration not to fall them over or drop due to an act of God such as earthquake.
4	Installation and Start	 (1) Installation of Robot Main Body and Controller, etc. Make sure to securely hold and fix the product (including the work part). A fall, drop or abnormal motion of the product may cause a damage or injury. Also, be equipped for a fall-over or drop due to an act of God such as earthquake. Do not get on or put anything on the product. Failure to do so may cause an accidental fall, injury or damage to the product due to a drop of anything, malfunction of the product, performance degradation, or shortening of its life. When using the product in any of the places specified below, provide a sufficient shield. 1) Location where electric noise is generated 2) Location where high electrical or magnetic field is present 3) Location where the product may come in contact with water, oil or chemical droplets

No.	Operation Description	Description
4	Installation and Start	 (2) Cable Wiring Use our company's genuine cables for connecting between the actuator and controller, and for the teaching tool. Do not scratch on the cable. Do not bend it forcibly. Do not pull it. Do not coil it around. Do not insert it. Do not put any heavy thing on it. Failure to do so may cause a fire, electric shock or malfunction due to leakage or continuity error. Perform the wiring for the product, after turning OFF the power to the unit, so that there is no wiring error. When the direct current power (+24V) is connected, take the great care of the directions of positive and negative poles. If the connection direction is not correct, it might cause a fire, product breakdown or malfunction. Connect the cable connector securely so that there is no disconnection or looseness. Failure to do so may cause a fire, electric shock or malfunction of the product. Never cut and/or reconnect the cables supplied with the product for the purpose of extending or shortening the cable length. Failure to do so may cause the product to malfunction or cause fire
		 (3) Grounding The grounding operation should be performed to prevent an electric shock or electrostatic charge, enhance the noise-resistance ability and control the unnecessary electromagnetic radiation. For the ground terminal on the AC power cable of the controller and the grounding plate in the control panel, make sure to use a twisted pair cable with wire thickness 0.5mm² (AWG20 or equivalent) or more for grounding work. For security grounding, it is necessary to select an appropriate wire thickness suitable for the load. Perform wiring that satisfies the specifications (electrical equipment technical standards). Perform Class D Grounding (former Class 3 Grounding with ground resistance 100Ω or below).

No.	Operation Description	Description
4	Installation and Start	 (4) Safety Measures When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. When the product is under operation or in the ready mode, take the safety measures (such as the installation of safety and protection fence) so that nobody can enter the area within the robot's movable range. When the robot under operation is touched, it may result in death or serious injury. Make sure to install the emergency stop circuit so that the unit can be stopped immediately in an emergency during the unit operation. Take the safety measure not to start up the unit only with the power turning ON. Failure to do so may start up the machine only with the emergency stop cancellation or recovery after the power failure. Failure to do so may result in an electric shock or injury due to unexpected power input. When the installation or adjustment operation is to be performed, give clear warnings such as "Under Operation; Do not turn ON the power!" etc. Sudden power input may cause an electric shock or injury. Take the measure so that the work part is not dropped in power failure or emergency stop. Wear protection gloves, goggle or safety shoes, as necessary, to secure safety. Do not insert a finger or object in the openings in the product. Failure to do so may cause an injury, electric shock, damage to the product or fire. When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity.
5	Teaching	 When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. Perform the teaching operation from outside the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the "Stipulations for the Operation" and make sure that all the workers acknowledge and understand them well. When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. Place a sign "Under Operation" at the position easy to see. When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. * Safety protection Fence : In the case that there is no safety protection

No.	Operation Description	Description
6	Trial Operation	 When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. After the teaching or programming operation, perform the check operation one step by one step and then shift to the automatic operation. When the check operation is to be performed inside the safety protection fence, perform the check operation using the previously specified work procedure like the teaching operation. Make sure to perform the programmed operation check at the safety speed. Failure to do so may result in an accident due to unexpected motion caused by a program error, etc. Do not touch the terminal block or any of the various setting switches in the power ON mode. Failure to do so may result in an electric shock or malfunction.
7	Automatic Operation	 Check before starting the automatic operation or rebooting after operation stop that there is nobody in the safety protection fence. Before starting automatic operation, make sure that all peripheral equipment is in an automatic-operation-ready state and there is no alarm indication. Make sure to operate automatic operation start from outside of the safety protection fence. In the case that there is any abnormal heating, smoke, offensive smell, or abnormal noise in the product, immediately stop the machine and turn OFF the power switch. Failure to do so may result in a fire or damage to the product. When a power failure occurs, turn OFF the power switch. Failure to do so may cause an injury or damage to the product, due to a sudden motion of the product in the recovery operation from the power failure.

No.	Operation Description	Description
8	Maintenance and Inspection	 When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. Perform the work out of the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the "Stipulations for the Operation" and make sure that all the workers acknowledge and understand them well. When the work is to be performed inside the safety protection fence, basically turn OFF the power switch. When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. Place a sign "Under Operation" at the position easy to see. For the grease for the guide or ball screw, use appropriate grease according to the Instruction Manual for each model. Do not perform the dielectric strength test. Failure to do so may result in a damage to the product. When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. The slider or rod may get misaligned OFF the stop position if the servo is turned OFF. Be careful not to get injured or damaged due to an unnecessary operation. Pay attention not to lose the cover or untightened screws, and make sure to put the product back to the original condition after maintenance and inspection works. Use in incomplete condition may cause damage to the product or an injury.
9	Modification and Dismantle	 Do not modify, disassemble, assemble or use of maintenance parts not specified based at your own discretion.
10	Disposal	 When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste. When removing the actuator for disposal, pay attention to drop of components when detaching screws. Do not put the product in a fire when disposing of it. The product may burst or generate toxic gases.
11	Other	 Do not come close to the product or the harnesses if you are a person who requires a support of medical devices such as a pacemaker. Doing so may affect the performance of your medical device. See Overseas Specifications Compliance Manual to check whether complies if necessary. For the handling of actuators and controllers, follow the dedicated instruction manual of each unit to ensure the safety.



Alert Indication

The safety precautions are divided into "*Danger*", "*Warning*", "*Caution*" and "*Notice*" according to the warning level, as follows, and described in the Instruction Manual for each model.

Level	Degree of Danger and Damage	Sy	/mbol
Danger	This indicates an imminently hazardous situation which, if the product is not handled correctly, will result in death or serious injury.	Â	Danger
Warning	This indicates a potentially hazardous situation which, if the product is not handled correctly, could result in death or serious injury.	Â	Warning
Caution	This indicates a potentially hazardous situation which, if the product is not handled correctly, may result in minor injury or property damage.	Â	Caution
Notice	This indicates lower possibility for the injury, but should be kept to use this product properly.	(!)	Notice

Precautions in Operation

1. Make sure to follow the usage condition, environment and specification range of the product.

In case it is not secured, it may cause a drop in performance or malfunction of the product.

- 2. Use an appropriate teaching tool. Use the PC Software or an appropriate teaching pendant to interface with this controller. [Refer to 1.1.2 Teaching Tool]
- 3. Create a secure data backup for use in case of a breakdown.

A non-volatile memory is used as the backup memory for this controller. All the registered position data and parameters are written into this memory and backed-up at the same time. Therefore, you will not usually lose the data even if the power is shut down. However, make sure to save the latest data so a quick recovery action can be taken in case the controller is broken and needs to be replaced with another one.

How to Save Data

- (1) Save the data to external memory or hard disk using the PC software
- (2) Hard-copy the information of position tables and parameters on paper
- 4. Initial Setting the operation

To make this controller flexibly applied in various situations, it is made applicable for seven types of communication standards, possesses seven types of field network operation modes for control method, and is equipped with five types of operation patterns in the remote I/O mode. The setup can be performed in the initial setting. [Refer to Chapter 3.2 Initial Setting and Chapter 8 Parameter]

Set the operation mode and operation pattern setting to the logic that suits your use after the power is turned ON.

/! Warning: Please note it is very risky when the control sequence, operation mode of field network and operation pattern of remote I/O mode setting do not match each other. The normal operation might not occur. There may be no movement, or there may be unexpected movement.

- 5. Actuator would not operate without servo-on and pause signals.
 - (1) Servo ON Signal (SON)

The servo-on signal (SON) is available to select whether to enable or disable in the Parameter No.21. [Refer to 8.2 [13] Servo ON input disable] If it is set to "Enable", the actuator would not operate unless turning this signal ON. If parameter is set to "1", SON is made disable. If it is set to "Disable", the servo becomes on and the actuator operation becomes enabled as soon as the power supply to the controller is turned ON and the emergency stop signal is cancelled. It is set to "0" (Effective) at delivery.

Have the setting that suits to the desirable control logic.

(2) Pause Signal (*STP)

Considering safety, the pause signal (*STP) is an input signal which is always ON. Therefore, the actuator will not operate when this signal is not ON in the ordinary use. This signal is available to choose valid/invalid in Parameter No.15. [Refer to 8.2 [11] Selecting Pause Input Invalid]

Set the parameter to "1" to make it invalid. When it is set invalid, the actuator will become available to operate without making this signal ON. It is set to "0" (Valid) at the delivery.

- Clock Setting in Calendar Function
 There may be a case in the first time to supply the power after delivery that Gateway Alarm
 Code 84A "Real Time Clock Vibration Stop Detected" is generated. In the case this happens,
 set the current time with a teaching tool.
 If the battery is fully charged, the clock data is retained for approximately 10 days after the
 power is turned OFF.
 Even though the time setting is conducted before the product is shipped, the battery is not fully
 charged. Therefore, there may be a case that the clock data is lost even if the days described
 above have not passed.

 7. Note that there are some frictions and/or torsions in through-hole of rotary
- Note that there are some frictions and/or torsions in through-hole of rotary actuator when it is used

When using rotary actuator with a through hole in the center of the revolution and using the hole to put cables through, have a treatment to prevent wear from rubbing or wire break due to the cables getting twisted.

Take particular note on actuators of 360-degree specification because they can be rotated infinitely in a single direction.

8. Limitations on operation of rotary actuator in index mode

Rotary actuators of 360° specification can select the normal mode for finite rotations or the index mode enabling multi-rotation control by using parameter No.79 "Rotational axis mode selection".

[Refer to Chapter 8 Parameter.]

The following limitations are applied to the index mode:

- 1) In the JOG or Inching Operation using a teaching tool such as PC software or using PIO signal, the range of 1 time of command is 360° at maximum for JOG while 1° at maximum for Inching.
- 2) Pressing is unavailable. The pressing torque can only be set to 0.
- Do not issue positioning command around 0° repeatedly during movement near 0°. Failure to follow this may cause the actuator to rotate in the direction reverse to the specified rotation direction or operate indefinitely.
- 4) Software stroke limit is invalid in the index mode.

MCON -

9. According to Sequence Program Creation

Please note the following things when creating a sequence program. When data transfer is necessary between two devices that have a different scan time from each other, duration more than the longer scan time is required to certainly read the signal. (It is recommended to have a timer setting of at least twice as long as the scan time in order for the PLC to adequately perform the reading process.)

Operation Image

PLC

(e.g. scan time is 20ms)



As shown in the diagram, the input and output timings of two devices that have different scan time do not match, when transferring a signal. There is no guarantee that PLC would read the signal as soon as this controller signal turns ON. In such a case, make the setting to read the signal after a certain time that is longer than the longer scan time to ensure the reading process succeeds on the PLC side.

It is the same in the case this controller side reads the signal.

In such a case, it is recommended to ensure 2 to 4 times of the scan time for the timer setting margin.

It is risky to have the setting below the scan time since the timer is also processed in the scan process.

In the diagram, PLC can only read the input once in 20ms even though this controller output once in 1ms.

Because PLC only conducts output process once in 20ms, this controller identifies the same output status for that entire time period.

Also, if one tries to read the signal that is being re-written by the other, the signal may be read wrong. Make sure to read the signal after the rewriting is complete. (It is recommended to have more than 2 scan periods to wait.) Make sure not to have the output side to change the output until the other side completes the reading. Also, a setting is made on the input area not to receive the signal less than a certain time to prevent a wrong reading of noise. This duration also needs to be considered.

10. PLC Timer Setting

Do not have the PLC timer setting to be done with the minimum setting.

Setting to "1" for 100ms timer turns ON at the timing from 0 to 100ms while 10ms timer from 0 to 10ms for some PLC.

Therefore, the same process as when the timer is not set is held and may cause a failure such as the actuator cannot get positioned to the indicated position number in Positioner Mode. Set "2" as the minimum value for the setting of 10ms timer and when setting to 100ms, use 10ms timer and set to "10".

11. Regarding Battery-less Absolute Type Actuator

- 1) For the pulse motor type, the setting switched over between the absolute type and incremental type with the parameters.
 - Parameter No.83 Absorber unit
 - 0 : not used = (Incremental Type), 1 : Use = (Absolute Type)
- 2) For actuator of RCP5 series, for the first time to turn the servo on after turning on the power, it will have slight position adjustment due to the characteristics of the stepping motor. The maximum movement amount at position adjustment operation is the distance of 0.025 × lead length [mm].

Also, the current position displayed on the teaching tool before turning the servo on is the coordinates before adjustment operation.

- 3) After the first time the servo is tuned on after the power has been supplied, the home-return complete signal [HEND] and the limit switch output signal (LS) are output.
- 4) When the first servo-on is conducted out of the soft limit range, an error would not be output. Soft limit monitoring starts after it is moved into the range.
- 5) Make sure to have a home-return operation (absolute reset) after detaching the motor unit from the actuator for motor replacement purpose and so on.

12. Motor Features in AUTO Mode

Status (condition) display and servomotor are available in AUTO Mode. However, they are not available when the connection is established with SSCNETII/H, MECHATROLINK-III or EtherCat Motion.

International Standards Compliances

MCON with the following overseas standard.

RoHS Directive	CE Marking	UL
0	O ^(Note 1)	0

Note1 Those in type for CC-Link IE Field connection, EtherCAT Motion connection and SSCNET III/H connection are not complied.

Name for Each Parts and Their Functions

MCON-C/CG Type



1) FG Terminal

This is the terminal block for frame grounding. Since this controller is made of plastic, it is necessary to ground from this terminal block. Have the grounding resistance kept at 100Ω or less (Class D for grounding class (Grounding No. 3 in old standard)).

2) Power Line Input Connector

This is the connector to supply 24V DC power supply to the controller. The control power supply and the motor power supply are to be input separately. This enables external drive cutoff that cuts only the motor power supply. [Refer to 2.3.1]

3) Model Code Record Card

This is a card with information of the connected axes recorded on for eight axes at the maximum. It is available to pull out from the controller and check the information. The serial number of the controller is also recorded.

- 4) Drive Cutoff/Emergency Stop Input Connector External drive cutoff and emergency stop can be performed individually for each slot (2 axes). [Refer to 2.3.3]
- 5) **External Brake Input Connector**

An external compulsory brake release can be performed on each axis. The brake is ordinarily released with the servo ON and activated with the servo OFF. In the tuning at the startup or in the maintenance work, have a brake release switch for each axis connected to this connector to make a compulsory brake release available, and the actuator can be moved manually while the servo is OFF. [Refer to 2.3.6]

Absolute Battery Connector 6)

This connector is mounted on the simple absolute type. An external absolute battery box for eight axes can be connected with one cable. This is not mounted on the incremental type.

Status LEDs for Driver 7)

These lamps indicate the status of the driver and that for absolute type for each slot (in 2 axes unit). There is no absolute status display for the incremental type.

[0)/0			Part Name	Description
	515	(A)		SYSI	System status of driver for axis connected to
					upper connector
	0 0	\sim			(Servo ON: Green, Servo OFF: OFF,
					Alarm generated, Emergency stop condition: Red)
]		SYS II	System status of driver for axis connected to lower
2	0 月	aa h			connector
					(Servo ON: Green, Servo OFF: OFF,
1					Alarm generated, Emergency stop condition: Red)
0				I–0	Absolute status of driver for axis connected to
Ŭ					upper connector 0 ^(Note 1)
	II			I–1	Absolute status of driver for axis connected to
2	U				upper connector 1 ^(Note 1)
1				I–2	Absolute status of driver for axis connected to
1					upper connector 2 (Note 1)
0				II–0	Absolute status of driver for axis connected to
-	Ĭ				lower connector 0 (Note 1)
I			I	-1	Absolute status of driver for axis connected to
					lower connector 1 (Note 1)
				II–2	Absolute status of driver for axis connected to
					lower connector 2 (Note 1)
				Note 1: Refer	to "7.1 [1] Status LEDs for Driver" for details.

8) Fan Unit

This is the fan unit to cool down the controller. This unit can be detached from the controller for maintenance by removing the screw on the hook in the front of the controller.

9) Operation Mode Setting Switch

This is a switch to change the operation mode between Automatic Operation (AUTO) and Manual Operation (MANU). The operation modes are provided to avoid the duplication of the SIO (Serial) communication operation using PC software or a teaching pendant (described as teaching tool from now on) and the operation with field network or PIO (Parallel I/O) For the details of the mode selection, refer to 11) System I/O Connector.

- 10) SIO Connector This is a connector dedicated for the teaching tool connection. [Refer to 2.3.7]
- 11) System I/O Connector

This is a connector for additional devices for the input of all-axes external emergency stop, AUTO/MANU switchover and external regenerative resistor. [Refer to 2.3.2] It is connected in a series with the operation mode setting switch (AUTO/MANU) on the front panel. The controller can be in the following modes by the mode selection on each switch and teaching tool.

	Condition					
MCON status	Switch on Front Panel	Teaching Tool Note 1	Operation Mode Switchover Input Note 2			
	AUTO	Prohibit PIO Startup	OFF (Input 0V)			
AUTO	AUTO	Accept PIO Startup	OFF (Input 0V)			
	AUTO	Accept PIO Startup	ON (Release)			
	MANU	Accept PIO Startup	ON (Release)			
	MANU	Accept PIO Startup	OFF (Input 0V)			
	AUTO	Prohibit PIO Startup	ON (Release)			
MANU	MANU	Prohibit PIO Startup	ON (Release)			
	MANU	Prohibit PIO Startup	OFF (Input 0V)			

Note 1 : "Accept PIO Startup" and "Prohibit PIO Startup" are the functions to select the operation mode of when the teaching tool is connected.

Note 2 : Refer to "2.2 [4] Layout for Mode Switchover Circuit" for the details.

Caution : (1) If "Accept PIO Startup" is selected on the teaching tool, the AUTO operation becomes available no matter the condition of the front panel or external switchover signal input, thus attention may have to be paid. In such a condition, the actuator may get activated by following the signal from the host.
 (2) The information of "Accept PIO Startup" or "Prohibit PIO Startup" is remained when the teaching tool is removed from the controller. Do not fail to select "Prohibit PIO Startup" when removing the teaching tool after finishing the teaching operation or debugging.

MCON :

12) Status LED for Field Network

They are the LED lamps to show the status of the controller and field network. The layout and the content of LED display differ depending on each field network. Refer to the operation of each mode for the details. [Refer to 3.10]

- Field Network Connector A connector for field network connection is mounted for the field network. [Refer to 2.3.8]
- 14) to 17) Slot 0 to 3 Actuator Connector Insert one driver board to one slot each. (Four driver boards are available to insert at the maximum.)

A driver board of the high output setting type is able to control one axis per piece. For others, two axes can be controlled by one piece of driver board.

⚠́Caution :	(1) (2)	The driver board differs depending on the actuator to be connected. Do not attempt to insert the driver board to a slot other than the one that the board was originally inserted to. The parameter dedicated for the indicated actuator is already written to the driver board at the purchase order. Inserting the driver board to another slot may lead to a wrong wiring. On the slot without a driver board inserted, there is a face plate
	(3)	On the slot without a driver board inserted, there is a face plate attached



Driver Board of Slot 0 : Drive Uint 0

Driver Board of Slot 1 : Drive Uint 1

Driver Board of Slot 2 : Drive Uint 2

Driver Board of Slot 3 : Drive Uint 3

Driver Board (Drive Uint)

Select either one of for pulse motor, for 24V servo motor or for brushless DC electric motor

(to be indicated at the purchase order considering the connected actuator type)

Caution : Cutoff/boot of driving source is to be done on each driver board (2 axes) (control by one axis to another cannot be performed). Therefore, when Cold Start Level (Drive Cutoff) Alarm is generated on one axis out of two, the other axis with the alarm not being generated will also stop. Consider this when constructing the system.

Actuator Axes

Refer to the pictures below for the actuator axes that can be controlled by MCON. 0 defines the home position, and items in () are for the home-reversed type (option).

Caution: There are some actuators that are not applicable to the origin reversed type. Check further on the catalog or the Instruction Manual of the actuator.

(1) Rod Type

Â



(2) Slider Type



(3) Table Type



(4) Arm Type



(5) Gripper Type





(6) Rotary Type



For Multi-Rotation Type with the origin reversed type, the directions of + and - are the other way around.

Chapter 1 Specifications Check

1.1 Product Check

1.1.1 Parts

The standard configuration of this product is comprised of the following parts. If you find any faulty or missing parts, contact your local IAI distributor.

No.	Part Name	Model and Picture	Number	Remarks
1	Controller Main Body	Refer to "1.1.4 How to read the model plate", "1.1.5 How to read the model".	1	
		Accessories		
2	Power Connector	FKC2.5HC/4-ST-5.08 (Supplier : PHOENIX CONTACT)	1	 Recommended Cable Size Control Power Supply 0.5 to 0.3mm² (AWG20 to 22) Motor Driving Power Supply 3.5 to 0.75mm² (AWG12 to 18) Choose a size that withstands the current. [Refer to 2.3.1 Connection to Power Input Connector]
3	External Brake Input Connector	FMCD1.5/5-ST-3.5 (Supplier : PHOENIX CONTACT)	1	Recommended cable size 0.5 to 0.2mm ² (AWG20 to 24)
4	Drive Cutoff/Emergency Stop Input Connector	FMCD1.5/8-ST-3.5 (Supplier : PHOENIX CONTACT)	1	 Recommended Cable Size Emergency Stop 0.5 to 0.2mm² (AWG20 to 24) Motor Power External Input 1.25 to 0.5mm² (AWG16 to 20)
5	System I/O Connector	FMCD1.5/4-ST-3.5 (Supplier : PHOENIX CONTACT)	1	Recommended cable size 0.5 to 0.2mm ² (AWG20 to 24)
6	Dummy Plug (For Safety Category Complied Type)	DP-5	1	

No.	Part Name	Model and Picture	Number	Remarks
7	DeviceNet Connector (For DeviceNet Type)	MSTB2.5/5-STF-5.08 AU M (Supplier : PHOENIX CONTACT)	1	Prepare a terminal resistance separately if this controller is to be allocated at the terminal.
8	CC-Link Connector (For CC-Link Type)	MSTB2.5/5-STF-5.08 AU (Supplier : PHOENIX CONTACT)	1	Terminal Resistance (130Ω1/2W, 110Ω1/2W) enclosed one unit each
9	Absolute Battery Box (Option)	For Simple Absolute Type MSEP-ABB	1	(Battery AB-7 Please purchase separately)
10	Safety Guide	<image/>	1	The picture shows an image.
11	First Step Guide	ME0344	1	The picture shows an image.
12	Instruction Manual (DVD)		1	The picture shows an image.

1.1.2 Teaching Tool

A teaching tool such as PC software is necessary when performing the setup for position setting, parameter setting, etc. that can only be done on the teaching tool. Please prepare either of the following teaching tools.

No.	Part Name	Model
1	PC Software (Includes RS232C Exchange Adapter + Peripheral Communication Cable)	RCM-101-MW
2	PC Software (Includes USB Exchange Adapter + USB Cable + Peripheral Communication Cable)	RCM-101-USB
3	Teaching Pendant (Standard Type / Deadman Switch Attached on the Left side Type / Deadman Switch Attached on the Right side Type)	TB-01/TB-01D /TB-01DR
4	Touch Panel Teaching Pendant (Standard Type / Deadman Switch Type)	TB-02/TB-02D
5	Touch Panel Teaching Pendant TB-03 Wired Link	TB-03

1.1.3 Instruction manuals related to this product, which are contained in the instruction manual (DVD).

No.	Name	Manual No.
1	MCON Controller Instruction Manual	ME0341
2	PC Software RCM-101-MW/RCM-101-USB Instruction Manual	ME0155
3	Touch Panel Teaching Pendant to Apply for TB-01/TB-01D/TB-01DR Position Controllers Instruction Manual	ME0324
4	Touch Panel Teaching Pendant TB-02/TB-02D Applicable for Position Controller, ELECYLINDER Instruction Manual	ME0355
5	Touch Panel Teaching Pendant TB-03 Position Controller, ELECYLINDER Wired Link Instruction Manual	ME0376
6	SSCNETII/H Applicable Controller Instruction Manual	ME0352
7	MECHATROLINK-III Applicable Controller Instruction Manual	ME0317
8	EtherCAT Motion Applicable Controller Instruction Manual	ME0367

1.1.4 How to Read the Model Nameplate[1] Main Body Case Side Surface

Model→	M	ODEL	MCON-C-5-20PWAI-PWAI-20WAI-20WAI-3DI-N-DV-2- 0-ABB			
Manufactured date \rightarrow	PF	RODUCT DATE	2015/09/01			
Manual No. \rightarrow	MANUAL No.		ME0341			
	C	P INPUT	DC24V 2.0A			
input power suppry \rightarrow	Μ	P INPUT	DC24V 7.6A			
	Aک	XIS No. /OUTPUT				
	0	DC24V 1.2A				
	1					
	2	DC24V 1.6A				
Information of the connected axes \rightarrow	3	DC24V 1.6A				
(Axis No. 0 to 7)	4	DC24V 0.4A				
	5					
	6					
	7					
		CAUTION : C	Connect the wiring correctly and properly. Ise IAI Corporation specified cables.			
				Made In Japan		

[2] Model Code Card

[_]					
		Equipme	ent Name		
$Model \to$	Мос	del	MCON-C-5-20PW	AI-PWAI-20WAI-20WAI-	3DI-N-DV-2-0-ABB
					Serial No.
Version→	Vers	sion	0-0-A0-A0-NN-NN	-BOA-NN	******
	AXI	S No. / Mode	el / Serial No.		
	0	RCP5-SA40	C-WA-35P-16-200-F	23-S	******
	1				
	2	RCA2-TCA4	1NA-I-20-4-50-A1-S		******
Information of the connected axes	3	RCA2-TCA4	INA-I-20-4-50-A1-S		******
/Serial number \rightarrow	4	RCD-RA1D	A-I-3-2-30-D5-S		******
(AXIS NO. 0 to 7)	5				
	6				
	7				
					IAI

Μςον

1.1.5 How to read the model

(E)

(ample) Consists of 5 axes:	AXIS NO.U	: Puise motor type
	Axis No.1	: Pulse motor type Inactive Axis
	Axes No.2, 3	: Servo motor type
	Axes No.4	: Brushless DC motor type
	Axis No.5	: Not connected



[Encoder Type]

WAI : Incremental / Battery-less Absolute Shared (Pulse Motor Type / Servo Motor Type)

Incremental (Brushless DC Motor Type) SA Simple Absolute (Pulse Motor Type/ Servo Motor Type)

[Option]

HA : High Acceleration/Deceleration Type (when servo motor selected)

- : Power Saving Type (when servo motor selected) LA
- High Output Setting Type (when pulse motor selected) Т

1.2 List of Basic Specifications

Specification Item		Details of Specifications			
Number of Controlled Axes		Max.8 axis			
Control/N	Notor Power Supply Voltage	24V DC ±10%			
Current Consumption of Brake Release Power		0.15A×Number of axes			
Control F	ower Current Consumption	1.0A			
Control I	Power In-Rush Current	MAX. 5A 30ms or less			
Motor C	urrent Consumption	Refer to Section < Motor Current Consumption >			
Motor Po	ower In-Rush Current	Number of slots × MAX. 10A 5ms or less			
Controlle	er Heat Generation	MAX. 26W			
Control System		Driver for Pulse Motor : Weak field-magnet vector control Driver for Servo Motor : Vector control Driver for Brushless DC Motor : Square wave drive			
Encoder	Resolution	Refer to Section < Encoder Resolution>			
Motor / E	Encoder Cable Length	MAX. 20m (Note) It is 10m at maximum for Simple Absolute Type and when connecting to RCD.			
Serial Co (SIO Po	ommunication rt: Only for teaching)	RS485 1CH (complying with Modbus Protocol) Speed 9.6 to 230.4kbps			
External Interface		CC-Link, CC-Link IE Field, CompoNet, DeviceNet, EtherCAT, EtherNet/IP, PROFIBUS-DP, PROFINET IO, EtherCat Motion, MECHATROLINK-III, SSCNETII/H [Refer to 1.4 Specifications for each Field Network.]			
Data Se	tting and Input	PC software, Touch panel teaching pendant, Gateway parameter setting tool			
Data Retention Memory		Position data and parameters are saved in the nonvolatile memory (FeRAM). (Note) There is no limitation in number of writing.			
Positioni	ing Points	 256 points (There is no limit for simple direct and direct indication modes) (Note) The number of positioning points differs depending on the operation mode select by the parameter setting. 			
LED Dis Panel)	play (mounted on Front	Status LED for Driver : 8 points (for each driver board) Status LED for Field Network: 7 points			
Forcibly Electrom	Releasing of nagnetic Brake	Can be released with the forcibly releasing signal input (24V DC input) to each axis			
Protectiv	/e Functions (Note 1)	Overcurrent Protection (Equipped with a built-in cutoff circuit using a semiconductor for each slot)			
Protection Function against Electric Shock		Class I basic insulation			
Insulatio	n Resistance	500V DC 10MΩ			
Mass		Incremental type : 620g Max., Absolute type : 690g Max., Absolute battery box : 1950g (for 8-axis type) Max.			
Cooling Method		Forced air-cooling			
External Dimensions		123W × 115H × 95D			
	Ambient Temperature	0 to 40°C			
	Ambient Humidity	5% RH to 85% RH (Should be no-condensing or freezing)			
	Ambient Environment	Refer to 1.7 [1] Installation Environment			
Environ -ment	Ambient Storage Temperature	-20 to 70°C 0 to 40°C for absolute battery			
	Ambient Storage Humidity	5% RH to 85% RH (Should be no-condensing or freezing)			
	Usable Altitude	1000m or lower above sea level			
	Vibration Durability	Frequency 10 to 57Hz / Swing width: 0.075mm Frequency 57 to 150Hz / Acceleration: 9.8m/s ² XYZ Each direction Sweep time: 10 min. Number of sweep: 10 times			
	Shock Resistance	Dropping height 800mm, 1 corner, 3 edges and 6 surfaces			
	Protection Class	IP20			

Note 1 For servo motor, the over-current protection is triggered at 1.4 times the maximum load current.

Μςον

<Motor Current Consumption>

See below for the motor current consumption (rated current, peak current) of the connectable actuators.

		Peak Current [A]				
	Rated Current [A]	Power Saving Type	Standard Type			
	RCP2 RCP3	20P to 28P				2.0
Dulas Mater (Note 2)		28SP to 56P				2.0
Pulse Molor	RCP4 RCP5 RCP6	28SP	High Output Invalid			2.0
		56P	High-Output Type (Note 3)	3.5		4.2
	2W			0.8		4.6
	5W			1.0		6.4
	10W (RCL)			1.3		6.4
Servo Motor (Note 4)	10W (RCA, RCA2)			1.3	2.5	4.4
	20W			1.3	2.5	4.4
	20W (20S Type)			1.7	3.4	5.1
	30W			1.3	2.2	4.4
Brushless DC Motor 3W			0.7		1.5	

Note 2 The current is maximized at the excitation phase detection conducted in the first servo-on process after the power is supplied (ordinary 100ms).

Note 3 High-output type driver board can control one axis per board.

Note 4 Maximum current draw is realized during the excitation phase following the initial servo power ON. (Normal: Approx. 1 to 2 sec, MAX: 10 sec).

<Encoder Resolution>

See below for the resolution of encoders mounted on the connectable actuators.

	Encoder Resolution			
Dulao Matar	RCP2 to 5	All types	800 pulse/rev	
	RCP6	All types	8192 pulse/rev	
	BCA	Incremental Encoder	800 pulse/rev	
	RCA	Battery-less Absolute Encoder	16384 pulse/rev	
	DCA2	RCA2-000N (A)	1048 pulse/rev	
Servo Motor	RUAZ	Other than RCA2-□□□N (A)	800 pulse/rev	
	RCL	$RA1L \cdot SA1L \cdot SA4L \cdot SM4L$	715 pulse/30.03mm	
		$RA2L \cdot SA2L \cdot SA5L \cdot SM5L$	855 pulse/35.91mm	
		RA3L · SA3L · SA6L · SM6L	1145 pulse/48.09mm	
Bruchloss DC Motor	RCD	RA1D · GRSM	400 pulse/rev	
Brushless DC Motor	KCD	RA1DA · GRSMA	480 pulse/rev	

1.3 Calculation for Power Capacity

equipped with remote sensing.

For the calculation of 24V DC power capacity, figure out the numbers for (1) to (6) below, and then follow Step (7)
(1) Control Power Current Consumption : 1.0A······1)
(2) Motor Power Current Consumption : Add the total motor current consumption of all connected actuators
(3) Current Consumption at Excitation Phase Detection :
Add the inrush current for all connected axes
(4) Add the Control Power Inrush Current : 5A ······4)
(5) Add the Motor Power Inrush Current : Number of slots × 10A each
(6) Current Consumption of Brake Release Power: Number of actuators with brake × 0.15A6)
(7) Selection of Power Supply :
Usually, the rated current is to be approximately 1.3 times higher than the total of Control Power $1) + 2$
+ 6) above considering approximately 30% of margin to the load current. However, considering the
in the currents (excitation 3) control (4) and motor power (5)) even though it is a short time select a
nower supply with "sufficient neak load canacity Avoid current of 3) to 5) from occurring at the same
time by baying the timing of amergeney aton release (turning the mater only and timing to
time by having the timing of emergency stop release (turning the motor power on) and timing to
turn the serve on shifted (note 1) from each other and so on. Huge current flow of the same time
may cause a transient voltage drop. Be careful especially when selecting a power source

- Note1 The timing to turn the servo on can be shifted in Driver Shutdown Release Delay Time [refer to 3.9.9 3) GW Parameter 3] in the gateway parameter setting tool. (Note) Ensure motor and control power supplies reference the same potential when using
 - multiple power supplies.

(Reference) Selection of Power Supply Protection Circuit Breaker It is recommended that the power supply protection is conducted on the primary side (AC power side) of the 24V DC power supply unit. When selecting the protection breaker, consider the rated cutoff current of the circuit breaker so a cutoff is surely performed even in the case of inrush current of

- 24V DC power supply unit or a short-circuit of the power supply.
 Rated Breaking Current > Short-circuit Current = Primary Power Supply Capacity / Power Voltage
- (Reference) In-rush Current of IAI Power Supply Unit PS241 = 50 to 60A, 3ms
1.4 Specifications for each Field Network

1.4.1 Specifications of CC-Link Interface

Item	Specification					
Communication Protocol	CC-Link ver1.10 or ver2.	CC-Link ver1.10 or ver2.00				
Station Type	Remote Device Station (MAX. four stations occupied)					
Baud Rate	10M/5M/2.5M/625k/156kbps					
Communication System	Broadcast Polling System					
Number of occupied stations	Refer to 3.4.1 PLC Address Construction by each Operation Mode					
Communication Cable Length (Note 1)	Baud Rate (bps)	10M	5M	2.5M	625k	156k
	Total Cable Length (m)	100	160	400	900	1200
Communications Cable	Apply the dedicated cable					
Connector (Note 2)	MSTB2.5/5-GF-5.08 AU (Manufactured by PHOENIX CONTACT or equivalent)					

Note 1 For T branch communication, refer to the Instruction Manuals for the master unit and PLC to be mounted. Note 2 The cable-side connector is a standard accessory. [Refer to 1.1.1 Parts]

1.4.2 Specifications of CC-Link IE Field Interface

Item	Specification
Communication Protocol	Conforms to IEEE802.3ab (1000BASE-T)
Baud Rate	1Gbps
Communications system	Token passing
Communication Cable Length	Distance between each segment: 100m Max.
Max. number of connected units	254 (total of master and slave stations)
Max. networks	239
Communications Cable (Note 1)	Category 5e or more (Double shielded cable braided with aluminum foil recommended)
Connector	RJ45 Connector × 2pcs
Cyclic communication	RX (slave to master) : 16384 bits RY (master to slave) : 16384 bits RWr (slave to master) : 8192 words RWw (master to slave) : 8192 words

Note 1 Prepare separately for the communication cable.

1.4.3 Specifications of CompoNet Interface

Item	Specification
Communication System	CompoNet dedicated protocol
Communication Type	Remote I/O communication
Baud Rate	Automatically follows the master
Communication Cable Length	Follows CompoNet connection specifications
Slave Type	Word-Mixed Slave
Available Node Addresses for Setting	0 to 63 (Setting conducted on controller parameter)
Number of occupied channels	Refer to 3.4.1 PLC Address Construction by each Operation Mode
Communications Cable (Note 1)	Round Cable (JIS C3306, VCTF2-core) Flat cable I (with no sheathed) Flat cable II (sheathed)
Connector (Controller Side)	XW7D-PB4-R (Manufactured by OMRON or equivalent)

Note 1 Prepare separately for the communication cable.

1.4.4 Specifications of DeviceNet Interface

Item	Specification			
Communication Protocol	DeviceNet2.0			
	Group 2 Dedicated S	Server		
	Network-Powered In	sulation Node		
Baud Rate	Automatically follows the master			
Communication System	Master-Slave Syster	n (Polling)		
Number of Occupied Channels	Refer to 3.4.1 PLC Address Construction by each Operation Mode			
Number of Occupied Nodes	1 Node			
Communication Cable Length (Note 1)	Baud Rate	Max. Network Length	Total Branch Line Length	Max. Branch Line Length
	500kbps	100m	39m	
	250kbps	250m	78m	6m
	125kbps	500m	156m	
Communications Cable	Use the dedicated cable.			
Connector (Note 2)	MSTB2.5/5-GF-5.08 AU (Manufactured by PHOENIX CONTACT or equivalent)			
Consumption Current of Communication Power Supply	60mA			
Communication Power Supply	24V DC (Supplied from DeviceNet)			

Note 1 For T branch communication, refer to the Instruction Manuals for the master unit and programmable logic controller (PLC) to be mounted.

Note 2 The cable-side connector is a standard accessory. [Refer to 1.1.1 Parts]

1.4.5 Specifications of EtherCAT Interface

Item	Specification
Communication Protocol	IEC61158 type 12
Physical Layer	100Base-TX (IEEE802.3)
Baud Rate	Automatically follows the master
Communication Cable Length	Follows EtherCAT® connection specifications (Distance between each node: 100m max.)
Slave Type	I/O slave
Available Node Addresses for Setting	0 to 127 (17 to 80 : When connected to the master (CJ1W-NC*82) manufactured by OMRON)
Communications Cable (Note 1)	Category 5 or more (Double shielded cable braided with aluminum foil recommended)
Connector	RJ45 Connector × 2pcs (Input × 1, Output × 1)
Connect	Daisy chain only

Note 1 Prepare separately for the communication cable.

1.4.6 Specifications of EtherNet/IP Interface

Item	Specification
Communication Protocol	IEC61158 (IEEE802.3)
Baud Rate	10BASE-T/100BASE-T (Autonegotiation setting is recommended)
Communication Cable Length	Follows EtherNet/IP connection specifications (Distance between hub and each node: 100m max.)
Number of Connection	Master Unit
Available Node Addresses for Setting	0.0.0.0 to 255.255.255.255
Communications Cable (Note 1)	Category 5 or more (Double shielded cable braided with aluminum foil recommended)
Connector	RJ45 Connector × 1pc

Note 1 Prepare separately for the communication cable.



1.4.7 Specifications of PROFIBUS-DP Interface

Item	Specification			
Communication Protocol	PROFIBUS-DP			
Baud Rate	Automatically follows the m	Automatically follows the master		
Communication System	Hybrid System (Master-Sla	ve System or Token Passing	System)	
Number of occupied stations	Refer to 3.4.1 PLC Address	Construction by each Operation	ation Mode	
Communication Cable Length	MAX. Total Network	Baud Rate	Cable Type	
	100m	3,000/6,000/12,000kbps		
	200m	1,500kbps		
	400m	500kbps	Type A Cable	
	1000m	187.5kbps		
	1200m	9.6/19.2/93.75kbps		
Communications Cable	STP cable AWG18			
Connector (Note 1)	9-pin female D-sub Connector			
Transmission Path Format	Bus/Tree/Star			

Note 1 Please prepare a 9-pin male D-sub connector for the cable-end connector.

1.4.8 Specifications of PROFINET IO Interface

Item	Specification
Communication Protocol	IEC61158 (IEEE802.3), IEC61784
Baud Rate	100Mbps
Communication Cable Length	Distance between each segment: 100m Max.
Number of Connection	Master Unit
Available Node Addresses for Setting	0.0.0.0 to 255.255.255.255
Communications Cable (Note 1)	Category 5 or more (Double shielded cable braided with aluminum foil recommended)
Connector	RJ45 Connector × 1pc
GSDML File Version	Ver 2.3

Note 1 Prepare separately for the communication cable.

1.4.9 Specifications of EtherCAT Motion Network Interface

Refer to EtherCAT Motion interface connection specifications, EtherCAT Motion Applicable Controller Instruction Manual (ME0367).

1.4.10 Specifications of MECHATROLINK-III Interface

Refer to MECHATROLINK-III interface connection specifications, MECHATROLINK-III Applicable Controller Instruction Manual (ME0317).

1.4.11 Specifications of SSCNETI/H Interface

Refer to SSCNETII/H interface connection specifications, SSCNETII/H Applicable Controller Instruction Manual (ME0352).

- 1.5 External Dimensions
- 1.5.1 Controller Main Unit



Front View





Side View

MCON =

1.5.2 Absolute Battery Box



1.6 Option

1.6.1 Absolute Battery Box

For Simple Absolute type, an absolute battery box capable for the batteries for 8 axes is used. The battery is to be attached only to the axes for Simple Absolute Type. The connection to MCON controller is to be made with the dedicated cable (CB-MSEP-AB005). (Note) Cable length: 0.5m



Front View when Cover ON



1.6.2 Regenerative Resistor Unit (RER-1)

This unit is necessary to be connected in the case that the regenerative energy cannot be consumed by the regenerative resistor built into the MCON controller. It is necessary to connect the unit in the following case:



Condition to Require Regenerative Units

Number of Connected Actuator	3 to 8 units of high acceleration/deceleration type actuators
Number of Regenerative Resistor Unit	1

Caution: The regenerative resistor consumes regenerative current and converts it to heat. Therefore, the temperature may get high in some operational conditions. Attach on the metal part of the device with a screw to radiate the heat.

1.7 Installation and Storage Environment

This product is capable for use in the environment of pollution degree 2^{1} or equivalent.

*1 Pollution Degree 2 : Environment that may cause non-conductive pollution or transient conductive pollution by frost (IEC60664-1)

[1] Installation Environment

Do not use this product in the following environment.

- Location where the surrounding air temperature exceeds the range of 0 to 40°C
- Location where condensation occurs due to abrupt temperature changes
- Location where relative humidity is out of the range between 5%RH and 85%RH
- · Location exposed to corrosive gases or combustible gases
- · Location exposed to significant amount of dust, salt or iron powder
- Location subject to direct vibration or impact
- Location exposed to direct sunlight
- Location where the product may come in contact with water, oil or chemical droplets
- Environment that blocks the air vent [Refer to 1.8 Noise Elimination and Mounting Method]

When using the product in any of the locations specified below, provide a sufficient shield.

- Location subject to electrostatic noise
- Location where high electrical or magnetic field is present
- Location with the mains or power lines passing nearby

[2] Storage and Preservation Environment

• Storage and preservation environment follows the installation environment. Especially, when the product is to be left for a long time, pay special attention to condensed water. Unless specially specified, moisture absorbency protection is not included in the package when the machine is delivered. In the case that the machine is to be stored in an environment where dew condensation is anticipated, take the condensation preventive measures from outside of the entire package, or directly after opening the package.

Μςον

1.8 Noise Elimination and Mounting Method

(1) Noise Elimination Grounding (Frame Ground)



Connect the ground line to the FG terminal block on the controller unit. Put a tool such as a screwdriver into the square slot to open the opening to connect the line.

Copper wire: Connect a ground wire with a diameter of 1.6 mm (2mm^2 : AWG14).

Earth Terminal Grounding resistance at 100Ω or less (Formerly Class-III grounding)



Do not share the ground wire with or connect to other equipment. Ground each controller.

- (2) Precautions regarding wiring method
 - 1) Wire is to be twisted for the power supply.
 - 2) Separate the signal and encoder lines from the power supply and power lines.
- (3) Noise Sources and Elimination

Carry out noise elimination measures for electrical devices on the same power path and in the same equipment. The following are examples of measures to eliminate noise sources.

- AC solenoid valves, magnet switches and relays [Measure] Install a Surge absorber parallel with the coil.
- DC solenoid valves, magnet switches and relays [Measure] Mount the windings and diodes in parallel. Select a diode built-in type for the DC relay.









(4) Cooling Factors and Installation

Design and Build the system considering the size of the controller box, location of the controller and cooling factors to keep the ambient temperature around the controller below 40°C. Pay a special attention to the battery unit since the performance of it would drop both in the low and high temperatures. Keep it in a room temperature environment as much as possible. (Approximately 20°C is the recommended temperature.)



For the attachment of the unit, use the fixture holes on the four corners or attach on the DIN rail. (Attachment should be the same for the absolute battery box.)



ME0341-4C

Chapter 2 Wiring



Note 1 For MCON-CG, in case a teaching tool is not connected to SIO connector, have the enclosed dummy plug plugged (DP-5) in the connector.

2.2 Circuit Diagram

Sample circuit diagrams are shown below.

[1] Power Supply and Emergency Stop

The diagram shown below is an example of a circuit for when reflecting the emergency stop switch on a teaching pendant to the emergency stop circuit of the system.



Note 1	MCON-C :	When there is nothing plugged in the SIO connector, S1 and S2 are short-circuited inside the controller.
	MCON-CG :	When there is nothing plugged in the SIO connector, S1 and S2 are not short-circuited.
		To make them short-circuited, have the enclosed dummy plug DP-5 plugged in the SIO connector. [Refer to 2.3.7]
Note 2	When the mot between MPI	for power must be disconnected externally for safety category compliance, apply a safety rated relay SLOT * and MPOSLOT *. Choose one that is capable to open and close with the motor current of the connected activator [Refer to 1.2.] ist of Basic Specifications 1.
Note 3	The rating for	the emergency stop signal (EMG-) to turn ON/OEE at contact CR1 is 24V DC and 10mA
Note 4	For CR1, sele	ct the one with coil current 0.1A or less.
Note 5	By cutting out be made in th	the connection between EMG+SLOT * and EMGINSLOT *, only the disconnected slot number can e condition of an emergency stop. (*: Slot Number)
<u>∧</u> ′	Caution: Whe	en supplying the power by turning ON/OFF the 24V DC, keep the 0V being nected and have the +24V supplied/disconnected (cut one side only).



Note Check the previous page for Notes 1 to 5.

MCON =

MCON =

[2] Motor • Encoder Circuit

Caution: There is an axis number (AX0 to AX7) shown on the actuator cables. Refer to the figure below to plug the actuators correctly. Wrong connection will issue an error such as the encoder wire breakage. Check in the instruction manual of each actuator for the details (connection layout diagram) of each cable.



1) Connection to RCP2 Series



2) Connection to RCP6, RCP5, RCP4, RCP3, RCA2, RCD and RCL Series



3) Connection to RCP2 Small Rotary Series

MCON AX0 to 7 (5) Actuator Connector

4) Connection to RCA Series



Model	Cable Model	Remarks
RCP2 (Other than Rotary small type)	CB-PSEP-MPA	Robot cable from 0.5 to 20m
RCP2 Rotary small type (RTBS/RTCS/RTBSL/RTCSL)	CB-RPSEP-MPA	Robot cable from 0.5 to 20m
RCA	CB-ASEP2-MPA	Robot cable from 0.5 to 20m
RCP3, RCA2, RCL	CB-APSEP-MPA	Robot cable from 0.5 to 20m
RCP4 (Other than SA3/RA3), RCD-RA1DA(-D3) ^(Note 2)	CB-CA-MPA□□□-RB	Robot cable from 0.5 to 20m (Note 3)
	CB-CA-MPA	Standard cable from 0.5 to 20m ^(Note 3)
RCP6, RCP5,	CB-CAN-MPA□□□-RB	Robot cable from 0.5 to 20m ^(Note 3)
RCP4(SA3/RA3), RCD-RA1DA(-D5) ^(Note 2) / GRSNA Gripper/Rotary of RCP2CR, RCP2W	CB-CAN-MPA	Standard cable from 0.5 to 20m ^(Note 3)

Note 1 Applicable Connection Cable Model Codes ____: Cable length Example) 030 = 3m

Note 2 -D3/-D5 in brackets () for RCD show the symbols for the applicable controllers. Note 3 The maximum cable length for RCD is 10m for both the standard cable and robot cable.

[3] Connection to Absolute Battery Unit (for Simple Absolute Type Only)



- (Note) Do not apply force not being perpendicular to the connector when insert or detach the cable.
- [4] Layout for Mode Switchover Circuit

When a switchover of the operation modes (AUTO/MANU) is required with an external input, connect a device such as a switch between AUTO/MANU + terminal and AUTO/MANU – terminal.

If not switching externally, apply a jumper on AUTO/MANU + terminal and AUTO/MANU – terminal.



[5] Layout for External Brake Input Circuit

Lay out the circuit when an external compulsory brake release with using an actuator equipped with a brake is desired. It is not necessary if an external release is not required. The brake can be released if the power (24V DC, 150mA/axis) gets supplied to this connector even without the main power source supplied from the controller.



[6] Layout of Regenerative Resistor (Option)



Condition to Require Regenerative Units

Number of Connected Actuator	3 to 8 units of high acceleration/deceleration type
	actuators
Number of Regenerative	1
Resistor Unit	

 Caution:
 The regenerative resistor consumes regenerative current and converts it to heat.

 Therefore, the temperature may get high in some operational conditions.

 Attach on the metal part of the device with a screw the heat.

[7] Wiring Layout for Field Network

Follow the instruction manual of the master unit for each field network and the constructing PLC for the details of how to connect the cables.

- 1) CC-Link Connection Type MCON-CC-Link Connection Terminal Terminal Master Unit Slave Devices Туре Terminal Resistance is required esistance Resistance to be mounted on the terminal. DA DA DA DB DB (DB) The terminal resistor differs depending on the type of the dedicated cable for CC-Link. • Cable FANC-SBH···130Ω1/2W (DG) (DG DG ١. (High Performance Cable (sld) (SLD) (SLD) dedicated for CC-Link) • Cable FANC-SB·····110Ω1/2W FG (FG) FG (CC-Link Dedicated Cable) Class D grounding (Formerly Class-III grounding: SLD and FG are internally connected. Grounding resistance at 100Ω or less)
- 2) CC-Link IE Field Connection Type



Ethernet Straight Cable Category 5e or more Double shielded cable braided with aluminum foil recommended There is no distinction of IN and OUT. Terminal resistance is not required.

3) CompoNet Connection Type







5) EtherCAT Connection Type, EtherCAT Motion Connection Type



Ethernet Straight Cable Category 5 or more Double shielded cable braided with aluminum foil recommended Terminal resistance is not required.

6) EtherNet/IP Connection Type



7) PROFIBUS-DP Connection Type



8) PROFINET IO Connection Type



9) MECHATROLINK-III Connection Type

Refer to wiring of MECHATROLINK-III, MECHATROLINK-III Applicable Controller Instruction Manual (ME0317).

10) SSCNETII/H Connection Type

Refer to wiring of SSCNETII/H, SSCNETII/H Applicable Controller Instruction Manual (ME0352).

MCON -

2.3 Wiring Method

2.3.1 Connection to Power Input Connector

The wire of the power supply is to be connected to the enclosed connector (plug). Strip the sheath of the applicable wires for 10mm and insert them to the connector. Push a protrusion beside the cable inlet with a small slotted screwdriver to open the inlet. Once the cable is inserted, take the slotted screwdriver OFF the protrusion to fix the cable to the terminal.



K K	Connector	Name	Pov	ver Line Input Connector	
	Cable Side		FK	C2.5HC/4-ST-5.08	Enclosed in standard
					package Manufactured by
					PHOENIX CONTACT
	Controller S	Side	MS	TBA2.5HC/4-G-5.08	
	Pin No.	Signal Nan	ne	Description	Applicable cable diameter
☐ (1) »	1	0V		Power Input for Control	KIV0.5 to 0.3mm ²
	2	CP+24V		(24V DC ±10%)	(AWG20 to 22)
Front view of	3	0V			KIV3.5 to 0.75mm ²
controller side	4	MP+24V		Power Input for Motor Drive (24V DC ±10%)	(AWG12 to 18) Select the cable thickness allowable for the current figured out in "1.3 Calculation for Power Capacity" ^(*) . * It is no problem to calculate the current consumption using the rated value.

(Note) If supplying power with using a 24V DC, having it turned ON/OFF, keep the 0V connected and have the +24V supplied/cut (cut one side only).



2.3.2 Wiring Layout of System I/O Connector

The connector consists of the emergency stop input for the whole controller, changeover of the operation modes (AUTO/MANU) externally and the external regenerative resistor connection terminals.

Insert the wires to the enclosed connector (plug). Strip the sheath of the applicable wires for 10mm and insert them to the connector. Push a protrusion beside the cable inlet with a small slotted screwdriver to open the inlet. Once the cable is inserted, take the slotted screwdriver OFF the protrusion to fix the cable to the terminal.

	NE:	5	
2	NE.	6	
3	NE:	7	
4	л <u>Е</u>	8	

্রাপ	Connector Name	System I/O Connector	
	Cable Side	FMCD1.5/4-ST-3.5	Enclosed in standard package Manufactured by PHOENIX CONTACT
<u>58</u>	Controller Side	MCDN1.5/4-G1-3.5P26THR	

Front view of connector on controller side

Pin No.	Signal Name	Description	Applicable cable diameter
1	EMG+24V	+24V power output for emergency stop	
2	S2	For external emergency stop signal input	
3	S1	For external emergency stop signal output	
4	EMG-	Emergency Stop Input (available for all the slots)	KIV0.5 to 0.2mm ² (AWG20 to 24)
5	AUTO/MANU+	For operation mode (AUTO/MANU) switchover	
6	AUTO/MANU-	Operation mode (AUTO/MANU) switchover signal input	
7	RB+	Regenerative resistor connection +	Dedicated regenerative
8	RB-	Regenerative resistor connection -	resistor connection

ΓŪ Л

Ń

Л

Л ΓŪ

Л

Γl

Л N

Л

Л Ы

J (16) 15 (

μ

٦ (13)

In

14

(12)

(11)

(10)

9

Front view of co on controller

2.3.3 Connection of Drive Cutoff/Emergency Stop Input Connector

Insert wires if an emergency stop input is desired individually for each slot or drive cutoff for each slot. Unless it is desired, the controller can be used in the condition that the enclosed short-circuit line is connected.

Insert the wires to the enclosed connector (plug). Strip the sheath of the applicable wires for 10mm and insert them to the connector. Push a protrusion beside the cable inlet with a small slotted screwdriver to open the inlet. Once the cable is inserted, take the slotted screwdriver OFF the protrusion to fix the cable to the terminal.

	Connector Name		Drive Cutoff/Emergency Stop Input Connector		
	Cable Si	de	FMCD1.5/8-ST-3.5	Enclosed in standard package Manufactured by PHOENIX CONTACT	
<u>(6)</u>	Controlle	er Side	MCDN1.5/8-G1-3.5P26THR		
5 (
4	Pin No.	Signal Name	Description	Applicable cable diameter	
	1	MPOSLOT1	For motor power output slot 1 (Axis No. 2 and 3)	KIV1.25 to 0.5mm ²	
	2	MPISLOT1	For motor power input slot 1 (Axis No. 2 and 3)	(AWG16 to 20) Select the cable	
nector	3	MPOSLOT0	For motor power output slot 0 (Axis No. 0 and 1)	thickness allowable for the current figured out in	
	4	MPISLOT0	For motor power input slot 0 (Axis No. 0 and 1)	the power capacity.	
	5	EMG+24VSLOT	For emergency stop power output slot 1 (Axis No. 2 and 3	3)	
	6	EMGINSLOT1	For emergency stop power input slot 1 (Axis No. 2 and 3)	KIV0.5 to 0.2mm ²	
	7	EMG+24VSLOT	For emergency stop power output slot 0 (Axis No. 0 and 1	(AWG20 to 24)	
	8	EMGINSLOT0	For emergency stop power input slot 0 (Axis No. 0 and 1)		
	9	MPOSLOT3	For motor power output slot 3 (Axis No. 6 and 7)	KIV1.25 to 0.5mm ²	
	10	MPISLOT3	For motor power input slot 3 (Axis No. 6 and 7)	(AWG16 to 20) Select the cable	
	11	MPOSLOT2	For motor power output slot 2 (Axis No. 4 and 5)	thickness allowable for the current figured out in	
	12	MPISLOT2	For motor power input slot 2 (Axis No. 4 and 5)	the power capacity.	
	13	EMG+24VSLOT	³ For emergency stop power output slot 3 (Axis No. 6 and 7	7)	
	14	EMGINSLOT3	For emergency stop power input slot 3 (Axis No. 6 and 7)	KIV0.5 to 0.2mm ²	
	15	EMG+24VSLOT	For emergency stop power output slot 2 (Axis No. 4 and 5	(AWG20 to 24)	
	16	EMGINSLOT2	For emergency stop power input slot 2 (Axis No. 4 and 5)		

MCON =

2.3.4 Connecting with Actuator

Connect the relay cables to the actuator connectors. Check in the instruction manual of each actuator for the details of the relay cables.

	Connec	tor Name	Actuator Connector	
	Cable S	ide	PADP-24V-1-S	
	Controll	er Side	S24B-PADSS-1	
	(1) Puls	e Motor Type		
	Pin No.	Signal Name	Description	Applicable cable diameter
<u>2</u> 2 2 2 2 2 1 1 1 1 1	1	φA	Motor Driving A-phase	
	2	VMM	Motor Power	
	3	φB	Motor Driving B-phase	
	4	VMM	Motor Power	
	5	φ/A	Motor Driving /A-phase	
	6	ф/В	Motor Driving /B-phase	
	7	LS+	Limit Switch Positive Side	
	8	LS-	Limit Switch Negative Side	
	9	BK+	Brake Release Positive Side	
	10	BK-	Brake Release Negative Side	
	11	NC	Not to be used	
	12	NC	Not to be used	Cable dedicated for
Front view of	13	A+	Encoder A-phase differential + input	IAI products
connector on	14	A-	Encoder A-phase differential - input	
controller side	15	B+	Encoder B-phase differential + input	
	16	B-	Encoder B-phase differential - input	
	17	5V	Encoder Power Supply	
	18	/PS	Encoder Line Driver Enable Output	
	19	GND	Ground	
	20	LSGND	Ground for Limit Switch	
	21	NC	Disconnected	
	22	NC	Disconnected	
	23	NC	Disconnected	
	24	FG	Grounding	

MCON =

(2) Servo Motor Type

				1
	20	\Box	1	Ľ
	40	\Box	3	Ľ
	60	\Box	5	
L	80		7	
	10回	Ø	9	
	12回	01	1	
	14回	Øj	13	
	16 🗆	D 1	15	
	18	Øj	17	
	20	01	۱9	
	22回	\square_2	21	Υ
	24回	\Box_2	23	Ľ
				•

Front view of connector on controller side

	Pin No.	Signal Name	Description	Applicable cable diameter
ולי	1	U	Motor Driving U-phase	
<u>'</u>	2	V	Motor Driving V-phase	
211	3	NC	Disconnected	
211	4	NC	Disconnected	
	5	W	Motor Driving W-phase	
	6	NC	Disconnected	
³	7	BK+	Brake Release Positive Side	
5	8	BK-	Brake Release Negative Side	
7	9	LS+	Limit Switch Positive Side	
? L	10	LS-	Limit Switch Negative Side	
Լ՝՝	11	A+	Encoder A-phase differential + input	
<u> </u>	12	A-	Encoder A-phase differential - input	Cable dedicated for
 of	13	B+	Encoder B-phase differential + input	IAI products
n	14	B-	Encoder B-phase differential - input	
de	15	Z+	Encoder Z-phase differential + input	
	16	Z-	Encoder Z-phase differential - input	
	17	5V	Encoder Power Supply	
	18	/PS	Encoder Line Driver Enable Output	
	19	GND	Ground	
	20	LSGND	Ground for Limit Switch	
	21	NC	Disconnected	
	22	NC	Disconnected	
	23	NC	Disconnected	
	24	FG	Grounding	

(3) Brushless DC Motor Type	rushless DC Motor Type	е
-----------------------------	------------------------	---

> Front view of connector on controller side

	Pin No.	Signal Name	Description	Applicable cable diameter
ונ	1	U	Motor Driving U-phase	
	2	V	Motor Driving V-phase	
	3	NC	Disconnected	
	4	NC	Disconnected	
	5	W	Motor Driving W-phase	
	6	NC	Disconnected	
	7	NC	Disconnected	
	8	NC	Disconnected	
	9	NC	Disconnected	
Ľ	10	NC	Disconnected	
ןנ	11	A+	Encoder A-phase differential + input	
	12	A-	Encoder A-phase differential - input	Cable dedicated for
	13	B+	Encoder B-phase differential + input	IAI products
	14	В-	Encoder B-phase differential - input	
	15	HS1	Hall IC Input 1	
	16	HS2	Hall IC Input 2	
	17	5V	Encoder Power Supply	
	18	NC	Disconnected	
	19	GND	Ground	
	20	HS3	Hall IC Input 3	
	21	NC	Disconnected	
	22	NC	Disconnected	
	23	NC	Disconnected	
	24	FG	Grounding	

Chapter 2 Wiring

2.3.5 Connection of Absolute Battery Connector

Connect the absolute battery unit to the controller for Simple Absolute Type.

	Connector Name		Absolute Battery Connecto	pr
	Cable Si	ide	CZHR-20V-S	
	Controlle	er Side	S20B-CZWHS-B-1	
0 A1 B100				
• A3 B8 • 4	Pin No.	Signal Name	Description	Applicable cable diameter
○ A4 B7 ○ []	A1	GND	0V	
○ A5 B6 ○ ○ A6 B5 ○	A2	BATTMP AXIS No.0	Axis No.0 Absolute Battery Temperature Sensor	
• A8 B3 •] • A9 B2 •]	A3	BATTMP AXIS No.1	Axis No.1 Absolute Battery Temperature Sensor	
○ A10 B1 ○ ↓	A4	BATTMP AXIS No.2	Axis No.2 Absolute Battery Temperature Sensor	
Front view of	A5	BATTMP AXIS No.3	Axis No.3 Absolute Battery Temperature Sensor	
connector on	A6	GND	0V	
	A7	BATTMP AXIS No.4	Axis No.4 Absolute Battery Temperature Sensor	
	A8	BATTMP AXIS No.5	Axis No.5 Absolute Battery Temperature Sensor	Cable dedicated for IAI
	A9	BATTMP AXIS No.6	Axis No.6 Absolute Battery Temperature Sensor	products
	A10	BATTMP AXIS No.7	Axis No.7 Absolute Battery Temperature Sensor	
	B10	GND	0V	
	B9	BAT AXIS No.0	Axis No.0 Absolute Battery	
	B8	BAT AXIS No.1	Axis No.1 Absolute Battery	
	B7	BAT AXIS No.2	Axis No.2 Absolute Battery	
	B6	BAT AXIS No.3	Axis No.3 Absolute Battery	
	B5	GND	0V	
	B4	BAT AXIS No.4	Axis No.4 Absolute Battery	
	B3	BAT AXIS No.5	Axis No.5 Absolute Battery	
	B2	BAT AXIS No.6	Axis No.6 Absolute Battery	
	B1	BAT AXIS No.7	Axis No.7 Absolute Battery	



2.3.6 **Connection of External Brake Connector**

Connection needs to be established when an external brake release is required for the actuator. The brake can be released if the power (24V DC 150mA/axis) is supplied to this connector even without the main power supplied to the controller.

NATINA	Connector Name
	Cable Side
<u>)</u> () () () () () () () () () () () () ()	
NOTION.	
	Controller Side
	•

	Connector Name		External Brake Connector		
	Cable Side		FMCD1.5/5-ST-3.5		Enclosed in standard package Manufactured by PHOENIX CONTACT
0(])0(Controll	er Side	MCD	N1.5/5-G1-3.5P26THR	THEENIX CONTACT
Front view of	Pin No.	Signal Na	me	Description	Applicable cable diameter
connector on controller side	1	BKRLS AXIS	No.3	Axis No.3 Brake Release Input	
	2	BKRLS AXIS	No.2	Axis No.2 Brake Release Input	
	3	BKRLS AXIS	No.1	Axis No.1 Brake Release Input	
	4	BKRLS AXIS	No.0	Axis No.0 Brake Release Input	
	5	GND		0V	KIV0.5 to 0.2mm ²
	6	BKRLS AXIS	No.7	Axis No.7 Brake Release Input	(AWG20 to 24)
	7	BKRLS AXIS	No.6	Axis No.6 Brake Release Input	
	8	BKRLS AXIS	No.5	Axis No.5 Brake Release Input	
	9	BKRLS AXIS	No.4	Axis No.4 Brake Release Input	
	10	GND		0V	



2.3.7 Connection of SIO Connector

Connect an teaching tool such as the PC software. (Note) Do not attempt connect the device to the same SIO network as the SEP related controllers such as PSEP.



Connector Name	SIO Connector	
Cable Side	miniDIN 8-pin	
Controller Side	TCS7587-0121077	

Pin No.	Signal Name	Description	Applicable cable diameter
1	SGA	Teaching Tool Signal +	
2	SGB	Teaching Tool Signal -	
3	5V	Power supply for teaching tool	
4	ENB	Enable signal input	Cable dedicated for IAI
5	EMGA	Emergency Stop Signal A	products
6	24V	Power supply for teaching tool	producio
7	0V	0V	
8	EMGB	Emergency Stop Signal B	
Shell	0V	0V	

Caution: For MCON-CG, it is not available to operate the machine with nothing plugged in the SIO connector. In such a case, plug in the dummy plug DP-5.

Â



2.3.8 Wiring Layout of Field Network Connector

Check the instruction manuals for each field network master unit and mounted PLC for the details.

1) CC-Link Connection Type



Connector Name	CC-Link Connector	
Cable Side	MSTB2.5/5-STF-5.08 AU	Enclosed in standard package Manufactured by PHOENIX CONTACT
Controller Side	MSTB2.5/5-GF-5.08 AU	

Pin No.	Signal Name (Color)	Description	Applicable cable diameter
1	DA (BL)	Communication Line A	
2	DB (WT)	Communication Line B	
3	DG (YW)	Digital GND	
4	SLD	Connect the shield of the shielded cable (Connect the FG of the 5 pins and controller FG internally)	Dedicated cable for CC-Link
5	FG	Frame Ground (Connect the SLD of the 4 pins and controller FG internally)	

(Note) Connect a terminal resistor between DA and DB if the unit comes to the end of the network. [Refer to 2.2 [7] Wiring Layout for Field Network.]



Front view of connector on controller side

MCON -

2) CC-Link IE Field Connection Type





(Note) There is no definition of IN and OUT for the communication port.

Μςον

3) CompoNet Connection Type

Cable Side



Connector Name CompoNet Connector



Front view of connector on controller side

Controller Side XW7		XW7	D-PB4-R F	Produced by OMRON		
Pin No.	Signal Name (Color)		Description	Applicable cable diameter		
1	BS+ (RD)	Communication Power Supply + ^(Note 1)			
2	BDH (WT)		Signal line H side	CompoNet Dedicated		
3	BDL (BL)		Signal line L side	Cable		
4	BS- (BK)		Communication Power Supply - ^(Note 1)			

Prepare a connector complied with CompoNet standards.

Note 1 It is not necessary to supply the communication power. (Internal power source is used.) If conducting multi power supply to other slave devices via

communication cables, there is no problem with connecting the power supply to BS+ and BS- terminals.

(Note) Connect a terminal resistor (121Ω) between BDH and BDL if the unit comes to the end of the network. [Refer to 2.2 [7] Wiring Layout for Field Network.]

4) DeviceNet Connection Type





Front view of connector
on controller side

Connector Name	DeviceNet Connector	
Cable Side	MSTB2.5/5-STF-5.08 AU M	Enclosed in standard package Manufactured by PHOENIX CONTACT
Controller Side	MSTB2.5/5-GF-5.08 AU	
Signal	Applicable cable	

Pin No.	Signal Name (Color)	Description	Applicable cable diameter
1	V- (BK)	Power Supply Cable Negative Side	
2	CAN L (BL)	Communication Data Low Side	Dedicated cable for
3	Shield (None)	Shield	DeviceNet
4	CAN H (WT)	Communication Data High Side	
5	V+ (RD)	Power Supply Cable Positive Side	

(Note) Connect a terminal resistor (121Ω) between CAN L and CAN H if the unit comes to the end of the network. [Refer to 2.2 [7] Wiring Layout for Field Network.]

MCON =

5) EtherCAT Connection Type, EtherCAT Motion Connection Type



	Connector Name		EtherCAT Connector EtherCAT Motion Connector		
	Cable Side		8P80	C Modular Plug	Please prepare separately
8 () 8	Controlle	er Side	8P80	C Modular Jack	
	Pin No.	Signal N	ame	Description	Applicable cable diameter
	1	TD+		Data sending +	
1 II 러님	2	TD-		Data sending -	
	3	RD+		Data receiving +	For EtherCAT cable,
	4	_		Disconnected	use a straight STP
Front view of connector on controller side	5	_		Disconnected	the performance of
	6	RD-		Data receiving -	Category 5 or more.
	7	-		Disconnected	
	8	_		Disconnected	

There are IN and OUT designated for the communication port. Be careful not to plug in the communication cable in the wrong way.

8P8C Modular Plug

8P8C Modular Jack

6) EtherNet/IP Connection Type

Cable Side

Controller Side



Connector Name EtherNet/IP Connector

	1
الصا	8

Front view of connector on controller side

Pin No.	Signal Name	Description	Applicable cable diameter
1	TD+	Data sending +	
2	TD-	Data sending -	
3	RD+	Data receiving +	For Ethernet cable, use
4	—	Disconnected	a straight STP cable
5	—	Disconnected	nerformance of
6	RD-	Data receiving -	Category 5 or more.
7	_	Disconnected	
8	—	Disconnected	

Please prepare separately

9

6

7) PROFIBUS-DP Connection Type

Use the type A cable for PROFIBUS-DP (EN5017).



Connector Name	PROFIBUS-DP Connector	
Cable Side	9-pin D-sub Connector (Male)	Please prepare separately
Controller Side	9-pin D-sub Connector (Female)	

9	00	5	Pin No.	Signal Name	Description	Applicable cable diameter
	00		1	NC	Disconnected	
6	$\bigcirc \bigcirc $	1	2	NC	Disconnected	
	\bigcirc		3	B-Line	Communication Line B (RS485)	
Front view of connector on controller side		4	RTS	Request for Sending		
		5	GND	Signal GND (Insulation)	PRUFIBUS-DP Dedicated Cable	
		6	+5V	+5V Output (Insulation)	Dedicated Cable	
			7	NC	Disconnected	
		8	A-Line	Communication Line A (RS485)		
			9	NC	Disconnected	

(Note) Connect a terminal resistor between A-line and B-line if the unit comes to the end of the network. [Refer to 2.2 [7] Wiring Layout for Field Network.]

8) PROFINET IO Connection Type



Connector Name	PROFINET Connector	
Cable Side	8P8C Modular Plug	Please prepare separately
Controller Side	8P8C Modular Jack	



L °	3	RD+
	4	_
Front view of	5	_
connector on controller side	6	RD-
	7	

	1	Pin No.	Signal Name	Description	Applicable cable diameter
	8	1	TD+	Data sending +	
		2	TD-	Data sending -	For Ethernet cable, use
		3	RD+	Data receiving +	
		4	-	Disconnected	a straight STP cable
of on ide		5	_	Disconnected	nat possesses the
	9	6	RD-	Data receiving -	Category 5 or more.
		7	_	Disconnected	·····
		8	_	Disconnected	

9) MECHATROLINK-III Connection Type

Refer to wiring of connector for MECHATROLINK-III, MECHATROLINK-III Applicable Controller Instruction Manual (ME0317).

10) SSCNET III/H Connection Type

Refer to wiring of connector for SSCNETII/H, SSCNETII/H Applicable Controller Instruction Manual (ME0352).

MCON =
Chapter 3 Operation

- 3.1 Basic Operation
- 3.1.1 Basic Operation Methods

This controller is to be controlled with field network. Even though there are several types for an actuator, such as slider type, rod type, rotary type, gripper type, etc., the method to control the operation is the same unless otherwise specified in this manual.



MCON



• Operation Mode Available 7 types of operation modes are available to select from. The settings are to be established with Gateway Parameter Setting Tool. Shown below are the outline.

Operation Mode	Contents	Overview
Simple Direct Mode Positioner 1 Mode	The target position can be indicated directly by inputting a value. Also, monitoring of the current position is available in 0.01mm unit. Those other than the target position are to be indicated in the position table, and the setting can be done for 256 points at maximum. The 256 points of position data can be registered at the maximum and is able to stop at the registered positions. Also, monitoring of the current position is available in 0.01mm unit.	PLC Target Position No. Competition No. Competition Position No. Competition Position No. Status Signal
Direct Indication Mode	The target position, speed acceleration/deceleration and pressing current limit can be indicated with inputting a number. As well as monitoring of the current position in 0.01mm unit, monitoring of current speed and command current is also available.	PLC Teget Position Teget Position Teget Position Teget Position Push % Control Signal Current Position Current Position Communication with Field Network Command Value Command Value Status Signal Command Value Command Value Status Signal
Positioner 2 Mode	This is the operation mode of the position data of 256 points at maximum set in the position table. The monitoring of the current position is not available This mode is that the transferred data is reduced from Positioner 1 Mode.	PLC Communication with Field Network Completed Position No. Status Signal
Positioner 3 Mode	This is the operation mode of the position data of 256 points at maximum set in the position table. The monitoring of the current position is not available This is the mode to control with the minimized number of signals to perform the positioning operation by reducing the amount of sent and received data from Positioner 2 Mode.	PLC Target Position No. Completed Position No. Completed Position No. Status Signal



Operation Mode	Contents	Overview
Positioner 5 Mode	This is the operation mode of the position data of 16 points at maximum set in the position table. It is a mode that enabled to monitor the current position in 0.1mm unit by reducing the volume and number of position table from Positioner 2 Mode.	PLC Communication with Completed Position No. Completed Position No. Status Signal
Remote I/O Mode	It is the operation mode to control with ON/OFF of bits like PIO (24V input and output). Five types ^(Note 1) of control are available. Note : It is to be switched with PIO patterns (driver board parameters)	PLC Communication with Completed Position No. Status Signal

Note 1: Five types of control (PIO Pattern) [Refer to the 3.4.10 Control Signal for Remote I/O Mode for details.]

PIO Pattern	Operation Mode	I/O Specification
0	Positioning mode	Position number specification 64 points
		Zone signal output 1 point
		Position zone signal output ^(Note 2) 1 point
1	Teaching mode	Positioning points 64 points
		Position zone signal output ^(Note 2) 1 point
		Jog operation is available
		The current position can be written to a specified position.
2	256-point mode	Positioning points 256 points
		Position zone signal output ^(Note 2) 1 point
4	Solenoid valve	Positioning points 7 points
	mode 1	Zone signal output 1 point ^(Note 1)
		Position zone signal output ^(Note 2) 1 point
		Operation command available only with position number
		indication
5	Solenoid valve	Positioning points 3 points
	mode 2	Zone signal output 1 point (Note 1)
		Position zone signal output ^(Note 2) 1 point
		The actuator is operated by specifying forward, backward and
		intermediate position commands.
		Complete signal is able to output a signal equivalent to the
		limit switch

Note 2: The position zone signal is able to switch to the zone signal in the setting of Parameter No. 149.

3.1.2 Parameter Settings

Parameter data should be set appropriately according to the application requirements. Parameters are variables to be set to meet the use of the controller in the similar way as settings of the ringtone and silent mode of a cell phone and settings of clocks and calendars.

(Example)

Software Stroke Limit : Set a proper operation range for definition of the stroke end,
prevention of interferences with peripherals and safety.Zone Output: Set to require signal outputs in an arbitrary position zone withi

t : Set to require signal outputs in an arbitrary position zone within the operation zone.

Parameters should be set to meet the use of the controller prior to operation. Once set, they may not set every operation.

Refer to Chapter 8 Parameter for the parameter types and the details.

3.2 Initial Setting

The operation mode is to be set using Gateway Parameter Setting Tool (Ver. 2.1.0.0 or later). (Ver. 3.1.0.0 or later for CC-Link IE Field Type) Setting of the parameters including the operation pattern are to be conducted on RC PC Software (Ver. 10.0.0.0 or later).

Shown below is the process for the setup. Follow the instruction to conduct the setting properly.

(Preparation) Install RC PC Software and Gateway Parameter Setting. For Gateway Parameter Setting Tool, install the file stored in the CD-ROM for PC software, or download from our website, intelligentactuator.com. [Refer to the instruction manual of the PC software for the details of the PC software.]

Make sure the system I/O connector wires and operation mode setting switch are in MANU condition when having the setting done. [Refer to "Name and Function of Each Part 9), 11)"]

3.2.1 Operation Mode Setting (Setting in gateway parameter setting tool)

[Step 1] Connect between the PC and SIO connector on MCON with the cable enclosed in the RC PC Software, and start the gateway parameter setting tool. The following window appears. Select "MCON" and click "OK" button.



[Step 2] Once MCON is detected the detected unit numbers become available to select. Select the unit number to be connected and click the "OK" button.



MCON being detected

Select the unit number to be connected

[Step 3] The main window opens. The main window opens even when MCON could not be detected.

Parameter Configuration Tool for IAI GateWay Unit File Setting Monitor Help	
Port Config Read Write	<pre>C Direct,Positioner C RemoteI/O</pre>
Network Type	Drive Unit0 (Axis0, Axis1)
Address	Undefined Axis0 Rsv
Baud Rate 🗾	Drive Unit1 (Axis2, Axis3) Undefined
Information	-Drive Unit2 (Avic4 Avic5)-
-	Undefined Axis4 Rsv Axis5 Rsv
irmware Version:	Drive Unit3 (Axis6, Axis7) Undefined
udrate(bps):38400 Port:COM23	2.0.0

Main windows (Initial condition)

[Step 4] Reading is started from MCON to PC. Click on the "Read" button and a confirmation window appears. Click on the "Yes" button.

If the writing is finished in normal condition, writing complete window appears. Click "OK" button.

I Parameter Configuration Tool for IAI GateWay	Unit	
Eile Setting Monitor Help		
Port Config Read	Write © Direct, Positioner © Re	emoteI/O
Network Type	Drive Unit.0 (Axis0, Axis1)	
Iddress	Undefined	Axis0 Rsv
Confirm	ation	- C Axisl Rav
Baud Rate		
6	Are the parameters read from	
	the Gateway unit correct?	Axis3 Ray
		1.111111
Information -	Yes No (Axis5)	
		Axis4 Rav
-	Undefined	🗖 🗖 Axis5 Rsv
Firmware Version:	rive Unit3(Axis6,Axis7)	
	Undefined	Axis6 Rsv
	Underined	🗖 🗖 Axis7 Rsv
Baudrate(bps):38400 Port:COM23		2.0.0.0
	イ ケ	
	\bigvee	
	¥	
Information	×	
Reading Reading	g the parameter from the Gateway unit was	
	succession.	
	OK	

[Step 5] The parameters input to MCON are listed as shown below. Indicate the field network node addresses in Address.

Parameter Configuration	Tool for IAI GateWay Unit -		↓ ↓	-02
Port Config	Read Writ	e © Direct, Positioner C	RemoteI/O	
Network Type	DeviceNet	Drive Unit.0 (Axis0, Axis1)		
Address	0	Undefined	- Axi	sû Rsv sî Rsv
Baud Rate	Auto	-Drive Unit1(Avic2 Avic3)		
		Undefined	F Axi	s2 Rsv s3 Rsv
Information				
Out	- 16 byte	Drive Unit2 (Axis4, Axis5)	T Ani	s4 Rsv
	- 10 byte		- C Axi	s5 Rsv
Firmware Version:		Drive Unit3(Axis6,Axis7)		
		Undefined		s7 Rsv
Baudrate (bps) : 38400 Po	prt:COM23			2.0.0.

Caution: In the following to the current s	slave, set the valutation number.	ue the number of c	occupied station is added
	Network Type	CC-Link	
	Address	1	·
	Baud Rate	10Mbps	·
	Information		
	Mode	- Ver.2 mode Remote net	
	Extend Cyclic setting	- octuple	
	Station Qnt	- 2 station	

Caution: (Caution for Setup of CC-I There is a section to set u setup of current station no up in this as the one in th	Link IE Field Type t up the network number in addition to the number. Have the same network number set the connected PLC.		
	Network Type	CC-Link IE Field		
	Network No.	1	•	
	Node Address	1	•	
	Baud Rate	Auto	v	

Mcon =

[Step 6] Select whether to use Remote I/O Mode or any other mode (Direct Value/Positioner Mode). When Remote I/O Mode is selected, any other mode except for Remote I/O Mode cannot be selected for all the axes on MCON.

) (⊯) 🖬 Die Second Tourion Tei	P	
Port Config	Read Write	© Direct, Positioner O RemoteI/O
Network Type	DeviceNet	Drive Unit.0 (Axis0, Axis1)
Address	0	Undefined
Baud Rate	Auto -	Drive Unit1 (Axis2, Axis3) Undefined
Information		
Out	- 16 byte - 16 byte	Drive Unit2(Axis4,Axis5) Undefined
irmware Version:		Drive Unit3 (Axis6, Axis7) Undefined Axis6 Rev Axis6 Rev Axis6 Rev

[Step 7] Select an operation mode for each drive unit (in 2 axes unit). Select an operation mode for Drive Unit 0 (AX0: 1st axis, AX1: 2nd axis) first. (Only Remote I/O Mode can be selected if Remote I/O Mode was selected in Step 6.)

Port Config	Read Write	© Direct, Positioner C RemoteI/O
letwork Type	DeviceNet	Drive UnitO(AxisO,Axis1)
ddress	0	Direct Indication1(Size:8W)
aud Rate	Auto 💌	
		Drive Uniti(Axis2, Axis3)
		Undefined Axis3 Rsv
nformation		-Drive Unit2 (Avied AvieE)
ut	- 48 byte	Axis4 Rev
n	- 48 byte	Undefined T Axis5 Rsv
rmware Version:		Drive Unit3(Axis6,Axis7)
		Unde Fined
		L Axis7 Rsv

[Step 8] For the number of driver axes 3 or more, select the operation mode of Drive Unit 1 (AX2: 3rd axis, AX3: 4th axis).

(Note) By selecting the operation mode for Drive Unit 0 [Refer to Step 7], the operation mode for Drive Unit 1 becomes available to be selected.

- [Step 9] For the number of driver axes 5 or more, select the operation mode of Drive Unit 2 (AX4: 5th axis, AX5: 6th axis).
 - (Note) By selecting the operation mode for Drive Unit 1 [Refer to Step 8], the operation mode for Drive Unit 2 becomes available to be selected.
- [Step 10] Select Operation Mode on Drive Unit 3 (AX6: 7th axis, AX7: 8th axis) when the number of the driver axes is seven or more.
 (Note) By selecting Operation Mode in Drive Unit 2 [Refer to Step 9], Operation Mode is Drive Unit 3 becomes available to select.

MCON

- [Step 11] In case there is an actuator that is connected but not to be activated (reserved axis), tick on "Axis n Reserved" beside the operation mode setting box for each drive unit. (n indicate the axis number)
 - (Note) In case that the actuator will not be connected to an axis that is checked as the reserved axis, set Parameter No. 158 "Valid Axis / Invalid Axis Select" to "1: Disabled".

A Caution: Even if the total number of the used axes is an odd number, make the last axis in reservation to get an even number. It is necessary to secure as much area as when not set as a reserved axis even if set as the reserved axis.

[Step 12] Conduct only for EtherNet/IP Type (move onto Step 13 if not applied) Click on Setting in the menu and select EtherNet/IP Setting, and the setting window for the IP address, subnet mask and default gateway opens. Establish the settings to suit your system.

🗊 Pa	arameter Configuration Tool for IAI G	ateWay Unit	EtherNet/IP Setting	
<u>F</u> ile	Setting Monitor			
	Specialty Parameter		IP address	192.168.0.0
D	Port <u>C</u> onfig	Write	Subnet mask	255 255 255 0
	TimeSetting(<u>T</u>)			
No	Unit No.(<u>U</u>)	+/TD	Default gateway	
ne	EtherNet/IP Setting(])	C/ 1F		
Address			OK	

[Step 13] Write the edited operation mode setting parameters to MCON. Click on the "Transfer" button shown below and a confirmation window pops up. Click on the "Yes" button.

If the writing is finished in normal condition, writing complete window appears. Click "OK" button.

Parameter Configuration	Tool for IAI Gate¥	lay Unit -				
Eile Setting Monitor Help						
Port Config	Read	Write	• Direct, Position	er C RemoteI	/0	
Network Type	DeviceNe	t	Drive Unit.0 (Axis)),Axis1)		
Address	0	•	Direct Indicati	onl(Size:8W) 🔹	□ Axis0 F □ Axis1 F	lsv lsv
Baud Rate	Auto	v				
	Confirmat	ion		1153) :4W)	□ Axis2 F ☑ Axis3 F	lsv Rsv
Information	_ 🕐	Are the transr	nitted parameters correct?			
Dut			Yes No	(155) W)	□ Axis4 I ▼ Axis5 H	lsv Isv
irmware Version:			Drive Unit3(Axis)	,Axis7)		
			Positioner2 (Siz	e:2W) 🔹	□ Axis6 F □ Axis7 F	lsv lsv
audrate (bps): 38400 Pc	ort:COM23					2.0.0
						Francisco
			\checkmark			
Inf	ormation			×		
	Transmi	tting the param	eter to the Gateway unit succe	eded.		
			[OK		

[Step 14] A confirmation window for Gateway Unit reboot opens. Click "Yes" button to accept the reboot.



[Step 15] After rebooting, a confirmation window for parameter reading appears for confirmation of the written contents. Click "Yes" button to accept the reading. Once the reading process is complete, confirm that the written contents are reflected.

If not written properly, do the process again from Step 1.

Reference: The settings are conducted in the special parameters for the process of communication error, change in pressing method for Field Network Type and speed unit change for Direct Indication Mode. Refer to 3.9 About Gateway Parameter Setting Tool for the details.

MCON

3.2.2 Parameter Settings (Setting on RC PC Software)

[Step 1] Close the gateway parameter setting tool and start RC PC Software. Select "Teach Mode 1 (Safety Velocity Effective / PIO Startup Prohibited)" in MANU Operation Mode Select.

Manual operation mode Select	
Please Select Manual operation mode.	
Teach 1(Safety speed effective/PIO start prohibition)	•
OK	

[Step 2] Show the axis select window in "Parameter" – "Edit", and select the axis to make setup.



[Step 3] Check if the setting of Parameter No. 158 Valid Axis / Invalid Axis Select matches with the content set in Step 11 of 3.2.1 Gateway parameter Setting Tool for all the axes.

Parameter No.158 Valid Axis / Invalid Axis Select

Actuator Connection Status	Parameter Setting Value				
Actuator connection	0 (Enabled)				
Actuator Not Connected	1 (Disabled)				
(Disabled Axis)					

[Step 4] Set Parameter No. 25 PIO Pattern to the axes set valid in Step 3 by following the contents set in Step 6 of 3.2.1 Operation Mode Setting.

[Refer to the table of Operation Mode Available in 3.1.1 Basic Operation Methods] Parameter No.25 PIO pattern select

Operation Patterns	PIO Pattern Setting Value
Types other than Remote I/O Mode	6
Remote I/O Mode	0, 1, 2, 4, 5 (select number referring to Section 3.4.10)

- [Step 5] Set the zone (Parameters No.1 and 2) and soft limit (Parameter No.3 and 4) that suit to the system.
- [Step 6] Write the edited parameters to MCON. Writing is to be conducted in unit of the drive units (two axes unit).

Once "Transfer" button is pressed, the confirmation message window appears. Click on "Yes" button.



[Step 7] A confirmation window for Gateway Unit reboot opens. Click "Yes" button to accept the reboot. Rebooting is also to be conducted in unit of the driving units (two axes unit).



- [Step 8] Reboot all ^(Note 1) the axes and the setup is complete.
 - Note 1 It is not necessary to have a transfer and reboot o the drive units with no parameter change made.

3.3 Setting of Position Data

The values in the position table can be set as shown below. In the case that only positioning is necessary, all you have to do is to input the position data, and nothing else is required as long as the indication of acceleration and deceleration is needed. For the speed and acceleration/deceleration, the data set to the parameters is automatically reflected to the setting. Therefore, the work can be simple if you put the speed and acceleration/deceleration data to the parameter setting.

1)	2)	3)	4)	5)	6)	7)	8)	9)	10)	11)	12)	13)	14)	15)	
No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode	Vibration suppress No.	Comment
0	0.00	100.00	0.30	0.30	0.00	0.00	0.10	0.00	0.00	0	0	0	0	0	
1	100.00	100.00	0.30	0.30	0.00	0.00	0.10	0.00	0.00	0	0	0	0	0	
2	150.00	200.00	0.30	0.30	50.00	0.00	30.00	0.00	0.00	0	0	0	0	0	
3	200.00	400.00	1.00	1.00	0.00	0.00	0.10	0.00	0.00	0	0	0	0	1	
4	200.00	200.00	0.30	0.30	0.00	0.00	0.10	250.00	230.00	0	0	0	0	2	
5	500.00	50.00	0.10	0.10	0.00	0.00	0.10	0.00	0.00	0	0	0	0	0	
6															
7															



1) Position No...... It is the number commanded by PLC in operation command.

A Caution:	Do not use position No.0 if available positions remains enough. At the first servo ON after power ON, the completed position No. output is
	0 even if the actuator is not located at position No.0. The actuator enters into the same state as that at positioning to position No.0. The completed position No. output is 0 during movement of the actuator. To use position No.0, get the command history by using the sequence program to check
	completed position No.0 based on the history.

2) Position [mm] ······ Positioning coordinate value. Enter it as the distance from the home position.

For pitch feed (relative movement = incremental feed), enter the pitch width.

A value with – indicates that the actuator moves toward the home position. A value without – indicates that the actuator moves to be away from the home position.

Caution:	(1)	In the case of a Gripper Type: Set the coordinate value on the single finger basis. Set the value for the movement of one finger from the home position. Stroke information in the specification is shown in the total value of
	(2)	movement distance of the two fingers. Therefore, the stroke is 1/2 of what is described in the specifications. In the case of a Rotary Type Set the coordinate value by an angle from the home.

MCON

3) Velocity [mm/s]···· Set the velocity in the operation.

Do not attempt to input a value more than the maximum velocity or

- less than the minimum velocity *1.
- *1 Minimum velocity [mm/s] =
 - Lead length [mm] / Number of encoder pulse / 0.001 [sec]
- 4) Acceleration $[G] \cdots$ Set the acceleration at start.
- 5) Deceleration $[G] \cdots$ Set the deceleration at stop.



7) Threshold [%] ·····

Pulse Motor Type Limited Feature Set the threshold value of the pressing torque in %. If the torque (load current) becomes larger than this setting value during pressing, the detection signal is output. This feature is used to monitor the load current and judge whether the operation is good or not in such an operation as press fitting in pressing. This feature is limited only to the pulse motor type actuators. Set to 0 for the servo motor type and brushless DC motor type actuators.

8) Positioning width [mm] ·· In Positioner * Mode, Simple Direct Mode and PIO patterns^(Note 1)0 to 2 and 4 in Remote I/O Mode, the positioning complete signal is output if the remaining moving distance is entered within the zone set here when positioning is performed. For pressing, the actuator is moved at the setup velocity and acceleration/deceleration in the same way as normal positioning to the position of the coordinate value set in 2) and then performs pressing movement by the data set here. For PIO pattern 5, the positioning command. Despite the specified position number, the relevant output signal (LS*) is turned ON when the actuator reaches the setting range. The operation is accomplished as if a sensor were installed to detect the actuator. PIO pattern 5 does not correspond to the pressing operation.

Set the positioning band more than the minimum unit of the movement amount (movement amount for one pulse of an encoder) of the used actuator.

Note 1 PIO pattern: This is the operation pattern of Remote I/O Mode.

[Refer to 3.8 Control and functions of Input and output signals of Remote I/O Mode]

[Example of PIO pattern 5]

The figure below shows the position table and the position at which each of the LS signals is turned ON. If the actuator passes any of the positioning bands in the operation by another position number or manual operation in the servo-off state, the relevant LS signal is always turned ON.



MCON

- 9) Zone + [mm] ^(Note 2) ········Set the coordinate value on the positive side at which position zone output signal PZONE is turned ON. PZONE is set to ON in the zone between this value and the coordinate value on the negative side set in 10). The feature follows the specified position number. It is valid only when the position is specified but invalid in another position operation.
 10)Zone [mm] ^(Note 2) ·········Set the coordinate value on the negative side at which position
- zone output signal PZONE is turned ON.
- Note 2 If set to Zone + < Zone -, PZONE Signal turns ON out of the ranges of Zone + and Zone -.

11) Acceleration/deceleration mode ……… Select a proper acceleration/deceleration pattern

		depending on the load.
Set value	Acceleration/Deceleration Pattern	Operation
0	Trapezoid	Velocity
1	S-shaped Motion (Refer to Caution at S-shaped Motion)	Velocity Set the S-motion rate with parameter No.56.
2	First-Order Delay Filter (Refer to Caution at First-order Delay Filter)	Velocity Set the first-order filter constant with parameter No.55.
; 3) [4) [(ndicated. Do not use S-shaped acceleratio ime or the deceleration time exc Do not pause on the move during acceleration) and may cause a d	on/deceleration control if the setting of the accelerati seeds 2 seconds. It will be the trapezoid control. g acceleration or deceleration. It will change the spe danger.
Cau 1) 5 7 7 7 7 7 7 7 7 7 7 7 7 7	tion at First-order Delay Filter: Since it requires a speed change command or direct command tha moving, first-order delay filter con control. Make sure to make a command v First-order delay filter control is in t will be the trapezoid control eve	e during the operation, even if having the position at first-order delay filter is set while the actuator is ntrol cannot be performed and will be the trapezoid while the actuator is stopped. nvalid in the index mode of the rotary actuator. en if first-order delay filter control is indicated
crement	al······ Set to 1 for pitch fea The value set for th With the value set to	ed (relative movement = incremental feed). e position in 1) indicates the pitch feed distanc o 0, positioning is defined to the position in 1)
Â	<u>based on</u> the absolution based on the based	ute coordinate system.

13) Transported Load/Gain Set...... In this section, the features differ for each motor type.

Motor Type	Symbol	Function
Pulse Motor Type	13)-1	Transported Load
Servo Motor Type	13)-2	Gain Set

13)-1 Transported Load ... Register 4 types of load weights with using the smart tuning, and choose the number from the registered numbers (0 to 3)

Pulse Motor Type Limited Feature

that is to be used. From the numbers (load weights) registered in this section, the shortest tact time function calculates the optimum speed and acceleration/deceleration.

[Refer to the instruction manual of smart tuning tool for how to register the load weights and shortest tact time.]

Setting	Name
0	Transported Load Pattern No.0
1	Transported Load Pattern No.1
2	Transported Load Pattern No.2
3	Transported Load Pattern No.3

Servo Motor Type Limited Feature

13)-2 Gain SetSix parameters required for servo gain adjustment are collected to be a single set. 4 types of settings are able to be registered and the servo gains can be switched over for each positioning operation. By utilizing Smart Tuning Function (Note 1) in the PC software, the setting close to the optimum can be obtained.

Note 1 Refer to Chapter 10.4 List of Specifications of Connectable Actuators for the applicable models. It may require the setting of the gain set dedicated for the home-return operation in the case this function is used to have the high-speed setting or the setting to apply a transported weight more than the ratings. For how to set up and the caution items, refer to the instruction manual for RC PC Software.

[Parameters constructed in 1 set]

- Servo Gain Number (Position Gain)
- · Position Feed Forward Gain
- Speed Loop Proportional Gain
- Speed Loop Integral Gain
- Torque Filter Time Constant
- · Current Control Band Number

It is able to establish the gain set that corresponds to the position number to be operated to the indicated gain set.

[Refer to "Servo Adjustment" in Section 8.3 for each gain parameter details.]

Setting	Parameter Set Select	Parameter No.
0	Gain Set 0	7, 71, 31 to 33, 54
1	Gain Set 1	120 to 125
2	Gain Set 2	126 to 131
3	Gain Set 3	132 to 137



14) Stop mode Automatic servo OFF is enabled after a certain period from the completion of positioning for power saving.

Time setting is to be conducted in Parameter No. 36 to 38 Automatic Servo-off Delay Time 1 to 3, and three types of time are available to select.

Selection is available from 0 to 3 for the servo motor type and brushless DC motor type.

Selection is available from 0 to 7 for the pulse motor type.

Setting	Operation after Positioning Complete	Selectable Type
0	Keep the servo ON	All types
1	Automatic servo-off in a certain time (Parameter No. 36 set values)	All types
2	Automatic servo-off in a certain time (Parameter No. 37 set values)	All types
3	Automatic servo-off in a certain time (Parameter No. 38 set values)	All types
4	Full servo control	Pulse motor type
5	Full-servo control for a certain time (Parameter No. 36 set values) and then automatically turning servo OFF	Pulse motor type
6	Full-servo control for a certain time (Parameter No. 37 set values) and then automatically turning servo OFF	Pulse motor type
7	Full-servo control for a certain time (Parameter No. 38 set values) and then automatically turning servo OFF	Pulse motor type

Caution: • No retaining torque is provided in automatic servo OFF. Pay sufficient attention to the setting because the actuator may be moved by external force applied to it.

- Do not use the automatic servo OFF if the next moving command is relative distance specification (pitch feed). Failure to follow it may cause position shift to occur.
- Do not use the automatic servo OFF in pressing. If used, the pressing force is lost.
- Automatic Servo OFF would not function in the operation with teaching mode of PC software.

MCON

Servo Motor Type

Limited Feature

Cannot be used in

direct indication

mode

15)Vibration suppress No.....

Suppresses vibration (sympathetic vibration) of the load installed on the actuator.

It possesses a capacity to deal with 3 types of vibration. There are 4 parameters corresponds to 1 type of vibration and they are compiled in 1 set.

Set the parameter set corresponds to the position number necessary for the vibration control in the position table. [Refer to Chapter 4 Vibration Suppress Control Function.

 		-
Setting	Vibration Control Frequency (Specific Frequency)	Parameter No.
0	Vibration suppress frequency (Natural frequency)	_
1	Vibration Control Parameter Set 1	97 to 100
2	Vibration Control Parameter Set 2	101 to 104
3	Vibration Control Parameter Set 3	105 to 108

Caution: (1) The vibration frequency that can be controlled (applicable specific frequency) is from 0.5 to 30Hz.

- (2) The vibration control is applicable only for the vibration generated by the load of the actuator connected to this controller. Other vibrations cannot be controlled.
- (3) The vibration control is applicable only for the vibration in the direction of the actuator operation. Vibration in other directions cannot be controlled.
- (4) The vibration control is not applicable for home-return and pressing operations.
- (5) If the vibration frequency setting is low, the takt time may become long. The value below approximately 6Hz makes the positioning finishing to take more than 150ms.

This feature is limited only to the servo motor type actuators.

Set to 0 for the pulse motor type and brushless DC motor type actuators.

3.4 Field Network Type Address Map

3.4.1 PLC Address Construction by each Operation Mode

The address domain to be occupied differs depending on the operation mode. Refer to the example in Section 3.4.2 for the assignment.

PLC output Area		Simple Direct Mode	Positioner 1 Mode	Direct Indication Mode	Positioner 2 Mode	Positioner 3 Mode	Positioner 5 Mode	Remote I/O Mode	Details			
	n			C	Sateway Contro	ol O			3/3			
>	n+1			C	Gateway Contro	ol 1			0.4.0			
ea	n+2			D	emand Comm	and						
ol Are	n+3	Data 0										
ontro	n+4	Data 1										
ΣŬ	n+5	3.4.										
_	n+6				Data 3							
	n+7			0	ccupied Area (N	lote 2)						
	n+8	Target Position	Farget Occupied osition Area	Target Position	Specified Position No. (Axis No.0)	Control Signal/ Position N (Axis No.(o. (Axis No.(Assignment o. Area for)) Axis No.0				
	n+9	(Axis No.0)	(Note 2)	(Axis No.0)	Control Signa (Axis No.0)	Assignme Area for Axis No.	nt Control Signal 1 (Axis No.	Assignment Area for 0) Axis No.1				
	n+10	Specified Position No. (Axis No.0)	Specified Position No. (Axis No.0)	Positioning Width (Axis No.0)	Assignment	Assignme Area for Axis No.2	nt Assignme	Assignment Area for Axis No.2				
ea	n+11	Control Signal (Axis No.0)	Control Signal (Axis No.0)		(Axis No.0) Axis No	Axis No.1	Assignme Area for Axis No.3	Axis No.7	Assignment Area for Axis No.3			
introl Ar	n+12		Occupied	Velocity (Axis No.0)		Assignme Area for Axis No.4	nt 1	Assignment Area for Axis No.4				
Axes Cc	n+13	Assignment	Area (Note 2)	Acceleration/ Deceleration (Axis No.0)	Aration/AssignmentAssigerationArea forAreaNo.0)Axis No.5Axis	Assignment Area for Axis No.5	Assignment Area for Axis No.5	3.4.4 to 3.4.10				
Connected	n+14	Area for Axis No.1	Assignment Area for	Current Limitation Value (Axis No.0)	Assignment Area for Axis No.2 and later	Assignme Area for Axis No.6	Assignme Area for Axis No.2 and later	Assignment Area for Axis No.6	-			
0	n+15		Axis No.1	Control Signal (Axis No.0)		Assignme Area for Axis No.	nt 7	Assignment Area for Axis No.7				
	n+16 to n+23	Assignment Area for	Assignment Area for	Assignment Area for Axis No.1								
	n+24 to n+39	Axis No.2 and later	Axis No.2 and later	Assignment Area for								
	n+40 to n+71			and later								

Note 1 For CC-Link and CC-Link IE Field, from n to n+7 should be the bit address for MCON input and n+8 should be the top address of the data register.

Note 2 This is the domain occupied unconditionally. Therefore, this domain cannot be used for any other purpose.

Caution:	 Remote I/O Mode cannot be used together with other modes. Only Positioner 3 Mode and Remote I/O Mode are available to be selected in CompoNet. (CompoNet occupies 32 bytes no matter of the number of axes.)
In the case	se of CC-Link
Station Ty	ype: Ver.2.00 Remote device station
Extended	I Cyclic Setting/Occupied Station Number Setting:
Register	the information of the occupations displayed on Gateway Parameter Setting Tool to
the master	er unit. Connection cannot be established if information other than occupation is
set. [Refe	er to 3.2.1 Operation Mode Setting]

MCO	N Out	put \rightarrow PLC I	MCON Output \rightarrow PLC Input (n is PLC input top word address from MCON) (Note 1)								
PLC Input Area		Simple Direct Mode	Positioner 1 Mode	Direct Indication Mode	Positioner 2 Mode	Positioner 3 Mode	Positioner 5 Mode	Remote I/O Mode	Details		
	n			G	ateway Status	0			212		
_	n+1			G	ateway Status	1			3.4.3		
tewa) Area	n+2			Re	sponse Comma	and					
3ate se /	n+3	Data 0									
D N C	n+4				Data 1				2 / 11		
MCC Res	n+5	Data 2									
~	n+6				Data 3						
	n+7			Oc	cupied Area ^{(No}	te 2)					
	n+8	Current	Position	Current Position	Completed Position No./ Simple Alarm ID (Axis No.0)	Status Signal/ Completed Position (Axis No.0)	Completed Position No./ Simple Alarm ID (Axis No.0)	Assignment Area for Axis No.0			
	n+9	(Axis No.U)		(AXIS NO.U)	Status Signal (Axis No.0)	Assignment Area for Axis No.1	Status Signal (Axis No.0)	Assignment Area for Axis No.1			
	n+10	Completed Position No./ Simple Alarm ID (Axis No.0) Status Signal (Axis No.0)		Command	Assignment Area for Axis No.1	Assignment Area for Axis No.2	Assignment	Assignment Area for Axis No.2			
: Area	n+11			(Axis No.0)		Assignment Area for Axis No.3	Axis No.1	Assignment Area for Axis No.3			
esponse	n+12	Assignment		Current Speed (Axis No.0)	rent eed No.0) upied ea No.0) Code No.0) Assignment Area for Axis No.2 and later unal No.0)	Assignment Area for Axis No.4		Assignment Area for Axis No.4	344		
Connected Axes Re	n+13			Occupied Area (axis No.0)		Assignment Area for Axis No.5	Assignment	Assignment Area for Axis No.5	to 3.4.10		
	n+14	Area Axis	Area for Axis No.1			Assignment Area for Axis No.6	Assignment Area for Axis No.2	Assignment Area for Axis No.6			
	n+15			Status Signal (Axis No.0)		Assignment Area for Axis No.7		Assignment Area for Axis No.7			
	n+16 to n+23	Assignment		Assignment Area for Axis No.1							
	n+24 to n+39	Area Axis	a for No.2	Assignment Area for Axis No.2 and later							
	n+40 to n+71										

. . ~

Note 1 For CC-Link and CC-Link IE Field, from n to n+7 should be the bit address for MCON output and n+8 should be the top address of the data register.

Note 2 This is the domain occupied unconditionally. Therefore, this domain cannot be used for any other purpose.

Caution:	 Remote I/O Mode cannot be used together with other modes. Only Positioner 3 Mode and Remote I/O Mode are available to be selected in CompoNet. (CompoNet occupies 32 bytes no matter of the number of axes.)
In the case	e of CC-Link
Station Typ	be: Ver.2.00 Remote device station
Extended	Cyclic Setting/Occupied Station Number Setting:
Register th	he information of the occupations displayed on Gateway Parameter Setting Tool to
the master	r unit. Connection cannot be established if information other than occupation is
set. [3.2.1	Operation Mode Setting]

3.4.2 Example for each Field Network Address Map

Shown below is an example for the address map by the combination of operation modes for each field network.

Refer to it for the address assignment.

The examples for the address map constructions shown below are provided for each field network, however is described together (Note 1) for the networks of the same address assignment.

Note 1 Order of address maps for each field network

- 1) DeviceNet and CompoNet (Note 2)
- 2) CC-Link and CC-Link IE Field
- 3) PROFIBUS-DP, EtherNet/IP, EtherCAT
- 4) PROFNET IO

Note 2 For CompoNet, only Positioner 3 Mode and Remote are available for selection.

For CC-Link

Station Type and Extended Cyclic Setting/Occupied Station Number Settings: Register the setting displayed on Gateway Parameter Setting Tool to the host. [Refer to 3.2.1 Operation Mode Setting]

(Connection cannot be established with other ways)

🔨 Caution:

- If Remote I/O Mode is selected, all the axes connected to MCON are involved in Remote I/O Mode.
- This controller is able to control 2 axes with one driver board (1 slot), however, different operation mode cannot be selected in the same driver board.
- Example Set the 1st axis in Slot 1 to Positioner 1 Mode and 2nd to Simple Direct Mode
 Even if only one axis is used in the two axes on the same slot, it requires the address space for 2 axes.

[1] Address Map with Combination of Simple Direct Mode/Positioner 1 Mode and Direct Indication Mode

In the table below, shows the address map when eight axes of MCON are operated with a combination of Simple Direct Mode/Positioner 1 Mode and Direct Indication Mode in four types of construction for each field network as an example.

Combination	Number of Simple Direct	Number of Direct Indication
Example	Mode Axes	Mode Axes
1	8	0
2	6	2
3	2	6
4	0	8

1) DeviceNet (CompoNet is not applicable for this mode)

[Combination Example 1] When number of Simple Direct Mode/Positioner 1 Mode axes is 8 and number of Direct Indication Mode 0

(n is the top channel number for each PLC input and output between MCON and PLC)

$PLC \rightarrow$	MCON	$MCON \rightarrow PLC$		
CH No.	Description	CH No.	Description	
n to n+1	Gateway Control	n to n+1	Gateway Status	
n+2 to n+7	Demand Command	n+2 to n+7	Response Command	
n+8 to n+11	Axis No.0 Control Information	n+8 to n+11	Axis No.0 Status Information	
n+12 to n+15	Axis No.1 Control Information	n+12 to n+15	Axis No.1 Status Information	
n+16 to n+19	Axis No.2 Control Information	n+16 to n+19	Axis No.2 Status Information	
n+20 to n+23	Axis No.3 Control Information	n+20 to n+23	Axis No.3 Status Information	
n+24 to n+27	Axis No.4 Control Information	n+24 to n+27	Axis No.4 Status Information	
n+28 to n+31	Axis No.5 Control Information	n+28 to n+31	Axis No.5 Status Information	
n+32 to n+35	Axis No.6 Control Information	n+32 to n+35	Axis No.6 Status Information	
n+36 to n+39 Axis No.7 Contr Information		n+36 to n+39	Axis No.7 Status Information	

[Combination Example 2] When number of Simple Direct Mode/Positioner 1 Mode e axes is 6 and number of Direct Indication Mode 2

(n is the top channel number for each PLC input and out	tput between MCOM and PLC)
---	----------------------------

$PLC \rightarrow$	MCON	$MCON \rightarrow PLC$		
CH No.	Description	CH No.	Description	
n to n+1	Gateway Control	n to n+1	Gateway Status	
n+2 to n+7	Demand Command	n+2 to n+7	Response Command	
n+8 to n+11	Axis No.0 Control Information	n+8 to n+11	Axis No.0 Status Information	
n+12 to n+15	Axis No.1 Control Information	n+12 to n+15	Axis No.1 Status Information	
n+16 to n+19	Axis No.2 Control Information	n+16 to n+19	Axis No.2 Status Information	
n+20 to n+23	Axis No.3 Control Information	n+20 to n+23	Axis No.3 Status Information	
n+24 to n+27	Axis No.4 Control Information	n+24 to n+27	Axis No.4 Status Information	
n+28 to n+31	Axis No.5 Control Information	n+28 to n+31	Axis No.5 Status Information	
n+32 to n+35	Axis No.6 Control	n+32 to n+35	Axis No.6 Status	
n+36 to n+39	n+36 to n+39 Information		Information	
n+40 to n+43	Axis No.7 Control	n+40 to n+43	Axis No.7 Status	
n+44 to n+47	Information	n+44 to n+47	Information	

[Combination Example 3] When number of Simple Direct Mode/Positioner 1 Mode axes is 2 and number of Direct Indication Mode 6 (n is the top channel number for each PLC input and output

(in is the top channel number for each PLC input and output between MCON and PLC)

$PLC \rightarrow$	MCON	$MCON \rightarrow PLC$		
CH No.	Description	CH No.	Description	
n to n+1	Gateway Control	n to n+1	Gateway Status	
n+2 to n+7	Demand Command	n+2 to n+7	Response Command	
n+8 to n+11	Axis No.0 Control Information	n+8 to n+11	Axis No.0 Status Information	
n+12 to n+15	Axis No.1 Control Information	n+12 to n+15	Axis No.1 Status Information	
n+16 to n+19	Axis No.2 Control	n+16 to n+19	Axis No.2 Status	
n+20 to n+23	Information	n+20 to n+23	Information	
n+24 to n+27	Axis No.3 Control	n+24 to n+27	Axis No.3 Status	
n+28 to n+31	Information	n+28 to n+31	Information	
n+32 to n+35	Axis No.4 Control	n+32 to n+35	Axis No.4 Status	
n+36 to n+39	Information	n+36 to n+39	Information	
n+40 to n+43	Axis No.5 Control	n+40 to n+43	Axis No.5 Status	
n+44 to n+47	Information	n+44 to n+47	Information	
n+48 to n+51	Axis No.6 Control	n+48 to n+51	Axis No.6 Status	
n+52 to n+55	Information	n+52 to n+55	Information	
n+56 to n+59	Axis No.7 Control	n+56 to n+59	Axis No.7 Status	
n+60 to n+63	Information	n+60 to n+63	Information	

[Combination Example 4] When number of Simple Direct Mode/Positioner 1 Mode axes is 0 and number of Direct Indication Mode 8

(r	۱ is t	he to	p channel	number f	or each	PLC in	put and	output	between	MCON	and PLC)
۰.			P								

$PLC \rightarrow$	MCON	$MCON \to PLC$			
CH No.	Description	CH No.	Description		
n to n+1	Gateway Control	n to n+1	Gateway Status		
n+2 to n+7	Demand Command	n+2 to n+7	Response Command		
n+8 to n+11	Axis No.0 Control	n+8 to n+11	Axis No.0 Status		
n+12 to n+15	Information	n+12 to n+15	Information		
n+16 to n+19	Axis No.1 Control	n+16 to n+19	Axis No.1 Status		
n+20 to n+23	Information	n+20 to n+23	Information		
n+24 to n+27	Axis No.2 Control	n+24 to n+27	Axis No.2 Status		
n+28 to n+31	Information	n+28 to n+31	Information		
n+32 to n+35	Axis No.3 Control	n+32 to n+35	Axis No.3 Status		
n+36 to n+39	Information	n+36 to n+39	Information		
n+40 to n+43	Axis No.4 Control	n+40 to n+43	Axis No.4 Status		
n+44 to n+47	Information	n+44 to n+47	Information		
n+48 to n+51	Axis No.5 Control	n+48 to n+51	Axis No.5 Status		
n+52 to n+55	Information	n+52 to n+55	Information		
n+56 to n+59	Axis No.6 Control	n+56 to n+59	Axis No.6 Status		
n+60 to n+63	Information	n+60 to n+63	Information		
n+64 to n+67	Axis No.7 Control	n+64 to n+67	Axis No.7 Status		
n+68 to n+71	Information	n+68 to n+71	Information		

.....

2) CC-Link and CC-Link IE Field

[Combination Example 1] When number of Simple Direct Mode/Positioner 1 Mode axes is 8 and number of Direct Indication Mode 0

CC-Link: (Extended Cyclic Setting/Number of Occupied Stations: 4 times/2 stations)

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
Address	Description	Address	Description
RY 00 to 1F	Gateway Control	RX 00 to 1F	Gateway Status
RY 20 to 6F	Demand Command	RX 20 to 6F	Response Command
RY 70 to 7F	Cannot be used.	RX 70 to 7F	Cannot be used.
RY 80 to BF	Cannot be used.	RX 80 to BF	Cannot be used.
RWw 00 to 03	Axis No.0 Control Information	RWr 00 to 03	Axis No.0 Status Information
RWw 04 to 07	Axis No.1 Control Information	RWr 04 to 07	Axis No.1 Status Information
RWw 08 to 0B	Axis No.2 Control Information	RWr 08 to 0B	Axis No.2 Status Information
RWw 0C to 0F	Axis No.3 Control Information	RWr 0C to 0F	Axis No.3 Status Information
RWw 10 to 13	Axis No.4 Control Information	RWr 10 to 13	Axis No.4 Status Information
RWw 14 to 17	Axis No.5 Control Information	RWr 14 to 17	Axis No.5 Status Information
RWw 18 to 1B	Axis No.6 Control Information	RWr 18 to 1B	Axis No.6 Status Information
RWw 1C to 1F	Axis No.7 Control Information	RWr 1C to 1F	Axis No.7 Status Information

* There is no domain prepared in CC-Link IE Field for the line shaded in ______.



[Combination Example 2] When number of Simple Direct Mode/Positioner 1 Mode axes is 6 and number of Direct Indication Mode 2 CC-Link: (Extended Cyclic Setting/Number of Occupied Stations: 8 times/2 stations)

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
Address	Description	Address	Description
RY 000 to 01F	Gateway Control	RX 000 to 01F	Gateway Status
RY 020 to 06F	Demand Command	RX 020 to 06F	Response Command
RY 070 to 07F	Cannot be used.	RX 070 to 07F	Cannot be used.
RY 080 to 17F	Cannot be used.	RX 080 to 17F	Cannot be used.
RWw 00 to 03	Axis No.0 Control Information	RWr 00 to 03	Axis No.0 Status Information
RWw 04 to 07	Axis No.1 Control Information	RWr 04 to 07	Axis No.1 Status Information
RWw 08 to 0B	Axis No.2 Control Information	RWr 08 to 0B	Axis No.2 Status Information
RWw 0C to 0F	Axis No.3 Control Information	RWr 0C to 0F	Axis No.3 Status Information
RWw 10 to 13	Axis No.4 Control Information	RWr 10 to 13	Axis No.4 Status Information
RWw 14 to 17	Axis No.5 Control Information	RWr 14 to 17	Axis No.5 Status Information
RWw 18 to 1B	Axis No.6 Control	RWr 18 to 1B	Axis No.6 Status
RWw 1C to 1F	Information	RWr 1C to 1F	Information
RWw 20 to 23	Axis No.7 Control	RWr 20 to 23	Axis No.7 Status
RWw 24 to 27	Information	RWr 24 to 27	Information
RWw 28 to 2B	Cannot be used.	RWr 28 to 2B	Cannot be used.
RWw 2C to 2F	Cannot be used.	RWr 2C to 2F	Cannot be used.
RWw 30 to 33	Cannot be used.	RWr 30 to 33	Cannot be used.
RWw 34 to 37	Cannot be used.	RWr 34 to 37	Cannot be used.
RWw 38 to 3B	Cannot be used.	RWr 38 to 3B	Cannot be used.
RWw 3C to 3F	Cannot be used.	RWr 3C to 3F	Cannot be used.

* There is no domain prepared in CC-Link IE Field for the line shaded in

. .

.

[Combination Example 3] When number of Simple Direct Mode/Positioner 1 Mode axes is 2 and number of Direct Indication Mode 6 CC-Link: (Extended Cyclic Setting/Number of Occupied Stations: 8 times/2 stations)

$PLC \rightarrow MCON$		MCON \rightarrow PLC	
Address	Description	Address	Description
RY 000 to 01F	Gateway Control	RX 000 to 01F	Gateway Status
RY 020 to 06F	Demand Command	RX 020 to 06F	Response Command
RY 070 to 07F	Cannot be used.	RX 070 to 07F	Cannot be used.
RY 080 to 17F	Cannot be used.	RX 080 to 17F	Cannot be used.
RWw 00 to 03	Axis No.0 Control Information	RWr 00 to 03	Axis No.0 Status Information
RWw 04 to 07	Axis No.1 Control Information	RWr 04 to 07	Axis No.1 Status Information
RWw 08 to 0B	Axis No.2 Control	RWr 08 to 0B	Axis No.2 Status
RWw 0C to 0F	Information	RWr 0C to 0F	Information
RWw 10 to 13	Axis No.3 Control	RWr 10 to 13	Axis No.3 Status
RWw 14 to 17	Information	RWr 14 to 17	Information
RWw 18 to 1B	Axis No.4 Control	RWr 18 to 1B	Axis No.4 Status
RWw 1C to 1F	Information	RWr 1C to 1F	Information
RWw 20 to 23	Axis No.5 Control	RWr 20 to 23	Axis No.5 Status
RWw 24 to 27	Information	RWr 24 to 27	Information
RWw 28 to 2B	Axis No.6 Control	RWr 28 to 2B	Axis No.6 Status
RWw 2C to 2F	Information	RWr 2C to 2F	Information
RWw 30 to 33	Axis No.7 Control	RWr 30 to 33	Axis No.7 Status
RWw 34 to 37	Information	RWr 34 to 37	Information
RWw 38 to 3B	Cannot be used.	RWr 38 to 3B	Cannot be used.
RWw 3C to 3F	Cannot be used.	RWr 3C to 3F	Cannot be used.

* There is no domain prepared in CC-Link IE Field for the line shaded in _____.



[Combination Example 4] When number of Simple Direct Mode/Positioner 1 Mode axes is 0 and number of Direct Indication Mode 8 CC-Link: (Extended Cyclic Setting/Number of Occupied Stations: 8 times/2 stations)

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
Address	Description	Address	Description
RY 000 to 01F	Gateway Control	RX 000 to 01F	Gateway Status
RY 020 to 06F	Demand Command	RX 020 to 06F	Response Command
RY 070 to 07F	Cannot be used.	RX 070 to 07F	Cannot be used.
RY 080 to 17F	Cannot be used.	RX 080 to 17F	Cannot be used.
RWw 00 to 03	Axis No.0 Control	RWr 00 to 03	Axis No.0 Status
RWw 04 to 07	Information	RWr 04 to 07	Information
RWw 08 to 0B	Axis No.1 Control	RWr 08 to 0B	Axis No.1 Status
RWw 0C to 0F	Information	RWr 0C to 0F	Information
RWw 10 to 13	Axis No.2 Control Information	RWr 10 to 13	Axis No.2 Status
RWw 14 to 17		RWr 14 to 17	Information
RWw 18 to 1B	Axis No.3 Control	RWr 18 to 1B	Axis No.3 Status
RWw 1C to 1F	Information	RWr 1C to 1F	Information
RWw 20 to 23	Axis No.4 Control	RWr 20 to 23	Axis No.4 Status
RWw 24 to 27	Information	RWr 24 to 27	Information
RWw 28 to 2B	Axis No.5 Control	RWr 28 to 2B	Axis No.5 Status
RWw 2C to 2F	Information	RWr 2C to 2F	Information
RWw 30 to 33	Axis No.6 Control	RWr 30 to 33	Axis No.6 Status
RWw 34 to 37	Information	RWr 34 to 37	Information
RWw 38 to 3B	Axis No.7 Control	RWr 38 to 3B	Axis No.7 Status
RWw 3C to 3F	Information	RWr 3C to 3F	Information

* There is no domain prepared in CC-Link IE Field for the line shaded in

.

3) PROFIBUS-DP, EtherNet/IP, EtherCAT

MCON =

[Combination Example 1] When number of Simple Direct Mode/Positioner 1 Mode axes is 8 and number of Direct Indication Mode 0

(n is the top node address for each PLC input and output between MCON and PLC)

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
Node Address (Byte Address)	Description	Node Address (Byte Address)	Description
n to n+3	Gateway Control	n to n+3	Gateway Status
n+4 to n+15	Demand Command	n+4 to n+15	Response Command
n+16 to n+23	Axis No.0 Control Information	n+16 to n+23	Axis No.0 Status Information
n+24 to n+31	Axis No.1 Control Information	n+24 to n+31	Axis No.1 Status Information
n+32 to n+39	Axis No.2 Control Information	n+32 to n+39	Axis No.2 Status Information
n+40 to n+47	Axis No.3 Control Information	n+40 to n+47	Axis No.3 Status Information
n+48 to n+55	Axis No.4 Control Information	n+48 to n+55	Axis No.4 Status Information
n+56 to n+63	Axis No.5 Control Information	n+56 to n+63	Axis No.5 Status Information
n+64 to n+71	Axis No.6 Control Information	n+64 to n+71	Axis No.6 Status Information
n+72 to n+79	Axis No.7 Control Information	n+72 to n+79	Axis No.7 Status Information

[Combination Example 2] When number of Simple Direct Mode/Positioner 1 Mode axes is 6 and number of Direct Indication Mode 2

(n is the top node address for each PLC input and output between MCON and PLC)

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
Node Address (Byte Address)	Description	Node Address (Byte Address)	Description
n to n+3	Gateway Control	n to n+3	Gateway Status
n+4 to n+15	Demand Command	n+4 to n+15	Response Command
n+16 to n+23	Axis No.0 Control Information	n+16 to n+23	Axis No.0 Status Information
n+24 to n+31	Axis No.1 Control Information	n+24 to n+31	Axis No.1 Status Information
n+32 to n+39	Axis No.2 Control Information	n+32 to n+39	Axis No.2 Status Information
n+40 to n+47	Axis No.3 Control Information	n+40 to n+47	Axis No.3 Status Information
n+48 to n+55	Axis No.4 Control Information	n+48 to n+55	Axis No.4 Status Information
n+56 to n+63	Axis No.5 Control Information	n+56 to n+63	Axis No.5 Status Information
n+64 to n+71	Axis No.6 Control	n+64 to n+71	Axis No.6 Status
n+72 to n+79	Information	n+72 to n+79	Information
n+80 to n+87	Axis No.7 Control	n+80 to n+87	Axis No.7 Status
n+88 to n+95	Information	n+88 to n+95	Information



Γ

[Combination Example 3] When number of Simple Direct Mode/Positioner 1 Mode axes is 2 and number of Direct Indication Mode 6 (n is the top node address for each PLC input and output

	between MCON and PLC)			
ſ	$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
	Node Address (Byte Address)	Description	Node Address (Byte Address)	Description
ſ	n to n+3	Gateway Control	n to n+3	Gateway Status
ſ	n+4 to n+15	Demand Command	n+4 to n+15	Response Command
Ī	n+16 to n+23	Axis No.0 Control Information	n+16 to n+23	Axis No.0 Status Information
	n+24 to n+31	Axis No.1 Control Information	n+24 to n+31	Axis No.1 Status Information
	n+32 to n+39	Axis No.2 Control	n+32 to n+39	Axis No.2 Status
	n+40 to n+47	Information	n+40 to n+47	Information
	n+48 to n+55	Axis No.3 Control	n+48 to n+55	Axis No.3 Status
	n+56 to n+63	Information	n+56 to n+63	Information
	n+64 to n+71	Axis No.4 Control	n+64 to n+71	Axis No.4 Status
	n+72 to n+79	Information	n+72 to n+79	Information
ſ	n+80 to n+87	Axis No.5 Control	n+80 to n+87	Axis No.5 Status
ſ	n+88 to n+95	Information	n+88 to n+95	Information
ſ	n+96 to n+103	Axis No.6 Control	n+96 to n+103	Axis No.6 Status
	n+104 to n+111	Information	n+104 to n+111	Information
	n+112 to n+119	Axis No.7 Control	n+112 to n+119	Axis No.7 Status
ſ	n+120 to n+127	Information	n+120 to n+127	Information

[Combination Example 4] When number of Simple Direct Mode/Positioner 1 Mode axes is 0 and number of Direct Indication Mode 8

(n is the top node address for each PLC input and output				
between MCON	and PLC)			
CON	MCON	\rightarrow PLC		

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
Node Address (Byte Address)	Description	Node Address (Byte Address)	Description
n to n+3	Gateway Control	n to n+3	Gateway Status
n+4 to n+15	Demand Command	n+4 to n+15	Response Command
n+16 to n+23	Axis No.0 Control	n+16 to n+23	Axis No.0 Status
n+24 to n+31	Information	n+24 to n+31	Information
n+32 to n+39	Axis No.1 Control	n+32 to n+39	Axis No.1 Status
n+40 to n+47	Information	n+40 to n+47	Information
n+48 to n+55	Axis No.2 Control	n+48 to n+55	Axis No.2 Status
n+56 to n+63	Information	n+56 to n+63	Information
n+64 to n+71	Axis No.3 Control	n+64 to n+71	Axis No.3 Status
n+72 to n+79	Information	n+72 to n+79	Information
n+80 to n+87	Axis No.4 Control	n+80 to n+87	Axis No.4 Status
n+88 to n+95	Information	n+88 to n+95	Information
n+96 to n+103	Axis No.5 Control	n+96 to n+103	Axis No.5 Status
n+104 to n+111	Information	n+104 to n+111	Information
n+112 to n+119	Axis No.6 Control	n+112 to n+119	Axis No.6 Status
n+120 to n+127	Information	n+120 to n+127	Information
n+128 to n+135	Axis No.7 Control	n+128 to n+135	Axis No.7 Status
n+136 to n+143	Information	n+136 to n+143	Information

4) PROFINET IO

[Combination Example 1] When number of Simple Direct Mode/Positioner 1 Mode axes is 8 and number of Direct Indication Mode 0

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
4-word Number of Module	Description	4-word Number of Module	Description
1	Gateway Control, Demand Command, Data 0	1	Gateway Status, Response Command, Data 0
2	Data 1 to 3	2	Data 1 to 3
3	Axis No.0 Control Information	3	Axis No.0 Status Information
4	Axis No.1 Control Information	4	Axis No.1 Status Information
5	Axis No.2 Control Information	5	Axis No.2 Status Information
6	Axis No.3 Control Information	6	Axis No.3 Status Information
7	Axis No.4 Control Information	7	Axis No.4 Status Information
8	Axis No.5 Control Information	8	Axis No.5 Status Information
9	Axis No.6 Control Information	9	Axis No.6 Status Information
10	Axis No.7 Control Information	10	Axis No.7 Status Information

[Combination Example 2] When number of Simple Direct Mode/Positioner 1 Mode axes is 6 and number of Direct Indication Mode 2

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
4-word Number of Module	Description	4-word Number of Module	Description
1	Gateway Control, Demand Command, Data 0	1	Gateway Status, Response Command, Data 0
2	Data 1 to 3	2	Data 1 to 3
3	Axis No.0 Control Information	3	Axis No.0 Status Information
4	Axis No.1 Control Information	4	Axis No.1 Status Information
5	Axis No.2 Control Information	5	Axis No.2 Status Information
6	Axis No.3 Control Information	6	Axis No.3 Status Information
7	Axis No.4 Control Information	7	Axis No.4 Status Information
8	Axis No.5 Control Information	8	Axis No.5 Status Information
9	Axis No.6 Control	9	Axis No.6 Status
10	Information	10	Information
11	Axis No.7 Control	11	Axis No.7 Status
12	Information	12	Information

[Combination Example 3] When number of Simple Direct Mode/Positioner 1 Mode axes is 2 and number of Direct Indication Mode 6

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
4-word Number of Module	Description	4-word Number of Module	Description
1	Gateway Control, Demand Command, Data 0	1	Gateway Status, Response Command, Data 0
2	Data 1 to 3	2	Data 1 to 3
3	Axis No.0 Control Information	3	Axis No.0 Status Information
4	Axis No.1 Control Information	4	Axis No.1 Status Information
5	Axis No.2 Control	5	Axis No.2 Status
6	Information	6	Information
7	Axis No.3 Control	7	Axis No.3 Status
8	Information	8	Information
9	Axis No.4 Control	9	Axis No.4 Status
10	Information	10	Information
11	Axis No.5 Control	11	Axis No.5 Status
12	Information	12	Information
13	Axis No.6 Control	13	Axis No.6 Status
14	Information	14	Information
15	Axis No.7 Control	15	Axis No.7 Status
16	Information	16	Information

[Combination Example 4] When number of Simple Direct Mode/Positioner 1 Mode axes is 0 and number of Direct Indication Mode 8

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
4-word Number of Module	Description	4-word Number of Module	Description
1	Gateway Control, Demand Command, Data 0	1	Gateway Status, Response Command, Data 0
2	Data 1 to 3	2	Data 1 to 3
3	Axis No.0 Control	3	Axis No.0 Status Information
4	Information	4	
5	Axis No.1 Control	5	Axis No.1 Status Information
6	Information	6	
7	Axis No.2 Control Information	7	Axis No.2 Status Information
8		8	
9	Axis No.3 Control Information	9	Axis No.3 Status Information
10		10	
11	Axis No.4 Control Information	11	Axis No.4 Status Information
12		12	
13	Axis No.5 Control Information	13	Axis No.5 Status Information
14		14	
15	Axis No.6 Control Information	15	Axis No.6 Status Information
16		16	
17	Axis No.7 Control	17	Axis No.7 Status
18	Information	18	Information
[2] Address Map for Positioner 2 and Positioner 5 Mode

Shown below is the address map for each field network when eight axes of MCON are operated in Positioner 2 or Positioner 5 Mode.

<u>n is the top channel number for each PLC input and output between MCON and P</u>			een MCON and PLC)
$PLC \rightarrow MCON$		MCON	\rightarrow PLC
CH No.	Description	CH No.	Description
n to n+1	Gateway Control	n to n+1	Gateway Status
n+2 to n+7	Demand Command	n+2 to n+7	Response Command
n+8 to n+9	Axis No.0 Control Information	n+8 to n+9	Axis No.0 Status Information
n+10 to n+11	Axis No.1 Control Information	n+10 to n+11	Axis No.1 Status Information
n+12 to n+13	Axis No.2 Control Information	n+12 to n+13	Axis No.2 Status Information
n+14 to n+15	Axis No.3 Control Information	n+14 to n+15	Axis No.3 Status Information
n+16 to n+17	Axis No.4 Control Information	n+16 to n+17	Axis No.4 Status Information
n+18 to n+19	Axis No.5 Control Information	n+18 to n+19	Axis No.5 Status Information
n+20 to n+21	Axis No.6 Control Information	n+20 to n+21	Axis No.6 Status Information
n+22 to n+23	Axis No.7 Control Information	n+22 to n+23	Axis No.7 Status Information

1) DeviceNet (CompoNet is not applicable for this mode)

2) CC-Link and CC-Link IE Field

CC-Link: (Extended Cyclic Setting/Number of Occupied Stations: 1 times/4 stations)

$PLC \rightarrow MCON$		$MCON \to PLC$	
Address	Description	Address	Description
RY 00 to 1F	Gateway Control	RX 00 to 1F	Gateway Status
RY 20 to 6F	Demand Command	RX 20 to 6F	Response Command
RY 70 to 7F	Cannot be used.	RX 70 to 7F	Cannot be used.
RWw 00 to 01	Axis No.0 Control Information	RWr 00 to 01	Axis No.0 Status Information
RWw 02 to 03	Axis No.1 Control Information	RWr 02 to 03	Axis No.1 Status Information
RWw 04 to 05	Axis No.2 Control Information	RWr 04 to 05	Axis No.2 Status Information
RWw 06 to 07	Axis No.3 Control Information	RWr 06 to 07	Axis No.3 Status Information
RWw 08 to 09	Axis No.4 Control Information	RWr 08 to 09	Axis No.4 Status Information
RWw 0A to 0B	Axis No.5 Control Information	RWr 0A to 0B	Axis No.5 Status Information
RWw 0C to 0D	Axis No.6 Control Information	RWr 0C to 0D	Axis No.6 Status Information
RWw 0E to 0F	Axis No.7 Control Information	RWr 0E to 0F	Axis No.7 Status Information

3) PROFIBUS-DP, EtherNet/IP, EtherCAT

(n is the top node address for each PLC input and output between MCON and PLC)

PLC →	$PLC \rightarrow MCON$ M		$CON \rightarrow PLC$	
Node Address (Byte Address)	Description	Node Address (Byte Address)	Description	
n to n+3	Gateway Control	n to n+3	Gateway Status	
n+4 to n+15	Demand Command	n+4 to n+15	Response Command	
n+16 to n+19	Axis No.0 Control Information	n+16 to n+19	Axis No.0 Status Information	
n+20 to n+23	Axis No.1 Control Information	n+20 to n+23	Axis No.1 Status Information	
n+24 to n+27	Axis No.2 Control Information	n+24 to n+27	Axis No.2 Status Information	
n+28 to n+31	Axis No.3 Control Information	n+28 to n+31	Axis No.3 Status Information	
n+32 to n+35	Axis No.4 Control Information	n+32 to n+35	Axis No.4 Status Information	
n+36 to n+39	Axis No.5 Control Information	n+36 to n+39	Axis No.5 Status Information	
n+40 to n+43	Axis No.6 Control Information	n+40 to n+43	Axis No.6 Status Information	
n+44 to n+47	Axis No.7 Control Information	n+44 to n+47	Axis No.7 Status Information	

4) PROFINET IO

$PLC \rightarrow$	$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
4-word Number of Module	Description	4-word Number of Module	Description	
1	Gateway Control, Demand Command, Data 0	1	Gateway Status, Response Command, Data 0	
2	Data 1 to 3	2	Data 1 to 3	
3	Axis No.0 Control Information	3	Axis No.0 Status Information	
5	Axis No.1 Control Information		Axis No.1 Status Information	
4	Axis No.2 Control Information	4	Axis No.2 Status Information	
4	Axis No.3 Control Information	4	Axis No.3 Status Information	
5	Axis No.4 Control Information	_	Axis No.4 Status Information	
Axis No.5 Control Information	5	Axis No.5 Status Information		
6	Axis No.6 Control Information	6	Axis No.6 Status Information	
0	Axis No.7 Control Information	ntrol 6	Axis No.7 Status Information	

MCON =

[3] Address Map for Positioner 3 Mode

Shown below is the address map for each field network when eight axes of MCON are operated in Positioner 3 Mode.

1)	DeviceNet.	Com	poNet
• /		00	p 01 1 0 1

(n is the top channel number for each PLC input and output between MCON and PLC)

$PLC \rightarrow MCON$		$MCON \to PLC$	
CH No.	Description	CH No.	Description
n to n+1	Gateway Control	n to n+1	Gateway Status
n+2 to n+7	Demand Command	n+2 to n+7	Response Command
n+8	Axis No.0 Control Information	n+8	Axis No.0 Status Information
n+9	Axis No.1 Control Information	n+9	Axis No.1 Status Information
n+10	Axis No.2 Control Information	n+10	Axis No.2 Status Information
n+11	Axis No.3 Control Information	n+11	Axis No.3 Status Information
n+12	Axis No.4 Control Information	n+12	Axis No.4 Status Information
n+13	Axis No.5 Control Information	n+13	Axis No.5 Status Information
n+14	Axis No.6 Control Information	n+14	Axis No.6 Status Information
n+15	Axis No.7 Control Information	n+15	Axis No.7 Status Information

2) CC-Link and CC-Link IE Field

$PLC \to MCON$		$MCON \rightarrow PLC$	
Address	Description	Address	Description
RY 00 to 1F	Gateway Control	RX 00 to 1F	Gateway Status
RY 20 to 6F	Demand Command	RX 20 to 6F	Response Command
RY 70 to 7F	Cannot be used.	RX 70 to 7F	Cannot be used.
RWw 0	Axis No.0 Control Information	RWr 00	Axis No.0 Status Information
RWw 01	Axis No.1 Control Information	RWr 01	Axis No.1 Status Information
RWw 02	Axis No.2 Control Information	RWr 02	Axis No.2 Status Information
RWw 03	Axis No.3 Control Information	RW 03	Axis No.3 Status Information
RWw 04	Axis No.4 Control Information	RWr 04	Axis No.4 Status Information
RWw 05	Axis No.5 Control Information	RWr 05	Axis No.5 Status Information
RWw 06	Axis No.6 Control Information	RWr 06	Axis No.6 Status Information
RWw 07	Axis No.7 Control Information	RW 07	Axis No.7 Status Information
RWw 08 to 0F	Cannot be used.	RWr 08 to 0F	Cannot be used.

3) PROFIBUS-DP, EtherNet/IP, EtherCAT

(n is the top node address for each PLC input and output between MCON and PLC)

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
Node Address (Byte Address)	Description	Node Address (Byte Address)	Description
n to n+3	Gateway Control	n to n+3	Gateway Status
n+4 to n+15	Demand Command	n+4 to n+15	Response Command
n+16, n+17	Axis No.0 Control Information	n+16, n+17	Axis No.0 Status Information
n+18, n+19	Axis No.1 Control Information	n+18, n+19	Axis No.1 Status Information
n+20, n+21	Axis No.2 Control Information	n+20, n+21	Axis No.2 Status Information
n+22, n+23	Axis No.3 Control Information	n+22, n+23	Axis No.3 Status Information
n+24, n+25	Axis No.4 Control Information	n+24, n+25	Axis No.4 Status Information
n+26, n+27	Axis No.5 Control Information	n+26, n+27	Axis No.5 Status Information
n+28, n+29	Axis No.6 Control Information	n+28, n+29	Axis No.6 Status Information
n+30, n+31	Axis No.7 Control Information	n+30, n+31	Axis No.7 Status Information

4) PROFINET IO

$PLC \rightarrow MCON$		$MCON \rightarrow PLC$	
4-word Number of Module	Description	4-word Number of Module	Description
1	Gateway Control, Demand Command, Data 0	1	Gateway Status, Response Command, Data 0
2	Data 1 to 3	2	Data 1 to 3
	Axis No.0 Control Information		Axis No.0 Status Information
3	Axis No.1 Control Information	3	Axis No.1 Status Information
5	Axis No.2 Control Information		Axis No.2 Status Information
	Axis No.3 Control Information		Axis No.3 Status Information
	Axis No.4 Control Information	4	Axis No.4 Status Information
4	Axis No.5 Control Information		Axis No.5 Status Information
	Axis No.6 Control Information		Axis No.6 Status Information
	Axis No.7 Control Information		Axis No.7 Status Information

[4] Address Map for Remote I/O Mode

Shown below is the address map for each field network when eight axes of MCON are operated in Remote I/O Mode.

1)	DeviceNet.	Com	poNet
• /		00	p 01 1 0 1

(n is the top channel number for each PLC input and output between MCON and PLC)

$PLC \rightarrow MCON$		$MCON \to PLC$	
CH No.	Description	CH No.	Description
n to n+1	Gateway Control	n to n+1	Gateway Status
n+2 to n+7	Demand Command	n+2 to n+7	Response Command
n+8	Axis No.0 Control Information	n+8	Axis No.0 Status Information
n+9	Axis No.1 Control Information	n+9	Axis No.1 Status Information
n+10	Axis No.2 Control Information	n+10	Axis No.2 Status Information
n+11	Axis No.3 Control Information	n+11	Axis No.3 Status Information
n+12	Axis No.4 Control Information	n+12	Axis No.4 Status Information
n+13	Axis No.5 Control Information	n+13	Axis No.5 Status Information
n+14	Axis No.6 Control Information	n+14	Axis No.6 Status Information
n+15	Axis No.7 Control Information	n+15	Axis No.7 Status Information

2) CC-Link and CC-Link IE Field

	yene eetang/rtamber							
$PLC \rightarrow$	MCON	MCON	\rightarrow PLC					
Address	Description	Address	Description					
RY 00 to 1F	Gateway Control	RX 00 to 1F	Gateway Status					
RY 20 to 6F	Demand Command	RX 20 to 6F	Response Command					
RY 70 to 7F	Cannot be used.	RX 70 to 7F	Cannot be used.					
RWw 00	Axis No.0 Control Information	RWr 00	Axis No.0 Status Information					
RWw 01	Axis No.1 Control Information	RWr 01	Axis No.1 Status Information					
RWw 02	Axis No.2 Control Information	RWr 02	Axis No.2 Status Information					
RWw 03	Axis No.3 Control Information	RWr 03	Axis No.3 Status Information					
RWw 04	Axis No.4 Control Information	RWr 04	Axis No.4 Status Information					
RWw 05	Axis No.5 Control Information	RWr 05	Axis No.5 Status Information					
RWw 06	Axis No.6 Control Information	RWr 06	Axis No.6 Status Information					
RWw 07	Axis No.7 Control Information	RWr 07	Axis No.7 Status Information					
RWw 08 to 0F	Cannot be used.	RWr 08 to 0F	Cannot be used.					

3) PROFIBUS-DP, EtherNet/IP, EtherCAT

(n is the top node address for each PLC input and output between MCON and PLC)

PLC →	MCON	MCON	\rightarrow PLC		
Node Address (Byte Address)	Description	Node Address (Byte Address)	Description		
n to n+3	Gateway Control	n to n+3	Gateway Status		
n+4 to n+15	Demand Command	n+4 to n+15	Response Command		
n+16, n+17	Axis No.0 Control Information	n+16, n+17	Axis No.0 Status Information		
n+18, n+19	Axis No.1 Control Information	n+18, n+19	Axis No.1 Status Information		
n+20, n+21	Axis No.2 Control Information	n+20, n+21	Axis No.2 Status Information		
n+22, n+23	Axis No.3 Control Information	n+22, n+23	Axis No.3 Status Information		
n+24, n+25	Axis No.4 Control Information	n+24, n+25	Axis No.4 Status Information		
n+26, n+27	Axis No.5 Control Information	n+26, n+27	Axis No.5 Status Information		
n+28, n+29	Axis No.6 Control Information	n+28, n+29	Axis No.6 Status Information		
n+30, n+31	Axis No.7 Control Information	n+30, n+31	Axis No.7 Status Information		

4) PROFINET IO

$PLC \rightarrow$	MCON	MCON	\rightarrow PLC
4-word Number of Module	Description	4-word Number of Module	Description
1	Gateway Control, Demand Command, Data 0	1	Gateway Status, Response Command, Data 0
2	Data 1 to 3	2	Data 1 to 3
	Axis No.0 Control Information		Axis No.0 Status Information
2	Axis No.1 Control Information	2	Axis No.1 Status Information
5	Axis No.2 Control Information	5	Axis No.2 Status Information
	Axis No.3 Control Information		Axis No.3 Status Information
	Axis No.4 Control Information		Axis No.4 Status Information
4	Axis No.5 Control Information	4	Axis No.5 Status Information
4	Axis No.6 Control Information	4	Axis No.6 Status Information
	Axis No.7 Control Information		Axis No.7 Status Information

3.4.3 Gateway Control Signals (Common for all operation modes) When operating the system with field network, the axes are controlled via Gateway of MCON. The top 2 words of input and output in each operation mode are the signals Gateway control and status monitoring.

(n is the top word address for each PLC input and output between MCON and PLC)

$PLC \to MCON$	I (PLC Output)	$MCON \to PL$	C (PLC Input)
Control Signal 0	n	Status Signal 0	n
Control Signal 1	n+1	Status Signal 1	n+1

(1) PLC I/O Signal

PLC Output

						1 w	ord = ´	16 bit								
Address n	┫															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Control signal 0																
	NO		Щ													
	ž		ř													'
	Ţ		1_	— Sią (E	gnal te RR-T	o cano /ERR-	cel th -C) du	e rem urina a	ained an op	cond eratio	lition (of cor	nmun	icatio	n erro	or
	 			Signal	to ac	tivate	oper	ation	contro	ol by a	comm	unica	tion			
				nginai	10 40	avato	open	auon	contro	Jiby	5011111	unice				
Adduces with																

Address n+1	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Control signal 1																
	Ι	I	T	I	T	I	I	Ι	I	T	I	I	I	I	I	I

PLC Input

						1 w	ord = 1	16 bit								
Address n	↓ b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Status signal 0	RUN	LERC	ERRT	MOD	ALMH	ALML	I	SEMG	ALMC 128	ALMC64	ALMC32	ALMC16	ALMC8	ALMC4	ALMC2	ALMC1
	1															

Each type of control status monitoring output signals

Addross n+1																
Address II' I	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Status signal 1	1NT7	1NT6	INT5	INT4	INT3	INT2	INT1	INTO	NK7	NK6	NK5	NK4	NK3	NK2	NK1	NKO
	2	2	2	2	2	2	2	2								
	\subseteq															

Output of alarm-issued axis number Output of communication available axis number



(2) List for Input and Output Signal

				(ON = Applicable bit is "1", OFF = Applicable b	oit is "0")				
S	ignal Type	Bit	Symbol	Description	Details				
		b15	MON	Operation control with communication is available while it is ON	-				
		b14	-	Cannot be used.	-				
		b13	b13 RTE Retained condition of ERR-T or ERR-C during operation is cancelled if it is ON It is the cancel signal when ERR-T or ERR-C occurrence is set to latch in Gateway Paramet Setting Tool						
		b12							
		b11							
	Status	b10							
	signal 0	b9							
		b8							
		b7							
		b6	_	Cannot be used.	_				
	_	b5							
÷		b4							
tpu		b3							
NO		b2	-						
LC		b1							
٩		b0							
		b15							
		b14							
		b13							
		b12							
		b11							
		b10							
		b9							
	Status	b8	_	Cannot be used.	_				
	signal 1	b7							
		b6							
		05 b4							
		b3							
		b3 b2							
		b1							
		b0							

					/
S	ignal Type	Bit	Symbol	Description	Details
		b15	RUN	This signal turns ON when Gateway is in normal operation.	_
		b14	LERC	This signal turns ON if the ERR-T or ERR-C occurred during an operation is retained and turns OFF if cancel signal RTE is turn ON. It is effective when ERR-T or ERR-C occurrence is set to latch in Gateway Parameter Setting Tool.	_
		b13	ERRT	This signal turns ON when a communication error is detected between the Gateway and each axis.	_
		b12	MOD	This signal turns ON if the operation mode switch on the front of the unit is selected to be on MANU side, and turns OFF if on AUTO side.	_
		b11	ALMH	This signal turns ON when an error caused by the Gateway that requires a reboot is occurred. (A wrong setting in the parameters can be considered. Check the parameters settings.)	-
	Control signal 0	b10	ALML	This signal turns ON when a light error caused by the Gateway is occurred. (It is considered that there shall be a loss of the calendar data. Check the parameters settings.)	_
		b9	-	Cannot be used.	_
out	b8	b8	SEMG	This signal turns ON when EMGIN input of the system I/O connector is OFF (emergency stop). When this bit is turned ON, all the connected axes get in the emergency stop.	-
ľ		b7		It is an output of an alarm code caused by the	
LC LC		b6		Gateway.	
Δ.		b5		[Refer to Gateway alarm codes in Chapter 9	
		b4		I roubleshooting for details.]	
		b3	ALMC1 to 128		-
		b2	-		
		b1			
		b0			
		b15	MNT7	The bit of an axis number that a light error alarm is	
		b14	MNT6	generated turns ON.	
		b13	MNT5	Axis No.0 = MNT0 to Axis No.7 = MNT7	
		b12	MNT4		
		b11	MNT3	[Refer to 8.2 [64] Light Malfunction Alarm Output	-
		b10	MNT2		
		b9	MNT1		
	Control	b8	MNT0		
	signal 1	b7	LNK7	The bit of the axis number identified as effective	
		b6	LNK6	by the Gateway turns ON. Axis No. $7 = 1 \text{ M/}7$	
		b5	LNK5	AXIS $NO.U = LINKU IO AXIS NO.7 = LINK7$	
		b4	LNK4		_
		b3	LNK3		
		b2	LNK2		
		b1	LNK1		

(ON = Applicable bit is "1", OFF = Applicable bit is "0")

b0

LNK0

3.4.4 Control Signals for Simple Direct Mode

Caution: This mode is not applicable for CompoNet.

This is a mode to operate with inputting the target position for positioning directly. Except for the target position, the operation follows the position data set in the indicated position number.

The settable No. of position data items is max 256 points. The main functions of ROBO Cylinder capable to control in this mode are as described in the following table.

ROBO cylinder function	O: Direct control ∆: Indirect control ×: Disabled	Remarks
Home-return operation	0	
Positioning operation	0	For those other than the target position, it is necessary to set the position data.
Speed and acceleration/ deceleration setting	Δ	
Separate settings for acceleration and deceleration	Δ	These items must be set in the position
Pitch feed (incremental)	Δ	data table.
Pressing operation	Δ	
Speed change during movement	Δ	
Pause	0	
Zone signal output	Δ	These items must be set in the parameters.
Position zone signal	Δ	These items must be set in the position data table.
Vibration control	Δ	This feature is limited only to the servo motor type actuators.
PIO pattern selection	×	

(1) PLC Address Composition

(m is PLC input and output top word address for each axis number)

$PLC \rightarrow MCON$	I (PLC Output)	$MCON \to PLC \text{ (PLC Input)}$						
Target Position	m to m+1	Current Position	m to m+1					
Specified Position No.	m+2	Completed Position No. (Simple Alarm Code)	m+2					
Control Signal	m+3	Status Signal	m+3					

[Refer to Section 3.4.2 for the address maps for each field network.]

MCON

(2) Input and Output Signal Assignment for each Axis

- The I/O signals for each axis consists of 4-word for each I/O bit register.
- The control signals and status signals are ON/OFF signals in units of bit.
- For the target position and current position, 2-word (32-bit) binary data is available and values from -999999 to +999999 (unit: 0.01mm) can be used. Negative numbers are to be dealt with two's complement.

Caution:

• Set the position data in <u>the range of the soft stroke (0 to effective stroke length)</u> of the actuator.

• For the indicated position number and complete position number, 1-word (16-bit) binary data is available and values from 0 to 255 can be used.

A Caution:

<u>Set the operational condition in advance</u> with using a teaching tool such as PC software in the position number to be used. Selecting a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".

PLC Output (m is PLC output top word address for each axis number)

Addross m																
Address III	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Target Position (Lower word)																
Address m+1	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Target Position (Upper word)																
(Note) If the ta	arget	posit	b13	b12	gativ	<i>e vai</i>	ue, it	t is in	dicat	ed by	/ а tи	/0'S C	b3	leme	nt.	b0
Specified Position No.	1	1	1	1	1	1	1	1	PC128	PC64	PC32	PC16	PC8	PC4	PC2	PC1
Address m+3	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Control Signal	BKRL	I	I	I	I	I	I	+90ſ	-90C-	JVEL	JISL	SON	RES	STP	HOME	CSTR

1 word = 16 bit

PLC Input (m is PLC input top word address for each axis number)

A . I . I	1					1 w	ord =	16 bit								
Address m	↓ b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Position (Lower word)																
Address m+1	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Position (Upper word)																
(Note) If the te	arget	posit	ion is	a ne	gativ	ve val	ue, it	t is in	dicat	ed by	∕ a tu	/0's c	ompl	leme	nt.	
Completed Position No.	b15 ।	b14	b13 I	b12	b11 I	b10 I	b9 ।	b8 ।	PM128	PM64 99	PM32	91MG	b3 BMA	b2 FM4	b1 ZMA	PM1 09
Address m+3	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Status Signal	EMGS	скру	ZONE2	ZONE1	PZONE	I	I	MEND	ALML	I	PSFL	SV	ALM	MOVE	HEND	PEND

(3) I/O signal assignment

S	ignal Type	Bit	Symbol	Description	Details			
	Target Position	32 bits	_	 32-bit signed integer indicating the current position Unit: 0.01mm Available range for Setting: -999999 to 999999 Set the target position with the value from the home position. (Example) If +25.40mm, input 000009EC_H (2540 in decimal system). (Note) Input the negative value using a compliment of 2. 	3.7.2			
	Specified Position No.	16 bits	PC1 to PC128	16-bit integer Available range for Setting: 0 to 255 To operate, it is necessary to have the position data that the operation conditions are already set in advance with a teaching tool such as the PC software. In this register, indicate the position number the data is input with a binary number. Indicating a value out of the range or operating with a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".	3.7.2			
		b15	BKRL	Brake release ON: Brake release, OFF: Brake activated	3.7.1 [15]			
		b14						
		b13						
	±	b12		Connot be used				
Ħ		b11	_	Cannot be used.	_			
utpı		b10						
õ		b9						
PLC		b8	JOG+	+Jog ON: Movement against home position, OFF: Stop	2 7 4 (40)			
		b7	JOG-	-Jog ON: Movement toward home position, OFF: Stop				
	Control Signal	b6	JVEL	Jog-speed/inch-distance switching OFF : Use the setting values of Parameter No.26 JOG Speed and No.48 Inching Distance in MCON ON : Use the setting values of Parameter No.47 JOG Speed 2 and No.49 Inching Distance in MCON	3.7.1 [11]			
		b5	JISL	Jog/inching switching ON: Inching, OFF: Jog	3.7.1 [12]			
		b4	SON	Servo ON command ON: Servo ON, OFF: Servo OFF	3.7.1 [5]			
		b3	RES	Reset A reset is performed when this signal turns ON.	3.7.1 [4]			
		b2	STP	Pause ON: Pause, OFF: Pause release	3.7.1 [8]			
		b1	HOME	Home return Home-return command with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [6]			
		b0	CSTR	Positioning start Movement command executed with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [7]			

S	ianal Type	Bit	Svmbol	Description	Details					
-			- ,	32-bit signed integer indicating the current position						
	Current	00 h ite		Unit: 0.01mm	0.7.0					
	Position	32 bits	-	(Example) If +10.23mm, input 000003FFH (1023 in decimal system)	3.7.2					
	1			(Note) Negative numbers are two's implement.	i I					
				16-bit integer						
		, ,		The positioning complete position number is output	i I					
i I	C	, ,		width after moving to the target position.						
i i	Completea Position No.		PM1 to	In the case that the position movement has not been						
i I	(Simple	16 bits	PM128	performed at all, or during the movement, "0" is	3.7.2					
	Alarm Code)			movement.	i I					
	1			The simple alarm code (refer to Chapter 9						
			A Model (All Model And All All All All All All All All All Al							
		b15	EMGS	This signal turns ON during an emergency stop	3.7.1 [2]					
	l t	h1/	CRDV	This signal turns ON when the controller is standing	371[1]					
				by.	3.7.1[1]					
	1	h13	ZONE2	Turns on when the current position is in the setting of Zone Boundary 2 Necessary to establish settings in						
		010		Parameter No. 23 and 24.	2 7 4 [0]					
) Input			Turns on when the current position is in the setting of	3.7.1 [9]					
put		b12	ZONE1	Zone Boundary 1 Necessary to establish settings in	l					
ln				Position zone						
PLC		b11	PZONE	PZONE This signal turns ON when the current position is						
		- 10	 	inside the specified position zone.						
1		b10 hg	- 1	Cannot be used.	-					
1		09		This signal turns ON at either of positioning complete						
1				of after movement, home return complete or pressing	l					
	Status	b8	MEND	complete or pressing failure, and turns OFF at	3.7.1 [19]					
1	Signai			It is OFF when the servo is OFF.	l					
				Light error alarm output						
1		b7	ALML	It turns ON when an overload warning or message	3.7.1 [21]					
1	 	b6	<u>├ _</u>	level error is issued.						
1		b5	PSFL	"ON" for pressing and a miss	3.7.1 [18]					
1			<u> </u>	This signal turns ON when operation standby is	271[5]					
1		D4	30	complete (Servo is ON).	3.7.1[J]					
	 	b3	ALM	This signal is ON while an alarm is generated.	3.7.1 [3]					
	l I	DZ		This signal turns ON at home return complete and is	3.1.1[1]					
		b1	HEND	kept unless the home position is lost due to a fact	3.7.1 [6]					
				such as an alarm.						
	1	<u>۲</u>		This signal turns ON at positioning complete and is	0 7 4 [7]					
		DU	PEND	not turn ON when pressing operation is failed.	3.7.1[7]					

3.4.5 Control Signals for Positioner 1 Mode

Caution: This mode is not applicable for CompoNet.

Operation is performed by indicating a position number from the operation modes of the position data set in the position table.

The settable No. of position data items is max 256 points.

The main functions of ROBO Cylinder capable to control in this mode are as described in the following table.

ROBO cylinder function	O: Direct control ∆: Indirect control ×: Disabled	Remarks
Home-return operation	0	
Positioning operation	Δ	
Speed and acceleration/ deceleration setting	Δ	
Separate settings for acceleration and deceleration	Δ	These items must be set in the position
Pitch feed (incremental)	Δ	
Pressing operation	Δ	
Speed change during movement	Δ	
Pause	0	
Zone signal output	Δ	These items must be set in the parameters.
Position zone signal	Δ	These items must be set in the position data table.
Vibration control	Δ	This feature is limited only to the servo motor type actuators.
PIO pattern selection	×	

(1) PLC Address Composition

(m is PLC input and output top word address for each axis number)

$PLC \to MCON$	l (PLC Output)	$MCON \rightarrow PLC (PLC Input)$						
Cannot be used.	m to m+1	Current Position	m to m+1					
Specified Position No.	m+2	Completed Position No. (Simple Alarm Code)	m+2					
Control Signal	m+3	Status Signal	m+3					

[Refer to Section 3.4.2 for the address maps for each field network.]

MCON

(2) Input and Output Signal Assignment for each Axis

- The I/O signals for each axis consists of 4-word for each I/O bit register.
- The control signals and status signals are ON/OFF signals in units of bit.
- For the current position, 2-word (32-bit) binary data is available and values from -999999 to +9999999 (unit: 0.01mm) can be used. Negative numbers are to be dealt with two's complement.
- For the indicated position number and complete position number, 1-word (16-bit) binary data is available and values from 0 to 255 can be used.

A Caution:

<u>Set the operational condition in advance</u> with using a teaching tool such as PC software in the position number to be used. Selecting a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".

PLC Output (m is PLC output top word address for each axis number)

1 word = 16 bit

Address m	◄															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Cannot be used.																
Address m+1	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Cannot be used.																
Address m+2	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Specified Position No.	I	I	I	I	I	I	I	I	PC128	PC64	PC32	PC16	PC8	PC4	PC2	PC1
Address m+3	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Control Signal	BKRL	I	I	I	I	MODE	PWRT	+90ſ	-90ſ	JVEL	JISL	NOS	RES	STP	HOME	CSTR

PLC Input (m is PLC input top word address for each axis number) 1 word = 16 bit

Address m	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Position (Lower word)																
Address m+1	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Position (Upper word)																
(Note) If the ta	b15	posit	ion is	а пе b12	b11	v e va i	ue, it	b8	dicat	ed by	/ a tw b5	/0's c	b3	leme b2	<i>nt.</i> b1	b0
Completed Position No.	I	I	I	I	I	I	I	I	PM128	PM64	PM32	PM16	PM8	PM4	PM2	PM1
Address m+3	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Status Signal	EMGS	скру	ZONE2	ZONE1	PZONE	MODES	WEND	MEND	ALML	I	PSFL	SV	ALM	MOVE	HEND	PEND

(3) I/O signal assignment

(ON = Applicable bit is "1", OFF = Applicable bit is "0")

S	ignal Type	Bit	Symbol	Description	Details
	Specified Position No.	16 bits	PC1 to PC128	16-bit integer Available range for Setting: 0 to 255 To operate, it is necessary to have the position data that the operation conditions are already set in advance with a teaching tool such as the PC software. In this register, indicate the position number the data is input with a binary number. Indicating a value out of the range or operating with a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".	3.7.2
		b15	BKRL	Brake release ON: Brake release, OFF: Brake activated	3.7.1 [15]
		b14 b13 b12 b11	_	Cannot be used.	-
		b10	MODE	Teaching mode command OFF: Standard mode, ON : Teaching mode	3.7.1 [13]
		b9	PWRT	Position import command ON: Position Data Import	3.7.1 [14]
ıtput	Control Signal	b8	JOG+	+Jog ON: Movement against home position, OFF: Stop	3 7 1 [10]
-C OL		b7	JOG-	-Jog ON: Movement toward home position, OFF: Stop	0.7.1 [10]
PL		b6	JVEL	Jog-speed/inch-distance switching OFF : Use the setting values of Parameter No.26 JOG Speed and No.48 Inching Distance in MCON ON : Use the setting values of Parameter No.47 JOG Speed 2 and No.49 Inching Distance in MCON	3.7.1 [11]
		b5	JISL	Jog/inching switching ON: Inching, OFF: Jog	3.7.1 [12]
		b4	SON	Servo ON command ON: Servo ON, OFF: Servo OFF	3.7.1 [5]
		b3	RES	Reset A reset is performed when this signal turns ON.	3.7.1 [4]
		b2	STP	Pause ON: Pause, OFF: Pause release	3.7.1 [8]
		b1	HOME	Home return Home-return command with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [6]
		b0	CSTR	Positioning start Movement command executed with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [7]

(ON	1 = Ap	oplicable	bit is	"1",	OFF	= Ap	plicable	bit is	"0"))
-----	--------	-----------	--------	------	-----	------	----------	--------	------	---

S	ignal Type	Bit	Symbol	ol Description						
	Current Position	32 bits	_	 32-bit signed integer indicating the current position Unit: 0.01mm (Example) If +10.23mm, input 000003FF_H (1023 in decimal system). (Note) Negative numbers are two's implement. 	3.7.2					
	Completed Position No. (Simple Alarm Code)	16 bits	16 bitsPM1 to PM128PM1 to PM128The positioning complete position number is output in a binary number once getting into the positioning width after moving to the target position. In the case that the position movement has not been performed at all, or during the movement, "0" is output. Read it by turning PEND Signal ON after movement. The simple alarm code (refer to Chapter 9 Troubleshooting) is output while an alarm is issued (ALM of Status Signal is ON).							
	1	b15	EMGS	This signal turns ON during an emergency stop	3.7.1 [2]					
		b14	CRDY	This signal turns ON when the controller is standing by.	3.7.1 [1]					
		b13	ZONE2	Turns on when the current position is in the setting of Zone Boundary 2 Necessary to establish settings in Parameter No. 23 and 24.	371[9]					
put		b12	ZONE1	Turns on when the current position is in the setting of Zone Boundary 1 Necessary to establish settings in Parameter No. 1 and 2.	0.7.1 [0]					
PLC In		b11	PZONE	Position zone This signal turns ON when the current position is inside the specified position zone.	3.7.1 [9]					
		b10	MODES	This signal is ON while the teaching mode is selected.	3.7.1 [13]					
	1	b9	WEND	This signal turns ON when reading is complete.	3.7.1 [14]					
	Status Signal	b8	MEND	This signal turns ON at either of positioning complete of after movement, home return complete or pressing complete or pressing failure, and turns OFF at movement start. It is OFF when the servo is OFF.	3.7.1 [19]					
		b7	ALML	Light error alarm output It turns ON when an overload warning or message level error is issued.	3.7.1 [21]					
	4	b6		Cannot be used.	-					
	4	b5	PSFL	"ON" for pressing and a miss	3.7.1 [18]					
		b4	sv	This signal turns ON when operation standby is complete (Servo is ON).	3.7.1 [5]					
	1	b3	ALM	This signal is ON while an alarm is generated.	3.7.1 [3]					
	4	b2	MOVE	This signal is ON while in movement.	3.7.1 [7]					
		b1	HEND	This signal turns ON at home return complete and is kept unless the home position is lost due to a fact such as an alarm.	3.7.1 [6]					
		b0	b0 PEND kept ON during a stop with the servo ON, but does							

3.4.6 Control Signals for Direct Indication Mode

Caution: This mode is not applicable for CompoNet.

This is an operation mode to indicate directly with values for the target position, positioning width, speed, acceleration/deceleration and pressing current.

Set a value to each input and output data register. Set to the parameters when using the zone signals.

The main functions of ROBO Cylinder capable to control in this mode are as described in the following table.

ROBO cylinder function	O: Direct control ∆: Indirect control ×: Disabled	Remarks						
Home-return operation	0							
Positioning operation	0							
Speed and acceleration/ deceleration setting	0							
Separate settings for acceleration and deceleration	×	Values for acceleration and deceleration should be the same.						
Pitch feed (Incremental)	0							
Pressing operation	0	Selection can be made from the pressing method same as CON type such as PCON and that same as SEP type such as PSEP.						
Speed change during movement	0							
Pause	0							
Zone signal output	Δ	Parameters must be set.						
Position zone signal	×							
Vibration control	×							
PIO pattern selection	×							

(1) PLC Address Composition

(m is PLC input and output top word address for each axis number)

$PLC \rightarrow MCON$	I (PLC Output)	$MCON \to PLC \ (PLC \ Input)$						
Target Position	m to m+1	Current Position	m to m+1					
Positioning Width	m+2 to m+3	Command Current m+2 to m						
Command Speed	m+4	Current Speed	m+4					
Acceleration/ Deceleration	m+5	Cannot be used.	m+5					
Pressing Current Limit	m+6	Alarm Code	m+6					
Control Signal	m+7	Status Signal	m+7					

[Refer to Section 3.4.2 for the address maps for each field network.]

MCON

(2) Input and Output Signal Assignment for each Axis

- The I/O signals for each axis consists of 8-word for each I/O bit register.
- The control signals and status signals are ON/OFF signals in units of bit.
- For the target position and current position, 2-word (32-bit) binary data is available and values from -999999 to +999999 (unit: 0.01mm) can be used. Negative numbers are to be dealt with two's complement.

A Caution:

• Set the position data in <u>the range of the soft stroke (0 to effective stroke length)</u> of the actuator.

- Set the positioning width. The positioning width is expressed using 2-word (32 bits) binary data. The figures from 0 to +999999 (Unit: 0.01mm) can be set in PLC.
- The command speed is expressed using 1-word (16 bits) binary data. The figures from 1 to +65535 (Unit: 1.0mm/s or 0.1mm/s) can be set in PLC. A change of the unit is to be conducted on Gateway Parameter Setting Tool.
- The Acceleration/Deceleration is expressed using 1-word (16 bits) binary data. The figures from 1 to 300 (Unit: 0.01G) can be set in PLC.
- The pressing current limit value is expressed using 1-word (16 bits) binary data. The figures from 0 to 100% (0 to FF_H) can be set in PLC.



A Caution:

Have the setting with values available in the range of for speed, acceleration/deceleration and <u>pressing current</u> of the actuator. (Refer to the catalog or instruction manual of the actuator.) Otherwise, it may cause an abnormal condition of the servo or a malfunction of the actuator such as the alarm codes 0A3 "Position Command Information Data Error", 0C0 "Excess Actual Speed", 0C8 "Overcurrent", 0CA "Overheated" or 0E0 "Overloaded".

- The command current is expressed using 2-word (32 bits) binary data (Unit: 1mA).
- The current speed is expressed using 1-word (16 bits) binary data (Unit: 1.0mm/s or 0.1mm/s).

The unit is the one set in the command speed. A positive number is output when the revolution of the driving motor is in CCW, while a negative number when CW. Negative numbers are output with two's complement.

For Slider and Rod Types of actuators, a negative number is output when a movement is made towards the motor side, while a positive number when against the motor side. For Reversed Motor Type, it is the other way around. For Gripper Type, a positive number is output when fingers are closed. For Rotary Type, a positive number is output when rotating clockwise.

• The alarm code is expressed using 1-word (16 bits) binary data.

PLC Output (m is PLC output top word address for each axis number)

	1 word = 16 bit															
Address m	▲ b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Target Position (Lower word)																
Address m+1	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Target Position (Upper word)																
(Note) If the target position is a negative value, it is input by a two's complement.																
Address m+2	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Positioning Width (Lower word)	32,768	16,384	8,192	4,096	2,048	1,024	512	256	128	64	32	16	8	4	2	-
Address m+3	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Positioning Width (Upper word)	I	I	I	I	I	I	I	I	I	I	I	I	524,288	262,144	131,072	65,536
Address m+4	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Command Speed	32,768	16,384	8,192	4,096	2,048	1,024	512	256	128	64	32	16	8	4	2	1
Address m+5	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Acceleration/ Deceleration	1	1	1	1	1	1	I	256	128	64	32	16	œ	4	5	-
Address m+6	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Pressing Current Limit Value								256	128	64	32	16	œ	4	2	~
Address m+7	<u>b</u> 15	<u>b1</u> 4	<u>b</u> 13	b12	<u>b</u> 11	<u>b</u> 10	<u>b</u> 9	<u>b</u> 8	b7	<u>b</u> 6	b5	<u>b</u> 4	<u>b</u> 3	b2	<u>b</u> 1	<u>b</u> 0
Control Signal	BKRL	INC	DIR	PUSH	I	I	I	+90ſ	-90C-	JVEL	JISL	NOS	RES	STP	HOME	CSTR

. .

MCON

PLC Input (m is PLC input top word address for each axis number)

						1 w	ord = [·]	16 bit		-						
Address m	▲ b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Position (Lower word)																
Address m+1	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Position (Upper word)																
(Note) If the target position is a negative value, it is output by a two's complement.																
Address m+2	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Command Current (Lower word)	32,768	16,384	8,192	4,096	2,048	1,024	512	256	128	64	32	16	8	4	2	Ł
Address m+3	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Command Current (Upper word)	I	I	I	I	I	I	I	I	I	I	I	I	524,288	262,144	131,072	65,536
Address m+4	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Speed																
(Note) If the n	egati	ve va	lue, i	it is ir	ndica	ted b	y a tv	vo's (comp	leme	ent.			l		<u> </u>
Address m+5	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Cannot be used.																
Address m+6	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Alarm Code																
Address m+7	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Status Signal	EMGS	скру	ZONE2	ZONE1	I	I	I	MEND	ALML	I	PSFL	SV	ALM	MOVE	HEND	PEND

(3) I/O signal assignment

Si	gnal Type	Bit	Symbol	Description	Details
	Target Position	32 bits	_	 32-bit signed integer indicating the current position Unit: 0.01mm Available range for Setting: -999999 to 999999 Set the target position with the value from the home position. (Example) If +25.40mm, input 000009EC_H (2540 in decimal system). (Note) Input the negative value using a compliment of 2. 	3.7.3
	Positioning Width	32 bits	_	 32-bit integer Unit: 0.01mm Available range for Setting: 0 to 9999999 (Example) If 25.40mm, input 000009EC_H (2540 in decimal system). This register value has two meanings depending on the operation type. 1) Positioning operation ⇒ Range for positioning complete against the target position 2) Pressing operation ⇒ Pressing width (Pressing operation distance) A pressing operation is performed when PUSH Signal in the control signals is ON. 	3.7.3
PLC Output	Command Speed	16 bits	_	16-bit integer Unit: 1.0mm/s or 0.1mm/s (It is set to 1.0mm/s in the initial setting.) A change of the unit is to be conducted on Gateway Parameter Setting Tool. Available range for Setting: 1 to 65535 Specify the speed at which to move the actuator. (Example) If the unit is 1.0mm/s, indicate 00FE _H for 254.0mm/s (254 in decimal number). It may cause an alarm or a malfunction if executing a movement command with 0 or a value more than the maximum speed of the actuator.	3.7.3
	Acceleration/ Deceleration	16 bits	-	16-bit integer Unit: 0.01G Available range for Setting: 1 to 300 Specify the acceleration/deceleration at which to move the actuator. The acceleration and deceleration will be the same value. (Example) If 0.30G, input $001E_H$ (30 in decimal system). It may cause an alarm or a malfunction if executing a movement command with 0 or a value exceeding the maximum acceleration/deceleration of the actuator.	3.7.3
	Pressing Current Limit Value	16 bits	_	16-bit integer Unit: % Available range for Setting: 0 to FF _H 7F _H =50%, FF _H =100% Indicate the current value for pressing operation. (Example) When setting to 50%, indicate FF _H * 50% = 255 * 50% = 127 (Decimal Number) = 007F _H . The pressing range available for indication differs depending on the actuator (Refer to the catalogue or instruction manual for the actuator). It may cause an alarm or a malfunction if executing a movement command with a value more than the maximum pressing current.	3.7.3

(ON = Applicable bit is "1", OFF = Applicable bit is "0")

Si	gnal Type	Bit	Symbol	Description	Details						
		b15	BKRL	Brake release ON: Brake release, OFF: Brake activated	3.7.1 [15]						
		b14	INC	Absolute position commands are issued when this signal is OFF, and incremental position commands are issued when the signal is ON.	3.7.1 [20]						
		b13	DIR	Push direction specification ON: Movement against home position, OFF: Movement toward home position (Note) This signal is effective when the pressing method of CON type is selected.	3.7.1 [17]						
		b12	PUSH	Push-motion specification ON: Pressing operation, OFF: Positioning operation	3.7.1 [16]						
		b11 b10 b9	_	Cannot be used.	_						
		b8	JOG+ +Jog ON: Movement against home position, OFF: Stop								
out		b7	JOG-	-Jog ON: Movement toward home position, OFF: Stop							
PLC Out	Control Signal	b6	JVEL	Jog-speed/inch-distance switching OFF : Use the setting values of Parameter No.26 JOG Speed and No.48 Inching Distance in MCON ON : Use the setting values of Parameter No. 47 JOG Speed 2 or Command Speed ^(Note 1) , and No. 49 Inching Distance 2 in MCON	3.7.1 [11]						
		b5	JISL	Jog/inching switching ON: Inching, OFF: Jog	3.7.1 [12]						
		b4	SON	Servo ON command ON: Servo ON, OFF: Servo OFF	3.7.1 [5]						
		b3	RES	Reset A reset is performed when this signal turns ON.	3.7.1 [4]						
		b2	STP	Pause ON: Pause, OFF: Pause release	3.7.1 [8]						
		b1	HOME	Home return Home-return command with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [6]						
		b0	CSTR	Positioning start Movement command executed with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [7]						

Note 1 When Command Speed Setting = 0 : Operation will be made with a value in Parameter No. 47 "PIO JOG Speed 2" in MCON. When Command Speed Setting $\neq 0$: Operation will be made with the setting value in

Command Speed.

N = Applicable bit is "1", OFF = Applicabl	e bit is "0")
--	---------------

Si	gnal Type	Bit	Symbol	Description	Details						
	Current Position	32 bits	_	32-bit signed integer indicating the current position Unit: 0.01mm (Example) If 10.23mm, input 000003FF _H (1023 in decimal system). (Note) Negative numbers are two's implement.	3.7.3						
	Command Current	32 bits	_	32-bit integer The electrical current presently specified by a command is indicated. The setting unit is mA. This resistor makes an output in hexadecimal numbers. (Example) Reading: $000003FF_H = 1023$ (Decimal number) = 1023mA	3.7.3						
	Current Speed	16 bits	_	16-bit integer The current speed is indicated. Unit: 1.0mm/s or 0.1mm/s. A change of the unit is to be conducted on Gateway Parameter Setting Tool. (Example) Reading: $03FF_{H} = 1023$ (Decimal number) = 1023mm/s							
	Alarm Code	16 - 16-bit integer 16 - The alarm code (refer to Chapter 9 Troubleshooting) is output while an alarm is issued (ALM of Status Signal is ON).									
		b15	EMGS	This signal turns ON during an emergency stop	3.7.1 [2]						
		b14	CRDY	This signal turns ON when the controller is standing by.	3.7.1 [1]						
C Input		b13	ZONE2	E2 Turns on when the current position is in the setting of E2 Zone Boundary 2 Necessary to establish settings in Parameter No. 23 and 24.							
PL(b12	ZONE1	Turns on when the current position is in the setting of Zone Boundary 1 Necessary to establish settings in Parameter No. 1 and 2.	3.7.1 [9]						
		b11 b10 b9	-	Cannot be used.	_						
	Status	b8	MEND	This signal turns ON at either of positioning complete of after movement, home return complete or pressing complete or pressing failure, and turns OFF at movement start. It is OFF when the servo is OFF.	3.7.1 [19]						
	Signal	b7	ALML	Light error alarm output It turns ON when an overload warning or message level error is issued.	3.7.1[21]						
		b6	_	Cannot be used.	-						
		b5	PSFL	This signal turns ON when the actuator missed the load in push-motion operation.	3.7.1 [18]						
		b4	SV	This signal turns ON when operation standby is complete (Servo is ON).	3.7.1 [5]						
		b3	ALM	This signal is ON while an alarm is generated.	3.7.1 [3]						
		b2	MOVE	This signal is ON while in movement.	3.7.1 [7]						
		b1	HEND	This signal turns ON at home return complete and is kept unless the home position is lost due to a fact such as an alarm.	3.7.1 [6]						
		b0	PEND	This signal turns ON at positioning complete and is kept ON during a stop with the servo ON, but does not turn ON when pressing operation is failed.	3.7.1 [7]						

3.4.7 Control Signals for Positioner 2 Mode

Caution: This mode is not applicable for CompoNet.

It is an operation mode to operate with indicating a position number.

The operation is to be made by using the position data set in the position table.

This is a mode that the monitoring of the current value are removed from Positioner 1 Mode. The settable No. of position data items is max 256 points.

The main functions of ROBO Cylinder capable to control in this mode are as described in the following table.

ROBO cylinder function	O: Direct control ∆: Indirect control ×: Disabled	Remarks						
Home-return operation	0							
Positioning operation	Δ							
Speed and acceleration/ deceleration setting	Δ							
Separate settings for acceleration and deceleration	Δ	These items must be set in the position data						
Pitch feed (incremental)	Δ	table.						
Pressing operation	Δ							
Speed change during movement	Δ							
Pause	0							
Zone signal output	Δ	These items must be set in the parameters.						
Position zone signal	Δ	These items must be set in the position data table.						
Vibration control	Δ	This feature is limited only to the servo motor type actuators.						
PIO pattern selection	×							

(1) PLC Address Composition

(m is PLC input and output top word address for each axis number)

$PLC \rightarrow MCON$	I (PLC Output)	$MCON \to PLC \text{ (PLC Input)}$									
Specified Position No.	m	Completion Position No. (Simple Alarm Code)	m								
Control Signal	m+1	Status Signal	m+1								

[Refer to Section 3.4.2 for the address maps for each field network.]



(2) Input and Output Signal Assignment for each Axis

The I/O signals for each axis consists of 2-word for each I/O bit register.

- The control signals and status signals are ON/OFF signals in units of bit.
- For the indicated position number and complete position number, 1-word (16-bit) binary data is available and values from 0 to 255 can be used.

Caution:

<u>Set the operational condition in advance</u> with using a teaching tool such as PC software in the position number to be used. Selecting a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".

PLC Output (m is PLC output top word address for each axis number)

1 word = 16 bit

Address m																
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Specified Position No.	I	I	Ι	Ι	Ι	Ι	Ι	I	PC128	PC64	PC32	PC16	PC8	PC4	PC2	PC1

b15	b14	b13	b12	b11	b10	h9	h8	h7	b6	h5	h4	h3	h2	b1	b0
	~	2.0	~	~	2.0	~~	~~		~ ~ ~	~ ~ ~	~ .	~~	~_	~ .	~~
۲					Ш	RT	t C	ц.	Ц	۲.	z	ŝ	٩	ME	IR
I X	I	I	I	I	Q	Ň	ğ	ğ	Ň	- P	sc	RE	ST	ē	S
_					~		-	-	-					-	Ŭ
	▶15 BKRL	 b15 b14 ЛХУВ 1 	b15 b14 b13	שלים אין	understand bit	b15 b14 b13 b12 b11 b10	b15 b14 b13 b12 b11 b10 b9 มม 1	b15 b14 b13 b12 b11 b10 b9 b8 IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	b15 b14 b13 b12 b11 b10 b9 b8 b7 I	b15 b14 b13 b12 b11 b10 b9 b8 b7 b6 I	Image: bit	Image: bit	Image: bit	Image: bits bits	Image: bit

PLC Input (m is PLC input top word address for each axis number)

1 word = 16 bit

Address m																
/	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Completed Position No.	I	I	I	I	I	I	Ι	I	PM128	PM64	PM32	PM16	PM8	PM4	PM2	PM1
Address m+1																
Address III I	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Status Signal	EMGS	скру	ZONE2	ZONE1	PZONE	MODES	WEND	MEND	ALML	I	PSFL	SV	ALM	MOVE	HEND	PEND

(3) I/O signal assignment

(ON = Applicable bit is "1", OFF = Applicable bit is "0")

S	ignal Type	Bit	Symbol	Description	Details
	Specified Position No.	16 bits	PC1 to PC128	 16-bit integer Available range for Setting: 0 to 255 To operate, it is necessary to have the position data that the operation conditions are already set in advance with a teaching tool such as the PC software. In this register, indicate the position number the data is input with a binary number. Indicating a value out of the range or operating with a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error". 	3.7.4
		b15	BKRL	Brake release ON: Brake release, OFF: Brake activated	3.7.1 [15]
	l I	b14			
	4	b13	L _	Cannot be used	_ !
	1	b12	-	Gambi be used.	_
	1	b11	ļ		
		b10	MODE	Teaching mode command OFF: Standard mode, ON : Teaching mode	3.7.1 [13]
		b9	PWRT	Position import command ON: Position Data Import	3.7.1 [14]
tput	C Output	b8	JOG+	+Jog ON: Movement against home position, OFF: Stop	2 9 1 [10]
C OU		b7	JOG-	-Jog ON: Movement toward home position, OFF: Stop	3.0.1 [10]
PL	Control Signal	b6	JVEL	Jog-speed/inch-distance switching OFF : Use the setting values of Parameter No.26 JOG Speed and No.48 Inching Distance in MCON ON : Use the setting values of Parameter No.47 JOG Speed 2 and No.49 Inching Distance in MCON	3.7.1 [11]
		b5	JISL	Jog/inching switching ON: Inching, OFF: Jog	3.7.1 [12]
		b4	SON	Servo ON command ON: Servo ON, OFF: Servo OFF	3.7.1 [5]
		b3	RES	Reset A reset is performed when this signal turns ON.	3.7.1 [4]
		b2	STP	Pause ON: Pause, OFF: Pause release	3.7.1 [8]
		b1	HOME	Home return Home-return command with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [6]
		b0	CSTR	Positioning start Movement command executed with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [7]

S	ignal Type	Bit	Symbol	Description	Details		
	Completed Position No. (Simple Alarm Code)	16 bits	PM1 to PM128	16-bit integer The positioning complete position number is output in a binary number once getting into the positioning width after moving to the target position. In the case that the position movement has not been performed at all, or during the movement, "0" is output. Read it by turning PEND Signal on after movement. The simple alarm code (refer to Chapter 9 Troubleshooting) is output while an alarm is issued (ALM of Status Signal is ON).	3.7.4		
		b15	EMGS	This signal turns ON during an emergency stop	3.7.1 [2]		
		b14	CRDY	This signal turns ON when the controller is standing by.	3.7.1 [1]		
		b13	ZONE2	Turns on when the current position is in the setting of Zone Boundary 2 Necessary to establish settings in Parameter No. 23 and 24.	2 7 1 [0]		
	- C Input	b12	ZONE1	Turns on when the current position is in the setting of Zone Boundary 1 Necessary to establish settings in Parameter No. 1 and 2.	3.7.1 [9]		
out		b11	PZONE	Position zone This signal turns ON when the current position is inside the specified position zone.	3.7.1 [9]		
-C Ing		b10	MODES	This signal is ON while the teaching mode is selected.	3.7.1 [13]		
Б		b9	WEND	This signal turns ON when reading is complete.	3.7.1 [14]		
	Status Signal	b8	MEND	This signal turns ON at either of positioning complete of after movement, home return complete or pressing complete or pressing failure, and turns OFF at movement start. It is OFF when the servo is OFF.	3.7.1 [19]		
		b7	ALML	Light error alarm output It turns ON when an overload warning or message level error is issued.	3.7.1 [21]		
		b6	_	Cannot be used.	-		
		b5	PSFL	This signal turns ON when the actuator missed the load in push-motion operation.	3.7.1 [18]		
		b4	SV	This signal turns ON when operation standby is complete (Servo is ON).	3.7.1 [5]		
		b3	ALM	This signal is ON while an alarm is generated.	3.7.1 [3]		
	[b2	MOVE	This signal is ON while in movement.	3.7.1 [7]		
		b1	HEND	This signal turns ON at home return complete and is kept unless the home position is lost due to a fact such as an alarm.	3.7.1 [6]		
		b0	PEND	This signal turns ON at positioning complete and is kept ON during a stop with the servo ON, but does not turn ON when pressing operation is failed			

(ON = Applicable bit is "1", OFF = Applicable bit is "0")

.....

3.4.8 Control Signals for Positioner 3 Mode

This is the operation mode with the position No. set up.

The operation is to be made by using the position data set in the position table.

This is the mode with the minimum amount of input and output signals and the sent and received data in 1-word.

The settable No. of position data items is max 256 points.

The main functions of ROBO Cylinder capable to control in this mode are as described in the following table.

ROBO cylinder function	O: Direct control ∆: Indirect control ×: Disabled	Remarks
Home-return operation	0	
Positioning operation	Δ	
Speed and acceleration/ deceleration setting	Δ	These items must be set in the position data table.
Separate settings for acceleration and deceleration	Δ	
Pitch feed (Incremental)	×	
Pressing operation	Δ	These items must be set in the position data
Speed change during movement	Δ	table.
Pause	0	
Zone signal output	Δ	These items must be set in the parameters.
Position zone signal	X	
Vibration control	Δ	This feature is limited only to the servo motor type actuators.
PIO pattern selection	×	

(1) PLC Address Composition

(m is PLC input and output top word address for each axis number)

$PLC \rightarrow MCON$	I (PLC Output)	$MCON \to PLC \text{ (PLC Input)}$						
Control Signal/ Specified Position No.	m	Status Signal/ Completion Position No.	m					

[Refer to Section 3.4.2 for the address maps for each field network.]

(2) Input and Output Signal Assignment for each Axis

- The I/O signals for each axis consists of 1-word for each I/O bit register.
- The control signals and status signals are ON/OFF signals in units of bit.
- Binary data of 8 bits for the specified position number and complete position number and values from 0 to 255 can be used.

Caution:

Set the operational condition in advance with using a teaching tool such as PC software in the position number to be used. Selecting a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".

PLC Output (m is PLC output top word address for each axis number)

Address m b15 b ² Control Signal/ Specified	4 b13	b12	b11	b10	b9	b8	b7	b6	h5	b4	h2	h 0		
b15 b ² Control Signal/ Specified 교	4 b13	b12	b11	b10	b9	b8	b7	b6	h5	h/	h2	L O	1.4	
Control Signal/ Specified 귣								-	00	v4	03	D2	DI	b0
Position No.	I I	NOS	RES	STP	HOME	CSTR	PC128	PC64	PC32	PC16	PC8	PC4	PC2	PC1

Control Signal

Specified Position No.

PLC Input (m is PLC input top word address for each axis number)

Address m b15 b14 b13 b12 b11 b10 b9 b8 b7 b6 b5 b4 b3 b2 b1 b0 Status Signal/ Completed Position No. Status Signal/ Completed Position No. Status Signal/ Completed Position No. Status Signal/ Completed Position No. Status Signal/ Completed Status Signal/ Completed Status Signal/ Completed Status Signal/ Completed Status Signal/ Completed Status Signal/ Completed Status Signal/ Status							1 000	Jiu –									
Position No. PMI2 PSFL PSFL PSFL Position No. PMI28 PMI28 PMI28 PMI28 PM16 PM128 PM128 PM128 PM17 PM128 PM128 PM18 PM128 PM17 PM128	Address m	↓ b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
	Status Signal/ Completed Position No.	EMGS	ZONE1	PSFL	٨S	MLM	MOVE	HEND	DEND	PM128	PM64	PM32	91M16	8MG	PM4	PM2	PM1

Status Signal

Completed Position No.

(3) I/O signal assignment

S	ignal Type	Bit	Symbol		Details	
	ignar rype	Dit	Cymbol	Brake release	Details	
		b15	BKRL	ON: Brake release, OFF: Brake activated	3.7.1 [15]	
		b14 b13	_	Cannot be used.	-	
		b12	SON	Servo ON command ON: Servo ON, OFF: Servo OFF	3.7.1 [5]	
		b11	RES	Reset A reset is performed when this signal turns ON.	3.7.1 [4]	
		b10	STP	Pause ON: Pause, OFF: Pause release	3.7.1 [8]	
ıtput	Control Signal/	b9	HOME	Home return Home-return command with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [6]	
PLC OL	Specified Position No.	b8	CSTR	Positioning start Movement command executed with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [7]	
		b7		Command position No. (8 bits binary data)		
		b6		Available range for Setting: 0 to 255		
		b5		that the operation conditions are already set in		
		b4	PC1 to	advance with a teaching tool such as the PC		
		b3	PC128	software.	3.7.4	
		b2		data is input with a binary number.		
		 h1		Indicating a value out of the range or operating with		
		b0		a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".		
		b15	EMGS	This signal turns ON during an emergency stop	371[2]	
		b14	ZONE1	Turns on when the current position is in the setting of Zone Boundary 1 Necessary to establish settings in Parameter No. 1 and 2.	3.7.1 [9]	
		b13	PSFL	This signal turns ON when the actuator missed the load in push-motion operation.	3.7.1 [18]	
		b12	SV	This signal turns ON when operation standby is complete (Servo is ON).	3.7.1 [5]	
		b11	ALM	This signal is ON while an alarm is generated.	3.7.1 [3]	
		b10	MOVE	This signal is ON while in movement.	3.7.1 [7]	
C Input	Status Signal/ Completed	b9	HEND	is kept unless the home position is lost due to a fact such as an alarm.	3.7.1 [6]	
ΡL	Position No.	b8	PEND	This signal turns ON at positioning complete and is kept ON during a stop with the servo ON, but does not turn ON when pressing operation is failed.	3.7.1 [7]	
		b7		Completed position No. (8 bits binary data)		
		b6		The positioning complete position number is output		
		b5		width after moving to the target position.		
		D4	PM1 to	 width after moving to the target position. In the case that the position movement has not been performed at all, or during the movement, "0" 		
		b3 h2	PM128 b			
		b1		movement.		
		b0				

MCON

3.4.9 Control Signals for Positioner 5 Mode

Caution: This mode is not applicable for CompoNet.

It is an operation mode to operate with indicating a position number. The operation is to be made by using the position data set in the position table. It is a mode that enabled to monitor the current position in 0.1mm unit by reducing the number of position table from Positioner 2 Mode.

The settable No. of position data items is max 16 points.

The main functions of ROBO Cylinder capable to control in this mode are as described in the following table.

ROBO cylinder function	O: Direct control ∆: Indirect control ×: Disabled	Remarks					
Home-return operation	0						
Positioning operation	Δ						
Speed and acceleration/ deceleration setting	Δ						
Separate settings for acceleration and deceleration	Δ	These items must be set in the position data table.					
Pitch feed (incremental)	Δ						
Pressing operation	Δ						
Speed change during movement	Δ						
Pause	0						
Zone signal output	Δ	These items must be set in the parameters.					
Position zone signal	×						
Vibration control	Δ	This feature is limited only to the servo motor type actuators.					
PIO pattern selection	×						

(1) PLC Address Composition

(m is PLC input and output top word address for each axis number)

$PLC \rightarrow MCON$	I (PLC Output)	$MCON \to PLC \ (PLC \ Input)$						
Specified Position No.	m	Completion Position No. (0.1mm unit)	m					
Control Signal	m+1	Status Signal	m+1					

[Refer to Section 3.4.2 for the address maps for each field network.]

(2) Input and Output Signal Assignment for each Axis

The I/O signals for each axis consists of 2-word for each I/O bit register.

- The control signals and status signals are ON/OFF signals in units of bit.
- For the indicated position number and complete position number, 1-word (16-bit) binary data is available and values from 0 to 15 can be used.
- The current position is the binary data in 1 word (16 bits), and can deal with numbers from -32768 to +32767 (unit: 0.1mm) in PLC. Negative numbers are to be dealt with two's complement.

A Caution:

Set the operational condition in advance with using a teaching tool such as PC software in the position number to be used. Selecting a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".

PLC Output (m is PLC output top word address for each axis number)

1 word = 16 bit

Address m																>
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Specified Position No.	I	I	I	Ι	I	I	Ι	I	I	I	I	Ι	PC8	PC4	PC2	PC1
Address m+1																
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Control Signal	BKRL	I	I	I	I	I	I	-90C	-90C-	JVEL	JISL	SON	RES	STP	HOME	CSTR

PLC Input (m is PLC input top word address for each axis number)

1 word = 16 bit

Address m	-															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Current Position																

(Note) If the target position is a negative value, it is indicated by a two's complement.

Address m+1

Address m+1	-															
	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Status Signal/ Completed Position No.	EMGS	СКDY	ZONE2	ZONE1	PM8	PM4	PM2	PM1	MEND	ALML	PSFL	SV	ALM	MOVE	HEND	PEND

(3) I/O signal assignment

(ON = Applicable bit is "1", OFF = Applicable bit is "0")

Signal Type		Bit	Symbol	Description	Details
	Specified Position No.	16 bits	PC1 to PC8	16-bit integer (4-bit use) Available range for Setting: 0 to 15 To operate, it is necessary to have the position data that the operation conditions are already set in advance with a teaching tool such as the PC software. In this register, indicate the position number the data is input with a binary number. Indicating a value out of the range or operating with a position number with no setting conducted will generate the alarm code 0A2 "Position Data Error".	3.7.4
		b15	BKRL	Brake release ON: Brake release, OFF: Brake activated	3.7.1 [15]
		b14			
		b13	l		
		b12	L _	Cannot be used	
		b11		Garnot be used.	_
		b10			
	Control Signal	b9	ļ		
rt		b8	JOG+	+Jog ON: Movement against home position, OFF: Stop	371[10]
PLC Outpr		b7	JOG-	-Jog ON: Movement toward home position, OFF: Stop	0.7.1 [10]
		b6	JVEL	Jog-speed/inch-distance switching OFF : Use the setting values of Parameter No.26 JOG Speed and No.48 Inching Distance in MCON ON : Use the setting values of Parameter No.47 JOG Speed 2 and No.49 Inching Distance in MCON	3.7.1 [11]
		b5	JISL	Jog/inching switching ON: Inching, OFF: Jog	3.7.1 [12]
		b4	SON	Servo ON command ON: Servo ON, OFF: Servo OFF	3.7.1 [5]
		b3	RES	Reset A reset is performed when this signal turns ON.	3.7.1 [4]
		b2	STP	Pause ON: Pause, OFF: Pause release	3.7.1 [8]
		b1	HOME	Home return Home-return command with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [6]
		b0	CSTR	Positioning start Movement command executed with this signal ON, command carried on till complete even if the signal is turned OFF on the way	3.7.1 [7]
3.4					

Field					
Network					
Type					
Address					
Map					

_

Μ	CON	_
---	-----	---

S	ignal Type	Bit	Symbol	Description	Details	
	Current Position	16 bits	_	16-bit signed integer indicating the current position Unit: 0.01mm (Example) If +102.3mm, input 000003FF _H (1023 in decimal system). (Note) Negative numbers are two's implement.	3.7.4	
		b15	3.7.1 [2]			
		b14	CRDY	This signal turns ON when the controller is standing by.	3.7.1 [1]	
		b13	ZONE2	Turns on when the current position is in the setting of Zone Boundary 2 Necessary to establish settings in Parameter No. 23 and 24.	371[0]	
		b12	ZONE1	Turns on when the current position is in the setting of Zone Boundary 1 Necessary to establish settings in Parameter No. 1 and 2.	5.7.1 [8]	
		b11		16-bit integer, Available range for output: 0 to 15 The positioning complete position number is output in a binary number once getting into the positioning		
	D D J J J Status Signal	b10	PM1 to	width after moving to the target position. In the case that the position movement has not been performed at all, or during the movement "0" is	374	
Input		b9	PM8	output. Read it by turning PEND Signal on after movement.	0.7.1	
PLC		b8		The simple alarm code (refer to Chapter 9 Troubleshooting) is output while an alarm is issued (ALM of Status Signal is ON).		
	Position No.	b7	MEND	This signal turns ON at either of positioning complete of after movement, home return complete or pressing complete or pressing failure, and turns OFF at movement start. It is OFF when the servo is OFF.	3.7.1 [19]	
		b6	ALML	Light error alarm output It turns ON when an overload warning or message level error is issued.	3.7.1 [21]	
		b5	PSFL	"ON" for pressing and a miss	3.7.1 [18]	
		b4	SV	This signal turns ON when operation standby is complete (Servo is ON).	3.7.1 [5]	
		b3	ALM	This signal is ON while an alarm is generated.	3.7.1 [3]	
		b2	MOVE	This signal is ON while in movement.	3.7.1 [7]	
		b1	HEND	This signal turns ON at home return complete and is kept unless the home position is lost due to a fact such as an alarm.	3.7.1 [6]	
		b0	PEND	This signal turns ON at positioning complete and is kept ON during a stop with the servo ON, but does not turn ON when pressing operation is failed.	3.7.1 [7]	

(ON = Applicable bit is "1", OFF = Applicable bit is "0")

3.4.10 Control Signals for Remote I/O Mode

It is an operation mode to control with ON/OFF of bits as it is done in PIO (24V I/O). Set the position data from a teaching tool such as the RC PC software. The number of positioning points depends on the operation pattern (PIO pattern) set in the parameters of MCON unit.

The I/O specifications for the operation pattern are described as follows.

The l/ o opeemeat		
PIO Pattern	Operation Mode	I/O Specification
0	Positioning mode	Position number specification 64 points Zone signal output 1 point ^(Note1) Position zone signal output ^(Note 2) 1 point
1	Teaching mode	Positioning points 64 points Position zone signal output ^(Note 2) 1 point Jog operation is available The current position can be written to a specified position.
2	256-point mode	Positioning points 256 points Position zone signal output ^(Note 2) 1 point
3	_	Unavailable. Parameter data error would be generated if setting is made.
4	Solenoid valve mode 1	Positioning points 7 points Zone signal output 1 point ^(Note 1) Position zone signal output ^(Note 2) 1 point Operation command available only with position number indication
5	Solenoid valve mode 2	Positioning points 3 points Zone signal output 1 point ^(Note 1) Position zone signal output ^(Note 2) 1 point The actuator is operated by specifying forward, backward and intermediate position commands. Complete signal is able to output a signal equivalent to the limit switch

Note 1 Set the range of the zone in parameter. It becomes constantly valid once the home-return operation is complete.

Note 2 The range of the zone is to be set in the position table, and is activated only when that position number is indicated. It is invalid in other position number commands. The position zone signal can be switched over to the zone signal with the setting of Parameter No.149.

The functions capable to control in this mode are as described in the table below. O: Operation available ×: Operation not available

	Operation Pattern (PIO Pattern)								
POPO ovlinder function	0	1	2	4	5				
ROBO cylinder function	Positioning	Teaching	256 points	Solenoid	Solenoid				
	Mode	Mode	Mode	Valve Mode 1	Valve Mode 2				
Home-return operation	0	0	0	0	O (Note 3)				
Positioning operation	0	0	0	0	0				
Speed and									
acceleration/deceleration	0	0	0	0	0				
setting									
Separate settings for									
acceleration and	0	0	0	0	0				
deceleration									
Pitch feed (Incremental)	0	0	0	0	×				
Pressing operation	0	0	0	0	0				
Speed change during	0	0	0	×	0				
movement	0		0	^	0				
Pause	0	0	0	0	O (Note 4)				
Zone signal output	0	O (Note 5)	O (Note 5)	0	0				
Position zone signal	O (Note 5)	O (Note 5)	O (Note 5)	O (Note 5)	O (Note 5)				
Vibration control	0	0	0	0	0				
(For servo motor type only)	5))	5	5				

Note 3 Home-return operation is performed in the first movement command.

Note 4 It is available when the parameter No.27 of "Movement Command Type" is set to "0".

Note 5 Select either of the zone signal output or position zone signal output in Parameter No. 149.

(1) PLC Address Composition

(m is PLC input and output top word address for each axis number)

PLC-	→MCON (F	PLC Output)	MCON→PLC (PLC Input)
Port No.0) to 15	m	Port No.0 to 15	m

[Refer to Section 3.4.2 for the address maps for each field network.]

(2) Input and Output Signal Assignment for each Axis

The I/O signals for each axis consists of 1 word for each I/O bit register.

- The I/O bit register is controlled using the ON/OFF signal in units of bit.
- (ON = Applicable bit is "1", OFF = Applicable bit is "0")
- The content of the signal for each bit changes depending what is selected in the PIO patterns.

[Refer to next section I/O signal assignment]

PLC Output (m is PLC input and output top word address for each axis number)

1 word=16 bit

A																
Address m	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Controller Input port No.	15	14	13	12	11	10	6	8	7	9	5	4	З	2	F	0

PLC Input (m is PLC input and output top word address for each axis number)

							1	woru–	TO DIL							•
Address m	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Controller Output Port No.	15	14	13	12	11	10	0	8	7	9	5	4	ю	2	~	0



(3) I/O signal assignment

The controller's I/O port signal varies depending on the parameter No.25 setting. [Refer to 3.8 Remote I/O Mode]

				Set the parameter No.25 of MCON					
		P	ositioning mode	Т	eaching mode	256-point mode			
			0		1		2		
Category	Port No.	Symbol	Signal Name	Symbol	Signal Name	Symbol	Signal Name		
	0	PC1		PC1		PC1			
	1	PC2		PC2		PC2			
	2	PC4		PC4		PC4			
	3	PC8	Specified position No.	PC8	Specified position No.	PC8			
	4	PC16		PC16		PC16	Specified position No.		
	5	PC32		PC32		PC32			
	6	-		MODE	Teaching mode command	PC64			
	7	-	Unavailable	JISL	Jog/inching switching	PC128			
MCON input	8	-		JOG+	+Jog	Ι	Unavailable		
	9	BKRL	Brake release	JOG-	-Jog	BKRL	Brake release		
	10	-	Unavailable	Ι	Unavailable	Ι	Unavailable		
	11	HOME	Home return	HOME	Home return	HOME	Home return		
	12	*STP	Pause	*STP	Pause	*STP	Pause		
	13	CSTR	Positioning start	CSTR/ PWRT	Positioning start/ Position data import command	CSTR	Positioning start		
	14	RES	Reset	RES	Reset	RES	Reset		
	15	SON	Servo ON command	SON	Servo ON command	SON	Servo ON command		
	0	PM1		PM1		PM1			
	1	PM2		PM2		PM2	Completed position		
	2	PM4	Completed position No	PM4	Completed position No	PM4			
	3	PM8	Completed position No.	PM8		PM8			
	4	PM16		PM16		PM16	No.		
	5	PM32		PM32		PM32			
	6	MOVE	Moving signal	MOVE	Moving signal	PM64			
	7	ZONE1	Zone boundary 1	MODES	Teaching mode signal	PM128			
MCON output	8 (Note 1)	PZONE/ ZONE2	Position zone/ Zone boundary 2	PZONE/ ZONE1	Position zone/ Zone boundary 1	PZONE/ ZONE1	Position zone/ Zone boundary 1		
→PLC input	9	-	Unavailable	-	Unavailable	-	Unavailable		
	10	HEND	Home return completion	HEND	Home return completion	HEND	Home return completion		
	11	PEND	Positioning completion signal	PEND/ WEND	Positioning completion signal/Position data import complete	PEND	Positioning completion signal		
	12	SV	Operation preparation end	SV	Operation preparation completion	SV	Operation preparation end		
	13	*EMGS	Emergency stop	*EMGS	Emergency stop	*EMGS	Emergency stop		
	14	*ALM	Alarm	*ALM	Alarm	*ALM	Alarm		
	15	LOAD /TRQS *ALML	Torque check ^(Note 2) / Light malfunction output	*ALML	Light malfunction output	LOAD /TRQS *ALML	Torque check ^(Note 2) / Light malfunction output		

Note 1 It is available to change in Parameter No. 149 Zone Output Switchover.

Note 2 It is available to change in Parameter No. 156 Torque Inspection / Light Malfunction Output Select for the pulse motor driver.

It is the light malfunction output for the servo motor driver / brushless DC motor driver.

(Note) "*" in codes above shows the signal of the active low. (A signal of active low is a signal that the input signal is processed when it is turned OFF, output signal is ordinarily on while the power is ON, and turns OFF when the signal is output.)

			Set the parameter	r No.25 of MCON			
		S	olenoid valve mode 1	Solenoid valve mode 2			
	Deat		4		5		
Category	Port No.	Symbol	Signal Name	Symbol	Signal Name		
	0	ST0	Start position 0	ST0	Start position 0		
	1	ST1	Start position 1	ST1 (JOG+)	Start position 1		
	2	ST2	Start position 2	ST2 (No function)	Start position 2		
	3	ST3	Start position 3	_			
	4	ST4	Start position 4	_			
	5	ST5	Start position 5	-	Linovoilabla		
	6	ST6	Start position 6	-	Unavailable		
PLC output→ MCON input	7	-	Linovailable	-			
	8	-	Unavailable	-			
	9	BKRL	Brake release	BKRL	Brake release		
	10	_	Unavailable	_	Unavailable		
	11	HOME	Home return	_			
	12	*STP	Pause	_	Unavailable		
	13	-	Unavailable	_			
	14	RES	Reset	RES	Reset		
	15	SON	Servo ON command	SON	Servo ON Command		
	0	PE0	Position 0 complete	LS0	Retrieval to the Edge Commands 0		
	1	PE1	Position 1 complete	LS1 (TRQS)	Retrieval to the Edge Commands 1		
	2	PE2	Position 2 complete	LS2 (No function)	Retrieval to the Edge Commands 2		
	3	PE3	Position 3 complete	-			
	4	PE4	Position 4 complete	-	Lineveilekie		
	5	PE5	Position 5 complete	-	Unavailable		
	6	PE6	Position 6 complete	_			
MCON output	7	ZONE1	Zone boundary 1	ZONE1	Zone boundary 1		
→PLC input	8 (Note 1)	PZONE/ ZONE2	Position zone/ Zone boundary 2	PZONE/ ZONE2	Position zone/ Zone boundary 2		
	9	-	Unavailable	-	Unavailable		
	10	HEND	Home return completion	HEND	Home return completion		
	11	PEND	Positioning completion signal	-	Unavailable		
	12	SV	Operation preparation end	SV	Operation preparation end		
	13	*EMGS	Emergency stop	*EMGS	Emergency stop		
	14	*ALM	Alarm	*ALM	Alarm		
	15	LOAD/TR QS *ALML	Torque check ^(Note 2) / Light malfunction output	*ALML	Light malfunction output		

Note 1 It is available to change in Parameter No. 149 Zone Output Switchover.

Note 2 It is available to change in Parameter No. 156 Torque Inspection / Light Malfunction Output Select for the pulse motor driver.

It is the light malfunction output for the servo motor driver / brushless DC motor driver.

(Note) Brackets in the symbol names shown above are the functions before home-return operation.

(Note) "*" in codes above shows the signal of the active low. (A signal of active low is a signal that the input signal is processed when it is turned OFF, output signal is ordinarily on while the power is ON, and turns OFF when the signal is output.)

3.4.11 About Commands (Position Data Read/Write and Alarm Axis Read)

By sending a specific code to a specific address, the position data reading and writing, and the reading of the axis number that an alarm was issued and the alarm code can be performed.

Caution: It is not necessary to use commands in Simple Direct Mode because no position data is to be used in it.

Shown below is the table to indicate the assignment of each signal.

(1) PLC Address Composition

	•••					
-		(n is PLC input and o	output top address.)			
$PLC \to MCON$	I (PLC Output)	$MCON \rightarrow PLC$ (PLC Input)				
Demand Command	n+2	Response Command	n+2			
Data 0	n+3	Data 0	n+3			
Data 1	n+4	Data 1	n+4			
Data 2	n+5	Data 2	n+5			
Data 3	n+6	Data 3	n+6			
			-			

[Refer to Section 3.4.2 for the address maps for each field network.]

(2) Demand Command List

Class	Code	Description
Handshaking	0000н	Demand command cleared
Write Position Data	1000 _Н	Writing of target position
	1001 _Н	Writing of positioning width
	1002 _Н	Writing of speed
	1003н	Writing of individual zone boundary on positive side
	1004 _Н	Writing of individual zone boundary on negative side
	1005н	Writing of acceleration
	1006н	Writing of deceleration
	1007 _Н	Writing current limit at pressing
	1008 _Н	Writing of load current threshold
Read Position Data	1040н	Reading of target position
	1041н	Reading of positioning width
	1042н	Reading of speed
	1043н	Reading of individual zone boundary on positive side
	1044 _H	Reading of individual zone boundary on negative side
	1045н	Reading of acceleration
	1046н	Reading of deceleration
	1047 _H	Reading of current limit at pressing
	1048 _Н	Reading of load current threshold
Error Information Monitoring	4000н	Reading of alarm-issued axis pattern
	4001 _H	Reading of alarm code

(3) Details of Commands

- The input and output signals are consist of 5-word for each input and output data register.
- The target position and current position are expressed using 2-word (32 bits) binary data. The figures from –9999999 to +9999999 (Unit: 0.01mm) can be set in PLC. Negative numbers are to be dealt with two's complement.
- Binary data of 2-word (32 bits) for the pressing band and values from -9999999 to +9999999 (unit: 0.01mm) in PLC can be used. Negative numbers are to be dealt with two's complement.

A Caution:

• Set the position data of the actuator, such as the target position and pressing band, <u>in the</u> <u>range of the soft stroke (0 to effective stroke length)</u>.

- Binary data of 2-word (32 bits) for the speed and values from 1 to +999999 (unit: 1.0mm/s or 0.1mm/s) in PLC can be used. A change of the unit is to be conducted on Gateway Parameter Setting Tool.
- The Acceleration and Deceleration are expressed using 1-word (16 bits) binary data. The figures from 1 to 300 (Unit: 0.01G) can be set in PLC.
- The pressing current limit value is expressed using 1-word (16 bits) binary data. The figures from 0 (0%) to 255 (100%) can be set in PLC.
- Binary data of 1-word (16 bits) for the axis numbers and values from 0 (No.0) to 7 (No.7) in PLC can be used.
- Binary data of 1-word (16 bits) for the position numbers and values from 0 (No.0) to 255 (No.255) in PLC can be used.
- The alarm code is expressed using 1-word (16 bits) binary data.

🔨 Caution:

Have the setting with values available in the range of for speed, acceleration/deceleration and <u>pressing current</u> of the actuator. (Refer to the catalog or instruction manual of the actuator.) Otherwise, it may cause an abnormal condition of the servo or a malfunction of the actuator such as the alarm codes 0A3 "Position Command Information Data Error", 0C0 "Excess Actual Speed", 0C8 "Overcurrent", 0CA "Overheated" or 0E0 "Overloaded".

1) Demand command cleared [0000h]

-

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) *Note Response command does not return.*

	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Ired	n+2 Demand Command [0000h]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ind Clea	n+3 Data 0 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Comma	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Jemand	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

1 word=16 bit

2) Writing of Target Position [1000h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command.

If an error is generated, an error response is returned. [Refer to this Section 22).]

		-						TWO	Iu-10	DIL							
	~										-	-					
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
	n+2 Demand Command [1000h]	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0
osition	n+3 Data 0 [Position No.]	I	I	Ι	I	I	I	I	I	128	64	32	16	8	4	2	1
of Target F	n+4 Data 1 [Target Position (Lower word)]																
Writing	n+5 Data 2 [Target Position (Upper word)]																
	n+6 Data 3 [Axis No.]	I	Ι	Ι	Ι	Ι	I	I	I	I	Ι	I	I	I	4	2	٢

3) Writing of Positioning Width [1001h]

MCON =

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		◀															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
_	n+2 Demand Command [1001h]	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	1
ng Width	n+3 Data 0 [Position No.]	Ι	I	I	Ι	Ι	Ι	I	Ι	128	64	32	16	8	4	2	Ļ
f Positionii	n+4 Data 1 [Pressing Width (Lower word)]																
Writing c	n+5 Data 2 [Pressing Width (Upper word)]																
	n+6 Data 3 [Axis No.]	I	I	I	I	Ι	I	I	I	I	I	I	I	I	4	2	-

1 word=16 bit

4) Writing of Speed [1002h]

-

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
	n+2 Demand Command [1002h]	0	0	0	1	0	0	0	0	0	0	0	0	0	0	1	0
ed	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	۲
ting of Spe	n+4 Data 1 [Speed (Lower word)]	32768	16384	8192	4096	2048	1024	512	256	128	64	32	16	8	4	2	1
Wri	n+5 Data 2 [Speed (Upper word)]	I	I	I	I	I	I	I	I	I	I	I	I	524288	262144	131072	65536
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	-

5) Writing of individual zone boundary on positive side [1003h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		◀															
	<u></u>	·															
	Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
	n+2																
side	Deand [1003h]	0	0	0	1	0	0	0	0	0	0	0	0	0	1	0	1
ositive s	n+3 Data 0 [Position No.]	I	I	I	I	I	I	Ι	Ι	128	64	32	16	8	4	2	1
one boundary on p	n+4 Data 1 [Individual zone boundary on positive side (Lower word)]																
ting of individual ze	n+5 Data 2 [Individual zone boundary on positive side (Upper word)]																
Wri	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	~

1 word=16 bit

6) Writing of individual zone boundary on negative side [1004h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		-						1 110		ык							
	-																
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
ive side	n+2 Demand Command [1004h]	0	0	0	1	0	0	0	0	0	0	0	0	0	1	1	0
n negat	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	-
cone boundary o	n+4 Data 1 [Individual zone boundary on negative side (Lower word)]																
z laudividual z	n+5 Data 2 [Individual zone boundary on negative side (Upper word)]																
Writir	n+6 Data 3 [Axis No.]	Ι	Ι	Ι	Ι	Ι	I	I	Ι	Ι	Ι	Ι	Ι	Ι	4	2	Ļ

7) Writing of Acceleration [1005h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		◀															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
C	n+2 Demand Command [1005h]	0	0	0	1	0	0	0	0	0	0	0	0	0	1	0	1
eleratior	n+3 Data 0 [Position No.]	I	Ι	Ι	Ι	Ι	I	I	I	128	64	32	16	8	4	2	~
g of Acc	n+4 Data 1 [Acceleration]	I	I	Ι	I	I	I	I	256	128	64	32	16	8	4	2	~
Writin	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	~

1 word=16 bit

8) Writing of Deceleration [1006h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		◀															
	Bit	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
c	n+2 Demand Command [1006h]	0	0	0	1	0	0	0	0	0	0	0	0	0	1	1	0
eleration	n+3 Data 0 [Position No.]	Ι	Ι	I	I	I	I	I	I	128	64	32	16	8	4	2	~
g of Dec	n+4 Data 1 [Deceleration]	I	Ι	I	I	I	I	I	256	128	64	32	16	8	4	2	Ļ
Writing	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	1

9) Writing of Current Limit at Pressing [1007h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

									word	=16 bit							
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
ssing	n+2 Demand Command [1007h]	0	0	0	1	0	0	0	0	0	0	0	0	0	1	1	1
iit at Pre	n+3 Data 0 [Position No.]	-	-	-	I	-	Ι	Η	-	128	64	32	16	8	4	2	-
Current Lim	n+4 Data 1 [Pressing Current Limit]	-	-	-	I	-	Ι	Η	Η	128	64	32	16	8	4	2	-
iting of (n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Wr	n+6 Data 3 [Axis No.]	Ι	Ι	Ι	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	4	2	-

1 word=16 bit

10) Writing of load current threshold [1008h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

	-																
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
hold	n+2 Demand Command [1008h]	0	0	0	1	0	0	0	0	0	0	0	0	0	1	1	1
int thres	n+3 Data 0 [Position No.]	Ι	I	I	I	Ι	I	I	-	128	64	32	16	8	4	2	٦
load curre	n+4 Data 1 [Load current threshold]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	٦
/riting of	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
\$	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	1

11) Reading of Target Position [1040h]PLC Output (Address n is the input and output top address for MCON Gateway Unit.)

		◀															►
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
on	n+2 Demand Command [1040h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	0	0
et Positi	n+3 Data 0 [Position No.]	I	Ι	I	I	Ι	I	I	I	128	64	32	16	8	4	2	-
l of Targ	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reading	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	1

1 word=16 bit

								1 wo	rd=16	bit							
		•			1		1										
	Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
	n+2 Response Command [1040h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	0	0
Position	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	۲
l of Target	n+4 Data 1 [Target Position (Lower word)]																
Reading	n+5 Data 2 [Target Position (Upper word)]																
	n+6 Data 3 [Axis No.]	I	Ι	I	I	Ι	I	I	I	l	I	I	I	I	4	2	-

MCON =

12) Reading of Positioning Width [1041h] PLC Output (Address n is the input and output top address for MCON Gateway Unit.)

		4						1 110									
	<	-	-	-	-	-			r				-	r			
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
'idth	n+2 Demand Command [1041h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	0	1
oning W	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	1
of Positi	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reading	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Ľ	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	Ι	4	2	-

1 word=16 bit

								1 wo	rd=16	bit							
	-	<u> </u>		-	-	-	-			-	-		-				
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Ę	n+2 Response Command [1041h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	0	1
ing Widt	n+3 Data 0 [Position No.]	I	I	I	I	Ι	I	Ι	I	128	64	32	16	8	4	2	~
of Position	n+4 Data 1 [Pressing Width (Lower word)]																
Reading (n+5 Data 2 [Pressing Width (Upper word)]																
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	Ι	I	I	I	Ι	Ι	4	2	1

13) Reading of Speed [1042h] PLC Output (Address n is the input and output top address for MCON Gateway Unit.)

		◀															
	Bit	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
	n+2 Demand Command [1042h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	1	0
Speed	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	Ļ
ading of	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Rea	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	-

1 word=16 bit

								1 wo	rd=16	bit							
		•															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
	n+2 Response Command [1042h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	1	0
eed	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	-	128	64	32	16	8	4	2	-
iding of Sp	n+4 Data 1 [Speed (Lower word)]	32768	16384	8192	4096	2048	1024	512	256	128	64	32	16	8	4	2	-
Rea	n+5 Data 2 [Speed (Upper word)]	L	ŀ	I	L	ŀ	I	I	Η	-	ļ	I	-	524288	262144	131072	65536
	n+6 Data 3 [Axis No.]	Ι	Ι	I	Ι	Ι	I	I	I	I	Ι	I	I	I	4	2	-

14) Reading of individual zone boundary on positive side [1043h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		4															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
positive side	n+2 Demand Command [1043h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	0	1
undary on	n+3 Data 0 [Position No.]	I	I	I	I	Ι	I	I	I	128	64	32	16	8	4	2	1
al zone bo	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
of individu:	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reading	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	1

1 word=16 bit

PLC Input (Address n is the input and output top address for MCON Gateway Unit.)

		◀															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
ve side	n+2 Response Command [1043h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	1	0
on positi	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	Ļ
zone boundary	n+4 Data 1 [Individual zone boundary on positive side (Lower word)]																
ding of individual	n+5 Data 2 [Individual zone boundary on positive side (Upper word)]																
Rea	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	-

15) Reading of individual zone boundary on negative side [1044h]

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		◀															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
negative side	n+2 Demand Command [1044h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	1	0
undary on	n+3 Data 0 [Position No.]	I	I	I	I	Ι	I	I	I	128	64	32	16	8	4	2	-
al zone bo	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
of individua	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reading c	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	l	I	4	2	-

1 word=16 bit

PLC Input (Address n is the input and output top address for MCON Gateway Unit.)

		◀															
	Bit	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
ive side	n+2 Response Command [1044h]	0	0	0	1	0	0	0	0	0	1	0	0	0	0	1	0
n negat	n+3 Data 0 [Position No.]	I	I	I	I	I	I	Ι	I	128	64	32	16	8	4	2	-
zone boundary o	n+4 Data 1 [Individual zone boundary on negative side (Lower word)]																
ling of individual	n+5 Data 2 [Individual zone boundary on negative side (Upper word)]																
Reac	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	-

MCON =

16) Reading of Acceleration [1045h]
PLC Output (Address n is the input and output top address for MCON Gateway Unit.)

		◀															
	Bit																-
	Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
u	n+2 Demand Command [1045h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	0	1
celeratic	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	1
ng of Ac	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Readir	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	Ι	4	2	-

1 word=16 bit

								1 wo	rd=16	bit							
	~							0									
	Address Bit	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Ę	n+2 Response Command [1045h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	0	1
celeratio	n+3 Data 0 [Position No.]	I	I	I	I	Ι	I	Ι	I	128	64	32	16	8	4	2	-
ng of Acc	n+4 Data 1 [Acceleration]	I	I	I	I	Ι	I	I	256	128	64	32	16	8	4	2	-
Readir	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	Ι	I	Ι	I	I	I	Ι	Ι	I	Ι	I	4	2	1

17) Reading of Deceleration [1046h] PLC Output (Address n is the input and output top address for MCON Gateway Unit.)

		•															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Ľ	n+2 Demand Command [1046h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	1	0
celeratio	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	Ļ
ig of Dec	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Readin	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	Ι	I	I	I	I	I	I	4	2	1

1 word=16 bit

								1 wo	rd=16	bit							
		-															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
u	n+2 Response Command [1046h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	1	0
celeratio	n+3 Data 0 [Position No.]	Ι	Ι	I	Ι	Γ	I	Ι	I	128	64	32	16	8	4	2	-
ig of Dec	n+4 Data 1 [Deceleration]	Ι	Ι	I	Ι	Ι	I	Ι	256	128	64	32	16	8	4	2	-
Readir	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	Ι	Ι	I	Ι	Ι	I	I	I	Ι	Ι	I	Ι	I	4	2	-

. d-16 hit

18) Reading of Current Limit at Pressing [1047h]
PLC Output (Address n is the input and output top address for MCON Gateway Unit.)

		◀															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
ressing	n+2 Demand Command [1047h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	1	1
imit at P	n+3 Data 0 [Position No.]	I	I	I	I	I	I	I	I	128	64	32	16	8	4	2	١
urrent L	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ling of C	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reac	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	-

1 word=16 bit

								1 wo	rd=16	bit							
	-	•															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
essing	n+2 Response Command [1047h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	1	1
nit at Pro	n+3 Data 0 [Position No.]	Ι	Ι	Ι	Ι	Γ	I	Ι	-	128	64	32	16	8	4	2	١
Current Lir	n+4 Data 1 [Current Limit at Pressing]	-	-	-	-	-	Ι	-	-	128	64	32	16	8	4	2	٦
iding of	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Rea	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	Ι	4	2	1

19) Reading of load current threshold [1048h]

MCON =

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If the writing is finished in normal condition, the same content as the demand command is returned to the response command. If an error is generated, an error response is returned. [Refer to this Section 22).]

		◀															──►
	Bit	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
eshold	n+2 Demand Command [1048h]	0	0	0	1	0	0	0	0	0	0	0	0	0	1	1	1
rent thre	n+3 Data 0 [Position No.]	I	I	I	I	I	I	Ι	I	128	64	32	16	8	4	2	-
load cui	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ading of	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Rea	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	ļ	I	4	2	-

1 word=16 bit

PLC Input (Address n is the input and output top address for MCON Gateway Unit.)

		•															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
shold	n+2 Response Command [1048h]	0	0	0	1	0	0	0	0	0	1	0	0	0	1	1	1
ent threa	n+3 Data 0 [Position No.]	I	I	I	I	Ι	I	Ι	I	128	64	32	16	8	4	2	-
of load curre	n+4 Data 1 [Load current threshold]	I	I	I	-	Ι	I	Ι	-	128	64	32	16	8	4	2	1
eading o	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Re	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	-

20) Reading of Alarm-issued Axis Pattern [4000h] PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If this command is sent, the response command updates with the latest information until the demand command clear is sent.

								1 100		DIL							
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
Pattern	n+2 Demand Command [4000h]	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ued Axis	n+3 Data 0 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
arm-issu	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ing of Al	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Read	n+6 Data 3 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

1 word=16 bit

PLC Input (Address n is the input and output top address for MCON Gateway Unit.)

		◀															
	<																-
	Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
ttern	n+2 Response Command [4000h]	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Axis Pat	n+3 Data 0 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
of Alarm-issued	n+4 Data 1 [Alarm-issued Axis Pattern] 1: Alarm 2: Normal	I	-	I	I	I	I	-	I	Status of 8th Axis	Status of 7th Axis	Status of 6th Axis	Status of 5th Axis	Status of 4th Axis	Status of 3rd Axis	Status of 2nd Axis	Status of 1st Axis
eading c	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
£	n+6 Data 3 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

1 word=16 bit

3.4 Field Network Type Address Map

21) Reading of Alarm Code [4001h]

MCON =

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) Note If this command is sent, the response command updates with the latest information until the demand command clear is sent.

		•															
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
e	n+2 Demand Command [4001h]	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	1
Irm Cod	n+3 Data 0 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ng of Ala	n+4 Data 1 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Readir	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	I	I	I	I	I	I	I	I	I	I	4	2	-

1 word=16 bit

PLC Input (Address n is the input and output top address for MCON Gateway Unit.)

		4						1 000	iu-10	DIL							
	Bit Address	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
٥	n+2 Response Command [4001h]	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	1
rm Cod	n+3 Data 0 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ng of Ala	n+4 Data 1 [Alarm Code]																
Readir	n+5 Data 2 [0]	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	n+6 Data 3 [Axis No.]	I	I	I	Ι	Ι	I	I	Ι	Ι	Ι	I	Ι	I	4	2	٢

22) Error Response Command

PLC Output (Address n is the input and output top address for MCON Gateway Unit.) In the case that the command did not complete in normal condition, this error response command is returned.

		◀															
	Bit	1.45	644	1.40	1.40		1.40	1.0	h 0	L 7	1.0		L 4	1.0	L O		1.0
	Address	D15	D14	D13	D12	DII	D10	69	D8	D7	D6	D5	D4	D3	D2	DI	DU
	n+2																
	Demand	1		Th	e value	es are	those	with th	e bit 1	5 of th	e dem	and co	mmar	nd code	e being	j 1.	
	Command																
q	n+3																
an	Data 0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
nm	[Undefined]																
Sor	n+4	0101 ₁	: Inco	rrect A	xis Nu	mber											
6	Data 1	0102	: Inco	rrect P	ositior	Num	ber										
JS	[Error Detail]	0103	: Inco	rrect C	comma	nd											
0		0201	: Com	munic	ation E	Error											
esp		0202	Cont	troller	Execut	ion Im	possib	ole									
Ř	n+5	0-0-1															
ror	Data 2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Е	[] Indefined]	-	-	-	-	-	-	-		-	-	-	-	-	-	-	
	n+6																
	Data 3																
	Data J		1		1			1			1	1			1		1
	[Underined]	1															

3.5 Input and Output Signal Process for Field Network

(1) I/O Signal Timings

When any of the control signal is turned ON to perform the operation of the robot cylinder using the PLC's sequence program, the response (status) is returned to the PLC. The maximum response time is expressed using the following formula. The value is constant regardless the number of composition axes.

Max. response time (ms.) = Yt + Xt +(3 × Mt) + Command process time (operation time, etc.)

- Yt : Master Station \rightarrow Slave Transmission Delay Time Xt : Slave \rightarrow Master Station Transmission Delay Time Field Network Transmission Delay Time
- Mt = MCON internal communication sending time (Ttx) + MCON internal communication receiving time (Trx)

Refer to the instruction manual of the mounted PLC for the master station \rightarrow slave transfer delay time (Yt) and the slave \rightarrow master station transfer delay time (Xt).



- (data being processed at once for eight axes)
- * When monitoring not conducted in AUTO

(2) Command Sending and Receiving Timing (Reading and Writing of Position Data and Reading of Alarm Axis)

By writing and reading the specified commands to the area of 5-word next to Gateway control/status area, reading and writing of the position data and reading of alarm axis can be conducted.

Gateway executes the demand command ever time the control/status data exchange finishes for all the axes. [Refer to Section 3.4.11 About Command.]

- Step
 - 1) PLC confirms the area of response command is 0.
 - 2) PLC sets the necessary demand commands and data to the indicated area and send them.
 - 3) Gateway detects that the area of the demand command has become other than 0, and rewrites the appropriate axis data if it is the writing command, and reads the requirement data from the appropriate axis if reading command.
 - 4) Gateway output the response result to PLC once the command is executed.
 - 5) Once PLC has confirmed the response result, clear the area for the demand command to 0.
 - 6) Gateway clears the response command area to 0 and waits for the next command after it detects the demand command is cleared.
 - The procedures from 1) to 6) are repeated when continuously used.



3.6 Power Supply

Follow the steps below to turn ON the power to the controller.

- 1) Control power and the drive (24V DC).
- 2) Cancel the emergency stop condition or make the motor drive power supply available to turn ON.
- If using the servo-on signal, input the signal from the host side. (Utilize such feature as Driver Shutdown Release Delay Time [refer to 3.9.3 3) GW Parameter 3] to shift the timing to turn the servo on so the occurrence of in-rush current can be dispersed.)
- 4) Input the home return signai (HOME) from the host side.



- Note 1 The servo turns on when SON Signal gets input if Parameter No. 21 Servo-on Input is turned "Valid".
- Note 2 Input the movement (Home return) command after having a delay time of 1.6sec or more for the magnetic pole phase detection of the motor at the first servo-on input after the power is turned ON. In the second time or later, make the delay time of 60ms or more.

/ Warning:	Executing a servo ON when the actuator is position very close to a mechanical
<u> </u>	end may cause the magnetic pole phase detection operation to malfunction and
	reporting of the magnetic pole unconfirmed or excitation detection errors.
	Always move the actuator physical position away from the mechanical end before
	executing the servo ON command.

The timing to turn the servo on can be shifted in Driver Shutdown Release Delay Time [Refer to 3.9.3 3) GW Parameter 3] in the gateway parameter setting tool.



• Driver Shutdown Release Delay Time

It is used in purpose to scatter the in-rush current when the power is supplied to multiple controllers from one power source.

Utilize Driver Shutdown Release Delay Time [refer to 3.9.3 3) GW Parameter 3] in the gateway parameter setting tool to shift the timing to turn the servo on so the occurrence of in-rush current can be dispersed.

Utilize Driver Shutdown Release Delay Time [refer to 3.9.3 3) GW Parameter 3] to shift the timing to turn the servo ON so the occurrence of in-rush current can be dispersed.

ΜοοΝ

3.7 Control and Functions of Input and Output Signals of Modes Other than Remote I/O Mode

3.7.1 Input and Output Signal Functions

Input and output signals are prepared for each axis number. The applicable bit is "1" when the signal is ON and "0" when it is OFF.

(1) Controller ready (CRDY) PLC Input Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	0	0	0	0	×	0

Regardless of the alarm or servo conditions, when the controller initialization is completed normally after the power injection and the controller can control the system, it is turned ON. Even in the alarm condition, when the controller can control the system, it is turned ON.

(2) Emergency stop (EMGS) PLC Input Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	0	0	0	0	0	0

When the controller is stopped in an emergency (motor driving power is cut off), it is turned ON. When the emergency stop status is cleared, it is turned OFF.

Also, ALM* in the driver status LEDs flashes. [Refer to Name and Function of Each Part 7)] Have an appropriate safety treatment such as interlock with this signal for the host controller.

(Note) It is not an emergency stop output due to an alarm generation of the controller.

(3) Alarm (ALM) PLC Input Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	0	0	0	0	0

This is a signal that is OFF in normal condition and turns ON when an alarm of operation cancelled level ^(Note 1) or higher is generated. This signal turns OFF once the reset (RES) signal is turned oON while an alarm of operation cancelled level is being generated. (In the case of the alarm with the cold start level, re-injection of the power is required.) Also, ALM* in the driver status LEDs flashes. [Refer to Name and Function of Each Part 7)] *Note 1* Check the 9.3 Gateway Alarm and 9.4 Driver Alarm for details of alarms.

(4) Reset (RES) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	0	0	0	0	0	0

The reset signal RES possesses two functions, one is an alarm reset while an alarm is being generated, and the other is to cancel the operation while in a pause.

- 1) Once this signal is turned ON while an alarm of operation cancelled level is being generated, the alarm is cancelled. (In the case of the alarm with the cold start level, re-injection of the power is required.) Confirm the cause of the alarm and remove it before conducting a reset of the alarm. Having the alarm reset repeatedly without removing the cause of the alarm to restart the operation may cause a critical malfunction such as motor burn-down.
- 2) When this signal is turned ON from OFF condition during the pause condition, the reminder of the planned movement left can be cancelled and the remained operation can be deleted.
- (5) Servo ON command (SON) Servo ON status (SV)



i compationing complete (i cital)							
Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5	
O: Equipped × : Not equipped	0	0	0	0	0	0	

1) Servo ON command SON is the signal making the servo motor of the actuator operable.

- 2) Once the Servo ON is executed and the operation comes available. Servo ON status signal SV starts turned ON. The positioning complete signal PEND turns ON at the same time. Also, the axis driver status LEDs (SYS*) on the front panel corresponding for the axis No. turns ON in green. [Refer to Name and Function of Each Part 7) driver status LEDs]
- 3) With the power being supplied, then controller cannot be operated while the SV signal remains OFF. If SON Signal is turned OFF during the actuator operation, the actuator decelerates and stops with the emergency stop torgue, servo turns OFF, and the motor goes into the free-run condition.

For the actuators equipped with a brake, the brake gets activated.



Note 1 PEND would not turn ON in the pause condition.

(6)	Home return (HOME)			PLC Output Signal						
	Home return completion (HEND)			PLC Input Signal						
	Moving (MOVE)			PLC Input Signal						
	Positioning	complete (F	PEND)	PLC Input Si	gnal					
	Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5			
	O: Equipped × : Not equipped	0	0	0	0	0	0			

The HOME signal is intended for home return.

The HOME signal is caught at the rising edge (ON edge) to start the home return. At completion of the home return, home return completion signal HEND is turned ON. Turn OFF HOME Signal after HEND turns ON. Once the home return completion signal HEND turns ON, it keeps ON even the actuator gets off the home position. (HEND turns OFF when the home position gets lost and uncertain.) Even HEND is ON, home-return operation should be performed again by turning HOME Signal ON. HEND during the home-return operation turns OFF, and turns back ON when the home-return operation is completed.

Also, during the home-return operation, positioning completion signal PEND and moving signal MOVE are set to OFF and ON, respectively.



▲ Caution: If an actuator of Incremental Type is connected, and in Position * Mode and Simple Direct Mode, when the positioning command is issued without performing the home-return operation after the power is turned ON, the positioning can be performed once only after the automatic home-return operation is executed. Exercise caution that <u>in the derect indication mode</u>, issuing a positioning command to a given position following the power ON, without performing a home return first, <u>will generate an alarm "Error Code 83: ALARM HOME ABS (absolute position move command when home return is not yet completed)" (operation-reset alarm).</u>



[Operation of Slider Type/Rod Type Actuator]



1) With the HOME signal being ON, the actuator moves toward the mechanical end at the home return speed.

The speed for most of the actuators is 20mm/s, however, for some actuators it is less than 20mm/s.

2) The actuator is turned at the mechanical end and stopped at the home position. The movement amount in this process follows the setting in Parameter No. 22 "Home return offset level".

Caution: In the home reverse specification, the actuator moves in the reverse direction. Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

[Operation of Rotary Actuator]

(1) 330° Rotation Specification



- 1) By HOME Signal being ON, the rotary part turns in CCW (counterclockwise) from the view of load side. The velocity is either 20deg/s.
- 2) The actuator is turned at the mechanical stopper and stopped at the home position. The amount of movement at this time is that set in Parameter No.22 "Home Return Offset Level".

Caution: Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

(2) Multi-Rotation Type



- 1) Once the home-return operation is started, the rotary part turns in CCW (counterclockwise) from the view of the load side. The speed is either 20deg/s.
- 2) Home sensor turns ON.
- 3) Starts reversed rotation.
- 4) Goes back to a point exceeded the home sensor detection range, and confirms the home sensor is turned OFF.
- 5) Starts reversed rotation.
- 6) Confirms the home sensor gets turned on again.
- 7) Goes to a point exceeded the home sensor detection range on the opposite side of the home position, and confirms the home sensor is turned OFF.
- 8) Starts reversed rotation.
- 9) Confirms the home sensor turns ON.
- 10) Goes to a point exceeded the home sensor detection range on the home position side, and confirms the home sensor is turned OFF.
- 11) Based on the result gained from 6), 7), 9) and 10), the center of the home sensor detection range is calculated.
- 12) The actuator moves in a certain amount for each actuator from the position of 11) and stops at the home position.

Caution: The direction to rotate is the other way for the reversed rotation type. Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

[For Gripper]



- 1) The actuator moves toward the mechanical end (to end side) at the home return speed (20mm/s).
- 2) The actuator is turned at the mechanical end and stopped at the home position. The amount of movement at this time is that set in Parameter No.22 "Home Return Offset Level" after Z-phase is detected.

Caution: Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

(7) Positioning start (CSTR)	PLC Output Signal	

Moving (MOVE) Positioning complete (PEND)			C Input Sigr	nal		
Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	0	0	0	0	0

This signal is processed at the startup (ON edge) and the positioning is performed to the target position with the specified position No. or set using the PLC's target position register.

- 1) Once the start signal CSTR is turned ON, the actuator starts to accelerate following the data in the specified position table to perform positioning at the target position.
- 2) Once the operation starts, the positioning complete signal PEND turns OFF. Turn OFF CSTR Signal. If CSTR Signal is not turned OFF, output of complete position number cannot be performed and the positioning complete signal would not turn ON when the positioning is complete.
- 3) Once the positioning is complete, the number of positioning complete position is output in the binary data by Complete Position No. PM1 to PM**, and the positioning complete signal PEND is turned ON at the same time.
- The moving signal MOVE turns ON at the same time as the operation starts, and turns 4) OFF once the positioning complete signal PEND turns ON or the movement command output completes.
- The positioning complete signal PEND turns ON once the remaining movement gets 5) into the range of the positioning band. PEND Signal will be kept ON once it is turned ON unless the start signal CSTR is turned back ON, servo is turned OFF (Note 1) or the actuator is out of the positioning band width range (Note 1).
 - Note 1 It can be switched over with Parameter No. 39 [Positioning complete signal output system].



MOVE turns ON at the same time as PEND turns OFF, and turns OFF once the Note 2 command from a controller to the motor is finished. Therefore, when the positioning band setting is wide, the signal may turn OFF even in the actuator operation, and may turn OFF prior to PEND if the positioning band setting is narrow.

M	CON		
1			
	Caution:	When the servo-motor is turned OFF or stopped in an emergency while the actuator is stopped at the target position, the PEND signal is turned OFF temporarily.	
		Then, when the servo-motor is turned ON and the actuator is within the positioning width, the PEND signal is turned ON again.	
		When the positioning is completed with the CSTR signal turned ON, the	
		<u>PEND signal is not turned ON.</u>	
(8) Pause (STP) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	0	0	0	0	0

When this signal is turned ON, the actuator movement is decelerated and stopped. When it is turned OFF, the actuator movement is restarted.

The acceleration in the operation restart or the deceleration in stopping operation, is expressed as the value for the acceleration/deceleration for the position No. set using the specified position No. resister in the Position* Mode and Simplified Direct Value Mode, and as the value set in the acceleration/deceleration register in the Derect indication mode.

PLC Input Signal (9) Zone 1 (ZONE1) PLC Input Signal Zone 2 (ZONE2) Position Zone (PZONE) PLC Input Signal Positioner 1 Direct numeric Operation Simple Direct Positioner 2 Positioner 3 Positioner 5 specification Mode O: Equipped \triangle (No PZONE) (No PZONE)0 (Only for 0 0 : Not equipped PZONE1)



This is a function enables to turn a signal on while the actuator is passing a certain position (in the zone range) or during a stop, in which there are two types.

Zone signal (ZONE1, ZONE2)···· Turn the output on at a position set in the parameter.
 Position zone signal (PZONE)···· Turn the output on at a position set in the position

table.

The roles of a sensor, such as the judgment of complete position at pressing complete, continuous operation range setting for the pitch feed or operation interlock of other devices in the setting range, can be made available.

(1) Zone signal (ZONE1, ZONE2)

Set the zone range to the parameter.

1) ZONE1: Parameter No.1 (Zone boundary 1+), Parameter No.2 (Zone boundary 1-)

2) ZONE2: Parameter No.23 (Zone boundary 2+), Parameter No.24 (Zone boundary 2-)

The zone signal is kept effective also during the emergency stop unless the memory of the origin is lost due to alarm.

(2) Position zone signal (PZONE)

No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	0.00	250.00	0.20	0.20	0	0	0.10	50.00	30.00	0	0	0	0
2	100.00	250.00	0.20	0.20	0	0	0.10	70.00	60.00	0	0	0	0
3	50.00	250.00	0.20	0.20	50	0	20.00	60.00	65.00	0	0	0	0
	<u>3 50.00 250.00 0.20 0.20 50 0 20.00 60.00 65.00 0 0 0 0 0</u>												

Set the zone range to the position table.

This set value becomes valid while the position number set in the zone range is executed. It is kept effective also during the emergency stop unless the actuator is operated or the memory of the origin is lost due to alarm.

(3) Output Ranges of Set Values and Signals

The zone output range varies depending on the difference between the value set for the plus side of the zone boundary and that for the minus side.

- Value set for positive side > value set for negative side: Output signal turn ON in the range from the value on negative side to that on positive side, and turns OFF out of the range
- Value set for positive side < value set for negative side: Output signal turn OFF in the range from the value on positive side to that on negative side, and turns ON out of the range



Caution: Since this signal becomes effective after the coordinate system is established after the home return is completed, it would not be output just with the power turned ON.

(10) + Jog (JOG+) PLC Output Signal

- Jog (JOG-) PLC Output Signal

0 (,					
Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	0	0	0	0	×	0

This signal is the command for the jog operation startup or inching operation startup. If a + command is issued, the actuator will operate in the direction opposite home. When a - command is issued, the actuator will operate in the direction of home.

1) Jog operation

Jog operation can be performed when the jog/inch switching (JISL) signal is OFF. While the "JOG+" is turned ON, the movement direction is to the opposite of the home and when it is turned OFF, the actuator is decelerated and stopped.

While the "JOG-" is ON, the actuator will operate in the direction of home and when it is turned OFF, it is decelerated to a stop.

The operation is performed based on the set values of the following parameters.

• The speed is based on the parameter value ON/OFF specified using the Jog Speed/Inching Distance Change-Over (JVEL) signal.

If the JVEL signal is OFF, the actuator operates according to parameter No.26, "PIO jog speed".

If the JVEL signal is ON, the actuator operates according to parameter No.47, "PIO jog speed 2".

However, it will operate in the speed described below in the direct indication mode when JVEL Signal is on.

When Command Speed Setting = 0 : Operation will be made with a value in Parameter No. 47 "PIO JOG Speed 2" in MCON.

When Command Speed Setting ≠ 0 : Operation will be made with the setting value in Command Speed.

- The acceleration/deceleration conforms to the rate acceleration/deceleration (the specific value varies depending on the actuator).
- When both the JOG+ and JOG- signals are turned ON, the actuator is decelerated and stopped.

2) Inching (incremental) operation

The inching operation is available while the JISL signal is turned ON.

One time of ON input gives the actuator a constant amount of movement of the inching distance set in the parameter.

When the JOG+ is turned ON, the movement is to the opposite of the home and when the JOG- is turned ON, the movement is to the home.

The operation is performed based on the set values.

- The speed conforms to the value of the parameter ON/OFF specified by the JVEL signal. If the JVEL signal is OFF, the actuator operates according to parameter No.26, "PIO jog speed". If the JVEL signal is ON, the actuator operates according to parameter No.47, "PIO jog speed 2".
- The travel conforms to the value of the parameter ON/OFF specified by the JVEL signal. If the JVEL signal is OFF, the actuator operates according to parameter No.48, "PIO inch distance". If the JVEL signal is ON, the actuator operates according to parameter No.49, "PIO inch distance 2".
- The acceleration/deceleration conforms to the rate acceleration/deceleration (the specific value varies depending on the actuator).

During the normal operation, even when the "+" Jog Signal or "-" Jog Signal is turned ON, the normal operation is continued. (The Jog signal is ignored.)

In the pause condition, even when the "+" Jog Signal or "-" Jog Signal is turned ON, the actuator is not moved.

(Note) Because the software stroke limit is disabled before the homing operation, the actuator might run against the mechanism end. Take the greatest care.

(11) Jog-speed/inch-distance switching (JVEL) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	0	0	0	×	0

It is a signal to switch the parameters to indicate the speed or inching (incremental) distance when in JOG operation and inching operation. Table below shows the relations.

JVEL signal	Jog operation : JISL=OFF	Inch operation : JISL=ON
OFF	Parameter No.26, "Jog speed"	Parameter No.26, "Jog speed" Parameter No.48, "Inch distance"
ON	Parameter No.47, "Jog speed 2" (Note 1)	Parameter No.47, "Jog speed 2" Parameter No.49, "Inch distance 2"

Note 1 It will operate in the indicated following speed in the direct indication mode. When Command Speed Setting = 0 : Operation will be made with a value in

Parameter No. 47 "PIO JOG Speed 2" in MCON.

When Command Speed Setting ≠ 0 : Operation will be made with the setting value in Command Speed.

(12) Jog/inching switching (JISL) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	0	0	0	0	×	0

This signal changes over the jog operation and the inching (incremental) operation. JISL = OFF : Jog operation

JISL = ON : Inching operation

When the JISL signal is turned ON (for inching operation) during the jog operation, the actuator is decelerated and performs the inching operation.

When the JISL signal is turned OFF (jog) while the actuator is moving by inching, the actuator will complete the movement and then switch to the jog function.

		Jog operation	Inching operation		
	JISL	OFF	ON		
	Speed	Parameter No.26, "Jog speed"	Parameter No.26, "Jog speed"		
JVEL	Movement distance	_	Parameter No.48, "Inch distance"		
- 011	Acceleration/ deceleration	Rated value (The specific value varies depending on the actuator.)	Rated value (The specific value varies depending on the actuator.)		
Speed		Parameter No.47, "Jog speed 2" (Note 2)	Parameter No.47, "Jog speed 2"		
JVEL = ON	Movement distance	_	Parameter No.49, "Inch distance 2"		
	Acceleration/ deceleration	Rated value (The specific value varies depending on the actuator.)	Rated value (The specific value varies depending on the actuator.)		
Operation		When the JOG +/JOG – signal is ON.	Upon detection of the leading (ON edge) of the JOG +/JOG - signal.		

Note 1 It will operate in the indicated following speed in the direct indication mode. When Command Speed Setting = 0 : Operation will be made with a value in Parameter No. 47 "PIO JOG Speed 2" in MCON.

When Command Speed Setting $\neq 0$: Operation will be made with the setting value in Command Speed.



(13) Teaching mode command (MODE) PLC Output Signal

Teaching mode signal (MODES)			PLC Input	Signal		
Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	×	×	0	×	×

When the MODE signal is turned ON, the normal operation mode is changed to the teaching mode.

When the mode is changed to the teaching mode, the MODES Signal is turned ON. After confirming that the MODES signal is turned ON on the PLC side, start the teaching operation.

(Note) In order to change the normal operation mode to the teaching mode, the following conditions are required.

- The actuator operation (motor) is stopped.
- The + JOG (JOG+) signal and JOG (JOG-) signal are turned OFF.
- The Position Data Import Command (PWRT) Signal and Positioning Start (CSTR) Signal are turned OFF.
- (Note) When the PWRT signal is not turned OFF, the mode is not returned to the normal operation mode.

(14) Position data import command (PWRT) PLC Output Signal

Position data import complete (WEND) PLC Input Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	×	×	0	×	×

The PWRT signal is available when the teaching mode signal (MODES) is turned ON. Turn ON the PWRT signal (Note1), Then, the current position data will be written in the position data box for the position No. set using the PLC's specified Position No. channel. (Note2) When the data writing is completed, the WEND signal is turned ON.

After the WEND signal is turned ON, turn OFF the PWRT signal in the host machine. When the PWRT signal is turned OFF before the WEND signal is turned ON, the WEND signal is not turned ON.

When the PWRT signal is turned OFF the WEND signal is also turned OFF.

- Note1 Turn it ON for 20ms or more. If the time is shorter than 20ms, the writing is not completed.
- Note2 When the data items except for the position have not been defined, the parameter initial values are written. [Refer to Chapter 8 Parameter]





(15) Brake release (BKRL) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	0	0	0	0	0	0

The brake can be released while BKRL signal is turned ON. For an actuator equipped with a brake, the brake can be controlled automatically with the ON/OFF of the servo, however, it may require to release the brake in such cases as when installing to the system or conducting Direct Teach^{*1}, when the slider or rod needs to be moved manually with hand. This operation also can be performed by supplying 24V to the brake power terminal on the external brake input connector.

*1 Direct Teaching: It is an operation to move the slider or rod manually with hand to read the coordinate to the position table.



(16) Push-motion specification (PUSH) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	×	×	0	×	×	×

When the movement command signal is output after this signal is turned ON, the pressing operation is performed.

When this signal is set to "OFF", the normal positioning operation is performed. The same pressing type as CON related models such as PCON Controller or the same pressing type as SEP related models such as PSEP can be selected for the pressing type in Parameter No.181. Refer to 8.2 [73] for how to make selection.

[Pressing Operation CON Method]

After reaching the target position (Note 1) from the current position, the actuator moves with the pressing speed for the distance set as the pressing band width.

The positioning complete signal (PEND) turns ON if the work piece hits and pressing is judged as completed while in the pressing operation.

Note 1 In Direct Indication Mode, it is the value input in the target position register.



[Pressing Operation SEP Method]

The pressing operation is performed with the start position set at the point in front of the target position (Note 1) for the width of the positioning width (for Direct Indication Mode). The positioning complete signal (PEND) turns ON if the work piece hits and pressing is judged as completed while in the pressing operation.

Note 1 In Direct Indication Mode, it is the value input in the target position register. (Note) Pulling operation cannot be performed.





(17) Push direction specification (DIR) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	×	×	0	×	×	×

This signal specifies the pressing direction.

When this signal is turned OFF, the pressing operation is performed to the direction of the value determined by adding the positioning width to the target position.

Pressing operation starts towards the position where the positioning width is added to the target position if this signal is turned ON.

When the normal positioning operatio, this signal is ineffective.

Speed Movement distance Positioning width Positioning width DIR = OFF Target position DIR=ON

(18) Pressing and a miss (PSFL) PLC Input Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	0	0	0	0	0

In the case that the pressing operation was performed, and the actuator moved the travel distance set in the controller position table positioning width or set using the PLC's positioning width register, but it was not pushed against the work, this signal is turned ON.

(19) Command complete signal (MEND) PLC Input Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O: Equipped × : Not equipped	0	0	0	0	×	0

This signal turns ON when the movement to the target position indicated by the host system is complete.

Even though the control is about the same as PEND, this signal turns ON even if pressing is missed.

It is OFF when servo is OFF or emergency stop is OFF. Also, if CSTR Signal is ON, this signal would not turn ON.



(20) Incremental command (INC) PLC Output Signal

Operation Mode	Positioner 1	Simple Direct	Direct numeric specification	Positioner 2	Positioner 3	Positioner 5
O : Equipped × : Not equipped	×	×	0	×	×	×

When the movement command is issued while this signal is turned ON, the actuator is moved to the position expressed as the value input in the PLC's target position register based on the current position. (elative movement)

When this signal is turned OFF, the actuator is moved to the position expressed as the value set in the PLC target position register.

(21) Light error alarm (ALML) PLC Input Signal

This signal turns ON when an overload warning or message level alarm is generated. [Refer to 8.2 [64] Light Malfunction Alarm Output Select]

For the message level alarm, refer to the section for the Chapter 9 Troubleshooting.

3.7.2 Operation for Positioner 1/Simple Direct Modes

If the position data is written to the target position register (for Simple Direct Mode) or the target position is set in the position data of MCON (for Positioner 1 Mode), the operation shall be made with other information, such as the speed, acceleration/deceleration, positioning width, pressing force, etc., set to the position data.

• Example of operation (Normal Positioning Operation with Simple Direct Mode)

- (Preparation) Set the axis numbers to be used in Simple Direct Mode with Gateway Parameter Setting Tool. [Refer to 3.2.1 Oeration Mode Setting.]
 - Set the position data items (speed, acceleration/deceleration, pressing width, etc) except for the target position item, in the position table.
- 1) Set the target position data in the target position register.
- 2) Set the position No. where the speed and acceleration/deceleration, etc., have been set, in the setup position No. register.
- In the condition where the positioning completion (PEND) signal is turned ON or under movement signal (MOVE) is turned OFF, turn ON the positioning command (CSTR) signal.

The data items set in Steps 1) and 2) are read in the controller at the startup (ON edge) of the CSTR signal.

- 4) After the CSTR signal is turned ON, the PEND signal is turned OFF after tpdf.
- 5) After confirming that the PEND signal is turned OFF or MOVE signal is turned ON, turn OFF the CSTR signal. Do not change the value in the target position register until the CSTR signal is turned OFF.
- 6) At the same time when the PEND signal is turned OFF, the MOVE signal is turned ON.
- 7) The current position data is continuously updated. When the remaining travel distance becomes within the range of the positioning width set in the position data, and the CSTR signal is turned OFF, the PEND signal is turned ON. Then, the completed position No. is output to the completed position No. register. Accordingly, for the read of the completed position No. register when the positioning is completed, confirm it some time (Remaining Travel Distance Movement Time) after the PEND signal is turned ON.

The current position data might be changed slightly even when the system is stopped.

- 8) MOVE signal turns OFF at the same time as or within 10ms after PEND signal turns ON.
- 9) The target position data can be changed during the actuator movement. In order to change the target position, change the target position data and turn ON the CSTR signal after the time longer than the PLC scanning time has passed. Change the value for the CSTR signal after the time longer than the PLC scanning time has passed.
- Example of operation (Pressing operation)

For the pressing operation, set the current limit to the pressing force box and pressing width to the pressing width box in the position data at the stage of (preparation). By conducting a positioning operation towards the set position number, the actuator performs a pressing operation.





3.7.3 Operation for Direct Indication Mode

It is operated with the data set in the PLC's target position register, positioning width register, setup speed register, acceleration/deceleration register and pressing current limit setup register.

• Example of operation (Pressing operation)

(Preparation) Set the axis numbers to be used in Direct Indication Mode with Gateway Parameter Setting Tool. [Refer to 3.2.1 Oeration Mode Setting.]

- 1) Set the target position data in the target position register.
- 2) Set the positioning width (pressing width) data in the positioning width register.
- 3) Set the speed data to the speed register.
- 4) Set the acceleration/deceleration data to the acceleration/deceleration register.
- 5) Set the pressing current limit data in the pressing current limit value register.
- 6) Turn ON the pressing setup (PUSH) signal.
- 7) Specify the pressing direction using the pressing direction setup (DIR) signal.
- 8) In the condition where the positioning completion (PEND) signal is turned ON or under movement signal (MOVE) is turned OFF, turn ON the positioning start (CSTR) signal. The data items set in Steps 1) through 5) are read in the controller at the startup (ON edge) of the CSTR signal.
- 9) After the CSTR signal is turned ON, the PEND signal is turned OFF after tpdf.
- 10) After confirming that the PEND signal is turned OFF or MOVE signal is turned ON, turn OFF the CSTR signal. Do not change any value in each register until the CSTR signal has been turned OFF.
- 11) The current position data is continuously updated.
- 12) When the CSTR signal is turned OFF and the motor current reaches the current limit value set in Step 5), the PEND signal is turned ON. (Pressing complete) Even when the positioning width (pressing width) set in Step 2) is reached, in the case that the current does not reach the motor current limit value set in Step 5), the pressing and a miss (PSFL) signal is turned ON. In this case, the PEND signal is not turned ON. (Pressing and a miss)
- 13) After the PEND signal or PSFL signal is turned ON, turn OFF the PUSH signal.
- 14) MOVE signal turns OFF at the same time as or within 10ms after PEND signal turns ON.

• Example of operation (Normal positioning operation)

For the general positioning operation, set the signal in Step 6) to OFF.

When the remaining travel distance becomes within the range of the positioning width set in the position data, and the CSTR signal is turned OFF, the PEND signal is turned ON.



To turn ON TwcsON, have an interval of time more than 10ms. To turn OFF TwcsOFF, have an interval of time more than 10ms. Tdpf = Yt+6+Xt (minimum value) to Yt+6+Xt+12 (maximum value)

3.7.4 Operation for Positioner 2, Positioner 3 and Positioner 5 Modes

The operation is to be made with the target position, speed, acceleration/deceleration, positioning width and pressing force set in the position data of MCON.

• Example of operation (Positioning operation)

- (Preparation) Set the axis numbers to be used in Positioner 2, Positioner 3 or Positioner 5 Mode with Gateway Parameter Setting Tool. [Refer to 3.2.1 Oeration Mode Setting.]
 - Set the position data (target position, speed, acceleration/deceleration, etc.) to the position table.
- 1) Set the position No. where the speed and acceleration/deceleration, etc., have been set, in the setup position No. register.
- 2) In the condition where the positioning completion (PEND) signal is turned ON or under moving signal (MOVE) is turned OFF, turn ON the positioning start (CSTR) signal. The data items set in Step 1) is read in the controller at the startup (ON edge) of the CSTR signal.
- 3) After the CSTR signal is turned ON, the PEND signal is turned OFF after tpdf.
- 4) After confirming that the PEND signal is turned OFF or MOVE signal is turned ON, turn OFF the CSTR signal. Do not change the value in the target position register until the CSTR signal is turned OFF.
- 5) The current position data is continuously updated for Positioner 5 Modes.
- 6) At the same time when the PEND signal is turned OFF, the MOVE signal is turned ON.
- 7) Once the remaining movement amount of the actuator gets into the range of the positioning width set in the parameter, PEND signal turns ON if CSTR signal is OFF, and the complete position number is output to the complete position number register. Accordingly, for the read of the completed position No. register when the positioning is completed, confirm it some time (Remaining Travel Distance Movement Time) after the PEND signal is turned ON.

MOVE signal turns OFF at the same time as or within 10ms after PEND signal turns ON.

• Example of operation (Pressing operation)

For the pressing operation, set the current limit to the pressing box and pressing width to the positioning width box in the position data at the stage of (preparation). By conducting a positioning operation towards the set position number, the actuator performs a pressing operation.



To turn OFF TwcsOFF, have an interval of time more than 10ms. Tdpf = Yt+6+Xt (minimum value) to Yt+6+Xt+12 (maximum value)

MCON

3.8 Control and functions of Input and output signals of Remote I/O Mode3.8.1 Operation Supportive Signal = Patterns 0 to 2, 4 and 5 in common

[1] Emergency stop status (EMGS)

	Output
FIO Signal	*EMGS
In common for	0
all PIO patterns	U U

O: Available, x: Unavailable

- 1) The emergency stop status EMGS is turned ON when in normal condition and turned OFF when it opens between EMG+ and EMG- (emergency stop condition or disconnected) for "Emergency Stop Circuit".
- 2) The signal turns on once the emergency stop condition is cancelled and it closes between EMG+ and EMG-.

Have an appropriate safety treatment such as interlock with this signal for the host controller (PLC, etc.).

(Note) It is not an emergency stop output due to an alarm generation of the controller.

[2] Servo ON (SON, SV, PEND)

	Input	Out	utput	
FIO Signal	SON	SV	PEND	
Other than pattern 5	0	0	0	
Pattern 5	0	0	×	

O: Available, x: Unavailable

- 1) Servo ON command SON is the signal making the servo motor of the actuator operable.
- 2) If the servo-on is performed to enable operation, the servo ON status signal SV output signal is turned ON.
 - Also, the status LEDs for driver (SV) on the front panel corresponding for the axis number turns on in green. [Refer to Name for Each Parts and Their Functions 7) Status LEDs for Driver]
- 3) With the power being supplied, then controller cannot be operated while the SV signal remains OFF. If the SON signal is turned OFF under operation of the actuator, the actuator is decelerated and stopped with the emergency stop torque, the servo is turned OFF and the motor gets into the free-run condition.

For the actuators equipped with a brake, the brake gets activated.



Note1 PEND would not turn ON in the pause condition.

[3] Home return (HOME, HEND, PEND, MOVE)

	Input		Output	
PIO Signal	HOME	HEND	PEND	MOVE
Patterns 0 and 1	0	0	0	0
Patterns 2 and 4	0	0	0	×
Pattern 5	× ^(Note1)	0	×	×

O : Available, ×: Unavailable

The HOME signal is intended for home return.

The HOME signal is caught at the rising edge (ON edge) to start the home return. At completion of the home return, home return completion signal HEND is turned ON. Turn OFF HOME Signal after HEND turns ON. Once the home return completion signal HEND turns ON, it keeps ON even the actuator gets off the home position. (HEND turns OFF when the home position gets lost and uncertain.) Even HEND is ON, home-return operation should be performed again by turning HOME Signal ON. HEND turns OFF while the home-return operation is performed, and turns back ON when the home-return operation is completed.

Also, during the home-return operation, positioning completion signal PEND and moving signal MOVE are set to OFF and ON, respectively.



Note1 Pattern 5 cannot make a home return with HOME signal. Refer to 3.8.4 [1] Home Return (ST0, HEND) for how to perform a home-return operation.



[Operation of Slider Type/Rod Type Actuator]



1) With the HOME signal being ON, the actuator moves toward the mechanical end at the home return speed.

The speed for most of the actuators is 20mm/s, however, for some actuators it is less than 20mm/s.

2) The actuator is turned at the mechanical end and stopped at the home position. The movement amount in this process follows the setting in Parameter No. 22 "Home return offset level".

Caution: In the home reverse specification, the actuator moves in the reverse direction. Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

[Operation of Rotary Actuator]

(1) 330° Rotation Specification



- 1) By HOME Signal being ON, the rotary part turns in CCW (counterclockwise) from the view of load side. The velocity is either 20deg/s.
- 2) The actuator is turned at the mechanical stopper and stopped at the home position. The amount of movement at this time is that set in Parameter No.22 "Home Return Offset Level".

Caution: Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

(2) Multi-Rotation Type



- 1) Once the home-return operation is started, the rotary part turns in CCW (counterclockwise) from the view of the load side. The speed is either 20deg/s.
- 2) Home sensor turns ON.
- 3) Starts reversed rotation.
- 4) Goes back to a point exceeded the home sensor detection range, and confirms the home sensor is turned OFF.
- 5) Starts reversed rotation.
- 6) Confirms the home sensor gets turned on again.
- 7) Goes to a point exceeded the home sensor detection range on the opposite side of the home position, and confirms the home sensor is turned OFF.
- 8) Starts reversed rotation.
- 9) Confirms the home sensor turns ON.
- 10) Goes to a point exceeded the home sensor detection range on the home position side, and confirms the home sensor is turned OFF.
- 11) Based on the result gained from 6), 7), 9) and 10), the center of the home sensor detection range is calculated.
- 12) The actuator moves in a certain amount for each actuator from the position of 11) and stops at the home position.

Caution: The direction to rotate is the other way for the reversed rotation type. Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

[For Gripper]



- 1) The actuator moves toward the mechanical end (to end side) at the home return speed (20mm/s).
- 2) The actuator is turned at the mechanical end and stopped at the home position. The amount of movement at this time is that set in Parameter No.22 "Home Return Offset Level" after Z-phase is detected.

Caution: Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

[4] Zone signal and position zone signal (ZONE1, PZONE)

	Ou	tput
PIO Signal	ZONE1	PZONE
Pattern 0	0	O ^(Note2)
Pattern 1	×	O ^(Note1)
Pattern 2	×	O ^(Note1)
Pattern 4	0	O ^(Note2)
Pattern 5	0	O ^(Note2)

O : Available, ×: Unavailable

- Note1 PZONE Signal can be changed to ZONE1 Signals by the setting in Parameter No.149.
- Note2 PZONE Signal can be changed to ZONE2 Signals by the setting in Parameter No.149.



This is a function enables to turn a signal on while the actuator is passing a certain position (in the zone range) or during a stop, in which there are two types.

- 1) Zone signal (ZONE1) ······The output signal is turned ON at the position set by the proper parameter.
- 2) Position zone signal (PZONE)......The output signal is turned ON at the position set in the position table.

The feature can play a role as the sensor for judging whether the completion position is good or not at completion of pressing, setting the continuous operation zone in pitch feed or interlocking operations of other units in the setting zone.



Set the zone range to the relevant parameter.

- 1) parameter No. 1 : "Zone Boarder 1 "+" Side"
- 2) parameter No. 2 : "Zone Boarder 1 "-" Side"

The zone signal ZONE is kept effective also during the emergency stop unless the memory of the origin is lost due to alarm.



(2) Position zone signal (PZONE)

No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	0.00	250.00	0.20	0.20	0	0	0.10	50.00	30.00	0	0	0	0
2	100.00	250.00	0.20	0.20	0	0	0.10	70.00	60.00	0	0	0	0
3	50.00	250.00	0.20	0.20	50	0	20.00	60.00	65.00	0	0	0	0
	Setting of zone range												

Zone ranges should be set in the position table.

While the operation corresponding to a position number is executed, the zone range set for the position number is valid. It is kept effective also during the emergency stop unless the actuator is operated or the memory of the origin is lost due to alarm.

(3) Setting values and signal output range

The zone output range varies depending on the difference between the value set for the plus side of the zone boundary and that for the minus side.

- 1) Value set for positive side > value set for negative side: Output signal turn ON in the range from the value on negative side to that on positive side, and turns OFF out of the range
- 2) Value set for positive side < value set for negative side: Output signal turn OFF in the range from the value on positive side to that on negative side, and turns ON out of the range



[5] Alarm, alarm reset (*ALM, RES)

	Input	Output
FIO Signal	RES	*ALM
In common for all PIO patterns	0	0

O : Available, ×: Unavailable

- 1) Alarm signal *ALM is set to ON in the normal status but turned OFF at the occurrence of an alarm at a level equal to or higher than the operation release level.
- 2) Turning reset signal RES ON under occurrence of an alarm at the operation release level allows the alarm^(Note 1) to be released. The action is taken at the rising edge (ON edge).
- 3) The alarm reset should be done after the cause of the alarm is confirmed and removed. If alarm reset and restart are repeated many times without removal of the cause, a severe failure such as motor burnout may occur.

Note 1 Check the 9.3 Gateway Alarm and 9.4 Driver Alarm for details of alarms.

Caution: Reset signal RES has two features, or alarm reset under occurrence of an alarm and operation interruption (cancellation of remaining moving distance) under temporary stop. For the operation interruption under temporary stop, refer to the description of the operation in each pattern.

[6] Binary output of alarm Information (*ALM, PM1 to 8)

	Output		
FIO Signal	*ALM	PM1 to 8	
Common to Patterns 0 to 2	0	0	
Pattern 4 ^(Note 1)	0	×	
Pattern 5 ^(Note 1)	0	×	

O: Available, ×: Unavailable

Note1 Patterns 4 and 5 do not have this function.

- 1) If an alarm at a level equal to or higher than the operation release level occurs, completed position number output signals PM1 to PM8 output the alarm information in the binary code format.
- 2) The PLC can read the binary code of alarm signal *ALM as the strobe signal to refer to alarm information.

[Refer to 9.4.2 Simple Alarm Codes]

[7] Brake release (BKRL)

	Input
FIO Signal	BKRL
Pattern 0	0
Pattern 1 ^(Note 1)	×
Pattern 2, 4, 5	0

O : Available, ×: Unavailable

Note1 Pattern 1 does not have this feature

The brake can be released while BKRL signal is set to ON. If a brake is installed in the actuator, the brake is automatically controlled by servo ON/OFF. Releasing the brake may be required to move the slider and/or the rod by hand in case of installation of the actuator in the machine or direct teach^{*1}. This operation can be done by break release signal BKRL as well as the brake release switch ON the front panel of the controller.

*1 Direct teaching: This operation is intended to get coordinate values to the position by moving the slider and/or the rod by hand.

Narning:	(1)	Take sufficient care to release the brake. Doing so carelessly may cause an injury or a malfunction of actuator, work piece or other devices due to a drop of the slider or rod.
	(2)	After the brake is released, always make the brake applied again. Any operation with the brake remaining released is extremely dangerous. The slider or rod may drop to cause people to be injured and/or the actuator, the work and/or the machine to be damaged.

MCON =

3.8.2 Operation with the Position No. Input = Operations of PIO Patterns 0 to 2

It is the operation methods for PIO Patterns 0 to 2. These patterns provide normal controller operation methods in which the controller is operated by turning the start signal ON after a position No. is entered.

	Inpu	t	Output					
PIO signal	PC1 to PC**	CSTR	PM1 to PM**	PEND	MOVE			
PIO pattern 0	PC1 to 32	0	PM1 to 32	0	0			
PIO pattern 1	PC1 to 32	0	PM1 to 32	0	0			
PIO pattern 2	PC1 to 128	0	PM1 to 128	0	×			

Г <i>А</i>	$D_{2} = \frac{1}{2} \frac{1}$	OOTO		
1.1				
1.1		, 0011	, , , , , , , , , , , , , , , , , , , ,	$, \mathbf{L} \subseteq \{\mathbf{U}, \mathbf{U} \in \mathcal{U}\}$

O : Available, x: Unavailable

(Note) Operation without home return leads the operation based on the data of the specified position No. after automatichome return. If one or more problems are found, interlock by home return complete signal HEND is required.



Sample use





No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	70.00	100.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	150.00	200.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0

Control method

- First enter command position No. PC1 to PC** with binary data. Next turn start signal CSTR ON. Then the actuator starts acceleration depending on the data in the specified position table for positioning to the target position.
- 2) At operation start, positioning complete signal PEND is turned OFF. Always turn the CSTR signal OFF. Without it, the completed position number is not output and the positioning complete signal is not turned ON at the completion of positioning.
- 3) When the positioning is completed, the positioning complete position numbers are output from complete position No.PM1 to PM** with binary data and also positioning complete signal PEND is turned ON.
- 4) The moving signal MOVE turns ON at the same time as the operation starts, and turns OFF once the positioning complete signal PEND turns ON or the movement command output completes.
- 5) Positioning complete signal PEND is turned ON if the remaining moving distance enters into the positioning width. PEND Signal will be kept ON once it is turned ON unless the start signal CSTR is turned back ON, servo is turned OFF (Note 1) or the actuator is out of the positioning band width range (Note 1).

Note 1 It can be switched over with Parameter No.39.



However, since the duration of being off is short, the signal of being off may not be read depending on the PLC scanning time. In such a case, turn CSTR off with using the timer.

(3) MOVE turns ON at the same time as PEND turns OFF, and turns OFF once the command from a controller to the motor is finished. Therefore, it may turn off while the actuator is moving if the setting of positioning width is large, and may turn OFF earlier that PEND OFF the positioning width setting is small.

MCON =

Binary data

O : ON ● : OFF

PC1 PM1 0 0
PM1 0 0
• • • •
0 • 0
•
0
0
٠
0
٠
0
٠
:
0
٠
0

MCON =

[Shortcut control of rotary actuator of multi-rotation specification]

- (Note) The shortcut control gets available for setting when the index mode setting is activated. (When Rotary Axis Mode Select Parameter No. 79 is set to 1)
- (1) Set of shortcut selection The shortcut selection can be made valid/invalid by Parameter No.80 "rotation axis shortcut selection". If the shortcut selection is made valid, the actuator can be moved only in a single direction.

[Operation Examples]



For operation in the order of positions $1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 1$, the actuator is moved differently whether the shortcut selection is valid or invalid.

• When shortcut selection is invalid:



• When shortcut selection is valid:





(2) Infinite Rotation Control

Making the shortcut selection valid and moving the actuator in a specific direction continuously allows the actuator to be rotated continuously as a motor. The continuous operation can be done as described below.

[Operation Examples]

This example rotates the actuator by 2 turns and finally stops it at position No.4.



- 1) Widen the positioning widths of position No.1 to 3 so that they are located before the position at which deceleration is started.
- Positioning of position No.1 makes positioning complete signal (PEND) turned ON before deceleration is started.
 If PEND is turned ON, positioning of position No.2 is executed. Similarly, positioning is repeated in the order of position No.3 → 1 → 2 → 3 → 4. Because the normal positioning always gives position data specified last the highest priority, the actuator can be rotated continuously.
- 3) If the speeds in position No.1 to 4 are set to be the same, the actuator can be rotated at the same speed. Then the actuator is stopped at the positioning set in position No.4. The number of rotations is defined by the number of repeats of position No.1 to 3.

[2] Speed change during the movement

Sample use





The unit inserts nozzles into containers, injects liquid, and moves the nozzles upward so that they may not be contact with the liquid surfaces.

No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	150.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	0.00	50.00	0.20	0.20	0	0	100.00	0.00	0.00	0	0	0	0
3	0.00	100.00	0.20	0.20	0	0	0.10	0.00	5.00	0	0	0	0

Control method

The speed of the actuator can be changed while it moves. Positions are used by the number of speeds. The method of controlling the operation to each position is the same as that described in [1] Positioning.

The example below describes the case of 2 speeds:

- 1) In this example, the speed is changed while the actuator moves from the position of 150mm to the position of 0mm. At first, set the positioning to the target position at the first speed in position No.2. In the positioning width, set the distance from the speed change position to the target position. The value is set to 100mm in the example. Thus, for position No.2, positioning complete signal PEND is turned ON at the position before the target position by 100mm.
- 2) Set the positioning to the target position at the second speed in position No.3.
- 3) Start position No.2. Then start position No.3 successively when PEND in position No.2 is turned ON. In normal positioning, position data specified later has always a priority over position data specified earlier. Thus, the operation in position No.3 is started on the way of the operation in position No.2.

In this example, the target positions No.2 and 3 are equal with each other. They may not be the same. However, setting the target positions to be equal with each other allows the distance from the speed change position to the target position to be known easily. To increase in the number of speed change steps, add a position number and operation sequence, set the speed change position in the positioning width and operate the actuator continuously.

[3] Pitch feeding (relative movement = incremental feed)

Sample use



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	100.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	25.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	1	0	0

(Position No.2 sets pitch feed.)

- Control method
 - 1) The method of controlling pitch feed is the same as that described in [1] Positioning except the setting of the position table. Repeat the positioning of a specific position No.
 - 2) For pitch feed, the position set in the position table indicates the pitch. Set the pitch (relative moving distance = incremental moving distance) in column "Position".
 - 3) If the operation command is issued, the actuator moves from the current stop position by "Position" in the position table. To perform continuous movement, repeat the operation. The relative movement amount is calculated in "mm". Therefore, there will be no cumulative tolerable error in repeated operations.

Caution: In the pitch feed, do not perform a command with a pitch smaller than the minimum encoder resolution (lead/encoder pulse number) or that less than positioning accuracy repeatability. There would be no deviation to occur even with the command because it is an operation command to the same position as the positioning complete condition, but the positioning control cannot be performed properly.





(Position No.2 sets pressing operation.)

- Control method
 - 1) The method of controlling the pressing operation is the same as that described in [1] Positioning except the setting of the position table. Any setting of "Pressing" in the position table allows the pressing operation to be done. "Positioning width" is assumed as pressing operation distance.
 - 2) The actuator moves at the setting speed and rating torque to the position of the coordinate set in "Position" in the similar way as normal positioning. Then the operation changes to pressing. The moving distance in pressing is the value set in "Positioning width". The pressing is performed with the torque (current limit value) set in percent in "Pressing" of PIO patterns 1 to 2 being the upper limit.
 - 3) The control method is the same as that in [1] Positioning. However, the processing of positioning complete signal PEND is different from that in [1] Positioning. PEND is output when the shaft is stopped by pressing (pressing complete). If the work is not subject to pressing (miss-pressing), the actuator moves by the value set in "Positioning width" to stop but PEND is not turned ON.



- Note 1 Set the period taken from entering the position number to turning CSTR ON to 6ms or longer. Because 6ms timer process on the PLC is also entered to the controller, positioning at another position may occur. Take the PLC scan time into account.
- Note 2 The completion position No. output is set to 0 during movement of the actuator.


Judging completion of pressing operation

The operation monitors the torque (current limit value) in percent in "Pressing" of the position table and turns pressing complete signal PEND ON when the load current satisfies the condition shown below during pressing. PEND is turned ON at satisfaction of the condition if the work is not stopped.

(Accumulated time in which current reaches pressing value [%]) – (accumulated time in which current is less than pressing value [%]) \geq 255ms (Parameter No.6)



- [5] Tension Operation
- Image diagram



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	100.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	80.00	250.00	0.20	0.20	50	0	-50.00	0.00	0.00	0	0	0	0
3													
Tension start position 80mm									Tensi 80	on end pos – 50 = 30m	ition m		



Control method

Control method The method of controlling the tension operation is the same as that described in [4] Pressing operation. The control method is explained below by using the sample position table shown

CSTR: Start position

- above.
 1) Position No.2 indicates the settings of tension operation. The settings of "Position" and "Positioning width" show the tension start position and the tension quantity, respectively. Attach (minus sign) to the tension quantity. Specify the upper limit of the torque required for tension in percent (limited current value) in "Pressing". The speed, acceleration, and deceleration are the conditions of positioning to the coordinate value (80mm) set in "Position".
- Position No.1 indicates the tension start preparation position. Specify a value larger than the coordinate value at which the tension provided by position No.2 ends (80 50 = 30mm) in "Position".
- 3) First define the positioning in position No.1. Next, the operation in position No.2 moves the actuator to the position of 80mm at the setting speed and rating torque and change to the tension operation. The actuator moves by 50mm in the negative direction in the tension operation. The upper limit of the tensile force is the torque set in percent.
- 4) In the similar way as pressing, the positioning complete signal is output when the shaft is stopped by tension (pressing complete). If the actuator cannot be stopped during movement within the setting positioning width (miss-pressing), it moves by the setting distance to stop but PEND is not turned ON.



- [6] Multi-step pressing
- Image diagram



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	0.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	50.00	250.00	0.20	0.20	30	0	20.00	0.00	0.00	0	0	0	0
3	50.00	250.00	0.20	0.20	50	0	20.00	0.00	0.00	0	0	0	0
4													

Control method

After pressing, the pressing pressure can only be changed in the pressing state. The method of controlling multi-step pressing is the same as that described in [4] Pressing operation. Shown below is the explanation with the position table above as an example.

- 1) Set the weak pressing (30%) in position No.2 and perform the pressing operation.
- 2) If pressing complete signal PEND is turned ON, start the pressing operation with pressing pressure (50%) greater than the first pressure set in position No.3. The position data in position No.3 should be the same as that in position No.2 except the setting in "Pressing".
- 3) To add a pressing step with another pressing pressure, add a sequence consisting of a position number and a pressing operation.

Г	71	Teaching by PIC	ES PWRT WENI		
L	. 1	Teaching by FIC		D, JIGE, JOGT	, 300-

			Input			Output		
FIO signal	MODE	JISL	JOG+	JOG-	PWRT	MODES	WEND	
Other than pattern 1	×	×	×	×	×	×	×	
Pattern 1	0	0	0	0	0	0	0	

O: Existence of signal, x: No signal

(Note) The feature is available only in pattern 1. Teaching by PIO is enabled.

It is possible to select the teaching mode, move the actuator to the target position with jog or inching operation, and write the coordinate value into any position number.

- (1) Teaching Mode Selecting
 - 1) To select the teaching mode, set teaching mode signal MODE to ON. If the teaching mode is selected, mode status signal MODES is turned ON.
 - While the actuator is operating, MODE signal input is invalid. Therefore, after the operation is completed, the MODES signal is turned ON.
 - With the MODES signal being ON, the CSTR signal is changed to teaching signal PWRT. Therefore, it is not possible to operate the actuator by specifying a position No.
 - To cancel the teaching mode to return to the normal operation mode, set the MODE signal to OFF. If the MODE signal is turned OFF, the MODES signal is turned OFF to return to the normal operation mode.



- (2) Jog/inching switch and jog input
- 1) Jog/inching switching signal JISL indicates whether the jog operation^{*1} or inching operation^{*2} is performed by the jog input signal.
 - - JISL signal OFF JISL signal ON USE Signal ON
- 2) There are two jog input signals, or JOG+ for operation in the positive direction and JOG- for operation in the negative direction.
- Jog operation: The actuator is moved while the jog input signal is set to ON.
 - JOG+… While JOG+ is set to ON, the actuator is moved in the positive direction. If JOG+ is turned OFF, the actuator is decelerated and then stopped.
 - JOG- ···· While JOG- is set to ON, the actuator is moved in the negative direction. If JOG- is turned OFF, the actuator is decelerated and then stopped.

 - Acceleration/Deceleration Rating acceleration/deceleration of actuator
 - Pause Signal *STP ······ Enabled
- *2 Inching operation : Once the jog input signal is turned ON, the actuator is moved by a certain distance.
 - JOG+.... Once JOG+ is turned ON, the actuator is moved by a certain distance in the positive direction.
 - JOG- Once JOG- is turned ON, the actuator is moved by a certain distance in the negative direction.
 - Moving distance Value set in Parameter No.48 "PIO inching distance".

 - Acceleration/Deceleration Rating acceleration/deceleration of actuator
 - Pause Signal *STP ····· Enabled

*1



- 1) The feature is valid only when the teaching mode is selected (with the MODES signal being ON).
- 2) Specify the position number to which the current data is written in the binary data format in command position No.PC1 to PC32. Turn current value writing signal PWRT ON.
- 3) The coordinate value of the current position is written into the position table for the controller.

If position data is written previously, only the coordinate value in "Position" is only rewritten.

If nothing is written, the values set in the parameters below are written as the speed, acceleration/deceleration, positioning width, acceleration/deceleration mode, stop mode and vibration control No.. Other data is set to "0".

- Velocity ······ Parameter No.8 "Default speed"
- Acceleration ······Parameter No.9 "Default acceleration/deceleration"
- Deceleration Parameter No.9 "Default acceleration/deceleration"
- Positioning width ······Parameter No.10 "Default positioning width
- (in-position)"

MCON :

- mode"
- Stop mode Parameter No.53 "Default stop mode"
- Vibration control No. Parameter No.109 "Default vibration control No."
- 4) At the completion of writing, controller write complete signal WEND is output. Then turn the PWRT signal OFF.
- 5) When the PWRT signal is turned OFF the WEND signal is also turned OFF. Turn OFF PWRT after confirming WEND is turned ON.Turning it OFF before turning ON disturbs the proper data writing.



Caution:

- (1) Set the period taken from entering position No. to turning the PWRT ON to 6ms or longer. In spite of 6ms timer process in the PLC, commands may be input to the controller concurrently to cause writing to another position. Take the scanning time in the PLC into account, set a period as 2 to 4 times as the scanning time.
- (2) Turning the PWRT signal ON in the state in which home return is not completed (the HEND signal is set to ON) causes alarm 093 "PWRT signal detected before completion of home return" to occur.
- (3) Turning PWRT signal OFF before turning WEND signal ON disturbs the proper data writing.
- (4) Writing processing with position table screen remaining open on a teaching tool such as PC cannot lead the data on the screen to be updated. To update and confirm writing data, take the following actions:
 - 1) PC software ……………………… Left-click the 差 button.
 - 2) Teaching Pendant Change to user adjustment screen, input "4" in adjustment No. and return to the position table screen after software reset.

Check the relevant Instruction Manual for details of operation.

[8] Pause and operation interruption (*STP, RES, PEND, MOVE)

	Inp	out	Output			
	*STP	RES	PEND	MOVE		
Pattern 0 to 1	0	0	0	0		
Pattern 2	0	0	0	×		



O: Existence of signal, x: No signal

Control method

Pause is possible during movement. In addition, the remaining moving distance can be cancelled to interrupt the operation.

The pause signal is an input signal always set to ON. So, it is normally used to remain ON. Use this function for interlock in case where an object is invaded into the moving direction of the actuator being moved.

- 1) If pause signal *STP is turned OFF during operation of the actuator, the actuator is decelerated to a stop. The deceleration is defined by the value set in the position table.
- 2) During pause, moving signal MOVE is set to OFF but positioning complete signal PEND is not turned ON.
- If pause signal *STP is returned to ON, the actuator continues the remaining movement. The acceleration is the value set in the position table.
- 4) Turning reset signal RES ON during pause (*STP being OFF) allows the remaining movement to be canceled to interrupt the operation.



(3) If *STP* is turned OFF during pressing operation, the actuator is stopped with the pressing force remaining unchanged. If *STP* is turned ON, the pressing operation is restarted.

3.8.3 Direct Position Specification (Solenoid Valve Mode 1) = Operation of PIO Pattern 4

The start signal is provided for every position number. Only turning ON the relevant input signal according to the table shown below allows the operation based on the data in the target position number to be performed. The operation mode is called the solenoid valve mode because solenoid valves can directly drive air cylinders.

At the completion of positioning, every completed position number is output as well as the positioning complete signal.

[1] Positioning [Basic] (ST1 to ST6, PE1 to PE6, PEND)

Position No.	Input	Out	tput
0	ST0	PE0	PEND
1	ST1	PE1	PEND
2	ST2	PE2	PEND
3	ST3	PE3	PEND
4	ST4	PE4	PEND
5	ST5	PE5	PEND
6	ST6	PE6	PEND

(Note) • Speed change is not allowed during movement.

 If start signal ST* is issued without home return, the home return operation is automatically done before the operation based on the data of the specified position number. When this specification is not desired, interlock by home return complete signal HEND is required.

Sample use



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0	0.00	100.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
1	70.00	100.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	150.00	200.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0

Control method

- 1) When start signal ST* is turned ON, the actuator starts acceleration based on the data in the specified position table for positioning to the target position.
- 2) At the completion of positioning, positioning complete signal PEND is turned ON as well as current position No. PE* of the specified position.
- 3) After PEND is turned ON, turn the ST* signal OFF.
- 4) Current position No. PE* and positioning completion signal PEND are turned ON if the remaining moving distance is entered into the positioning width zone. PE* and PEND turned ON once remain ON unless start signal ST* is turned ON again or the servo is turned OFF. They are also turned OFF when pause signal *STP is turned OFF.



- (3) Interlock should be taken so that two or more ST* signals are set to ON simultaneously.
 - Entering the ST* signal of another position during positioning is invalid. If the ST* signal of another position is turned ON during positioning, the operation is terminated after the completion of the positioning being operated.
 - Entering the ST* signal of another position with the ST* signal of the current position remaining ON after the completion of positioning allows the positioning to the other position to be executed.
- (4) If Parameter No.27 "Move command type" is set to "0" (factory setting), turning ST* OFF during positioning caused the operation to be interrupted.

MCON -

[2] Pitch feeding (relative movement = incremental feed)

Sample use



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	100.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	25.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	1	0	0

(Position No.2 sets pitch feed.)

Control method

1) The method of controlling pitch feed is the same as that described in [1] Positioning

- except the setting of the position table. Repeat the positioning of a specific position No.
 2) For pitch feed, the position set in the position table indicates the pitch. Set the pitch (relative moving distance = incremental moving distance) in column "Position".
- 3) If the operation command is issued, the actuator moves from the current stop position by "Position" in the position table. To perform continuous movement, repeat the operation. Any accumulation error does not occur because the home position (coordinate value 0) is specified as the base point.

MCON =

A Cau	ution:
(1)	Because pitch feed is repeated, turning ON the ST* signal of the same position after completion of positioning causes both the PE* and PEND signals to be turned OFF at
	operation start and turned ON again at completion of positioning in the same way as [1]
(2)	If the actuator reaches the software limit (stroke end) in nitch feed, the actuator is
(2)	decelerated to be stopped and current position No. PF* and positioning complete
	signal PEND are turned ON at the stop position.
(3)	Both the PE* and PEND signals are set to ON in the positioning width zone.
	Accordingly, they may be turned ON under operation of the actuator if a large
	positioning width is set.
(4)	Interlock should be taken so that two or more SI " signals are set to ON simultaneously.
	signal of another position is turned ON during positioning the operation is
	terminated after the completion of the positioning being operated.
	2) Entering the ST* signal of another position with the ST* signal of the current position
	remaining ON after the completion of positioning allows the positioning to the other
	position to be executed.
(5)	If Parameter No.27 "Move command type" is set to "0" (factory setting), turning S1*
(6)	Note that when Parameter No 27 "Move command type" is set to "1" starting (ST* ON)
(0)	pitch feed repeatedly during pause causes the actuator to be moved successively by
	the number of starts. If this situation is supposed, cancel the remaining moving
	distance by turning reset signal RES ON in the pause state or take interlock so that
	start signals are not turned ON during pause.
(/)	The pressing operation is enabled by using the pitch feed function.
(8)	In the pitch reed, do not perform a command with a pitch smaller than the minimum
	reneatability
	There would be no deviation to occur even with the command because it is an
	operation command to the same position as the positioning complete condition, but the
	positioning control cannot be performed properly.



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	0.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	100.00	250.00	0.20	0.20	50	0	50.00	0.00	0.00	0	0	0	0

(Position No.2 sets pressing operation.)

- Control method
 - 1) The method of controlling the pressing operation is the same as that described in [1] Positioning except the setting of the position table. Any setting of "Pressing" in the position table allows the pressing operation to be done. "Positioning width" is assumed as pressing operation distance.
 - 2) The actuator moves at the setting speed and rating torque to the position of the coordinate set in "Position" in the similar way as normal positioning. Then the operation changes to pressing. The moving distance in pressing is the value set in "Positioning width". The pressing is performed with the torque (current limit value) set in percent in "Pressing" of PIO patterns 4 being the upper limit. Pressing operation using force sensor of PIO pattern 7 performs pressing by the pressing force set in percent of the base thrust in pressing operation using force sensor.
 - 3) The control method is the same as that in [1] Positioning. However, the processing of positioning complete signal PEND is different from that in [1] Positioning. PEND is output when the shaft is stopped by pressing (pressing complete). If the work is not subject to pressing (miss-pressing), the actuator moves by the value set in "Positioning width" to stop but PEND is not turned ON. The current position No. PE* is turned ON at the completion of pressing and even in miss-pressing.



Judging completion of pressing operation

The operation monitors the torque (current limit value) in percent in "Pressing" of the position table and turns pressing complete signal PEND ON when the load current satisfies the condition shown below during pressing. PEND is turned ON at satisfaction of the condition if the work is not stopped.

(Accumulated time in which current reaches pressing value [%]) – (accumulated time in which current is less than pressing value [%]) \geq 255ms (Parameter No.6)



- [4] Tension Operation
- Image diagram





Control method

No

ST*: Start position

The method of controlling the tension operation is the same as that described in [3] Pressing operation. The control method is explained below by using the sample position table shown above.

- Position No.2 indicates the settings of tension operation. The settings of "Position" and "Positioning width" show the tension start position and the tension quantity, respectively. Attach – (negative sign) to the tension quantity. Specify the upper limit of the torque required for tension in percent (limited current value) in "Pressing". The speed, acceleration, and deceleration are the conditions of positioning to the coordinate value (80mm) set in "Position".
- 2) Position No.1 indicates the tension start preparation position. Specify a value larger than the coordinate value at which the tension provided by position No.2 ends (80 50 = 30 mm) in "Position".
- 3) First define the positioning in position No.1. Next, the operation in position No.2 moves the actuator to the position of 80mm at the setting speed and rating torque and change to the tension operation. The actuator moves by 50mm in the negative direction in the tension operation. The upper limit of the tensile force is the torque set in percent.
- 4) In the similar way as pressing, the positioning complete signal is output when the shaft is stopped by tension (pressing complete). If the actuator cannot be stopped during movement within the setting positioning width (miss-pressing), it moves by the setting distance to stop but PEND is not turned ON. The current position No. PE* is turned ON at the completion of pressing and even in miss-pressing.





- [5] Multi-step pressing
- Image diagram



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0													
1	0.00	250.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	50.00	250.00	0.20	0.20	30	0	20.00	0.00	0.00	0	0	0	0
3	50.00	250.00	0.20	0.20	50	0	20.00	0.00	0.00	0	0	0	0
4													

Control method

After pressing, the pressing pressure can only be changed in the pressing state. The method of controlling multi-step pressing is the same as that described in [3] Pressing operation. Shown below is the explanation with the position table above as an example.

- 1) Set the weak pressing (30%) in position No.2 and perform the pressing operation.
- 2) If pressing complete signal PEND is turned ON, start the pressing operation with pressing pressure (50%) greater than the first pressure set in position No.3. In this particular operation, turn ON ST3 after completion of ST2, and turn OFF ST2 when PEND is turned OFF. In usual case, do not turn ON two or more ST* signals simultaneously.

The position data in position No.3 should be the same as that in position No.2 except the setting in "Pressing".

3) To add a pressing step with another pressing pressure, add a sequence consisting of a position number and a pressing operation.

[6] Pause and operation interruption (ST*, *STP, RES, PE*, PEND)

Pause is possible during movement. In this mode, the following two methods are possible for pause.

1) Use of pause signal *STP

Turning reset signal RES ON during the pause allows the remaining moving distance to be cancelled to interrupt the operation.

2) Use of start signal ST

This method is valid when Parameter No.27 "Move command type" is set to "0" (factory setting). The actuator can only be moved while the ST* signal is set to ON and stopped if ST* is turned OFF. Since setting the ST* signal to OFF is assumed as interrupt of operation, the remaining moving distance may not be cancelled.

(1) Use of pause signal *STP



Control method

The pause signal is an input signal always set to ON. So, it is normally used to remain ON. Use this function for interlock in case where an object is invaded into the moving direction of the actuator being moved.

- 1) If pause signal *STP is turned OFF during operation of the actuator, the actuator is decelerated to a stop. The deceleration is defined by the value set in the position table.
- During pause, current position No. PE* and positioning complete signal PEND are not turned ON.
- 3) If pause signal *STP is returned to ON, the actuator continues the remaining movement. The acceleration is the value set in the position table.
- 4) Turning reset signal RES ON during pause (*STP being OFF) allows the remaining movement to be canceled to interrupt the operation.





(2) Use of start signal ST*



Control method

If start signal ST* is turned OFF during movement, the actuator can be paused. Use the control method for interlock in case where an object is invaded into the moving direction of the actuator being moved.

- If the ST* signal is turned OFF during movement, the actuator is paused. The deceleration is the value set in the position table.
- 2) Turning the ST* signal OFF causes the positioning to be interrupted and deemed complete signal PEND to be turned ON.
- 3) If the ST* signal is turned ON again, the remaining movement is continued. The acceleration is the value set in the position table.



3.8.4 Direct Position Specification (Solenoid Valve Mode 2) = Operation of PIO Pattern 5

The start signal is provided for every position number. Only turning ON the relevant input signal according to the table shown below allows the operation based on the data in the target position number to be performed. The operation mode is called the solenoid valve mode because solenoid valves can directly drive air cylinders. At invasion of the actuator into the positioning width set for each position, the output signal is turned ON in the operation of any position number or manual operation of the actuator in servo OFF status as if a sensor were installed.

Positioning and speed change during operation are possible. Their control methods are the same as those of other patterns.

The I/O of PIO varies as shown in the table below depending on the position number before

Before home return, start signal ST1 works as JOG+. By using this function, move the actuator to a position at which home return can be done safely. The speed of ST1 is the home return speed. (TRQS should be output when the actuator hits an obstacle or the stroke end and become unable to move and the current of the motor exceeds the home-return current limit value.) After the home return is fully prepared, turn the ST0 signal ON to start the home return. At the completion of the home return, home return complete signal HEND is turned ON. Turn the ST0 signal OFF if HEND is turned ON. Once the home return completion signal HEND turns ON, it keeps ON even the actuator gets off the home position unless the home position gets lost.

Input ST0^(Note 1)

 $ST1 \Rightarrow JOG+$

 $ST2 \Rightarrow Invalid$

Output

LS0

 $LS1 \Rightarrow TRQS$

 $LS2 \Rightarrow Invalid$

Caution: This pattern does not allow pressing and pitch feed.

[1] Home return (ST0, HEND)

Position No.

0 1

2

home return.



 When Parameter No. 27 "Move command type" Set to "0 (factory setting)" The actuator moves to the home direction while ST0 Signal is ON and stops when ST0 Signal turns OFF. Once it reaches the mechanical end with ST0 Signal ON, the home-return operation will be performed.

 When Parameter No. 27 "Move command type" Set to "1" The home-return operation starts at the same time as ST0 Signal turns ON. Operation will not stop even if ST0 Signal turns OFF.

Warning: If "Position" in position No.0 is set to other than 0mm, the operation is continued without change to provide positioning after home return.



[Operation of Slider Type/Rod Type Actuator]



1) With the ST0 signal being ON, the actuator moves toward the mechanical end at the home return speed.

The moving speed is 20mm/s for most actuators but less than 20mm/s for some actuators.

2) The actuator is turned at the mechanical end and stopped at the home position. The movement amount is the value set by Parameter No.22 "Home return offset level".



[Operation of Rotary Actuator]

(1) 330° Rotation Specification



- 1) By ST0 Signal being on, the rotary part turns in CCW (counterclockwise) from the view of load side. The velocity is either 20deg/s.
- 2) The actuator is turned at the mechanical stopper and stopped at the home position. The amount of movement at this time is that set in Parameter No.22 "Home Return Offset Level".

Caution: Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

(2) Multi-Rotation Type



- 1) Once the home-return operation is started, the rotary part turns in CCW (counterclockwise) from the view of the load side. The speed is either 20deg/s.
- 2) Home sensor turns ON.
- 3) Starts reversed rotation.
- 4) Goes back to a point exceeded the home sensor detection range, and confirms the home sensor is turned OFF.
- 5) Starts reversed rotation.
- 6) Confirms the home sensor gets turned on again.
- 7) Goes to a point exceeded the home sensor detection range on the opposite side of the home position, and confirms the home sensor is turned OFF.
- 8) Starts reversed rotation.
- 9) Confirms the home sensor turns ON.
- 10) Goes to a point exceeded the home sensor detection range on the home position side, and confirms the home sensor is turned OFF.
- 11) Based on the result gained from 6), 7), 9) and 10), the center of the home sensor detection range is calculated.
- 12) The actuator moves in a certain amount for each actuator from the position of 11) and stops at the home position.

Caution: The direction to rotate is the other way for the reversed rotation type. Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

[For Gripper]



- 1) By ST0 Signal being on, the actuator moves toward the mechanical end (to end side) at the home return speed (20mm/s).
- 2) The actuator is turned at the mechanical end and stopped at the home position. The movement amount at this time is determined for each actuator and cannot be changed.

Caution: Make sure to refer to Section 8.2 [14] when a change to Parameter No.22 "Home Return Offset Level" is required.

[2] Features of LS signals (LS0 to 2)

The LS* signals are not complete signals for positioning commands such as those for other PIO patterns. Despite the specified position No., the corresponding LS* signal is turned ON when the actuator is entered into the setup value range as if the actuator were detected by a sensor installed.

(Example) The figure below shows the position table and the position at which each of the LS signals is turned ON. If the actuator passes any of the positioning widths in the operation by another position number or manual operation in the servo OFF state, the relevant LS signal is always turned ON.



[3] Positioning [Basic] (ST0 to ST2, LS0 to LS1)

Position No.	Input	Output
0	ST0	LS0
1	ST1	LS1
2	ST2	LS2

(Note) Pressing and pitch feed are unavailable.

Sample use



No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0	0.00	100.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
1	70.00	100.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
2	150.00	200.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0

- Control method
 - 1) When start signal ST* is turned ON, the actuator starts acceleration based on the data in the specified position table for positioning to the target position. Turning the ST* signal OFF on the way causes the actuator to be decelerated and stopped. So, make the ST* signal remain ON until the actuator reaches the target position.
 - 2) At the completion of positioning, position detection output LS* of the specified position is turned ON.
 - 3) Position detection output LS* is turned ON if the remaining moving distance enters into the positioning width. LS* is set to ON if the current position is located within the positioning width zone or OFF if the current position is located out of the positioning width zone (the same situation occurs in the servo OFF status).
 - 4) Leave the ST* signal to be ON until the actuator is moved to another position and turn OFF it at the next ST* signal. If the ST* signal is turned OFF at the LS* signal, the actuator is decelerated to a stop in the positioning width and thus the actuator may not reach the target position. In continuous operation, turn ON the next ST* signal by setting the positioning width within the required precision range or setting the period taken from detection of the LS* signal to reaching the target position.



positioning width LS2 zone (MCON→PLC) **Target Position** Δt : Time required to certainly reach the target position after the position sensing output LS1 or 2 is turned ON.

Turned ON after entering into

[Example of stop position when the ST* signal is turned OFF by the LS* signal] If the positioning width is set at a position before the original deceleration start position, the actuator cannot reach the target position.



Caution: (1) If the ST* signal for the position is turned ON after the completion of positioning, the LS* signal remains ON. (2) Both the LS* and PEND signals are set to ON in the positioning width zone. Accordingly, they may be turned ON under operation of the actuator if a large positioning width is set. (3) Interlock should be taken so that two or more ST* signals are set to ON simultaneously. If two or more ST* signals are input simultaneously, they will be executed according to the following priorities: $ST0 \rightarrow ST1 \rightarrow ST2$

Position sensing output LS1 (MCON→PLC)

Position sensing output

[4] Speed change during the movement

■ Sample use





The unit inserts nozzles into containers, injects liquid, and moves the nozzles upward so that they may not be contact with the liquid surfaces.

No.	Position [mm]	Velicoty [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode
0	0.00	100.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0
1	0.00	50.00	0.20	0.20	0	0	100.00	0.00	0.00	0	0	0	0
2	150.00	200.00	0.20	0.20	0	0	0.10	0.00	0.00	0	0	0	0

Control method

The speed of the actuator can be changed while it moves. The operation control method is the same as that in [3] Positioning. This pattern prioritizes the start signal specified later over the previous signal. Accordingly if another position No. is started during operation, then the new operation begins. This can be used to change the speed.

- 1) In this example, the speed is changed while the actuator moves from the position of 150mm to the position of 0mm. At first, set the positioning to the target position at the first speed in position No.1. In the positioning width, set the distance from the speed change position to the target position. The value is set to 100mm in the example. Thus, for position No.1, position sensing signal LS1 is turned ON at the position before the target position by 100mm.
- 2) Set the positioning to the target position at the second speed in position No.0.
- 3) Then start position No.1 (ST1 signal) and use position sensing output signal LS1 of position No.1 to start position No.0 (ST0 signal). Since this pattern prioritizes the signal specified later over the previous signal, the operation of No.1 is changed to the operation of No.0 during the operation of No.1.

(Note) If there is a signal commanded afterwards, the commanded signal will start activating once the previously commanded signal is turned OFF.

4) Use position sensing signal LS0 of position No.0 to turn the ST1 signal OFF.

In this example, the target positions No.0 and 1 are equal with each other. They may not be the same. However, setting the target positions to be equal with each other allows the distance from the speed change position to the target position to be known easily. Depending on the timing when the actuator accepts the input signal, the speed change may be delayed a little. Changing the positioning width can adjust the timing.

MCON =

The timing chart shown below indicates that the actuator changes its speed while it moves to position No.1 after the completion of positioning at position No.2 and moves to position No.0.



[5] Pause and Operation Interruption (ST*, *STP, RES, PE*, PEND) Turning start signal ST* OFF allows the actuator to be paused while it is moved. To restart it, turn the same ST* signal ON.



Control method

If start signal ST* is turned OFF during movement, the actuator can be paused. Use the control method for interlock in case where an object is invaded into the moving direction of the actuator being moved.

- If the ST* signal is turned OFF during movement, the actuator is decelerated to a stop. The deceleration is the value set in the position table.
- 2) If the ST* signal is turned ON again, the remaining movement is continued. The acceleration is the value set in the position table.



MCON =

3.9 About Gateway Parameter Setting Tool

This tool is necessary for the process such as MCON operation mode select. Shown below is how to use the tool. (Note) The design of the screen may differ depending on the operation system of your PC.

3.9.1 Startup of Tool

 Boot the Gateway Parameter Setting Tool after the power to MCON is turned ON, and the window shown below appears. Select "MCON" and click on the "OK" button.



2) Once MCON is detected the detected unit numbers become available to select. Select the unit number to be connected and click the "OK" button.

Connection Check	Connection Check
UnitNo1 Connecting	Select GW Unit.

MCON being detected

Select the unit number to be connected



3) The main window opens. The main window opens even when MCON could not be detected. Click on the "Read" button in this window and the parameters start to be read from MCON.

Parameter transfer starts if the "Write" button is clicked. However, note that the transfer cannot be made if there is a blank like Address and Communication Speed in the figure below.

🗐 Parameter Configuration Tool for IAI GateWay Unit	
<u>File Setting Monitor Help</u>	
Port Config Read Write	• Direct, Positioner • C RemoteI/O
Network Type	Drive Unit0 (Axis0, Axis1)
Address	Undefined Axis0 Rsv Axis1 Rsv
Baud Rate	
	Drive Unit1(Axis2,Axis3)
	Undefined Axis2 Rsv
	Axis3 Rsv
Information	Drive Unit2 (Axis4.Axis5)
-	Undefined T Axis5 Rsv
Firmware Version:	Drive Unit3(Axis6,Axis7)
	Axis6 Rsv
	Undefined
Baudrate(bps):38400 Port:COM23	2.0.0.0

Main windows (Initial condition)

3.9.2 Explanation of each Menu

- (Note) If MCOM is not detected, there will be some items that cannot be displayed or selected.
- 1) File Menu

🗐 P	aramete	er Configura	tion Tool for I
File	Setting	Monitor He	lp
N	ew file		
0	pen		1
S	ave	bnfig	Read
E	xit		
No	+ 100 21		Devic

In the main window, click on the file menu on the top left corner and the menu list pops up as shown in the figure above.

- New file : Create new network parameters and operation mode parameters.
- Open : Open the saved parameter files to show on the main window.
- Save : Save the parameter remained in the tool as a file.
- Exit : Close the tool.

2) Setting Menu

🔟 Pa	rameter Configuration Tool for IAI Gat	teWay Unit
<u>F</u> ile	Setting Monitor	
	Specialty Parameter	1
	Port <u>C</u> onfig	
Pe	TimeSetting(<u>T</u>)	Write
	Unit No.(<u>U</u>)	+ /TD
Ne	EtherNet/IP Setting(I)	L/1P
Add	iress	

Click on the "Setting" menu on the top left corner in the main window and the setting menu list pops up.

 Specialty Parameter 	:	Set the parameters related to the process of Gateway area in MCON. [Refer to 3.9.3 1) to 3) GW Parameter 1/2/3, 4) GW Mode
		Select.]
Port Config	:	Set the communication speed between the tool and PC and COM port number.
 Time Setting (T) 	:	Set the clock retained in MCON.
		[Refer to 3.9.3 5) Clock Setting.]
• Unit No. (U)	:	Set the unit number setting of MCON and top axis number in that unit.
		[Refer to 3.9.3 6) Unit Number.]
• EtherNet/IP Setting (I)	:	For EtherNet/IP type, this menu is displayed. Set IP address etc. [Refer to 3.9.3 7) EtherNet/IP Setting]

3) Monitor menu



Click on the [Monitor] menu on the top left corner in the main window and the monitor menu list pops up.

(Note) "Monitor" cannot be selected before reading a parameter.

I/O data : Show the details of the host PLC and MCON data. [Refer to 3.9.3 8) I/O data.]
Diagnosis Information : Show the number of ERRT and ERRC occurrence, emergency stops and scan time. [Refer to 3.9.3 9) Diagnosis information.]
Alarm List (L) : Read and show the alarm list retained in MCON. [Refer to 3.9.3 10) Alarm list.]

3.9.3 Description of Functions

1) GW-Param

Latch in ERR_T/C	invalid	<u> </u>
SERVO-OFF in ERR_C	valid	•
unit velocity(Only Full Mode)	1.0mm/s	v
Internal communication retry count	2	-

- Latch in ERR_T/C
- SERVO-OFF in ERR_C
- unit velocity (Only Direct Indication Mode):
- Internal communication retry count
- : Select whether to continue the error even in recoverable condition after ERRT and ERRC are issued.
- Select whether to turn the servo OFF on the connected axes when ERRC is occurred.
 Select the unit for speed from 1.0mm/s and 0.1mm/s.
- : Set the number of communication retries with the connected axes in AUTO mode.

2) GW-Param 2

🍈 Set	ting Specialty Parameters		×
	GW-Param GW-Param2 GW-Param3 GWmode Select	1	
			1
	Fulltime Fan run	invalid 💌	
	Fan round monitor	valid 💌	
	BATT Charge Volt monitoring	ON	
	RTC function	invalid 💌	
	Close		

- Fulltime Fan run : Select whether to always drive the fan even in AUTO mode.
- Fan round monitor : Select whether to/not to monitor the fan rotation speed with the monitor function.
- BATT Charge Volt monitoring : Select whether to/not to monitor the absolute battery charge voltage.
- RTC function : Select whether to use the calendar function.

3) GW-Param 3

🏐 Set	ting Specialty Parameters	×
	GW-Param GW-Param2 GW-Param3 GWmode Select	
	Delay Time after Shutdown Release [msec] 0	
		l
	Close	

- Driver Time after Shutdown Release :
 - Set the latency (interval) for when supplying the power to the driver boards on Slot 0 to 3 in turns. It is used in purpose to reduce the in-rush current by making the timing different for power supply to the driver boards when two or more driver boards are mounted. Do not attempt to turn on and off the MP individually by using the drive cutoff connectors when this time is to be set as it can be a cause of alarm generation.

4) GW mode Select

Fuchin CII	intralid
Enable Sw	Invaila
BYTE swap	invalid
WORD swap in D-WORD Data	invalid
Enable SW in AUTO mode	invalid

- Enable SW : Select whether to activate/inactivate the enable switch in TP. • BYTE swap
 - : Set the byte swap. [Refer to 4)-1 in this section.]
- WORD swap in D-WORD Data : Set whether to swap the W-word sized data with word size. [Refer to 4)-2 in this section.]
- : Select whether to activate/inactivate the enable switch • Enable SW in AUTO mode in AUTO mode.



4)-1 BYTE swap: Swap the upper and lower in the sent and received data in byte unit. Set this considering the connected host system if necessary.





3.9 About Gateway Parameter Setting Tool
4)-2 WORD Swap in D-WORD Data: Swap the upper and lower in the W-word sized sent and received data in word unit. Set this considering the connected host system if









5) Time Setting

TimeSetting		X
PC-Time		
8/2	2/2012 1	:33:20 PM
C Manual		
year 2010 -	month day	hour minute second
	Confirm	Write

By selecting Time on PC, the current time on the PC is acquired and set to MCON. If Set Manually is selected, desired time set in the clock edit in the window can be set in MCON. Click "Write", and the time setting is transferred to MCON and the data is written in. Clicking on the Confirm button and the clock data currently retained in MCON can be read and displayed.

Caution:	The clock (calendar) function in MCON can be retained for approximately 10 days
	(reference) after the power to MCON is turned OFF.
	Once the clock data is lost, the time passed since the power is turned back on as
	2000/1/1 0:00:00 is displayed as the current time.

6) Unit No. Setting

unit No.
🥅 Multi Drop enable
UnitNo. 0 🗸
Top Axis No.
OK

This setting is to be conducted when 2 units of MCON are to be connected to the PC software at the same time.

(It is not necessary to have this setting done for 1 unit of MCON.)

- Multi Drop enable : Tick in the box if the setting in this window is to be activated.
- Unit No. : Set the unit number of MCON.
- Top Axis No. : Set the top axis number of MCON composition axes.



7) EtherNet/IP Setting (Setting to be established for EtherNet/IP type)

EtherNet/IP Setting		x
IP address Subnet mask	192 168 0 0 255 255 255 0	
Default gateway	0.0.0.0	Ī
	OK	

- IP address : Set IP address for MCON.
- Subnet mask : Set subnet mask.
- Default gateway : Set default gateway.

8) I/O Data (Register Monitor)

Master	-> Gateway	1	Gatev	way -> Maste	r
Address	Data		Address	Data	^
+00	0000		+00	9100	
+01	0000		+01	0000	
+02	0000		+02	0000	
+03	0000		+03	0000	
+04	0000		+04	0000	
+05	0000		+05	0000	
+06	0000		+06	0000	
+07	0000		+07	0000	
+08	0000		+08	0000	
+09	0000		+09	0000	
+0A	0000		+0A	0000	
+0B	0000		+0B	0000	
+0C	0000		+0C	0000	
+0D	0000		+0D	0000	
+0E	0000		+0E	0000	
+0F	0000	-	+0F	0000	-
00ms •	HEX	•	SYNC Sc	roll	

Data Reading Frequency Display Switchover SYNC Scroll

In this register monitor window, shows the data that Gateway Unit has received from the host (master) and the data sent back to the host (master).

- Data Reading Frequency : Select the frequency of displayed data update from 100 to 500ms.
 - : Select from binary and hexadecimal for the display.
- Display SwitchoverSYNC Scroll
- Tick in the box to make the list of the sent and received data scrolled together.



9) Diagnosis Information

Diagnostic Information		
scan time[msec]	٥	
ERR_T counter	0	Clear
ERR_C counter	0	Clear
EMG counter	1	Clear

The number of the communication error (ERRC and ERRT) occurrence and number of the emergency stop (EMG) detection can be counted.

10) Alarm List

🏢 AlarmList	t						×
Record	Code	Content	Detail	Address	OccTime		Refresh
0	843	ABS charge circuit err.			2015/08/04 22:08:39		
1	86A	DB Parameter type mismatch.	8000		2015/08/04 22:08:39		Clear
2	843	ABS charge circuit err.			2015/08/04 22:08:39		
3	FFF	Power up (not error)			2015/08/04 22:08:36		Save
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							
15						-	

Click on the "Update" button and the alarm list is read again from MCON. Click on the "Clear" button and the alarm list retained in MCON are all deleted. Press "Save" button and the alarm list retained in MCON will be saved in CSV format.

Refer to Chapter 9 Troubleshooting for the details of the alarms.

MCON

3.9.4 Operation Mode Setting

Parameter Configuration T <u>File Setting Monitor H</u> elp	ool for IAI GateWay Unit	
	Ú La compañía de la c	
Port Config	Read Writ	e © Direct, Positioner © RemoteI/0 3)
Network Type	CC-Link	Drive Unit0 (Axis0, Axis1)
Address	1	Direct Indication1(Size:8W)
Baud Rate	10Mbps	Drive Unit1(Axis2,Axis3) Undefined Axis2 Rsv Axis3 Rsv
Information		
Mode Extend Cyclic setting Station Qnt	 Ver.1 mode Remote net single 4 station 	Drive Unit2 (Axis4, Axis5) Undefined
Firmware Version: FFDD		Drive Unit3 (Axis6, Axis7) Undefined
Baudrate (bps) : 38400 Por	t:COM23	2.0.0.0

Operation mode setting is to be conducted in the following procedures.

- Select ^(Note1) which mode you will use from Direct, Positioner Mode (those other than Remote I/O Mode) and Remote I/O Mode.
- 2) Select ^(Note2) an operation mode for Drive Unit 0 (AX0: 1st axis, AX1: 2nd axis).
- If making one of the axes for Drive Unit 0 the reserved axis (unused axis), tick on "Axis 0 Rsv" or "Axis 1 Rsv" (Note3) beside the operation mode setting box.
- 4) Once the operation mode for Drive Unit 0 is selected, selection of an operation mode for Drive Unit 1 (AX2: 3rd axis, AX3: 4th axis) becomes available. Select a desired operation mode. Also, if there is a reserved axis, tick on "Axis 2 Rsv" or "Axis 3 Rsv" beside the operation mode setting box.
- 5) Once the operation mode for Drive Unit 1 is selected, selection of an operation mode for Drive Unit 2 (AX4: 5th axis, AX5: 6th axis) becomes available. Select a desired operation mode. Also, if there is a reserved axis, tick on "Axis 4 Rsv" or "Axis 5 Rsv" beside the operation mode setting box.
- 6) Once the operation mode of Drive Unit 2 is selected, selection of an operation mode for Drive Unit 3 (AX6: 7th axis, AX7: 8th axis) becomes available. Select a desired operation mode. Also, if there is a reserved axis, tick on "Axis 6 Rsv" or "Axis 7 Rsv" beside the operation mode setting box.
- Note 1 Remote I/O Mode and other modes cannot be set at the same time. When Remote I/O Mode is selected, the operation mode for all the actuator will become Remote I/O Mode.
- Note 2 For MCON, setting of drive units in individual is the basic concept.
- Note 3 In case that the actuator will not be connected to an axis that is checked as the reserved axis, set Parameter No. 158 "Valid / Invalid Axis Setting" to "1: Invalid".

Even if the total number of the used axes is an odd number, have one more axis at the end and input as a reserved axis to make an even number. It is necessary to secure as much area as when not set as a reserved axis even if set as the reserved axis.

3.10 Field Network Status LEDs

The communication status of the field network can be checked.

3.10.1 CC-Link



O: Illuminating, ×: OFF, ☆: Flashing

Symbol		Lamp Condition	Color	Description
0)/0				Ready
SYS (System statu	is)		Orange	Alarm generated
(Oystern state	13)	×	-	Power is OFF or in initializing
EMG	stop		Red	Emergency stop
status)	siop	×	-	Normal
MODE			Green	AUTO Mode
(AUTO/MANU	J status)	×	_	MANU Mode
TERR		\bigcirc	Orange	Controller internal communication error
communicatio	communication status)		-	Normal
C ERR	/	\bigcirc	Orange	Field network communication error
communicatio	on status)	×	-	Normal
Field network		•	Orange	An error occurs. (CRC error, station No. setting error or baud rate setting error)
	ERR	*	Orange	Station number or baud rate changed after the power-on
status		×	_	Normal
	RUN		Green	Communication in normal condition

3.10.2 CC-Link IE Field



Symbol		Lamp Condition	Color	Description	
a) / a			Green	Ready	
SYS (System sta	atus)			Orange	Alarm generated
	100)		×	_	Power is OFF or in initializing
EMG				Red	Emergency stop
status)	stop		×	_	Normal
MODE			\bigcirc	Green	AUTO Mode
(AUTO/MA	NU st	atus)	×	-	MANU Mode
T ERR	nto vo o		•	Orange	Controller internal communication error
communica	tion s	u tatus)	×	_	Normal
C ERR			0	Orange	Field network communication error
(Field network communication status)		×	_	Normal	
				Green	Normal operation
	MS	KUN	×	_	Hardware error generated, power not ON
		ERR	•	Red	Error generated (node error/station number setting error)
			×	-	Normal operation, power not ON
				Green	Cyclic transmission ON
Field		D	*	Green	Cyclic transmission OFF
network status	NS	LINK	×	_	Cyclic transmission not implemented, fragmented or power not ON
		L		Red	Receive data error (lights together with L.ER)
		ERR	×	-	Receive data normal, power not ON
		<i>,</i>	\bigstar	Green	Linking up
		`	×	_	Linking down
		, <u> </u>		Red	Receive data error
	L.EK		×	_	Receive data normal, power not ON

3.10.3 CompoNet



Symb	ol	Lamp Condition	Color	Description	
			Green	Ready	
SYS (System statu	e)		Orange	Alarm generated	
(Oystern statu	3)	×	_	Power is OFF or in initializing	
EMG	ton		Red	Emergency stop	
status)	http	×	—	Normal	
MODE		\bigcirc	Green	AUTO Mode	
(AUTO/MANU	J status)	×	—	MANU Mode	
T ERR	ornal	0	Orange	Controller internal communication error	
(Controller Internal communication status)		×	_	Normal	
C ERR		\bigcirc	Orange	Field network communication error	
communicatio	n status)	×	_	Normal	
	, ,		Green	Online (Normal)	
	NS	*	Green	Online (Even though the network is established normally, awaiting for being identified as MCON by master)	
Field		•	Orange	Node address duplication error, slave address wrongly established	
network		\bigstar	Orange	No response returned from another slave device	
status		×	_	Power is OFF, under reset operation, under initializing process	
			Green	Communication in normal condition	
	MS		Orange	Malfunction of hardware	
	CIVIC	\star	Orange	EEPROM reading failed in initializing process	
		×	_	Power is not ON, under reset operation	

O: Illuminating x: OFF ☆: Elashing

3.10.4 DeviceNet



O: Illuminating, ×: OFF, ☆: Flashing

Symbol		Lamp Condition	Color	Description
0.40			Green	Ready
SYS (System stat	us)		Orange	Alarm generated
(Oystern stat	u3)	×	-	Power is OFF or in initializing
EMG			Red	Emergency stop
(Emergency status)	stop	×	_	Normal
MODE			Green	AUTO Mode
(AUTO/MAN	U status)	×	—	MANU Mode
TERR			Orange	Controller internal communication error
(Controller in communicati	ternal on status)	×	_	Normal
C ERR		\bigcirc	Orange	Field network communication error
(Field network communication status)		×	_	Normal
			Green	Online (Normal)
		*	Green	Online (Even though the network is established normally, the master does not identify as MCON)
	NS		Orange	An error occurs.
Field		*	Orange	No response returned from another slave device
network status		**	Green/Orange (Blink by turn)	In self-checking process.
			Green	Communication in normal condition
		\bigstar	Green	Parameter setting error
	MS		Orange	It is caused by the hardware breakdown.
		\rightarrow	Orange	Light malfunction
		**	Green/Orange (Blink by turn)	In self-checking process.

3.10.5 EtherCAT



Symbol		Lamp Condition	Color	Description		
0.40			Green	Ready		
SYS (System state	ie)		Orange	Alarm generated		
(Oystern state	13)	×	_	Power is OFF or in initializing		
EMG (Emergency s	ston		Red	Emergency stop		
status)	зюр	×	_	Normal		
MODE			Green	AUTO Mode		
(AUTO/MANU	J status)	×	—	MANU Mode		
T ERR	ornal	\bigcirc	Orange	Controller internal communication error		
communicatio	communication status)		_	Normal		
C ERR		•	Orange	Field network communication error		
communicatio	on status)	×	_	Normal		
	ERR		Orange	Communication component (module) error		
		*	Orange (Note 1)	Construction information (settings) error (Information received from the master cannot be set)		
Field		★	Orange (Note 3)	Communication section circuit error (Watchdog timer timeout)		
network		×	—	No abnormality or the power is OFF		
status		\bigcirc	Green	Normal communication (OPERATION) condition		
		\star	Green (Note 1)	PRE-OPERATION condition		
	RUN	\star	Green (Note 2)	SAFE-OPERATION condition		
			Orange	Communication component (module) error		
		×	_	Initializing (INIT) condition or Power is OFF		

Note 1 ON: 200ms, OFF: 200ms

Note 2 ON: 200ms, OFF: 1000ms

Note 3 ON: 200ms, OFF: 200ms, ON: 200ms, OFF: 1000ms



3.10.6 EtherNet/IP



				O: Illuminating, ×: OFF, ☆: Flashing
Symbol		Lamp Condition	Color	Description
SYS (System status)			Green	Ready
			Orange	Alarm generated
		×	—	Power is OFF or in initializing
EMG			Red	Emergency stop
(Emergency s	top status)	×	_	Normal
MODE			Green	AUTO Mode
(AUTO/MANU	J status)	×	_	MANU Mode
T ERR	ornal	\bigcirc	Orange	Controller internal communication error
communication status)		×	_	Normal
C ERR		\bigcirc	Orange	Field network communication error
communication status)		×	_	Normal
	NS		Green	Online (Communication in normal condition)
			*	Green
		•	Orange	Communication error (such as IP address duplication)
Field		★	Orange	Communication error (Communication timeout has been detected)
network		×	_	Power is OFF or IP address not established
status		\bigcirc	Green	Communication in normal condition
		*	Green	Construction information setting is incomplete, or scanner (master) is in idling condition
	MS	•	Orange	Malfunction of hardware (board replacement required)
		*	Orange	Initializing error, light error such as setting violation, recoverable with rebooting
		×	_	Power is OFF

3.10.7 PROFIBUS-DP



O: Illuminating, ×: OFF, ☆: Flashing

Lamp Symbol Color Description Condition Readv Green SYS Orange Alarm generated (System status) Power is OFF or in initializing × _ EMG Red Emergency stop (Emergency stop × Normal status) AUTO Mode MODE Green (AUTO/MANU status) MANU Mode × _ T ERR Orange Controller internal communication error (Controller internal × Normal communication status) _ C ERR Orange Field network communication error (Field network × Normal communication status) Online (Normal) Green Online (Even though the network is established Green \bigstar NS normally, the master does not identify as MCON) An error occurs. (Parameter error or initializing Field \bigcirc Orange error) network status Initializing is completed. Green Initializing completed and in self-checking \bigstar MS Green process An error occurs. (Exceptional error) Orange

3.10.8 PROFINET IO

C: Illuminating, ×: OFF, *: Flashing						
Symt	ool	Lamp Condition	Color	Description		
			Green	Ready		
SYS (System stat	us)		Orange	Alarm generated		
(-)		×	-	Power is OFF or in initializing		
EMG	EMG (Emergeney) step		Red	Emergency stop		
status)	status)		_	Normal		
MODE		\bigcirc	Green	AUTO Mode		
(AUTO/MAN	(AUTO/MANU status)		_	MANU Mode		
T ERR	ternal	<u> </u>	Orange	Controller internal communication error		
communicati	on status)	×	_	Normal		
C ERR	rk	<u> </u>	Orange	Field network communication error		
communicati	on status)	×	_	Normal		
		•	Green	Online (Communication in normal condition : RUN status)		
	NS	★	Green	Online (Not identified by master : STOP status)		
		×	-	The power is OFF or there is no connectable MCON.		
		0	Green	In the normal operation		
E a la		★1	Green	Network under diagnosis		
network		★2	Green	Engineering tool identifying nodes		
status			Red	Exception error generated (Hardware malfunction)		
	MS ^(Note 1)	★1	Red	Settings and actual network construction do not match		
		★2	Red	IP address not established		
		★3	Red	Station name not established		
		★4	Red	Internal error occurred		
		×	_	Power is OFF or in initialization		

Note 1 The continues to flash for number of times stated beside the star mark (☆) in every 0.25sec.

3.10.9 EtherCAT Motion

Refer to status LED of EtherCAT Motion, EtherCAT Motion Applicable Controller Instruction Manual (ME0367).

3.10.10 MECHATROLINK-Ⅲ

Refer to status LED of MECHATROLINK-III, MECHATROLINK-III Applicable Controller Instruction Manual (ME0317).

3.10.11 SSCNETⅢ/H

Refer to status LED of SSCNETII/H, SSCNETII/H Applicable Controller Instruction Manual (ME0352).

Feature dedicated for servo motor type

Chapter 4 Vibration Suppress Control Function

The vibration suppress control function suppresses vibrations of loads induced by our actuators.

The function can suppress vibrations in the same direction as the movement of the actuator in the frequency range from 0.5Hz to 30Hz.

Measure the frequency of the generated vibration and set it to the parameter. Three frequencies can be defined as parameters. Specify the parameters in the position table to reflect them on suppression of vibrations generated by the operation. For a single moving command (position data), only a single parameter can be set.

(Note) This feature is limited only to the servo motor type actuators. Cannot be used in direct indication mode Before this function can be used, you must read the cautions described on the next page.

[Functional Operation Image]

Μςον

The figure below shows an example in which two actuators are subject to 2-axis combination. Actuator A is moved to cause actuator B corresponding to a joint to be vibrated. Measure the vibrations of B in the direction in which A is moved and make proper vibration suppress control in the direction to suppress the vibrations of B. Vibrations of Actuator B caused by the movement of B cannot be suppressed by Actuator A.

★No setting of vibration suppress control

☆Setting of vibration suppress control



⚠ Caution:

 <u>Use of Frequency Analysis Tool for Anti-Vibration Control</u> If using the frequency analysis tool for anti-vibration control installed in the PC software, it is necessary to get the key file (Fam.dll), copy and store it in the same folder as the executable file (RePc.exe) of the PC software. Please contact IAI for the key file. Refer to "Chapter 14 Frequency Analysis Feature for Anti-Vibration Control" in the RC PC Software Instruction Manual for how to operate. <u>Vibrations subject to vibration suppress control</u> It is the vibration of the load generated by IAI actuator, and is in the same directions as the actuator movement. <u>Vibrations not subject to vibration suppress control</u> <u>Vibration in a direction different from the direction in which the actuator, or the vibration source, is moved.</u> <u>Vibration of vibrating object itself (This function moves objects easily vibrated without vibrations and cannot suppress vibrations already generated.</u>) <u>Conditions in which vibration suppress effect can hardly be obtained</u> When the frequency to control is the same value as the mechanical angle of the motor (motor rotation) or the electrical angle of the motor Frequency of motor's mechanical angle (motor revolution): operation speed [mm/s]/lead length [mm] Frequency of motor installation axis Example 1: Servo motor installation axis For lead length 20mm and operation speed 100mm/s: Frequency of mechanical angle (motor revolution) <u>5Hz</u> Frequency of mechanical angle (four times of frequency of mechanical angle) : 20Hz When a higher speed response is not able to catch up with the vibration control. In case of a system shown in the figure on the right, the vibration cannot be controlled directly by the actuator, thus the effect may be only small or even nothing.
 Vibration suppress control unavailable in home return and pressing operations
Home return and pressing operations cannot suppress vibrations. Operating the vibration
suppress control function in pressing causes 0A2 "position data error" to occur.
<u>Prohibition of simultaneous use of vibration suppress control with feed forward gain</u> The vibration suppress control function cannot be used with feed forward gain
simultaneously.
 Prohibition of switch to use vibration suppress control during moving operation.
Switching between vibration suppress control and normal positioning is disabled during
movement of the actuator. Any switching command causes 0C5 "Illegal control system
transition command error" to occur.
<u>Response of VIDIATION SUPPRESS CONTROL</u> <u>Vibration suppress control has time lag from speed command in the operation plan. This</u>
makes cvcle time longer.
Lower the setting frequency is, longer the time lag is.
<u>Consideration of servo gain</u>
If the servo gain setting is not conducted properly, the effect of the anti-vibration control
may get dropped. First adjust the servo gain prior to setting of vibration suppress control.

4.1 Setting Procedure

To use the vibration suppress control function, make proper measurements and settings depending on the procedure described below.



Now the settings are completed.

4.2 Settings of Parameters for Vibration Suppress Control

Set the parameters associated with vibration suppress control, which are listed in the table below.

Parameter No.	Parameter Set No.	Parameter Name	Unit	Default	Input Range
97		Damping characteristic coefficient 1	Rate	10	0 to 1000
98	1	Damping characteristic coefficient 2	Rate	1000	0 to 1000
99		Natural frequency	1/1000Hz	10000	500 to 30000
100		Notch filter gain	Rate	9990	1 to 20000
101		Damping characteristic coefficient 1	Rate	10	0 to 1000
102	2	Damping characteristic coefficient 2	Rate	1000	0 to 1000
103		Natural frequency	1/1000Hz	10000	500 to 30000
104		Notch filter gain	Rate	9990	1 to 20000
105		Damping characteristic coefficient 1	Rate	10	0 to 1000
106	3	Damping characteristic coefficient 2	Rate	1000	0 to 1000
107		Natural frequency	1/1000Hz	10000	500 to 30000
108		Notch filter gain	Rate	9990	1 to 20000
109		Default vibration suppress No.		0	0 to 3
110		Stop method at servo OFF		0	0, 1

[1] Damping characteristic coefficient 1, 2 (Parameter No.97, 98, 101, 102, 105, and 106) In this section, do not change.

[2] Natural frequency [1/1000Hz] (Parameter No.99, 103 and 107)

Set the natural frequency of the load measured. It can be input directly to the parameter from the frequency analysis tool for anti-vibration control included in the PC software if the tool is already used. [Refer to the Instruction Manual of the RC PC software.] Set the specific frequency of the loaded object close to the setting so a higher anti-vibration performance can be obtained.

[Reference] Other vibration measuring methods

- Use of measuring instrument such as vibration meter and acceleration pickup
- Calculation from video image data
- [3] Notch filter gain (Parameter No.100, 104 and 108)

Set the notch filter gain following the table below in response to the measured specific frequency of the loaded object. See the table below for reference. Provide fine adjustment if overshooting occurs.

If the notch filter gain setting is too high, overshooting would occur during the settling time. If the notch filter gain setting is too low, undershooting would occur during the settling time.

Measured Natural Frequency [Hz]	Setting Value of Notch Filter Gain
0.5	9900
1	9980
2 to 30	9990

[4] Default vibration suppress No. (Parameter No.109)

When a position is written into a position table not registered yet, the initial value set to this parameter is automatically entered in the "Vibration suppress No." field. To change the setting, edit the position table later.

- 0: Normal positioning control (default)
- 1: Use Anti-Vibration Control Parameter Set 1
- 2: Use Anti-Vibration Control Parameter Set 2
- 3: Use Anti-Vibration Control Parameter Set 3
- [5] Stop method at servo OFF (Parameter No.110) The table below shows the relationship between the values of Parameter No.110 and stop commands.

	Stop Method at Servo OFF Setting Value					
	0 : Sudo	len Stop	1 : Deceleration and stop			
Stop Command	Vibration	Normal	Vibration	Normal		
	suppress control	control	suppress control	positioning control		
Pause	Anti-vibration deceleration stop	Normal deceleration and stop	A sti uib seties	Nama		
Servo OFF			Anti-vibration	Normal deceleration and stop		
Emergency Stop	Sudden	stop by	stop			
Error (Operation-cancellation level alarms)	emergency stop torque					
Error (Cold start)	Sudden stop by emergency stop torque					

4.3 Setting of Position Data

To make the anti-vibration control effective, set the parameter set number to be used in Anti-Vibration Number Column in Position Data.

(Note) The vibration suppress control function cannot be used in pressing operation.

No.	Position [mm]	Velocity [mm/s]	Accele- ration [G]	Decele- ration [G]	Pressing [%]	Thresh- old [%]	Positioning width [mm]	Zone+ [mm]	Zone- [mm]	Acceleration/ Deceleration mode	Incre- mental	Gain set	Stop mode	Vibration suppress No.
0														
1	0.00	50.00	0.01	0.01	0	0	0.10	0.00	0.00	0	0	0	0	0
2	50.00	50.00	0.01	0.01	4	0	0.10	0.00	0.00	0	0	0	0	🚽 1
3	50.00	50.00	0.01	0.01	(50) 0	0.10	0.00	0.00	0	0	0	0	_ 3
4														
	-											/		

Set natural frequency 1 (enabled) Set natural frequency 3 (Alarm: It cannot be in common with Error. 0A2 Position Data Error Pressing Operation.)

Feature dedicated for pulse motor type

Chapter 5 Collision Detection Feature

This controller is equipped with a feature to stop immediately when the actuator is hit on an object during operation.

Understand this chapter well to avoid any trouble in operation and safety. Collision detection feature is a feature that stops the operation by generating an alarm and turning OFF the servo when the command current exceeds the set value. The range for detection also can be set.

Warning: This feature is a <u>supportive feature</u> to reduce the damage to a work piece in case of an emergency. It does not mean to compensate in any unexpected damage. The setup of this feature is necessary to be adjusted to an expected collision, and the optimum value differs depending on the system. Well confirm the status before use.

5.1 Collision Detection Judgement

Judgment is made as a collision when the current position is in the range of the position zone, for longer than the time set in the parameter ^{*1} and the current has exceeded the threshold ^{*2}, and it turns ON PIO Load output judgment (LOAD) signal and turns the servo OFF after generating the collision detection alarm.

*1 Parameter No.50 Load output judgment time *2 "Threshold" in the positioner table.

©Example of judgement (when judgment time is 255ms)



MCON

5.2 Settings

Have the following settings established when using following function.

1) Select to use feature

Setting can be established in the parameters. Setting of parameter "No.168 Collision Detection Feature"

Setting value	Operation status	Alarm level
0	Detection not to be conducted (same when set to 2, 4 or 6)	—
1	Detection is conducted in position zone setting range.	
3 ^(Note1)	Detection is conducted in position zone setting range, but is not conducted in the following conditions. • The first movement after releasing from a pause • Movement from a stop in the positon zone range	Operation cancel level
5	Detection is conducted in position zone setting range.	
7 ^(Note1)	 Detection is conducted in position zone setting range, but is not conducted in the following conditions. The first movement after releasing from a pause Movement from a stop in the positon zone range 	Message level
Note 1	In this setting, it can avoid a mistake to date at the avoir dur	in a cocoloration

Note 1 In this setting, it can avoid a mistake to detect the current during acceleration.

2) Setting of Detection Current Value

Setting is made by inputting 0 (0%) to 100 (100%) in "Threshold" cell in the position table. Detection is not conducted if set to 0.

3) Setting of Adjustment time

Setting can be established in the parameters. Setting of parameter "No.50 Load Output Judgment Time"

Position zone : 0 to 9999 [ms] (Initial Value 255ms)

4) Setting of Adjustment Range (position zone)

Set the range in "Zone +" and "Zone –" in the position table. Set a small value in "Zone +" and "Zone –".

Position zone : 0.00 to Actuator Stroke Length [mm]

MCON

5.3 Adjustment

Refer to the following when performing an adjustment.

- 1) Adjustment Range : Avoid the acceleration range, which requires high current", and set the range with possibility that collision can occur.
- 2) Detection Current Value :

Considering the movement velocity and weight of a work piece, set a low value in the range that detection mistake would not occur. (Set it slightly higher than the current necessary for constant velocity movement, and tune little by little.)



Chapter 6 Power-saving Function

6.1 Automatic Servo-off and Full Servo Functions

This controller possesses Automatic Servo OFF (setting available on all motor types) and Full Servo functions (for pulse motor type only) to reduce the power consumption while the actuator is stopped. Read the description in this chapter carefully to save power so that the controller can be operated safely.

Automatic Servo-off function automatically turns the servo OFF in certain time after positioning process is finished. The next positioning command is issued to turn the servo ON automatically and achieve the positioning. No holding current flows in the stop state to allow the power consumption to be saved.

3 types of patterns can be set for the time since positioning complete until servo turned OFF, and either one can be selected. In the Full Servo Function ^(Note 1), it is able to reduce the power consumption (Note) by

In the Full Servo Function (Note 1), it is able to reduce the power consumption (Note) by controlling the pulse motor which consumes comparatively high current during a stop. For the power saving function, which of Parameter No.53 or "Stop Mode" in the position table is to be used is determined by the actuator condition. The details are shown below.

Note 1 Certain amount of stop current is applied to restrain small vibration during a stop to stop completely. Also, return to the target position will not be performed for the misalignment in the range of ±2 counts from the target position for the encoder value. (Return operation will be performed even for misalignment of 1 count when the full servo feature is activated.)

Status		PIO Pattern 0 to 2, 4	PIO Pattern 5			
Standby after home is complete (Positioning to the ta point is not done)	arget	Power saving function executed with the values set in Parameter No.53 (Stop Mode of the position number is invalid)				
Standby with the servo turned ON after the power is supplied (Positioning to the target point is not done)			Power saving function executed with the values set in Parameter No.53 (Stop Mode of the position number is invalid)			
Standby after the positioning is compl the target position s the position table	lete to set in	Power saving function executed with the values set in "Stop Mode" in each position number (Setting of Parameter No.53 is invalid)				
Narning: Do not use this function if the automatic servo OFF is followed by pitch feed (relative movement). Servo ON/OFF may cause slight position shift to occur. If position shift occurs due to external force during servo OFF, positioning to the correct position is disabled. It is because pitch feed is operated based on the position at start used as the base point.						
Caution: Auto not u funct com com No r move perip	▲ Caution: Automatic Servo-off Function is not effective while in pressing operation. Do not use. It becomes effective at completion of positioning. In pressing, the function becomes effective only when miss-pressing occurs (the status at the completion of operation without pressing is the same as that at the completion of positioning). No retaining torque is provided in automatic servo-off. The actuator can move with an external force. Pay attention to the interference to the peripherals and the safety in the installation.					

Caution:	When an operation is made with jog or inching while in operation with the full
	servo function, the full servo function will be inactivated. If a movement is
	made again on the position number that the full servo function is set valid, the
	full servo function will be activated.

6.1.1 Setting of periods taken until automatic servo OFF

Three periods from completion of positioning to automatic servo OFF can be set in the following parameters in seconds [sec].

Parameter No.	Name	Unit	Input range	Initial value
36	Automatic servo-off delay time 1	sec	0 to 9999	0
37	Automatic servo-off delay time 2	sec	0 to 9999	0
38	Automatic servo-off delay time 3	sec	0 to 9999	0

6.1.2 Set of power-saving mode

MCON

Select a proper power-saving mode from the conditions below. Set the corresponding value in the stop mode or parameter No.53 of the position table.

Selection is available from 0 to 3 for the servo motor type and brushless DC motor type. Selection is available from 0 to 7 for the pulse motor type. [Refer to 14) Stop mode in 3.3 Set of Position Table.]

Set value	Operation after completion of positioning	Selectable type
0	Servo ON not changed	All type
1	Automatic servo off in a certain time (set in Parameter No.36)	All type
2	Automatic servo off in a certain time (set in Parameter No.37)	All type
3	Automatic servo off in a certain time (set in Parameter No.38	All type
4	Full Servo Control	Pulse motor type
5	Full-servo control for a certain time (value set in Parameter No.36) and then automatically turning servo OFF	Pulse motor type
6	Full-servo control for a certain time (value set in Parameter No.37) and then automatically turning servo OFF	Pulse motor type
7	Full-servo control for a certain time (value set in Parameter No.38) and then automatically turning servo OFF	Pulse motor type

Caution: • No retaining torque is provided in automatic servo OFF. Pay sufficient attention to the setting because the actuator may be moved by external force applied to it.

 Do not use the automatic servo OFF if the next moving command is relative distance specification (pitch feed). Failure to follow it may cause position shift to occur.

- Do not use the automatic servo OFF in pressing. If used, the pressing force is lost.
- Automatic Servo OFF would not function in the operation with teaching mode of PC software.

6.1.3 Status of positioning complete signal in selection of automatic servo OFF

Automatic servo OFF causes the actuator to be in other than the positioning complete state due to the servo OFF. Positioning complete signal (PEND) is turned OFF. Changing the PEND signal to the in-position signal judging whether the actuator is stopped within the positioning width zone instead of the positioning complete signal allows PEND not to be turned OFF during servo OFF.

This setting is reflected on complete position numbers PM1 to PM** in PIO patterns 0 to 2 confirming the positioning complete position No. or current position numbers PE* in PIO patterns 4.

Value set in	Content of PEND	Signal outputs during automatic servo OFF			
Parameter No.39	signal	PEND	PM1 to PM**	PE**	
0	Positioning Completion Signal	OFF	OFF	OFF	
1	In-position Signal	ON	ON	ON	
				1	

Define the setting in Parameter No.39.

(Note) SYS in the driver status LED lamps on the front panel blinks in green during the automatic servo OFF.

[For Parameter No.39 = 0]

Operation of actuator	Positioning operation	Automatic servo OFF standby	Servo OFF	Positioning operation
Servo Condition	ON	ON	OFF	ON
			011	
Completed Position No. Output (Current position number output)	PM1 to ** =0 (PE** = OFF)	PM1 to ** = Output (PE** = ON)	PM1 to ** = 0 (PE** = OFF)	PM1 to ** = 0 (PE** = OFF)
Positioning Completion Signal PEND	OFF	ON	OFF	OFF
		Servo OFF Delay Time (Parameter No.36 to 38		

[For Parameter No.39 = 1]

Operation of actuator	Positioning operation	Automatic servo OFF standby	Servo OFF	Positioning operation
Servo Condition	ON	ON	OFF	ON
Completed Position No. Output (Current position number output)	PM1 to ** = 0 (PE** = OFF)	PM1 to ** = Output (PE** = ON)	PM1 to ** = 0 Output (PE** = ON)	PM1 to ** = 0 (PE** = OFF)
Positioning Completion Signal PEND	OFF	ON	ON	OFF
		Servo OFF Delay Time (Parameter No.36 to 38		

Feature dedicated for pulse motor type

6.2 Selecting Automatic Current Reduction Feature

When performing a complete stop in the positioning, the current flows in constant amount ^(Note 1) regardless of the size of the external force in a normal condition (without using the automatic current reduction feature). Using the automatic current reduction feature enables to flow the current considering the influence of the external force, that will be able to save the power consumption when the transported load is small.

Note 1 Parameter No. 12 "Current Limit Value at Positioning Stop"

|--|

Parameter No.	Name	Unit	Input range	Initial value
182	Auto Current Adj. Select	-	0: Disabled 1: Enabled	0

Shown below is a graph (example) of the current flow volume and velocity command in the positioning operation in comparison of when the automatic current reduction feature is inactive and when it is active.

• The automatic current reduction feature: Disabled



• The automatic current reduction feature: Enabled



Current flow volume at stop considering external force influence

6.2.1 Process When Feature is Active

- 1) The same process as the existing complete stop feature will be performed until the current flow volume reaches the current limit value at the positioning stop (parameter).
- 2) The condition will be retained until the target position deviation becomes zero after finishing the stopping current flow.
- 3) Current flow volume will be controlled following the fact of target position deviation.
 - Current reduced gradually by certain amount when no target position deviation
 - Current increased gradually by certain amount when there is target position deviation

There are some restrictions as follows to the current flow control.

- When current flow transition of reduction to increasing process is held for more than certain times, only the increasing process will be held.
- The minimum current volume should be defined for every actuator, and the current flow volume will be reduced to a certain amount when there is no position deviation.
- The maximum current volume should be the current limit value at positioning stop (parameter), and the current flow volume will be increased to a certain amount.

6.2.2 Caution

- (1) Deference in Target Position Deviation due to Encoder Resolution for Actuator with Lead Length 24 [mm/rev]
 - 1) When the encoder resolution is 800 [pulse/rev], the current flow volume will be decreased until the target position deviation of 24 / 800 = 0.0300 [mm] occurs.
 - 2) When the encoder resolution is 8192 [pulse/rev], the current flow volume will be increased until the target position deviation of 24 / 8192 = 0.029... [mm] occurs.
- (2) Caution in High-Resolution Encoder

In an actuator equipped with the high-resolution encoder, if the positioning complete status continues for a long while, the current flow volume rises to the current limit value at positioning stop (parameter) at last even if this feature is activated. Therefore, note that power consumption cannot be saved in such a situation.

Μςον

Feature dedicated for pulse motor type and servo motor type

Chapter 7 Absolute Reset and Absolute Battery

7.1 Absolute Reset

The controller for Simple Absolute Type retains the encoder position information with the battery backup. Also, connecting the battery-less absolute type controller to an actuator enables to retain the encoder position information without any battery. For those types, it is not necessary to have a home-return operation in every startup.

To retain the encoder position information, it is necessary to register (absolute reset) the home position.

It can be checked on the status LEDs for the driver whether the absolute reset is necessary. Have an absolute reset completed if the status LEDs for the driver shows the absolute reset is incomplete.

(Note) For battery-less absolute type, conduct an absolute reset after motor replacement.

(Note) There is no battery-less absolute type and simple absolute type in the DC brushless motor type.

[1] Status LEDs for Driver

Driver status (condition) and absolute status can be displayed for each axis to be connected. There is no absolute status display for the incremental type and battery-less absolute type.

LED Display for Upper Connector Axis Numbers (0th, 2nd, 4th and 6th axes)



LED Display for Upper Connector Axis Numbers (1st, 3rd, 5th and 7th axes)



The absolute reset is to be done with using a teaching tool such as the PC software. Shown below are the steps.

- [2] Absolute reset procedure from teaching tool
 - 1) Connect the controller with the actuator. [Refer to Chapters 1 and 2.]
 - 2) For Simple Absolute Type, connect the absolute battery box and the controller with the dedicated cable. [Refer to 2.2 [3] Connection of Absolute Battery]
 - Connect the teaching tool, set the operation mode setting switch on the front face of the panel on the controller to MANU side, and then turn the power on.
 - 4) The absolute encoder error appears on the teaching tool. Perform alarm reset.
 - 5) Perform home-return operation at servo-ON condition. Once the home return is complete, the point of origin is memorized at the same time the origin point is established.

In below explains the procedure using each teaching tool:

(1) For PC software

Select position data on the main screen and click the Alarm button.

Edit position data	a[Axis No.0]						_ 🗆 ×
10 1 6	3 🖻 🛍	🔳 💁 Location	0.00 A	larm code <mark>OEE</mark>			
*	+	Jog Jog	Inc.	Positioning ([est mode]) 💿 Se	rvo
Bw(-)	Fw(+)	Speed 30 [mm/s]	© 0.03mm	Speed 100 [%]	ļ		
- Charles	h		C 0.10mm	<u>8</u>			
1 <u>8</u> 1	each	Slow Fas	st 00.50mm	PM		IA 🛞	arm 🗸



Turn the servo ON with Servo button, and press Home button.

Edit position dat	a[Axis No.0]				_ 🗆 ×
1 🗆 🗲 🖨	🔏 🖻 🛍 🖡	🔲 🛄 🔤 Location	0.00 #	larm code	
4	-	Jog	[Inc.	Positioning(Test mode)	Servo 🖊
Bw(-)	Fw(+)	Speed 30 [mm/s]	© 0.03mm	Speed 100 [%]	Home

(2) For Teaching Pendant (TB-02/TB-03)



	Troubleshooting	Glossary (h) Axis No. 00					
Alarm display Alarm list Check model num. Inquiry							
•Alarm descript.							
Alarm code 0EE Alarm level Cold start							
Name Abs	olute Encoder Error	Detection 2					
Descr. It comes to the condition that the encoder mounted on the battery-less absolute type actuator cannot detect the position information correctly.							
Detail code: **** Adrs: **** Time (yy/mm/dd hh:mm:ss) 17/05/11 17:12:25 Troubleshooting Alarm reset							



Press Trial Operation on the Menu 1 screen.





Press Jog inching on Test run screen.





Touch Servo to turn the servo ON and touch Homing in Jog inching screen.

← û Jog	inching	und Axis No. 🤇
Cur.pos.	0.00 mm	Servo
Jog vel.	Inching	Homing Brake rel.
•10mm/s	•0. 10mm	
●30mm/s	0. 50mm	
100mm/s	 5. 00mm 	♦ BACK(-) FW(+) ♦

(3) For Teaching Pendant (TB-01)

1	Press	Reset Alm.

Alarm		Axis No. 00
Alarm	: * * * *	
Alarm Code	: * * * *	
Detail	: * * * *	
Address	: * * * *	
Time	: 0:03:	47
Back	Reset Alm	Inquiry

Pres	s Trial Operation on the Menu
1 screen.	

Axis No. 00
Trial Operation
Alarm List
Information
Menu2



In case the home position has changed from where it was previously in an absolute reset after the absolute data has lost, it can be adjusted in Parameter No. 22 Home Return Offset. Mark the home position on the mechanical side at the first startup. From the position where it has changed from the original home position after the absolute reset, move the actuator to the marked position with such an operation as JOG operation. Read the coordinates and add (if the number is positive, and subtract if negative) them to the values in Parameter No. 22. (Note) At this time, note the values in Parameter No. 22 before the adjustment so the setting can be put back in any occasions.
7.2 Absolute Battery (for Simple Absolute Type)

Absolute battery and absolute battery box are enclosed in the simple absolute type controllers. The absolute battery is used to back up the absolute data.

The absolute battery has a specified position for each axis number. Refer to the figure below to insert the batteries to the absolute battery box. There is also an instruction for the connector inserting positions for the absolute battery cable. Connect it properly following the figure shown below.

• Front View of Absolute Battery Unit with Cover Removed



Caution : Make sure the power to the controller is turned ON when replacing the battery. It is necessary to conduct the absolute reset when the battery is taken out while the power to the controller is OFF.

7.2.1 Absolute encoder backup specifications

Item	Specifications				
Battery model	AB-7				
Quantity	1 pc/axis (8 units max. / 8 axes)				
Battery voltage	3.6V				
Current capacity	3300mAH				
Nominal	3.6V 3700mAH				
Reference for battery replacing timing ^(Note 1)	Approx. 3 years				
	(It varies significantly by the effects of the usage condition)				

Note 1 Replace the battery regularly.

7.2.2 Absolute Battery Charge

Please have the battery charged for more than 72 hours before using for the first time or after replacing with a new one. The battery gets charged while the controller is supplied with 24V power.

sata norang ti		men battery le nem					
Parameter No.155	Upper limit of encode power-off [rpm]	er revolution at	Reference for battery retaining	Holding time per hour of battery			
setting	When the connected actuator is a model other than RCA2-***NA;	When the connected actuator is RCA2-***NA;	time [days]	charge time (reference) [H]			
0	100	75	20	6.6			
1	200	150	15	5.0			
2	400	300	10	3.3			
3	800	600	5	1.6			

Data holding time (Reference time when battery is new)

Leaving the controller power OFF for more than the data holding time will lead to a loss of the data. Have the battery charged as early as possible.

There is life to the battery and the duration for data holding will decrease. Replace the battery with a new one if the retaining time is remarkably dropped even with enough charging time.

(Example) From Monday to Friday : charge for 8 hours per day, discharge for 16 hours, Saturday and Sunday : When using with discharge Connected axis : Any model except for RCA2-***NA

1) If parameter No.155 = 3 setting;

Total charge amount : Operation hours per day 8 [H] × Retaining time per charge for 1 hour 1.6 [H] × Weekday 5 [days] = 64 [H]

Total discharge amount : Stopped time during night 16 [H] x Weekday 5 [days] + Stopped time on Saturday and Sunday 48 [H] = 128 [H]

Total discharge amount : 16 [h] × 5 [day] + 48 [h] = 128 [h]

→ If starting on Monday with a full-charge, the total amount of the discharge in a week exceeds total amount of battery charge in 64 [H], thus the fully charged storage decreases by 64 [H]. Therefore, it is necessary to have the battery fully charged in every 10-day period.

2) If parameter No.155 = 2 setting;

Total charge amount : Operation hours per day 8 [H] × Retaining time per charge for 1 hour 3.3 [H] × Weekday 5 [days] = 132 [H]

Total discharge amount : Stopped time during night 16 [H] x Weekday 5 [days] + Stopped time on Saturday and Sunday 48 [H] = 128 [H]

→ If starting on Monday, because the total amount of charge has exceeded the total amount of discharge, it is not necessary to have a continuous full charge. 4-hour charge is stored every week.

7.2.3 Absolute Battery Voltage Drop Detection

If the voltage of the absolute battery is dropped, the error detection responding to the voltage is held.

Voltage	PIO Signals	Alarm
2.5V ±8% or less	Alarm signal *ALM ^(Note 1) OFF	0EE Absolute Encoder Error Detection 2 or
		0EF Absolute Encoder Error Detection 3

Note 1 *ALM are the signals of active low. After the power is supplied to the controller, they are usually ON and turned OFF when an error is detected. If the alarm is generated, it will be necessary to absolute reset after the battery replacement. (The controller checks the battery voltage at the time the power is supplied. The controller would not detect it even if the battery voltage is decreased to the alarm level while it is on.)

(Note) It is necessary to have the absolute reset to cancel the alarm.

Chapter 8 Parameter

Parameter data should be set appropriately according to the application requirements. When a change is required to the parameters, make sure to back up the data before the change so the settings can be returned anytime.

With using PC software, it is able to store the backup to the PC. With using a teaching pendant, it is able to store the backup to the memory card. Write down on a memo when data backup is not available.

Also, for the purpose of rapid recovery after the investigation of failure unit or replacing the controller, keep data backup or memo also after the parameter change.

The change to the parameters will be activated after they are edited, written to the non-volatile controller built-in memory (FeRAM), then either software reset or reboot of the power. It will not become active only with setting on the teaching tool.

<u> (1)</u> Warning: (1)	Parameter setting has great influences on operations of the controller. Incorrect parameter setting may not only cause malfunction or failure of the controller to occur but also people and assets to be exposed to risk. The controller is configured to be applicable to normal operation at shipment. Before providing certain change or setting for the controller to be fit to your system, understand the control methods of the controller sufficiently. Please contact us if you have anything unclear.
(2)	Do not turn OFF the power to the controller during the parameter writing.
	Parameter cannot be written properly, which may cause an unexpected operation, and is extremely dangerous.

8.1 Parameter List

Each axis number has the following parameter table. Have the setting and checking on each axis number.

The categories in the table below indicate whether parameters should be set or not. There are five categories as follows:

- A: Check the settings before use.
- B: Use parameters of this category depending on their uses.
- C : Use parameters of this category with the settings at shipments leaving unchanged as a rule. Normally they may not be set.
- D: Parameters of the category are set at shipment in accordance with the specification of the actuator. Normally they may not be set.
- E : Parameters of the category are exclusively used by us for convenience of production. Changing their settings may not only cause the actuator to operate improperly but also to be damaged. So, never change the setting of the parameters.
 Category do not appear on the teaching tool.

Also, the unused parameter numbers are not mentioned in the list.

Parameter List	
----------------	--

(1/5)

No.	itegory	Name	Unit (Note 1)	Input Range	Default factory setting	A M	pplica otor T _{(Note 3}	ble ype	Relevant
	Ca						Р	D	
1	В	Zone Boundary 1 Positive Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on positive side (Note 2)	0	0	0	8.2 [1]
2	В	Zone Boundary 1 Negative Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on negative side (Note 2)	0	0	0	8.2 [83]
3	А	Soft Limit Positive Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on positive side (Note 2)	0	0	0	0.0 [0]
4	А	Soft Limit Negative Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on negative side (Note 2)	0	0	0	0.2 [2]
5	D	Home Return Direction	-	0: Reverse 1: Normal	In accordance with actuator (Note 2)	0	0	0	8.2 [3]
6	С	Push & Hold Stop Judgment Period	ms	0 to 9999	255	0	0	0	8.2 [4]
7	С	Servo Gain Number	-	0 to 31	0 to 31 In accordance with actuator (Note 2)		0	0	8.2 [5] 8.3
8	В	Default Velocity	mm/s [deg/s]	1 to Actuator's max. Rated actuator speed speed (Note 2)		0	0	0	8.2 [6]
9	В	Default Acceleration/Deceleration	G	0.01 to Actuator's max. acceleration/ deceleration	Rated actuator's acceleration/ Deceleration ^(Note 2)	0	0	0	8.2 [7]
10	В	Default Positioning Width	mm [deg]	0.01 to 999.99	9.99 In accordance with actuator (Note 2)		0	0	8.2 [8]
12	В	Current limitation at positioning stop	%	0 to 70	0 to 70 In accordance with actuator (Note 2)		0	-	8.2 [9]
13	С	Current-Limiting Value During Home Return	%	0 to 100 0 to 300	In accordance with actuator (Note 2)	-	•	-	8.2 [10]
15	В	Pause Input Disable Selection	-	0: Enabled 1: Disabled	0: Enabled 0		0	0	8.2 [11]
18	Е	Home Position Check Sensor Input Polarity	-	0 to 2 In accordance with actuator (Note 2)		0	0	-	8.2 [12]
21	В	Servo ON Input Disable Selection	-	0: Enabled 0 1: Disabled		0	0	0	8.2 [13]
22	С	Home Return Offset Level	mm [deg]	0.00 to 9999.99 In accordance with actuator (Note 2)		0	0	0	8.2 [14]
23	В	Zone Boundary 2 Positive Side	mm [deg]	-9999.99 to 9999.99	to 9999.99 Actual stroke on positive side (Note 2)		0	0	8.2 [15]
24	В	Zone Boundary 2 Negative Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on negative side (Note 2)	0	0	0	8.2 [1]

Note 1 The unit [deg] is for rotary actuator and lever type gripper. It is displayed in [mm] in the teaching tools. Note 2 The setting values vary in accordance with the specification of the actuator. At shipment, the parameters are set in accordance with the specification.

Note 3 A: Servo motor type, P: Pulse motor type, D: Brushless DC Motor

Mcon ==

(2/5)Parameter List Applicable Category Default factory Motor Type Relevant Unit (Note 1) No. Name Input Range setting sections Ρ A D 8.2 [16] 0 to 2, 4 to 6 25 **PIO Pattern Selection** 6 А 0 0 0 -3.4.10 1 to 250 (maximum speed for In accordance with mm/s **PIO Jog Velocity** 26 В 0 0 0 8.2 [17] actuator (Note 2) the actuators with [deg/s] 250 or less) 0:Level 27 В Movement Command Type 0 _ 0 0 0 8.2 [18] 1: Edge Default movement direction 0[.] Reverse In accordance with 28 В for excitation-phase signal 8.2 [19] 0 0 actuator (Note 2) 1: Forward detecting movement Exicitation-phase signal 1 to 999 10 0 --29 В 8.2 [20] ms detection time 50 to 999 128 0 0: Conventional method Excitation detection type В 1 0 _ 8.2 [21] 1: New method 1 30 2: New method 2 0: Current Control 1: Distance Control 1 R Pole Sensing Type 8.2 [22] 1 0 _ 2: Distance Control 2 Velocity Loop Proportional In accordance with 8.2 [23] 31 В 1 to 27661 0 0 0 _ actuator (Note 2) Gain 8.3 In accordance with 8.2 [24] 32 в 1 to 217270 0 Velocity Loop Integral Gain 0 0 _ actuator (Note 2) 8.3 In accordance with 8.2 [25] 33 С Torque Filter Time Constant 0 to 2500 0 0 0 _ actuator (Note 2) 8.3 In accordance with mm/s 1 to actuator's 34 С 0 0 8.2 [26 **Push Velocity** 0 actuator (Note 2) [deg/s] max. pressing speed 1 to 250 mm/s (maximum speed for 35 С Safety Velocity 100 8.2 [27] 0 0 0 the actuators with [deg/s] 250 or less) Auto Servo-motor OFF 36 С 0 to 9999 0 sec 0 0 0 Delay Time 1 Auto Servo-motor OFF 8.2 [28] 37 С sec 0 to 9999 0 0 0 0 Delay Time 2 6.1.1 Auto Servo-motor OFF В 0 38 sec 0 to 9999 0 0 _ Delay Time 3 Position Complete Signal 0: PEND 8.2 [29] 39 В 0 0 0 0 Output Method (Note 3) -1: INP 6.1.3 0: Enabled 40 С Home-return Input Disable 0 0 0 0 8.2 [30] -1: Disabled 0: Sensor not used Home position check sensor In accordance with 43 В 1: a contact 0 0 8.2 [31] actuator (Note 2) input polarity 2: b contact 46 В % 0 to 100 100 Velocity override 8.2 [32] 0 0 0 1 to 250 In accordance with mm/s (maximum speed for 47 В PIO Jog Velocity 2 0 0 0 8.2 [33] actuator (Note 2) the actuators with [deg/s] 250 or less) mm 48 в **PIO Inching Distance** 0.01 to 1.00 1.00 0 0 0 [deg/s] 8.2 [34] mm 49 в **PIO Inching Distance 2** 0.01 to 1.00 0 10 0 0 0 [deg/s] Load Output Judgment Time 50 С 0 to 9999 255 8.2 [35] ms 0 -_ Period 0: Enabled 51 В Torque inspected range 0 -0 8.2 [36] 1: Disabled

Note 1 The unit [deg] is for rotary actuator and lever type gripper. It is displayed in [mm] in the teaching tools. Note 2 The setting values vary in accordance with the specification of the actuator. At shipment, the

parameters are set in accordance with the specification.

Note 3 A: Servo motor type, P: Pulse motor type, D: Brushless DC Motor

motorlist _

Para	mete	er List								(3/5)
No.	ategory		Name	Unit ^(Note 1)	Input Range	Default factory setting	A M	otor T (Note 3	ble ype	Relevant sections
52	B	Defau Decel	Ilt Acceleration/ eration Mode	-	0: Trapezoid pattern 1: S-motion 2: Primary delay filter	0	А 0	Р 0	D	8.2 [37]
53	В	Defau	ılt Stop Mode	-	0 to 3 0 to 7	0 (Not applicable)	0 -	- 0	0 -	8.2 [38] 6.1.2
54	С	Curre Numb	nt Control Width	-	0 to 15	In accordance with actuator (Note 2)	0	-	0	8.2 [39]
55	В	Positi Filter	on Command Primary Time Constant	ms	0.0 to 100.0	0.0	0	0	0	8.2 [40] 8.3
56	В	S-mot	tion Rate	%	0 to 100	0	0	0	0	8.2 [41]
71	В	Positi	on Feed Forward Gain	-	0 to 100	0 50	• •	0 -	-	8.2 [42] 8.3
77	D	Ball S	crew Lead Length	mm [deg]	0.01 to 999.99	In accordance with actuator (Note 2)	0	0	0	8.2 [43]
78	D	Axis (Operation Type	-	0: Linear axis 1: Rotary axis	In accordance with actuator (Note 2)	0	0	0	8.2 [44]
79	В	Rotar	y Axis Mode Selection	-	0: Normal mode 1: Index mode	In accordance with actuator (Note 2)	0	0	0	8.2 [45]
80	В	Rotati Selec	onal Axis Shortcut tion	-	0: Disabled 1: Enabled	In accordance with actuator (Note 2)	0	0	0	8.2 [46]
83	В	Absolute unit		-	0: Not used 1: Used	In accordance with specification at order accepted	0	0	-	8.2 [47]
88	D	Softw	are Limit Margin	mm	0 to 9999.99	0	0	0	0	8.2 [48]
91	С	Current Limit Value at Stopping Due to Miss-pressing		-	0: Current limiting value at stop 1: Current limit value during pressing	0	0	0	0	8.2 [49]
97	С	oress et 1	Damping Characteristic Coefficient 1	-	0 to 1000	10	0	-	-	
98	С	tion supp ameter s	Damping Characteristic Coefficient 2	-	0 to 1000	1000	0	-	-	
99	В	Vibrat	Natural Frequency	1/1000Hz	500 to 30000	10000	0	-	-	
100	С		Notch Filter Gain	-	1 to 20000	9990	0	-	-	
101	С	ppress set 2	Damping Characteristic Coefficient 1	-	0 to 1000	10	0	-	-	0.0 [50]
102	С	ation su ameter	Damping Characteristic Coefficient 2	-	0 to 1000	1000	0	-	-	8.2 [50] 4.2
103	В	'ibr; paı	Natural Frequency	1/1000Hz	500 to 30000	10000	0	-	-	
104	С	>	Notch Filter Gain	-	1 to 20000	9990	0	-	-	
105	С	ppress set 3	Damping Characteristic Coefficient 1	-	0 to 1000	0 to 1000 10		-	-	
106	С	ation su	Damping Characteristic Coefficient 2	-	0 to 1000	1000	0	-	-	
107	В	/ibr pai	Natural Frequency	1/1000Hz	500 to 30000	10000	0	-	-	
108	С	~	Notch Filter Gain	-	1 to 20000	9990	0	-	-	
109	В	Defaul	t Vibration Suppress No.	-	0 to 3	0	0	-	-	-

The unit [deg] is for rotary actuator and lever type gripper. It is displayed in [mm] in the teaching tools. The setting values vary in accordance with the specification of the actuator. At shipment, the Note 1 Note 2

parameters are set in accordance with the specification. Note 3 A: Servo motor type, P: Pulse motor type, D: Brushless DC Motor

Para	mete	er List							(4/5)
No.	ategory	Name	Unit (Note 1)	Input Range	Default factory setting	A M	otor T (Note 3	ble ype	Relevant sections
	ů				, , , , , , , , , , , , , , , , , , ,	Α	Р	D	
110	В	Stop Method at Servo OFF	-	0: Rapid stop 1: Deceleration to stop	0	0	0	0	8.2 [52]
112	В	Monitoring Mode Selection Monitoring Period	-	0: Unused 1: Monitor Function 1 2: Monitor Function 2 3: Monitor Function 3	1	0	0	0	8.2 [53]
113	В	Monitoring Period	ms	1 to 60000	1	0	0	0	8.2 [54]
120	С	Servo Gain Number 1	-	0 to 31	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [5]
121	С	Feed Forward Gain 1	-	0 to 100	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [47]
122	С	Velocity Loop Proportional Gain 1	-	1 to 27661	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [23]
123	С	Velocity Loop Integral Gain 1	-	1 to 217270	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [24]
124	С	Torque Filter Time Constant 1	-	0 to 2500	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [25]
125	С	Current Control Width Number 1	-	0 to 15		0	-	-	8.2 [55] 8.2 [39]
126	С	Servo Gain Number 2	-	0 to 31 In accordance with actuator (Note 2)		0	-	-	8.2 [55] 8.2 [5]
127	С	Feed Forward Gain 2	-	0 to 100 In accordance with actuator (Note 2)		0	-	-	8.2 [55] 8.2 [47]
128	С	Speed Loop Proportional Gain 2	-	1 to 27661 In accordance with actuator (Note 2)		0	-	-	8.2 [55] 8.2 [23]
129	С	Speed Loop Integral Gain 2	-	1 to 217270	1 to 217270 In accordance with actuator (Note 2)		-	-	8.2 [55] 8.2 [24]
130	С	Torque Filter Time Constant 2	-	0 to 2500	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [25]
131	С	Current Control Width Number 2		0 to 15	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [39]
132	С	Servo Gain Number 3	-	0 to 31	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [5]
133	С	Feed Forward Gain 3	-	0 to 100	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [47]
134	С	Speed Loop Proportional Gain 3	-	1 to 27661	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [23]
135	С	Speed Loop Integral Gain 3	-	1 to 217270	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [24]
136	С	Torque Filter Time Constant 3	-	0 to 2500	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [25]
137	С	Current Control Width Number 3	-	0 to 15	In accordance with actuator (Note 2)	0	-	-	8.2 [55] 8.2 [39]
138	С	Servo Gain Switchover Time Constant	ms	10 to 2000	10	0	-	-	8.2 [56]
143	B	Overload Level Ratio	%	50 to 100	-	0	-	0	8 2 [57]

 I43
 B
 Overload Level Ratio
 %
 50 to 100
 o
 0
 8.2 [57]

 Note 1
 The unit [deg] is for rotary actuator and lever type gripper. It is displayed in [mm] in the teaching tools.

 Note 2
 The setting values vary in accordance with the specification of the actuator. At shipment, the

parameters are set in accordance with the specification. Note 3 A: Servo motor type, P: Pulse motor type, D: Brushless DC Motor

 $(\Lambda/5)$

ramator List _

Para	mete	er List							(5/5)
No.	ategory	Name	Unit ^(Note 1)	Input Range	Default factory setting	A M	otor T (Note 3	ble ype	Relevant sections
	Ű					А	Р	D	
144	В	Gain Scheduling Upper Limit Multiplying Ratio	%	0 to 1023	0 (Disabled)	-	0	-	8.2 [58]
145	С	GS Velocity Loop Proportional Gain	-	1 to 50000	In accordance with actuator (Note 2)	-	0	-	8.2 [59] 8.2 [23]
146	С	GS Velocity Loop Integral Gain	-	1 to 500000	In accordance with actuator (Note 2)	-	0	-	8.2 [60] 8.2 [24]
147	В	Total Movement Count Threshold	Times	0 to 999999999	0 (Disabled)	0	0	0	8.2 [61]
148	В	Total Operated Distance Threshold	m	0 to 999999999	0 (Disabled)	0	0	0	8.2 [62]
149	В	Zone Output Changeover	-	0: Not to change 1: To change	0	0	0	0	8.2 [63]
151	В	Light Malfunction Alarm Output Select	-	0: Overload warning output 1: Message lebel alarm output		0	0	0	8.2 [64]
152	В	High Output Setting	-	0: DisabledIn accordance with actuator (Note 2)		-	0	-	8.2 [65]
153	В	BU Velocity Loop Proportional Gain	-	1 to 10000 In accordance with actuator (Note 2)		-	0	-	8.2 [66] 8.2 [23]
154	В	BU Velocity Loop Integral Gain	-	1 to 100000 In accordance with actuator (Note 2)		-	0	-	8.2 [67] 8.2 [24]
155	A	Absolute Battery Retention Time	-	0: 20 days 1: 15 days 2: 10 days 3: 5 days	0: 20 days 1: 15 days 2: 10 days 3: 5 days		0	-	8.2 [68] 7.2.2
156	В	Torque Check/Light Malfunction Output Select	-	0: Torque check effective 1: Light malfunction effective		-	0	-	8.2 [69]
158	В	Valid Axis/Invalid Axis Select	-	0: Enabled 0 0 0 0		0	8.2 [70]		
166	В	Startup Current Limit Extension Feature	-	0: Disabled 1: Enabled	0 (Disabled)	-	0	-	8.2 [71]
168	В	Collision Detection Feature	-	0 to 7	0	-	0	-	8.2 [72] 5.2
181	В	Pressing Method	-	0: CON type 1: SEP type	0	0	0	0	8.2 [73]
182	В	Auto Current Adj. Select	-	0: Disabled 1: Enabled	0	-	0	-	8.2 [74] 6.2
Mad	- 4	The weit Ideal is few waters .			in diamlessed in Fran		41 4		in a to ala

Note 1The unit [deg] is for rotary actuator and lever type gripper. It is displayed in [mm] in the teaching tools.Note 2The setting values vary in accordance with the specification of the actuator. At shipment, the

parameters are set in accordance with the specification. Note 3 A: Servo motor type, P: Pulse motor type, D: Brushless DC Motor

8.2 Detail Explanation of Parameters

Establish settings for each axis number.

Caution: • If parameters are changed (writing), provide software reset or reconnect the power to reflect the setting values.

- The unit [deg] is for rotary actuator and lever type gripper. Pay attention that it is displayed in mm in the teaching tools.
- [1] Zone boundary 1 positive side, zone boundary 1 negative side (Parameter No.1, No.2) Zone boundary 2 positive side, zone boundary 2 negative side (Parameter No.23, No.24)

No.	Name	Unit	Input Range	Default factory setting
1	Zone Boundary 1 Positive Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on positive side
2	Zone Boundary 1 Negative Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on negative side
23	Zone Boundary 2 Positive Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on positive side
24	Zone Boundary 2 Negative Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on negative side

These parameters are used to set the zone in which zone signal (ZONE1 or ZONE2) turns ON. The minimum setting unit is 0.01 mm [deg].

If a specific value is set to both zone boundary positive side and zone boundary negative side, the zone signal is not output.

A setting sample is shown below.

[Example of when line axis]





Caution: The zone detection range would not output unless the value exceeds that of the minimum resolution (actuator lead length / No. of Encoder Pluses).

ΜοοΝ

[2] Soft limit positive side, Soft limit negative side (Parameter No.3, No.4)

No.	Name	Unit	Input Range	Default factory setting
3	Soft Limit Positive Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on positive side
4	Soft Limit Negative Side	mm [deg]	-9999.99 to 9999.99	Actual stroke on negative side

0.3mm [deg] is added to the outside of the effective actuator stroke for the setting at the delivery (since there would be an error at the end of effective stroke if set to 0). Change the setting if required for the cases such as when there is interference or to prevent a crash, or when using the actuator with slightly exceeding effective stroke in the operational range. An incorrect soft limit setting will cause the actuator to collide into the mechanical end, so exercise sufficient caution.

The minimum setting unit is 0.01mm.

Note: To change a soft limit, set a value corresponding to 0.3mm outside of the effective stroke.

Example) Set the effective stroke to between 0mm to 80mm Parameter No.3 (positive side) 80.3

Parameter No.4 (negative side) -0.3



The operational range for jog and inching after the home return is 0.2mm [deg] less than the set value.

Alarm Code 0D9 "Soft Limit Over Error" will be generated when the set value exceeded the value (0 when shipped out) set in Parameter No.88 "Software Limit Margin". If the setting is not done in Parameter No.88, the value set in this parameter become the detection value for Alarm Code 0D9 "Soft Limit Over Error".

[3] Home return direction (Parameter No.5)

No.	Name	Unit	Input Range	Default factory setting
5	Home Return Direction	-	0: Reverse 1: Forward	In accordance with actuator

Unless there is a request of Home Reversed Type (option), the home-return direction is on the motor side for the line axis, counterclockwise side for the rotary axis and outer (open) side for the gripper. [Refer to the coordinate system of the actuator.]

If it becomes necessary to reverse the home direction after the actuator is installed on the machine, change the setting.

Caution: There are some models that the home-return direction cannot be changed or the home-return operation cannot be completed and generates an error if this setting is changed for structural reasons.

[4] Press & hold stop judgment period (Parameter No.6)

No.	Name	Unit	Input Range	Default factory setting
6	Push & Hold Stop Judgment Period	ms	0 to 9999	255

Judging completion of pressing operation

(1) For Standard type (PIO pattern 0 to 2)

The operation monitors the torque (current limit value) in percent in "Pressing" of the position table and turns pressing complete signal PEND ON when the load current satisfies the condition shown below during pressing. PEND is turned ON at satisfaction of the condition if the work is not stopped.

- (Accumulated time in which current reaches pressing value [%])
 - (accumulated time in which current is less than pressing value [%]) $\geq 255 \text{ ms}$ (Parameter No.6)



[5] Servo gain number (Parameter No.7)

No.	Name	Unit	Input Range	Default factory setting
7	Servo Gain Number	-	0 to 31	In accordance with actuator

The servo gain is also called position loop gain or position control system proportion gain. The parameter defines the response when a position control loop is used. Increasing the set value improves the tracking performance with respect to the position command. However, increasing the parameter value excessively increases the changes of overshooting. When the set value is too low, the follow-up ability to the position command is degraded and it takes longer time to complete the positioning.

For a system of low mechanical rigidity or low natural frequency (every object has its own natural frequency), setting a large servo gain number may generate mechanical resonance, which then cause not only vibrations and/or noises but also overload error to occur.



[6] Default velocity (Parameter No.8)

No.	Name	Unit	Input Range	Default factory setting
8	Default Velocity	mm/s [deg/s]	1 to Actuator's max. speed	Rated actuator speed

The factory setting is the rated velocity of the actuator.

When a target position is set in an unregistered position table, the setting in this parameter is automatically written in the applicable position number.

It is convenient to set the velocity often used.

[7] Default acceleration/deceleration (Parameter No.9)

No.	Name	Unit	Input Range	Default factory setting
9	Default Acceleration/Deceleration	G	0.01 to Actuator's max. acceleration/ deceleration	Rated actuator's acceleration/ deceleration

The factory setting is the rated acceleration/deceleration of the actuator. When a target position is set in an unregistered position table, the setting in this parameter is automatically written in the applicable position number.

It is convenient to set the acceleration/deceleration often used.

[8] Default positioning width (in-position) (Parameter No.10)

No.	Name	Unit	Input Range	Default factory setting
10	Default Positioning Width	mm [deg]	0.01 ^(Note 1) to 999.99	In accordance with actuator

When a target position is set in an unregistered position table, the setting in this parameter is automatically written in the applicable position number. When the remaining moving distance enters into this width, the positioning complete signal PEND/INP is output. It is convenient to set the positioning width often used.

Caution: Make sure to set a value of or higher than the minimum positioning band width for the initial positioning band width.

Minimum positioning band width = Lead length ÷ No. of Encoder Pluses

Also, for RCP Series 800-pulse encoder, the a treble number should be the minimum positioning band width.

Minimum positioning band width = Lead length \div 800 (No. of Encoder Pluses) \times 3

Note 1 For RCP4 and RCP5 Series actuators, the minimum setting value should be the minimum positioning band width.

For pulse motor type only

[9] Current-limiting value at standstill during positioning (Parameter No.12)

No.	Name	Unit	Input Range	Default factory setting
12	Current-limiting value at standstill during positioning	%	0 to 70	In accordance with actuator

When the value is increased, the stop holding torque is increased.

Even though it is generally unnecessary to change this setting, setting the value larger is necessary in the case a large external force is applied during stop. Please contact IAI.

292

[10] Current-limiting value during home return (Parameter No.13)

No.	Name	Unit	Input Range	Default factory setting	Туре
	Current Limiting Value		0 to 100	In accordance	Pulse Motor Type
13	During Home Return	%	0 to 300	with actuator	Servo Motor Type Brushless DC Motor Type

The setting is established for the current to suit for the standard type actuator at the delivery. Increasing this setting will increase the home return torque.

Normally this parameter need not be changed. If the home return should be completed before the correct position depending on the affixing method, load condition or other factors when the actuator is used in a vertical application, the setting value must be increased. Please contact IAI.

[11] Pause input disable selection (Parameter No.15)

No.	Name	Unit	Input Range	Default factory setting
15	Pause Input Disable Selection	-	0: Enabled 1: Disabled	0

This parameter defines whether the pause input signal is disabled or enabled. If a pause operation is not needed, set the parameter to "1" and an operation becomes available without controlling the pause signal.

oui	oona oning a	ie pause signal.
	Set Value	Descriptio

Set value	Description
0	Enabled (Use)
1	Disabled (Does not use)

[12] Home position check sensor input polarity (Parameter No.18)

For servo motor type and pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
18	Home Position Check Sensor Input Polarity	-	0 to 2	In accordance with actuator

The home sensor is an option.

Set Value	Description
0	Standard specification
	(sensor not used)
1	Input is a contact
2	Input is b contact

[13] Servo ON input disable (Parameter No.21)

No.	Name	Unit	Input Range	Default factory setting
21	Servo ON Input Disable Selection	-	0: Enabled 1: Disabled	0

This parameter defines whether the servo ON input signal is disabled or enabled. When the servo ON input signal is disabled, the servo is turned ON as soon as the controller power is turned ON.

Set this parameter to "1" if servo ON/OFF is not provided.

Set Value	Description
0	Enabled (Use)
1	Disabled (Does not use)

[14] Home return offset level (Parameter No.22)

No.	Name	Unit	Input Range	Default factory setting
22	Home Return Offset Level	mm [deg]	0.00 to 9999.99	In accordance with actuator

In this setting can set the distance from the mechanical end to the home position. An adjustment is available for the following cases.

1) Want to match the actuator home position and the mechanical origin of the system.

- 2) Want to set a new home after reversing the factory-set home direction.
- 3) Want to eliminate a slight deviation from the previous home position generated after replacing the actuator.

[Adjustment Process]

- 1) Homing execution
- 2) Offset check
- 3) Parameter setting change
- 4) If setting a number close to a multiple of the lead length (including home-return offset value = 0) to the home offset value, there is a possibility to servo lock on Z-phase at absolute reset, thus the coordinates may get shifted for the lead length.

For Absolute Type, do not attempt to set a value near a number that the lead length is multiplied by an integral number.

Have enough margin.

After the setting, repeat home return several times to confirm that the actuator always returns to the same home position.

Caution: If the home return offset has been changed, the soft limit parameters must also be adjusted accordingly. In case the there is a necessity of setting a value more than the initial setting, contact IAI.

[15] Zone boundary 2 positive side, zone boundary 2 negative side (Parameter No.23, No.24) [Refer to 8.2 [1].]

[16] PIO pattern selection (Parameter No.25)

No.	Name	Unit	Input Range	Default factory setting
25	PIO Pattern Selection	-	0 to 2, 4 to 6	6

Select an operation pattern. [Refer to 3.4.10 Control Signals for Remote I/O Mode.]

PIO Patterns 0 to 2, 4 and 5 are available to be selected when Remote I/O Mode is selected. PIO Pattern 6 can be selected when other than Remote I/O Mode.

Туре	Set value	Mode	Feature	
PIO pattern 0	0	Positioning mode (Standard type)	 Number of positioning points: 64 points Position command: Binary code Zone signal output: 1 point Position zone signal output: 1 point 	
PIO pattern 1	PIO 1 Teaching mode (Teaching type)		 Number of positioning points: 64 points Position command: Binary code Position zone signal output: 1 point Jog operation enabled Writing current position data to position table enabled 	
PIO pattern 2	2	256-point mode (Number of positioning points256-point type)	 Number of positioning points: 256 points Position command: Binary code Position zone signal output: 1 point 	
PIO pattern 4	4	Solenoid valve mode 1 (7-point type)	 Number of positioning points: 7 points Position command: Individual No. signal ON Zone signal output: 1 point Position zone signal output: 1 point 	
PIO pattern 5	5	Solenoid valve mode 2 (3-point type)	 Number of positioning points: 3 points Position command: Individual No. signal ON Signal equivalent to LS (limit switch) enabled Zone signal output: 1 point Position zone signal output: 1 point 	
Other Remote I/O 6 Mode			 Selectable from the following six types of modes 1) Simple Direct 2) Positioner 1 3) Direct Number Indication 4) Positioner 2 5) Positioner 3 6) Positioner 5 Refer to Chapter 3. Operation for details. 	

[17] PIO jog velocity (Parameter No.26)

No.	Name	Unit	Input Range	Default factory setting
26	PIO Jog Velocity	mm/s [deg/s]	1 to 250 (250 or less of actuator maximum speed)	In accordance with actuator

The setting of JOG operation velocity when the set in the JOG velocity / inching distance switchover signal JVEL is set to OFF.

Set an appropriate value in Parameter No.26 in accordance with the purpose of use.

[18] Movement command type (Parameter No.27)

No.	Name	Unit	Input Range	Default factory setting
27	Movement Command Type	-	0 : Level 1 : Edge	0

Set the input methods for the start signal (ST0 to ST6, or ST0 to ST2 if PIO Pattern = 5) when PIO Pattern 4 = Solenoid Valve Mode 1 (7-point type) and PIO Pattern 5 = Solenoid Valve Mode 2 (3-point type).

-		
Set Value	Input Method	Description
0	Level	The actuator starts moving when the input signal turns ON. When the signal turns OFF during movement, the actuator will decelerate to a stop and complete its operation.
1	Edge	The actuator starts moving when the rising edge of the input signal is detected. The actuator will not stop when the signal turns OFF during the movement, until the target position is reached.



ΜοοΝ

[19] Default movement direction for excitation-phase signal detecting movement (Parameter No.28)

[20] Excitation-phase signal detection time (Parameter No.29)

For servo motor type and pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
28	Default Movement Direction for Excitation-phase Signal Detection	-	0 : Reversed direction 1 : Forward direction	In accordance with actuator

Excitation detection^(Note) starts when the servo is turned ON for the first time after the power is supplied. Define the detection direction at this time.

Even though it is generally unnecessary to change this setting, set this to the direction which the motor is easy to move when the actuator interferes with the mechanical end or peripheral object at the time the power is supplied.

If the direction not interfering is the same direction as the home return direction, set the same values as set to Parameter No.5 Home Return Direction. If the direction is opposite, set the other values from Parameter No.5. (If No.5 is 0, set 1. If No.5 is 1, set 0.)

Note 1 For Simple Absolute Type, the excitation detection is performed at the end of home return operation.

No.	Name	Unit	Input Range	Default factory setting	Specifications
20	Excitation-phase Signal Detection	me	1 to 999	10	Pulse motor type
29	Time	1115	50 to 999	128	Servo motor type

Excitation detection^(Note) starts when the servo is turned ON for the first time after the power is supplied. Define the detection direction at this time.

Even though it is generally unnecessary to change this setting, changing the setting of this parameter may be effective when excitation error is generated or abnormal operation is confirmed.

Please contact us in the case a change is necessary to this parameter.

Note 1 For Simple Absolute Type, the excitation detection is performed at the end of home return operation.

[21] Excitation detection type (Parameter No.30)

For pulse motor type only

For servo motor type and

pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
30	Excitation Detection Type	-	0 : Conventional method 1 : New method 1 (For vertical mount installation) 2 : New method 2 (For horizontal mount installation)	1

Excitation detection^(Note 1) starts when the servo is turned ON for the first time after the power is supplied. In the new method, this operation was made smoother, thus quieter than ever (if compared with our existing products).

In the case the new method 2 (horizontal mount installation) is set and the actuator is mounted vertically, the slider or the rod may drop at the excitation operation. Follow the instructed orientation to install. If the slide or rod drops with the mentioned way of installation, set with the current setting.

Note 1 For Simple Absolute Type, the excitation detection is performed at the end of home return operation.

[22] Pole sensing type (Parameter No.30)

For servo motor type only

No.	Name	Unit	Input Range	Default Factory Setting
30	Pole Sensing Type	-	0 : Current Control 1 : Distance Control 1 2 : Distance Control 2	1

At the time the magnetic pole detection is performed at the serve-on after the power is turned on, the operation system is defined at the same time. It is not necessary to make a change in normal use.

[23] Velocity loop proportional gain (Parameter No.31)

No.	Name	Unit	Input Range	Default factory setting
31	Velocity Loop Proportional Gain	-	1 to 27661	In accordance with actuator

This parameter determines the response of the speed control loop. When the set value is increased, the follow-up ability to the velocity command becomes better (the servo-motor rigidity is enhanced). The higher the load inertia becomes, the larger the value should be set. However, excessively increasing the setting will cause overshooting or oscillation, which facilitates producing the vibrations of the mechanical system.



Also, for the conditions to use this item in the pulse motor type, refer to "Selecting to Use Velocity Loop Proportional Gain and Velocity Loop Integrated Gain" in the bottom of the next page.

[24] Velocity loop integral gain (Parameter No.32)

No.	Name	Unit	Input Range	Default factory setting
32	Velocity Loop Integral Gain	-	1 to 217270	In accordance with actuator

Any machine produces frictions. This parameter is intended to cope with deviation generated by external causes including frictions. Increasing the setting value improves the reactive force

against load change. That is, the servo rigidity increases. However, increasing the parameter value excessively may make the gain too high, which then cause the machine system to be vibrated due to overshoot or shaking.

Tune it to obtain the optimum setting by watching the velocity response.



Also, for the conditions to use this item in the pulse motor type, refer to "Selecting to Use Velocity Loop Proportional Gain and Velocity Loop Integrated Gain" in the bottom of the next page.

[Selecting the Use of velocity loop proportional gain and velocity loop integrated gain]

Even though Velocity Loop Proportional Gain of pulse motor specification can be set to Parameter No.31, 145 and 153, and Velocity Loop Integrated Gain to Parameter No.32, 146 and 154, the values to be effective during an operation is just one of them. The following table shows which parameter number becomes effective in each condition.

Effective Parameter Number					
High Output Setting (Parameter No.152)					
	0 (Disable)	1 (Enable)			
Gain Scheduling	to 100 (Disable)	Parameter No.31, 32	Parameter No.153, 154		
(Parameter No.144)	101 to (Enable)	Parameter No.145, 146	Parameter No.145, 146		

Chapter 8 Parameter

[25] Torque filter time constant (Parameter No.33)

No.	Name	Unit	Input Range	Default factory setting
33	Torque Filter Time Constant	-	0 to 2500	In accordance with actuator

This parameter decides the filter time constant for the torque command. When vibrations and/or noises occur due to mechanical resonance during operation, this parameter may be able to suppress the mechanical resonance. This function is effective for torsion resonance of ball screws (several hundreds Hz).

[26] Pressing velocity (Parameter No.34)

No.	Name	Unit	Input Range	Default factory setting
34	Pressing velocity	mm/s [deg/s]	1 to actuator's max. pressing speed	In accordance with actuator

This is the parameter to set the velocity in pressing operation.

The setting is done considering the actuator type when the product is delivered. [Refer Appendix to 10.4 List of Specifications of Connectable Actuators]

If a change to the setting is required, make sure to have the setting below the maximum pressing velocity of the actuator. Setting it fast may disable to obtain the specified pressing force. Also when setting at a low velocity, take 5mm/s as the minimum. Specified pressing force may not be obtained also when a low speed setting is set.



speed.

[27] Safety velocity (Parameter No.35)

No.	Name	Unit	Input Range	Default factory setting
35	Safety Velocity	mm/s [deg/s]	1 to 250 (maximum speed for the actuators with 250 or less)	100

This is the parameter to set the maximum speed of manual operation while the safety velocity selected in the teaching tool. Do not have the setting more than necessary.

[28] Auto servo motor OFF delay time 1, 2, 3 (Parameter No.36, No.37, No.38)

No.	Name	Unit	Input Range	Default factory setting
36	Auto Servo-motor OFF Delay Time 1	sec	0 to 9999	0
37	Auto Servo-motor OFF Delay Time 2	sec	0 to 9999	0
38	Auto Servo-motor OFF Delay Time 3	sec	0 to 9999	0

Set the duration before the servo turns OFF after positioning process is complete when the power saving function is used.

[Refer to 6.1 Automatic Servo-off and Full Servo Functions.]

[29] Position complete signal output method (Parameter No.39)

No.	Name	Unit	Input Range	Default factory setting
39	Position Complete Signal Output Method	-	0: PEND 1: INP	0

This is the parameter to select the type of the positioning complete signals to be used. It is available except for when PIO Pattern = 5 (Solenoid Valve Type 2 [3-point type]) is selected.

There are 2 types of positioning complete signals and the output condition would differ depending on whether the servo is ON after the positioning is complete or the servo is OFF.

U				
Set Value	Signal Type	During Servo ON (positioning complete)	During Servo OFF	
0	PEND	It will not turn OFF even if the current position is out of the range of the positioning width.	Turns OFF in any case	
1	INP	Turns ON when the current position is in the positionin width, and OFF when out of it.		

Complete position No. outputs PM1 to PM** and current position No. outputs PE0 to PE6 are issued in the similar way.

[30] Home-return Input Disable (Parameter No.40)

No	. Name	Unit	Input Range	Default factory setting
40	Home-return Input Disable	-	0: Enabled 1: Disabled	0

This parameter defines whether the home return input signal is disabled or enabled. Normally this parameter need not be changed.

Set Value	Description
0	Enabled (Use)
1	Disable (Does not use)

[31] Home position check sensor input polarit (Parameter No.43)

For servo motor type and pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
43	Home Position Check Sensor Input Polarity	-	0: Sensor not used 1: a contact 2: b contact	In accordance with actuator

Set the input signal polarity of the home position check sensor (option).

Since the home position check sensor is installed just below the mechanical end, if the actuator reverses without reaching the mechanical end because of a reason such as interference, an alarm will be generated because it will be identified as off the position and causes 0BA "Home sensor non-detection" error.

It is generally unnecessary to change the setting.

	8 8
Set Value	Description
0	Home position check sensor not used
1	Sensor polarity: Contact a
2	Sensor polarity: Contact b

[32] Velocity override (Parameter No.46)

No.	Name	Unit	Input Range	Default factory setting
46	Velocity Override	%	1 to 100	100

When move commands are issued from the PLC, the moving speed set in the "Velocity" field of the position table can be overridden by the value set by this parameter.

Actual movement velocity = [Velocity set in the position table] × [setting value in Parameter No.46]

Example) Value in the "Velocity" field of the position table: 500mm/s

Setting in Parameter No.46 20%

In this case, the actual movement speed becomes 100mm/s.

The minimum setting unit is 1% and the input range is 1 to 100%.

(Note) This parameter is ignored for move commands from a teaching tool such as PC software.

[33] PIO jog velocity 2 (Parameter No.47)

No.	Name	Unit	Input Range	Default factory setting
47	PIO Jog Velocity 2	mm/s (deg/s)	1 to 250 (250 or less of actuator maximum speed)	In accordance with actuator

The setting of JOG operation velocity when the set in the JOG velocity / inching distance switchover signal JVEL is set to ON.

Set the appropriate value considering how the system is to be used.

However, it will operate at the value in this parameter only when JVEL Signal is on and Command Speed Setting = 0 at the same time in the direct indication mode. (Operation will be made at the Command Speed setting value when JVEL Signal is on and Command Speed Setting $\neq 0.$)

[34] PIO inch distance, PIO inch distance 2 (Parameter No.48, No.49)

No.	Name	Unit	Input Range	Default factory setting
48	PIO Inching Distance	mm [deg/s]	0.01 to 1.00	1.00
49	PIO Inching Distance 2	mm [deg/s]	0.01 to 1.00	0.10

When the selected PIO pattern is "1" (teaching mode), this parameter defines the inching distance to be applied when inching input commands are received from the PLC. Parameter No.49 defines the inching distance when 1 is set in the JOG speed / inching distance switchover signal JVEL for field network type.

The maximum allowable value is 1mm.

[35] Load output judgment time period (Parameter No.50)

For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
50	Load Output Judgment Ttime Period	ms	0 to 9999	255

This parameter defines the time taken to judging whether torque level status signal (TRQS) is ON.

If the command torque exceeds the value set in "Threshold" of position data for the time set by this parameter during pressing operation, torque level status signal (TRQS) is turned ON. Refer to 3.8.2 [4] or 3.8.3 [3] Pressing Operation for the details of the pressing operation.

[36] Torque inspected range (Parameter No.51)

For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
51	Torque Inspected Range	-	0 : Enabled 1 : Disabled	0

The load output (LOAD) turns ON when it exceeds the current [%] set as the position table threshold in the range (check range) set with Zone +/Zone - in the position table during the pressing operation.

[37] Default acceleration/deceleration mode (Parameter No.52)

No.	Name	Unit	Input Range	Default factory setting
52	Default Acceleration/ Deceleration Mode	-	0 to 2	0 (Trapezoid)

When a target position is written to an unregistered position table, this value is automatically set as the "Acceleration/deceleration mode" of the applicable position number. Refer to [3.3 Position Data Setting 11) Acceleration/Deceleration Mode] for Acceleration/Deceleration Mode

Set Value	Description
0	Trapezoid
1	S-motion
2	Primary delay filter

[38] Default stop mode (Parameter No.53)

No.	Name	Unit	Input Range	Default factory setting
53	Default Stop Mode	-	0 to 3 (Other than pulse motor specification) 0 to 7 (Pulse motor specification)	0 (Not applicable)

This parameter defines the power-saving function.

[39] Current control width number (Parameter No.54)

[Refer to 6.1 Automatic Servo-off and Full Servo Functions.]

For servo motor type and brushless DC motor type only

No.	Name	Unit	Input Range	Default factory setting
54	Current Control Width Number	-	0 to 15	In accordance with actuator

This parameter is for the manufacturer's use only to determine the response capability of the current loop control. Therefore, do not change the settings in this parameter. If the parameter ischanged carelessly, control safety may be adversely affected and a very dangerous situationmay result.

[40] Position command primary filter time constant (Parameter No.55)

No.	Name	Unit	Input Range	Default factory setting
55	Position Command Primary Filter Time Constant	ms	0.0 to 100.0	0.0

This is to be used when setting the value in "Acceleration/Deceleration Mode" box in the position table to 2 "Primary Delay Filter".

The primary delay filter is disabled if "0" is set.

The greater the setting value is, the longer the delay is and the slower the acceleration/deceleration is. The impact at the acceleration and deceleration will be eased, but the cycle time will become longer.



ΜοοΝ

[41] S-motion rate (Parameter No.56)

No.	Name	Unit	Input Range	Default factory setting
56	S-motion Rate	%	0 to 100	0

This parameter is used when the value in the "Acceleration/deceleration mode" field of the position table is set to "1 (S-motion)".

This enables to ease the impact at acceleration and deceleration without making the cycle time longer.



The S-motion is a sine curve that has the acceleration time as 1 cycle. The level of its swing width can be set by this parameter

The level of its swill	The level of its swing what can be set by this parameter.			
Setting [%]	Level of swing width			
0	No S-motion (Dotted line shown in the image below)			
100	Sine curve swing width × 1 (Double-dashed line shown in the image below)			
50	Sine curve swing width × 0.5 (Dashed line shown in the image below)			
10	Sine curve swing width × 0.1 (Solid line shown in the image below)			



Caution:

 If the S-motion is specified in acceleration/deceleration mode, executing position command or direct value command while the actuator is moving causes an actuator to move along the trapezoid pattern.
 To change a speed during operation, he sure to specify such a position command

To change a speed during operation, be sure to specify such a position command while the actuator is in pause state.

- 2) In the index mode of rotary actuator, the S-motion control is disabled. If S-motion acceleration/deceleration is specified, the trapezoid pattern is used in acceleration/deceleration mode.
- 3) If acceleration time or deceleration time exceeds 2 seconds, do not specify S-motion control. The actuator will be the trapezoid operation.
- 4) Do not perform temporary stop during acceleration or deceleration. The speed change (acceleration) may cause the dangerous situation.

ΜοοΝ

[42] Position Feed forward gain (Parameter No.71)

No.	Name	Unit	Input Range	Default factory setting	Туре
71 Position Feed Forwa	Position Feed Forward Gain	-	- 0 to 100	0	Pulse Motor Type Servo Motor Type
				50	Brushless DC Motor Type

This parameter defines the level of feed forward gain to be applied to position control. Setting this parameter allows the servo gain to be increased and the response of the position control loop to be improved. This is the parameter to improve the takt time and traceability even more after fine-tuning the settings for "Servo Gain Number (Parameter No.7)", "Velocity Loop Proportional Gain (Parameter No.31)", etc.

This can result in shorter positioning time.

The gain adjustment of position, speed and current loop in feedback control can directly change the response of the servo control system. Thus, improper adjustment may cause the control system to be unstable and further vibrations and/or noises to occur. On the other hand, since this parameter only changes the speed command value and does not relate with the servo loop, it neither makes the control system unstable nor generate continuous vibrations and/or noises. However, excessive setting may generate vibrations and/or noises until the machine can follow command values in every operation.

In the trapezoidal pattern, adding the value resulting from multiplying the speed command by the feed forward gain to the speed command can reduce the delay of speed follow-up and the position deviation.

The feedback control providing control in accordance with the result causes control delay to occur. This conducts the supportive control independent from the control delay.



Caution: Anti-vibration control function is unavailable when the feed-forward gain is used (with the settings except for 0).

[43] Ball screw lead length (Parameter No.77)

No.	Name	Unit	Input Range	Default factory setting
77	Ball Screw Lead Length	mm	0.01 to 999.99	In accordance with actuator

This parameter set the ball screw lead length.

The factory setting is the value in accordance with the actuator characteristics.

Caution: If the setting is changed, not only the normal operation with indicated speed, acceleration or amount to move is disabled, but also it may cause a generation of alarm, or malfunction of the unit.

[44] Axis operation type (Parameter No.78)

No.	Name	Unit	Input Range	Default factory setting
78	Axis Operation Type	-	0: Linear axis 1: Rotary axis	In accordance with actuator

This parameter defines the type of the actuator used.

Connected Actuator	Set Value	Reference
Linear Axis	0	Actuator other than rotary type
Rotary Axis	1	Actuator of rotary type

(Note) Refer to 10.4 List of Specifications of Connectable Actuators for the rotary type actuators.

Caution: Do not change the setting of this parameter. Failure to follow this may cause an alarm or fault to occur.

[45] Rotary axis mode selection (Parameter No.79)

No.	Name	Unit	Input Range	Default factory setting
79	Rotary Axis Mode Selection	-	0: Normal mode 1: Index mode	In accordance with actuator

This parameter defines the mode of the rotational axis.

When the Parameter No.78 (Axis Operation Type) is set to "1: Rotary Axis" and the index mode is selected, the current value indication is fixed to "0 to 359.99". When the index mode is selected, the short course control is enabled.

Set Value	Description
0	Normal Mode
1	Index Mode

• The index mode cannot be specified for actuators of absolute specification.

▲ Caution:	• When it is set to "Index Mode", the push & hold operation is not available. Even when data is entered in the "Push & Hold" data box in the Position Data, it becomes invalid and normal operation is performed. The positioning width becomes the parameter's default value for the positioning width.
	• Change the value in the soft limit at the same time when changing the setting of Index Mode to Normal Mode. Parameter data error would be generated if the value in the soft limit is set to 0. Set a value that is -0.3mm out of the effective stroke.

[46] Rotational axis shortcut selection (Parameter No.80)

No.	Name	Unit	Input Range	Default factory setting
80	Rotational Axis Shortcut Selection	-	0: Disabled 1: Enabled	In accordance with actuator

Select whether valid/invalid the shortcut when positioning is performed except for when having the relative position movement in the multiple rotation type rotary actuator.

The shortcut means that the actuator is rotated to the next position in the rotational direction of the smaller travel distance.

Set Value	Description
0	Shortcut Invalid
1	Shortcut Valid

Refer to [Nearer Direction Control of Multi-Rotation Type Rotary Actuator] in 3.8.2 Position Number Input Operation.

[47] Absolute unit (Parameter No.83)

For servo motor type and pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
83	Absolute Unit	-	0: Not used 1: Used	In accordance with specification at order accepted

[For pulse motor type]

Set to 1 if simple absolute type or battery-less absolute type and 0 if others.

Set to 0 when using the battery-less absolute in incremental.

[For servo motor type]

Set to 1 for Simple Absolute, and set to 0 for other types.

The battery-less absolute cannot be used in incremental.

[48] Software limit margin (Parameter No.88)

No.	Name	Unit	Input Range	Default factory setting
88	Software Limit Margin	mm (deg)	0 to 9999.99	0

This is the parameter to set the position of over error detection against the soft limit errors set in Parameters No.3 and No.4.

It is not necessary to change the setting in normal use.



[49] Current limit value at stopping due to miss-pressing (Parameter No.91)

No.	Name	Unit	Input Range	Default factory setting
91	Current Limit Value at Stopping Due to Miss-pressing	-	0: Current limiting value at stop 1: Current limit value during pressing	0

This parameter select the restricted current value at stopping due to miss-pressing. This restricted current value locks the servo till the next moving command.

Set Value	Description
0	Use the current limit value (Parameter No. 12) at positioning stop.
1	Use the current limit value at pressing set in the position table.



[50] Damping characteristic coefficient 1, 2 / Natural frequency / Notch filter gain (Parameter No.97 to No.108)

	No.	Name	Unit	Input range	Default factory setting
Parameter set 1	97	Damping characteristic coefficient 1	-	0 to 1000	10
	98	Damping characteristic coefficient 2	-	0 to 1000	1000
	99	Natural frequency	1/1000Hz	500 to 30000	10000
	100	Notch filter gain	-	1 to 20000	9990
Parameter set 2	101	Damping characteristic coefficient 1	-	0 to 1000	10
	102	Damping characteristic coefficient 2	-	0 to 1000	1000
	103	Natural frequency	1/1000Hz	500 to 30000	10000
	104	Notch filter gain	-	1 to 20000	9990
Parameter set 3	105	Damping characteristic coefficient 1	-	0 to 1000	10
	106	Damping characteristic coefficient 2	-	0 to 1000	1000
	107	Natural frequency	1/1000Hz	500 to 30000	10000
	108	Notch filter gain	-	1 to 20000	9990

This parameter is exclusively used for vibration suppress control. [Refer to Chapter 4 Vibration Suppress Control Function for details.]

[51] Default vibration suppress No. (Parameter No.109)

For servo motor type only

No.	Name	Unit	Input Range	Default factory setting
109	Default Vibration Suppress No.	-	0 to 3	0

This parameter is exclusively used for vibration suppress control. [Refer to Chapter 4 Vibration Suppress Control Function for details.]

[52] Stop method at servo OFF (Parameter No.110)

No.	Name	Unit	Input Range	Default factory setting
110	Stop Method at Servo OFF	-	0: Sudden Stop 1: Deceleration to stop	0

This parameter select how to stop the actuator at issue of servo OFF command, emergency stop or occurrence of an error (operation release level).

	Set Value				
	0 : Sudo	len Stop	1 : Deceleration to stop		
Stop Command	In Anti-Vibration Control Process	In Normal Positioning Control Process	In Anti-Vibration Control Process	In Normal Positioning Control Process	
Pause	Vibration Control Normal Deceleration and Stop Stop		Vibration Control	Normal	
Servo OFF			Deceleration and	Deceleration and	
Emergency Stop	Emergency Stop Sudden stop due to emergency		Stop	Stop	
Error (Operation	stop torque				
Cancellation Level)					
Error (Cold Start)	Suc	dden stop due to e	mergency stop tor	que	

[53] Monitoring mode selection (Parameter No.112)

No.	Name	Unit	Input Range	Default factory setting
112	Monitoring Mode Selection	-	0: Unused 1: Monitor Function 1 2: Monitor Function 2 3: Monitor Function 3	1

The controller can be connected with PC software to monitor the servo.

This parameter allows you to select a monitoring mode function (number of channels in the servomotor).

Check the Instruction Manual of the RC PC software for details.

Set Value	Description
0	Unused
1	Sets the 4CH record mode.
2	Sets the 8CH record mode.
3	Sets the 2CH record mode.

[54] Monitoring period (Parameter No.113)

No.	Name	Unit	Input Range	Default factory setting
113	Monitoring Period	ms	1 to 60000	1

This is the parameter to set up the frequency to the initial setting^(Note 1) of time to obtain data (Sampling Frequency) when the monitoring mode is selected.

By setting the value in this parameter bigger, the frequency of data obtaining can be made longer.

It is set to 1ms in the initial setting. Up to 60000ms can be set.

1ms frequency setting	60000ms frequency setting
Up to 2.048 seconds in 4CH	Up to 34 hours 8 minutes in 4CH
record mode	record mode
Up to 1.024 seconds in 8CH	Up to 17 hours 4 minutes in 8CH
record mode	record mode
Up to 4.096 seconds in 2CH	Up to 68 hours 16 minutes in 2CH
record mode	record mode

Note 1 The sampling period can be changed in the RC PC software.

For servo motor type only

[55] Servo gain number / Position Feed forward gain / Velocity loop proportional gain / Velosity loop integral gain / Torque filter time constant / Current control width number (Parameter No.120 to 137)

	No.	Name	Unit	Input Range	Default factory setting
	120	Servo gain number 1	-	0 to 31	
	121	Position Feed forward gain 1	-	0 to 100	
Coin oct 1	122	Velocity loop proportional gain 1	-	1 to 27661	In accordance
Gain set i	123	Velosity loop integral gain 1	-	1 to 217270	with actuator
	124	Torque filter time constant 1	-	0 to 2500	
	125	Current control width number 1	-	0 to 15	
	126	Servo gain number 2	-	0 to 31	
	127	Position Feed forward gain 2	-	0 to 100	
Coin act 2	128	Velocity loop proportional gain 2	-	1 to 27661	In accordance
Gain set 2	129	Velosity loop integral gain 2	-	1 to 217270	with actuator
	130	Torque filter time constant 2	-	0 to 2500	
	131	Current control width number 2	-	0 to 15	
	132	Servo gain number 3	-	0 to 31	
	133	Position Feed forward gain 3	-	0 to 100	
Gain set 3	134	Velocity loop proportional gain 3	-	1 to 27661	In accordance
	135	Velosity loop integral gain 3	-	1 to 217270	with actuator
	136	Torque filter time constant 3	-	0 to 2500	
	137	Current control width number 3	-	0 to 15	

- Servo gain number 1/2/3 (Parameter No. 120, 126, 132) This parameter determines the response of the position control loop. [Refer to 8.2 [5] Servo gain number.]
- Position Feed forward gain 1/2/3 (Parameter No. 121, 127, 133) This parameter defines the feed forward gain of the position control system. [Refer to 8.2 [47] Position Feed forward gain.]
- Velocity loop proportional gain 1/2/3 (Parameter No. 122, 128, 134) This parameter determines the response of the speed control loop. [Refer to 8.2 [23] Velocity loop proportional gain.]
- Velosity loop integral gain 1/2/3 (Parameter No. 123, 129, 135) This parameter determines the response of the speed control loop. [Refer to 8.2 [24] Velosity loop integral gain.]
- Torque filter time constant 1/2/3 (Parameter No. 124, 130, 136) This parameter decides the filter time constant for the torque command. [Refer to 8.2 [25] Torque filter time constant.]
- Current control width number 1/2/3 (Parameter No. 125, 131, 137) This parameter defines the control width of the current control system. [Refer to 8.2 [39] Current control width number.]

[Reference Item] 3.3 Position Data Setting 13)-2 Gain Set

[56] Servo gain switchover time constant (Parameter No.138)

MCON

For servo motor type only

No.	Name	Unit	Input Range	Default factory setting
138	Servo Gain Switchover Time Constant	ms	10 to 2000	10

When a switchover of the servo gain set is commanded in the position table, the switchover process is completed after time more than 3 times of the time spent in the setting of this parameter is passed since the operation of the commanded position number has started.

Caution: A time constant being rather short may cause the servo gain to change rapidly to have the operation of the actuator unstable.

[57] Overload level ratio (Parameter No. 143)

For servo motor type and brushless DC motor type only

No.	Name	Unit	Input Range	Default factory setting
143	Overload Level Ratio	%	50 to 100	100

With the motor temperature of when an operation is held at the rating being set as 100%, the 048 overload warning (message level) is output when the motor temperature exceeds the rate set in this parameter. [Refer to 8.2 [64].]

The judgment would not be made if the value is set to 100%.

Do not attempt to change the setting for this feature from the initial setting in the pulse motor type as the feature is not applicable in this type.

For pulse m	otor type only
-------------	----------------

[58] Gain scheduling upper limit multiplying ratio (Parameter No.144)

No.	Name	Unit	Input Range	Default factory setting
144	Gain Scheduling Upper Limit Multiplying Ratio	%	0 to 1023	0 (Disabled)

Gain scheduling is the function to change the gain in accordance with the operation speed. This parameter shows the multiplying rate of the upper limit of the changeable gain. With the set multiplying rate, the values for GS Velocity Loop Proportional Gain (Parameter No.145) and GS Velocity Loop Integrated Gain (Parameter No.146) are changed.

Set Value	Description		
100 or less	Gain scheduling disabled		
101 to 1023	Gain scheduling enabled (Recommended value 300)		

[59] GS velocity loop proportional gain (Parameter No.145)

For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
145	GS Velocity Loop Proportional gain	-	1 to 50000	In accordance with actuator

When the gain scheduling upper multiplying rate (Parameter No.144) is set to 101 or more, this parameter setting becomes effective for Velocity Loop Proportional Gain.

[Refer to the 8.2 [23] Velocity loop proportional gain for the details]

Also, for the conditions to use this item, refer to "Selecting to Use Velocity Loop Proportional Gain and Velocity Loop Integrated Gain" in the bottom of 8.2 [24].

[60] GS velocity loop integral gain (Parameter No.146)

For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
146	GS Velocity Loop Integral Gain	-	1 to 500000	In accordance with actuator

When the gain scheduling upper multiplying rate (Parameter No.144) is set to 101 or more, this parameter setting becomes effective for Velocity Loop Integrated Gain.

[Refer to the 8.2 [24] Velocity loop integral gain for the details]

Also, for the conditions to use this item, refer to "Selecting to Use Velocity Loop Proportional Gain and Velocity Loop Integrated Gain" in the bottom of 8.2 [24].

[61] Total movement count target value (Parameter No.147)

No.	Name	Unit	Input Range	Default factory setting
147	Total movement count target value	Times	0 to 999999999	0 (Disabled)

Alarm Code 04E "Exceeded Movement Count Threshold" is generated when the total movement count exceeds the value set to this parameter. The judgment would not be made if the value is set to 0.

[62] Total operated distance target value (Parameter No.148)

No.	Name	Unit	Input Range	Default factory setting
148	Total operated distance target value	m	0 to 999999999	0 (Disabled)

Alarm Code 04F "Exceeded Operated Distance Threshold" is generated when the total operation distance exceeds the value set to this parameter. The judgment would not be made if the value is set to 0.

[63] Zone output changeover (Parameter No.149)

No.	Name	Unit	Input Range	Default factory setting
149	Zone Output Changeover	-	0: Not to change 1: To change	0

When there is PZONE signal to the current PIO pattern or the Field Network Operation Mode and no ZONE1 or ZONE2 signal, it is available to change the PZONE signal to either ZONE1 or ZONE2 signal.

(Note) ZONE1 signal is assigned prior to ZONE2 signal.

The correlation between the setting of Parameter No. 25 "PIO Pattern Select" and the zone signal output is as shown in the table below.

Operation Mode	Parameter No.25 PIO pattern selection	Parameter No.149 Zone Output Changeover Set Value		
Mode		0	1	
	0	PZONE	ZONE2	
Domoto 1/0	1		ZONE1	
Remote I/O	2	PZONE		
Mode	4	DZONE		
	5	FLONE	ZONEZ	
MCON

[64] Light Malfunction Alarm Output Select (Parameter No.151)

No.	Name	Unit	Input Range	Default factory setting
151	Light Malfunction Alarm Output Select	-	0: Overload warning output 1: Message lebel alarm output	1

If set to 0, *ALML will be generated when overload level ratio (Parameter No. 143) has been exceeded.

If set to 1, *ALML will be generated when a message level alarm has been generated.

[65] High output setting (Parameter No.152)

For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
152	High Output Setting	-	0: Disabled 1: Enabled	0 (Disabling)

Set whether use the high output function. Note that it is necessary to indicate the high-output setting type (option) and have an actuator applicable for high-output (Note 1) connected. (Note 1) High-output applicable actuator : RCP4, RCP5 Series

[66] BU velocit	y loop proportional gain (Parameter No.153)	For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
153	BU Velocity Loop Proportional Gain	-	1 to 10000	In accordance with actuator

The setting in this parameter gets effective for Velocity Loop Proportional Gain when Parameter No. 152 "High-Output Setting" is valid and No. 144 "Gain Scheduling Upper Magnification" is set to 100 or lower.

[Refer to the 8.2 [23] Velocity loop proportional gain for the details]

Also, for the conditions to use this item, refer to "Selecting to Use Velocity Loop Proportional Gain and Velocity Loop Integrated Gain" in the bottom of 8.2 [24].

[67] BU velocity loop integral gain (Parameter No.154)
--

For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
154	BU Velocity Loop Integral Gain	-	1 to 100000	In accordance with actuator

The setting in this parameter gets effective for Velocity Loop Integral Gain when Parameter No. 152 "High-Output Setting" is valid and No. 144 "Gain Scheduling Upper Magnification" is set to 100 or lower.

[Refer to the 8.2 [24] Velocity loop integral gain for the details]

Also, for the conditions to use this item, refer to "Selecting to Use Velocity Loop Proportional Gain and Velocity Loop Integrated Gain" in the bottom of 8.2 [24].

For servo motor type at

[68] Absolute battery retention time (Parameter No.155)

For servo motor type and pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
155	Absolute Battery Retention Ttime	-	0:20 days 1:15 days 2:10 days 3: 5 days	0

For simple absolute type, set how long the encoder position information is to be retained after the power to the controller is turned OFF. The setting can be selected from 4 phases and as the motor rotation speed gets slower, the time to retain the position information gets longer. In the case that there is a possibility that the slide or the rod of the actuator that transports the work may be moved by an external force, follow the table below and calculate (Note 1) the number of rotation from the moved speed and set this parameter to the value faster than this value. If the motor rotation setting value exceeds the set value, the position information will be lost. [Refer to the 7.2.2 Absolute Battery Charge]

Setting	Upper Limit of Moto Power being	Position information retaining time (reference)	
-	Other than RCA2-***NA	RCA2-***NA	
0	100	75	20 days
1	200	150	15 days
2	400	300	10 days
3	800	600	5 days

For pulse motor type only

[69] Torque check/Light malfunction output select (Parameter No.156)

No	Name	Unit	Input Range	Default factory setting
156	Torque Check/Light Malfunction Output Select	-	0: Outputs load output judgment status signal or torque level status signal 1: Message of light malfunction alarm output	0

Output of the load judgment output status signal (LOAD) or the torque level status signal (TRQS) can be changed to the output of the light malfunction alarm (ALML). Selection of whether to make the light malfunction alarm output the overload warning output or message level alarm output can be conducted in Parameter No. 151. [Refer to the 8.2 [64].]

[70] Valid axis/Invalid axis select (Parameter No.158)

No.	Name	Unit	Input Range	Default factory setting
158	Valid Axis/Invalid Axis Select	-	0: Enabled 1: Disabled	0

In the case an operation is desired to be made with less axes than what were purchased, by setting this parameter to ineffective, an alarm would not be generated.

It is useful when connecting specific axes for operation at the startup or can be reserved for an extension in the future.

MCON

For pulse motor type only

[71] Startup Current Limit Extension Feature (Parameter No.166)

No.	Name	Unit	Input Range	Default factory setting
166	Startup Current Llimit Extension Feature	-	0: Disabled 1: Enabled	0 (Disabling)

Change the setting when this feature is necessary in the models stated below.

Applicable Models: RCP2-GRS/GRSS/GRST/GRM/GR3 S/GRLS

When the load is high at the start of movement to the target point, by having high current flowed for a certain period of time, the actuator operates with large force. It is expected to work well on an actuator with high static friction of load such as a condition of getting sticky.

/ Warning: Do not attempt to set this parameter valid unless necessary.

- Make sure to confirm the followings when it is to be changed.
 - As it generates high force in case also of load other than static friction, it may cause injury, damage on a workpiece or influence to the actuator life.
 - As current higher than usual flows, it may require higher current amperage.

Also, note that this feature would not activate at the start of movement for following situations even if this parameter is set valid.

- 1) Home return
- 2) Operation resumed by cancelling pause
- 3) When movement command is issued during operation
- 4) Movement backward or forward by the actuator pushed due to such as deformation of a workpiece in a condition after pressing operation is finished and there is no next movement command

[72] Collision Detection Feature (Parameter No.168)

MCON :

For pulse motor type only

No.	Name	Unit	Input Range	Default factory setting
168	Collision Detection Feature	-	0 to 7	0

It is a feature to generate a collision detection alarm and stop the operation (turn the servo OFF) when the actuator is crashed.

Detection is conducted in the range set that the position zone is set. [Refer to the Chapter 5 Collision Detection Feature]

Setting value	Operation status	Alarm level
0	Detection not to be conducted (same when set to 2, 4 or 6)	-
1	Detection is conducted in position zone setting range.	
3 (Note 1)	 Detection is conducted in position zone setting range, but is not conducted in the following conditions. In this setting, it can avoid a mistake to detect the current during acceleration. The first movement after releasing from a pause Movement from a stop in the positon zone range 	Operation cancellation level
5	Detection is conducted in position zone setting range.	
7 (Note 1)	 Detection is conducted in position zone setting range, but is not conducted in the following conditions. In this setting, it can avoid a mistake to detect the current during acceleration. The first movement after releasing from a pause Movement from a stop in the positon zone range 	Message level

Note 1 In this setting, it can avoid a mistake to detect the current during acceleration.

Μςον

[73] Pressing Type (Parameter No.181)

No.	Name	Unit	Input Range	Default factory setting
181	Pressing type	-	0: Type CON 1: Type SEP	0

The pressing method can be selected from CON type and SEP type.

[Pressing Operation CON Method]

After reaching the target position (Note 1) from the current position, the actuator moves with the pressing speed for the distance set as the pressing band width.

The positioning complete signal (PEND) turns ON if the work piece hits and pressing is judged as completed while in the pressing operation.

Note 1 In Direct Indication Mode, it is the value input in the target position register.



[Pressing Operation SEP Method]

The pressing operation is performed with the start position set at the point in front of the target position (Note 1) for the width of the positioning width (for Direct Indication Mode). The positioning complete signal (PEND) turns ON if the work piece hits and pressing is judged as completed while in the pressing operation.

Note 1 In Direct Indication Mode, it is the value input in the target position register. (Note) Pulling operation cannot be performed.



For pulse motor type only

[74] Selecting Automatic Current Reduction Feature (Parameter No.182)

MCON

No.	Name	Unit	Input Range	Default factory setting
182	Auto Current Adj. Select	-	0: Disabled 1: Enabled	0

It is a feature to make a stop by having the current flow considering the external force influence when performing the complete stop in positioning.

It will be able to save the power consumption when the transported load is small. [Refer to 6.2 Selecting Automatic Current Reduction Feature]

8.3 Servo Adjustment

The parameters are preset at the factory before shipment so that the actuator operates stably within the rated (maximum) transportable weight.

However, the preset setting cannot always be the optimum load condition in the actual use. In such cases, servo adjustment may be required.

This section describes the basic servo adjustment method.

Caution: Rapid and excessive settings are dangerous. They may devices including the actuator to be damaged and/or people to be injured. Take sufficient note on the setting. Record settings during servo adjustment so that prior settings can always be recovered.

When a problem arises and the solution cannot be found, please contact IAI.

No.	Situation that requires adjustment	How to Adjust
1	Takes time to finish positioning Positioning accuracy is not appropriate Shorter takt time is desired	 Set Parameter No.55 "Position command primary filter time constant" to "0" if it is set. Increase the value of Parameter No.7 "Servo gain number". By setting a larger value, the follow-up ability to the position command becomes better. Set the value to any of 3 to 10 roughly or up to 15 at the maximum. If the value is too large, an overshoot is caused easily and may cause noise or vibration. If the value of Parameter No.7 "Servo gain number" is increased. also adjust the Parameter No.31 "Speed loop proportional gain" in increase the value of Parameter No.31 "Speed loop proportional gain" in speed loop proportional gain. To increase the value of Parameter No.31 "Speed loop proportional gain" by about 20% of the default. Prior to the setting, adjust Parameter No.7 "Servo gain number".
2	Vibration is generated at acceleration/deceleration	 The cause of the problem is excessive "acceleration/deceleration setting" or vulnerable structure of the unit on which the actuator is installed. If possible, reinforce the unit itself, first. Decrease the values of "acceleration/deceleration setting". Decrease the number of Parameter No.7 "Servo gain number". If the Parameter No.7 "Servo gain number" is too low, it takes long time to finish the positioning.
3	Speed is uneven during the movement Speed accuracy is not appropriate	 Increase the value of Parameter No.31 "Speed loop proportional gain". By setting a larger value, the follow-up ability to the speed command becomes better. Setting too large value makes the mechanical components easy to vibrate. As a reference for the setting, increase the value little by little by 20% from the initial setting.

8.3.1 Adjustment of Pulse Motor and Servo Motor

No.	Situation that requires adjustment	How to Adjust
4	Abnormal noise is generated. Especially, when stopped state and operation in low speed (less than 50mm/s), comparatively high noise is generated.	 Input the Parameter No.33 "Torque Filter Time Constant". Try to increase by 50 as a reference for the setting. If the setting is too large, it may cause a loss of control system stability and lead the generation of vibration. [Important] Prior to Adjustment: This phenomenon is likely to occur when the stiffness of the mechanical components is not sufficient. The actuator itself may also resonate if its stroke is over 600mm or it is belt-driven type. Before having an adjustment, check if: 1) The value for Parameter No.7 "Servo gain number", Parameter No.31 "Speed loop proportional gain", or Parameter No.32 "Speed loop integral gain" are excessive. 2) The stiffness of the load is sufficient as much as possible, or the attachments are not loosened. 3) The actuator unit is mounted securely with a proper torque. 4) There is no waviness on the actuator mounting surface.
5	Trace precision is desired to be improved. Equi-speed performance is desired to be improved. Response is desired to be improved.	 Make the condition optimized with Parameter No.7 "Servo gain number" and Parameter No.31 "Velocity loop proportional gain" adjusted by referring to the way to adjust stated in No.1 to 3 in the previous page. [Reference] The most important factor is to select the actuator (motor). The servo is extremely sensitive to the inertia of the load. If the inertia moment of the load is too large in comparison with the inertia moment of the servo motor itself, the motor is highly affected by the load. This may cause the actuator to be controlled unstably. Therefore, to improve the precisions of the trace, position, speed and response of the actuator, the load inertia ratio must be made small. For high trace precision, equi-speed performance, and response of the actuator in such a use as application, it is better to use ball screws with small leads in the actuator as much as possible and an actuator of motor capacity higher by at least one level. The best method is to calculate the load inertia to select the proper actuator
6	Large static friction of load makes actuator start slowly. Large load inertia makes response of actuator low at start and stop. Cycle time is desired to be shortened. There is an impact at the start or stop.	 Set parameter No.71 "Feed forward gain". Select a value in the range from 10 to 50 roughly. The larger the setting value is, the smaller the deviation is. Then the response is improved. Setting a large value may cause vibrations and/or noises to occur. Set the feed forward gain in order to improve the response of the actuator further after adjusting Parameter No.7 "Servo gain number" and Parameter No.31 "Speed loop proportional gain". Change the setting in Parameter No.55 "Position command primary filter time constant" to approximately 50ms. If there is no improvement in situation, try to increase the setting gradually. If there is an improvement, try to decrease the setting will make the settling time longer thus the takt time also becomes longer. The accuracy for the positioning also becomes worse. It is recommended, to solve the problem from the root cause, to replace the host positioning unit with one that is equipped with



8.3.2 Adjustment of Brushless DC Electric Motor

No.	Situation that requires adjustment			How to Adjust		
1	Hunching occurs at positioning stop Fluctuation in speed	Set the p If an imp It is not i	parameter in t provement is o necessary to	the following steps, confirmed in operat proceed to the nex	and check the op ion, finish the adju t step.	eration. Istment.
2	Speed is inaccurate					
		Procedu	re 1 : Change	Parameter No. 32 "V	elocity Loop Integrat	ed Gain"
		Set	the five types of	of values below in or	der, and check the o	peration.
			Setting	Velocity Loop I	integrated Gain	
			1		11	-
			2	59	92	
			3	92	25	
			4	16	45	
			5	37	00	
		Go	onto Procedu	ire 2 if there is no in	mprovement in ope	eration.
		Procedu Set	re 2 : Change Proport Loop In the six types o	e Parameter No. 31 ional Gain" and Pa tegrated Gain" f values below in ord	"Velocity Loop rameter No. 32 "Vo er, and check the op	elocity peration.
			●Load of 0	.2kg or less		
			Setting	Velocity Loop	Velocity Loop	
			Order	Proportional	Integrated Gain	
			4	Gain Setting	Setting	_
			2	42	382	
			2	42	749	
			4	42	1171	
			5	42	2081	
			6	42	4683	
				r U.2Kg	Valacity Loop	
			Setting	Proportional	Integrated	
			Order	Gain Setting	Gain Setting	
			1	32	231	
			2	32	315	
			3	32	453	
			4	32	708	
			5	32	1259	
			6	32	2833	
		Conta	ct IAI if there	is no improvement	in operation.	
3	Abnormal noise is generated / Especially, when stop or operation in low speed (less than 20mm/s), comparatively high noise is generated.	Change the values for Parameter No. 31 "Velocity Loop Proportional Gain" and Parameter No. 32 "Velocity Loop Integrated Gain" to the following. Speed loop proportional gain : 32 Speed loop integral gain : 231				

MCON

Chapter 9 Troubleshooting

9.1 Action to Be Taken upon Occurrence of Problem

Upon occurrence of a problem, take an appropriate action according to the procedure below in order to ensure quick recovery and prevent recurrence of the problem.

1) Status LEDs Check on Controller





Refer to [7.1 [1] Driver Status LED] for the driver status LED display. Refer to [3.10 Field Network Status LED] for the status LED display.

- 2) Check whether an alarm occurs on the host controller (PLC, etc.).
- 3) Check the voltage of the main power supply (24V DC).
- 4) Voltage check of field network power supply
- 5) Check the voltage (24V DC) of the power supply for brake (for the actuator with the brake).
 6) Alarm Check^(Note1)
- Check the alarm code on the teaching tool such as PC software.
- 7) Check the connectors for disconnection or connection error.
- 8) Check the cables for connection error, disconnection or pinching. Cut off the main power of the system which this controller is installed in and remove the cables around the measurement point (to avoid conductivity through the surrounding circuit) before checking the conductivity.

MCON =

- Check the I/O signals. Using the host controller (PLC, etc.) or a teaching tool such as PC software, check the presence of inconsistency in I/O signal conditions.
- 10) Check the noise elimination measures (grounding, installation of power line filter, etc.).
- 11) Check the events leading to the occurrence of problem ^(Note 2), as well as the operating condition at the time of occurrence.
- 12) Analyze the cause.
- 13) Treatment
- Note 1 Alarms subject to this function include those in 9.3 Gateway Alarm and 9.4 Driver Alarm but do not include errors in the teaching tool such as PC software.
- Note 2 The time of alarm generated can be recorded if the clock is set to the current time on Gateway Parameter Setting Tool. Refer to [3.9.3 (5) Clock Setting] for how to set up the date and time.

If the current time is set, the data is remained for approximately 10 days under the condition that the power to the controller is OFF. If the setting is not conducted or the time data is lost, it will be the time passed since 2000/1/1, 00:00:00 when the power is turned ON. Even if the date and time data is lost, the generated error code is retained.

Notice: In troubleshooting, exclude normal portions from suspicious targets to narrow down the causes. Check 1) to 11) described above before contacting us.

9.2 Fault Diagnosis

This section describes faults largely divided into four types as follows:

- (1) Impossible operation of controller
- (2) Positioning and speed of poor precision (incorrect operation)(3) Generation of noise and/or vibration
- (4) Communication not established

9.2.1 Impossible operation of controller

Situation	Possible cause	Check/Treatment
SYS LED or SYS I/SYS II LEDs on driver board turn ON in red when power is supplied.	 Occurrence of alarm. During emergency-stop. Was the emergency-stop switch released? EMG- on the system I/O connector is not connected. 	 (1) Check the error code with the teaching tool being connected and remove the cause by referring the alarm list. [Refer to [9.3 Gateway Alarm and 9.4 Driver Alarm] (2) 1) Release the emergency stop switch. 2) Check the connection of the system I/O connector (EMG-). [Refer to 2.2 [1] Power Supply and Emergency Stop]
Both position No. and start signal are input to the controller, but the actuator does not move.	 Servo OFF condition. The pause signal is OFF. Positioning command is issued to a stop position. There is no positioning data set to the commanded position number. Writing the information in a wrong area for Direct Indication Mode. 	 Are SYS I/SYS II LEDs on the driver board that the operated axes are connected turned ON in green? [Refer to Name for Each Parts and Their Functions] Turn ON the servo-on signal SON. Operation is available when pause signal *STP is ON and pause when it is OFF. Turn it ON. Check the sequence or the settings of the position table. It will generate Alarm Code 0A2 "Position Data Error". Conduct the position table setting.
Connected the teaching tool and supplied the motor and control power to controller, but operation would not start. (the emergency stop switch is released on the teaching tool)	Cable treatment or mode selection. 1) Emergency stop condition 2) Servo OFF condition 3) In pause	 Supply 24V DC to EMG- terminal of the system I/O connector. Warning If the process of 1) is conducted, put back the setting as soon as the adjustment work is finished. Starting the operation without putting it back may cause a serious accident since the emergency stop is set invalid. 2) 3) Put the operation mode switch on the front panel of the controller to "MANU" side, and select the teach mode on the teaching tool.

9.2.2 Positioning and speed of poor precision (incorrect operation)

Situation	Possible cause	Check/Treatment
Completion of operation on the way to home return.	 In the home return of our standard specification, the actuator is first pressed to the mechanical end, moved oppositely, and subject to positioning stop at the home position. Therefore, the product may judge as the mechanical end even though it is still on the way when the load is large and interfere with surrounding object. 1) A load exceeding its rating weight is installed on the actuator. 2) It is touched to interference in the way of the run. 3) Torsion stress is applied to guide due to improper fixing method of the actuator or uneven fastening of bolts. 4) The sliding resistance of the actuator itself is large. 	 Reduce the load. Remove the interference. Loosen the fixing bolts once and check whether the slider can move smoothly. If the slider can move smoothly, check if there is a deformation on the attached surface, and install the actuator again following the instructions stated in Instruction Manual. Please contact IAI.
Shocks at start and/or stop.	Acceleration/deceleration is set too high.	Decrease the settings of acceleration.
Overshoot during deceleration to stop.	The load inertia is large.	Decrease the setting of deceleration.
Positioning of poor precision. Uneven speed during movement. Acceleration/deceleration not smooth (bad speed response).	[Refer to 8.3 Servo Adjustment.]	
Positioning at a position different from that of commanded position No.	For remote I/O mode, the start signal CSTR after the position number command is too early, or input at the same timing. Note Inputting at the same timing is available for Field Network Type. (Excluding remote I/O mode)	The stop position may be set for another purpose. Make sure to complete the reading of the position numbers to this controller before inputting the start signal.
Complete signal PEND is not output even though positioning process is completed.	Start signal CSTR is not turned OFF.	Make the start signal CSTR turned OFF before completing the positioning process by the turn-off of positioning complete signal PEND after starting operation, and so on

9.2.3 Generation of noise and/or vibration

Situation	Possible cause	Check/Treatment
Generation of noise and/or vibration from actuator itself.	Noise and vibration are generated by many causes including the status of load, the installation of the actuator, and the rigidity of the unit on which the actuator is installed.	Servo adjustment may improve the situation. [Refer to 8.3 Servo Adjustment.]
Vibrations of load.	 Acceleration/deceleration is set too high. The installation structure and/or the installed load are easily affected by acceleration/deceleration. 	 Decrease the settings of acceleration/deceleration. Revise the installation structure and load.

9.2.4 Impossible Communication

Situation	Possible cause	Check/Treatment
Not connectable with host machine.	 Communication rates do not match. The machine number (station number) is set to be duplicate with that of another unit or out of the range. Poor wiring or disconnection of communication cable. 	 Set the communication rate to match that of the host machine. [Refer to the Instruction Manual of the host unit.] Correct the unit number (station number) setting. Machine numbers (station numbers) vary depending on communication modes. Refer to 3.4 Field Network Type Address Map and the instruction manuals for the host devices for the details. Review the wiring again. Check if termination resistances are connected to network terminals with correct values. Check if the communication power supply is established properly for DeviceNet Type. [Refer to the Instruction Manual of the host unit.]

9.3 Gateway Alarm

9.3.1 Gateway Alarm Codes

The alarm codes are read into ALMC1 to128 (b7 to b0) in Gateway Status Signal 0. [Refer to 3.4.3 Gateway Control Signals (Common for all operation modes).]

(Note) The alarm code shown on Gateway Parameter Setting Tool is applied with "8" on the top of the alarm codes listed below. (Example) If the alarm code is 43, it will be shown as 843.

Alarm Code	Alarm Name	Cause/Treatment
43 (843)	Absolute Battery Charge Voltage Drop	Cause : The voltage of the absolute battery charger has dropped. Treatment : Check the voltage of the 24V DC power supply. Check the wire layout between the absolute battery box and MCON controller.
48 (848)	Decrease in Fan Revolution	Cause : The fan rotation speed has decreased for the cooling fan on the main unit. Treatment : It is considered that it is the end of the product life of the fan (approximately 3 years). Replace the fan.
49 (849)	Time Notification Error	Cause : It is an internal communication error of MCON. The clock data transfer from Gateway board to the driver board has failed. Treatment : Turn the power OFF and reboot. If the same error occurs
4A (84A)	Real Time Clock Operation Stop Detection	again, please contact IAI. Cause : Clock data has lost. The clock data can be remained for approximately 10 days after the power to the controller is turned OFF. Treatment : Have the clock setting done from the Gateway Parameter Setting Tool again.
4B (84B)	Real Time Clock Access Error	Cause : It is an internal error of MCON. The clock data failed to be acquired internally. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
50 (850)	Fieldbus Communication Error (ERR-C)	Cause : It is a field network link error. If the flip-flop is set in Gateway Parameter Setting Tool during this error, the actuator is stopped in the condition of the error and any command is ignored until it receives a release signal. Treatment : Check the settings for field network (node addresses, communication speed, etc.) and wiring layout
60 (860)	Master-Slave Axes Communication Error (ERR-T)	Cause : It is an internal error of MCON. The communication with the driver board to connect each axis of the actuators was not able to be established. Treatment : It is considered that the driver board is not inserted or there is a failure in the connection (connector is not inserted deep enough).
61 (861)	Slave Axis Communication Internal Error (Sending)	Cause : It is an internal error of MCON. The communication with the driver board to connect each axis of the actuators was not able to be established. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
62 (862)	Slave Axis Communication Internal Error (Receiving)	Cause : It is an internal error of MCON. The communication with the driver board to connect each axis of the actuators was not able to be established. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
6A (86A)	Driver Board Operation Pattern Error	Cause : Operation modes which cannot be used together are indicated. Treatment : Set the operation modes again on Gateway Parameter Setting Tool.
80 (880)	GW Parameter Error	Cause : There is an error in Gateway parameters. Treatment : Check the settings such as the number of connected axes and operation mode on Gateway Parameter Setting Tool.

Alarm Code	Alarm Name	Cause/Treatment
81	Parameter Check Sum	Cause : There is a possibility that the memory data inside MCON
(881)	Error	has destroyed. Treatment : Establish all the settings again on Gateway Parameter Setting Tool or write the backup data if it exists.
90 (890)	Driver Board Mount Error	Cause : The number of axes (number of driver boards) set in Gateway Parameter Setting Tool does not match with the number of the actually connected axes
		Treatment : Match the numbers of the axes.
93 (893)	Driver Board Operation Type Setting Failure	Cause : It is an internal communication error of MCON. Data communication failure has occurred for information such as operation mode setting switch status, field network operation mode and I/O mode operation pattern. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
95 (895)	Motor Voltage Monitoring Timeout	Cause : An error occurred to the motor voltage on the monitored driver board during the shutdown control. 1) Motor voltage readout not conducted in normal condition 2) Motor voltage not risen up 3) Malfunction of communication board Treatment : Shutdown control process cannot be used together with controls using the EMG/MP connectors. Check the connection of the EMG/MP connectors. Contact IAI if an error occurs even after having the treatment.
9B (89B)	Fieldbus Module Error	Cause : There is a concern the field network module has broke down. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
9C (89C)	Fieldbus Module Not Detected	Cause : Communication board for field network was not detected. 1) Communication board is not inserted. 2) Malfunction of communication board Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
9D (89D)	Fieldbus Module Initialization Timeout	Cause : Initialization of the field network module did not finish even after a certain while has passed. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
9E (89E)	Fan Error	Cause : A Fan error was detected. Treatment : It is considered that it is the end of the product life of the fan (approximately 3 years). Replace the fan.
A0 (8A0)	Control Power Overvoltage	 Cause : Control power voltage reached beyond the overvoltage threshold (120% of 24V DC = 28.8V). 1) The voltage of 24V DC power supply is high. 2) A faulty part inside the controller 3) Turning the servo ON at acceleration/deceleration spends a huge current consumption transiently. Using the remote sensing function with a power supply with no enough current capacity may cause overvoltage responding to the current change. Treatment : 1) 2) Check the voltage of the input power supply. 3) Think to use a power supply with enough current capacity or not to use the remote sensing function. If the voltage is normal, please contact IAI.
A1 (8A1)	Control Power Voltage Drop	Cause : The control power voltage dropped less than the voltage drop threshold (70% of 24V DC = 16.8V). 1) The voltage of 24V DC power is low 2) A faulty part inside the controller
		Treatment : Check the power voltage. If the voltage is normal, please contact IAI.

Alarm Code	Alarm Name	Cause/Treatment
A2 (8A2)	Overvoltage on motor power	 Cause : 1) Motor power input voltage (input to MPI terminal) is too large (38V or more) Turning the servo ON at acceleration/deceleration spends a huge current consumption transiently. Using the remote sensing function with a power supply with no enough current capacity may cause overvoltage responding to the current change. 2) Overcurrent is generated on the motor power supply line Treatment : 1) Check the power voltage input to MPI terminal. Think to use a power supply with enough current capacity or not to use the remote sensing function. 2) Check the wire layout between the actuator and controller.
A6 (8A6)	Encoder Voltage Drop	Cause : The power voltage for the encoder has dropped below the allowable range. Treatment : Check the connection between the actuator and MCON.
AA (8AA)	Regenerative Electric Discharge Circuit Error	Cause : There is an error in the regenerative discharge circuit inside the controller. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
AB (8AB)	Assumed Regenerative Discharge Excessive Power	Cause : The regenerative electric power exceeded what can be dealt with the regenerative resistor. Treatment : Decrease the acceleration/deceleration speed, revise the operation interval or connect an external optional regenerative resistor (RER-1).
AC (8AC)	Continuous Regenerative Excessive Discharge	Cause : The regenerative electric power exceeded what can be dealt with the regenerative resistor. Treatment : Decrease the acceleration/deceleration speed, revise the operation interval or connect an external optional regenerative resistor (RER-1).
BA (8BA)	Number of Axes / Operation Mode Unmatched	Cause : The number of axes set in the gateway parameter and that of axes figured out from the operation mode are not the same. Treatment : As the parameter setting is inappropriate, revise the gateway parameter setting.
FA (8FA)	CPU Error	Cause : An error reset was detected in CPU in the gateway board. Treatment : Turn the power OFF and reboot. If the same error occurs again, please contact IAI.
FFF	Power-on Log	It is the log at the power being on (it is not an error).

9.4 Driver Alarm

9.4.1 Alarm Level

The alarms are classified to 3 types of levels by the content of the error.

Alarm level	SYS I / II LED	*ALM signal	Status when an error occurred	Cancellation method
Message	Green Light is turned ON.	No output	No stop	Alarm of maintenance output such as battery voltage drop or the teaching tool such as PC software [Refer to Instruction Manual of each tool for details.]
Operation release	Red Light is turned ON.	Output	Servo OFF after deceleration to stop	Reset the alarm by the PIO or teaching tool.
Cold start	Red Light is turned ON.	Output	Servo OFF after deceleration to stop	Software reset or power reconnection by teaching tool. Home return is required for any actuators of other than simple absolute specification.

Caution: Reset each alarm after identifying and removing the cause. If the cause of the alarm cannot be removed or when the alarm cannot be reset after removing the cause, please contact IAI. If the same error occurs again after resetting the alarm, it means that the cause of the alarm has not been removed.

9.4.2 Simple Alarm Code

Simple alarm codes are read into the complete position register (PM8 to PC1) in Simplified Direct Value, Positioner 1, Positioner 2, Positioner 5 and each mode of remote I/O when an alarm is generated.

-			
O:	ON	•:	OFF

*ALM	ALM8 (PM8)	ALM4 (PM4)	ALM2 (PM2)	ALM1 (PM1)	Binary Code	Description: Alarm code is shown in ().
0	•	•	•	•	-	Normal
•	•	•	•	0	1	Collision Detection (0DF)
•	•	•	0	•	2	Software reset during servo ON (090) Position number error during teaching (091) PWRT signal detected during movement (092) PWRT signal detected before completion of home return (093)
•	•	•	0	0	3	Move command during servo OFF (080) Position command in incomplete home return (082) Absolute position move command when home return is not yet completed (083) Movement command during home return operation (084) Position No. error during movement (085) Position command information data error (0A3) Command deceleration error (0A7)
•	•	0	•	•	4	Mismatched PCB (0F4)
•	•	0	0	•	6	Parameter data error (0A0) Parameter data error (0A1) Position data error (0A2) Unsupported motor/encoder type (0A8)

(Note) *ALM Signal is an active low signal. It is ON when the power is applied to the controller, and turns OFF when the signal is output.

O: ON ●: OFF

*ALM	ALM8 (PM8)	ALM4 (PM4)	ALM2 (PM2)	ALM1 (PM1)	Binary Code	Description: Alarm code is shown in ().
•	•	0	0	0	7	Z-phase position error (0B5) Z-phase detection time out (0B6) Magnetic pole indeterminacy (0B7) Excitement detection error (0B8) Home sensor non-detection (0BA) Home return timeout (0BE)
•	0	•	•	•	8	Actual speed excessive (0C0)
•	0	•	•	0	9	Overcurrent (0C8) Overvoltage (0C9) Overheat (0CA) Current Sensor Offset Adjustment Error (0CB) Drive source error (0D4)
•	0	•	0	0	11	Command counter overflow in Incomplete home return (0D5) Deviation overflow (0D8) Software stroke limit exceeded (0D9) Pressing motion range over error (0DC)
•	0	0	•	•	12	Electric angling mismatching (0B4) Servo error (0C1) Illegal control system transition command (0C5) Motor power source voltage excessive (0D2) Overload (0E0) Driver logic error (0F0)
•	0	0	•	0	13	Encoder send error (0E4) Encoder receipt error (0E5) Encoder Counter Error (0E6) A-, B- and Z-phase wire breaking (0E7) A and B-phase wire breaking (0E8) BLA encoder error detection (0EB) PS-phase wire breaking (0EC) Absolute encoder error detection 1 (0ED) Absolute encoder error detection 2 (0EE) Absolute encoder error detection 3 (0EF)
•	0	0	0	•	14	CPU error (0FA) Logic error (0FC)
•	0	0	0	0	15	Nonvolatile memory write verify error (0F5) Nonvolatile memory write timeout (0F6) Nonvolatile memory data destroyed (0F8)

(Note) *ALM Signal is an active low signal. It is ON when the power is applied to the controller, and turns OFF when the signal is output.

MCON =

9.4.3 Alarm Codes for Driver Board (Each Axis)

- (Note) In the shaded alarm code columns in the table below, the applicable driver board type is shown with symbols. The alarm codes not shaded are in common for all the driver board.
- P : Pulse Motor · · RCP2, RCP3, RCP4, RCP5 and RCP6 Series
- A : Servo motort · · RCA, RCA2 and RCL Series
- D : Pulse/brushless DC electric motor · · RCD Series

Alarm Code	Alarm Level	Alarm Name		Cause/Treatment
047		Deviation Overflow Warning	Cause : Treatment :	The current operational condition or the sliding resistance of the actuator is large, and there is a concern of the deviation overflow being occurred. Reduce the acceleration setting. Have a maintenance work conducted to supply grease and so on.
048		Driver overload alarm	Cause : Treatment :	The load current exceeded the value set in Parameter No.143 "Overload Level Ratio". This alarm is kept alarm condition until reset is made. This alarm turns ON when the load current exceeds the setting from a value below the setting. Lower the setting of acceleration/deceleration. Also, increase the frequency of pause.
049 Only for P drivers	Message		Cause : Treatment :	Motor current has reached the detection current set in the collision detection feature. Remove the cause of collision. If it is an unexpected detection, re-adjust the collision detection feature. [Refer to Chapter 5 Collision Detection Feature]
04E		Exceeded movement count threshold	Cause :	The total number of the operation times exceeded the value set in Parameter No.147 "Total Movement Count Threshold".
04F		Exceeded operated distance threshold	Cause :	The total number of the operation distance exceeded the value set in Parameter No.148 "Total Operated Distance Threshold".
06B		Maintenance information data error	Cause : Treatment :	The maintenance information (total movement count, total operated distance) is lost. Please contact IAI.
080		Move command in servo OFF	Cause : Treatment :	A move command was issued when the servo is OFF. Issue a movement command after confirming the servo is ON (servo ON signal (SV) or position complete signal (PEND) is ON).
082		Position command in incomplete home return	Cause : Treatment :	A position move command was issued before home return was completed. Issue a command after confirming that home return has been completed (HEND) is ON.
083	Operation release	Numerical command in incomplete home return	Cause : Treatment :	An absolute position command was issued by numerical specification before home return was completed (direct command from Field Network). Issue a numeric specification after performing home return operation and confirming the complete signal (HEND).
084		Absolute position move command when home return is not yet completed	Cause : Treatment :	A move command was issued when home return was still in progress. Issue a movement command after performing home return operation and confirming the complete signal (HEND).

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
085		Position No. error during movement	Cause : A non-existing (invalid) position number was specified in the positioner mode. Treatment : Check the position table again and indicate an effective position number.
090		Software reset command in servo-ON condition	Cause : A software reset command was issued when the servo was ON. Treatment : Issue a software reset command after confirming that the servo is OFF (SV signal is 0).
091	Operation	Position No. error in teaching	Cause : The position number out of the available range was selected in the teaching. Treatment : Set the indication position number to 255 or less in Positioner 1 or Positioner 2 Mode, or to 64 or less in Remote I/O Teaching Mode.
092	Telease	PWRT signal detection during movement	Cause : The current position write signal PWRT was input in the teaching mode of PIO pattern 1 while the actuator was jogging. Treatment : Check that JOG+/- signal is not on and stopped (MOVE output signal is off) before inputting.
093		PWRT signal detection in incomplete home return	Cause : The current position write signal PWRT was input in the teaching mode of PIO pattern 1 when home return was not yet completed. Treatment : Input the HOME signal first to perform home return, and then input the PWRT signal after confirming that the home return has completed (HEND output signal is ON).
0A0		PIO function assignment error	Cause : Data input in Parameter No. 25 PIO Pattern Select is not appropriate. Treatment : Select either of PIO Patterns 0, 1, 2, 4 or 5. Select 6 when in a mode other than Remote I/O Mode.
0A1	Cold start	Parameter data error	 Cause : The data input range in the parameter area is not appropriate. Example 1) This error occurs when the magnitude relationship is apparently inappropriate such as when 300mm was incorrectly input as the value of the soft limit negative side while the value of the soft limit positive side was 200.3mm. Example 2) In rotary axis, when the index mode is changed to the normal mode and the soft limit negative side is 0, this error is issued. Set the soft limit negative side to a value -0.3mm is added to the outer side of the effective stroke. [Refer to 8.2 [2] Soft limit +, Soft limit -] Example 3) It occurs when the initial positioning band [Refer to 8.2 [8]] is smaller than the minimum positioning band width when an actuator for RCP2, RCP3, RCP4 and RCP5 series is connected. Set the initial positioning band equal to or bigger than the minimum positioning band width (Lead Length / Number of Encoder Pulses: 800) × 3. Treatment : Change the value to the appropriate one.

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0A2		Position data error	 Cause : 1) A move command was input when no target position was set in the "Position" field of a position No. in the position table. 2) The value of the target value in the "Position" field exceeded the Parameter No.3 and 4 "Soft limit set value". 3) A 1 was set to "Incremental" column in the solenoid valve mode 2 of PIO pattern 5. 4) Pressing operation was specified while the vibration suppress control function remained effective. Treatment: 1) Set the target position. 2) Change the target position value to the one within the soft limit set value. 3) The target position cannot be set by relative coordinate (incremental feed). 4) The vibration suppress control function and pressing operation cannot be used concurrently. Provide setting so that either of the functions is effective.
0A3	Operation release	Position command data error	Cause : 1) The command value during direct numeric specification exceeded the maximum set value. 2) Pressing operation was specified while the vibration suppress control function remained effective. Treatment : 1) Exceeded command item code is displayed in the detailed address. Input an appropriate value by referring to these values. Detailed Address Command Item 0F00 Target Position 0F02 Command Speed 0F04 Acceleration 0F08 Positioning Width 0F00 Control Signal 2) The vibration suppress control function and pressing operation cannot be used concurrently. Provide acting a that either of the function is offerting
0A7		Command deceleration error	Cause : Because there is not enough deceleration distance when the deceleration is changed to a lower setting during the operation, the actuator exceeded the soft limit when deceleration was made from the current position with the deceleration after the change. Deceleration starting position not resulting in soft limit overshoot soft limit The cause is that the timing to make the next movement command when the speed was changed during the operation was late. Treatment : Make the timing earlier for the movement command for the deceleration speed change.

Alarm Code	Alarm Level	Alarm Name		Cause/Treatment
0A8		Unsupported motor/encoder types	Cause :	A motor or encoder not applicable for this controller is connected, and the motor or encoder cannot be classified.
			Treatment :	Contact us in case this alarm is issued with the applicable actuator or occurs again even after the power is rebooted.
0B4 Only for		Electric angling mismatching	Cause :	 The position deviation counter is over-flown. An error occurred in Z-axis detection. (When detail code in error list of teaching tool is 0001_H)
Á drivers	Cold start		Treatment :	 This error occurs when an actuator cannot operate. Confirm about the load conditions, that the work does not interfere with any object nearby or the brake has been released, etc.
				If the error occurs even when the servo is ON, the cable breakage or disconnection is considered. Check the cable connection. Please contact IAI if there is no failure in the cable and connector connections.2) Turn the power OFF and reboot. If the same
085		Z-phase position error		error occurs again, please contact IAI.
			Cause .	home-return operation was out of the specified
Only for A			Treatment :	area. Encoder error Please contact IAI.
drivers				
0B6		Z-phase detection time out	Cause :	This indicates the Z-phase could not be detected at the first servo-on or home-return operation after the
Only for A				power is turned ON in Simple Absolute type. 1) Connector connection error or wire breakage on
drivers				an actuator cable. 2) Brake cannot be released on a controller
	Operation			equipped with a brake.3) Detection of the motor is not performed properly because an external force is applied.
	release		Treatment :	 The slide resistance of the actuator itself is large. Check for the actuator cable wiring condition. Check the wiring condition of the brake cable, and also turn on/off the brake release switch to see if the brake makes a "clicking" sound. If the brake is not making any noise, check if the power is supplied to the brake properly.
				 3) Check if there is any abnormality in the parts assembly condition. 4) It the transportation weight is in the acceptable range, cut off the power to check the slide resistance manually by moving with hand. If the actuator itself is suspected to be the cause, please contact IAI.

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0B7 Only for A drivers		Magnetic pole indeterminacy	 Cause : It shows the magnetic pole phase could not be detected after a certain time being passed even though the process for the magnetic pole phase detection was executed at the first servo-on after the power is turned ON. 1) Connector connection error or wire breakage on an actuator cable. 2) Brake cannot be released on a controller equipped with a brake. 3) Detection of the motor is not performed properly because an external force is applied. 4) The slide resistance of the actuator itself is large. Treatment : 1) Check for the actuator cable wiring condition. 2) Check the wiring condition of the brake cable, and also turn on/off the brake release switch to see if the brake makes a "clicking" sound. If the brake is not making any noise, check if the power is supplied to the brake properly. 3) Check if there is any abnormality in the parts assembly condition. 4) It the transportation weight is in the acceptable range, cut off the power to check the slide resistance manually by moving with hand. If the actuator itself is suspected to be the cause, please contact IAI.
0B8 Only for P drivers	Cold start	Excitement detection error	 Cause : The magnetic pole phase detection is not completed after a certain time being passed even though the detection process was executed at the first servo-on after the power is turned ON. 1) Connection error or wire breakage on an actuator cable. 2) Brake is not released (when equipped with a brake). 3) Load to the motor is high due to external force. 4) Power was turned ON while touching to the mechanical end. 5) The resistance in the actuator sliding operation is large. Treatment : 1) Check the wiring condition of the actuator cables. 2) If an improvement can be confirmed when 24V DC, 150mA is supplied to BKRLS terminal in the external brake input connector, a malfunction of the controller can be considered. Please contact IAI. 3) Confirm that there is no error in the mechanical part assembly condition. 4) Move the slider or the rod to a point where it would not hit the mechanical end and reboot the system. 5) If the loaded weight is within the allowable range, turn the power OFF and check the resistance in sliding operation by moving the slider with hand.

Mcon=

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0BA		Home sensor non-detection	 Cause : This indicates that the home-return operation of th actuator equipped with origin sensor (option for those except for rotary actuator) is not completed normal condition. 1) The work piece has interfered with the peripherals during the home-return operation. 2) The resistance in the actuator sliding operation is large. 3) Attachment error, malfunction or wire breakage of origin sensor. Treatment : If there is no interference of the work piece confirmed with the peripherals, 2) or 3) can be confirmed with the peripherals, 2) or 3) can be
0BE		Home return timeout	Cause : Home return does not complete after elapse of a certain period after the start of home return. Detailed Code Applicable Action 01 Home Return Action Timeout
			OT Indic Retain Action Timeout 02 LS Evacuating Action Timeout Treatment : This error does not occur in normal operation. The combination of the controller and actuator may be
0C0	Operation release	Actual speed excessive	Cause : This indicates the number of motor rotation exceeded the number of allowable rotation. 1) The slide resistance of the actuator is locally hig 2) The load is increased too much due to a extern force. With the reasons above, it can be considered a sudden speed increase has occurred before detecting the servo error.
			Treatment : Even though this would not occur in normal operation, check if there is any abnormality in the parts assembly condition. Also check if there is a possibility that an external force may be applied in the direction of the actuator movement.
0C1 Only for P drivers		Servo error	 Cause : It indicates 2 seconds has passed without making move since a move command was received. 1) Connection error or wire breakage on an actuator cable 2) Brake is not released (when equipped with a brake). 3) Load to the motor is high due to external force. 4) The resistance in the actuator sliding operation is large. Treatment : 1) Check the wiring condition of the actuator cables. 2) If an improvement can be confirmed when 24V DC, 150mA is supplied to BKRLS terminal in the external brake input connector, a malfunction o the controller can be considered. Please contacted
			 3) Confirm that there is no error in the mechanical part assembly condition. 4) Move the slider or the rod to a point where it would not hit the mechanical end and reboot th system.

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0C5 Only for A drivers	Operation release	Illegal transition command in control system	 Cause : 1) Change the operation from the vibration suppress control operation to the normal position control operation. 2) Change the operation from the normal position control operation to the vibration suppress control operation. Treatment : Change the sequence so the next action is conducted after confirming the positioning complete signal (PEND) is turned ON for both cases 1) and 2).
0C8		Overcurrent	Cause : The output current in the power circuit section is increased abnormally. Treatment : This alarm will not be generated in normal operation. It can be considered as the insulation degradation of the motor winding or malfunction of the controller. Please contact IAI.
0C9 Only for P drivers		Overvoltage	Cause : The voltage on the power regenerative circuit exceeded the threshold. Treatment : Malfunction of the controller can be concerned. Please contact IAI.
0CA	Cold start	Overheat	 Cause : Temperature on the components inside the controller has exceeded the temperature defined for each actuator. 1) Operation is performed with the load condition exceeding the specified range. 2) High temperature around the controller. 3) Load to the motor is high due to external force. 4) A faulty part inside the controller. Treatment : 1) Revise the operation condition such as decreasing the acceleration/deceleration speed 2) Lower the ambient temperature of the controller 3) Confirm that there is no error in the mechanical part assembly condition. Note This error would not normally occur. If it occurs, confirm there is not (1) to (3) above. the same problem occurs again even with the process above, malfunction of controller can be considered. Please contact IAI.
0CB		Current sensor offset adjustment error	 Cause : An error was found to the sensor in the status chec of the current detection sensor conducted at the initializing process in the startup. 1) A breakdown of the current detection sensor or peripheral component is supposed. 2) An error in the offset adjustment is supposed. 3) The actuator has moved by an external force at the time the power was turned on. Treatment : In case the same error occurs even after rebooting the power in a condition that the actuator does not move, it is necessary to replace the PC board or adjust the offset. Please contact IAI.
0D2 Only for A and D drivers	Operation cancellation	Motor power source voltage excessive	Cause : A malfunction of a component inside the controller can be considered. Treatment : If this error occurs often, there is a concern of a controller malfunction. Please contact IAI.

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0D4	Cold start	Drive source error	 Cause : 1) Motor power input voltage (input to MPI terminal) is too large During acceleration/deceleration and servo-on, the current consumption rises transiently. Using the remote sensing function with a power supply with no enough current capacity may cause overvoltage responding to the current change. 2) Overcurrent is generated on the motor power supply line. Treatment : 1) Check the power voltage input to MPI terminal. Think to use a power supply with enough current capacity or not to use the remote sensing function. 2) Check the wire layout between the actuator and controller. Please report the environment of use and condition of operation in case this error occurs often.
0D5 Only for P drivers		Differential Counter Overflow with Home Return Incomplete	 Cause : This alarm indicates that the position deviation counter has overflowed. The speed dropped or stopped during JOG move due to an impact of external force, hit to the mechanical end or overload. The excited-phase detection operation following the power-on is unstable. Treatment : 1) This error occurs when the actuator cannot be operated as it is commanded. Check the load conditions such as if the work is touching to the surrounding object, or brake is properly released, and remove the cause. Overload is concerned. Revise the transportable weight.
0D8 0D9	Operation cancellation	Deviation overflow	 Cause : This alarm indicates that the position deviation counter has overflowed. 1) The speed dropped or the actuator stopped due to the effect of external force or overload. 2) The excited-phase detection operation following the power-on is unstable. 3) The power supply voltage dropped. 4) Servo gain number is too small Treatment : 1) This error occurs when the actuator cannot be operated as it is commanded. Check the load conditions such as if the work is touching to the surrounding object, or brake is properly released, and remove the cause. 2) Overload can be concerned. Revise the transportable weight and redo the home-return operation. 3) Check for the source voltage. 4) Tune the servo-motor gain number.
		exceeded	software stroke limit. Treatment : Return the actuator to be within the range of the software stroke limit.

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0DC		Pressing motion range over error	 Cause : 1) After the pressing operation has complete, the force to push back is too large and the pushed back to the pressing start setting position. 2) The actuator touched the work during the approach movement before the pressing movement.
	Operation cancellation		 Preatment : 1) Revise the setting and adjust it so the force to push back gets smaller. 2) Correct the pressing start setting position to the front to have the approach distance shorter.
0DF Only for P drivers		Collision detection	Cause : Collision of actuator was detected. Treatment : Remove the cause of collision. If it is an unexpected detection, re-adjust the collision detection feature. [Refer to Chapter 5 Collision Detection Feature]
0E0	Cold start	Overload	 Cause : 1) The work weight exceeds the rated weight, or an external force is applied and the load increased. 2) If the actuator is equipped with a brake, the brake is not released. 3) The slide resistance of the actuator is locally high. Treatment : 1) Check the work and its surrounding area to remove the cause. 2) If an improvement can be confirmed when 24V DC, 150mA is supplied to BKRLS terminal in the external brake input connector, a malfunction of the controller can be considered. Please contact IAI. If the error cannot be cancelled, malfunction of brake, cable breakage or controller malfunction can be considered. Please contact IAI. 3) In the case that the work can be moved by hand, move it. Then, check that there is no location where a sliding resistant is too large. Check if the installation face is distorted. When the error occurs in operation of the actuator only, Please contact IAI. <i>i</i> Caution <i>Restart the operation after making sure to remove the cause.</i> <i>if you cannot determine that the cause is removed completely, wait for at least 30 minutes before turning ON the power to prevent the motor coil from burning.</i>

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0E4 Only for A drivers		Encoder send error	 Cause : The data sending and receiving between the controller and encoder is conducted by the serial communication. This error indicates that the data sent from the controller was not received properly at the encoder side. 1) Encoder cable is about to break or connector is not plugged properly 2) Effect of noise 3) One or more communication ICs installed on the encoder board are faulty. 4) One or more communication ICs installed on the controller board are faulty. Treatment : 1) Check on the cables and the connector joints to see if any abnormality. 2) Interrupt the power to the peripheral equipment and activate only the actuator. If any error does not occur, it might be caused by noise. Take proper measures against noise. If 3) or 4) is the case, the encoder or controller must be replaced. If the cause cannot be specified, please contact IAI.
0E5 Only for P and A drivers	Cold start	Encoder receipt error	 Cause : This indicates that the data was not received to the controller in the normal condition from the simple absolute area. 1) Connector connection error (If the detail code in the error list of the teaching tool is 0002H.) 2) Effect of noise (If the detail code in the error list of the teaching tool is 0001H.) 3) Malfunction of component (communication part) inside the controller. 4) Initialization of battery-less absolute encoder is incomplete Treatment : 1) Check if any wire breakage on a connector and the condition of wire connections. 2) Interrupt the power to the peripheral equipment and activate only the this actuator and actuator. If any error does not occur, it might be caused by noise. Take proper measures against noise. 3) It is necessary to replace the actuator (motor part) or controller.
0E6 Only for P and A drivers		Encoder Counter Error	Cause : It is in a condition the encoder cannot detect the position information properly. 1) Breakage on encoder relay cable, actuator enclosed cable or improper connector connection 2) Malfunction of encoder itself 3) Error status was received in initial communication with battery-less absolute encoder Treatment : 1) Check if any breakage of cable at connectors and the condition of connections. Malfunction of the encoder can be concerned if there is no suspected point on the cables. Please contact IAI.

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0E7 Only for A drivers		A-, B- and Z-phase wire breaking	 Cause : Encoder signals cannot be detected correctly. Wire breakage or connector connection error on an actuator cable or cable enclosed in an actuator. Malfunction of encoder itself. Treatment : 1) Check if any wire breakage on a connector and the condition of wire connections. If the cables are in the normal condition, the malfunction of the encoder can be considered. Please contact IAI.
0E8	Cold start	A- and B-phase wire breaking	 Cause : Encoder signals cannot be detected correctly. 1) Wire breakage or connector connection error on an actuator cable or cable enclosed in an actuator. 2) Malfunction of encoder itself. 3) Parameter No. 158 "Valid Axis / Invalid Axis Select" of unconnected axis is set to 0: Enabled. Treatment : 1) Check if any wire breakage on a connector and the condition of wire connections. 2) If the cables are in the normal condition, the malfunction of the encoder can be considered. Please contact IAI. 3) Set Parameter No. 158 "Valid Axis / Invalid Axis Select" to 1: Disabled. * If there is no actuator connected, this alarm will occur even with a check mark on the reserved axis in the setting described in 2.5.3 Number of Mounted Axes, or with the drive unit set to "No Setting".
0EB Only for P and A drivers		Battery-less absolute encoder error detection	Cause : It is a condition that the battery-less absolute encoder cannot detect the position information correctly. Treatment : Check if any wire breakage on a connector and the
			If the cables are normal, faulty encoder is suspected. Please contact IAI.
0EC Only for D drivers		PS-phase wire breaking	Cause : Encoder signals cannot be detected correctly. 1) Wire breakage or connector connection error on an actuator cable or cable enclosed in an actuator. 2) Malfunction of encoder itself. Treatment : 1) Check if any wire breakage on a connector and the condition of wire connections. If the cables are in the normal condition, the malfunction of the encoder can be considered. Please contact IAI.

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment	
0ED Only for P and A drivers		Absolute encoder error detection 1	Cause : The current position has changed while controller was reading the absolute data or saving files. Treatment : Avoid a condition that gives vibration to the actuator.	
0EE Only for P and A drivers	Operation release	Absolute encoder error detection 2	 Cause : The position data cannot be detected properly in the Battery-less absolute type or Simple absolute type encoder. 1) When the power is supplied for the first time to after the motor replacement of Battery-less absolute type or Simple absolute type (before executing absolute reset) 2) Voltage drop of absolute battery. (simple absolute type) (If the detail code in the error list of the teaching tool is 0001_H.) 3) Wire breakage or connector connection error on an actuator cable or cable enclosed in an actuator or connector being removed and inserted. (If the detail code in the error list of the teaching tool is 0002_H.) 4) Changed the parameters of controller. Treatment : 2) Supply the power for 72 hours or more and after charging the battery enough, perform the absolute reset operation. If the same failure occurs often even with enough battery life. Replace the battery. Conduct an absolute reset for 1), 3) and 4). [Refer to Chapter 7. Absolute Reset and Absolute Battery] 	
0EF Only for P and A drivers		Absolute encoder error detection 3	Cause : The encoder for the Simple absolute type cannot detect the position information properly. (Encoder over speed error) The current position changed with a speed more than the rotation speed setting by an external cause during the power shutoff. Treatment : Set the rotation speed to a higher speed than what currently is. If the same failure occurs again, it is necessary to have an absolute reset. [Refer to Chapter 7. Absolute Reset and Absolute Battery]	
0F0 Only for A and D drivers		Driver logic error	Cause : Exceeded load, parameter (motor type) mismatched, noise, malfunction of controller, etc. Treatment : Please contact IAI.	
0F4	Cold start	Mismatched PCB	Cause : The PCB is not applicable for the connected motor in the startup check. There is a possibility of mismatch between the actuator and controller. Check the model codes. Treatment : Should this error occur, please contact IAI.	
0F5	Operation release	Nonvolatile memory write verify error	Cause : It is verified at the data writing process to the non-volatile memory that the data inside the memory and the data to be written are matched. There was a mismatch detected in this process. (Faulty nonvolatile memory.) Treatment : When the error is caused even when the power is re-input, please contact IAI.	
0F6	Cold start	Nonvolatile memory write timeout	Cause : There is no response in the specified time duration during the data writing to the non-volatile memory. (Faulty nonvolatile memory.) Treatment : When the error is caused even when the power is re-input please contact [A]	

Mcon=

Alarm Code	Alarm Level	Alarm Name	Cause/Treatment
0F8		Nonvolatile memory data destroyed	Cause : Abnormal data was detected during the nonvolatile memory check after starting. (Faulty nonvolatile memory.) Treatment : When the error is caused even when the power is re-input, please contact IAI.
0FA		CPU error	Cause : The CPU operation is not normal. 1) Faulty CPU. 2) Malfunction due to noise. Treatment : When the error is caused even when the power is re-input, please contact IAI.
OFC	Cold start	Logic error (Component error in controller)	Cause : The controller is not operating properly. 1) Malfunction due to the effect of noise, etc. 2) Malfunction of peripheral circuit components. Treatment : Turn the power OFF and reboot. If the error occurs again, check for presence of noise. Also, if you have another controller, replace it and try. A recurring error with the spare controller suggests presence of noise. If the cause cannot be identified, please contact IAI.
100 to 1FF	Message	Alarm on teaching tool	[Refer to the Instruction Manual of teaching tool.]
200 to 2FF	Operation release	Alarm on teaching tool	[Refer to the Instruction Manual of teaching tool.]
300 to 3FF	Cold start	Alarm on teaching tool	[Refer to the Instruction Manual of teaching tool.]
800 to 8FF	Alarm on Gateway [Refer to 9.3.1 Gateway Alarm Codes.]		[Refer to 9.3.1 Gateway Alarm Codes.]

_

MCON

Chapter 10 Appendix

10.1 Conformity to Safety Category

In this section shows an example of a circuit using the dedicated teaching pendant. However, it is not possible for us to check the conformity of our product to the condition of your system. Therefore, it is necessary that the user construct the circuit considering the condition of use and the categories to be applied.

[1] System Configuration

When it is necessary to construct a system that complies with Safety Category (ISO12100-1/ISO13849-1), use a MCON-CG contactor and teaching pendant (Model codes: TB-01D/DR or TB-02D).

Also, TP adapter (Model : RCB-LB-TGS) is required.

The system can conform to up to safety category B to 4 (ISO12100-1/ISO13849-1) by changing connections of system I/O connectors.



MCON

- [2] Wiring and setting of safety circuit
 - (1) Power supply

To use safety relays and/or contactors of 24V DC specification in the safety circuit, the control power supply should be used only for the circuit as much as possible. (Do not use the same power source as the driving power supply for this controller.)

It is the risk prevention treatment preparing for the cases such as the operation error of the safety circuit caused by not enough power capacity.

		,	,	01	
(2)	Specification	of system	I/O connector	for TP adapter

Conne	ctor Name	System I/O Connector		Applicable Wire
Upper side (EMG side)	Cable side	FMC1.5/6-ST-3.5 ^(Note 1)		
	TP adapter	MCDN1.5/6-G1-3.5P26T		
	side	HR	Phoenix	AWG24 to 16
Lower side	Cable side	FMC1.5/6-ST-3.5 ^(Note 1)	Contact	(0.2 to 1.25m ²)
	TP adapter	MCDN1.5/6-G1-3.5P26T		
	side	HR		

	Pin No	Signal	Description
	T III NO.	name	Description
	1	EMG1-	Emergency stop contact 1
	2	EMG1+	(30V DC or less, 100mA or less)
Linner eide	3	EMG2-	Emergency stop contact 2
(EMC aida)	4	EMG2+	(30V DC or less, 100mA or less)
	5	EMGIN	Emergency stop detection input
	6	EMGOUT	24V power supply output for emergency stop
			detection input
	7	ENB1-	Enable contact 1
	8	ENB1+	(30V DC or less, 100mA or less)
Lower side	9	ENB2-	Enable contact 2
(ENB side)	10	ENB2+	(30V DC or less, 100mA or less)
	11	ENBIN	Enable detection input
	12	ENBOUT	24V power supply output for enable detection input

Note 1 Connectors on the cable side are attached under conditions where initial wiring has been conducted.

In order to support each category, remove the initial wiring and wire your safety circuit.


(3) Connection of dummy plug of TP adapter

When operating the controller with AUTO Mode, make sure to connect the enclosed dummy plug (DP-4S).

[3] Examples of safety circuits 1) In case of category 1

TB-01D/TB-01DR or TB-02D (or Dummy plug : DP-4S)







• Detailed category 1 circuit example

MCON :

2) In case of category 2

TB-01D/TB-01DR or TB-02D (or Dummy plug : DP-4S)







• Detailed category 2 circuit example

MCON

3) In case of category 3 or 4

TB-01D/TB-01DR or TB-02D (or Dummy plug : DP-4S)





• Detailed category 3 or 4 circuit example

MCON

[4] TP adapter and related components1) TP adapter external dimensions







MCON =

2) Connection Cable

• Controller/TP Adaptor Connection Cable Use this cable to connect the controller and TP adapter. Model : CB-CON-LB005 (standard cable length : 0.5m) Maximum cable length : 2.0m

CN	1						~	CN2
								⇒⊐
		CN1		CB-CON-LB***		CN2		
	Color	Signal	No.		No	. Signal	Color	
	BR	SGA	1		1	SGA	BR	
	YW	SGB	2		2	SGB	YW	
	RD	5V	3		3	5V	RD	
	OR	ENBL	4		4	ENBL	OR	
	BL	EMGA	5		5	EMGA	BL	
	GN	24V	6		6	24V	GN	
	PL	GND	7		7	GND	PL	
	GY	EMGB	8		8	EMGB	GY	
	Shield	FG				FG	Shield	

8PIN MIN DIN Connector (overmolded)

8PIN MIN DIN Connector (overmolded)

MCON

3) Dummy plug

Connect a dummy plug to the teaching pendant connecting connector. Make sure to connect a dummy plug if the AUTO mode is specified. Without the connection, it will be the emergency stop condition. Model : DP-4S

Signal	No.	
GND	1	
EMGS	2	
VCC	3	
DTR	4	
EMGOUT2	5	
EMGIN2	6	
NC	7	
RSVCC	8	
EMGIN1	9	
NC	10	
NC	11	
EMGOUT1	12	
RTS	13	
CTS (GND)	14	
TXD	15	
RXD	16	
DSR	17	
NC	18	
NC	19	
RSVTBX1	20	
RSVTBX2	21	
ENBVCC2	22	
ENBTBX1	23	
ENBVCC1	24	
ENBTBX2	25	<u>ار</u> ا
GND	26	

DP-4S



Plug : HDR-E26MAG1+

> Short-circuit processing.

10.2 When Connecting Power Supply with + Grounding

When using with + grounding, there is a risk of short-circuit of 24V DC power supply if connected to the PC. This is because many PCs have the communication ground (GND) and the frame ground (FG) connected inside and short-circuit occurs through the frame ground. Also, if controllers with different 24V DC power supplies are connected with serial communication, the communication line may become the route of controller power supply in some cases depending on the timing to turn on the power, resulting in the malfunction of the communication line.

Troubleshooting is summarized separately in [ME0271 Caution for + Grounding 24V Power Controller]. Please refer to it.

10.3 Maintenance

10.3.1 Consumed Parts

<u> </u>						<u>.</u> .		
These	parts	below	have	production	lite	Shown	below is	the reference
111000	parto	201011	11010	production		01101111	00101110	

Item	Life	Specification				
Electrolytic capacitor	5 years	0 to 40°C				
Backup capacitor for calendar feature	5 years	When repeated to conduct for 12H in 40°C environment and cut for 12H in 20°C environment				
Forced air-cooling FAN	Approx. 3 years	When repeated to conduct for 24H in 40°C				

10.3.2 Maintenance Information

The times of actuator run and distance of operation can be summed up and recorded (Note 1) in the controller.

Also, an alarm is output ^(Note 3) and signal can by output ^(Note 4) externally when the times and distance ^(Note 2) exceed the threshold. By this signal, notice can be available for the timing of grease supply or regular inspection.

B Maintenance information[Axis No.0]		X				
	Units of total moving dis					
Current state						
Total moving count	513	< < < Send				
Total moving distance[km]	12	< < <				
Signal output timing setting						
Total moving count threshold	5000					
Total moving distance threshold[km]	10000	(Measure of grease supply)				

- Note 1 The contents recorded in the teaching tool and Modbus communication can be checked. To check in the teaching tool [Refer in each instruction manual for details] · TB-01/TB-02/TB-03 [Monitor] → [Maintenance]
 - · TB-02/TB-03 [Information] \rightarrow [Maintenance Information]
 - RC PC software [Monitor (M)] \rightarrow [Maintenance Information (I)] \rightarrow Select axis
- Note 2 Set in Parameter No. 147 "Total Times of Movement Target" and No. 148 "Total Drive Distance Target".
- Note 3 The message level alarms "04E Times of Movement Target Exceeded" and "04F Drive Distance Target Exceeded" are output. [Refer to 9.4.3 Alarm Codes on Driver Board (Each Axis)]
- Note 4 A light malfunction alarm (ALML) is output. [Refer to 3.7.1 [21]]

10.3.3 Replacement of Fan

SYS LED lamp (Note 1) turns on in red when an error on the fan has been detected. Start up the gateway parameter setting tool and check the alarm code.

If the alarm code is either "848" (Fan Rotation Drop) or "89E" (Fan Error), replace the fan unit by referring to the following steps.

Also, once a fan error has been detected, the gateway status signal gets output and detection can be monitored here.

Note 1 [Refer to 3.10 Field Network Status LED]

	Alarm Code	Alarm Name
Parameter Configuration tool	848	Decrease in Fan Revolution
	89E	Fun error
B0 to b7 in Gateway Status Signal 0	48	Decrease in Fan Revolution
(ALMC1 to ALMC128)	9E	Fun error

- [Step 1] Prepare a new fan.
- [Step 2] Turn the power off and detach the fan unit fixing screw (screw on the right in the two aligned ones).



[Step 3] Rotate the fan unit holder till it goes out of the fan unit interference.

Fan unit holder



Fan unit fixing screw (right side)

[Step 4] Grab the lattice^{*} on the fan unit with a tool such as needle-nose plier, and pull out the fan unit.

*The lattice on the fan unit is disposable.



- [Step 5] The new fan unit is to be pushed in to be settled. At this time, make sure the fan unit is pushed in down to become flush with the peripheral.
- [Step 6] Rotate the fan unit holder so the fan unit fixing screw can be tightened.

10.4 List of Specifications of Connectable Actuators

The specifications included in this list are limited to those needed to set operating conditions and parameters. For other detailed specifications, refer to the catalog or operation manual for your actuator.

- Caution : The push force is based on the rated push speed (factory setting) indicated in the list, and provides only a guideline.
 - Make sure the actual push force is equal to or greater than the minimum push force. If not, the push force will not stabilize.
 - Do not change the setting of push speed (parameter No.34). If you must change the push speed, consult IAI.
 - If, among the operating conditions, the positioning speed is set to a value equal to or smaller than the push speed, the push speed will become the set speed and the specified push force will not generate.

(Note) RCP2-SA7C/SA7R and RCP2CR-SA7C/SA7R is not connected.

10.4.1 Specifications for Pulse Motor Type Actuator

σ	RCP6 Series
---	--------------------

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
		Ball			Horizontal		1260 (at 50 to 400st) 1060 (at 450st) 875 (at 500st)	1			
	[Standard] SA4C SA4R		8192	16	20 Vertical	SA4C: 1260 (at 50 to 400st) 1060 (at 450st) 875 (at 500st) SA4R: 1120 (at 50 to 400st) 1060 (at 450st) 875 (at 500st)	0.5	21	48	20	
	[Cleanroom]			10	Horizontal	10	785 (at 50 to 400st)	1	22	77	
	SA4C			10	Vertical	13	555 (at 500st)	0.5	22		
RCP6				F	Horizontal	7	390 (at 50 to 400st) 330 (at 450st)	1	44	155	
(Slider				5	Vertical	1	275 (at 500st)	0.5	44	155	
type)				2.5	Horizontal	4	195 (at 50 to 400st)	1	80	210	
Standard				2.5	Vertical	4	135 (at 500st)	0.5	89	310	
Standard type / Cleanroom type	[Standard] SA6C SA6R [Cleanroom] SA6C	Ball screw	8192	20	Horizontal	25	SA6C: 1440 (at 50 to 450st) 1335 (at 500st) 1130 (at 550st) 970 (at 600st) 840 (at 650st) 735 (at 700st) 650 (at 750st) 575 (at 800st) SA6R: 1280 (at 50 to 500st) 1130 (at 550st) 970 (at 600st) 840 (at 650st) 735 (at 700st) 650 (at 750st) 575 (at 800st)	1	16	56	20

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]											
RCP6 RCP6CR (Slider type) Standard type / Cleanroom type				20	Vertical	25	SA6C: 1280 (at 50 to 500st) 1130 (at 550st) 970 (at 600st) 840 (at 650st) 735 (at 700st) 650 (at 750st) 575 (at 800st) SA6R: 1120 (at 50 to 550st) 970 (at 600st) 840 (at 650st) 735 (at 700st) 650 (at 750st) 575 (at 800st)	0.5	16	56												
		Ball screw			Horizontal		900 (at 50 to 400st) 885 (at 450st) 735 (at 500st) 620 (at 550st) 535 (at 600st) 460 (at 650st) 405 (at 700st) 355 (at 750st) 315 (at 800st)	1														
	[Standard] SA6C SA6R [Cleanroom] SA6C		8192	12	Vertical	15	SA6C: 900 (at 50 to 400st) 885 (at 450st) 735 (at 500st) 620 (at 550st) 535 (at 600st) 460 (at 650st) 405 (at 700st) 355 (at 750st) 315 (at 800st) SA6R: 800 (at 50 to 450st) 735 (at 500st) 620 (at 550st) 535 (at 600st) 460 (at 650st) 405 (at 700st) 355 (at 700st) 90 (at 50 st) 90 (at 50 st) 90 (at 50 st) 90 (at 700st) 90 (at 70	0.5	27	93	20											
										6	Horizontal	8	315 (at 800st) 450 (at 50 to 400st) 435 (at 450st) 365 (at 500st) 305 (at 550st) 265 (at 600st)	1	53	185						
					Vertical		230 (at 650st) 200 (at 700st) 175 (at 750st) 155 (at 800st)	0.5														
					Horizontal		225 (at 50 to 400st) 215 (at 450st) 180 (at 500st) 150 (at 550st)	1	106	320												
																	3	Vertical	4	115 (at 650st) 100 (at 700st) 85 (at 750st) 75 (at 800st)	0.5	100

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				24	Horizontal	SA7C: 1200 (at 50 to 600st) 1095 (at 650st) 965 (at 700st) 850 (at 750st) 760 (at 800st)	1	40	139		
RCP6 RCP6CR (Slider type) Standard type / Cleanroom type					Vertical		SA7R: 1080 (at 50 to 650st) 965 (at 700st) 850 (at 750st) 760 (at 800st)	0.5			20
	[Standard] SA7C	Ball screw		16	Horizontal	20	SA7C: 980 (at 50 to 500st) 965 (at 550st) 830 (at 600st) 720 (at 650st) 635 (at 700st) 560 (at 750st) 500 (at 800st) SA7R: 840 (at 50 to 550st) 830 (at 600st) 720 (at 650st) 635 (at 700st) 560 (at 750st) 500 (at 800st)	1	60	209	
	SA7R [Cleanroom] SA7C		8192		Vertical		SA7C: 840 (at 50 to 550st) 830 (at 600st) 720 (at 650st) 635 (at 700st) 560 (at 750st) 500 (at 800st) SA7R: 700 (at 50 to 650st) 635 (at 700st) 560 (at 750st) 500 (at 800st)	0.5			
					Horizontal	zontal	SA7C: 490 (at 50 to 500st) 475 (at 550st) 410 (at 600st) 355 (at 650st) 315 (at 700st) 275 (at 750st)	1			
			8	Vertical	245 (at 800st) SA7R: 420 (at 50 to 550st) 410 (at 600st) 355 (at 650st) 315 (at 700st) 275 (at 750st) 245 (at 800st)	0.5	119	418			

Note The values of the maximum velocity and maximum acceleration/deceleration for RCP6/RCP6CR/RCP6W are the ones when the high-output feature is activated. (There are also some models that are not related to the high-output setting.)

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]		
RCP6 RCP6CR (Slider type) Standard type / Cleanroom type	[Standard] SA7C SA7R [Cleanroom] SA7C	[Standard] SA7C SA7R [Cleanroom] SA7C	Ball screw	Ball screw	8192	4	Horizontal	5	SA7C: 245 (at 50 to 500st) 235 (at 550st) 205 (at 600st) 175 (at 650st) 155 (at 700st) 135 (at 750st) 120 (at 800st) SA7R: 210 (at 50 to 550st) 205 (at 600st) 175 (at 650st) 155 (at 700st) 135 (at 750st) 120 (at 800st)	1	239	836	20
					Vertical		210 (at 50 to 550st) 205 (at 600st) 175 (at 650st) 155 (at 700st) 135 (at 750st) 120 (at 800st)	0.5					
				16	Horizontal	20	840 (at 50 to 400st) 775 (at 450st) 660 (at 500st)	1	21	48			
	[Standard] WSA10C WSA10R [Cleanroom] WSA10C	Ball screw	Ball crew 8192	10	Horizontal	13	610 (at 50 to 350st) 590 (at 400st) 490 (at 450st) 415 (at 500st)	1	22	77			
RCP6					Horizontal	ontal	390 (at 50 to 300st) 355 (at 350st) 290 (at 400st) 245 (at 450st) 205 (at 500st)	1					
RCP6CR (Wide [slider type) Standard type / Cleanroom type				5	Vertical	7	WSA10C: 350 (at 50 to 350st) 290 (at 400st) 245 (at 450st) 205 (at 500st) WSA10R: 305 (at 50 to 350st) 290 (at 400st) 245 (at 450st) 205 (at 500st)	0.5	44	155	20		
				2.5	Horizontal	4	195 (at 50 to 300st) 175 (at 350st) 145 (at 400st) 120 (at 450st) 100 (at 500st)	1	89	310			
					Vertical	ŕ	175 (at 50 to 350st) 145 (at 400st) 120 (at 450st) 100 (at 500st)	0.5					

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
RCP6 RCP6CR (Wide slider type) Standard type				20	Horizontal	25	800 (at 50 to 600st) 740 (at 650st) 650 (at 700st) 580 (at 750st) 520 (at 800st)	1	16	56	
	[Standard] WSA12C WSA12R [Cleanroom] WSA12C			12	Horizontal	15	600 (at 50 to 500st) 535 (at 550st) 465 (at 600st) 405 (at 650st) 355 (at 700st) 315 (at 750st) 285 (at 800st)	1	27	93	
		Ball screw	8192	6	Horizontal	8	450 (at 50 to 350st) 435 (at 400st) 365 (at 450st) 310 (at 500st) 265 (at 550st) 230 (at 600st) 200 (at 650st) 175 (at 700st) 155 (at 750st) 140 (at 800st)	1	53	185	20
					Vertical		400 (at 50 to 400st) 365 (at 450st) 310 (at 500st) 265 (at 550st) 230 (at 600st) 200 (at 650st) 175 (at 700st) 155 (at 750st) 140 (at 800st)	0.5			
type				3	Horizontal		225 (at 50 to 350st) 215 (at 400st) 180 (at 450st) 150 (at 500st) 130 (at 550st)	1	106	370	
				5	Vertical	+	115 (at 600st) 100 (at 650st) 85 (at 700st) 75 (at 750st) 70 (at 800st)	0.5	100	370	
				24	Horizontal	30	700 (at 50 to 750st) 665 (at 800st)	1	40	139	
[[Standard] WSA14C	Ball		16	Horizontal	20	560 (at 50 to 650st) 550 (at 700st) 490 (at 750st) 440 (at 800st)	1	60	209	
	[Cleanroom] WSA14C	Ball screw	all rew 8192	8	Horizontal	10	420 (at 50 to 500st) 400 (at 550st) 350 (at 600st) 305 (at 650st) 270 (at 700st) 240 (at 750st)	1	119	418	20

 Note
 The values of the maximum velocity and maximum acceleration/deceleration for RCP6/RCP6CR/RCP6W are the ones when the high-output feature is activated. (There are also some models that are not related to the high-output setting.)

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				8	Vertical	10	350 (at 50 to 600st) 305 (at 650st) 270 (at 700st) 240 (at 750st) 215 (at 800st)	0.5	119	418	
RCP6 RCP6CR (Wide slider type) Standard type / Cleanroom type	[Standard] WSA14C WSA14R [Cleanroom] WSA14C	Ball screw	8192	4	Horizontal	5	WSA14C: 210 (at 50 to 500st) 200 (at 550st) 170 (at 600st) 150 (at 650st) 135 (at 700st) 120 (at 750st) 105 (at 800st) WSA14R: 175 (at 50 to 550st) 170 (at 600st) 150 (at 650st) 135 (at 700st) 105 (at 800st) 105 (at 800st)	1	239	836	20
					Vertical		175 (at 50 to 550st) 170 (at 600st) 150 (at 650st) 135 (at 700st) 120 (at 750st) 105 (at 800st)	0.5			
		4C Ball	Ball	16	Horizontal Vertical	20	840	1 0.5	21	48	
	RA4C			8192	10	Horizontal Vertical	13	RA4C: 700 RA4R: 610	1 0.5	22	77
	RA4R	screw	8192	5	Horizontal Vertical	7	350	1 0.5	44	155	20
				2.5	Horizontal Vertical	4	175	1	88	310	
				20	Horizontal	25	800	1	16	56	
	5400			12	Horizontal	15	700	1	26	93	
RCP6 (Rod	RA6C RA6R	screw	8192	6	Horizontal	8	450	1	53	185	20
type)				3	Horizontal	4	225	1	106	370	
R				24	Horizontal	30	RA7C: 860	1	52	192	
				24	Vertical	50	640	0.5	52	102	
	BATC	Pall		16	Horizontal	20	RA7C: 700 RA7R: 560	1	78	273	
	RA7C RA7R	screw	8192		Vertical		560	0.5			20
				8	Horizontal	10	420	1	156	547	
				4	Horizontal	5	RA7C: 210 RA7R: 175	1	312	1094	
					Vertical		175	0.5			

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				16	Horizontal	20	RRA4C: 1120 (at 60 to 360st) 1080 (at 410st)	1	21	48	
				10	Vertical	20	RRA4R: 840	0.5	21	10	
	RRA4C	Ball	8102		Horizontal		RRA4C: 700 (at 60 to 360st)	1			20
	RRA4R	screw	0192	10	Vertical	13	685 (at 410st) RRA4R: 610	0.5	22	77	20
				_	Horizontal	_	350 (at 60 to 360st)	1		155	
				5	Vertical	1	340 (at 410st)	0.5	44	155	
				2.5	Horizontal	4	175 (at 60 to 360st)	1	00	210	
				2.5	Vertical	4	170 (at 410st)	0.5	09	310	
				20	Horizontal	25	800	1	16	56	
RCP6				20	Vertical	25	800	0.5	10	50	
(Radial				12	Horizontal	15	700	1	26	03	
cylinder)	RRA6C	Ball	8102	12	Vertical	15	700	0.5	20	93	20
	RRA6R	screw	0192	6	Horizontal	Q	450	1	53	185	20
				0	Vertical	0	430	0.5	- 55	105	
				3	Horizontal	1	225 (at 65 to 365st)	1	106	370	
			5	Vertical	7	220 (at 415st)	0.5	100	570		
				24	Horizontal	30	860	1	52	182	
				24	Vertical	50	640	0.5	52	102	
			I 8192	16	Horizontal	20	RRA7C: 700 RRA7R: 560	1	78	273	
	RRA7C	Ball			Vertical		560	0.5			20
	RRA7R	screw	0192		Horizontal		420	1			20
				8	Vertical	10	RRA7C: 420 RRA7R: 350	0.5	156	547	
				4	Horizontal	5	RRA7C: 210	1	312	1094	
					Vertical	Ű	RRA7R: 175	0.5	012	1001	
				16	Horizontal	20	700	WRA10C:1 WRA10R:0.7	21	48	
				10	Horizontal	13	525 (at 50 to 450st) 490 (at 500st)	1	22	77	
				5	Horizontal	7	350 (at 50 to 400st) 290 (at 450st) 240 (at 500st)	1	44	155	
RCP6 (Wide	WRA10C	Ball			Vertical		260 (at 50 to 450st) 240 (at 500st)	0.5			
(Wide V radial V cylinder)	WRA10R	screw	8192		Horizontal		175 (at 50 to 400st) 145 (at 450st) 120 (at 500st)	1			20
			2.5	Vertical	4	WRA10C: 175 (at 50 to 400st) 145 (at 450st) 120 (at 500st) WRA10R: 150 (at 50 to 400st) 145 (at 450st) 120 (at 500st)	0.5	89	310		

Note The values of the maximum velocity and maximum acceleration/deceleration for RCP6/RCP6CR/RCP6W are the ones when the high-output feature is activated. (There are also some models that are not related to the high-output setting.)

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				20	Horizontal	25	800	1	16	56	
				12	Horizontal	15	560	1	26	93	
				G	Horizontal	0	400 (at 50 to 450st) 375 (at 500st)	1	52	105	
	WRA12C	Ball	8192	o	Vertical	8	WRA12C: 340 WRA12R: 280	0.5	53	185	20
	WIXELEN	SCIEW		3	Horizontal	4	225 (at 50 to 400st) 220 (at 450st) 185 (at 500st)	1	106	370	
RCP6					Vertical		200 (at 50 to 450st) 185 (at 500st)	0.5			
(Wide				24	Horizontal	30	630	1	52	182	
radial				16	Horizontal	20	560	1	78	273	
cylinder)	WRA14C	Ball		8	Horizontal	10	WRA14C: 420 (at 50 to 550st) 395 (at 600st) WRA14R: 350	1	156	547	
	WRA14R	screw	8192		Vertical		210	0.5			20
				4	Horizontal	5	WRA14C: 210 (at 50 to 550st) 195 (at 600st) WRA14R: 175	1	312	1094	
					Vertical		130	0.5			
					Horizontal		525	1			
				10	Vertical	40	435	0.5			
				10	Horizontal	13	435	1	33	//	
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		350	1			
	RA4C	Ball	8192	5	Vertical	7		0.5	66	155	20
	RA4R	screw		-	Horizontal		260	1			
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		175	1	-		
				2.5	Vertical	4	150	0.5	133	310	
RCP6W					Horizontal		130	1			
(Dust and					vertical		(in ambient temp. 5degC or lower)	0.5			
rod type)					Horizontai		630	1	-		
iou (jpo)				12	Vertical	15	525	0.5	40	93	
					Horizontai		525 (In ambient temp. EdgaC or lower)	1			
					Vertical		(In ambient temp: Sdege of lower)	0.5			
	BAGO				Vortical		420	0.5			
	RA6C RA6R	Ball	8192	6	Ventical	8	370	0.5	79	185	20
		301000			Vortical		315 (In ambient temp. 5deaC or lower)	0.5	-		
					Horizontol		(in ambient temp. suege of tower)	0.0			
					Vertical		210	0.5			
				3	Horizontal	4	105	1	159	370	
					Vertical		(In ambient temp. 5degC or lower)	0.5			

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					Horizontal		420	1			
				16	Vertical	20	420	0.5	117	272	
				10	Horizontal	20	280	1	117	213	
					Vertical		(In ambient temp. 5degC or lower)	0.5			
RCP6W					Horizontal		350	1			
(Dust and	RA7C	Ball	8102	8	Vertical	10	280	0.5	234	547	20
drip proof	RA7R	screw	0192	0	Horizontal	10	140	1	2.54	547	20
rod type)					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		140	1			
				4	Vertical	5		0.5	469	1094	
				4	Horizontal	5	105	1	403	1034	
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		525	1			
				10	Vertical	12	435	0.5	22	77	
				10	Horizontal	15	435	1			
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		350 (at 50 to 350st)	1			
		Dell		F	Vertical	7	340 (at 400st)	0.5	66	155	
	RRA4C RRA4R	screw	8192	5	Horizontal	/	260	1	00	155	20
	ittotiit	00101			Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		175 (at 50 to 350st) 170 (at 400st)	1			
				2.5	Vertical	4	150	0.5	133	310	
					Horizontal		105	1			
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		630	1			
				12	Vertical	15	525	0.5	40	03	
				12	Horizontal	15	525	1	40	30	
RCP6W					Vertical		(In ambient temp. 5degC or lower)	0.5			
(Dust and					Horizontal		420	1			
drip proof	RRA6C	Ball	8102	6	Vertical	8	370	0.5	70	185	20
radial	RRA6R	screw	0132	0	Horizontal	0	315	1	13	105	20
cylinder)					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		210	1			
				3	Vertical	1	210	0.5	150	370	
				5	Horizontal	7	105	1	100	570	
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		420	1			
				16	Vertical	20	420	0.5	117	273	
				10	Horizontal	20	280	1	117	215	
					Vertical		(In ambient temp. 5degC or lower)	0.5			
RI					Horizontal		350	1			
	RRA7C	Ball	8102	8	Vertical	10	280	0.5	234	547	20
	RRA7R	screw	0192	0	Horizontal	10	140	1	2.54	547	20
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		140	1			
				4	Vertical	F	140	0.5	460	1004	
				4	Horizontal	э	105	1	409	1094	
					Vertical		(In ambient temp. 5degC or lower)	0.5			

Note The values of the maximum velocity and maximum acceleration/deceleration for RCP6/RCP6CR/RCP6W are the ones when the high-output feature is activated. (There are also some models that are not related to the high-output setting.)

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				10	Horizontal	13	525 (at 50 to 450st) 490 (at 500st) 350	1	33	77	
					Horizontal		(In ambient temp. 5degC or lower) 350 (at 50 to 400st) 290 (at 450st) 240 (at 500et)	1			
				5	Vertical	7	215	0.5	66	155	
	WRA10C	Ball	0100		Horizontal		215	1			20
	WRA10R	screw	0192		Vertical		(In ambient temp. 5degC or lower)	0.5			20
					Horizontal		175 (at 50 to 400st) 145 (at 450st) 120 (at 500st)	1			
				2.5	Vertical	4	150 (at 50 to 400st) 145 (at 450st) 120 (at 500st)	0.5	133	310	
					Horizontal		65	1			
					Vertical		(In ambient temp. 5degC or lower)	0.5			
							560				
RCP6W				12	Horizontal	15	320 (In ambient temp. 5degC or lower)	1	40	93	
(Dust and drip proof	(Dust and drip proof wide radial				Horizontal		400 (at 50 to 450st) 375 (at 500st)	1			
cylinder)				6	Vertical	8	220	0.5	79	185	
oyinidor)	WRA12C	Ball screw	all 8192 rew		Horizontal		220	1			
	WRA12R				Vertical		(In ambient temp. 5degC or lower)	0.5			20
					Horizontal		225 (at 50 to 400st) 220 (at 450st) 185 (at 500st)	1			
				3	Vertical	4	140	0.5	159	370	
					Horizontal		80	1			
					Vertical		(In ambient temp. 5degC or lower)	0.5			
				16	Horizontal	20	420 280	1	117	273	
							(In ambient temp. 5degC or lower)				
					Horizontal		280	1			
					Vertical	10	210	0.5	004	5 4 7	
	WRA14C	Ball	8192	8	Horizontal	10	140	1	234	547	20
	WRA14R	screw			Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		130	1			
				4	Vertical	5		0.5	469	1094	
					Horizontal	Ũ	70	1	100	1001	
					Vertical		(In ambient temp. 5degC or lower)	0.5			
				16	Horizontal Vertical	20	980 700	1 0.5	21	48	
	TA4C RCP6 TA4R (Table (Single				Horizontal		785	1			
RCP6		Ball	0400	10	Vertical	13	700	0.5	22	77	00
(lable		screw	8192		Horizontal	-	200	1		455	20
ishe)	Type)			5	Vertical	/	390	0.5	44	155	
	Туре)			25	Horizontal	Λ	105	1	80	310	
				2.5	Vertical	4	190	0.5	09	510	

MCON ===

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				10	Horizontal	13	TA4C: 785 (at 40 to 190st) 680 (at 240st) TA4R: 700 (at 40 to 190st) 680 (at 240st)	1	22	77	
	TA4C TA4R (Double Block Type)	Ball screw	8192	10	Vertical	15	TA4C: 700 (at 40 to 190st) 680 (at 240st) TA4R: 525	0.5			20
				5	Horizontal Vertical	7	390 (at 40 to 190st) 340 (at 240st)	1 0.5	44	155	
				2.5	Horizontal Vertical	4	195 (at 40 to 190st) 170 (at 240st)	1	89	310	
				20	Horizontal	25	1120	1	16	56	
					Vertical		800	0.5			-
	TA6C TA6R	Ball		12	Horizontal Vertical	15	800 TA6C: 800	0.5	26	93	
	(Single	screw	8192				TA6R: 680				20
	Block Type)			6	Horizontal Vertical	8	400	1 0.5	53	185	
					Horizontal			1			
RCP6			3	Vertical	4	200	0.5	106	370		
				12	Horizontal	15	800 (at 45 to 220st) 735 (at 270st) 575 (at 320st)	1	26	93	
(Table type)	TA6C TA6R		Ball screw 8192		Vertical		680 (at 45 to 270st) 575 (at 320st)	0.5			
51 /	(Double Block	Ball screw		6	Horizontal	Q	400 (at 45 to 220st)	1	53	195	20
	Type)			0	Vertical	0	285 (at 320st)	0.5	55	105	
	51 /			2	Horizontal		200 (at 45 to 220st)	1	400	070	
				3	Vertical	4	185 (at 270st) 140 (at 320st)	0.5	106	370	
				24	Horizontal	20	1080	1	40	120	
				24	Vertical	30	860	0.5	40	139	
	TA7C			10	Horizontal	00	700	1	<u> </u>	000	
	TA7R	Ball		10	Vertical	20	560	0.5	60	209	
	(Single	screw	8192	-	Horizontal		420	1			20
	Type)			8	Vertical	10	350	0.5	119	418	
	Type)				Horizontal			1			
				4	Vertical	5	210	0.5	239	836	
TA7C TA7R (Double Block Type)				16	Horizontal	20	700 (at 40 to 340st) 600 (at 390st)	1	60	209	
				Vertical		560	0.5				
	TA7C TA7R (Double	Ball	ll 8192 ∋w	8	Horizontal	10	420 (at 40 to 290st) 365 (at 340st) 300 (at 390st)	1	119	418	20
	Block Type)	30101			Vertical		350 (at 40 to 340st) 300 (at 390st)	0.5			
	Туре)					Horizontal		210 (at 40 to 290st)	1		
Туре)			4	Vertical	5	180 (at 340st) 150 (at 390st)	0.5	239	836		

Note The values of the maximum velocity and maximum acceleration/deceleration for RCP6/RCP6CR/RCP6W are the ones when the high-output feature is activated. (There are also some models that are not related to the high-output setting.)

O RCP6 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
	GRT7A			1		1.25	75		34 (Both Ends)	120 (Both Ends)	
	ODTZD	-	8192	1.6 (Gear Ratio Pattern 1)	-	2	120	0.3	42 (Both Ends)	150 (Both Ends)	5
RCP6	GR17B			0.8 (Gear Ratio Pattern 2)		1	60		86 (Both Ends)	300 (Both Ends)	
(Gripper type)	GRST6C			8		10	180		30 (Both Ends)	110 (Both Ends)	
	GRST6R	Trapezoid		2		5	45		110 (Both Ends)	310 (Both Ends)	Lead 8: 10
	GRST7C	thread on right and left	8192	8	-	10	180 140 (In ambient temp. 5degC or lower)	0.3	100 (Both Ends)	340 (Both Ends)	Lead 2: 5
	GROTTR			2		5	45		330 (Both Ends)	880 (Both Ends)	
RCP6 (Rotary type)	RTFML	-	8192	12 deg (Gear Ratio 1/30)	-	15 (deg/s)	800 (deg/s)	0.7	-	-	-
RCP6 (Rotary Chuck)	RTCKSPE RTCKSPI RTCKSRE RTCKSRI	-	8192	90 deg (Gear Ratio 1/4)	-	113 (deg/s)	1800 (deg/s)	3	-	-	-
* Rotary part	RTCKMPE RTCKMPI RTCKMRE RTCKMRI	-	8192	72 deg (Gear Ratio 1/5)	-	90 (deg/s)	1800 (deg/s)	3	-	-	-

O RCP5 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					Horizontal		1260 (at 50 to 400st)	1.0			
				16	Vertical	20	1060 (at 450st) 875 (at 500st)	0.5	21	48	
	[Standard]				Horizontal		785 (at 50 to 400st)	1.0			
	SA4C SA4R	Ball		10	Vertical	13	675 (at 450st) 555 (at 500st)	0.5	22	77	
	101 1	screw	800	_	Horizontal		390 (at 50 to 400st)	1.0			20
	SA4C			5	Vertical	7	330 (at 450st) 275 (at 500st)	0.5	44	155	
					Horizontal		195 (at 50 to 400st)	1.0			
				2.5	Vertical	4	165 (at 450st) 135 (at 500st)	0.5	88	310	
RCP5 RCP5CR (Slider type) Standard type / Cleanroom type [S	[Standard] SA6C SA6R [Cleanroom] SA6C	Ball	W 800	20	Horizontal	25	SA6C: 1440 (at 50 to 450st) 1335 (at 500st) 1130 (at 550st) 970 (at 600st) 840 (at 650st) 735 (at 700st) 650 (at 750st) 575 (at 800st) SA6R: 1280 (at 50 to 500st) 1130 (at 550st) 970 (at 600st) 840 (at 650st) 735 (at 700st) 650 (at 750st) 575 (at 800st)	1.0	16	56	20
		A6R Ball screw A6C			Vertical		1280 (at 50 to 500st) 1130 (at 550st) 970 (at 600st) 840 (at 650st) 735 (at 700st) 650 (at 750st) 575 (at 800st)	0.5			
				12	Horizontal	15	900 (at 50 to 400st) 885 (at 450st) 735 (at 500st) 620 (at 550st) 535 (at 600st) 460 (at 650st) 405 (at 700st) 355 (at 750st) 315 (at 800st)	1.0	26	93	

Note The values of the maximum velocity and maximum acceleration/deceleration for RCP5/RCP5CR/RCP5W are the ones when the high-output feature is activated. (There are also some models that are not related to the high-output setting.)

.

O RCP5 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
RCP5 RCP5CR (Slider type) Standard type / Cleanroom type	[Standard] SA6C SA6R [Cleanroom] SA6C	rd] Screw om] (rd] R Ball	800	12	Vertical	15	SA6C: 900 (at 50 to 400st) 885 (at 450st) 735 (at 500st) 620 (at 550st) 535 (at 600st) 460 (at 650st) 405 (at 700st) 355 (at 750st) 315 (at 800st) SA6R: 800 (at 50 to 450st) 735 (at 500st) 620 (at 550st) 535 (at 600st) 460 (at 650st) 405 (at 700st) 355 (at 750st) 315 (at 800st)	0.5	26	93	20
			Ball 000	6	Horizontal	8	450 (at 50 to 400st) 435 (at 450st) 365 (at 500st) 305 (at 550st) 265 (at 600st)	1.0	53	185	20
					Vertical	0	230 (at 650st) 200 (at 700st) 175 (at 750st) 155 (at 800st)	0.5			
				3	Horizontal	4	225 (at 50 to 400st) 215 (at 450st) 180 (at 500st) 150 (at 550st) 130 (at 600st)	1.0	106	370	
[St					Vertical		115 (at 650st) 100 (at 700st) 85 (at 750st) 75 (at 800st)	0.5			
	[Standard] SA7C SA7R			24	Horizontal	20	SA7C: 1200 (at 50 to 600st) 1145 (at 650st) 1000 (at 700st) 885 (at 750st)	1.0	40	120	20
	[Cleanroom] SA7C	screw	000	24	Vertical	30	785 (at 800st) SA7R: 1000 (at 50 to 700st) 885 (at 750st) 785 (at 800st)	0.5	40	138	20

Mcon =

O RCP5 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				16	Horizontal	20	SA7C: 980 (at 50 to 550st) 875 (at 600st) 755 (at 650st) 660 (at 700st) 520 (at 800st) SA7R: 840 (at 50 to 600st) 755 (at 650st) 660 (at 700st) 585 (at 750st) 520 (at 800st)	1.0	60	209	
RCP5					Vertical		SA7C: 840 (at 50 to 600st) 755 (at 650st) 660 (at 700st) 585 (at 750st) 520 (at 800st) SA7R: 700 (at 50 to 650st) 660 (at 700st) 585 (at 750st) 520 (at 800st)	0.5			
RCP5CR (Slider type) Standard type / Cleanroom type	[Standard] SA7C SA7R [Cleanroom] SA7C	Ball screw	800	0	Horizontal	10	SA7C: 490 (at 50 to 550st) 430 (at 600st) 375 (at 650st) 325 (at 700st) 290 (at 750st) 265 (ct 900st)	1.0	110	449	20
	SA7C			0	Vertical	10	230 (at 600st) SA7R: 420 (at 50 to 600st) 375 (at 650st) 325 (at 700st) 290 (at 750st) 255 (at 800st)	0.5	19	410	
				4	Horizontal	5	SA7C: 245 (at 50 to 550st) 215 (at 600st) 185 (at 650st) 160 (at 700st) 140 (at 750st) 125 (at 800st) SA7R: 210 (at 50 to 600st) 185 (at 650st) 160 (at 700st) 140 (at 750st) 125 (at 800st)	1.0	239	836	
RCP5 RA4C (Rod type) RA4R					Vertical		210 (at 50 to 600st) 185 (at 650st) 160 (at 700st) 140 (at 750st) 125 (at 800st)	0.5			
				16	Horizontal	20	RA4C: 1120 (at 60 to 360st) 1080 (at 410st)	1.0	21	48	
	RA4C	Ball	800 -		Vertical		RA4R:	0.5			20
	КА4К	screw		10	Horizontal	13	700 (at 60 to 360st) 685 (at 410st)	1.0	22	77	
					Vertical		RA4R: 610	0.5			

O RCP5 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				5	Horizontal	7	350 (at 60 to 360st)	1.0	44	155	
	RA4C	Ball	800	-	Vertical		340 (at 410st)	0.5			20
	RA4R	screw		2.5	Horizontal	4	175 (at 60 to 360st)	1.0	88	310	
					Vertical		170 (at 410st)	0.5			
				20	Horizontal	25	800	1.0	16	56	
					Vertical			0.5			
				12	Horizontal	15	700	1.0	26	93	
	RA6C	Ball	800		Vertical			0.5			20
	RAOR	screw		6	Horizontal	8	450	1.0	53	185	
RCP5					Vertical			0.5			
(Rod type)				3	Horizontal	4	225 (at 65 to 365st)	1.0	106	370	
					vertical		220 (at 415st)	0.5			
				24	Horizontal	30	800	1.0	52	182	
					vertical			0.5			
				16	Horizontal	20	RA7C: 700 RA7R: 560	1.0	78	273	
	RA7C	Ball	800	10	Vertical	20	560	0.5	10	210	20
	RA7R	screw	000		Horizontal		RA7C: 420	1.0			20
				8	Vertical	10	RA7R: 350	0.5	156	547	
					Horizontal		RA7C: 210	1.0			
				4	Vertical	5	RA7R: 175	0.5	312	1094	
					Horizontal		500 (at 50st) 560 (at 100 to 400st)	1			
					Vertical		500	0.5			
				12	Horizontal	15	450 (In ambient temp. 5degC or lower)	1	40	93	
					Vertical		400 (In ambient temp. 5degC or lower)	0.5			
					Horizontal		200	1			
				c	Vertical	7 5	360	0.5	70	105	
	RA6C	Ball	800	0	Horizontal	7.5	300	1	79	100	20
		SCIEW			Vertical		(In ambient temp. 5degC or lower)	0.5			
RCP5W					Horizontal		180	1			
(Dust and				з	Vertical	3 75		0.5	159	370	
drip proof				5	Horizontal	5.75	150	1	100	570	
rod type)					Vertical		(In ambient temp. 5degC or lower)	0.5			
rod type)				3 (Motor Type: 42SP)	Vertical	3.75	70	0.5	354	590	
					Horizontal		500 (at 50st) 560 (at 100 to 500st)	1			
	BA7C	Ball	800	16	Vertical	20	500 (at 50st) 400 (at 100 to 500st)	0.5	04	210	20
	RA/U	screw	800	10	Horizontal	20	450 (In ambient temp. 5degC or lower)	1	94	219	20
					Vertical		300 (In ambient temp. 5degC or lower)	0.5			

MCON ===

O RCP5 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					Horizontal		340	1			
					Vertical		280	0.5			
				8	Horizontal	10	300 (In ambient temp. 5degC or lower)	1	187	437	
RCP5W (Dust and	DA7 0	Ball			Vertical		250 (In ambient temp. 5degC or lower)	0.5			
drip proof	RA/C	screw	800		Horizontal		170	1			20
rod type)					Vertical		140	0.5			
				4	Horizontal	5	150 (In ambient temp. 5degC or lower)	1	375	875	
					Vertical		125 (In ambient temp. 5degC or lower)	0.5			
	BA4 BA4U	Belt	800	Equivalent to 48	Horizontal	150	890 (at 300st) 1040 (at 400st) 1120 (at 500st) 1160 (at 600st) 1200 (at 700 to 1200st)	0.5	-	-	-
RCP5 (Belt type)	BA6 BA6U	Belt	800	Equivalent to 48	Horizontal	60	890 (at 300st) 1070 (at 400st) 1220 (at 500st) 1340 (at 600st) 1400 (at 700st) 1440 (at 800st) 1500 (at 900 to 2200st)	0.5	-	-	-
	BA7 BA7U	Belt	800	Equivalent to 48	Horizontal	100	890 (at 300st) 1070 (at 400st) 1220 (at 500st) 1340 (at 600st) 1450 (at 700st) 1520 (at 800st) 1550 (at 900st) 1600 (at 1000 to 2600st)	0.5	-	-	-

Note The values of the maximum velocity and maximum acceleration/deceleration for RCP5/RCP5CR/RCP5W are the ones when the high-output feature is activated. (There are also some models that are not related to the high-output setting.)

O RCP4 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
	[Standard]			6	Horizontal	8	420	1.0	16	58	
	SA3C			_	Vertical	-	-	0.5			-
	SA3R	Ball	800	4	Horizontal	5	280	1.0	25	86	20
	[Cleanroo	sciew			Vertical			0.5			-
	m]SA3C			2	Vertical	3	140	0.5	49	173	
					Horizontal		1440 (at 50 to 500st) 1225 (at 550st) 1045 (at 600st) 900 (at 650st) 785 (at 700st) 690 (at 750st) 610 (at 800st)	1.0			
RCP4 RCP4CR (Slider type) Standard	[Standard] SA5C SA5R [Cleanroom] SA5C			20	Vertical	25	SA5C: 1280 (at 50 to 500st) 1225 (at 550st) 1045 (at 600st) 900 (at 650st) 785 (at 700st) 610 (at 800st) SA5R: 1120 (at 50 to 550st) 1045 (at 600st) 900 (at 650st) 785 (at 700st) 690 (at 750st) 610 (at 800st)	0.5	16	56	
type / Cleanroom type		Ball screw	800		Horizontal		900 (at 50 to 450st) 795 (at 500st) 665 (at 550st) 570 (at 600st) 490 (at 650st) 425 (at 700st) 375 (at 750st) 330 (at 800st)	1.0			20
				12	Vertical	15	SA5C: 900 (at 50 to 450st) 795 (at 500st) 665 (at 550st) 570 (at 600st) 490 (at 650st) 425 (at 700st) 375 (at 750st) 330 (at 800st) SA5R: 800 (at 50 to 450st) 795 (at 550st) 570 (at 600st) 490 (at 650st) 425 (at 700st) 330 (at 800st) 330 (at 800st) 425 (at 700st) 330 (at 800st) 330	0.5	26	93	

MCON _____

O RCP4 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					Horizontal		450 (at 50 to 450st) 395 (at 500st) 335 (at 550st) 285 (at 600st)	1.0		105	
	[Standard] SA5C SA5R	Ball	800	6	Vertical	8	245 (at 650st) 215 (at 700st) 185 (at 750st) 165 (at 800st)	0.5	53	185	20
	[Cleanroom] SA5C	screw	800	Horizontal 225 (at 50 to 450st) 195 (at 500st) 1.0 165 (at 550st) 1.0 140 (at 600st) 1.0	1.0	- 106	370	20			
					Vertical		120 (at 650st) 105 (at 700st) 90 (at 750st) 80 (at 800st)	0.5			
RCP4 RCP4CR (Slider type) Standard type / Cleanroom type	[Standard] SA6C SA6R [Cleanroom] SA6C	Ball screw	800	20	Horizontal	25	SA6C: 1440 (at 50 to 500st) 1230 (at 550st) 1045 (at 600st) 905 (at 650st) 785 (at 700st) 690 (at 750st) 615 (at 800st) SA6R: 1280 (at 50 to 500st) 1230 (at 550st) 1045 (at 600st) 905 (at 650st) 785 (at 700st) 615 (at 800st) SA6C: 1280 (at 50 to 500st) 1230 (at 550st) 1045 (at 600st) 905 (at 650st) 785 (at 700st) 615 (at 800st) SA6R: 1120 (at 50 to 550st) 1045 (at 600st) 905 (at 650st) 785 (at 700st) 615 (at 800st) SA6R: 1120 (at 50 to 550st) 1045 (at 600st) 905 (at 650st) 785 (at 700st) 600 (at 750st) 616 (at 900st) 905 (at 650st) 785 (at 700st) 600 (at 750st) 617 (at 900st) 905 (at 650st) 785 (at 700st) 600 (at 750st) 616 (at 900st) 905 (at 650st) 785 (at 700st) 600 (at 750st) 617 (at 900st) 618 (at 900st) 905 (at 650st) 785 (at 700st) 619 (at 750st) 619 (at 750st)	0.5	16	56	20
				12	Horizontal Vertical	15	900 (at 50 to 450st) 795 (at 500st) 670 (at 550st) 570 (at 600st) 490 (at 650st) 430 (at 700st) 375 (at 750st) 335 (at 900st)	1.0 0.5	26	93	

O RCP4 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				6	Horizontal		450 (at 50 to 450st) 395 (at 500st) 335 (at 550st) 285 (at 600st)	1.0	53	185	20
	[Standard] SA6C SA6R	Ball	800	0	Vertical	0	245 (at 650st) 215 (at 700st) 185 (at 750st) 165 (at 800st)	0.5	55	100	
	[Cleanroom] SA6C	screw	v 800 Horizontal 225 (at 50 to 450st) 195 (at 500st) 165 (at 550st) 140 (at 600st)	1.0		20					
				3	Vertical	4	120 (at 650st) 105 (at 700st) 90 (at 750st) 80 (at 800st)	0.5	106	370	
RCP4 RCP4CR (Slider type) Standard type / Cleanroom type	[Standard] SA7C SA7R [Cleanroom] SA7C				Horizontal		SA7C: 1200 (at 50 to 600st) 1155 (at 650st) 1010 (at 700st) 890 (at 750st)	1.0		400	
				24	Vertical	. 30	790 (at 800st) SA7R: 1000 (at 50 to 700st) 890 (at 750st) 790 (at 800st)	0.5	40	139	
				16	Horizontal	20	SA7C: 980 (at 50 to 550st) 865 (at 600st) 750 (at 650st) 655 (at 700st) 580 (at 750st) 515 (at 800st) SA7R: 840 (at 50 to 600st) 750 (at 650st) 655 (at 700st) 580 (at 750st) 515 (at 800st)	1.0	60	209	
		Ball screw	800		Vertical		SA7C: 840 (at 50 to 600st) 750 (at 650st) 655 (at 700st) 580 (at 750st) 515 (at 800st) SA7R: 700 (at 50 to 650st) 655 (at 700st) 580 (at 750st) 515 (at 800st)	0.5			20
				8	Horizontal	10	SA7C: 490 (at 50 to 550st) 430 (at 600st) 375 (at 650st) 325 (at 700st) 290 (at 750st) 255 (at 800st)	1.0	119	418	
					Vertical		SA7R: 420 (at 50 to 600st) 375 (at 650st) 325 (at 700st) 290 (at 750st) 255 (at 800st)	0.5			

O RCP4 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]	
RCP4 RCP4CR (Slider type) Standard type / Cleanroom type	[Standard] SA7C SA7R [Cleanroom] SA7C] screw	800	4	Horizontal	5	SA7C: 245 (at 50 to 550st) 215 (at 600st) 185 (at 650st) 160 (at 700st) 145 (at 750st) 125 (at 800st) SA7R: 210 (at 50 to 600st) 185 (at 650st) 160 (at 700st) 145 (at 750st) 125 (at 800st)	1.0	239	836	20	
					Vertical		210 (at 50 to 600st) 185 (at 650st) 160 (at 700st) 145 (at 750st) 125 (at 800st)	0.5				
	SA5C	Ball	800	10	Horizontal	13	330	0.6	38.2	66.9	20	
RCP4W		screw	000	5	Horizontal	7	165	0.0	42.3	147.9	20	
drip proof	SA6C	Ball	800	12	Horizontal	15	400	0.6	35.5	82.8	20	
slider		screw		6	Horizontal	8	200		51.3	179.5		
type)	SA7C	Ball	800	16	Horizontal	20	530	0.6	60	209	20	
		screw		8	Horizontal	10	265		119	418		
				16	Horizontal	20	1120	1.0	15	36		
					Vertical			0.5			-	
				10	Horizontal	13	700	1.0	16	57		
	RA3C	Ball	800		Vertical			0.5		-	20	
	казк	sciew		5	Horizontal	7	350	1.0	33	114		
					Vertical			0.5			-	
				2.5	Horizontal	4	175	1.0	65	229		
					Horizontal			0.5			-	
		Ball		20 12	Vertical	25	800	0.5	16	56		
					Horizontal			1.0				
					Vertical	15	700	0.5	26	93		
					Horizontal			1.0				
DOD4	RA5C		800	6	Vertical	8	450	0.5	53	185	20	
(Rod	RA5R	screw	800		Horizontal			1.0			20	
type)				3	Vertical	4	225	0.5	106	370		
				3 (Motor Type: 42SP)	Vertical	4	80	0.5	370	750		
				24	Horizontal	30	800	1.0	52	182		
				24	Vertical	50	600	0.5	52	102		
				16	Horizontal	20	RA6C: 700 RA6R: 560	1.0	78	273		
	RA6C	Ball	800		Vertical		560	0.5			20	
	RA6R	screw		_	Horizontal		420	1.0				
				8	Vertical	10	RA6C: 420 RA6R: 350	0.5	156	547		
						4	Horizontal Vertical	5	RA6C: 210 RA6R: 175	1.0 0.5	312	1094

O RCP4 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					Horizontal		500 (at 50st) 560 (at 100 to 400st)	1.0			
				12	Vertical		500	0.5		93	
					Horizontal	15	450 (In ambient temp. 5degC or lower)	1.0	40		
					Vertical		400 (In ambient temp. 5degC or lower)	0.5			
					Horizontal		360	1.0			
		Ball		6	Vertical	8		0.5	79	93 185 370 590 219 437 437 875 875 875 140 (Both Ends) 140 (Both Ends) 220	I
	RA6C	screw	800	-	Horizontal		300	1.0			20
					Vertical		(In ambient temp. 5degC or lower)	0.5			
					Horizontal		180	1.0			
				3	Vertical	4		0.5	159	370	
				-	Horizontal		150	1.0			l
				-	Vertical		(In ambient temp. 5degC or lower)	0.5			
RCP4W (Dust and drip proof rod type)				3 (Motor Type: 42SP)	Vertical	4	70	0.5	354 94	590	
					Horizontal		500 (at 50st) 560 (at 100 to 500st)	1.0			
				16	Vertical	20	500 (at 50st) 400 (at 100 to 500st)	0.5	94 219		
				10	Horizontal	20	450 (In ambient temp. 5degC or lower)	1.0	94	219	
					Vertical		300 (In ambient temp. 5degC or lower)	0.5	_		
					Horizontal		340	1.0			
	RA7C	Ball	800		Vertical		280	0.5	187 437	20	
		screw	, 000	8	Horizontal	10	300 (In ambient temp. 5degC or lower)	1.0		437	20
					Vertical		250 (In ambient temp. 5degC or lower)	0.5			
					Horizontal		170	1.0			
					Vertical		140	0.5			
				4	Horizontal	5	150 (In ambient temp. 5degC or lower)	1.0	375	875	
					Vertical		125 (In ambient temp. 5degC or lower)	0.5			
	GRSML			1.88		3	94		25 (Both Ends)	87 (Both Ends)	
	GRSLL			2.52		4	125		40 (Both Ends)	140 (Both Ends)	
RCP4	GRSWL		800	3.14		4	157	0.3	50 (Both Ends)	220 (Both Ends)	5
type)	GRLM	-	000	12	-	15 (deg/s)	600 (deg/s)	0.0	10 (Both Ends)	35 (Both Ends)	5
	GRLL			12		15 (deg/s)	600 (deg/s)	1	10 (Both Ends)	60 (Both Ends)	
	GRLW			12.86		17 (deg/s)	643 (deg/s)		23 (Both Ends)	90 (Both Ends)	

O RCP3 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
	SA2AC	Lead		4		5	180 (at 25st) 200 (at 50 to 100st)				-
	SA2AR	screw	800	2	Horizontal	3	100	0.2	-	-	
				1		2	50				
	SA2BC	Lead		6	8	180 (at 25st) 280 (at 50st) 300 (at 75 to 150st)					
	SA2BR	screw	800	4	Horizontal	5	180 (at 25st) 200 (at 50 to 150st)	0.2	-	-	-
				2		3	100				
	SA3C SA3R			6	Horizontal	8	300	0.3	16	30	
				0	Vertical	0	300	0.2	10	50	20
		Ball	800	4	Horizontal	5	200	0.3	25	45	
		screw	000	-	Vertical	5	200	0.2	25	40	
				2	Horizontal, Vertical	3	100	0.2	50	90	
				10	Horizontal	10	E00	0.7	25	40	
				10	Vertical	13	500	0.3	25	40	
	SA4C	Ball	800	5	Horizontal	7	250	0.7	50	80	20
	SA4R	screw	800	5	Vertical	1	250	0.3	50	80	20
RCP3				2.5	Horizontal	1	125	0.7	100	160	
(Slider				2.5	Vertical	4	125	0.3	100	100	
type)				20 (Only for	Horizontal	25	1000 (at 50 to 600st) 910 (at 650st) 700 (at 700at)	0.7	20	50 80 100 160 20 34	
				SA5C)	Vertical	25	690 (at 750st) 610 (at 800st)	0.2	20		
				10	Horizontal	45	600 (at 50 to 550st) 570 (at 600st) 490 (at 650st)	0.7	10	50	
	0450	D-#		12	Vertical	15	425 (at 700st) 370 (at 750st) 330 (at 800st)	0.3	40	58	
	SA5C SA5R	screw	800		Horizontal		300 (at 50 to 550st) 285 (at 600st) 245 (at 650st)	0.7		115	20
				6	Vertical	8	210 (at 700st) 185 (at 750st) 165 (at 800st)	0.3	80	115	
					Horizontal		150 (at 50 to 550st) 140 (at 600st) 120 (at 650st)	0.7	465	000	
				3	Vertical	4	105 (at 700st) 90 (at 750st) 80 (at 800st)	0.3	160	230	

O RCP3 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]	
				20	Horizontal		1000 (at 50 to 600st) 910 (at 650st)	0.7				
RCP3				(Only for SA6C)	Vertical	25	790 (at 700st) 690 (at 750st) 610 (at 800st)	0.2	20	34		
					Horizontal	15	600 (at 50 to 550st) 570 (at 600st)	0.7				
				12	Vertical		490 (at 650st) 425 (at 700st) 370 (at 750st) 330 (at 800st)	0.3	40	58		
(Slider type)	SA6C SA6R	Ball screw	800	6	Horizontal	8	300 (at 50 to 550st) 285 (at 600st) 245 (at 650st)	0.7	80	115	20	
				0	Vertical		210 (at 700st) 185 (at 750st) 165 (at 800st)	0.3	60	115		
					Horizontal	1	150 (at 50 to 550st) 140 (at 600st) 120 (at 650st)	0.7	160	220		
				5	Vertical	4	105 (at 700st) 90 (at 750st) 80 (at 800st)	0.3	100	230		
		Lead		4	4 Horizontal	5	180 (at 25st) 200 (at 50 to 100st)		0.9	6.6		
		screw		2	/vertical	3	100	0.2	1.9	13.2		
				1		2	50		3.8	26.4		
		Dell		4	Horizontal Vertical	5	180 (at 25st) 200 (at 50 to 100st)	0.3	3.6	12.6		
		screw		2	Horizontal	3	100	0.3	7.2	25.2		
	RA2AC RA2AR	Standard	800		Vertical			0.2			5	
		.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		1	Horizontal	2	50	0.3	14.4	50.4		
				4	Ventical	5	180 (at 25st) 200 (at 50 to 100st)	0.2		23.1		
		Ball			Vertical			0.3	6.6			
		screw High			Horizontal	3	200 (41 00 10 10001)	0.3				
				2	Vertical		100	0.2	13.2	46.2		
RCP3		thrust			Horizontal	_		0.3				
(Rod		.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		1	Vertical	2	50	0.2	26.4	92.4		
type)		Lead		6	Horizontal	8	180 (at 25st) 280 (at 50st) 300 (at 75 to 150st)	0.2	0.6	4.4		
		screw		4	/vertical	5	180 (at 25st) 200 (at 50 to 150st)	0.2	0.9	6.6		
				2		3	100		1.9	13.2		
	RA2BC			6	Horizontal	8	180 (at 25st) 280 (at 50st)	0.3	1.8	63	_	
	RA2BR		800	Ũ	Vertical	Ŭ	300 (at 75 to 150st)	0.2	1.0	0.0	5	
		Ball screw		4	Horizontal	5	180 (at 25st) 200 (at 50 to 150st)	0.3	3.6	12.6		
		Standard			Horizontal		200 (at 00 to 1005t)	0.2				
		type		2	Vertical	3	100	0.3	7.2	25.2		
					Horizontal			0.3			-	
					1	Vertical	2	50	0.2	14.4	50.4	
O RCP3 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				6	Horizontal	Q	180 (at 25st)	0.3	4.4	15 /	
		Dell		0	Vertical	0	300 (at 75 to 150st)	0.2	4.4	13.4	
RCP3		screw		4	Horizontal	5	180 (at 25st)	0.3	6.6	23.1	
(Rod	RA2BC RA2BR	High	800		Vertical		200 (at 50 to 150st)	0.2	0.0	20	5
type)		thrust		2	Horizontal	3	100	0.3	13.2	46.2	
		900			Ventical			0.2			
				1	Vertical	2	50	0.3	26.4	92.4	
					Horizontal	<u> </u>	300	0.3	10	15	
				6	Vertical	8	200	0.2	10	15	
	TA3C	Ball	000	4	Horizontal	F	200	0.3	45	00	00
	TA3R	screw	800	4	Vertical	D	133	0.2	15	22	20
				2	Horizontal	2	100	0.2	20	45	
				Z	Vertical	3	67	0.2	30	45	
	TA4C Ba			6	Horizontal	Q	300	0.3	15	25	
				0	Vertical	0	300	0.2	15	25	
		Ball	800	4	Horizontal	5	200	0.3	22	37	20
	TA4R	screw		-	Vertical	Ū	200	0.2	~~~	01	
				2	Horizontal /vertical	3	100	0.2	45	75	
				10	Horizontal	13	465	0.3	21	34	
RCP3				10	Vertical	10	400	0.2	21	04	
(Table	TA5C	Ball	800	5	Horizontal	7	250	0.3	11	68	20
type)	TA5R	screw		5	Vertical	,	200	0.2		00	20
				2.5	Horizontal /vertical	4	125	0.2	82	136	
				12	Horizontal	15	560	0.3	35	60	
				12	Vertical	10	500	0.2		00	
	TA6C	Ball	800	6	Horizontal	8	300	0.3	70	110	20
	TA6R	screw	000	0	Vertical	0	300	0.2	70	110	20
TAOR TA7C TA7R				3	Horizontal /vertical	4	150	0.2	140	189	
				12	Horizontal	15	600	0.3	35	60	
			12	Vertical	10	580	0.2	35	00		
	TA7C	Ball	800	6	Horizontal	8	300	0.3	70	110	20
	TA7R	screw	000	0	Vertical	0	300	0.2	10	110	20
				3	Horizontal /vertical	4	150	0.2	140	189	

_

O RCP2 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				20	Horizontal	25	380 (at 50st) 540 (at 100st) 660 (at 150st) 770 (at 200st) 860 (at 250st) 940 (at 300st) 1000 (at 350 to 550st) 980 (at 600st) 850 (at 650st) 740 (at 700st) 650 (at 750st) 580 (at 800st)	0.7	11	39	
	SA5C	Ball	800		Vertical		380 (at 5054) 380 (at 50st) 540 (at 100st) 660 (at 150st) 770 (at 200st) 800 (at 250 to 600st) 740 (at 700st) 650 (at 750st) 580 (at 800st)	0.2			20
					Horizontal		600 (at 50 to 550st) 540 (at 600st) 460 (at 650st)	0.7			
	RCP2 (Slider type)			12	Vertical	15	400 (at 700st) 360 (at 750st) 300 (at 800st)	0.3	40	115	
RCP2 (Slider				-	Horizontal		300 (at 50 to 550st) 270 (at 600st) 230 (at 650st)	0.7			
type)				6	Vertical	8	200 (at 700st) 180 (at 750st) 150 (at 800st)	0.3	70	210	
					Horizontal		150 (at 50 to 550st) 135 (at 600st) 115 (at 650st)	0.7			
				3	Vertical	4	100 (at 700st) 90 (at 750st) 75 (at 800st)	0.3	140	330	
				10	Horizontal	45	600 (at 50 to 550st) 540 (at 600st) 460 (at 650st)	0.3			
				12	Vertical	15	400 (at 700st) 360 (at 750st) 300 (at 800st)	0.2			
SA5	0.455	Ball	000	0	Horizontal	0	300 (at 50 to 550st) 270 (at 600st) 230 (at 650st)	0.3			
	SA5R	screw	800	6	Vertical	ð	200 (at 700st) 180 (at 750st) 150 (at 800st)	0.2	-	-	-
				3	Horizontal /vertical	4	150 (at 50 to 550st) 135 (at 600st) 115 (at 650st) 100 (at 700st) 90 (at 750st) 75 (at 800st)	0.2			

Mcon ==

O RCP2 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				20	Horizontal	25	380 (at 50st) 540 (at 100st) 660 (at 150st) 770 (at 200st) 860 (at 250st) 940 (at 300st) 1000 (at 350 to 550st) 980 (at 600st) 850 (at 650st) 740 (at 700st) 650 (at 750st) 580 (at 800st)	0.7	11	39	
	SA6C	Ball screw	800		Vertical		380 (at 50st) 380 (at 50st) 540 (at 100st) 660 (at 150st) 770 (at 200st) 800 (at 250 to 600st) 740 (at 700st) 650 (at 750st) 580 (at 800st)	0.2			20
					Horizontal		600 (at 50 to 550st) 540 (at 600st)	0.7			
				12	Vertical	15	400 (at 700st) 400 (at 750st) 360 (at 750st) 300 (at 800st)	0.3	40	115	
RCP2 (Slider					Horizontal		300 (at 50 to 550st) 270 (at 600st) 230 (at 650st)	0.7			
type)				6	Vertical	8	200 (at 700st) 200 (at 700st) 180 (at 750st) 150 (at 800st)	0.3	70	210	
					Horizontal		150 (at 50 to 550st) 135 (at 600st) 115 (at 650st)	0.7			
				3	Vertical	4	100 (at 700st) 90 (at 750st) 75 (at 800st)	0.3	140	330	
					Horizontal		600 (at 50 to 550st) 540 (at 600st) 460 (at 650st)	0.3			
				12	Vertical	15	400 (at 700st) 360 (at 750st) 300 (at 800st)	0.2			
s	0.105	Ball			Horizontal		300 (at 50 to 550st) 270 (at 600st) 230 (at 650st)	0.3			
	SAGK	screw	800	6	Vertical	8	200 (at 700st) 180 (at 750st) 150 (at 800st)	0.2	-	-	-
				3	Horizontal /vertical	4	150 (at 50 to 550st) 135 (at 600st) 115 (at 650st) 100 (at 700st) 90 (at 750st) 75 (at 800st)	0.2			

O RCP2 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				12	Horizontal	15	600 (at 50 to 500st) 470 (at 600st)	0.3	40	115	
	SS7C	Ball screw	800	6	Horizontal	8	300 (at 50 to 500st)	0.2	70	210	20
				3	Horizontal	4	150 (at 50 to 500st)	0.2	140	330	
				12	Horizontal	15	600 (at 50 to 500st) 470 (at 600st)	0.3			
				12	Vertical	15	440	0.2			
	SS7R	Ball	800		Horizontal		250 (at 50 to 500st)	0.3	- 1	-	-
		screw		6	Vertical	7.5	230 (at 600st)	0.2			
				3	Horizontal /vertical	3.75	105	0.2			
				20	Horizontal	25	666 (at 50 to 800st) 625 (at 900st) 515 (at 1000st)	0.3	50	180	
					Vertical		600 (at 50 to 900st) 515 (at 1000st)	0.2			
RCP2 (Slider type)	SS8C	Ball	800	10	Horizontal	13	333 (at 50 to 800st) 310 (at 900st) 255 (at 1000st)	0.3	95	320	20
		screw			Vertical		300 (at 50 to 900st) 255 (at 1000st)	0.2			
				5	Horizontal	7	165 (at 50 to 800st) 155 (at 900st) 125 (at 1000st)	0.2	180	630	
					Vertical		150 (at 50 to 900st) 125 (at 1000st)				
				20	Horizontal	25	600 (at 50 to 900st) 515 (at 1000st)	0.3			
					Vertical		333	0.2			
		Ball		10	Horizontal	13	300 (at 50 to 900st) 255 (at 1000st)	0.3			
	SS8R	screw	800		Vertical		250	0.2	-	-	-
				5	Horizontal	7	160 (at 50 to 800st) 155 (at 900st) 125 (at 1000st)	0.2			
					Vertical		140 (at 50 to 900st) 125 (at 1000st)				
RCP2	BA6 BA6U	Belt	800	Equivalent to 54	Horizontal	100	1000	0.5	-	-	-
(Belt type)	BA7 BA7U	Belt	800	Equivalent to 54	Horizontal	100	1500	0.5	-	-	-
	RA2C (Note 1)	Ball screw	800	1	Horizontal /vertical	2	25	0.05	50	100	3
(Note	PASC	Ball	800	5	Horizontal /vertical	7	187	0.2	21	73.5	20
(Rod	RAJU	screw	000	2.5	Horizontal /vertical	4	114	0.2	50	156.8	20
type)	BODAC	Ball	900	5	Horizontal /vertical	7	187		21	73.5	20
	KGD3C	screw	800	2.5	Horizontal Vertical	4	93	0.2	50	156.8	20

Note 1 For RCP2-RA2C, a ball screw with its lead length 1mm and a speed reducer with its gear ratio 1/2 are joined directly.

O RCP2 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				10	Horizontal /vertical	13	458 (at 50 to 250st) 350 (at 300st)		30	150	
	RA4C	Ball	800	5	Horizontal /vertical	7	250 (at 50 to 200st) 237 (at 250st) 175 (at 300st)		75	284	20
	RGD4C	screw	800	2.5	Horizontal	4	125 (at 50 to 200st) 118 (at 250st) 87 (at 300st)	0.2	150	358	20
RCP2					Vertical		114 (at 50 to 250st) 87 (at 300st)				
(Rod type)				16	Horizontal Vertical	20	450 400		75	240	
	RA6C RGS6C	Ball screw	800	8	Horizontal /vertical	10	210	0.2	130	470	20
	RGD6C			4	Horizontal /vertical	5	130	-	300	800	
	SRA4R	Ball		5	Horizontal Vertical	7	250	0.3	32	112	
	SRGS4R SRGD4R	screw	800	2.5	Horizontal /vertical	4	125	0.2	64	224	20
				10	Horizontal	13	450 (at 50 to 250st) 350 (at 300st)		30	150	
					Vertical		250				
RCP2W (Dust and	RAAC	Ball	800	5	Horizontal /vertical	7	190 (at 50 to 250st) 175 (at 300st)	0.2	75	284	20
	10.40	screw	000	2.5	Horizontal	4	125 (at 50 to 200st) 115 (at 250st) 85 (at 300st)		150	358	20
rod type)					Vertical		85 (at 300st)				
				16	Horizontal Vertical	20	320 265	-	75	240	
	RA6C	Ball screw	800	8	Horizontal /vertical	10	200	0.2	130	470	20
				4	Horizontal /vertical	5	100		300	800	
	GRSS			1.57		2	78		4 (Both Ends)	14 (Both Ends)	5
	GRLS			12		15 (deg/s)	600 (deg/s)		1.8 (Both Ends)	6.4 (Both Ends)	5 (deg/s)
	GRS			1		2	33		9 (Both Ends)	21 (Both Ends)	5
	GRM			1.1		2	36		23 (Both Ends)	80 (Both Ends)	5
	GRHM			2		2.5	100		25 (Both Ends)	125 (Both Ends)	5
RCP2	GRHB		800	2		2.5	100	-	60 (Both Ends)	200 (Both Ends)	5
type)	ODOT	-	800	1.05	-	2	34 (Standard Type)	-	15 (Both Ends)	40 (Both Ends)	5
type)	GRST			2.27		3	75 (High Speed Type)	-	7.5 (Both Ends)	20 (Both Ends)	5
	GR3SS			2.5		3.12	40		7 (Both Ends)	22 (Both Ends)	5
	GR3SM			3		3.75	50		30 (Both Ends)	102 (Both Ends)	5
	GR3LS			12		15 (deg/s)	200 (deg/s)		5 (Both Ends)	18 (Both Ends)	5 (deg/s)
	GR3LM			12		15 (deg/s)	200 (deg/s)		15 (Both Ends)	51 (Both Ends)	5 (deg/s)

O RCP2 Series

Actuator series	Туре	Feed screw	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
	GRSS			1.57		2	78		4 (Both Ends)	14 (Both Ends)	5
RCP2CR	GRLS			12		15 (deg/s)	600 (deg/s)		1.8 (Both Ends)	6.4 (Both Ends)	5 (deg/s)
RCP2W (Cleanroom	GRS		000	1		2	33		9 (Both Ends)	21 (Both Ends)	5
/ Dust and drin proof	GRM	-	800	1.1	-	2	36	-	23 (Both Ends)	80 (Both Ends)	5
gripper type) G	GR3SS			2.5		4	40		7 (Both Ends)	22 (Both Ends)	5
	GR3SM			3		4	50		30 (Both Ends)	102 (Both Ends)	5
RCP2	RTBS RTBSL		800	12deg (Gear ratio: 1/30)		15 (deg/s)	400 (deg/s)				
RCP2W (Rotary type)	RTCS RTCSL	-	800	8deg (Gea ratio: 1/45)	-	10 (deg/s)	266 (deg/s)	-	-	-	-
(Rotary type) Standard type / Cleanroom type / Dust and drip proof type	RTB RTBL RTC RTCL			18deg (Gear ratio: 1/20)		23 (deg/s)	600 (deg/s)				
	RTBB RTBBL RTCB RTCBL	-	800	12deg (Gear ratio: 1/30)	-	15 (deg/s)	400 (deg/s)	-	-	-	-

MCON ===

10.4.2 Specifications for Servo Motor Type Actuator

O RCA2 Series

Actuator series	Туре	Feed screw	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
	SA2AC	Ball			4	Horizontal	5	180 (at 25st) 200 (at 50 to 100st)				
	SA2AR	screw	5	800	2	/vertical	3	100	0.3	-	-	-
					1		2	50				
						Horizontal	0	000	0.3			
					0	Vertical	0	300	0.2			
	SA3C	Ball	10	800	4	Horizontal	5	200	0.3	_	_	_
	SA3R	screw		000	4	Vertical	5	200	0.2			
					2	Horizontal /vertical	3	100	0.2			
					10	Horizontal	13	500	0.3			
					10	Vertical	15	500	0.2			
	SA4C	Ball	20	800	5	Horizontal	7	250	0.3	_	_	_
	SA4R	screw				Vertical	,	200	0.2			
					2.5	Horizontal /vertical	4	125	0.2			
RCA2 (Slider					20 (Only for	Horizontal	25	1000 (at 50 to 600st) 910 (at 650st) 790 (at 700st) 690 (at 750st) 610 (at 800st)	0.3			
					SA5C)	Vertical		800 (at 50 to 650st) 790 (at 700st) 690 (at 750st) 610 (at 800st)	0.2			
(Silder type)					40	Horizontal	45	600 (at 50 to 550st) 570 (at 600st) 490 (at 650st)	0.3			
	SA5C SA5R	Ball screw	20	800	12	Vertical	15	425 (at 700st) 370 (at 750st) 330 (at 800st)	0.2	-	-	-
					6	Horizontal	0	300 (at 50 to 550st) 285 (at 600st) 245 (at 650st)	0.3			
					0	Vertical	0	210 (at 700st) 185 (at 750st) 165 (at 800st)	0.2			
					3	Horizontal /vertical	4	150 (at 50 to 550st) 140 (at 600st) 120 (at 650st) 105 (at 700st) 90 (at 750st) 80 (at 800st)	0.2			
	SA6C SA6R	Ball screw	30	800	20 (Only for SA6C)	Horizontal	25	1000 (at 50 to 600st) 910 (at 650st) 790 (at 700st) 690 (at 750st) 610 (at 800st) 800 (at 50 to 650st)	0.3	-	-	-
						Vertical		790 (at 700st) 690 (at 750st) 610 (at 800st)	0.2			

O RCA2 Series

Actuator series	Туре	Feed screw	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					10	Horizontal	15	600 (at 50 to 550st) 570 (at 600st) 490 (at 650st)	0.3			
					12	Vertical	15	425 (at 700st) 370 (at 750st) 330 (at 800st)	0.2			
RCA2	SA6C	Ball	20	800	6	Horizontal	0	300 (at 50 to 550st) 285 (at 600st) 245 (at 650st)	0.3			
type)	SA6R	screw	50	000	0	Vertical	0	210 (at 700st) 185 (at 750st) 165 (at 800st)	0.2	-	-	-
					3	Horizontal /vertical	4	150 (at 50 to 550st) 140 (at 600st) 120 (at 650st) 105 (at 700st) 90 (at 750st) 80 (at 800st)	0.2			
RCA2	RAZAC	Ball			4	Horizontal	5	180 (at 25st) 200 (at 50 to 100st)				
(Rod	RA2AR	screw	5	800	2	/vertical	3	100	0.3	-	-	-
type)					1		2	50				
	[Standard]				1	Horizontal	4	200	0.3			
	RN3NA				-	Vertical	-	200	0.2			
	GS3NA	Ball			2	Horizontal	2	100	0.3			
	GD3NA	screw				Vertical			0.2			
	SD3NA [Cleanroom]		10	1048	1	Horizontal Vertical	1	50	0.2	-	-	-
PCA2	[Dust and drip proof]	Lead screw			4		4	200				
RCA2CR RCA2W	RP3NB GS3NB	(Available to Select Only in			2	Horizontal /vertical	2	100	0.2			
(Rod type)	GD3NB SD3NB	Standard Type)			1		1	50				
Standard	[Standard]				6	Horizontal	6	270 (at 30st) 300 (at 50st)	0.3			
/ Cleanroom type	RN4NA RP4NA	Ball			0	Vertical	0	220 (at 30st) 300 (at 50st)	0.2			
drip proof	GS4NA	screw			4	Horizontal	4	200	0.3			
drip proof type GD4NA [Cleanroom] [Dust and - drip proof] RN4NB RP4NB (GS4NB					Vertical	-		0.2				
	[Cleanroom] [Dust and		20	1048	2	Horizontal /vertical	2	100	0.2	-	-	-
	Lead screw			6	Horizontal /vertical	6	220 (at 30st) 300 (at 50st)					
	(Available to Select Only in			4	Horizontal Vertical	4	200	0.2				
	GD4NB	Standard Type)			2	Horizontal /vertical	2	100				

O RCA2 Series

Actuator series	Туре	Feed screw	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
RCA2					6	Horizontal	G	240 (at 25st) 300 (at 50 to 75st)	0.3			
RCA2CR RCA2W		Ball			0	Vertical	0	200 (at 25st) 300 (at 50 to 75st)	0.2			
(Rod	[Standard]	screw			1	Horizontal	1	200	0.3			
type)	OD HUY				-	Vertical	-	200	0.2			
Standard type	[Cleanroom] [Dust and drip proof]		20	1048	2	Horizontal /vertical	2	100	0.2	-	-	-
/ Cleanroom type / Dust and	SD4NB	Lead screw (Available			6	Llarizantal	6	200 (at 25st) 300 (at 50 to 75st)				
drip proof		to Select			4	/vertical	4	200	0.2			
туре		Standard Type)			2		2	100				
					4	Horizontal	4	200	0.3			
					4	Vertical	4	200	0.2			
		Ball			2	Horizontal	2	100	0.3			
	TCA3NA	screw			-	Vertical	-	100	0.2			
	TWA3NA TFA3NA		10	1048	1	Horizontal /vertical	1	50	0.2	-	-	-
				4		4	200					
		Lead			2	Horizontal	2	100	0.2			
		30101			1	/vertiour	1	50				
					6	Horizontal	G	270 (at 30st) 300 (at 50st)	0.3			
		Ball			O	Vertical	0	220 (at 30st) 300 (at 50st)	0.2			
		screw			4	Horizontal	4	200	0.3			
	TCA4NA			4040	4	Vertical	4	200	0.2			
RCA2 (Table	TFA4NA		20	1048	2	Horizontal /vertical	2	100	0.2	-	-	-
type)		Lead			6	Horizontal	6	220 (at 30st) 300 (at 50st)				
		screw			4	/vertical	4	200	0.2			
					2		2	100				
					0	Horizontal			0.3			
					6	Vertical	8	300	0.2			
	TA4C	Ball	10	800	4	Horizontal	F	200	0.3			
	TA4R	screw	10	800	4	Vertical	5	200	0.2	-	-	-
					2	Horizontal /vertical	3	100	0.2			
					10	Horizontal	40	465	0.3			
					10	Vertical	13	400	0.2			
	TA5C	Ball	20	800	F	Horizontal	-7	252	0.3			
	TA5R	screw	20	000	D	Vertical		250	0.2	-	-	-
	TA5R				2.5	Horizontal /vertical	4	125	0.2			

O RCA2 Series

Actuator series	Туре	Feed screw	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					10	Horizontal	15	560	0.3			
					12	Vertical	15	500	0.2			
	TA6C	Ball	20	800	6	Horizontal	0	200	0.3	_	_	_
RCA2	TA6R	screw	20	000	0	Vertical	0	300	0.2	-	-	-
					3	Horizontal /vertical	4	150	0.2			
(Table type)					10	Horizontal	15	600	0.3			
					12	Vertical	15	580	0.2			
	TA7C	Ball	30	800	6	Horizontal	0	200	0.3	_	_	_
	TA7R	screw	50	000	0	Vertical	0	300	0.2	-	-	-
					3	Horizontal /vertical	4	150	0.2			

O RCA Series

Actuator series	Туре	eed screv	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
				Incremental 800	10		13 (Note 1)	665	0.3 / 1.0 (Note 2)			
	[Standard] [Cleanroom]	Ball screw	20	Battery-less	5	Horizontal /vertical	7 (Note 1)	330	0.3 / 1.0 (Note 2)	-	-	-
	5A4C			Absolute 16384	2.5		4 (Note 1)	165	0.2			
				Incremental	10		13 (Note 1)	665	0.3			
	[Standard] SA4D	Ball screw	20	800 Absolute	5	Horizontal /vertical	7 (Note 1)	330	0.3	-	-	-
				16384	2.5		4 (Note 1)	165	0.2			
				Incremental 800	10		13 (Note 1)	665	0.3			
	[Standard] SA4R	Ball screw	20	Battery-less	5	Horizontal /vertical	7 (Note 1)	330	0.3	-	-	-
				Absolute 16384	2.5		4 (Note 1)	165	0.2			
						Horizontal	25	1300	0.3 / 0.8 (Note 2)			
				Incromontal	20	Vertical	(Note 1)	800	0.2			
RCA RCACR (Slider type)	Ball		800	12		15 (Note 1)	800 (at 50 to 450st) 760 (at 500st)	0.3 / 0.8 (Note 2)				
	SA5C	screw	20	Battery-less Absolute	6	Horizontal /vertical	8 (Note 1)	400 (at 50 to 450st) 380 (at 500st)	0.3 / 0.8 (Note 2)	-	-	-
			16384	3		4 (Note 1)	200 (at 50 to 450st) 190 (at 500st)	0.2				
Standard	101 I II			Incremental	12		15 (Note 1)	800 (at 50 to 450st) 760 (at 500st)	0.3			
/ Cleanroom	[Standard] [Cleanroom]	Ball screw	20	800	6	Horizontal /vertical	8 (Note 1)	400 (at 50 to 450st) 380 (at 500st)	0.3	-	-	-
.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	GADD			16384	3		4 (Note 1)	200 (at 50 to 450st) 190 (at 500st)	0.2			
				Incremental 800	12		15 (Note 1)	800 (at 50 to 450st) 760 (at 500st)	0.3			
	[Standard] SA5R	Ball screw	20	Battery-less	6	Horizontal /vertical	8 (Note 1)	400 (at 50 to 450st) 380 (at 500st)	0.3	-	-	-
				Absolute 16384	3		4 (Note 1)	200 (at 50 to 450st) 190 (at 500st)	0.2			
					20	Horizontal	25 (Note 1)	1300 (at 50 to 500st) 1160 (at 550st) 990 (at 600st)	0.3 / 1.0 (Note 2)			
						Vertical		800	0.2			
[Sta [Clea Sz	[Standard]	Ball	30	Incremental 800	12		15 (Note 1)	800 (at 50 to 450st) 760 (at 500st) 640 (at 550st) 540 (at 600st)	0.3 / 1.0 (Note 2)	_	_	_
	SA6C	screw		Battery-less Absolute 16384	6	Horizontal /vertical	8 (Note 1)	400 (at 50 to 450st) 380 (at 500st) 320 (at 550st) 270 (at 600st)	0.3 / 1.0 (Note 2)			
					3		4 (Note 1)	200 (at 50 to 450st) 190 (at 500st) 160 (at 550st) 135 (at 600st)	0.2			

The models with the type column shaded are applicable for offboard tuning function. (However, high-acceleration/deceleration type, power-saving type, cleanroom type, dust and drip proof type and slider-roller type are not applicable for offboard tuning.)

For offboard tuning function, refer to the instruction manual of RC PC Software. Note 1 It is the velocity with the incremental encoder.

Note 2 It is the maximum acceleration/deceleration when the option "High Acceleration/Deceleration Application (Model code: HA)" which is available to select only in the standard type is added.

O RCA Series

Actuator series	Туре	eed screv	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
					12		15 (Note 1)	800 (at 50 to 450st) 760 (at 500st) 640 (at 550st) 540 (at 600st)	0.3			
	[Standard] [Cleanroom] SA6D	Ball screw	30	Absolute	6	Horizontal /vertical	8 (Note 1)	400 (at 50 to 450st) 380 (at 500st) 320 (at 550st) 270 (at 600st)	0.3	-	-	-
RCA RCACR (Slider type)				10504	3		4 (Note 1)	200 (at 50 to 450st) 190 (at 500st) 160 (at 550st) 135 (at 600st)	0.2			
Standard type / Cleanroom type				Incremental	12		15 (Note 1)	800 (at 50 to 450st) 760 (at 500st) 640 (at 550st) 540 (at 600st)	0.3			
iype [[Standard] SA6R	Ball screw	30	800 Battery-less Absolute	6	Horizontal /vertical	8 (Note 1)	400 (at 50 to 450st) 380 (at 500st) 320 (at 550st) 270 (at 600st)	0.3	-	-	-
				16384	3		4 (Note 1)	200 (at 50 to 450st) 190 (at 500st) 160 (at 550st) 135 (at 600st)	0.2			
		Ball			10	Horizontal	13	665	0.3			
	SS4D	screw	20	800	5	/vertical	7	330	0.3	-	-	-
					2.5 12		4 15	165 800 (at 50 to 450st) 760 (at 500st)	0.2			
	SS5D	Ball screw	20	800	6	Horizontal /vertical	8	400 (at 50 to 450st) 380 (at 500st)	0.3	-	-	-
					3		4	200 (at 50 to 450st) 190 (at 500st)	0.2			
RCA (Slider type)					12		15	800 (at 50 to 450st) 760 (at 500st) 640 (at 550st) 540 (at 600st)	0.3			
	SS6D	Ball screw	30	800	6	Horizontal /vertical	8	400 (at 50 to 450st) 380 (at 500st) 320 (at 550st) 270 (at 600st)	0.3	-	-	-
					3		4	200 (at 50 to 450st) 190 (at 500st) 160 (at 550st) 135 (at 600st)	0.2			

The models with the type column shaded are applicable for offboard tuning function. (However, high-acceleration/deceleration type, power-saving type, cleanroom type, dust and drip proof type and slider-roller type are not applicable for offboard tuning.)

For offboard tuning function, refer to the instruction manual of RC PC Software.

Note 1 It is the velocity with the incremental encoder.

Note 2 It is the maximum acceleration/deceleration when the option "High Acceleration/Deceleration Application (Model code: HA)" which is available to select only in the standard type is added.

O RCA Series

Actuator series	Туре	eed scre	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
RCA RCAW	[Standard] [Dust and drip proof] RA3C	Ball			10	Horizontal /vertical	13	500	0.3 / 1.0 (Note 2)			-
			20	800	5		7	250	0.3 / 1.0 (Note 2)	-	-	
		30101			2.5		4	125	0.2			
	[Standard] RGS3C RGD3C	Ball			10	Horizontal /vertical	13	500	0.3 / 1.0 (Note 2)		-	-
			20	800	5		7	250	0.3 / 1.0 (Note 2)	-		
		30101			2.5		4	125	0.2			
	[Standard] [Dust and drip proof] RA3D RA3R [Standard] RGS3D RGD3D RGD3R	Ball screw	20	800	10	Horizontal /vertical	13	500	0.3	-	-	-
					5		7	250	0.3			
					2.5		4	125	0.2			
(Rod type)	[Standard] [Dust and drip proof] RA4C	Ball screw	20 30	Incremental 800 Absolute 16384	12	Horizontal /vertical	15 (Note 1)	600	0.3 / 1.0 (Note 2)	-	-	-
Standard type / Dust and drip proof type					6		8 (Note 1)	300	0.3 / 1.0 (Note 2)			
					3		4 (Note 1)	150	0.2			
	[Standard] RGS4C RGD4C	Ball screw	20 30	Incremental 800 Absolute 16384	12	Horizontal /vertical	15 (Note 1)	600	0.3 / 1.0 (Note 2)	-	-	-
					6		8 (Note 1)	300	0.3 / 1.0 (Note 2)			
					3		4 (Note 1)	150	0.2			
	[Standard] [Dust and drip proof] RA4D RA4R [Standard] RGS4D RGD4D RGD4R	Ball screw	20 30	Incremental 800 Absolute	12	Horizontal /vertical	15 (Note 1)	600	0.3	-	-	-
					6		8 (Note 1)	300	0.3			
				16384	3		4 (Note 1)	150	0.2			
501	SRA4R SRGS4R SRGD4R	Ball screw	20		F	Horizontal	7	250	0.3			
RCA (Rod type)				800	5	Vertical	'		0.2		_	_
					2.5	Horizontal /vertical	4	125	0.2	-	-	-
RCA (Arm type)	A4R	Ball	20	800	10	Horizontal /vertical	13	330	0.2	-	-	-
		screw			5		7	165	0.2			
	A5R	Ball screw	20	800	12	Horizontal	15	400	0.2	_	-	-
					6	/vertical	8	200	0.2	_		
	A6R	R Ball screw	30	800	12	Horizontal	15	400	0.2	-	_	_
			00	000	6	/vertical	8	200				

The models with the type column shaded are applicable for offboard tuning function. (However, high-acceleration/deceleration type, power-saving type, cleanroom type, dust and drip proof type and slider-roller type are not applicable for offboard tuning.) For offboard tuning function, refer to the instruction manual of RC PC Software.

Note 1 It is the velocity with the incremental encoder.

Note 2 It is the maximum acceleration/deceleration when the option "High Acceleration/Deceleration Application (Model code: HA)" which is available to select only in the standard type is added.

O RCL Series

Actuator series	Туре	eed scre	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
RCL	RA1L		-	715		Horizontal	42	300	Horizontal: 2G Vertical: 1G	0.75	2	20
	RA2L	Linear		855				340		1.5	4	
	RA3L			1145		/vertical		450		3	8	
	SA1L			715		Horizontal		420	2	-	-	-
	SA2L			855				460				
	SA3L			1145				600				
	SA4L SM4L			715				1200				
	SA5L SM5L			855				1400				
	SA6L SM6L			1145				1600				

10.4.3 Specifications for Brushless DC Electric Motor Actuator

O RCD Series

Actuator series	Туре	Feed screw	Motor output [W]	No. of encoder pulses	Lead [mm]	Mounting direction	Minimum speed [mm/s]	Maximum speed [mm/s]	Maximum acceleration /deceleration [G]	Minimum push force [N]	Maximum push force [N]	Rated push speed [mm/s]
RCD	RA1DA	Lead	3	480	0	Horizontal /vertical	- 5	300	- 1	0.41	2.6	5
	GRSNA	screw		480		Horizontal /vertical		67		2.1	10 (Both Ends)	

O Correlation diagram of speed and loading capacity for the RCP6 slider type (High output effective)

* Characteristics should be the same for Cleanroom type.

MCON =



O Correlation diagram of speed and loading capacity for the RCP6 slider type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6 wide slider type (High output effective)

* Characteristics should be the same for Cleanroom type.

MCON =



O Correlation diagram of speed and loading capacity for the RCP6 wide slider type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6 rod type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP6 rod type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6 radial cylinder type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP6 radial cylinder type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6 wide radial cylinder type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP6 wide radial cylinder type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof rod type (High output effective)





O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof rod type (High output effective)





O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof rod type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof rod type (High output effective / Motor-reversing type)





Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof radial cylinder type (High output effective)



Chapter 10 Appendix

Lead 10

400

Lead 10

400

Lead 12

500

Lead 12

500

400

2

600

400

2

600

300

1.5

500

300

1.5

500

O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof radial cylinder type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof radial cylinder type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof radial cylinder type (High output effective / Motor-reversing type)





O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof wide radial cylinder type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof wide radial cylinder type (High output effective)





O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof wide radial cylinder type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6W dust and drip proof wide radial cylinder type (High output effective / Motor-reversing type)


O Correlation diagram of speed and loading capacity for the RCP6 table type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP6 table type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP6 table type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP6 table type (High output effective / Motor-reversing type)



- O Correlation diagram of speed and loading capacity for the RCP5 slider type (High output effective)
- * Characteristics should be the same for Cleanroom type.



O Correlation diagram of speed and loading capacity for the RCP5 slider type (High output effective / Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP5 belt type (High output effective)



Correlation diagram of speed and loading capacity for the RCP5 rod type (High output effective)



O Correlation diagram of speed and loading capacity for the RCP5 rod type (High output effective)



Chapter 10 Appendix

O Correlation diagram of speed and loading capacity for the RCP5 rod type (High output effective / Motor-reversing type)





O Correlation diagram of speed and loading capacity for the RCP5W dust and drip proof rod type (High output effective)





Chapter 10 Appendix

Correlation diagram of speed and loading capacity for the RCP5W dust and drip proof rod type (High output effective)
 * High thrust type is not available for connection to this controller.





Chapter 10 Appendix

MCON _____

O Correlation diagram of speed and loading capacity for the RCP4 slider type (High output effective)

* Characteristics should be the same for Cleanroom type.



O Correlation diagram of speed and loading capacity for the RCP4 slider type (High output effective / Motor-reversing type)





Speed (mm/s)

O Correlation diagram of speed and loading capacity for the RCP4W dust and drip proof slider type

MCON :

* The payload of the slider type in RCP4W series should be constant even if the velocity gets increased.

Note that, however, the payload decreases when acceleration gets increased.



O Correlation diagram of speed and loading capacity for the RCP4 rod type (High output effective)

* RA6C high thrust type is not available for connection to this controller.



O Correlation diagram of speed and loading capacity for the RCP4 rod type (High output effective / Motor-reversing type)



Correlation diagram of speed and loading capacity for the RCP4W dust and drip proof rod type (High output effective) * RA7C high thrust type is not available for connection to this controller.



Vertical installation

Vertical

Lead 12

Vertical

400

500

Vertical

500

Vertical

500

600

600

400

600

400

500

600

O Correlation diagram of speed and loading capacity for the RCP3 slider type * Characteristics should be the same for reversed type (SA2AR/SA2BR).



O Correlation diagram of speed and loading capacity for the RCP3 slider type



O Correlation diagram of speed and loading capacity for the RCP3 slider type (Motor-reversing type)



O Correlation diagram of speed and loading capacity for the RCP3 rod type



Horizontal installation

Chapter 10 Appendix

O Correlation diagram of speed and loading capacity for the RCP3 rod type (Motor-reversing type)



ME0341-4C

O Correlation diagram of speed and loading capacity for the RCP3 table type * Characteristics should be the same for reversed type.



O Correlation diagram of speed and loading capacity for the RCP2 slider type



O Correlation diagram of speed and loading capacity for the RCP2 slider type (Motor-reversing type)



O Correlation diagram of speed and loading capacity for the standard RCP2 rod type

MCON =



O Correlation diagram of speed and loading capacity for the RCP2 rod short type (Standard/Equipped with Guide)



O Correlation diagram of speed and loading capacity for the RCP2 rod short type (Standard/Equipped with Guide)



O Correlation diagram of speed and loading capacity for the RCP2W dust and drip proof type



Pressing Force/Gripping Force and Current Limit Value

▲ Caution

- The correlation of the pressing force and the current limit value is the rated pressing speed (in the setting at the delivery) and is a reference value.
- Use the actuator with the setting above the minimum pressing force value. The pressing force will be unstable if it is below the minimum pressing force value.
- If the positioning speed setting in the operation condition is made lower than the pressing speed, the pressing speed will follow that speed, thus cannot perform the expected pressing force.

O RCP6 Series (Slider type / Rod type / Table type) * Characteristics should be the same for Cleanroom/Dust and drip proof type.



* RCP6W should start pressing at the current limit of 30% or more.

Current-limiting value (%)

* RCP6W should start pressing at the current limit of 30% or more.

RCP6 Series (Gripper type) * The grip force shows the total amount of two fingers.











O RCP6 Series (Gripper type)



RCP5 Series (Slider type / Rod type) RCP5









• RCP5W

<RA6C Lead 3 High-Thrust type>







	150									
ush force (N)	125									
	100									
	75									
	15									
	50					<u> </u>				
□ □	25									
	0									
0 10 20 30 40 50 60 70 80										

<RA7C Lead 4 Standard type>



RA7C type





<RA6C Lead 12 Standard type>

O RCP4 Series (Slider type / Rod type)

* Characteristics should be the same for Cleanroom type.

* RCP4-RA6C high thrust type is not available for connection to this controller.



RCP4W-RA6C/RA7C type













800

2 600

) 500 900 400

140

Ê¹²⁰⁰

008 to 000 to

0^L

0

10 20 30 40

O RCP4 Series (Gripper type)



O RCP3 Series (Slider type / Table type)











O RCP3 Series (Slim, compact rod type) RA2AC/RA2BC/RA2AR/RA2BR



RCP2 Series (Slider type / Rod type)







RA2C/RA3C/RGD3C type



* There is the upper limit for the pressing force established for each stroke in RA2C. 25•50 Stroke : 100N, 75 Stroke : 70N, 100 Stroke : 55N
O RCP2 Series (Slider type / Rod type)



RA6C/RGS6C/RGD6C 800 700 600 Push force (N) Lead 4 500 Lead 8 400 300 Lead 16 200 100 0 0 10 20 30 40 50 Current-limiting value (%) 60 70





RCP2W-RA6C type



O RCP2 Series (2-finger gripper type)

* Characteristics should be the same for Cleanroom type / Dust and drip proof type.

* The grip force shows the total amount of two fingers.



O RCP2 Series (3-finger gripper type)

- * Characteristics should be the same for Cleanroom type / Dust and drip proof type.
- * The grip force may differ depending on the distance to the gripping point. Refer to the instruction manual of each actuator for detail.

20 0







20

10

30

Current-limiting value (ratio, %)

40

60

50

70

RCP2-GR3LM









MCON

Rotational speed and Output torque / Allowable inertial moment

• RCP2 Series (Rotary type) * Characteristics should be the same for Cleanroom type.





RCP2-RTB/RTBL



Correlation diagram of rotational speed and output torque





RCP2-RTCS/RTCSL



Correlation diagram of rotational speed and allowable inertial moment



RCP2-RTC/RTCL



Correlation diagram of rotational speed and output torque

Correlation diagram of rotational speed and allowable inertial moment



RCP2 Series (Rotary type) * Characteristics should be the same for Cleanroom type.

RCP2-RTBB/RTBBL

Correlation diagram of rotational speed and output torque



Correlation diagram of rotational speed and allowable inertial moment



RCP2-RTCB/RTCBL



Correlation diagram of rotational speed and allowable inertial moment



Chapter 11 Warranty

11.1 Warranty Period

One of the following periods, whichever is shorter:

- · 18 months after shipment from our company
- 12 months after delivery to the specified location

11.2 Scope of the Warranty

Our products are covered by warranty when all of the following conditions are met. Faulty products covered by warranty will be replaced or repaired free of charge:

- (1) The breakdown or problem in question pertains to our product as delivered by us or our authorized dealer.
- (2) The breakdown or problem in question occurred during the warranty period.
- (3) The breakdown or problem in question occurred while the product was in use for an appropriate purpose under the conditions and environment of use specified in the operation manual and catalog.
- (4) The breakdown of problem in question was caused by a specification defect or problem, or by a quality issue with our product.

Note that breakdowns due to any of the following reasons are excluded from the scope of warranty:

- [1] Anything other than our product
- [2] Modification or repair performed by a party other than us (unless we have approved such modification or repair)
- [3] Anything that could not be easily predicted with the level of science and technology available at the time of shipment from our company
- [4] A natural disaster, man-made disaster, incident or accident for which we are not liable
- [5] Natural fading of paint or other symptoms of aging
- [6] Wear, depletion or other expected result of use
- [7] Operation noise, vibration or other subjective sensation not affecting function or maintenance

Note that the warranty only covers our product as delivered and that any secondary loss arising from a breakdown of our product is excluded from the scope of warranty.

11.3 Honoring the Warranty

As a rule, the product must be brought to us for repair under warranty.

11.4 Limited Liability

- (1) We shall assume no liability for any special damage, consequential loss or passive loss such as a loss of expected profit arising from or in connection with our product.
- (2) We shall not be liable for any program or control method created by the customer to operate our product or for the result of such program or control method.

11.5 Conditions of Conformance with Applicable Standards/Regulations, Etc., and Applications

- (1) If our product is combined with another product or any system, device, etc., used by the customer, the customer must first check the applicable standards, regulations and/or rules. The customer is also responsible for confirming that such combination with our product conforms to the applicable standards, etc. In such a case we will not be liable for the conformance of our product with the applicable standards, etc.
- (2) Our product is for general industrial use. It is not intended or designed for the applications specified below, which require a high level of safety. Accordingly, as a rule our product cannot be used in these applications. Contact us if you must use our product for any of these applications:
 - [1] Medical equipment pertaining to maintenance or management of human life or health
 - [2] A mechanism or mechanical equipment intended to move or transport people (such as a vehicle, railway facility or aviation facility)
 - [3] Important safety parts of mechanical equipment (such as safety devices)
 - [4] Equipment used to handle cultural assets, art or other irreplaceable items
- (3) Contact us at the earliest opportunity if our product is to be used in any condition or environment that differs from what is specified in the catalog or operation manual.

11.6 Other Items Excluded from Warranty

The price of the product delivered to you does not include expenses associated with programming, the dispatch of engineers, etc. Accordingly, a separate fee will be charged in the following cases even during the warranty period:

- [1] Guidance for installation/adjustment and witnessing of test operation
- [2] Maintenance and inspection
- [3] Technical guidance and education on operating/wiring methods, etc.
- [4] Technical guidance and education on programming and other items related to programs

Change History

Revision Date	Revision Description
2015.09	First Edition
2016.01	 1B Edition Revising of applicable teaching tools Revising of cable lengths Change made to selection method for pressing CON/SEP system Correction made to writing error
2016.04	 1C Edition Applicable for RCP6 and TB-02/TB02D (except for 10.4) Applicable connection cable model codes revised in 2.2 [2] Correction made to explanation for JOG speed in direct indication mode in 3.4.6, 3.7.1 and 8.2 Parameter initial value revised in 8.1 and 8.2 Correction made to explanation for Parameter No. 143 (Overload Level Ratio) in 8.2 [57] Correction made to writing error
2016.05	Second Edition Applicable for SSCNET
2016.06	 2B Edition Applicable for CE mark/UL standards Applicable for MECHATROLINK-III "12. Motor Features in AUTO Mode" added in caution notes 1.1.1 Volume column added in 1.1.1 Components 10.4 Correction made to note regarding connection to RCP2-SA7C/SA7R (connection not available) Correction made to writing error
2017.03	 Third Edition Applicable for EtherCat motion "Selecting Automatic Current Reduction Feature" added for Parameter No. 182 in 6.2, 8.1 and 8.2 [74]. Chapter 9 Alarm List 047, 0B4, 0BE and 0E8 added and fixed. Correction made to writing error.
2018.07	 3B Edition 10.4 List of Specifications of Connectable Actuators revised Correction made to writing error
2018.07	Fourth Edition • Applicable for CC-Link IE Field • Applicable for TB-03

Revision Date	Revision Description
2018.12 4	 4B Edition Column for "Symbol" deleted from Parameter List 8.2 Description added for details of Parameters No. 10 and No. 166 9.4.3 Example of Alarm 0A1 Occurrence (3) added 10.4 List of Specifications of Connectable Actuators revised Others correction made, terms unified
2020.07 4	 4C Edition 1.2 List of Basic Specifications change made to Ambient Humidity and Ambient Storage Humidity 1.7 Installation and Storage Environment [1] Installation Environment change made to relative humidity 3.5 Input and Output Signal Process for Field Network Response process time changed to command process time 10.1 Conformity to Safety Category [4] TP adapter and accessories changed to TP adapter and related components 10.4.3 Specifications for Brushless DC Electric Motor Actuator Correction made to minimum speed Correction made, terms unified



IAI Corporation

Head Office: 577-1 Obane Shimizu-KU Shizuoka City Shizuoka 424-0103, Japan TEL +81-54-364-5105 FAX +81-54-364-2589 website: www.iai-robot.co.jp/

Technical Support available in USA, Europe and China

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505 TEL (310) 891-6015 FAX (310) 891-0815 Chicago Office: 110 East State Parkway, Schaumburg, IL 60173 TEL(847) 908-1400 FAX (847) 908-1399 Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066 TEL (678) 354-9470 FAX (678) 354-9471 website: www.intelligentactuator.com

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany TEL 06196-88950 FAX 06196-889524 website: www.iai-gmbh.de

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China TEL 021-6448-4753 FAX 021-6448-3992 website: www.iai-robot.com

IAI Robot (Thailand) Co., Ltd.

825, PhairojKijja Tower 7th Floor, Debaratana RD., Bangna-Nuea, Bangna, Bangkok 10260, Thailand TEL +66-2-361-4458 FAX +66-2-361-4456 website: www.iai-robot.co.th