

Touch Panel Teaching TB-01, TB-01D, TB-01DR

Applicable for Position Controller
Instruction Manual Fourth Edition



Please Read Before Use

Thank you for purchasing our product.

This instruction manual explains the handling methods, structure and maintenance of this product, providing the information you need in order to use the product safely.

Before using the product, be sure to read this manual and fully understand the contents explained herein to ensure safe use of the product.

Please download the user's manual from our website.

You can download it free of charge. User registration is required for the first time downloading.

URL : www.iai-robot.co.jp/data_dl/CAD_MANUAL/

When using the product, print out of the necessary portions of the relevant manual, or please display it on your computer, tablet terminal, etc. so that you can check it immediately.

After reading the instruction manual, keep it in a convenient place so that whoever is handling the product can refer to it quickly when necessary.

[Important]

- This instruction manual is an original document dedicated for this product.
- This product cannot be used in ways not shown in this instruction manual. IAI shall not be liable for any result whatsoever arising from the use of the product in any other way than what is noted in the manual.
- The information contained in this instruction manual is subject to change without notice for the purpose of product improvement.
- If any issues arise regarding the information contained in this instruction manual, contact our customer center or the nearest sales office.
- Use or reproduction of this instruction manual in full or in part without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the text are registered trademarks.

Supported Models

This Instruction Manual is for the position controller.

For details on handling the program controller (XSEL-J/K/JX/KX/KT/KET/P/Q/PX/QX/R/S/RX/SX/RXD/SXD/RA/SA/RAX/SAX/RAXD/SAXD, TT, TTA, ASEL, PSEL, SSEL, MSEL), refer to the separate “Touch Panel Teaching TB-01, TB-01D, TB-01DR Applicable for Program Controller Instruction Manual”.

The supported models are listed below.

List of Supported Models

Controller model	Supported from version
ERC2 ^(Note 1)	V2.00
ERC3	V2.00
ACON	V2.00 ^(Note 2, 5, 6)
DCON	V2.10 ^(Note 5, 6)
PCON	V2.00 ^(Note 5, 6)
SCON	V2.00 ^(Note 4, 5, 6)
MCON	V2.40 ^(Note 7)
MSCON	V2.00
RCP6S	V2.40
ASEP, DSEP, PSEP	V2.00
MSEP	V2.00 ^(Note 3)
AMEC, PMEC	V2.00
RACON, RPCON	V2.00

Note 1: Only ERC2 models with 4904 or higher stamped on the Serial No. sticker can be connected.

Information on sticker

I/O type	Not supported	Supported
NP	NP U5 M	NP T1 4904, 4905, 6302
PN	PN U3 M	PN T1 4904, 4905, 6302

Note that touch panel teaching pendants can be connected to ERC2 controllers of SE type via a SIO converter regardless of their version.

Note 2: ACON-CA is supported from V2.10.

Note 3: The MSEP-C/LC high-power output compatible driver and RCD compatible are supported from V2.20.

Note 4: SCON-CAL are supported from V2.30.

Note 5: ACON-CB, DCON-CB and SCON-CB is supported from V2.40. PCON-CB is supported from V2.60.

Note 6: ACON-CYB/POB/PLB, DCON-CYB/POB/PLB and PCON-CYB/POB/PLB is supported from V2.70.

Note 7: MCON motion type (MECHATROLINK-III, SSCNET) is supported from V2.80.

Table of Contents

Safety Guide	1
Handling Precautions	8
Product Check	9
1. Confirming the Specifications	11
1.1 Basic Specification	11
1.2 Environmental Specifications	13
1.3 Outline Dimensions	14
1.4 Appearance	14
1.4.1 TB-01 (standard type) appearance	14
1.4.2 TB-01D (with deadman switch) appearance	15
1.4.3 TB-01DR (type with deadman switch on right side)	15
2. Explanation of Each Part	16
3. Connecting with the Controller	21
4. Safety Category 4 compliance	23
5. Operation of CON Related Controllers	24
5.1 Displayed Language Change	24
5.2 Operating Menu	25
5.3 Initial Screen	27
5.4 Changing Operating Axis	28
5.5 Menu Selection	29
5.6 Monitor	30
5.6.1 Main Monitor Screen, IO Monitor Screen, Data Monitor Screen, LC Monitor Screen	31
5.6.2 Maintenance Information Screen	38
5.6.2.1 Operating Method When Replacing the Actuator	40
5.6.2.2 Operating Method When Replacing the FAN	41
5.6.3 Time Setting Screen for Controller	42
5.7 Position Editing	44
5.7.1 Position Data	45
5.7.2 Entering New Data	52
5.7.3 Changing Position Data	72
5.7.4 Clearing Position Data, Clearing All Position Data	73
5.8 Parameter Editing	77
5.9 Trial operation	79
5.9.1 Jog/Inching Operation	81
5.9.2 Position Movement Operation	83
5.9.3 Direct Movement Operation	84
5.9.4 I/O test	85
5.10 TP Operation Mode	86
5.11 Alarm List	87
5.12 Controller Restart	89
5.13 User Adjustment	90

5.14	Parameter Initialization	91
5.15	Axis Number Setting	93
5.16	Information Display	94
5.17	Environment Setting.....	95
5.18	Data Backup.....	105
5.18.1	Data Backup of the Controller.....	106
5.18.2	Restore to Controller	108
5.19	Smart Tuning Function.....	110
5.19.1	Setting Operation for Max. Acceleration/Deceleration for Indicated Transported Load and Velocity.....	111
5.19.2	Operation to Automatically Set Velocity and Acceleration Speed from Moving Distance	114
6.	Operation of SEP Related Controllers	118
6.1	Transition of Operating States	118
6.2	Operating Menu	119
6.3	Initial Screen	121
6.4	Initial Setting.....	122
6.5	Changing Operating Axis	123
6.6	Menu Selection	124
6.7	Monitor	125
6.8	Information	127
6.9	Alarm List	129
6.10	Position Setting (Setting of Position-related Data, Jog/Inching Operation)	131
6.11	I/O Setting (Setting of Operation Parameters, Etc.).....	155
6.12	Parameters (Parameter Editing, Axis Number Setting, Parameter Initialization to Factory Default Settings, System Password)	166
6.13	Test (I/O Tests, Operation Tests for Axis Movement)	176
6.14	Environment setting	180
6.15	Data Backup.....	188
6.15.1	Data Backup of the Controller.....	189
6.15.2	Restore to Controller.....	191
7.	Operation of MEC Related Controllers	193
7.1	Transition of Operating States	193
7.2	Operating Menu	194
7.3	Initial Screen	196
7.4	Initial Setting.....	197
7.5	MEC Menu Selection	198
7.6	Initial Setting.....	199
7.7	Position Setting (Position Data Setting and Manual Axis operation (Jogging, Inching))	204
7.8	Trial operation	224
7.9	Information	226
7.10	Maintenance – Parameters.....	228
7.11	Maintenance – I/O Tests.....	236
7.12	Maintenance – Alarm List	237
7.13	Data Backup.....	239
7.13.2	Restore to Controller.....	242
7.14	Maintenance – Environment Setting.....	244
7.15	Monitor	251

8. Error Display	252
8.1 Occurrence of Alarm	252
8.1.1 Alarms Detected by Controller	252
8.1.2 Messages which occur when operating the touch panel teaching pendant	252
9. Appendix	258
9.1 Touch panel LCD life	258
9.2 Battery life	258
9.3 Option parts.....	258
10. Warranty	259
10.1 Warranty Period	259
10.2 Scope of Warranty	259
10.3 Honoring the Warranty.....	259
10.4 Limited Liability.....	259
10.5 Conditions of Conformance with Applicable Standards/Regulations, Etc., and Applications..	260
10.6 Other Items Excluded from Warranty.....	260
11. Change History	261

RC ROBO CYLINDER

Safety Guide

“Safety Guide” has been written to use the machine safely and so prevent personal injury or property damage beforehand. Make sure to read it before the operation of this product.

Safety Precautions for Our Products

The common safety precautions for the use of any of our robots in each operation.

No.	Operation Description	Description
1	Model Selection	<ul style="list-style-type: none"> ● This product has not been planned and designed for the application where high level of safety is required, so the guarantee of the protection of human life is impossible. Accordingly, do not use it in any of the following applications. <ol style="list-style-type: none"> 1) Medical equipment used to maintain, control or otherwise affect human life or physical health. 2) Mechanisms and machinery designed for the purpose of moving or transporting people (For vehicle, railway facility or air navigation facility) 3) Important safety parts of machinery (Safety device, etc.) ● Do not use the product outside the specifications. Failure to do so may considerably shorten the life of the product. ● Do not use it in any of the following environments. <ol style="list-style-type: none"> 1) Location where there is any inflammable gas, inflammable object or explosive 2) Place with potential exposure to radiation 3) Location with the ambient temperature or relative humidity exceeding the specification range 4) Location where radiant heat is added from direct sunlight or other large heat source 5) Location where condensation occurs due to abrupt temperature changes 6) Location where there is any corrosive gas (sulfuric acid or hydrochloric acid) 7) Location exposed to significant amount of dust, salt or iron powder 8) Location subject to direct vibration or impact ● For an actuator used in vertical orientation, select a model which is equipped with a brake. If selecting a model with no brake, the moving part may drop when the power is turned OFF and may cause an accident such as an injury or damage on the work piece.

No.	Operation Description	Description
2	Transportation	<ul style="list-style-type: none"> ● When carrying a heavy object, do the work with two or more persons or utilize equipment such as crane. ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● When in transportation, consider well about the positions to hold, weight and weight balance and pay special attention to the carried object so it would not get hit or dropped. ● Transport it using an appropriate transportation measure. The actuators available for transportation with a crane have eyebolts attached or there are tapped holes to attach bolts. Follow the instructions in the instruction manual for each model. ● Do not step or sit on the package. ● Do not put any heavy thing that can deform the package, on it. ● When using a crane capable of 1t or more of weight, have an operator who has qualifications for crane operation and sling work. ● When using a crane or equivalent equipments, make sure not to hang a load that weighs more than the equipment’s capability limit. ● Use a hook that is suitable for the load. Consider the safety factor of the hook in such factors as shear strength. ● Do not get on the load that is hung on a crane. ● Do not leave a load hung up with a crane. ● Do not stand under the load that is hung up with a crane.
3	Storage and Preservation	<ul style="list-style-type: none"> ● The storage and preservation environment conforms to the installation environment. However, especially give consideration to the prevention of condensation. ● Store the products with a consideration not to fall them over or drop due to an act of God such as earthquake.
4	Installation and Start	<p>(1) Installation of Robot Main Body and Controller, etc.</p> <ul style="list-style-type: none"> ● Make sure to securely hold and fix the product (including the work part). A fall, drop or abnormal motion of the product may cause a damage or injury. Also, be equipped for a fall-over or drop due to an act of God such as earthquake. ● Do not get on or put anything on the product. Failure to do so may cause an accidental fall, injury or damage to the product due to a drop of anything, malfunction of the product, performance degradation, or shortening of its life. ● When using the product in any of the places specified below, provide a sufficient shield. <ol style="list-style-type: none"> 1) Location where electric noise is generated 2) Location where high electrical or magnetic field is present 3) Location with the mains or power lines passing nearby 4) Location where the product may come in contact with water, oil or chemical droplets

No.	Operation Description	Description
4	Installation and Start	<p>(2) Cable Wiring</p> <ul style="list-style-type: none"> ● Use our company's genuine cables for connecting between the actuator and controller, and for the teaching tool. ● Do not scratch on the cable. Do not bend it forcibly. Do not pull it. Do not coil it around. Do not insert it. Do not put any heavy thing on it. Failure to do so may cause a fire, electric shock or malfunction due to leakage or continuity error. ● Perform the wiring for the product, after turning OFF the power to the unit, so that there is no wiring error. ● When the direct current power (+24V) is connected, take the great care of the directions of positive and negative poles. If the connection direction is not correct, it might cause a fire, product breakdown or malfunction. ● Connect the cable connector securely so that there is no disconnection or looseness. Failure to do so may cause a fire, electric shock or malfunction of the product. ● Never cut and/or reconnect the cables supplied with the product for the purpose of extending or shortening the cable length. Failure to do so may cause the product to malfunction or cause fire. <p>(3) Grounding</p> <ul style="list-style-type: none"> ● The grounding operation should be performed to prevent an electric shock or electrostatic charge, enhance the noise-resistance ability and control the unnecessary electromagnetic radiation. ● For the ground terminal on the AC power cable of the controller and the grounding plate in the control panel, make sure for grounding work. For security grounding, it is necessary to select an appropriate wire thickness suitable for the load. Perform wiring that satisfies the specifications (electrical equipment technical standards). For detail, follow the description in an instruction manual of each controller or controller built-in actuator. ● Perform Class D Grounding (former Class 3 Grounding with ground resistance 100Ω or below).

No.	Operation Description	Description
4	Installation and Start	<p>(4) Safety Measures</p> <ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● When the product is under operation or in the ready mode, take the safety measures (such as the installation of safety and protection fence) so that nobody can enter the area within the robot’s movable range. When the robot under operation is touched, it may result in death or serious injury. ● Make sure to install the emergency stop circuit so that the unit can be stopped immediately in an emergency during the unit operation. ● Take the safety measure not to start up the unit only with the power turning ON. Failure to do so may start up the machine suddenly and cause an injury or damage to the product. ● Take the safety measure not to start up the machine only with the emergency stop cancellation or recovery after the power failure. Failure to do so may result in an electric shock or injury due to unexpected power input. ● When the installation or adjustment operation is to be performed, give clear warnings such as “Under Operation; Do not turn ON the power!” etc. Sudden power input may cause an electric shock or injury. ● Take the measure so that the work part is not dropped in power failure or emergency stop. ● Wear protection gloves, goggle or safety shoes, as necessary, to secure safety. ● Do not insert a finger or object in the openings in the product. Failure to do so may cause an injury, electric shock, damage to the product or fire. ● When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity.
5	Teaching	<ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● Perform the teaching operation from outside the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. ● When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. ● When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. ● Place a sign “Under Operation” at the position easy to see. ● When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>

No.	Operation Description	Description
6	Trial Operation	<ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● After the teaching or programming operation, perform the check operation one step by one step and then shift to the automatic operation. ● When the check operation is to be performed inside the safety protection fence, perform the check operation using the previously specified work procedure like the teaching operation. ● Make sure to perform the programmed operation check at the safety speed. Failure to do so may result in an accident due to unexpected motion caused by a program error, etc. ● Do not touch the terminal block or any of the various setting switches in the power ON mode. Failure to do so may result in an electric shock or malfunction.
7	Automatic Operation	<ul style="list-style-type: none"> ● Check before starting the automatic operation or rebooting after operation stop that there is nobody in the safety protection fence. ● Before starting automatic operation, make sure that all peripheral equipment is in an automatic-operation-ready state and there is no alarm indication. ● Make sure to operate automatic operation start from outside of the safety protection fence. ● In the case that there is any abnormal heating, smoke, offensive smell, or abnormal noise in the product, immediately stop the machine and turn OFF the power switch. Failure to do so may result in a fire or damage to the product. ● When a power failure occurs, turn OFF the power switch. Failure to do so may cause an injury or damage to the product, due to a sudden motion of the product in the recovery operation from the power failure.

No.	Operation Description	Description
8	Maintenance and Inspection	<ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. ● Perform the work out of the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. ● When the work is to be performed inside the safety protection fence, basically turn OFF the power switch. ● When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. ● When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. ● Place a sign “Under Operation” at the position easy to see. ● For the grease for the guide or ball screw, use appropriate grease according to the instruction manual for each model. ● Do not perform the dielectric strength test. Failure to do so may result in a damage to the product. ● When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. ● The slider or rod may get misaligned OFF the stop position if the servo is turned OFF. Be careful not to get injured or damaged due to an unnecessary operation. ● Pay attention not to lose the removed cover or screws, and make sure to put the product back to the original condition after maintenance and inspection works. <p>Use in incomplete condition may cause damage to the product or an injury.</p> <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>
9	Modification and Dismantle	<ul style="list-style-type: none"> ● Do not modify, disassemble, assemble or use of maintenance parts not specified based at your own discretion.
10	Disposal	<ul style="list-style-type: none"> ● When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste. ● When removing the actuator for disposal, pay attention to drop of components when detaching screws. ● Do not put the product in a fire when disposing of it. The product may burst or generate toxic gases.
11	Other	<ul style="list-style-type: none"> ● Do not come close to the product or the harnesses if you are a person who requires a support of medical devices such as a pacemaker. Doing so may affect the performance of your medical device. ● See Overseas Specifications Compliance Manual to check whether complies if necessary. ● For the handling of actuators and controllers, follow the dedicated instruction manual of each unit to ensure the safety.

Alert Indication

The safety precautions are divided into “Danger”, “Warning”, “Caution” and “Notice” according to the warning level, as follows, and described in the instruction manual for each model.

Level	Degree of Danger and Damage	Symbol
Danger	This indicates an imminently hazardous situation which, if the product is not handled correctly, will result in death or serious injury.	 Danger
Warning	This indicates a potentially hazardous situation which, if the product is not handled correctly, could result in death or serious injury.	 Warning
Caution	This indicates a potentially hazardous situation which, if the product is not handled correctly, may result in minor injury or property damage.	 Caution
Notice	This indicates lower possibility for the injury, but should be kept to use this product properly.	 Notice

Handling Precautions

- In this touch panel teaching, the language to be displayed can be changed. Refer to the following for how to change it.
 - CON related controllers 5.1 Displayed Language Change
 - SEP related controllers 6.1 Displayed Language Change
 - MEC related controllers 7.1 Displayed Language Change
- Do not apply mechanical shocks on this touch panel teaching pendant TB-01, TB-01D, TB01-DR because they may cause failure.
- When operating this touch panel teaching pendant TB-01, TB-01D, TB01-DR, be sure to hold the teaching pendant to prevent the cables from receiving unnecessary tensile loads.
- If using the liquid crystal display screen for a long time, the brightness decreases. To extend the life-span of the liquid crystal display, disconnect it from the controller. Set the lights-out time in the environment setting to automatically turn off a light.
- Do not touch more than one point at the same time, because the touch panel is an analog resistive film system. If you touch more than one point, the center position of more than one point may react and operate.
- Operate the touch panel by 0.5 N force or less. There is a risk that the panel will be broken if it is operated by stronger force than that.
- The life of the touch panel is around one million times under the condition of depression at the same point. (Based on the usage environment of 25 degrees C)



Caution

- *This touch panel teaching pendant TB-01, TB-01D, TB01-DR is exclusively designed for use with IAI controllers. Never connect it to other equipment. Failure may occur.*

Abbreviated Controller Type Names in this document

Features and windows explained in this instruction manual may differ depending on a type of a controller. In such a case, type names of controllers applicable or not applicable should be described. At that time, the safety category (G) type is the same as the standard type in applicable/inapplicable, thus the description should be abbreviated as shown below.

[Abbreviated]	C/CG described as C	CAL/CGAL described as CAL
CB/CGB described as CB	CFA/CGFA described as CFA	CFB/CGFB described as CFB

Product Check

This product, if adopting a standard configuration, consists of the parts listed below.


1. Component (excluding options)

No.	Product name	Model number	Remarks
1	Teaching pendant	Refer to "How to Read Model Nameplate" and "How to Read Model Number."	
Accessories			
2	Position controller cable	CB-TB1-C050	When model C or SC is selected
3	Program controller cable	CB-TB1-X050	When model S or SJ or SC is selected
4	Adaptor cable	CB-SEL-SJ002	When model SJ or SC is selected
5	Touch pen		Provided with the teaching pendant
6	First step guide	ME0327, ME0328	
7	Safety guide	M0194	

2. Instruction manual related to this product


No.	Name	Control number
1	Touch panel teaching TB-01, TB-01D, TB-01DR Applicable for Position Controller Instruction Manual	ME0324
2	Instruction manual for actuator integrated with ERC2 controller (PIO type)	ME0158
3	Instruction manual for actuator integrated with ERC2 controller (SIO type)	ME0159
4	Instruction manual for actuator integrated with ERC3 controller	ME0297
5	Instruction manual for PCON-CA/CFA controller	ME0289
6	Instruction manual for PCON-C/CG/CF controller	ME0170
7	Instruction manual for PCON-CY controller	ME0156
8	Instruction manual for PCON-SE controller	ME0163
9	Instruction manual for PCON-PL/PO controller	ME0164
10	Instruction manual for ACON-C/CG controller	ME0176
11	Instruction manual for ACON-CY controller	ME0167
12	Instruction manual for ACON-SE controller	ME0171
13	Instruction manual for ACON-PL/PO controller	ME0166
14	Instruction manual for SCON controller	ME0161
15	Instruction manual for SCON-CA/CAL/CGAL controller	ME0243
16	Instruction manual for ROBONET	ME0208
17	Instruction manual for ASEP/PSEP/DSEP controller	ME0267
18	Instruction manual for PMEC/AMEC controller	ME0245
19	Instruction manual for MSEP controller	ME0299
20	Instruction manual for MSCON controller	ME0306
21	Instruction manual for ACON-CA/DCON-CA controller	ME0326

3. How to Read Model Nameplate

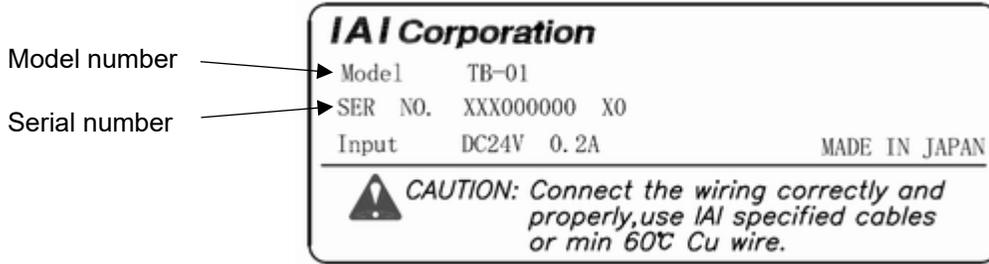


4. How to Read Model Number

1) Standard type

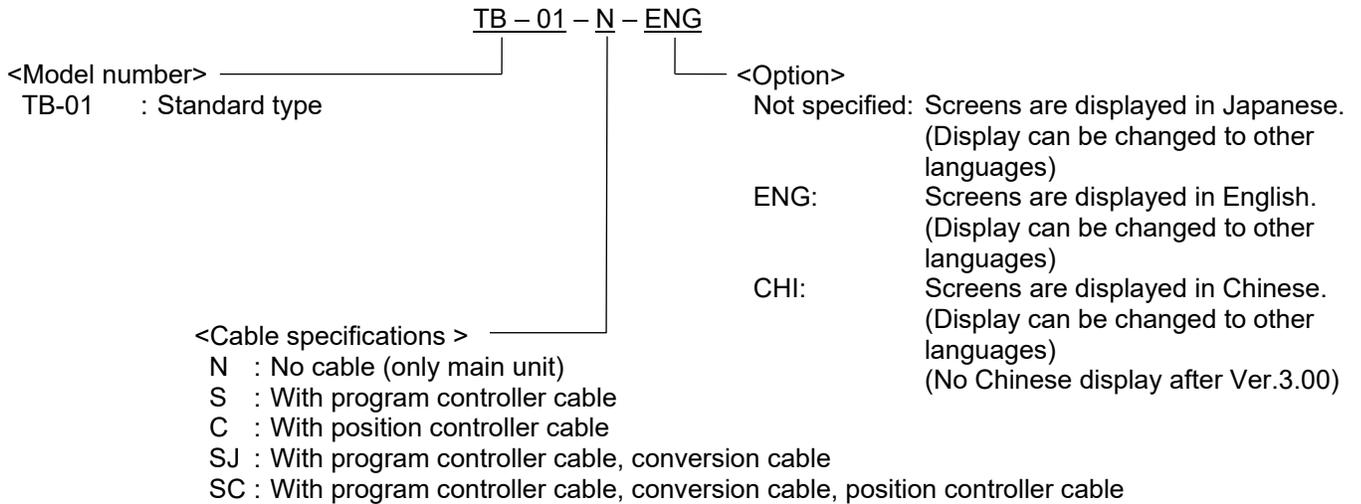

2) "With deadman switch", "With deadman switch on right side"

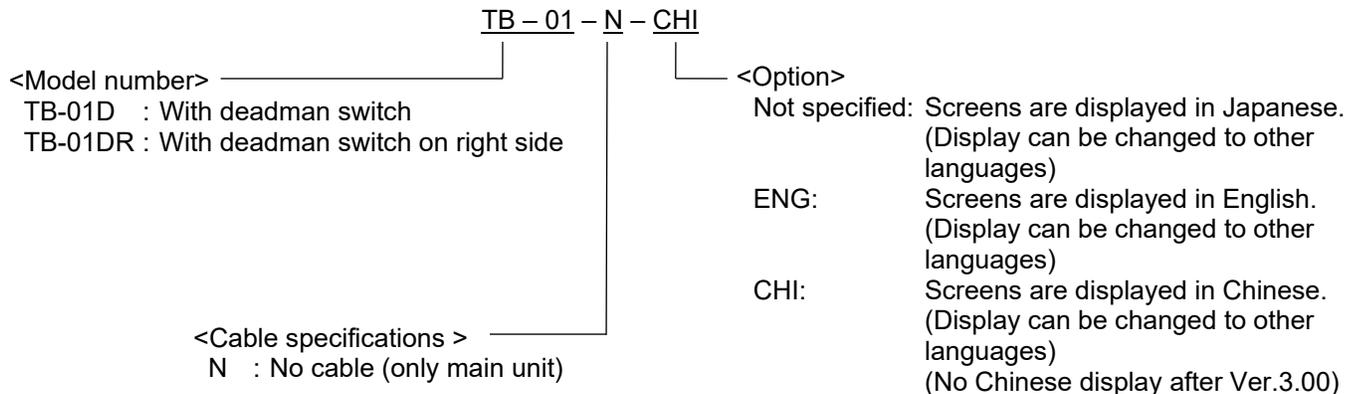

TB-01D and TB-01DR do not have the cable set type.
Use the following cables.

- Cable for the position controller connection: CB-TB1-C050
- Cable for the TP adaptor connection for the position controller: CB-TB1-GC050



1. Confirming the Specifications

1.1 Basic Specification

Item		TB-01/TB-01D/TB-01DR specifications
Cabinet color		Black
Display colors		65536 colors (16-bit color)
Backlight method		White LED backlight
Touch panel screen		3.5-inch TFT color LCD QVGA
Touch detection method		4-wire resistive film method
Hardware key		When operating with teaching: Operation stops with STOP key or ESC key When inputting data: ESC key, BS key, numeric keypad and return keys are enabled
External memory		SD/SDHC memory card ^(Note 1) interface mounted (1G to 8G) (Toshiba recommended)
Environmental resistance		IP40 or equivalent
Size		169.5mm (H) x 210mm (W) x 88.6mm (D)
Weight		TB-01: approx. 507g (excluding cable) TB-01D/TB-01DR: approx. 539g (excluding cable)
Cable length		5m (standard)
Wall hanging hook		Hook with M8 hexagon socket bolt
Touch pen (Accessory)		Φ5×100mm
Strap		6mm wide, folded length 190mm (optional part)
Function	Language selection	Japanese/English/Chinese (No Chinese display after Ver.3.00)
	Touch sound	ON/OFF, Select volume from Loud, medium or small
	Monitor	Current position, current speed, I/O state Alarm code, alarm message, alarm details code, alarm occurrence time Automatic transition to monitor screen at startup function (only when SEP or MEC controller is connected)


Function	Position data editing	CON related controllers edit items: Target position, speed, acceleration, deceleration, pressing force, threshold, positioning width, zone \pm , acceleration/deceleration mode, incremental, gain set, stop mode, No vibration
		SEP related controllers edit items: Target position, speed, pressing force pressing width, acceleration, deceleration, change position, change speed, energy saving
		MEC related controllers edit items: Stop position, speed, pressing force, pressing width, acceleration, deceleration, energy saving
		Common items: Current position import function using jog, inching or direct teaching Alarm function using input value error
	Movement functions	Set position movement, jog movement, inching movement
	Parameter edit	CON related controller parameters SEP related controller parameters, MEC related controller parameters
	Version information	Controller version, series/type name, PCB type, serial No., controller manufacturing information
	Alarm history	Past 16 alarms or 32 alarms are displayed (depending on the destination controller)
	Data save	Data save/read onto external SD card is supported (position data, parameters, alarm list)
	Display adjustment	Contrast and backlight brightness can be adjusted
	Time setting	Time can be set with real-time clock (Backed up with CR2032 button battery)
Smart tuning function	Smart tuning function	
Maintenance information	Cumulative move times, cumulative travel distance (Supported with SCON-CA/CAL/CB, PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB, MSEP, MCON, MCON, ERC3)	

Communication	Communication standards	RS-485 compliant
	Communication conditions	Transmission speed 115,200bps 8-bit data bit, no parity, 1-bit stop bit
	Protocol	Modbus RTU
	Connector	Mini DIN
	Number of connected controllers	Maximum 16 units (CON related controllers, SEP related controllers) Maximum 1 unit (MEC related controllers: AMEC, P MEC) Maximum 4 units (MEC related controllers: ERC3 MEC mode) (Different systems cannot be used together)
Fonts used		Japanese and English: Japanese bitmap font made by Rim Corporation, Co., Ltd.: (Fonts: Gothic)
Note 1		SD memory card is a trademark of SD-3C, LLC and SDA.

1.2 Environmental Specifications


Item	TB-01/TB-01D/TB01DR Specifications
Rated voltage	24V DC
Operating voltage range	21.6 to 26.4V DC
Power consumption	3.6W or less (150mA or less)
Working ambient temperature	0 to 50°C
Working ambient humidity	20 to 85%RH (with no dew condensation)
Storage ambient temperature	-20 to 60°C
Storage ambient humidity	10 to 85%RH (with no dew condensation)
LCD life	20,000 hours (atmospheric temperature 25°C)
Vibration resistance	10 to 55Hz (one minute cycle) Double amplitude 0.75mm, ten minutes in X, Y, Z directions
Impact resistance	147m/s ² 11msec four times in X, Y and Z directions
Environmental resistance	IP40 (in initial state)

1.3 Outline Dimensions

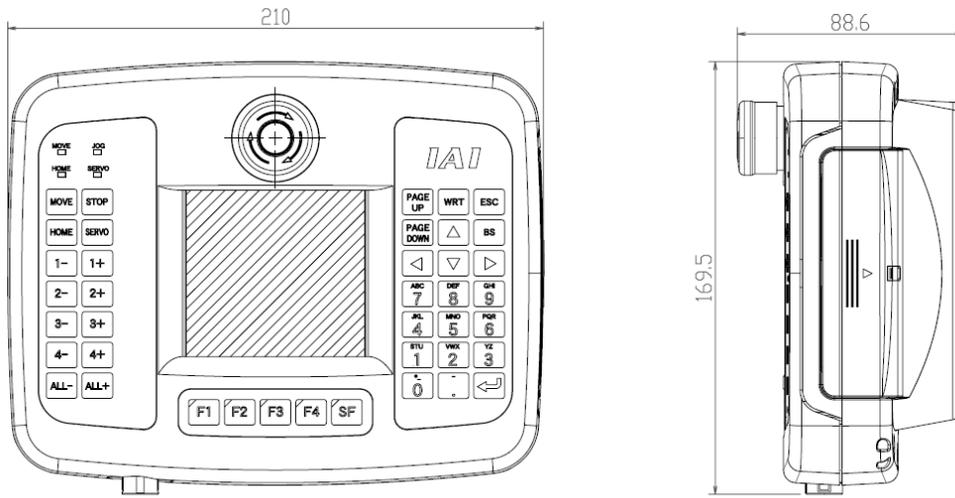


1.4 Appearance


1.4.1 TB-01 (standard type) appearance

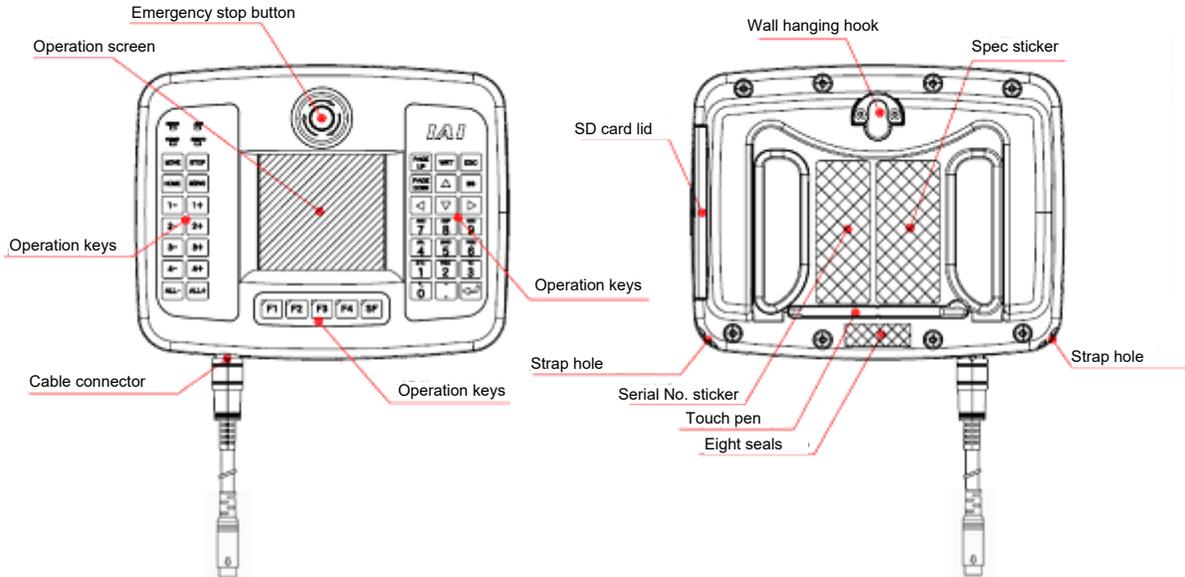


1.4.2 TB-01D (with deadman switch) appearance

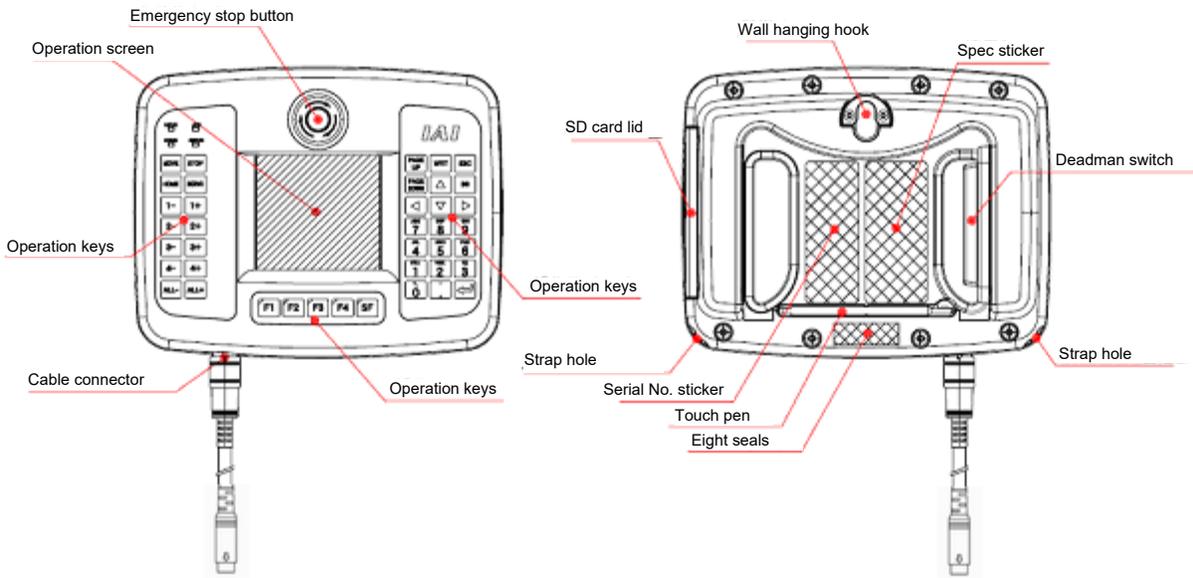

1.4.3 TB-01DR (type with deadman switch on right side)

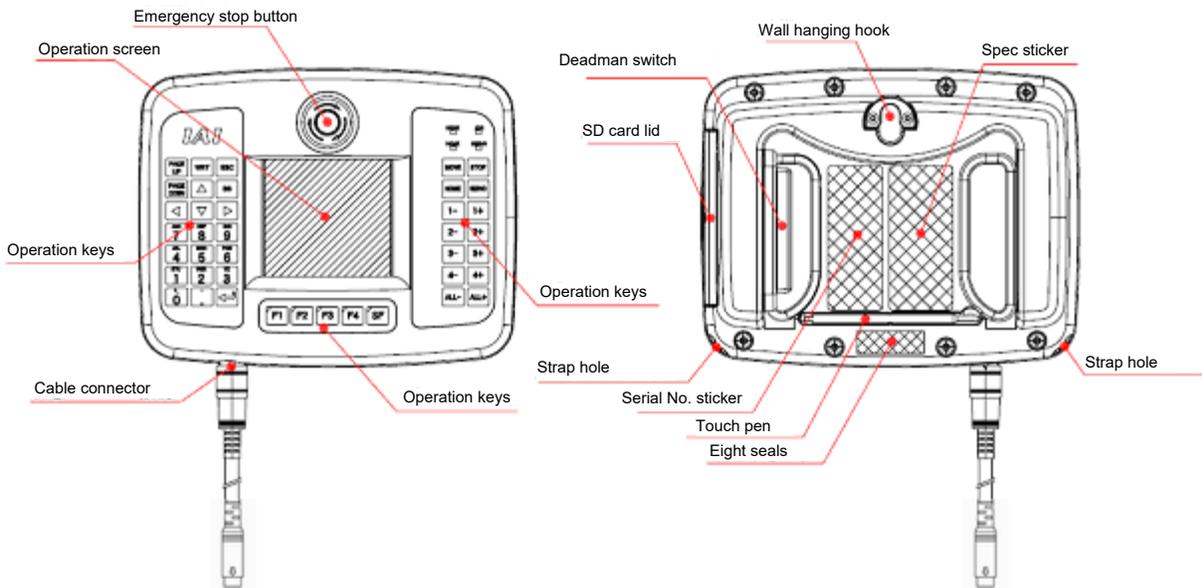

2. Explanation of Each Part

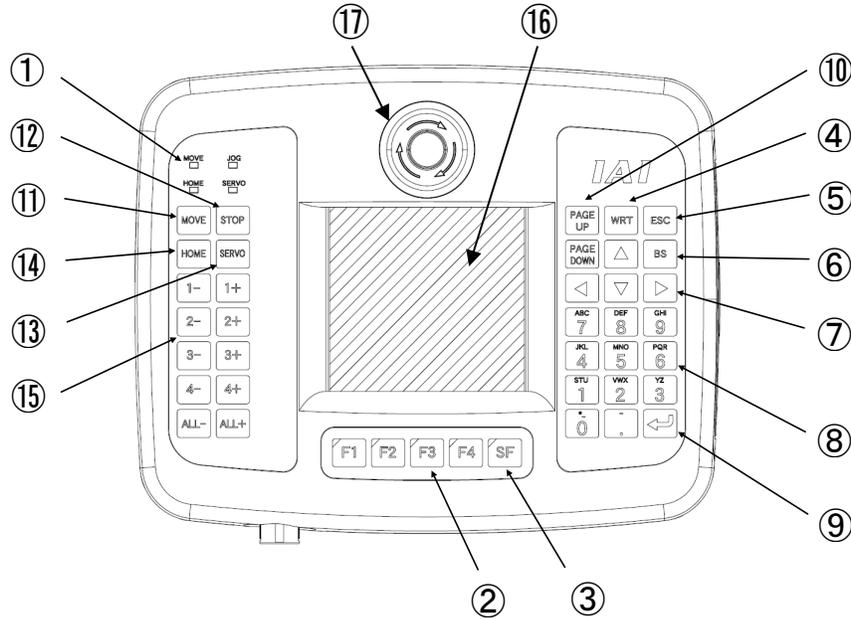

- ① LED
This LED is not used with the position controller.
- ② **F1** to **F4** key (Function keys)
These keys are not used with the position controller.
- ③ **SF** key (Shift key)
This key is not used with the position controller.
- ④ **WRT** key (Write key)
This key is not used with the position controller.
- ⑤ **ESC** key (Escape key)
If pressed while inputting data, the data input state is canceled.
If pressed during teaching, actuator movement or continuous movement stops.
(The operation will not stop when operating from a host such as in the AUTO or monitor mode.)
- ⑥ **BS** key (Backspace key)
If pressed while inputting data, the previously input character is deleted.
- ⑦ **◀ ▶ ▲ ▼** key (Cursor keys)
These keys are not used with the position controller.
- ⑧ **0** to **9** **.** key (Numeric keypad)
Use these keys to input numeric value data.
- ⑨ **↵** key (Return key)
Press this key to enter the input data.


- ⑩   key (Page Up/Page Down keys)
These keys are not used with the position controller.
- ⑪  key (Move key)
This key is not used with the position controller.
- ⑫  key (Stop key)
If pressed during teaching, actuator movement or continuous movement stops.
(The operation will not stop when operating from a host such as in the AUTO or monitor mode.)
- ⑬  key (Servo key)
This key is not used with the position controller.
- ⑭  key (Home key)
This key is not used with the position controller.
- ⑮           key (Jog key)
This key is not used with the position controller.

The backlight can be turned back on by pressing any key.

- ⑯ Touch panel operation display screen
This screen is configured of a TFT color LCD and touch panel.
Use this screen to edit the various setting values and to display the teaching details, etc.
Touch the touch panel with a finger or touch pen to perform operations.

Follow all the "Handling Precautions" and operate it.
- ⑰ EMERGENCY STOP (emergency stop push-button switch)
Press this button to apply emergency stop.

TB-01D

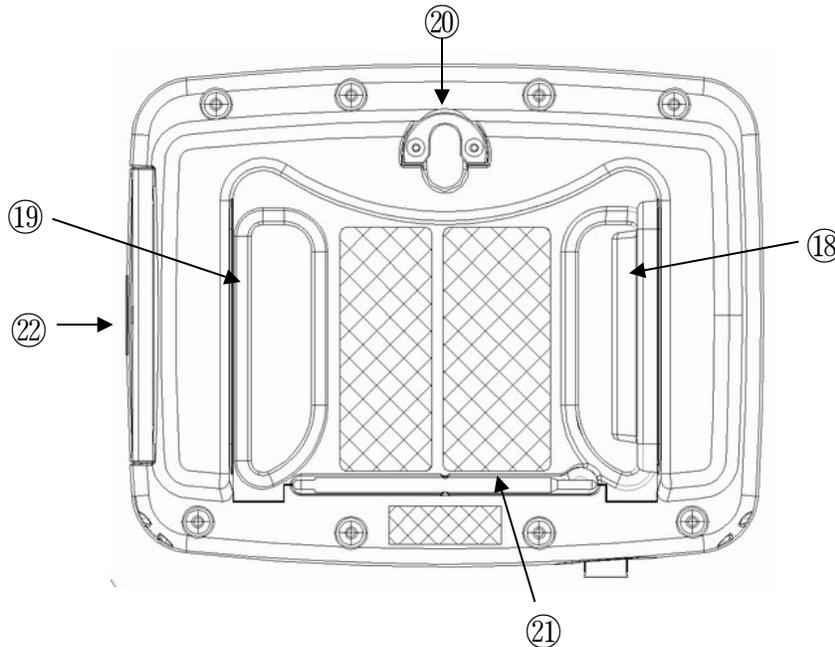

⑱⑲ Deadman switch

(The switch is located at 18 on the TB-01D, and at 19 on the TB-01DR. The TB-01 is not equipped with a deadman switch.)

There are three stages to the deadman switch. The ON/OFF state at each stage is shown below.

1st stage	Switch OFF	Hand is released from switch, or the force pressing the switch is extremely weak.
2nd stage	Switch ON	Switch is pressed with appropriate force.
3rd stage	Switch OFF	Switch is pressed with strong force.

If the switch is ON, the servo can be turned ON.

If the switch is OFF, the drive source is shut off and the servo turns OFF.

Even if the switch is OFF, operations are possible in modes that do not require servo ON.

(Editing mode, etc.)

⑳ Wall-hanging hook

Use this hook to hang the unit on a wall.

㉑ Touch pen


Use this pen to touch the touch panel's operation and display screen.

② SD memory card slot

The SD memory card is inserted into this slot. Open the lid and insert the SD memory card.

- Face the card's level toward the operation panel, and insert until a click is heard.
- To remove the card, press it lightly. It will pop out slightly, so pull it out straight.

[Caution] *There may be cases when the card is difficult to eject, such as when it is a new memory card. Inserting and ejecting the card several times will make it easier to eject.*

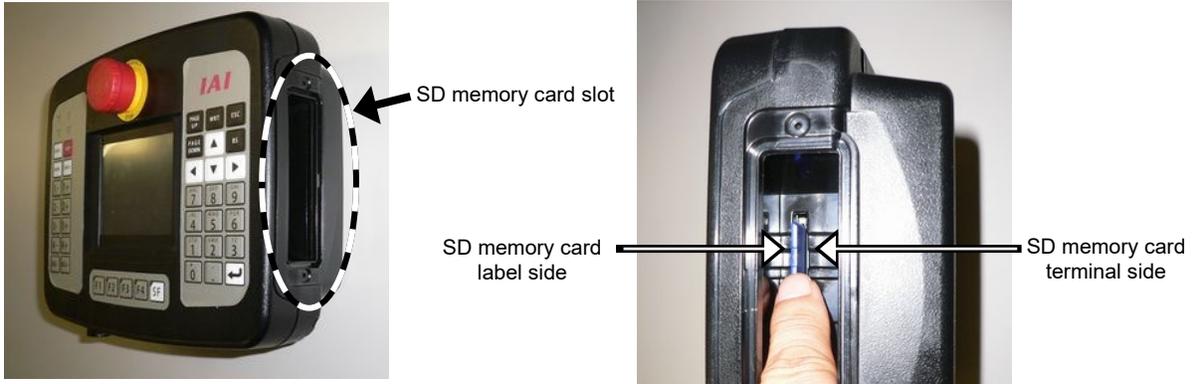


The SD memory card can also be inserted and removed with the following method.

■ When locking and releasing by pressing with finger is difficult


[Locking]

- ① Using the back end of the touch pen, press until the SD card is locked.

Touch pen

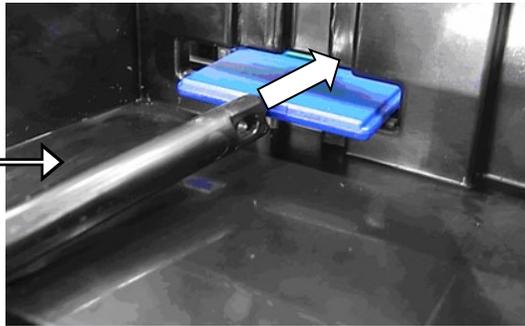


- ② Press in until a click is heard. The SD card will be locked.

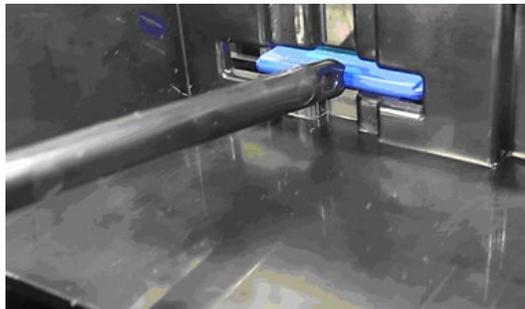


[Releasing]

- ① Using the back of the touch pen, press the SD memory card in until a click is heard.

Touch pen →

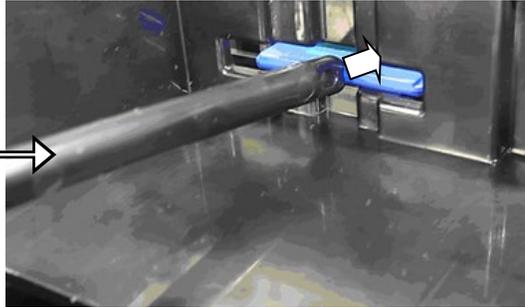

- ② When the touch pen is pulled forward, the SD memory card will be released.

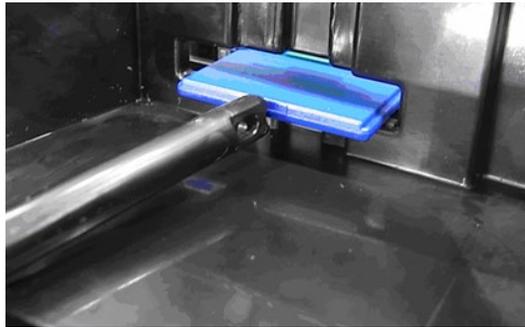


■ When removing with fingers is difficult

- ① From the state with the SD memory card mounted, press the SD card and release it.
- ② Press the SD card in to where it is released.



- ③ Slide your finger down in this state.
- ④ The force of the spring will cause the SD memory card to pop out.

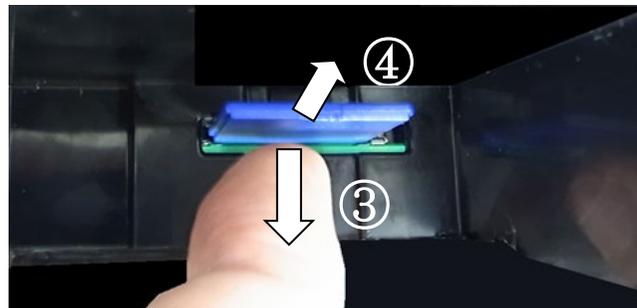

The SD memory card can be popped out in the same manner as the finger when using the touch pen.


[Caution]

If your finger is released with force, the SD memory card will pop out of the slot and could be lost or damaged.

3. Connecting with the Controller


Turn the controller power OFF before connecting or disconnecting the touch panel teaching TB-01, TB-01D or TB-1DR.

- Caution:**
- Connecting or disconnecting the unit while the controller power is ON could result in faults.
 - Confirm the connector engagement section and connect/disconnect while taking care not to apply excessive force. If the connector does not fit in smoothly, do not push it in with force. Failure to observe this could result in faults.

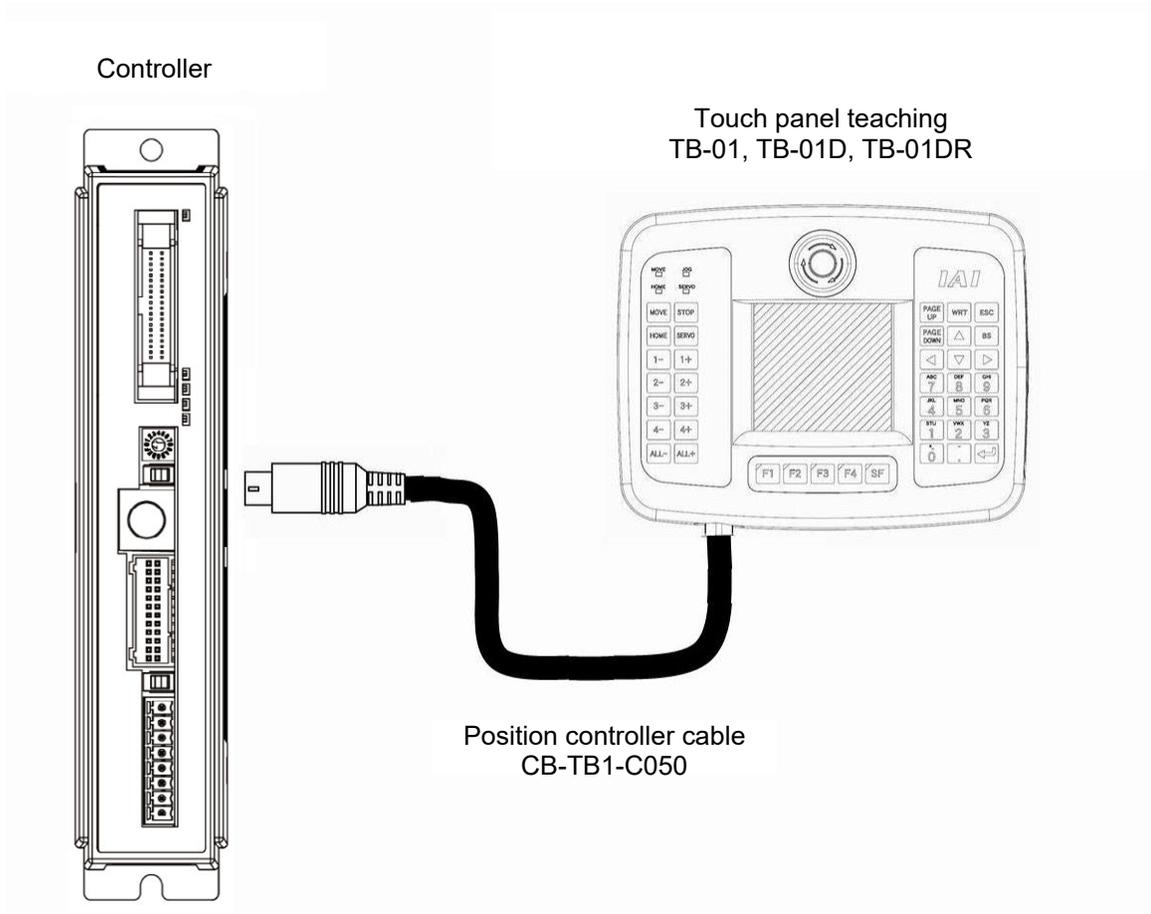

Position controller cable


Model	CB-TB1-C050
Name	TB-01 controller connection cable
Controller side connector type	MD connector (JST Mfg. Co., Ltd.)
TB-01 unit side connector type	RP13A-12PH-20SC (71) (HIROSE)

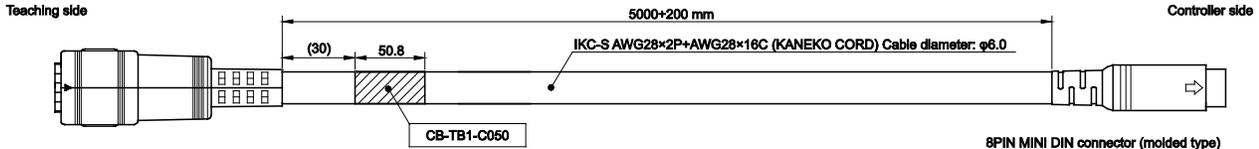

Plug: RP13A-12PH-20SC (71) (HIROSE) x 1
Contact: RP19-SC-222 (HIROSE) x 10

8PIN MINI DIN connector (molded type)
Contact : MD-SP2240 (JST) x 8
Metal shell : MD-PS88 (JST)
Housing A : MD-P18A (JST)
Housing B : MD-P18B (JST)
Cover : MD-PCC8T-S2 (JST)


* An equivalent product can be used for the 8-pin mini-DIN connector.

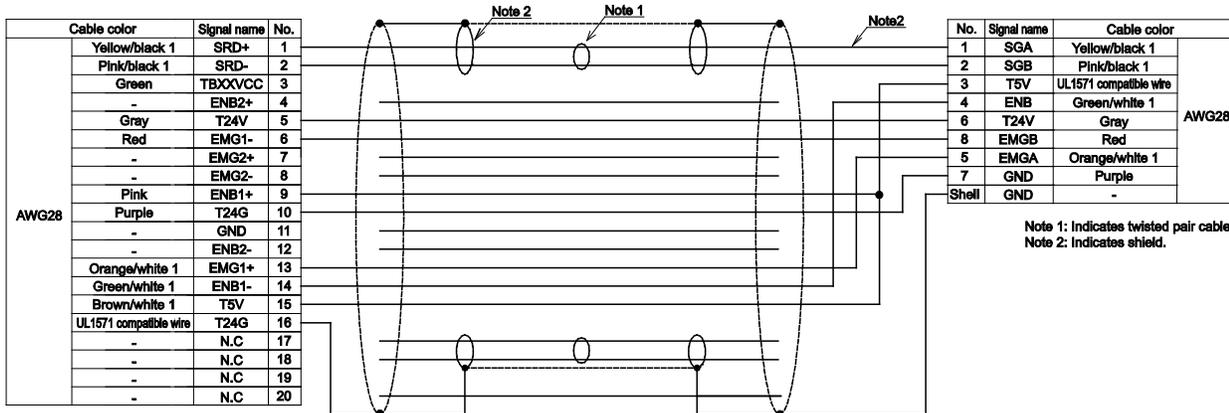

4. Safety Category 4 compliance

To comply with Safety Category 4, the TB-01D/TB-01DR and position controller TB adaptor must be connected, and the safety circuit must be wired.

Connect the Safety Category compatible cable CB-TB1-GC050 to the TB-01D/TB-01DR.

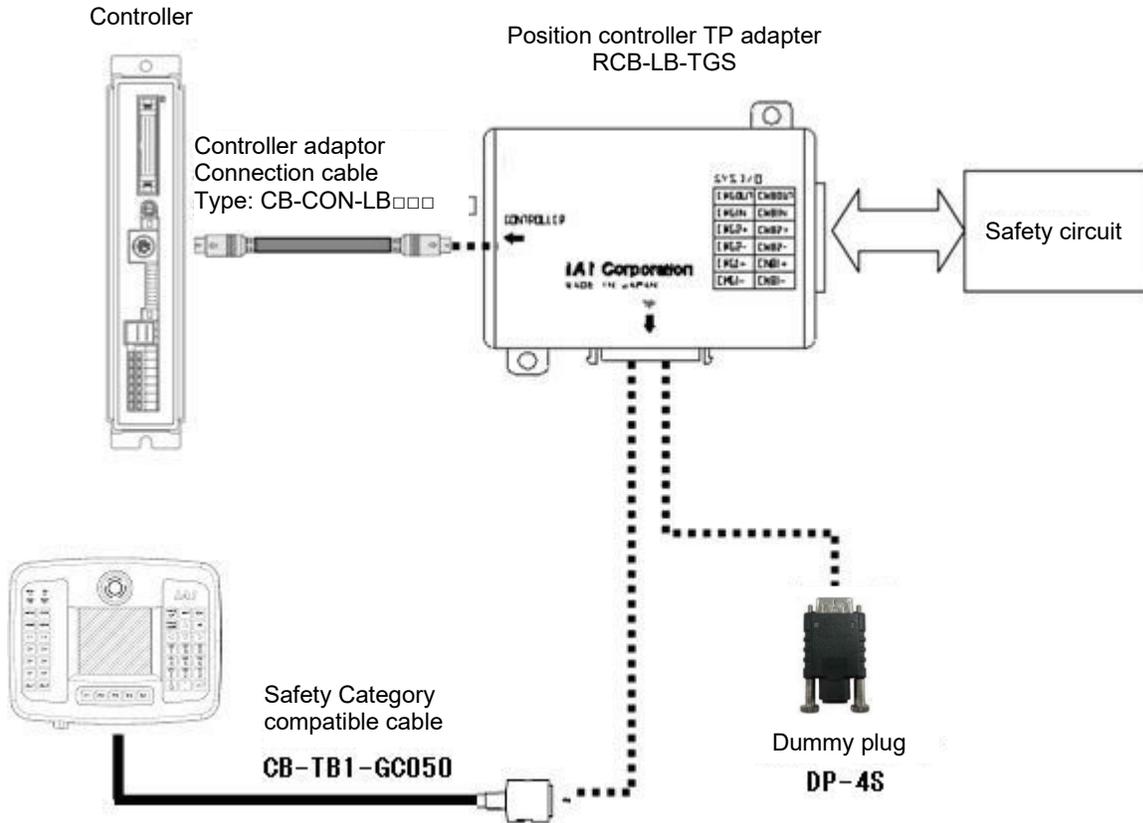

Note: When not connecting the TB-01D/TB01DR, always insert a dummy plug DP-4S into the position controller's TP adapter.

5. Operation of CON Related Controllers

CON related controllers: ERC2, ERC3, ACON, PCON, SCON, DCON, RACON, RPCON, MSCON and MCON

5.1 Displayed Language Change

The language can be changed by following the steps below.

For the operations after the language change, please refer to the instruction manual written in each language.

Display change from English to Japanese

Touch [Menu2] in Menu1.

Touch [EnvironmentSet] in Menu2.

Touch [Japanese].

Touch [書き込み].

Display change from Japanese to English

Touch [メニュー2] in Menu1.

Touch [環境設定] in Menu2.

Touch [英語].

Touch [Write].

Display change from English to Chinese (The display cannot be switched to Chinese in Ver. 3.00 and after.)

Touch [Menu2] in Menu1.

Touch [EnvironmentSet] in Menu2.

Touch [Chinese].

Touch [写入].

Display change from Chinese to English (The display cannot be displayed to Chinese in Ver. 3.00 and after.)

Touch [菜单2] in Menu1.


Touch [环境设定] in Menu2.


Touch [英语].

Touch [Write].

5.2 Operating Menu


Operating menu when the touch panel teaching pendant TB-01, TB-01D, TB-01DR is connected to a CON related controller is shown.

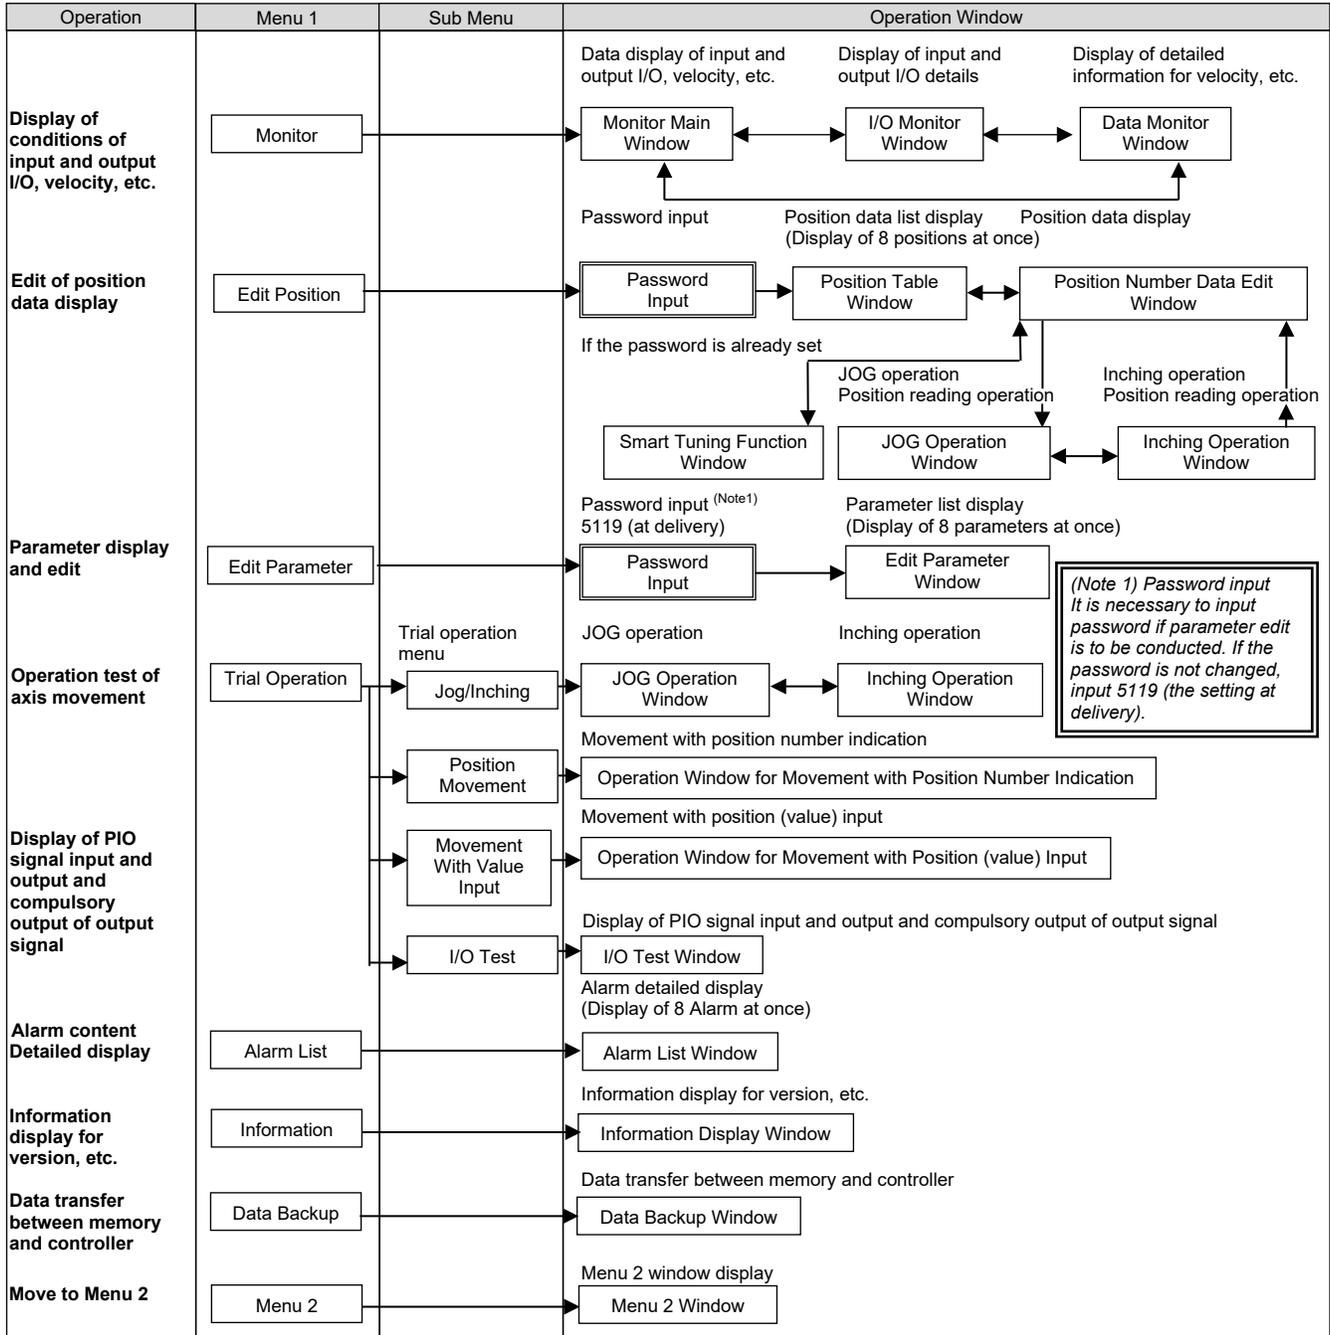

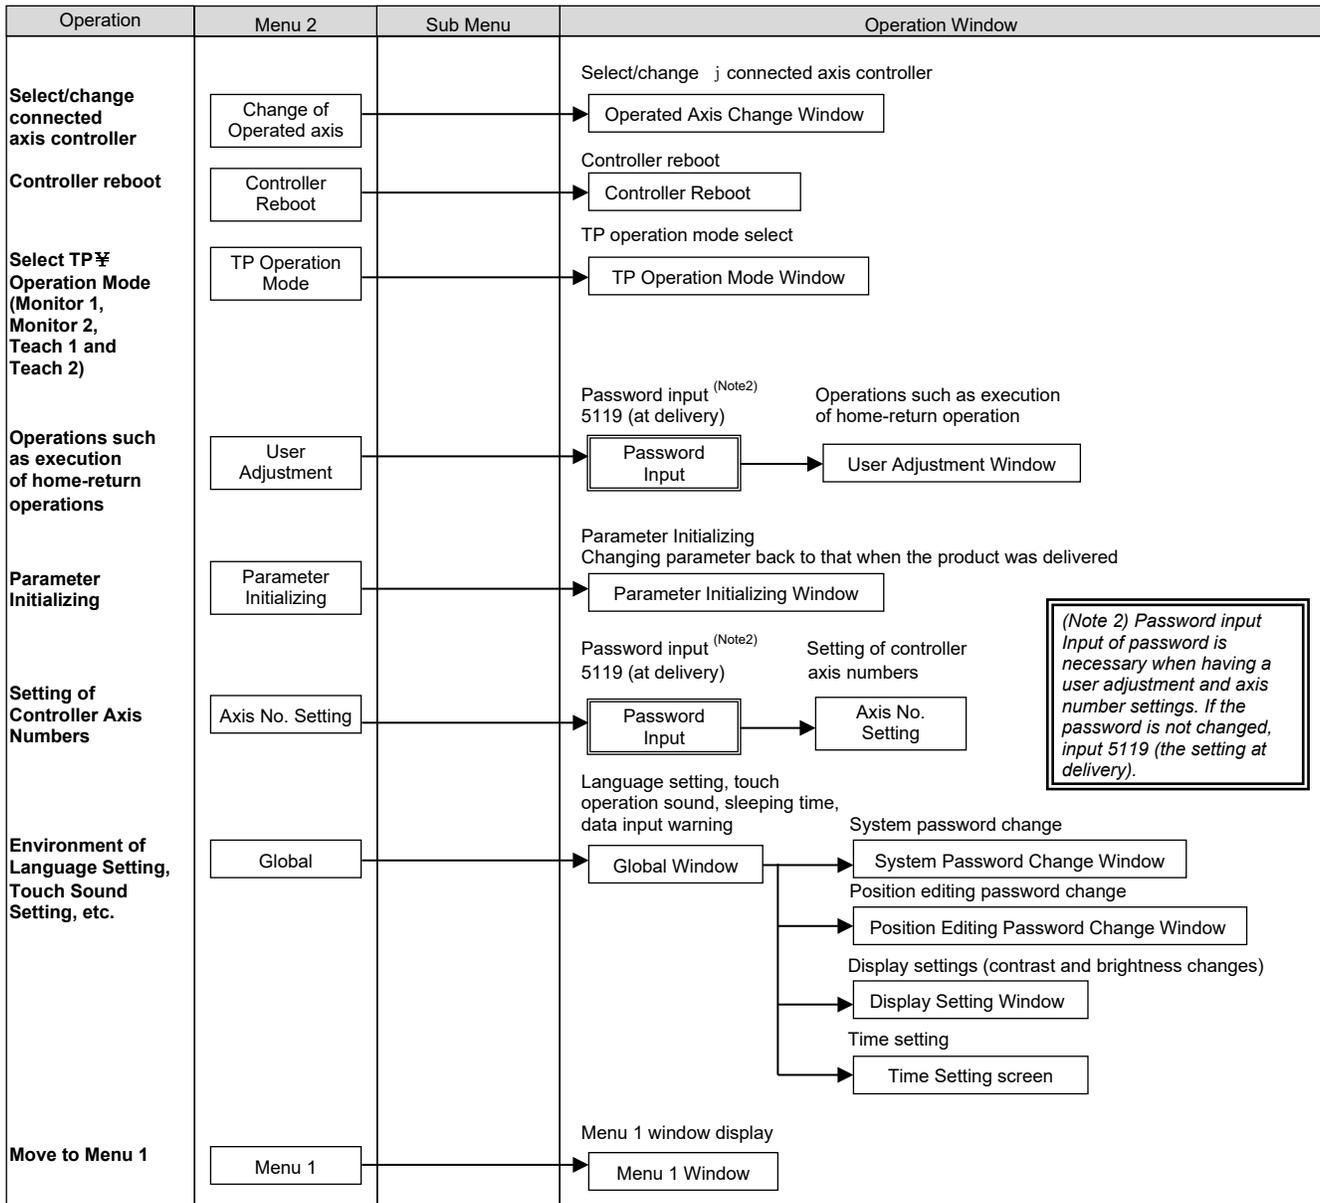


5.3 Initial Screen

When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen of the touch panel teaching pendant and then the version information is displayed.

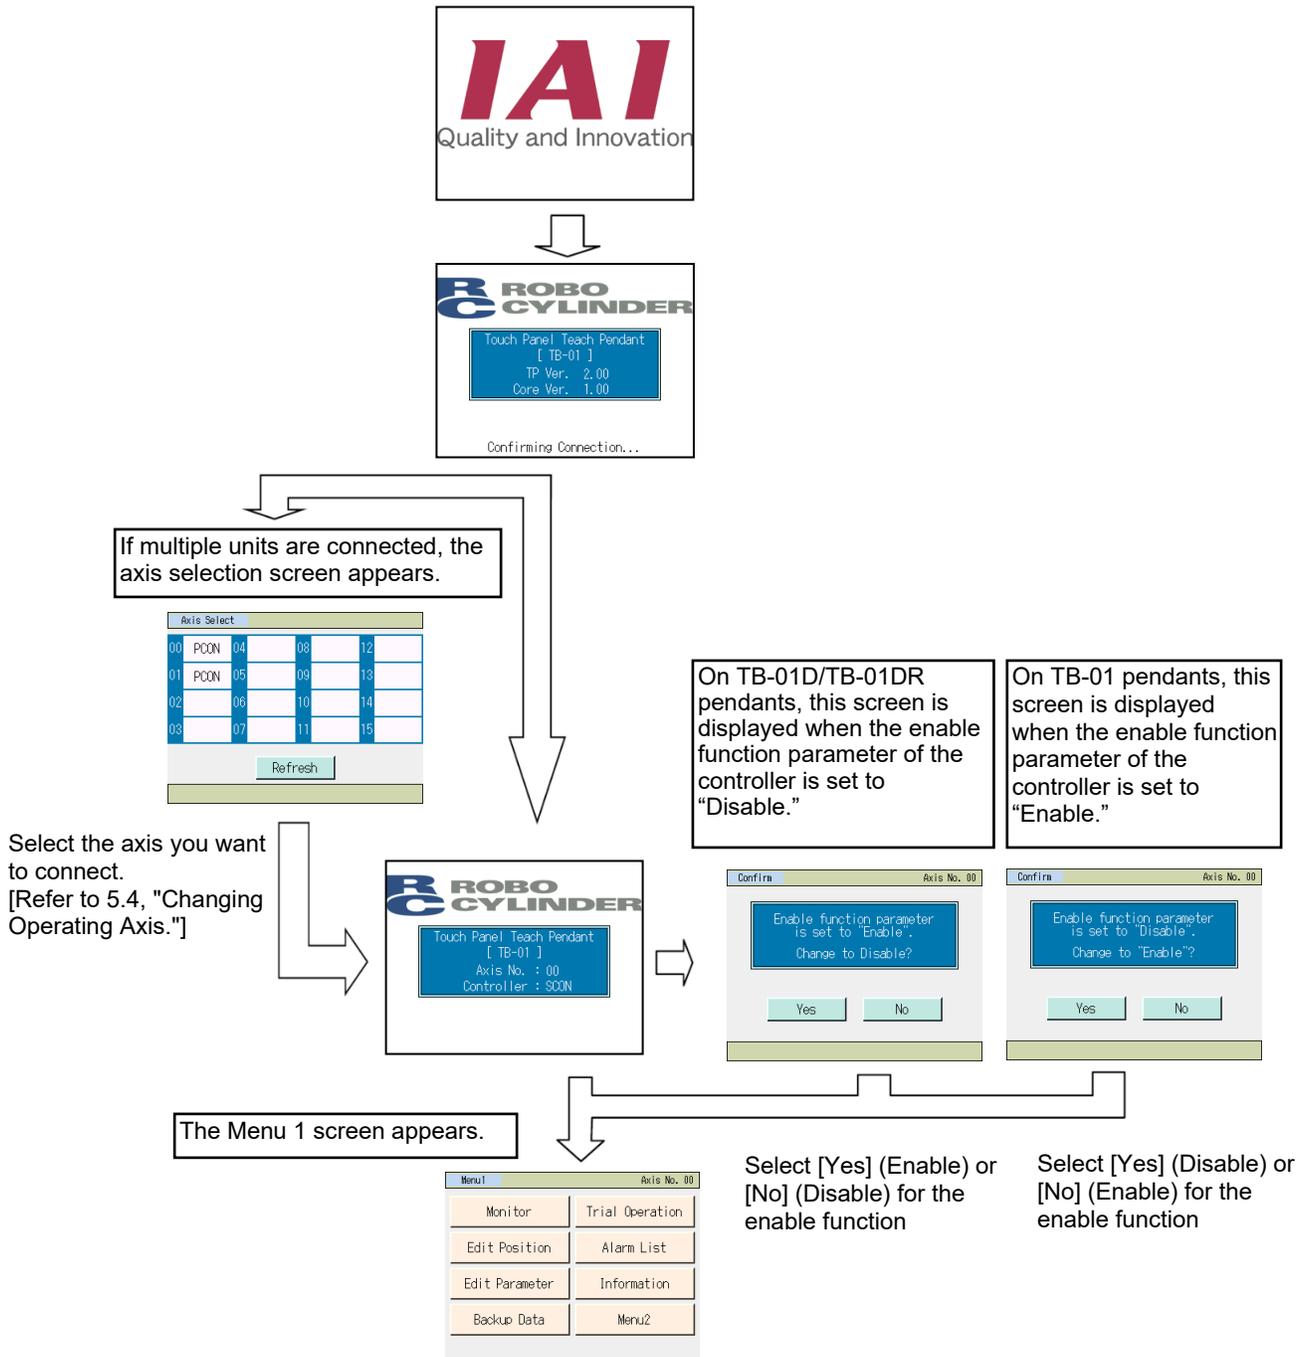

5.4 Changing Operating Axis


If multiple controllers are connected to the communication line, the axis selection screen appears. This screen also appears when [Change Axis] is touched on the Menu 2 screen. If only one controller is connected, you need not select an axis.

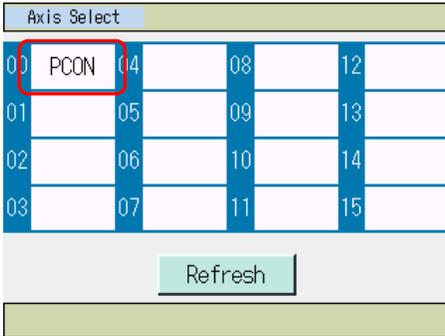


Select and touch the axis you want to connect the touch panel teaching pendant to.



Connection with the selected controller axis starts.

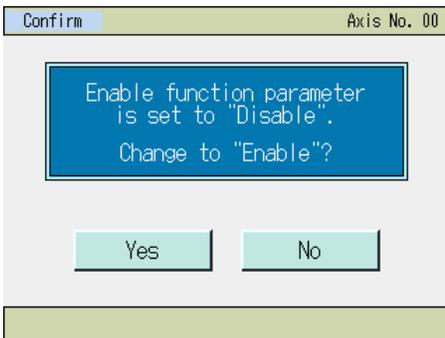


This screen appears when the enable function parameter of the controller, other than TB-01, is set to [Disable]. Select and touch [Yes] (Enable) or [No] (Disable) for the enable function.

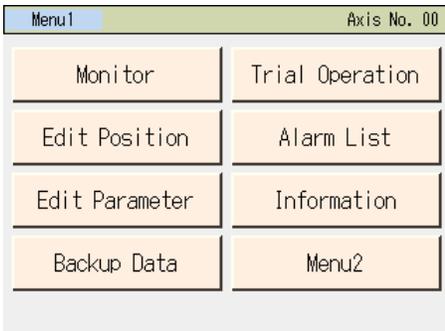

When connection with the controller is established, the Menu 1 screen appears.

5.5 Menu Selection

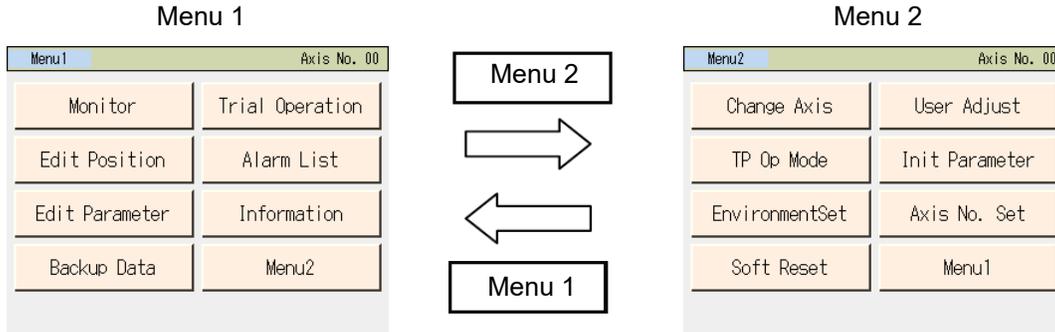

Two menu selection screens, Menu 1 and Menu 2, are available.

Touching [Menu2] on the Menu 1 screen changes the display to the Menu 2 screen.

Touching [Menu1] on the Menu 2 screen changes the display to the Menu 1 screen.

The Menu 1 screen and Menu 2 screen provide seven menu items, respectively. Select and touch one of these items.

The screen changes to the one corresponding to the menu item you have touched.

Menu 1 list

- Monitor Display the controller status. [Refer to 5.6, "Monitor."]
- Edit Position Display and edit the position data table. [Refer to 5.7, "Position Editing."]
- Edit Parameter Display and edit zone boundary+ and other parameters. [Refer to 5.8, "Parameter Editing."]
- Trial operation Perform operation test for jogging, inching and axis movement. [Refer to 5.9, "Trial Operation."]
- Alarm List Display alarm details. [Refer to 5.11, "Alarm List."]
- Information Display controller information such as the version. [Refer to 5.16, "Information."]
- Backup Data Transfer data between SD memory card and the controller. [Refer to 5.18, "Data Backup."]

Menu 2 list


- ChangeAxis Select the controller axis to connect the touch panel teaching pendant to. [Refer to 5.4, "Changing Axis."]
- Soft Reset Restart the controller. [Refer to 5.12, "Restarting Controller."]
- TP Op Mode Select a desired TP operation mode. [Refer to 5.10, "TP Operation Mode."]
- User Adjust Execute home return, etc. [Refer to 5.13, "User Adjustment."]
- Init Parameter Initialize parameters. [Refer to 5.14, "Parameter Initialization."]
- Axis No. Set Set the axis number of the controller. [Refer to 5.15, "Axis Number Setting."]
- Environment Set Set the language and touch tone, change the system password, etc. [Refer to 5.17, "Environment Setting."]



When an alarm generates, the corresponding alarm code and message will appear at the bottom of the screen and the backlight color will change to orange. If an emergency stop is detected, the background color will change to red.


5.6 Monitor

The I/O statuses, current position and other information of the controller connected are displayed.

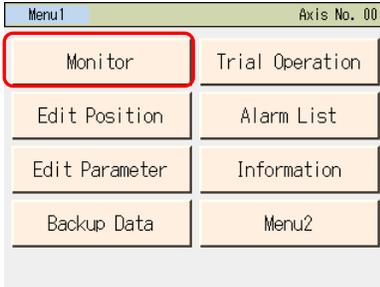

Touch [Monitor] on the Menu 1 screen.

If the TP operation mode is not Monitor Mode 1 or 2, the following message screen appears.

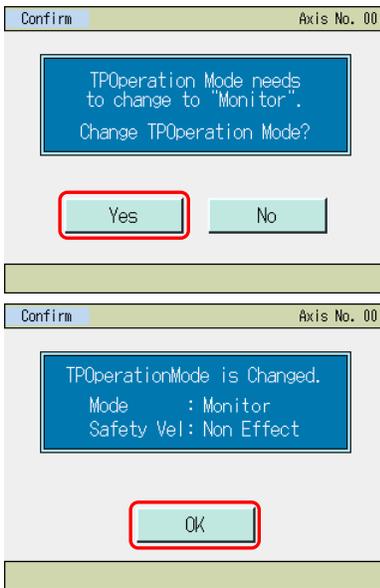


Touch [Yes] to change to Monitor Mode 1 or 2. If not, touch [No].

*(Note) The safety speed does not change.
If the current mode is Teaching Mode 1, it changes to Monitor Mode 1.
If the current mode is Teaching Mode 2, it changes to Monitor Mode 2.*

Touch [OK].

The main monitor screen appears.

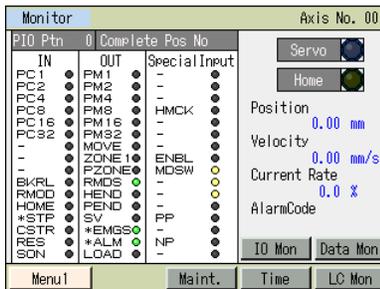


The items and buttons to be shown will differ depending on the controller models. The signal names to be shown will also differ depending on the controller models and operation patterns.

5.6.1 Main Monitor Screen, IO Monitor Screen, Data Monitor Screen, LC Monitor Screen

PCON-C/CF/CY/PL/PO/SE, ACON-C/CY/PO/PL/SE, DCON-C/CY/PO/PL, ERC2, AMEC/PMEC and ASEP/DSEP/PSEP/MSEP

Main monitor screen

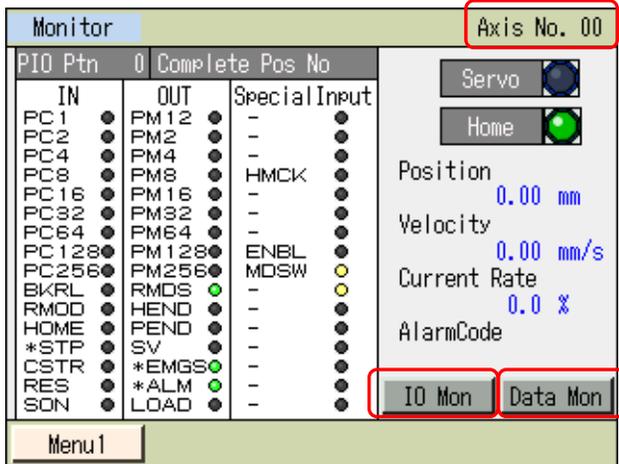


Touching [IO Mon] changes the display to one showing only I/Os.

Touching [Data Mon] changes the display to one showing only the current position, etc.

Touching Axis No. switches to the axis selection screen.

SCON-CAL, PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, ERC3, MCON, MSCON and RCP6S

Main monitor screen

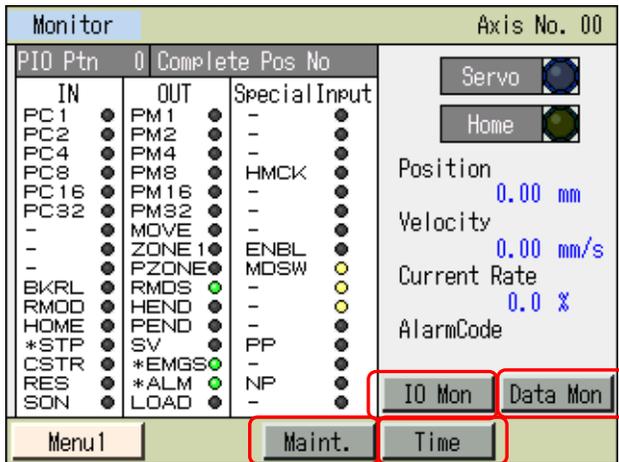


Touching [IO Mon] changes the display to show only I/Os.

Touching [Data Mon] changes the display to show data such as the current position and control voltage.

Touching [Maintenance] changes the display to show maintenance information.

Touching [Time] shows the window for time edit adjustment.

SCON-CA/CB Main monitor screen

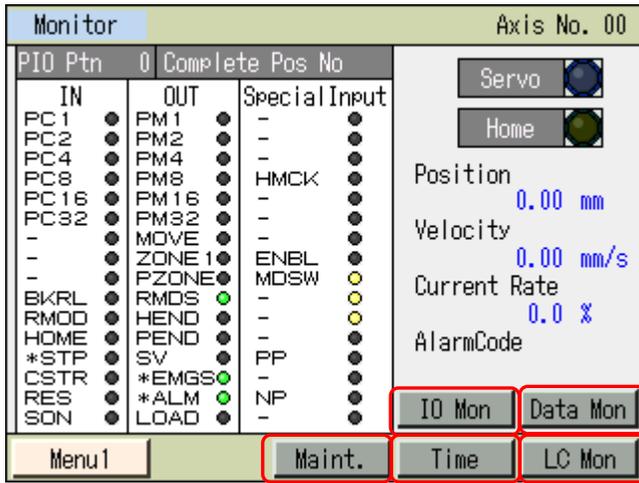

Touching [IO Mon] changes the display to show only I/Os.

Touching [Data Mon] changes the display to show data such as the current position and control voltage.

Touching [Maintenance] changes the display to show maintenance information.

Touching [Time] shows the window for time edit adjustment.

Touching [LC Mon] changes the display to show data such as the current position and force feedback.

[Displayed Items]

- PIO Pattern The PIO pattern number set to the controller is shown.
- Complete Pos No The position number achieved upon completion of positioning is shown.
- IN The status of each input port is shown. ON is lit. OFF is unlit.
- OUT The status of each output port is shown. ON is lit. OFF is unlit.
- SpecialInput The statuses of the enable switch, etc., are shown. ON is lit. OFF is unlit. (The displayed items vary depending on the model.)
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- Position The current position is shown.
- Velocity The speed is shown.
- Current Rate The command value of electrical current is shown as a percentage of the rated current.
- AlarmCode The applicable alarm code is shown.

Models other than SCON-C, SCON-CA/CAL/CB, and MSCON
IO monitor screen

Input				Output			
Name	Stat	Name	Stat	Name	Stat	Name	Stat
PC1	●	PC256	●	PM1	●	PM256	●
PC2	●	BKRL	●	PM2	●	RMDS	●
PC4	●	RMOD	●	PM4	●	HEND	●
PC8	●	HOME	●	PM8	●	PEND	●
PC16	●	*STP	●	PM16	●	SV	●
PC32	●	CSTR	●	PM32	●	*EMGS	●
PC64	●	RES	●	PM64	●	*ALM	●
PC128	●	SON	●	PM128	●	LOAD	●

●:OFF ○:ON

Mon Main IO Mon Data Mon

Menu1

Touching [Mon Main] switches to the main monitor display.

Touching [Data Mon] changes the display to one showing only the current position, etc.

Touching Axis No. switches to the axis selection screen.

- Input The status of each input port is shown. ON is lit. OFF is unlit.
- Output The status of each output port is shown. ON is lit. OFF is unlit.

SCON-C, SCON-CA/CAL/CB, and MSCON
Data monitor screen

Monitor		Axis No. 00	
Position	0.00 mm	Servo	●
Velocity	0.00 mm/s	Home	●
Current Rate	0.00 %	Control Voltage	24.53 V
AlarmCode		Rated Current Ratio	25.32 V
		MotorVoltage	25.32 V
		PCB Temperature	47.61°C

Mon Main IO Mon Data Mon

Menu1

Touching [Mon Main] switches to the main monitor display

Touching [IO Mon] changes the display to one showing only I/Os.

Touch [Current] to display the current.

Touch [Rated Current Ratio] to display the current rate.

- Position The current position is shown.
- Velocity The speed is shown.
- Pulse count The pulse count is shown. Touching [Pulse Count] displays the pulse count. (It is shown on the pulse train control controllers such as PCON-PL/PO/PLB/POB/CA.)
- Current Rate The command value of electrical current is shown as a percentage of the rated current. Touch [Rated Current Ratio] to display.
- Current The command value of electrical current is shown. Touch [Current] to display the command value.
- Alarm Code The applicable alarm code is shown.
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- ControlVoltage The voltage of the control power supply is shown.
- MotorVoltage The voltage of the motor power supply is shown.
- PCB Temperature The PCB temperature is shown.

SCON-C IO monitor screen

Input				Output			
Name	Stat	Name	Stat	Name	Stat	Name	Stat
PC1	●	-	●	PM1	●	PZONE	●
PC2	●	BKRL	●	PM2	●	RMDS	●
PC4	●	RMOD	●	PM4	●	HEND	●
PC8	●	HOME	●	PM8	●	PEND	●
PC16	●	*STP	●	PM16	●	SV	●
PC32	●	CSTR	●	PM32	●	*EMGS	●
-	●	RES	●	MOVE	●	*ALM	●
-	●	SON	●	ZONE1	●	LOAD	●

●:OFF ○:ON

Mon Main IO Mon Data Mon

Menu1

Touching [Mon Main] switches to the main monitor display

Touching [Data Mon] changes the display to show data such as the current position and motor voltage.

Touching [Axis No.] switches the screen to one where you can select an axis.

- Input The status of each input port is shown. ON is lit. OFF is unlit.
- Output The status of each output port is shown. ON is lit. OFF is unlit.

SCON-C Data monitor screen

Monitor		Axis No. 00
Position	0.00 mm	Servo ●
Velocity	0.00 mm/s	Home ●
Current Rate	0.00 %	Current ●
AlarmCode		MotorVoltage 271.00 V
		PCB Temperature 46.00 °C
		Mon Main IO Mon Data Mon
Menu1		

Touching [Mon Main] switches to the main monitor display

Touching [IO Mon] changes the display to one showing only I/Os.

Touch [Current] to display the current.
Touch [Rated Current Ratio] to display a current ratio.

- Position The current position is shown.
- Velocity The speed is shown.
- Pulse count The pulse count is shown. Touching [Pulse Count] displays the pulse count. (The pulse count is shown in the pulse-train control mode.)
- Current Rate The command value of electrical current is shown as a percentage of the rated current. Touch [Rated Current Ratio] to display.
- Current The command value of electrical current is shown. Touch [Current] to display the command value.
- Alarm Code The applicable alarm code is shown.
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- MotorVoltage The voltage of the motor power supply is shown.
- PCB Temperature The PCB temperature is shown.

SCON-CA/CB IO monitor screen

Input				Output			
Name	Stat	Name	Stat	Name	Stat	Name	Stat
PC1	●	-	●	PM1	●	PZONE	●
PC2	●	BKRL	●	PM2	●	RMDS	●
PC4	●	RMOD	●	PM4	●	HEND	●
PC8	●	HOME	●	PM8	●	PEND	●
PC16	●	*STP	●	PM16	●	SV	●
PC32	●	CSTR	●	PM32	●	*EMGS	●
-	●	RES	●	MOVE	●	*ALM	●
-	●	SON	●	ZONE1	●	LOAD	●

●:OFF ○:ON

Mon Main IO Mon Data Mon

Menu1 LC Mon

Touching [Mon Main] switches to the main monitor display

Touching [Data Mon] changes the display to show data such as the current position and motor voltage. Touching [LC Mon] changes the display to show data such as the current position and force feedback.

Touching [Axis No.] switches the screen to one where you can select an axis.

- Input The status of each input port is shown. ON is lit. OFF is unlit.
- Output The status of each output port is shown. ON is lit. OFF is unlit.

SCON-CA/CB Data monitor screen

Monitor		Axis No. 00
Position	0.00 mm	Servo
Velocity	0.00 mm/s	Home
Current Rate	0.00 %	Current
AlarmCode		MotorVoltage
		271.00 V
		PCB Temperature
		46.00 °C
Overload Level	0 %	Mon Main IO Mon Data Mon
Menu1		LC Mon

Touching [Mon Main] switches to the main monitor display

Touching [IO Mon] changes the display to one showing only I/Os.


Touching [LC Mon] changes the display to show data such as the current position and force feedback.

Touch [Current] to display the current.

Touch [Rated Current Ratio] to display the current rate.

- Position The current position is shown.
- Velocity The speed is shown.
- Pulse count The pulse count is shown. Touching [Pulse Count] displays the pulse count. (The pulse count is shown in the pulse-train control mode.)
- Current Rate The command value of electrical current is shown as a percentage of the rated current. Touch [Rated Current Ratio] to display.
- Current The command value of electrical current is shown. Touch [Current] to display the command value.
- AlarmCode The applicable alarm code is shown.
- Overload Level The overload level ratio (%) should be shown.
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- MotorVoltage The voltage of the motor power supply is shown.
- PCB Temperature The PCB temperature is shown.

SCON-CA/CB LC monitor screen

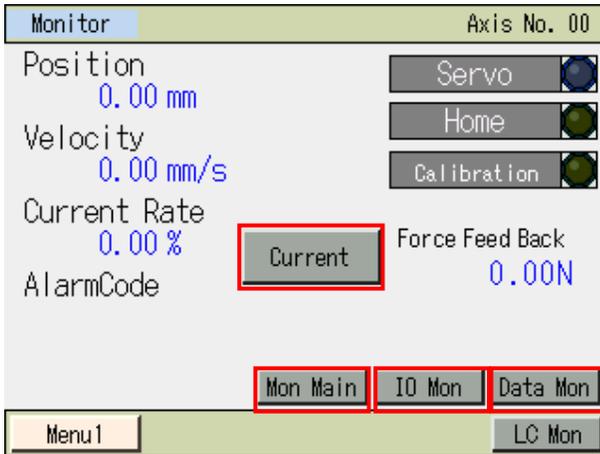

Touching [Mon Main] switches to the main monitor display

Touching [IO Mon] changes the display to one showing only I/Os.

Touching [Data Mon] changes the display to show data such as the current position and motor voltage.

Touch [Current] to display the current.

Touch [Rated Current Ratio] to display the current rate.

- Position The current position is shown.
- Velocity The speed is shown.
- Pulse count The pulse count is shown. Touching [Pulse Count] displays the pulse count. (The pulse count is shown in the pulse-train control mode.)
- Current Rate The command value of electrical current is shown as a percentage of the rated current. Touch [Rated Current Ratio] to display.
- Current The command value of electrical current is shown. Touch [Current] to display the command value.
- Alarm Code The applicable alarm code is shown.
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- Calibration The calibration status of the load cell is shown. Lit, if calibration of the load cell has been completed.
- Force feedback The force fed back from the load cell is shown.

SCON-CAL, MSCON IO monitor screen

Input				Output			
Name	Stat	Name	Stat	Name	Stat	Name	Stat
PC1	●	-	●	PM1	●	PZONE	●
PC2	●	BKRL	●	PM2	●	RMDS	●
PC4	●	RMOD	●	PM4	●	HEND	●
PC8	●	HOME	●	PM8	●	PEND	●
PC16	●	*STP	●	PM16	●	SV	●
PC32	●	CSTR	●	PM32	●	*EMGS	●
-	●	RES	●	MOVE	●	*ALM	●
-	●	SON	●	ZONE1	●	LOAD	●

●:OFF ○:ON

Mon Main IO Mon Data Mon

Menu1

Touching [Mon Main] switches to the main monitor display

Touching [Data Mon] changes the display to show data such as the current position.

Touching [Axis No.] switches the screen to one where you can select an axis.

- Input The status of each input port is shown. ON is lit. OFF is unlit.
- Output The status of each output port is shown. ON is lit. OFF is unlit.

SCON-CAL, MSCON Data monitor screen

Monitor		Axis No. 00
Position	0.00 mm	Servo
Velocity	0.00 mm/s	Home
Current Rate	0.00 %	Current
AlarmCode		PCB Temperature
Overload Level	0 %	46.00 °C
		Mon Main IO Mon Data Mon
Menu1		

Touching [Mon Main] switches to the main monitor display

Touching [IO Mon] changes the display to one showing only I/Os.

Touch [Current] to display the current.
Touch [Rated Current Ratio] to display the current rate.

- Position The current position is shown.
- Velocity The speed is shown.
- Pulse count The pulse count is shown. Touching [Pulse Count] displays the pulse count. (The pulse count is shown in the pulse-train control mode.)
- Current Rate The command value of electrical current is shown as a percentage of the rated current. Touch [Rated Current Ratio] to display
- Current The command value of electrical current is shown. Touch [Current] to display the command value.
- Alarm Code The applicable alarm code is shown.
- Overload Level The overload level ratio (%) should be shown.
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- PCB Temperature The PCB temperature is shown.

5.6.2 Maintenance Information Screen

Type with No Fan Unit Equipped



Touching [Change Axis] can reset the values of the Total Moved Count and Total Run Dist. [Refer to 5.6.2.1, "Operating Method When Replacing the Actuator."]

[Info Edit] cannot be used.

Type with Fan Unit Equipped



Touching [Change Axis] can reset the values of the Total Moved Count and Total Run Dist. [Refer to 5.6.2.1, "Operating Method When Replacing the Actuator."]

Touching [Change FAN] can reset the FAN Total Driving. [Refer to 5.6.2.2, "Operating Method When Replacing the FAN ."]

- Total number of movements The cumulative total number of actuator movements is shown.
- Total travelled distance The cumulative total distance travelled by the actuator is shown.
- FAN Total Driving Time Shows the total driving time of the fan on the controller. (The total driving time is displayed only if the controller has the FAN)

[Target value for Total Number of Movements and Total Travelled Distance]

You can set target value for total number of movements and total travelled distance in the parameters specified below, to cause an alarm to generate when each target value is exceeded.

Parameter No.	Name
147	Target value for total number of movements
148	Target value for total travelled distance

Message-level alarms

Alarm code	Name	Description
4E	Movements target value exceeded	This occurs when the total number of movements reaches the target value set in parameter No. 147.
4F	Travelled distance target value exceeded	This occurs when the total travelled distance reaches the target value set in parameter No. 148.

[Example of using number of cumulative travel distances]

For example when using the RCPW robot type actuator, if the travel distance within three months exceeds 300km, the scraper section should be greased during the periodic inspection after every 300km of travel. (If distance does not exceed 300km, grease every 3 months)

In this case, if parameter No. 148 is set to "300" at the first operation, the grease lubrication timing can be notified with an alarm when 300km of travel is exceeded.

If the next 300km travel distance (i.e., 600 or 900 and so forth) timing for grease lubrication is added to parameter No. 148 after greasing, the grease lubrication timing can be notified continuously.

5.6.2.1 Operating Method When Replacing the Actuator


The following shows the method that reset the Total Moved Count and Total Run Dist. at the time of replacing the actuator that connects to the controller with the maintenance information function.

(Note) Do not implement this procedure when replacing only the motor unit.



Touch [Change Axis] to display the password entry screen.


Enter '5119', and then touch [ENT].

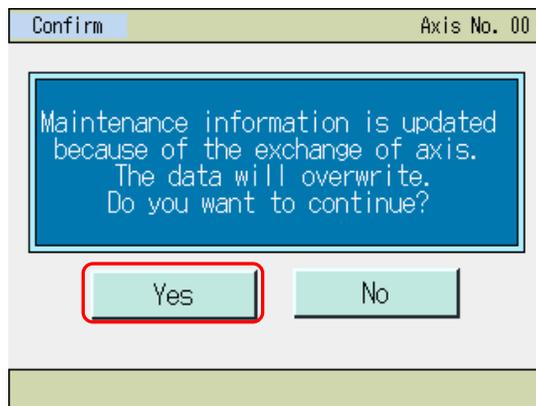

The actuator replacement confirmation screen appears.

Touch [Yes].


The pairing ID clear confirmation screen appears, if the actuator is equipped with a battery-less absolute encoder.

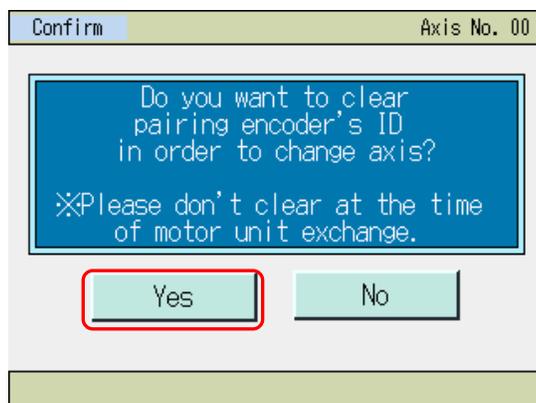

The controller has the mechanism that if the encoder ID is different after checking the ID, then the absolute encoder error is output.

When replacing with the actuator which is absolutely reset, the last ID (pairing ID) of the actuator must be cleared.

Touch [Yes].

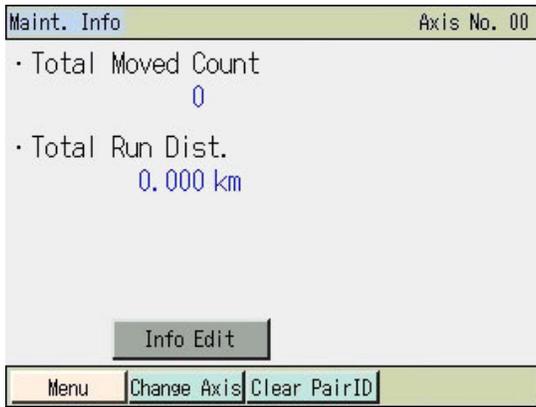

The Total Moved Count and Total Run Dist. are reset to 0.

In the actuator which is equipped with the battery-less absolute encoder, the pairing ID is cleared.

With that, the preparatory work of actuator replacement is finished. Turn off the power of the controller, and then replace the actuator.


* It is not possible to change the serial number and manufacturing information of the actuator which can be changed in the PC supported software.

5.6.2.2 Operating Method When Replacing the FAN



Touch [Change FAN] to display the password entry screen.

Enter '5119', and then touch [ENT].

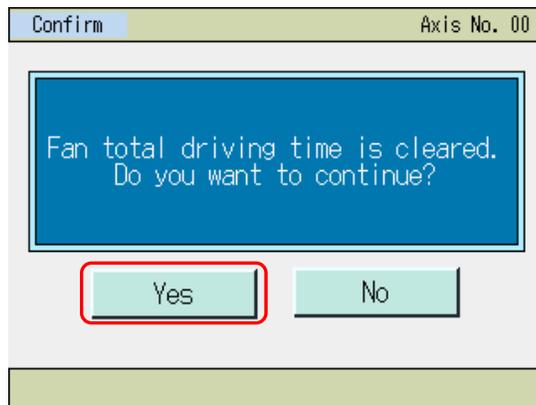

The FAN Total Driving clear confirmation screen appears.

Touch [Yes].




The FAN Total Driving time is reset to 0.

5.6.3 Time Setting Screen for Controller

In the controller with a calendar function, the time setting for the controller can be set.


[How to Set Time]

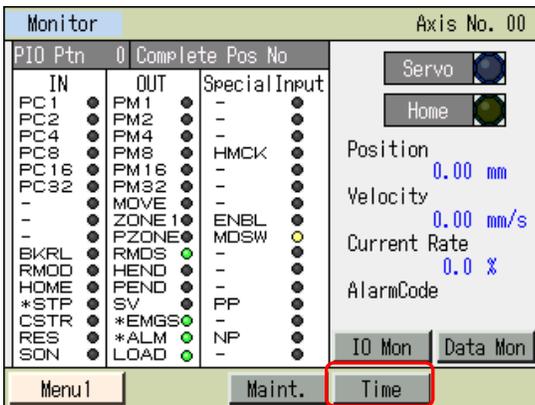

Touching [Time] displays the time setting screen.




Controller's time is displayed.
Touch [Time Edit].

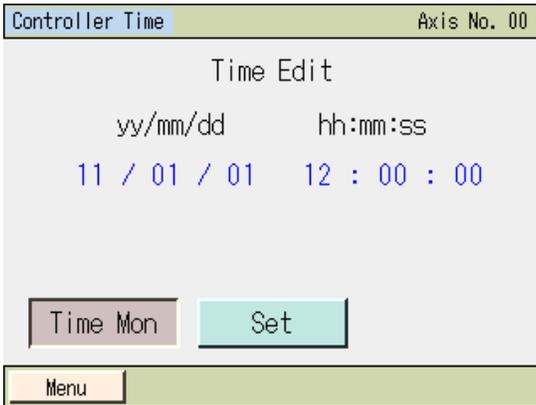

Touch the value of year, month, day, hours, minutes or seconds you want to change.



The numeric key pad appears. Enter a desired value, and then press [ENT].

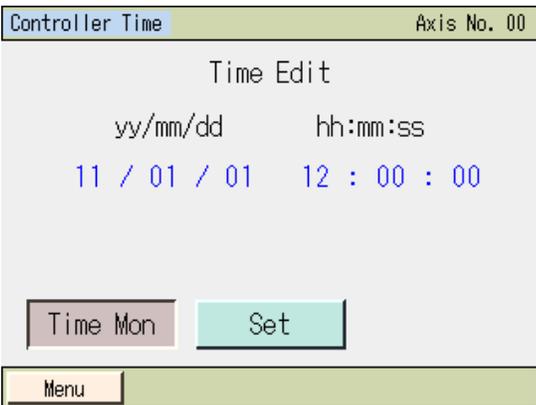

Touch [Set].




The time of the controller is changed.

Touching [Back] can go back to the controller time setting screen.

Touching [Inquiry] displays the inquiry screen.


5.7 Position Editing

Set/edit the target position, speed, acceleration, deceleration and other data related to positions. You can move the axis by jogging or inching.

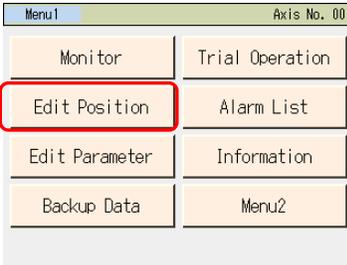

Touch [Edit Position] on the Menu 1 screen.


If a position edit password is other than "0000," the password entry screen appears.

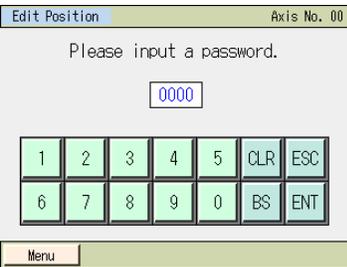

Enter the position edit password.
Touch [ENT].

The default position edit password is "0000."
For how to change the position edit password, refer to 5.17, "Environment setting [Change Pos Edit Password]."


A position data table appears.

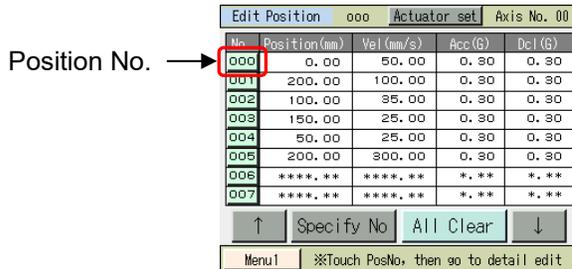

Touch Specify No. to set the position number you want to set, and a table showing the position number you have just set appears.

To set data other than the target position, speed, acceleration and deceleration shown in the table, touch other position number such as "000."

Data of the selected position number appears.

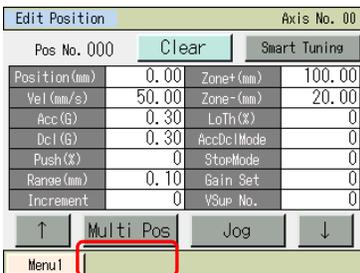

Touching [Multi Pos] returns the screen to the position data table display.

5.7.1 Position Data

Position data table screen

No.	Position (mm)	Vel (mm/s)	Acc (G)	Dcl (G)
000	0.00	50.00	0.30	0.30
001	200.00	100.00	0.30	0.30
002	100.00	35.00	0.30	0.30
003	150.00	25.00	0.30	0.30
004	50.00	25.00	0.30	0.30
005	200.00	300.00	0.30	0.30
006	****. **	****. **	*. **	*. **
007	****. **	****. **	*. **	*. **

↑ Specify No All Clear ↓

Menu1 ※Touch PosNo, then go to detail edit

Data display screen showing the selected position number

Position (mm)	0.00	Zone+ (mm)	100.00
Vel (mm/s)	50.00	Zone- (mm)	20.00
Acc (G)	0.30	LoTh (%)	0
Dcl (G)	0.30	AccDcl Mode	0
Push (%)	0	Stop Mode	0
Range (mm)	0.10	Gain Set	0
Increment	0	VSUP No.	0

↑ Multi Pos Jog ↓

Menu1

The items set in the position data table include target position, speed, acceleration, deceleration, push, positioning band, incremental, zone+, zone-, threshold, acceleration/deceleration mode, stop mode and command mode.

The settings of zone+, zone-, threshold, acceleration/deceleration mode and stop mode are enabled or disabled depending on the controller type, as shown in the table.

Model	Zone +/-	AccDcl Mode			Stop mode		Gain set	Vibration Control
		Trapezoid	S-motion	Primary delay	Full Servo	Automatic servo OFF		
ERC2	PIO pattern: 3	○	×	×	○	○	×	×
ERC2-SE	-	○	×	×	○	×	×	×
ERC3	PIO pattern: 2	○	○	○	○	○	×	×
ERC3 PIO Converter	PIO pattern: 0, 1, 2, 4, 5	○	○	○	○	○	×	×
PCON-C/CF	PIO pattern: 0, 1, 2, 4, 5	○	×	×	○	○	×	×
-CA/CFA/CB/CFB	PIO pattern: 0, 1, 2, 4, 5	○	○	○	○	○	×	×
-CY	PIO pattern: 1	○	×	×	○	○	×	×
-SE	-	○	×	×	○	×	×	×
ACON-C	PIO pattern: 0, 1, 2, 4, 5	○	○	○	△	○	×	×
-CA/CB	PIO pattern: 0, 1, 2, 4, 5	○	○	○	△	○	○	○
-CY	PIO pattern: 1	○	○	○	△	○	×	×
-SE	-	○	○	○	△	×	×	×
DCON-CA/CB	PIO pattern: 0, 1, 2, 4, 5	○	○	○	△	○	×	×
SCON-C	PIO pattern: 0, 1, 2, 4, 5	○	○	○	△	○	×	×
SCON -CA/CAL/CB	PIO pattern: 0, 1, 2, 4, 5, 6, 7	○	○	○	△	○	○	○
MSCON	-	○	○	○	△	○	○	○

- (1) No.
The position data number is shown.

Warning: Be sure to specify absolute coordinates on PCON-C/CF/CA/CFA/CB/CFB, ACON-C/CA/CB, DCON-CA/CB, ROBONET, SCON-C/CA/CAL/CB, MCON and MSCON (Remote I/O mode) controllers of solenoid valve mode 2, or PCON-CY/CYB, ACON-CY/CYB and DCON-CYB controllers of solenoid valve mode 1 and RCP6S, ERC3 PIO Converter.
If incremental coordinates are specified on these controllers, a position data error occurs.
Also note that completion of push motion cannot be determined when the push is specified if incremental coordinates are specified.

- (2) Target position [mm]
Enter the target position to move the actuator to.
- Absolute coordinate specification : Enter the target position you want to move the actuator to, based on the distance from the home. A negative value cannot be entered.
 - Incremental coordinate specification: Enter the target position you want to move the actuator to, based on the distance from the current position. A negative value can also be entered.
(Negative direction on displayed coordinate system)

- (3) Speed [mm/sec]
Enter the speed at which to move the actuator.
The default value varies depending on the actuator type.
(Note) For SCON-CA/CAL/CB, PCON-CA/CFA/CB/CFB/CYB, ACON-CA/CB/CYB, DCON-CA/CB/CYB, ERC3, RCP6S, MCON and MSCON, an alarm will be displayed if the set value is lower than the minimum velocity.

- (4) Acceleration/deceleration [G]
Enter the acceleration/deceleration at which to move the actuator.
Basically you should set acceleration/deceleration not exceeding the rated value shown in the catalog. The input range permits entry of values larger than the rated value shown in the catalog, but this is because "shorter tact time when the transferring mass is significantly lighter than the rated value" is assumed. If the load vibrates during acceleration/deceleration to present problems, decrease the value set here.

(Reference) Acceleration is explained. The same concept applies to deceleration.
1 G = 9800 mm/s²: Acceleration at which the actuator can increase its speed up to 9800 mm/s per second.
0.3 G: Acceleration at which the actuator can increase its speed up to 2940 mm/s (9800 mm/s × 0.3) per second.

(Note) For SCON-CA/CAL/CB, PCON-CA/CFA/CB/CFB/CYB, ACON-CA/CB/CYB, DCON-CA/CB/CYB, ERC3, RCP6S, MCON and MSCON, an alarm will be displayed if the set value exceeds the rated acceleration/deceleration.



Caution: Acceleration/deceleration setting

- (1) Set accelerations/decelerations not exceeding the rated acceleration/deceleration specified in the catalog or in the instruction manual of the actuator. If any acceleration/deceleration is set that exceeds the rated acceleration/deceleration, the life of the actuator may be significantly reduced.
- (2) If the actuator or work part receives impact or generates vibration, lower the acceleration/deceleration. If the system is used continuously with the actuator or work part receiving impact or generating vibration, the life of the actuator may be significantly reduced.
- (3) If the load transferred by the actuator is significantly lighter than the rated payload capacity, you may be able to set accelerations/decelerations exceeding the rating. If this is the case, the tact time can be reduced, so contact IAI. When contacting IAI, tell us the weight, shape and installation method of your work part and installation condition (horizontal/vertical) of your actuator.

(5) Push

Select "Positioning operation" or "Push-motion operation."

The factory setting is 0.

0 : Positioning operation is performed.

Other than 0: Push-motion operation with the entered value as the current-limiting value is performed.

(6) Positioning band

What this setting means is different between "Positioning operation" and "Push-motion operation."

"Positioning operation":


Define how far before the target position you want to turn the completion signal ON.

The factory setting is 0.1 mm.

For the positioning operation

(except for the solenoid valve mode below):


Increasing the value of positioning band quickens the start of the next sequence operation, so the tact time can be reduced. Set an optimal value by considering the balance of the entire system.

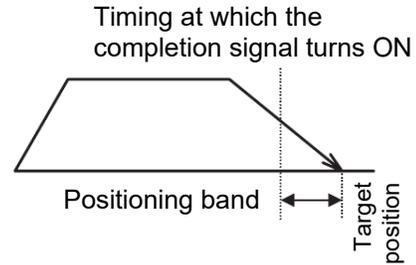

For the positioning operation

(of the solenoid valve mode below):


Note that on PCON-C/CF/CA/CFA/CB/CFB, ACON-C/CA/CB, DCON-CA/CB, SCON-C/CA/CAL/CB, ROBOTNET, ERC3 PIO Converter and RCP6S, MCON, MSCON (Remote I/O mode) controllers of solenoid valve mode 2 or PCON-CY/CYB, ACON-CY/CYB and DCON-CYB controllers of solenoid valve mode 1, set the band after which the completion signal turns ON.

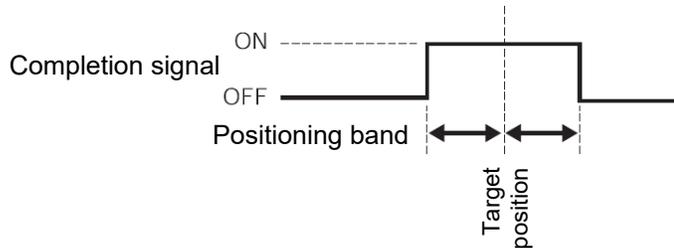

"Push-motion operation":

Define the maximum push distance from the target position in push-motion operation.

Set an appropriate positioning band by considering the mechanical variation of the work part, by making sure positioning will not complete before the actuator contacts the work part.

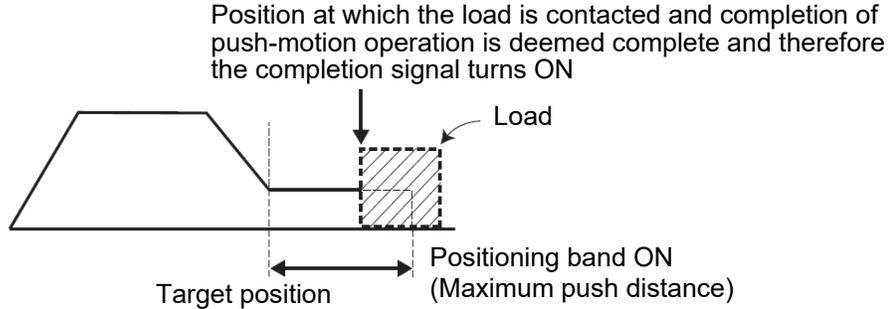

(Note) Depending on the combination with the actuator, PCON-CA/CFA/CB/CFB, SCON-CA/CAL/CB and ERC3 may not be able to set a value smaller than the minimum positioning width.

(7) Incremental

Specify absolute coordinates or incremental coordinates.

The factory setting is 0.

0: Absolute coordinate specification

1: Incremental coordinate specification



Warning: Be sure to specify absolute coordinates on PCON-C/CF/CA/CFA/CB/CFB, ACON-C/CA/CB, DCON-CA/CB, SCON-C/CA/CAL/CB, ROBONET, ERC3 PIO Converter, RCP6S, MCON and MSCON (Remote I/O mode) controllers of solenoid valve mode 2, or PCON-CY/CYB, ACON-CY/CYB and DCON-CYB controllers of solenoid valve mode 1.

(Note) Incremental coordinates are specified on these controllers, a position data error occurs.


(8) Zone +/-

Define, for the standard type, the zone in which the zone output signal turns ON. These parameters can be set differently for each target position.


[Setting example]

No.	Position [mm]	Zone + [mm]	Zone - [mm]	Remarks
0	5.00	100.00	0.00	Backward end
1	380.00	400.00	300.00	Forward end
2	200.00	250.00	150.00	Intermediate position


Movement command to backward end

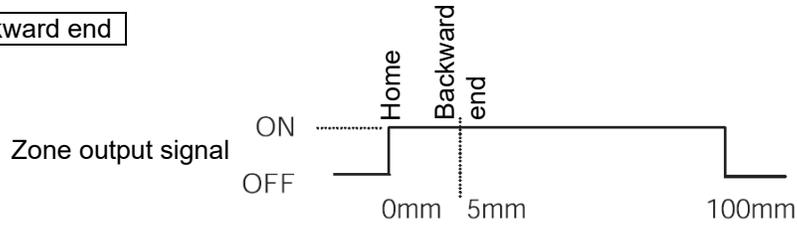

Movement command to forward end

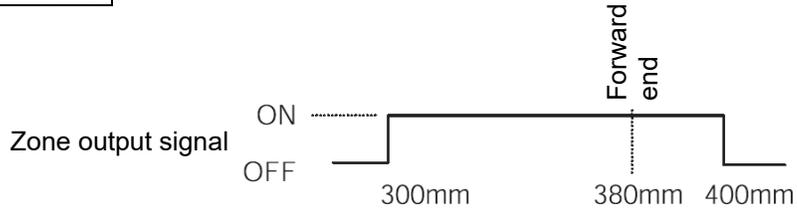

Movement command to intermediate position

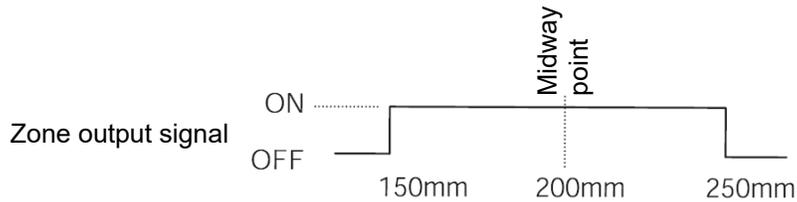

(9) Threshold

A load output signal (PIO) is output if the command torque exceeds the value (%) set in "Threshold" inside the verification range.

The verification range is set by "Zone+/Zone-."

It is used to determine if press-fitting action was performed successfully.

* For details, refer to the instruction manual of each controller.

(10) Acceleration/deceleration mode

Define the acceleration/deceleration pattern.


The factory setting is 0.

0: Trapezoid pattern

1: S-motion

2: Primary delay filter

Trapezoid pattern

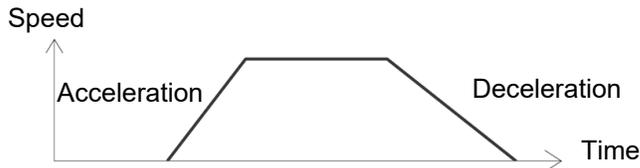


- * Set the acceleration and deceleration in the "Acc" and "Dcl" fields of the position table.

S-motion

The acceleration curve rises gradually at first and then suddenly shoots up in the middle.

Use this mode if you want to set high acceleration/deceleration to meet the required tact time, but want to move the actuator gradually at the start of movement and immediately before stopping.

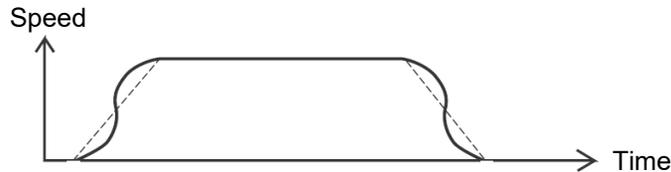

- * The S-motion level is set by parameter No. 56 [S-motion ratio setting]. The setting unit is %, while the setting range is 0 to 100.

(The graph above assumes that the parameter is set to 100%.)

If 0 is set, the S-motion control is disabled.


Note that the setting made here is not reflected in jogging or inching feed performed from a PC or teaching pendant.

(Note) This setting is not available on ERC2 and PCON-C/CF/CY/SE controllers. On these controllers, parameter No. 56 is reserved.

Primary delay filter

The acceleration/deceleration curve becomes more gradual than linear acceleration/deceleration (trapezoid pattern).

Use this mode if you don't want to apply fine vibration to the work part during acceleration/deceleration.

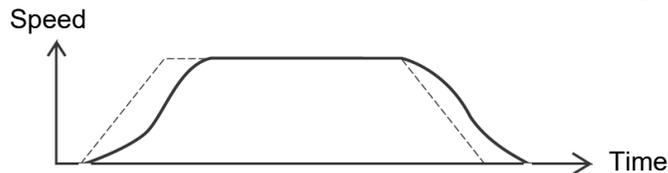

- * The primary delay level is set by parameter No. 55 [Primary filter time constant for position commands]. The setting unit is 0.1 msec, while the setting range is 0.0 to 100.0.

If 0 is set, the primary delay filter is disabled.

Note that the setting made here is not reflected in jogging or inching feed performed from a PC or teaching pendant.

(Note) This setting is not available on ERC2 and PCON-C/CF/CY/SE controllers. On these controllers, parameter No. 55 is reserved.

(11) Stop mode


Define the power-saving mode to be used while the actuator is standing by after completion of positioning to the target position set in the "Position" field of the applicable position number.

- 0: Disable power-saving mode * The factory setting is 0 (Disable).
- 1: Auto servo OFF mode, with the delay time defined by parameter No. 36
- 2: Auto servo OFF mode, with the delay time defined by parameter No. 37
- 3: Auto servo OFF mode, with the delay time defined by parameter No. 38
- 4: Full servo control mode

Auto servo OFF mode

The servo is turned OFF automatically upon elapse of a specified time after completion of positioning. (Since holding current does not flow, power consumption is reduced.)

When the PLC issues the next movement command, the servo is turned ON and then the actuator starts moving.

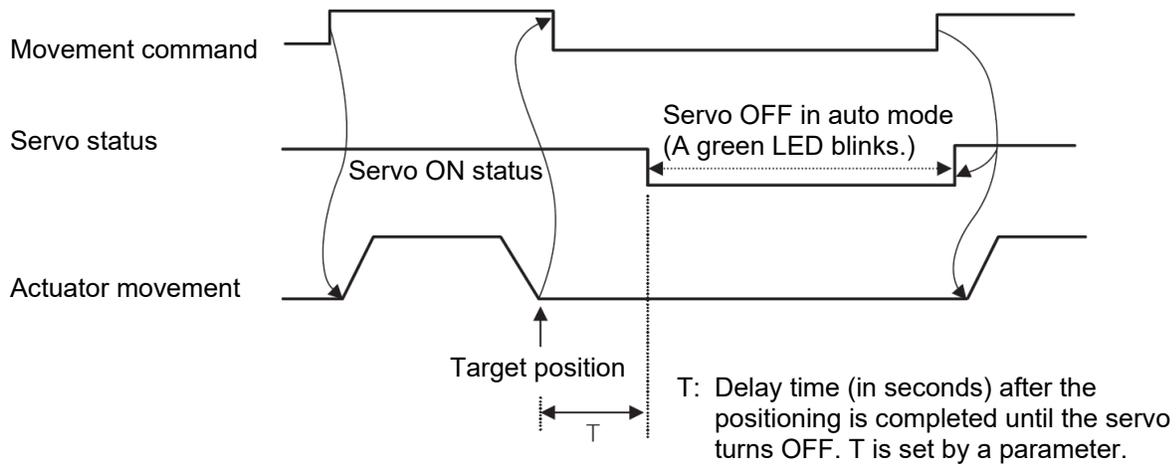

(Note) For RACON and RPCON cannot be setting.

Full servo control mode: selectable for the PCON (for the pulse motor) controller

The holding current can be decreased by servo-controlling the pulse motor.

Although the rate of decrease in holding current varies depending on the actuator model, loading condition, etc., the holding current decreases to approx. one-half to one-quarter.

Note that the servo remains ON, meaning that unwanted position shift does not occur.

The actual holding current can be checked on the current monitor screen of the PC software.

5.7.2 Entering New Data

You can enter new position data in one of four ways.

- (1) Numerical input --- Enter position data directly as numerical values from the numerical keypad on the teaching pendant. (Example of entry: 5.7.2 (2) 2))
- (2) Direct teaching --- Turn off the servo control, move the slider by hand to the target position, and then acquire the achieved position (current position) into the position table and specify that position. (Example of entry: 5.7.2 (2) 3))
- (3) Jogging --- Use [Jog+] or [Jog-] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position. (Example of entry: 5.7.2 (2) 4))
- (4) Inching --- Use [Jog+] or [Jog-] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position. (Example of entry: 5.7.2 (2) 5))
Touching [Inching+] or [Inching-] once moves the actuator by the specified feed pitch (0.01, 0.10, 0.50, 1.00 or 5.00 (mm)). Touching and holding the key for 2 seconds will start jogging movement at 1 mm/sec. Thereafter, the speed increases every second. This way, the actuator can be moved more finely than when jogged.

 **Warning:** *To enter position data after the power is turned on, or enter position data beforehand using the method of (2), (3) or (4), you must perform home return first. (Incremental specification)
Before home return is completed, jogging/inching is possible only to the mechanical end. Operate the actuator by visually checking for potential interference.*


(1) Basic operation

[Data entry on the position data table screen]

You can set the target position, speed, acceleration and deceleration in the position data table.

Touch [↑] and [↓] to display the table showing the desired position data number.

Or, touch [Specify No] and set the desired position data number to display the table.

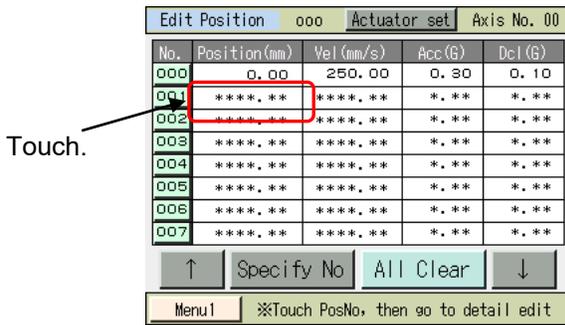

Touch a value in the target position or other field of the desired position data number.

When the numeric keypad appears, key in the desired value and touch [ENT], and the value will be entered.

Touching Axis No. switches to the axis selection screen.

Touching [All Clear] clears all position data. (Example of entry: 5.7.4 (1) 2))


[Important]

Do not touch [↑] key or [↓] key too fast to switch the windows.

'0' is occasionally shown to the data values that are already registered.

The data is not lost even though '0' is displayed. Touch [↑] key and [↓] key to switch the window and come back, and you will find the data showing the right values.

[Data entry on the data display screen of the selected position number]
 All items can be set on the data display screen of the selected position number.

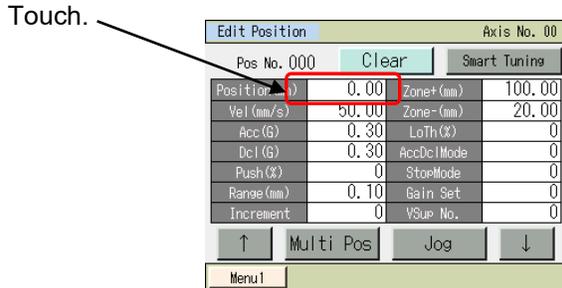

Touch a value in the target position or other desired field.
 When the numeric keypad appears, key in the desired value and touch [ENT], and the value will be entered.


Touch [↑] or [↓] to change to the screen of the previous or next position number.
 Touching [Multi Pos] returns the screen to the position data table display.

Touching Axis No. switches to the axis selection screen.

Touching [Jog] changes to the jog operation screen where you can acquire position data via jogging operation.

[Jog operation]

You can acquire position data via jogging operation.

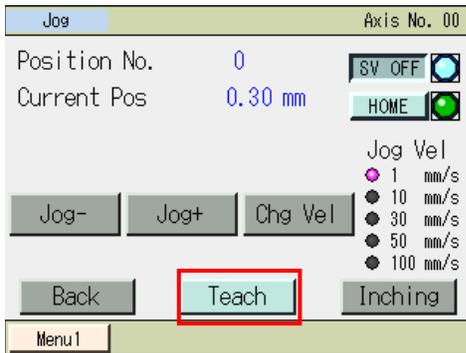

Operation on the jog screen


- [Jog-], [Jog+]: The axis jogs while each button is touched. [Jog-] moves the axis in the negative direction, while [Jog+] moves the axis in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is OFF turns on the axis servo and \bigcirc becomes lit. Touching [SV OFF] while the servo is ON turns off the axis servo and \bigcirc becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and \bigcirc becomes lit.
- [Chg Vel]: The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Chg Vel] is touched.
- [Inching]: Touching [Inching] changes to the inching screen.

Position acquisition operation

Touch [Teach]. A confirmation screen appears.


You can touch [\uparrow] or [\downarrow] to change the position number.

Touching [Yes] acquires the current position.

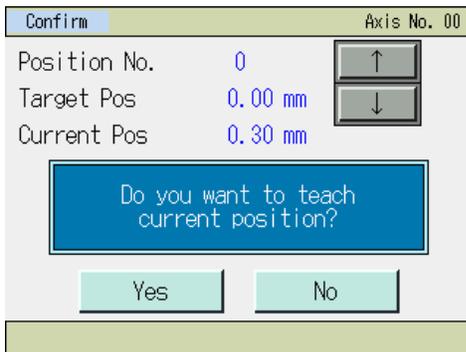

[Inching operation]

You can acquire position data via inching operation.

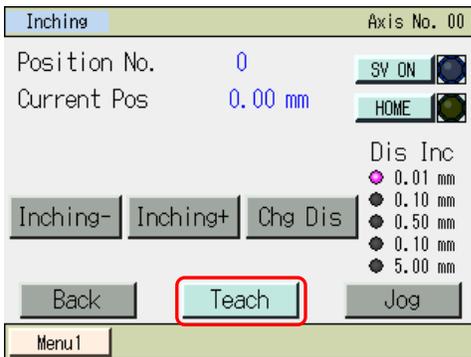

Operation on the inching screen


- [Inching-], [Inching+]: Touching each button once moves the axis by inching. [Inching-] moves the axis in the negative direction, while [Inching+] moves the axis in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is OFF turns on the axis servo and \bigcirc becomes lit. Touching [SV OFF] while the servo is ON turns off the axis servo and \bigcirc becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and \bigcirc becomes lit.
- [Chg Dis]: The inching distance changes in the order of 0.01, 0.10, 0.50, 1.00 and 5.00 mm every time [Chg Dis] is touched.
- [Jog]: Touching [Jog] changes to the jog screen.

Position acquisition operation

Touch [Teach]. A confirmation screen appears.







You can touch [↑] or [↓] to change the position number.

Touching [Yes] acquires the current position.

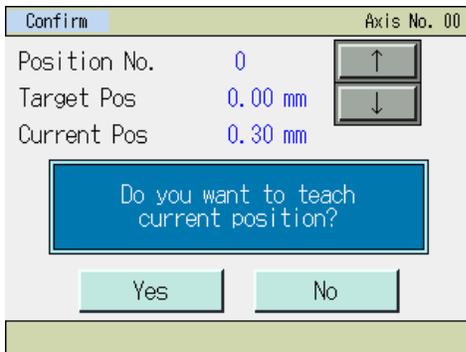

(2) Examples of position setting operations
Respective operations are explained by giving specific examples.

1) Home return

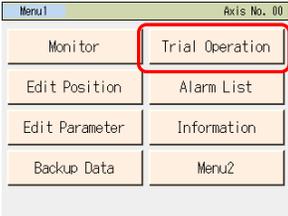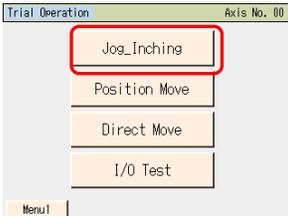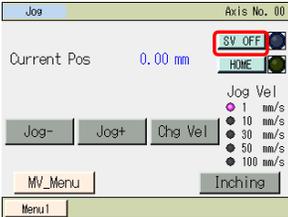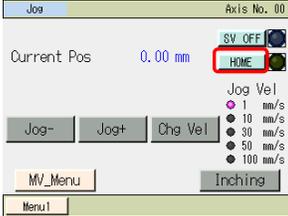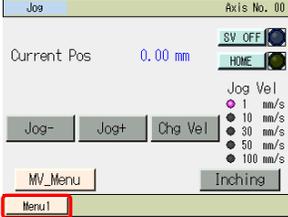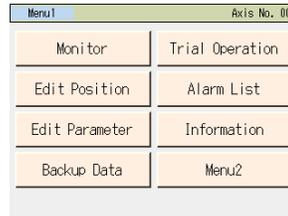No.	Operation	Screen	Remarks
1	Touch [Trial operation].		
2	Touch [Jog_Inching].		
3	Check the screen and if the servo is OFF, touch [SV ON].		○ indicating a servo ON status on the screen becomes lit.
4	Touch [HOME].		
5	Touch [Menu1].		
6	The display returns to the Menu 1 screen.		

2) Numerical input

Example 1	Move back and forth between the two points of 30 mm and 250 mm at a speed of 300 mm/sec.
-----------	--

No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Touch the target position of the desired position number. In this example, data is entered for No. 0. When the numerical keypad appears, touch [3], [0] and then touch [ENT].		To reenter the value, touch [ESC].
6			When registering a new position data, the default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.

No.	Oeration	Screen	Remarks
7	Next, touch the velocity of position No. 0.		
8	When the numerical keypad appears, touch [3], [0], [0] and then touch [ENT].		
9	Next, touch the target position of position No. 1. When the numerical keypad appears, touch [2], [5], [0] and then touch [ENT].		To reenter the value, touch [ESC].
10			When registering a new position data, the default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.
11	Next, touch the velocity of position No. 1.		
12	When the numerical keypad appears, touch [3], [0], [0] and then touch [ENT].		


No.	Operation	Screen	Remarks
13	Touch [Menu1].		
14			

Example 2 Move back and forth between the two positions of 10 mm and 80 mm via push-motion operation (push width: 5 mm).

No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Touch the target position of the desired position number. In this example, data is entered for No. 0. When the numeric keypad appears, touch [1], [0] and then touch [ENT].		To reenter the value, touch [ESC].
6			When registering a new position data, the default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.



No.	Operation	Screen	Remarks
7	<p>Next, touch the target position of position No. 1.</p> <p>When the numeric keypad appears, touch [8], [0] and then touch [ENT].</p>		To reenter the value, touch [ESC].
8			<p>When registering a new position data, the default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc.</p> <p>In this example, the default value is 100 mm/s.</p>
9	<p>Next, touch No. "001" of position No. 1.</p>		
10	<p>Touch the value in the Push.</p> <p>When the numerical keypad appears, touch [3], [0] and then touch [ENT].</p>		To reenter the value, touch [ESC].
11	<p>Touch the value for the positioning band.</p> <p>When the numerical keypad appears, touch [5] and then touch [ENT].</p>		To reenter the value, touch [ESC].
12	Touch [Menu1].		

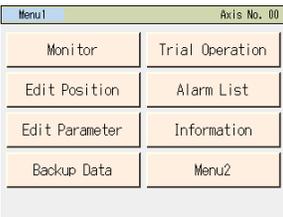No.	Operation	Screen	Remarks
13			





Example 3 Move from 30 mm to 40 mm and to 50 mm by pitch feed based on incremental coordinate specification.

No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Touch the target position of the desired position number. Enter data for No. 0. When the numerical keypad appears, touch [3], [0] and then touch [ENT].		To reenter the value, touch [ESC].
6			When registering a new position data, the default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.

No.	Operation	Screen	Remarks
7	<p>Next, touch the target position of position No. 1.</p> <p>When the numerical keypad appears, touch [1], [0] and then touch [ENT].</p>		To reenter the value, touch [ESC].
8			When registering a new position data, the default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.
9	Next, touch No. [001] of position No. 1.		
10	<p>Touch the value for the Increment.</p> <p>When the numerical keypad appears, touch [1] and then touch [ENT].</p>		
11	Touch [Menu1].		
12			

- Direct teaching (move the slider to the target position and then acquire the achieved position (current position) into the position data table and specify that position)







To perform direct teaching immediately after turning on the power, home return must be performed first. (Refer to 5.7.2 (2) 1)) (Incremental specification)

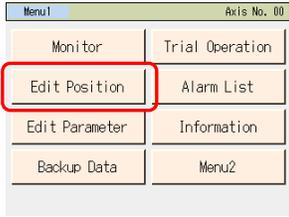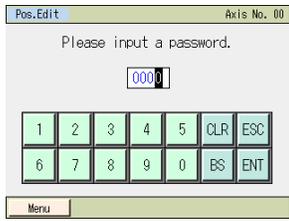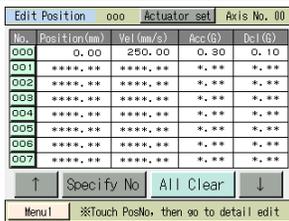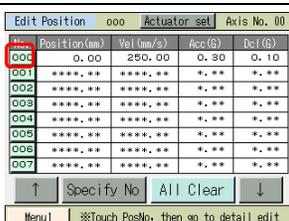No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		If data is already entered, the current data is overwritten. Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "000" of position No. 0.		
6	Touch [Jog].		

No.	Operation	Screen	Remarks
7	If the servo is currently ON, touch [SV OFF] to turn off the servo. Manually move the slider to the target position.		
8	Touch [Teach].		
9	Touch [Yes].		The default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc. <i>(Note) If a position is acquired before home return, the error message "Home return not yet complete" appears. On the error message screen, touch [Back] to return to the jog screen, and then perform home return.</i>
10	Touch [Menu1].		
11			

- Jogging, Use [Jog+] or [Jog-] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
Note that if the maximum speed is smaller than the specified speed, the speed is clamped at the maximum speed.






To perform jog operation immediately after turning on the power, home return must be performed first. (Refer to 5.7.2 (2) 1)) (Incremental specification)

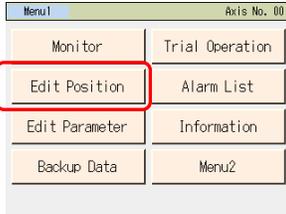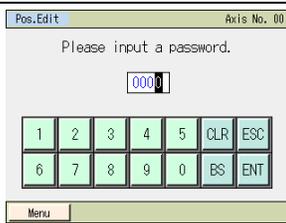
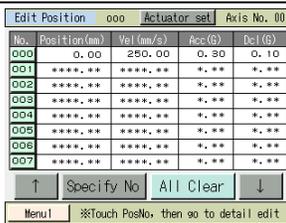
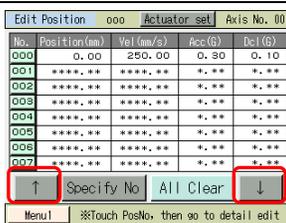
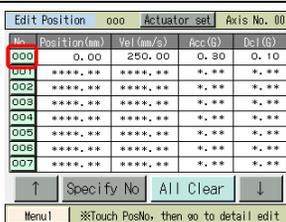
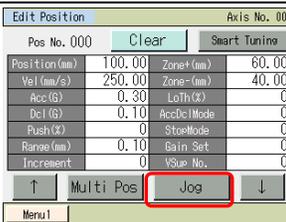
No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		If data is already entered, the current data is overwritten. Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "000" of position No. 0.		
6	Touch [Jog].		

No.	Operation	Screen	Remarks
7	<p>Touch [Chg Vel] to select a desired jog speed.</p> <p>Touch [Jog-] and [Jog+] to move the axis to the target position.</p>		<p>If the servo is OFF, touch [SV ON] to turn on the servo.</p>
8	Touch [Teach].		
9	Touch [Yes].		<p>The default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc.</p> <p><i>(Note) If a position is acquired before home return, the error message "Home return not yet complete" appears. On the error message screen, touch [Back] to return to the jog screen, and then perform home return.</i></p>
10	Touch [Menu1].		
11			

- Inching, Use [Inching+] or [Inching-] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.

To perform inching operation immediately after turning on the power, home return must be performed first. (Refer to 5.7.2 (2) 1)) (Incremental specification)

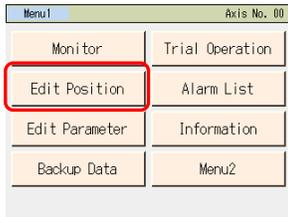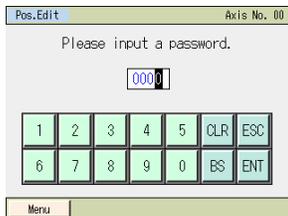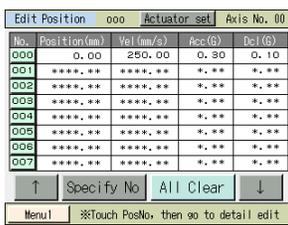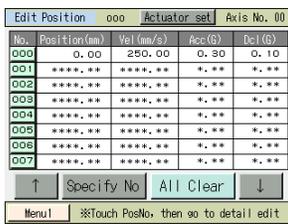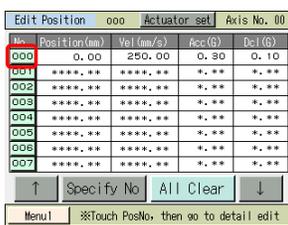No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		If data is already entered, the current data is overwritten. Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "000" of position No. 0.		
6	Touch [Jog].		

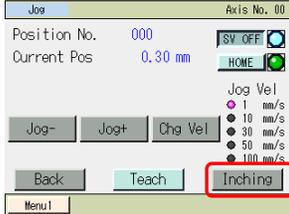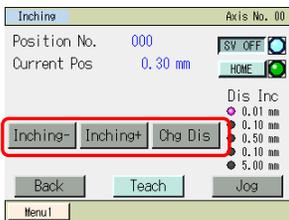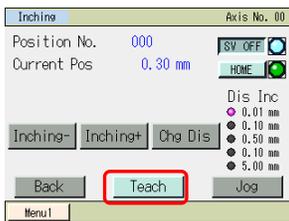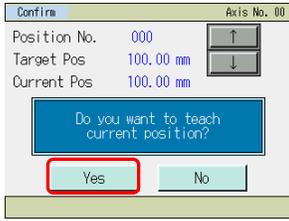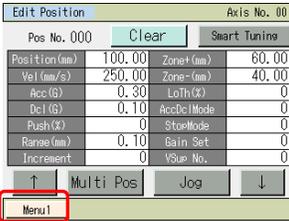No.	Operation	Screen	Remarks
7	Touch [Inching].		
8	Touch [Chg Dis] to select a desired jog speed. Touch [Inching-] and [Inching+] to move the axis to the target position.		If the servo is OFF, touch [SV ON] to turn on the servo.
9	Touch [Teach].		
10	Touch [Yes].		The default values set by parameters are automatically entered for the velocity, acceleration, deceleration, etc. <i>(Note) If a position is acquired before home return, the error message "Home return not yet complete" appears. On the error message screen, touch [Back] to return to the jog screen, and then perform home return.</i>
11	Touch [Menu1].		
12			

5.7.3 Changing Position Data

You can change all position data by overwriting the current values. Accordingly, four cases are considered just like when data is entered anew.

- (1) Numerical input --- Enter position data directly as numerical values from the numeric keypad.
- (2) Direct teaching --- Turn off the servo control, move the slider by hand to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
- (3) Jogging --- Use [Jog+] or [Jog-] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
- (4) Inching --- Use [Inching+] or [Inching-] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position. The axis moves by the specified pitch (0.01, 0.10, 0.50, 1.00 or 5.00 (mm)) every time an arrow key is touched. Thereafter, the speed increases every second. This way, the actuator can be moved more finely than when jogged.

Take note of the following points when performing a data change operation:

- * In the case of numerical input, only the items overwritten from the numeric keypad will change.
- * In the case of direct teaching, jogging or inching, only the target position will be updated after the current position is acquired. The speed, etc., will remain unchanged.
- * Once the position data is cleared, none of the previously set data will remain. Accordingly, the default data values will be applied, other than positions, the next time you register position data. To clear the position data table specified for push-motion operation and register data again, be sure to check all position data items and enter necessary data.

5.7.4 Clearing Position Data, Clearing All Position Data



(1) Clearing position data

Position data of the selected position number can be cleared. The position becomes unregistered and an "*" (asterisk) is shown in the fields.






1) Clear (Operation to return a desired position data number to an unregistered condition.)


Example Clear data of position data No. 1.

No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "001" of position No. 1.		
6	Touch [Clear].		

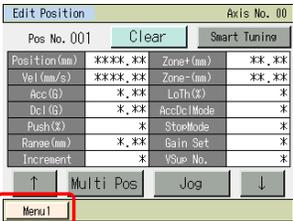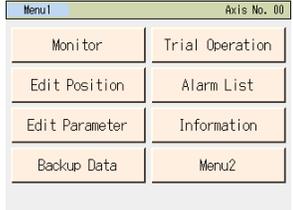No.	Operation	Screen	Remarks																												
7	Touch [Yes].	 <p>A dialog box titled 'Confirm' for 'Axis No. XX'. It shows 'Position No. 001' and 'Target Pos 100.00 mm'. A blue box asks 'Do you want to clear this position data?' with 'Yes' and 'No' buttons.</p>	Touching [No] cancels the clear.																												
8	Touch [Menu1].	 <p>'Edit Position' screen for 'Axis No. 00'. It shows 'Pos No. 001' and a 'Clear' button. Below is a table of parameters with asterisks in some fields. At the bottom, a 'Menu1' button is highlighted with a red box.</p> <table border="1"> <tr> <td>Position (mm)</td> <td>****. **</td> <td>Zone+ (mm)</td> <td>**.* **</td> </tr> <tr> <td>Vel (mm/s)</td> <td>****. **</td> <td>Zone- (mm)</td> <td>**.* **</td> </tr> <tr> <td>Acc (G)</td> <td>*. **</td> <td>LoTh (%)</td> <td>*</td> </tr> <tr> <td>Dcl (G)</td> <td>*. **</td> <td>AccDc Mode</td> <td>*</td> </tr> <tr> <td>Push (%)</td> <td>*</td> <td>StoeMode</td> <td>*</td> </tr> <tr> <td>Range (mm)</td> <td>*. **</td> <td>Gain Set</td> <td>*</td> </tr> <tr> <td>Increment</td> <td>*</td> <td>Ysue No.</td> <td>*</td> </tr> </table>	Position (mm)	****. **	Zone+ (mm)	**.* **	Vel (mm/s)	****. **	Zone- (mm)	**.* **	Acc (G)	*. **	LoTh (%)	*	Dcl (G)	*. **	AccDc Mode	*	Push (%)	*	StoeMode	*	Range (mm)	*. **	Gain Set	*	Increment	*	Ysue No.	*	<p>The position number data is cleared.</p> <p>An "*" (asterisk) is shown in the fields.</p>
Position (mm)	****. **	Zone+ (mm)	**.* **																												
Vel (mm/s)	****. **	Zone- (mm)	**.* **																												
Acc (G)	*. **	LoTh (%)	*																												
Dcl (G)	*. **	AccDc Mode	*																												
Push (%)	*	StoeMode	*																												
Range (mm)	*. **	Gain Set	*																												
Increment	*	Ysue No.	*																												
9		 <p>'Menu1' screen for 'Axis No. 00'. It displays a grid of menu options: Monitor, Trial Operation, Edit Position, Alarm List, Edit Parameter, Information, Backup Data, and Menu2.</p>																													


2) All clear (operation to clear all position data)

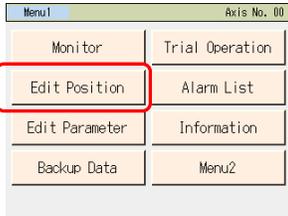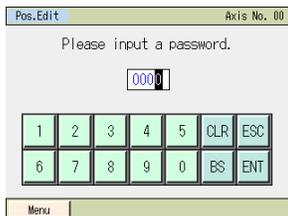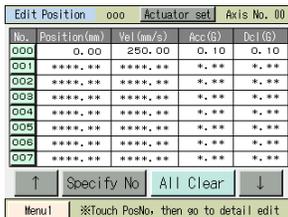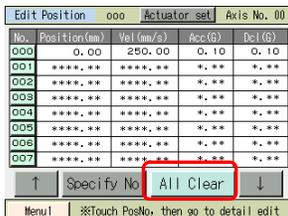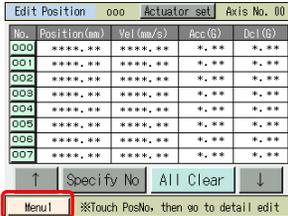No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the position edit password is not "0000," the password entry screen appears. Enter a position edit password, and then touch [ENT].		The default position edit password is "0000."
3	The position data table screen appears.		
4	Touch [All Clear].		
5	Touch [Yes].		Touching [No] cancels the clear.
6	Touch [Menu1].		All position number data is cleared. An "*" (asterisk) is shown in the fields.

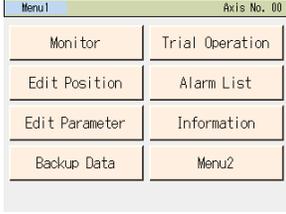No.	Operation	Screen	Remarks
7			


5.8 Parameter Editing

Parameters are displayed and edited.

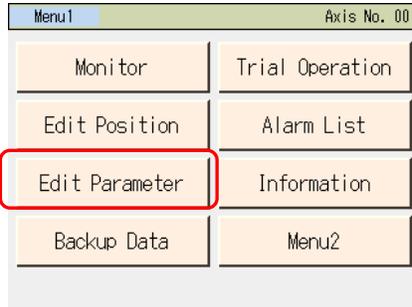

Touch [Edit Parameter] on the Menu 1 screen.


If a system password is not "0000," the password entry screen appears.

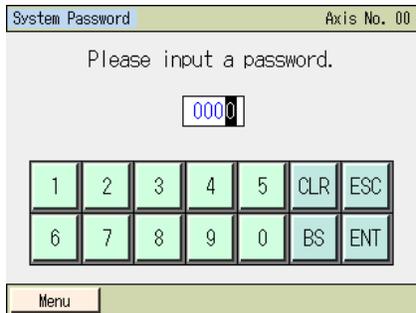

Input a system password.
Touch [ENT].

The default system password is "5119."
For how to change the system password, refer to 5.17, "Environment setting [Change System Password]."

A parameter table is displayed.

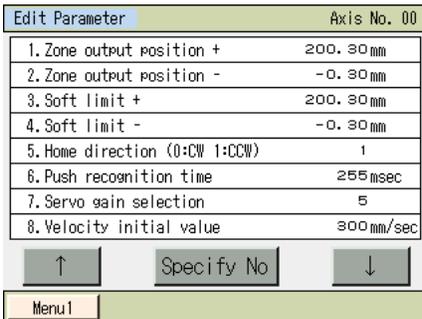

- * The types of parameters vary from one controller to another. Refer to the instruction manual for each controller.

(1) Basic operation

Edit Parameter		Axis No. 00
1. Zone output position +	200.00mm	
2. Zone output position -	-0.00mm	
3. Soft limit +	200.00mm	
4. Soft limit -	-0.00mm	
5. Home direction (0:CW 1:CCW)	1	
6. Push recognition time	255msec	
7. Servo gain selection	5	
8. Velocity initial value	000mm/sec	

↑ Specify No ↓

Menu1

Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Touch [Specify No] and enter a desired parameter number, and the screen showing the parameter you want to set will appear.

In this example, soft limit+ is set.

Edit Parameter		Axis No. 00
1. Zone output position +	200.00mm	
2. Zone output position -	-0.00mm	
3. Soft limit +	200.00mm	
4. Soft limit -	-0.00mm	
5. Home direction (0:CW 1:CCW)	1	
6. Push recognition time	255msec	
7. Servo gain selection	5	
8. Velocity initial value	000mm/sec	

↑ Specify No ↓

Menu1

Touch Soft limit+, and the numeric keypad will appear. Enter a value and then touch [ENT] on the numeric keypad.

Touching [Menu1] opens a confirmation screen with a message asking if you want to restart the controller.

Soft Reset		Axis No. 00
Do you want to restart the controller?		
<input type="button" value="Yes"/> <input type="button" value="No"/>		

Touch [Yes].

Touch [No] to return to the parameter screen without restarting the controller or reflecting the parameter you have set. To reflect the parameter you have set, you must restart the controller.


⚠ Caution: If the controller is not restarted, the parameter that has been rewritten does not translate to the intended action. The parameter will become effective once the controller is restarted or power is reconnected.

The controller is restarted, after which the parameter you have set will be reflected.

Soft Reset		Axis No. 00
Restarting the controller. Please wait a minute.		


5.9 Trial operation

You can perform jogging/inching operations, move to a position or continuously to multiple positions registered in the position table, or move to a position by specifying the position directly.

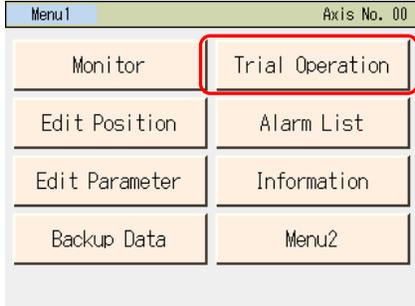

Touch [Trial Operation] on the Menu 1 screen.

The movement menu screen appears.

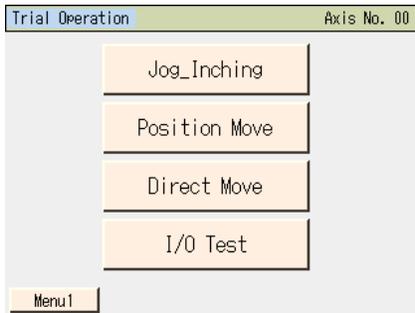

Select and touch [Jog_Inching] or other item you want to operate.

- (1) Jog_Inching
Perform jog/inching operation.
- (2) Position Move
Move to a position or continuously to multiple positions registered in the position table.
 - Move
The actuator moves, in a single step, from the current position to the position corresponding to an arbitrary position data number registered in the position table.
 - Continuous
The actuator operates continuously from the specified position data number through successive position data numbers.
 - * What is continuous movement?
Assume that the following position table has been set. If a continuous movement command is issued from position No. 2, the actuator operates over a group of positions from the position at which the movement command is issued through successive positions where data is available (until the position before the one where no data is registered(*)), such as position No. 2 → No. 3 → No. 1 → No. 2, and so on.

Edit Position 000 Actuator set Axis No. 00				
No.	Position(mm)	Vel (mm/s)	Acc(G)	Dcl (G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07

↑ Specify No All Clear ↓

Menu1 ※Touch PosNo, then go to detail edit



On a touch panel teaching pendant, continuous movement is only permitted over 64 positions from position No. 000 to 063, 064 to 127, etc.
 As shown in the example, the actuator returns to position No. 061 after No. 063 (returns to the beginning of a group of successive positions where position data is entered), and moves continuously.
 It does not move from position No. 063 to No. 064.

No.	Target position (mm)	Speed (mm/s)
000	*	*
001	100.00	20
	↓	
	↓	
060	*	*
061	300.00	30
062	400.00	40
063	500.00	50
064	600.00	60
065	700.00	70
	↓	
	↓	




- (3) Direct Move
Target position: Move the actuator by entering a speed from the numerical keypad.

5.9.1 Jog/Inching Operation

[Jog operation]

You can perform jog operation.

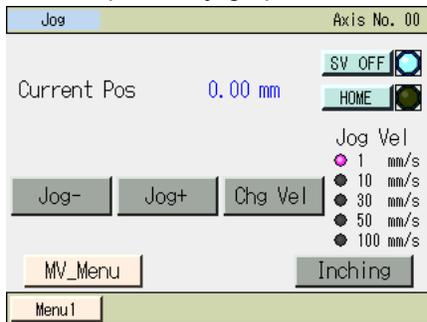


operation on the jog screen

- [Jog-], [Jog+] :The axis jogs while each button is touched. [Jog-] moves the axis in the negative direction, while [Jog+] moves the axis in the positive direction.
- [SV ON] :Touching [SV ON] while the servo is OFF turns on the axis servo and ○ becomes lit. Touching [SV OFF] while the servo is ON turns off the axis servo and ○ becomes unlit.
- [HOME] :Touching [HOME] while home return is not yet completed causes the axis to return home and ○ becomes lit.
- [Chg Vel] :The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Chg Vel] is touched.
- [Inching] :Touching [Inching] changes to the inching screen.
- [Menu1] :Move to the Menu 1 screen.
- [MV_Menu] :Touch [MV_Menu] menu to return to the test run menu.

[Inching Operation]

You can perform inching operation.

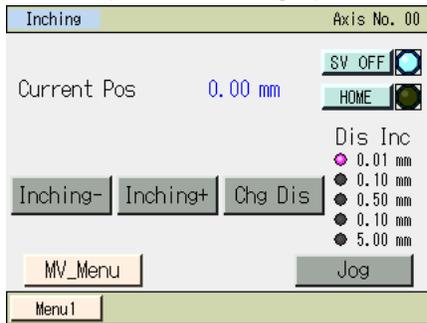


Operation on the jog screen

- [Inching-], [Inching+] :Touching each button once moves the axis by inching.
[Inching-] moves the actuator in the negative direction.
[Inching+] moves the actuator in the positive direction.
- [SV ON] :Touching [SV ON] while the servo is OFF turns on the axis servo and ○ becomes lit.
Touching [SV OFF] when the servo is ON turns off the axis servo and ○ becomes unlit.
- [HOME] :Touching [HOME] while home return is not yet completed causes the axis to return home and ○ becomes lit.
- [Chg Dis] :The inching distance changes in the order of 0.01, 0.10, 0.50, 1.00 and 5.00 mm every time [Chg Dis] is touched.
- [Jog] :Touching [Jog] changes to the jog screen.
- [Menu1] :Move to the Menu 1 screen.
- [MV_Menu] :Touch [MV_Menu] menu to return to the test run menu.

5.9.2 Position Movement Operation


Move to a position or continuously to multiple positions registered in the position table.

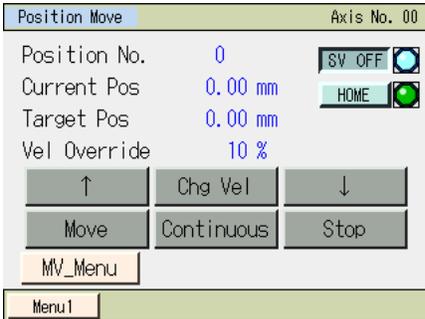

- [SV ON] :Touching [SV ON] while the servo is OFF turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is ON turns off the axis servo and O becomes unlit.
- [HOME] :Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [↑], [↓] :Touch [↑] and [↓] to select a desired position number. The target position of the selected position number appears.
- [Chg Vel] :The speed override changes to 10%, 50% and 100% every time [Chg Vel] is touched.
- [Move] :Touching [Move] moves the axis to the target position. The current position can be checked by the display in Current Pos.
- [Continuous] :Touching [Continuous] moves the axis continuously until Stop is touched.
- [Stop] :Touching [Stop] stops the axis.
- [Menu1] :Move to the Menu 1 screen.
- [MV_Menu] :Touch [MV_Menu] menu to return to the test run menu.

5.9.3 Direct Movement Operation

A position is specified directly to move the axis.

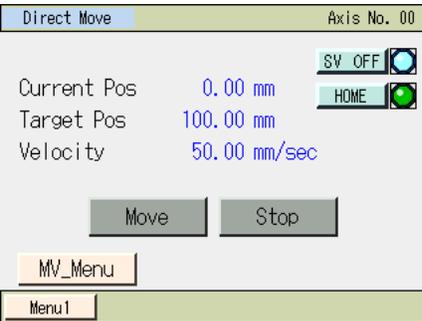


- [SV ON] :Touching [SV ON] while the servo is OFF turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is ON turns off the axis servo and O becomes unlit.
- [HOME] :Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Target Pos] :Touching [Target Pos] displays the numeric keypad. Enter a desired target position and then touch [ENT].
- [Velocity] :Touching [Velocity] displays the numeric keypad. Enter a desired speed and then touch [ENT].
- [Move] :Touching [Move] moves the axis to the target position you have set. The current position can be checked by the display in Current Pos.
- [Stop] :Touching [Stop] stops the axis.
- [Menu1] :Move to the Menu 1 screen.

5.9.4 I/O test

PIO input signals can be monitored.


You can also touch OUT00 to OUT15 to forcibly turn ON/OFF the corresponding output signals.

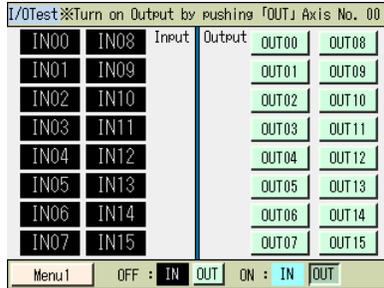

Touch [Menu 1] to return to the [Menu 1] screen.


5.10 TP Operation Mode

An operation mode is set if the manual (MANU) mode is selected.

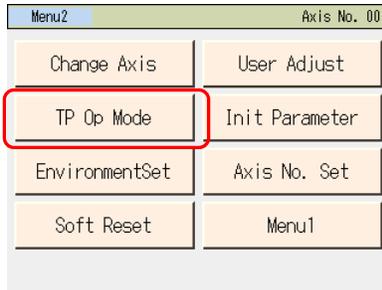

Touch [TP Op Mode] on the Menu 2 screen.

The TP operation mode screen appears.

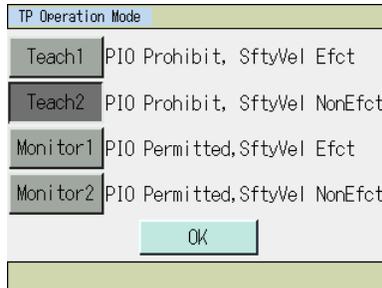

Select and touch [Teach1] or other desired mode.

Select a manual operation mode from the menu containing the following four items:

- **Teach1 (SftyVel Efct/PIO Prohibit)**
 - PIO Prohibit :You can write position data, parameters, etc., to the controller and issue actuator operation commands.
 - SftyVel Efct :The maximum speed corresponds to the safety speed set by a parameter, regardless of the speed specified in the position data table.

- **Teach2 (SftyVel NonEfct / PIO Prohibit)**
 - PIO Prohibit :You can write position data, parameters, etc., to the controller and issue actuator operation commands.
 - SftyVel NonEfct :You can move the actuator at the speed (greater than the safety speed) set in the position data table.

- **Monitor1 (SftyVel Efct/PIO Permitted)**
 - PIO Permitted :Only monitoring is permitted. You cannot write position data, parameters, etc., to the controller or issue actuator operation commands. operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 - SftyVel Efct :The maximum speed corresponds to the safety speed set by a parameter, regardless of the speed command from the PLC.

- **Monitor2 (SftyVel NonEfct / PIO Permitted)**
 - PIO Permitted :Only monitoring is permitted. You cannot write position data, parameters, etc., to the controller or issue actuator operation commands. operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 - SftyVel NonEfct :You can move the actuator at the speed (greater than the safety speed) according to the command from the PLC.

5.11 Alarm List

A list of alarms that may generate after the controller power is turned on is shown. [For alarm details, refer to 8, "Error Display."]



Touch [Alarm List] on the Menu 1 screen.

The controller's alarm list appears.

Controller without the calendar function

Controller Alarm List						Axis No. 00	
No	Code	Message	Adrs	Detail	Time		
00	FFF	PowerUP No Error	****	****	0:00:00		
01	0A2	Pos Data Error	1214	0021	0:04:38		
02	FFF	PowerUP No Error	****	****	0:00:00		
03	000		****	****	0:00:00		
04	000		****	****	0:00:00		
05	000		****	****	0:00:00		
06	000		****	****	0:00:00		
07	000		****	****	0:00:00		

↓ Clear

Menu

Touching [↓] displays the list of the next screen.

Controller Alarm List						Axis No. 00	
No	Code	Message	Adrs	Detail	Time		
08	000		****	****	0:00:00		
09	000		****	****	0:00:00		
10	000		****	****	0:00:00		
11	000		****	****	0:00:00		
12	000		****	****	0:00:00		
13	000		****	****	0:00:00		
14	000		****	****	0:00:00		
15	000		****	****	0:00:00		

↑ Clear

Menu

Touching [↑] displays the list of the previous screen.

Touching Erase clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on. It does not indicate an error. The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.

Controller with the calendar function

Controller Alarm List		Axis No. 00	
No	Alarm Code	Address Detail Code	Time(yy/mm/dd hh:mm:ss) Message
00	FFF	****	11/08/03 18:32:13 PowerUP No Error
01	0E8	****	11/08/03 17:21:22 A,B disconnect
02	FFF	****	11/08/03 17:15:12 PowerUP No Error
03	0E8	****	11/08/03 17:14:17 A,B disconnect


Touching [↑] displays the list of the previous screen.
Touching [↓] displays the list of the next screen.

Touching [Clear] clears all alarms.


(Note) "PowerUP No Error" indicates that the controller power was turned on. The occurrence time corresponds to the time each alarm occurred.

5.12 Controller Restart

The controller is restarted.

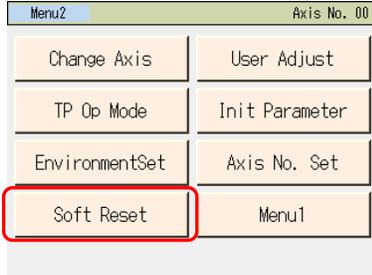

Touch [Soft Reset] on the Menu 2 screen.

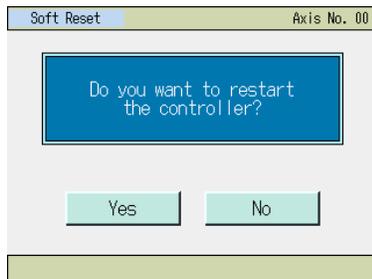

Touch [Yes].

Touch [No] to return to the Menu 2 screen without restarting the controller.




Touch [Yes].

Touch [No] to return to the Menu 1 screen without restarting the controller.

The controller is restarted.


5.13 User Adjustment

You can perform home return, etc.

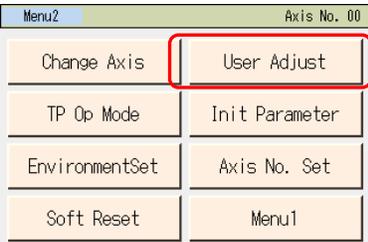

Touch [User Adjust] on the Menu 2 screen.


If a system password is not "0000," the password entry screen appears.

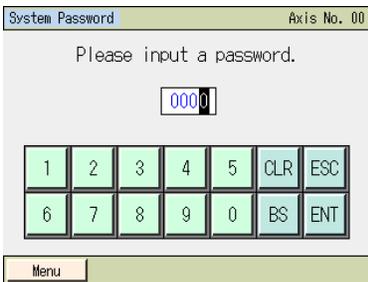

Input a system password.
Touch [ENT].

The default system password is "5119."
For how to change the system password, refer to 5.17, "Environment setting [Change System Password]."

The user adjustment screen appears.

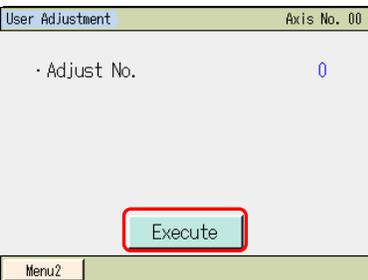


Touch [Adjust No.] and the numeric key pad opens. Set [Adjust No.] and touch [Execute.]

- 1: Home return
Home return can be performed.
- 2: Axis number setting
The operation is the same as what you do on the axis number setting screen.
- 3: Alarm list clear
The operation is the same as what you do on the alarm list screen.
- 4: Controller restart
The operation is the same as what you do when restarting the controller on the Menu 2 screen.
- 6: Load cell calibration
The load cell in the actuator with load cell can be calibrated. (SCON-CA/CB)
- 7: Time setting
You can move to the time setting screen to set time. (Controller with the calendar function)
- 8: Maintenance information
Maintenance information can be displayed. (SCON-CA/CAL/CB, PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB, ERC3 PIO Converter, MSCON and MCON)


5.14 Parameter Initialization

The parameters are reset to their factory default settings (initialized).

Caution: Once the parameters are initialized (to their factory default settings), all parameters the user has set will return to the values set at the factory. Exercise caution.

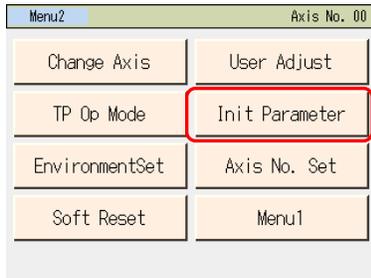

Touch [Init Parameter] on the Menu 2 screen.

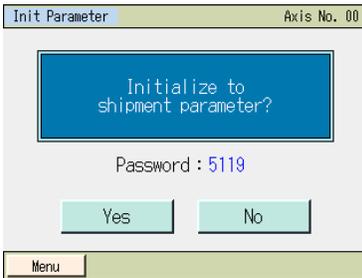

Touching Password displays the numerical keypad. Input "5119" and touch [ENT].

Touch [Yes].



Touch [Yes].

Touch [No] to return to the Menu 2 screen without restarting the controller.



Touch [Yes].

Touch [No] to return to the Menu 1 screen without restarting the controller.


The controller is restarted.



Caution: If the controller is not restarted, the parameters that have been rewritten to their factory settings do not translate to the factory-set operations. The factory settings will become effective once the controller is restarted or power is reconnected.


5.15 Axis Number Setting

The axis number of the controller is set.

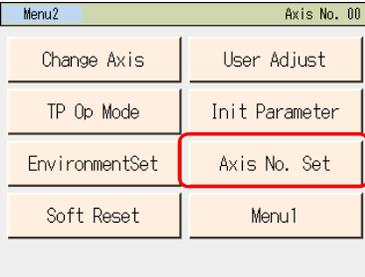

Touch [Axis No. Set] on the Menu 2 screen.

If a system password is not "0000," the password entry screen appears.

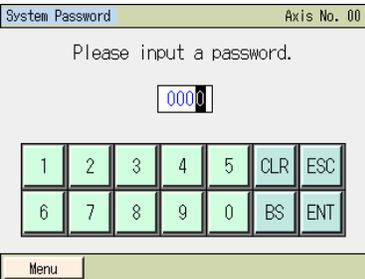


Input a system password.
Touch [ENT].

The default system password is "5119."
For how to change the system password, refer to 5.17, "Environment setting [Change System Password]."

The axis number setting screen appears.



You can set a value between 0 and 15.
Set a desired axis number and then touch [ENT].

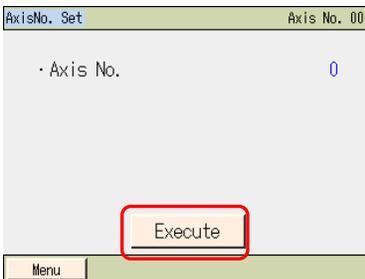

Touch [Execute].

5.16 Information Display

Version and other information of the controller are set.

Menu1		Axis No. 00
Monitor	Trial Operation	
Edit Position	Alarm List	
Edit Parameter	Information	
Backup Data	Menu2	

Touch [Information] on the Menu 1 screen.


The information screen appears.

Information		Axis No. 00
Series/Type	DCON-CA (FB)	
Controller Version	AC50FFD0	
Core Version	AC85FFF9	
TP Version(CON/SEL)	Ver. 2.10 / Ver. 1.00	
TP Core Version	Ver. 0.00	
MAC Address	B8:DC:87:00:00:18	
Menu1		

Touch [Menu 1] to return to the [Menu 1] screen.


5.17 Environment Setting

You can change the language setting, touch operation sound setting, dim display time setting, data input warning setting, change system password, change position editing password, display setting and time setting.

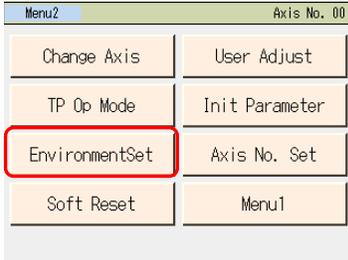

Touch [EnvironmentSet] on the Menu 2 screen.

The environment setting screen appears.

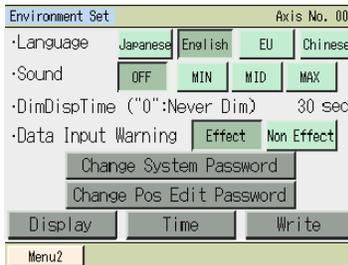


Touch [Menu 2] to return to the [Menu 2] screen.

[Language]

Select a language to display.

Display for Japanese/English/EU/Chinese languages setting change (No Chinese display after Ver.3.00)

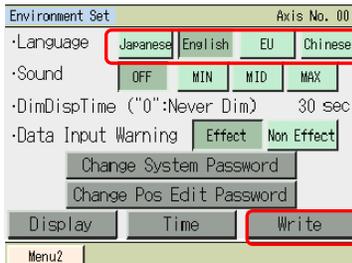


Touch a desired language ([English] etc.).

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

[Sound]

You can select whether or not to output a touch tone.

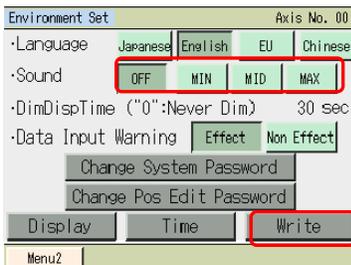

Touch [OFF]. A touch tone is not output.


Touch either of [MAX], [MID] or [MIN]. A touch tone is output.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

[Dim Display Time]

Set the dim display time when not being operated.
Zero seconds mean the display is on all the time.

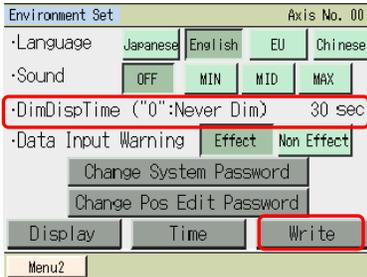


Touching [Dim Display Time ("0": Never Dim) 30 sec] displays the numerical keypad.
Enter a desired time and touch [ENT].
You can set a value between 0 to 255 seconds.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

[Data Input Warning]

The warning can be output when a value less than the minimum speed and a value exceeding the rated acceleration/deceleration speed are entered in the position data. Note that the value is entered even if the warning occurs. Always use within the specification of the actuator.

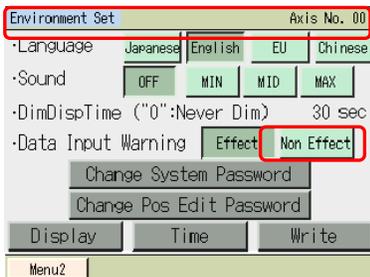


Touch [Effect] to give the warning.
Touch [Non Effect] not to give the warning.

Select either Effect or Non Effect, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.


[Change System Password]

Change the system password.

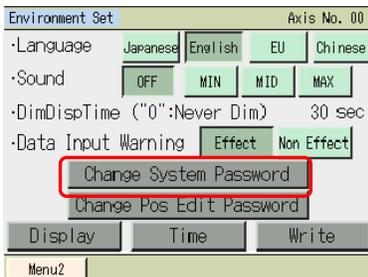

Touch [Change System Password].

If the system password is not "0000," the password entry screen appears.

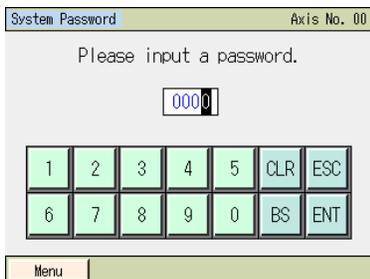

Enter the currently set system password.


Touch [ENT].

The default system password is "5119."




Enter the new system password to change to.
If you do not set the system password, enter 0000.

Touch [ENT].

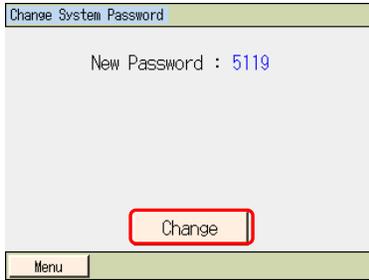


Touch [Change].

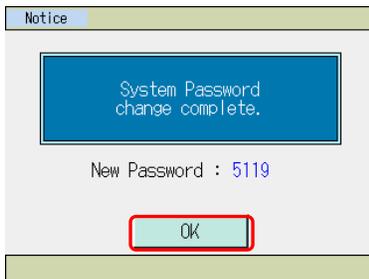

Touch [OK].

[Change Pos Edit Password]
Change the position edit password.

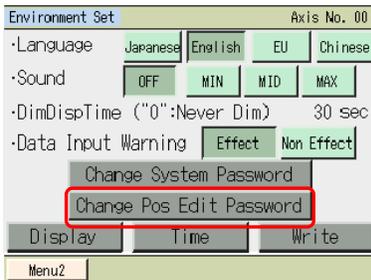

Touch [Change Pos Edit Password].

If the system password is not "0000," the password entry screen appears.




Input a system password.
Touch [ENT].

The default system password is "5119."
For how to change the system password, refer to [Change System Password] in the previous page.




Enter the new position edit password to change to.
If the position edit password is not set, enter "0000."

Touch [ENT].

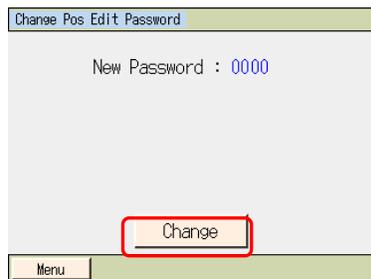


Touch [Change].

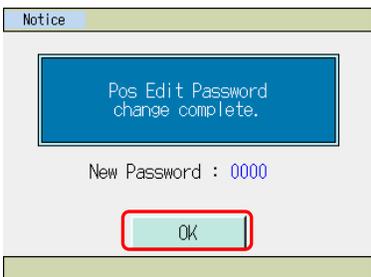

Touch [OK].


[Display]

Adjustment of contrast and brightness of the screen, position tuning for touch panel and LCD screen check can be performed.

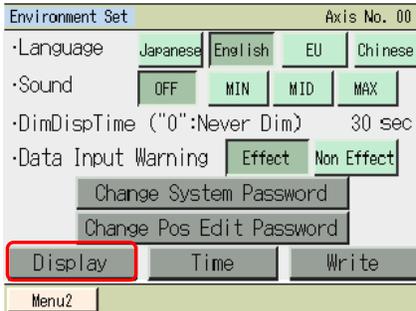

Touch [Display].

Display menu Window is displayed.

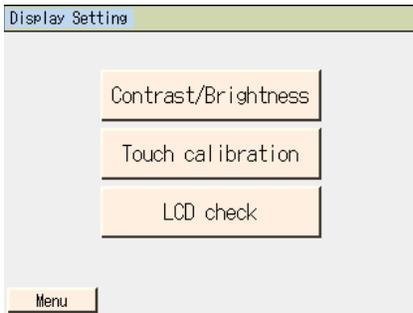


Select Display Setting menu.


Touch [Menu] and the display returns to EnvironmetSet screen.

●Change the Contrast/Brightness

You can adjust contrast (shading of liquid crystal) and brightness (of liquid crystal).

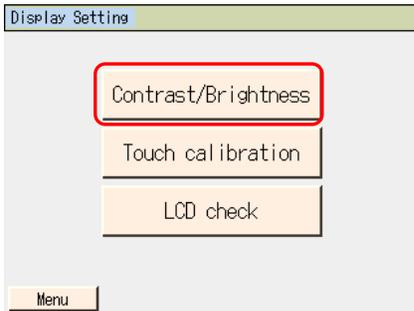

Touch [Contrast/Brightness]

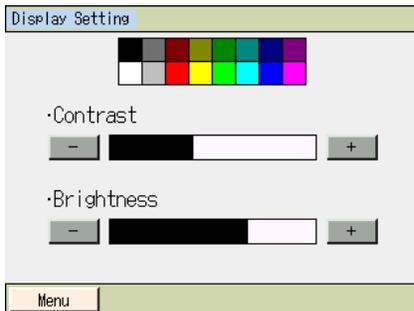

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.


Brightness adjustment

Touch [-] and [+] under Brightness to adjust the brightness of the screen.


Touch [Menu] to save the setting status and the display returns to Display menu screen.

- Touch calibration

A calibration for the position detection of the touch panel is performed.

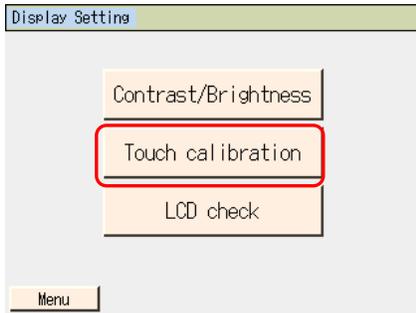

Touch [Touch Calibration].

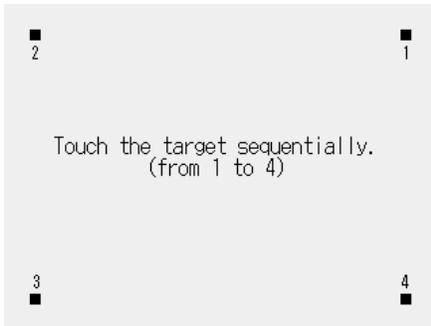


Touch [·] in the order of 1, 2, 3 and 4.

Touch [Menu] and the display returns to Display menu screen.


- LCD Check

LCD display can be checked in the order of Color Pattern, White Only and Black Only.

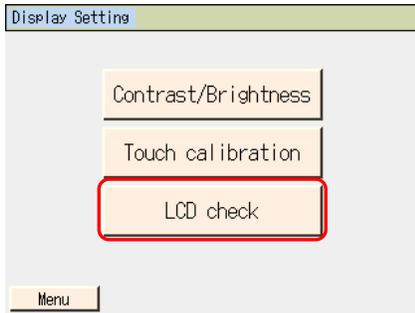

Touch [LCD check].

Color Pattern is displayed

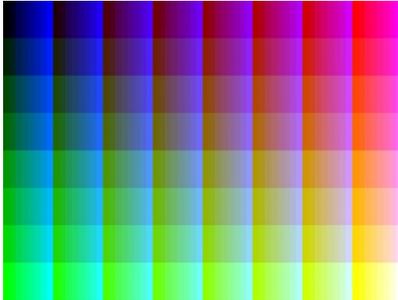


Touch any point on the screen.

White Only is displayed



Touch any point on the screen.

Black Only is displayed




Touch any point on the screen.
The display returns to Display menu screen.

[Time Setting]

You can set the time for TB-01/TB-01D/TB-01DR or controller with the calendar function.

1) Time setting for TB-01/TB-01D/TB-01DR.

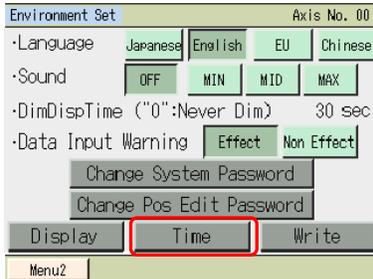

Touch [Time].



The time of teaching TB-01/TB-01D/TB-01DR is displayed.
Touch [Time Edit].




Touch the value of year, month, day, hour, minute or second that is required to be changed.



Numeric keys are displayed
Input a value and touch [ENT]




Touch [Set].

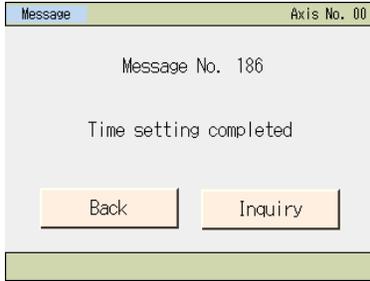

The time of the TB-01/TB-01D/TB-01DR is changed.
Touching [Back] can go back to the controller time setting screen.
Touching [Inquiry] displays the inquiry screen.

2) Time setting for controller with the calendar function.

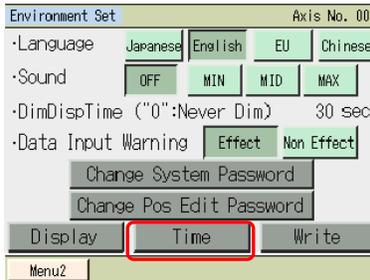

Touch [Time].



Teaching time is displayed.
Touch [Time Edit].



You don't need to change the time in the case of setting the time of the teaching to the controller.
Touch the value of year, month, day, hour, minute or second that is required to be changed.



Numeric keys are displayed
Input a value and touch [ENT]



Touch [Set to controller].



The time of the controller is changed.
Touching [Back] can go back to the controller time setting screen.
Touching [Inquiry] displays the inquiry screen.

5.18 Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

It is not applicable to the backup data storable in the RC PC software.

(Note) Extensions of the Stored Data

- *The file extensions of the data stored to the Secure Digital card are the same as those dealt in RC PC software, and are compatible. For instance, the position data for the PCON-C controllers is ptpc and the parameters are prpc.*

[Refer to the details of the file extensions in the RC PC Software Instruction Manual]

- *The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.*

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore.


If the folder does not exist, it is automatically created.

- *Position Data : \CONPTA\Position\File Name*
- *Parameter : \CONPTA\Parameter\File Name*
- *Alarm List : \CONPTA\Alarmlist\File Name*

(Note) Files with Chinese names are not supported.


5.18.1 Data Backup of the Controller

The data in the controller is transferred to the Secure Digital memory card for backup.

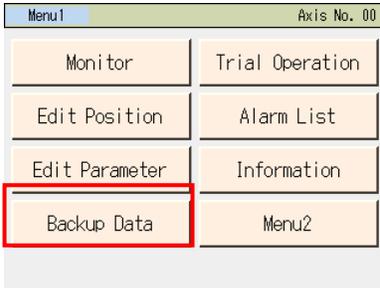

Touch [Backup Data] on the Menu 1 screen.


A window for data transfer appears.

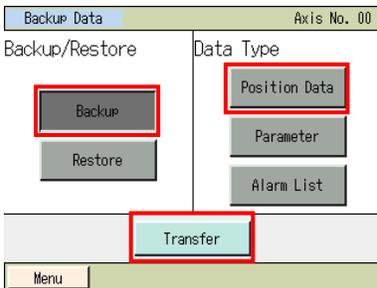

Touch [Backup].


Select the data type for the backup such as [Position Data] and touch it.

Touch [Transfer].

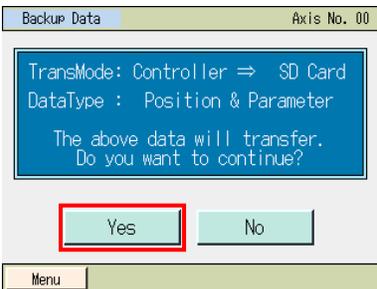

Touch [Yes].

If [No] is touched, the screen goes back to the data backup window.

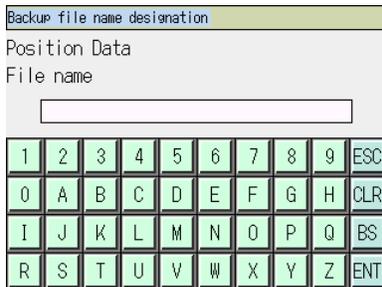

Numeric keys show up. Input a file name.

The file name is to be typed with 32 characters at maximum in letters and numbers.

Backup file name designation

Position Data

File name

AAA

Save

Menu

Touch [Save].

File name confirmation

File name

AAA.ptpc

The above file is saved.
Are you sure to continue?

Yes No

Menu

The screen below appears if the same name is not found.

Touch [Yes].

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

File name confirmation

File name

AAA.ptpc

A file of the same name already exists.
Do you want to replace it?

Yes No

Menu

The screen below appears if the same name is not found.

Touch [Yes].

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

Backup Data Axis No. 00

Transferring Data.
Please wait a minute.

100%

TransMode: Controller ⇒ SD Card
DataType : Position & Parameter

Data transfer screen will be shown.

Message Axis No. 00

Message No. 184

Data transfer completed


Back Inquiry

A message to tell the data transfer is complete pops up and the backup process is finished.

Touching [Back] can go back to the Backup Data screen.


5.18.2 Restore to Controller

Data in the Secure Digital card is transferred to the controller.

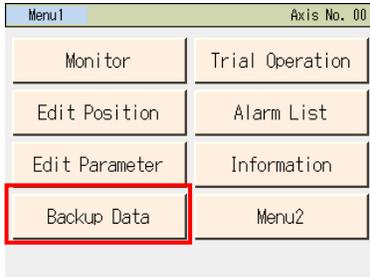

Touch [Backup Data] on the Menu 1 screen.


A window for data transfer appears.

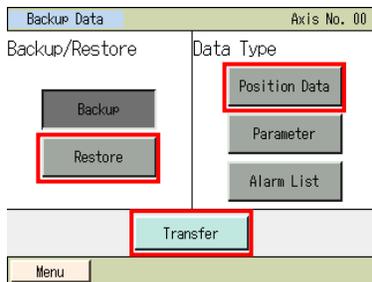

Touch [Restore].


Select the data type to transfer to the controller, such as [Position Data], and touch it.

Touch [Transfer].

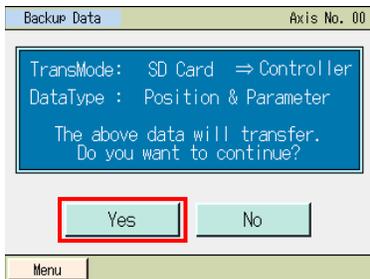


Touch [Yes].

If [No] is touched, the screen goes back to the data backup window.

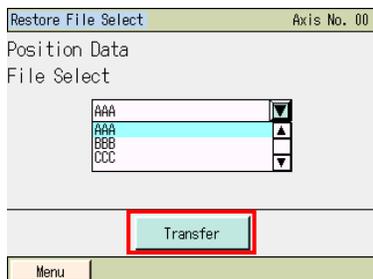


Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.

Touch [Transfer].

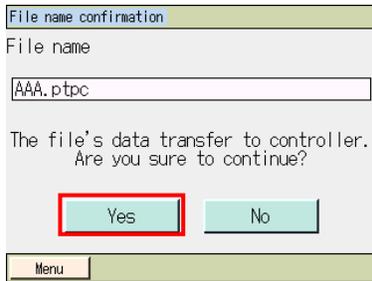


Touch [Yes].

If [No] is touched, the screen goes back to the previous one for the restore file select.

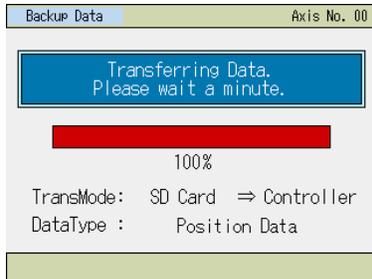

Data transfer screen will be shown.

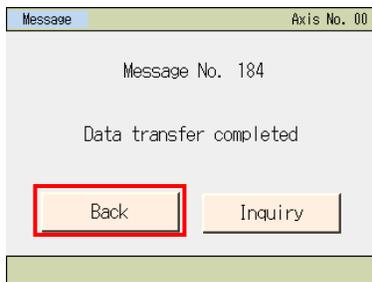

A message to tell the data transfer is complete pops up and the data transfer process to the controller is finished.

Touching [Back] can go back to the Backup Data screen.

5.19 Smart Tuning Function

With the Smart Tuning Function, the following 2 operations can be performed.

- 1) Setting of maximum acceleration/deceleration speed considering the indicated transported load and velocity
 - 2) Setting of acceleration/deceleration speed to provide the shortest operation time figured out from the indicated transported load and moving distance
- (1) Setting of maximum acceleration/deceleration speed considering the indicated transported load and velocity

It is the function to set the maximum acceleration/deceleration speed available at the indicated transported load and velocity.

- (2) Setting of acceleration/deceleration speed to provide the shortest operation time figured out from the indicated transported load and moving distance

It is the function to set the combination of velocity and acceleration/deceleration that provide the shortest operation time for the indicated moving distance in several patterns of selectable combinations of the velocity and acceleration/deceleration with accordance with the transported load.

When 12.0 [Kg] is indicated for the transported load, for an instance, the combination of the velocity and acceleration/deceleration to provide the shortest operation time for each moving distance is as shown below:

- 1) When 30.00 [mm] is indicated
⇒ Velocity and acceleration for shortest operation time : 250.00 [mm/sec], 0.70 [G]
- 2) When 40.00 [mm] is indicated
⇒ Velocity and acceleration for shortest operation time : 300.00 [mm/sec], 0.50 [G]

(Note) The search of the combination of velocity and acceleration/deceleration for the shortest operation time refers to the operation schedule time.

For a reference, the following table shows the list of the operation time for each moving distance.

List of Operation Time for Each Moving Distance

Carrier load [Kg]	Movement distance [mm]	Velocity [mm/sec]	Acceleration/Deceleration [G]	Operation time [msec]
12.0	30.00	250.00	0.70	156
		300.00	0.50	161
	40.00	250.00	0.70	196
		300.00	0.50	195

5.19.1 Setting Operation for Max. Acceleration/Deceleration for Indicated Transported Load and Velocity

1) Basic Information Settings

Set the model code, lead stroke and the posture of the applicable actuator in “Setting of Actuator Applicable for Velocity and Acceleration/Deceleration Settings” window.

No.	Position (mm)	Vel (mm/s)	Acc (G)	Dec (G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07

↑ Specify No All Clear ↓

Menu1 ※Touch PosNo, then go to detail edit

Touch [Actuator set].

Axis Setting (Smart Tuning)		Axis No. 00
BasicInfo	Model	ISB-SXM-60
	Lead (mm)	4
	Stroke (mm)	100
	Axis Direction	Horizontal
Basic Info Setting		
Load	Load No. 0	55.000 Kg
	Load No. 1	20.000 Kg
	Load No. 2	10.000 Kg
	Load No. 3	1.000 Kg
Load Setting		
Menu		

Touch [Basic Info Setting].

Basic Info Setting		Axis No. 00
Series	ISB	▼
Model	ISB-SXM-60	▼
Lead (mm)	4	▼
Stroke (mm)	100	
Axis Direction	<input checked="" type="radio"/> Horizontal <input type="radio"/> Vertical	
<input type="button" value="OK"/> <input type="button" value="Cancel"/>		
Menu		

Touch ▼ and ▲ to select the applicable series, model type, lead (mm). For the stroke, numeric keys will appear if touch it. Input a value on the numeric keys. Select the actuator posture from either horizontal or vertical. Touch [OK].

Axis Setting (Smart Tuning)		Axis No. 00
BasicInfo	Model	RCP4-RASC
	Lead (mm)	12
	Stroke (mm)	300
	Axis Direction	Horizontal
Basic Info Setting		
Load	Load No. 0	55.000 Kg
	Load No. 1	20.000 Kg
	Load No. 2	10.000 Kg
	Load No. 3	1.000 Kg
Load Setting		
Menu		

The screen goes back to Basic Information Setting and Transported Load Setting window.

2) Setting of Carrier Load Set the carrier load.

Axis Setting(Smart Tuning)		Axis No. 00
BasicInfo	Model	RCP4-RA5C
	Lead(mm)	12
	Stroke(mm)	300
	Axis Direction	Horizontal
Basic Info Setting		
Load	Load No.0	55.000 Kg
	Load No.1	20.000 Kg
	Load No.2	10.000 Kg
	Load No.3	1.000 Kg
Load Setting		
Menu		

Touch [Load Setting].

Load Settings		Axis No. 00
Load No. 0	55.000 Kg	
Load No. 1	20.000 Kg	
Load No. 2	10.000 Kg	
Load No. 3	1.000 Kg	
OK		Cancel
Menu		

Touch the number input areas for Transported Load No.0 to No.3. The numeric keys will appear. Set the transported loads. Touch [OK].

Axis Setting(Smart Tuning)		Axis No. 00
BasicInfo	Model	RCP4-RA5C
	Lead(mm)	12
	Stroke(mm)	300
	Axis Direction	Horizontal
Basic Info Setting		
Load	Load No.0	25.000 Kg
	Load No.1	15.000 Kg
	Load No.2	10.000 Kg
	Load No.3	5.000 Kg
Load Setting		
Menu		

The screen goes back to Basic Information Setting and Transported Load Setting window. Touch [Menu] to return to Position Edit window.

Edit Position		ooo	Actuator set	Axis No. 00
No.	Position(mm)	Vel.(mm/s)	Acc.(G)	Dcl(G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07
↑ Specify No		All Clear		↓
Menu ※Touch PosNo, then go to detail edit				

3) Way to Handle Smart Tuning Function

Set the velocity and carrier load number to the set position number.

Select "Automatically Tune Acceleration from Transported Load and Velocity" from the ways for tuning.

No.	Position(mm)	Vel (mm/s)	Acc(G)	Dcl(G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07

Select the position to have Smart Tuning Function and touch it.

Position(mm)	Vel (mm/s)	Acc(G)	Dcl(G)	Zone+(mm)	Zone-(mm)	LoTh(%)	AccDclMode	Push(%)	StopMode	Range(mm)	Load	Increment	VSUP No.
0.00	100.00	0.30	0.30	0.00	0.00	0	0	0	0	0.10	0	0	0

Set the velocity.

Select one from 0 (Transported Load No. 0) to 3 (Transported Load No. 3) and set to the transported load.

Set the necessary items except for acceleration and deceleration such as target position.

Touch [C/T optimization].

Auto-configure Acc depend load and Vel

Auto-configure Acc and Vel depend load and distance

Touch [Auto-configure Acc depend load and Vel].

Distance(mm)	100.00
Load(kg)	40.000
Vel (mm/s)	100.00
ACC/DCL (G)	1.00

The data will overwrite.
Do you want to continue?

Yes No

The confirmation screen appears.

Touch [Yes].

4) Maximum acceleration speed and maximum deceleration speed are set for the indicated velocity and transported load number.

Position(mm)	Vel (mm/s)	Acc(G)	Dcl(G)	Zone+(mm)	Zone-(mm)	LoTh(%)	AccDclMode	Push(%)	StopMode	Range(mm)	Load	Increment	VSUP No.
0.00	100.00	1.00	1.00	0.00	0.00	0	0	0	0	0.10	0	0	0

5.19.2 Operation to Automatically Set Velocity and Acceleration Speed from Moving Distance

1) Basic Information Settings

Set the model code, lead stroke and the posture of the applicable actuator in “Setting of Actuator Applicable for Velocity and Acceleration/Deceleration Settings” window.

Edit Position 000 Actuator set Axis No. 00				
No.	Position(mm)	Vel(mm/s)	Acc(G)	Dcl(G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07

↑ Specify No All Clear ↓

Menu ※Touch PosNo, then go to detail edit

Touch [Actuator set].

Axis Setting(Smart Tuning) Axis No. 00	
BasicInfo	Model ISB-SXM-60
	Lead(mm) 4
	Stroke(mm) 100
	Axis Direction Horizontal
Basic Info Setting	
Load	Load No.0 55.000 Kg
	Load No.1 20.000 Kg
	Load No.2 10.000 Kg
	Load No.3 1.000 Kg
Load Setting	
Menu	

Touch [Basic Info Setting].

Basic Info Setting Axis No. 00	
Series	ISB ▼
Model	ISB-SXM-60 ▼
Lead(mm)	4 ▼
Stroke(mm)	100
Axis Direction	<input checked="" type="radio"/> Horizontal <input type="radio"/> Vertical
OK Cancel	
Menu	

Touch ▼ and ▲ to select the applicable series, model type, lead (mm). For the stroke, numeric keys will appear if touch it. Input a value on the numeric keys. Select the actuator posture from either horizontal or vertical. Touch [OK].

Axis Setting(Smart Tuning) Axis No. 00	
BasicInfo	Model RCP4-RA5C
	Lead(mm) 12
	Stroke(mm) 300
	Axis Direction Horizontal
Basic Info Setting	
Load	Load No.0 55.000 Kg
	Load No.1 20.000 Kg
	Load No.2 10.000 Kg
	Load No.3 1.000 Kg
Load Setting	
Menu	

The screen goes back to Basic Information Setting and Transported Load Setting window.

2) Setting of Carrier Load Set the carrier load.

Axis Setting(Smart Tuning)		Axis No. 00
BasicInfo	Model	RCP4-RA5C
	Lead(mm)	12
	Stroke(mm)	300
	Axis Direction	Horizontal
Basic Info Settings		
Load	Load No.0	55.000 Kg
	Load No.1	20.000 Kg
	Load No.2	10.000 Kg
	Load No.3	1.000 Kg
Load Setting		
Menu		

Touch [Load Setting].

Load Settings		Axis No. 00
Load No. 0	55.000 Kg	
Load No. 1	20.000 Kg	
Load No. 2	10.000 Kg	
Load No. 3	1.000 Kg	
OK		Cancel
Menu		

Touch the number input areas for Transported Load No.0 to No.3. The numeric keys will appear. Set the transported loads. Touch [OK].

Axis Setting(Smart Tuning)		Axis No. 00
BasicInfo	Model	RCP4-RA5C
	Lead(mm)	12
	Stroke(mm)	300
	Axis Direction	Horizontal
Basic Info Settings		
Load	Load No.0	25.000 Kg
	Load No.1	15.000 Kg
	Load No.2	10.000 Kg
	Load No.3	5.000 Kg
Load Setting		
Menu		

The screen goes back to Basic Information Setting and Transported Load Setting window. Touch [Menu] to return to Position Edit window.

Edit Position		ooo	Actuator set	Axis No. 00
No.	Position(mm)	Vel (mm/s)	Acc(G)	Dcl (G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07
↑ Specify No		All Clear		↓
Menu1 ※Touch PosNo, then go to detail edit				

3) Way to Handle Smart Tuning Function

Set the distance and carrier load number to the set position number.

Select "Automatically Tune Acceleration from Transported Load and Velocity" from the ways for tuning.

Edit Position 000 Actuator set Axis No. 00				
Pos No.	Position (mm)	Vel (mm/s)	Acc (G)	Dcl (G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07

↑ Specify No All Clear ↓

Menu1 ※Touch PosNo, then go to detail edit

Select the position to have Smart Tuning Function and touch it.

Edit Position Axis No. 00			
Pos No.	Clear	Smart Tuning	
Position (mm)	0.00	Zone+ (mm)	0.00
Vel (mm/s)	100.00	Zone- (mm)	0.00
Acc (G)	0.30	LoTh (%)	0
Dcl (G)	0.30	AccDcl Mode	0
Push (%)	0	StorMode	0
Range (mm)	0.10	Load	0
Increment	0	VSUp No.	0

↑ Multi Pos Jog ↓

Menu1

Set the velocity.

Select one from 0 (Transported Load No. 0) to 3 (Transported Load No. 3) and set to the transported load.

Set the necessary items except for acceleration and deceleration such as target position.


Touch [C/T optimization].

Smart Tuning Axis No. 00	
Auto-configure Acc depend load and Vel	
Auto-configure Acc and Vel depend load and distance	

Menu

Touch [Auto-configure Acc and Vel depend load and distance].

There are two ways to set up the moving distance.
(Position Select)

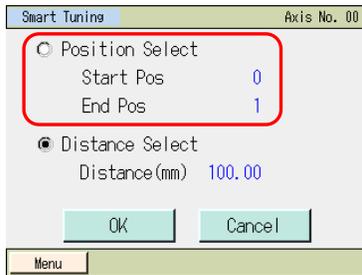


Select Position Select.
Touch the value on the start position and the numeric key will be shown.
Set the Start Pos.


Touch the value on the end position and the numeric key will be shown.
Set the End Pos.

(Note) For the end position, the position number to have Smart Tuning Function is shown. The end position can be changed. However, even if the end position is changed, it is set to the position where Smart Tuning Function is held by the calculation of the velocity, acceleration and deceleration from the distance between the set start position and end position.

(Distance Select)

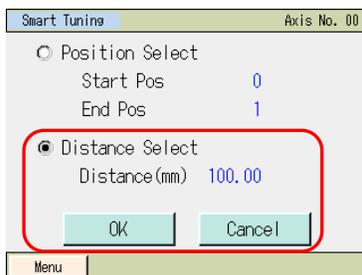


Select Distance Select.
Touch the value on the moving distance and the numeric key will be shown.
Set the Distance.

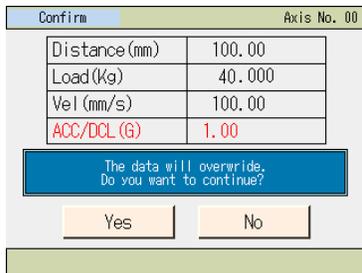

The confirmation screen appears.
Touch [Yes].

4) The velocity, acceleration and deceleration are set to provide the shortest tact time to run between two points for the indicated transported load number.

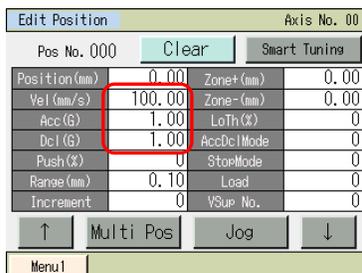

6. Operation of SEP Related Controllers

SEP related controllers: ASEP, PSEP, DSEP, MSEP

6.1 Transition of Operating States

The language can be changed by following the steps below.

For the operations after the language change, please refer to the instruction manual written in each language.

6. Operation of SEP Related Controllers

Display change from English to Japanese

<p>Touch [Initial Set] in SEP Menu.</p>	<p>Touch [EnvironmentSet].</p>	<p>Touch [Japanese].</p>	<p>Touch [書き込み].</p>
---	--------------------------------	--------------------------	----------------------

Display change from Japanese to English

<p>Touch [初期設定] in SEPメニュー.</p>	<p>Touch [環境設定].</p>	<p>Touch [英語].</p>	<p>Touch [Write].</p>
---------------------------------	----------------------	--------------------	-----------------------

Display change from English to Chinese (The display cannot be switched to Chinese in Ver. 3.00 and after.)


<p>Touch [Initial Set] in SEP Menu.</p>	<p>Touch [EnvironmentSet].</p>	<p>Touch [Chinese].</p>	<p>Touch [写入].</p>
---	--------------------------------	-------------------------	--------------------


Display change from Chinese to English (The display cannot be displayed to Chinese in Ver. 3.00 and after.)

<p>Touch [初始设定] in SEP菜单.</p>	<p>Touch [环境设定].</p>	<p>Touch [英语].</p>	<p>Touch [Write].</p>
-------------------------------	----------------------	--------------------	-----------------------

6.2 Operating Menu


Transition of operating states when the touch panel teaching pendant TB-01, TB-01D, TB-01DR is connected to a SEP related controller is shown.

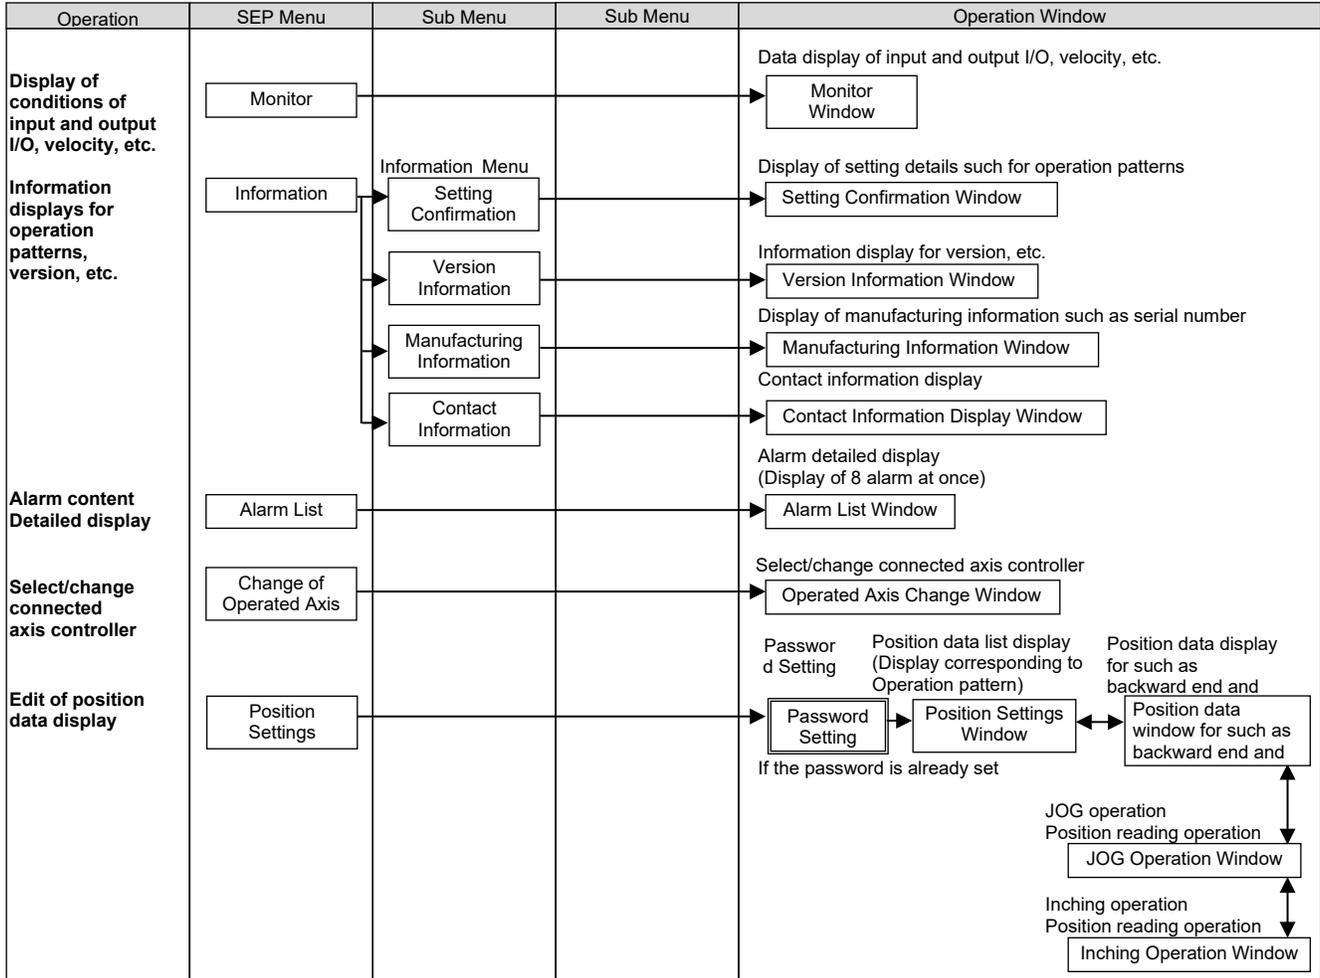

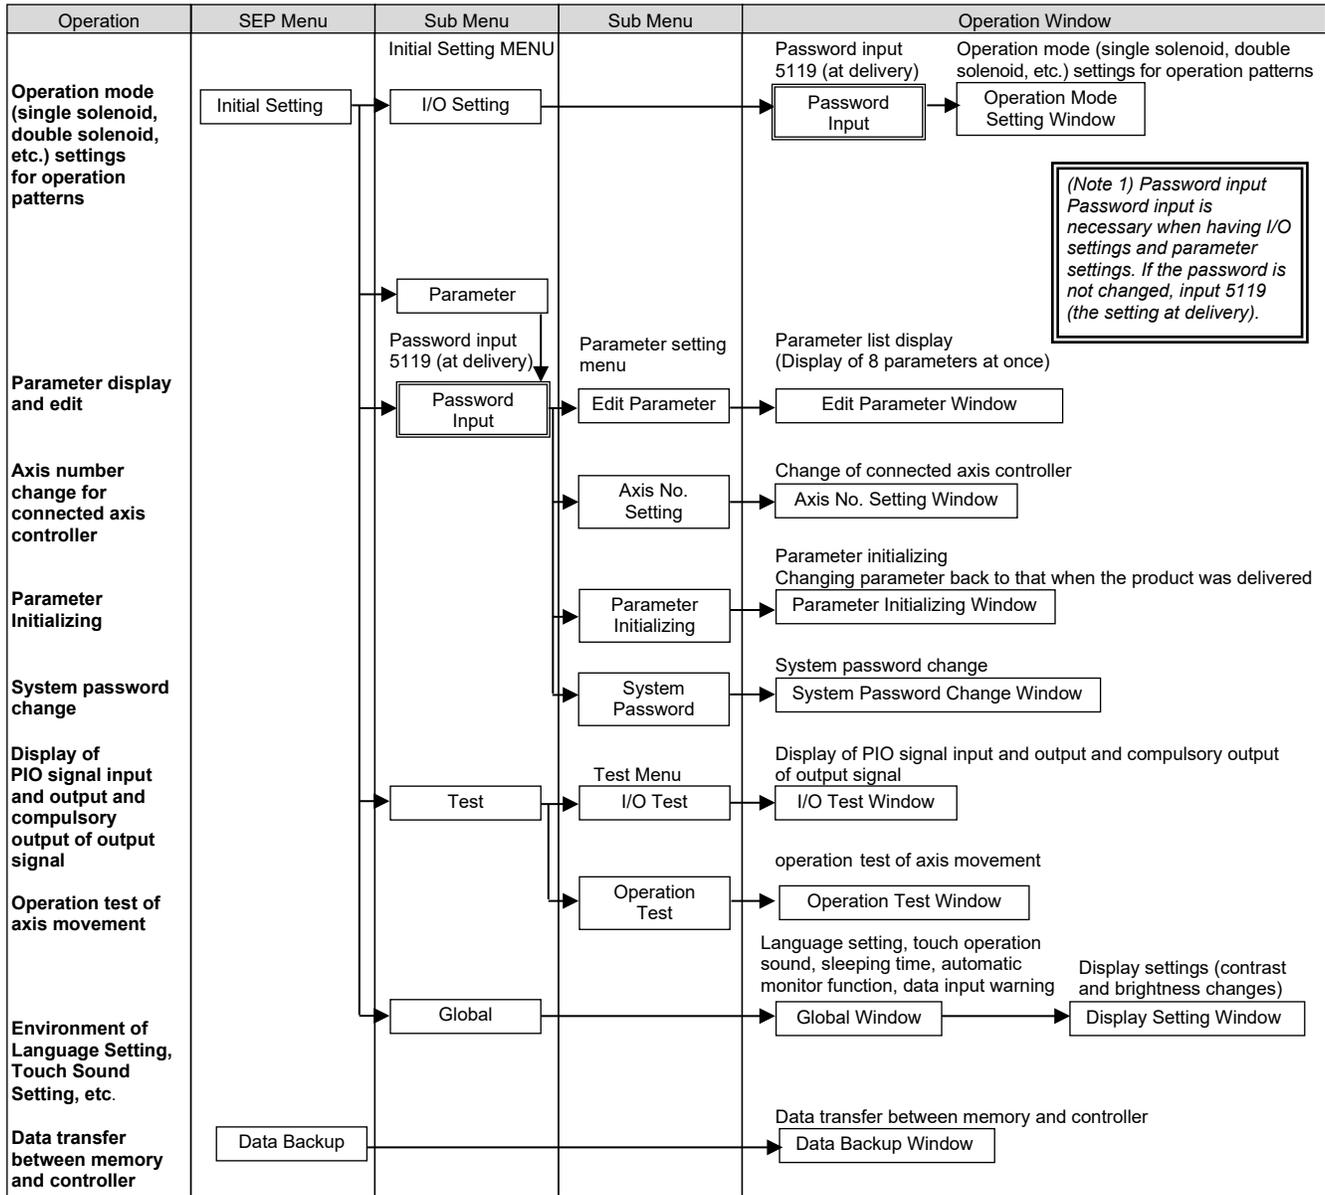

6.3 Initial Screen

When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen of the touch panel teaching pendant, after which version information is displayed.

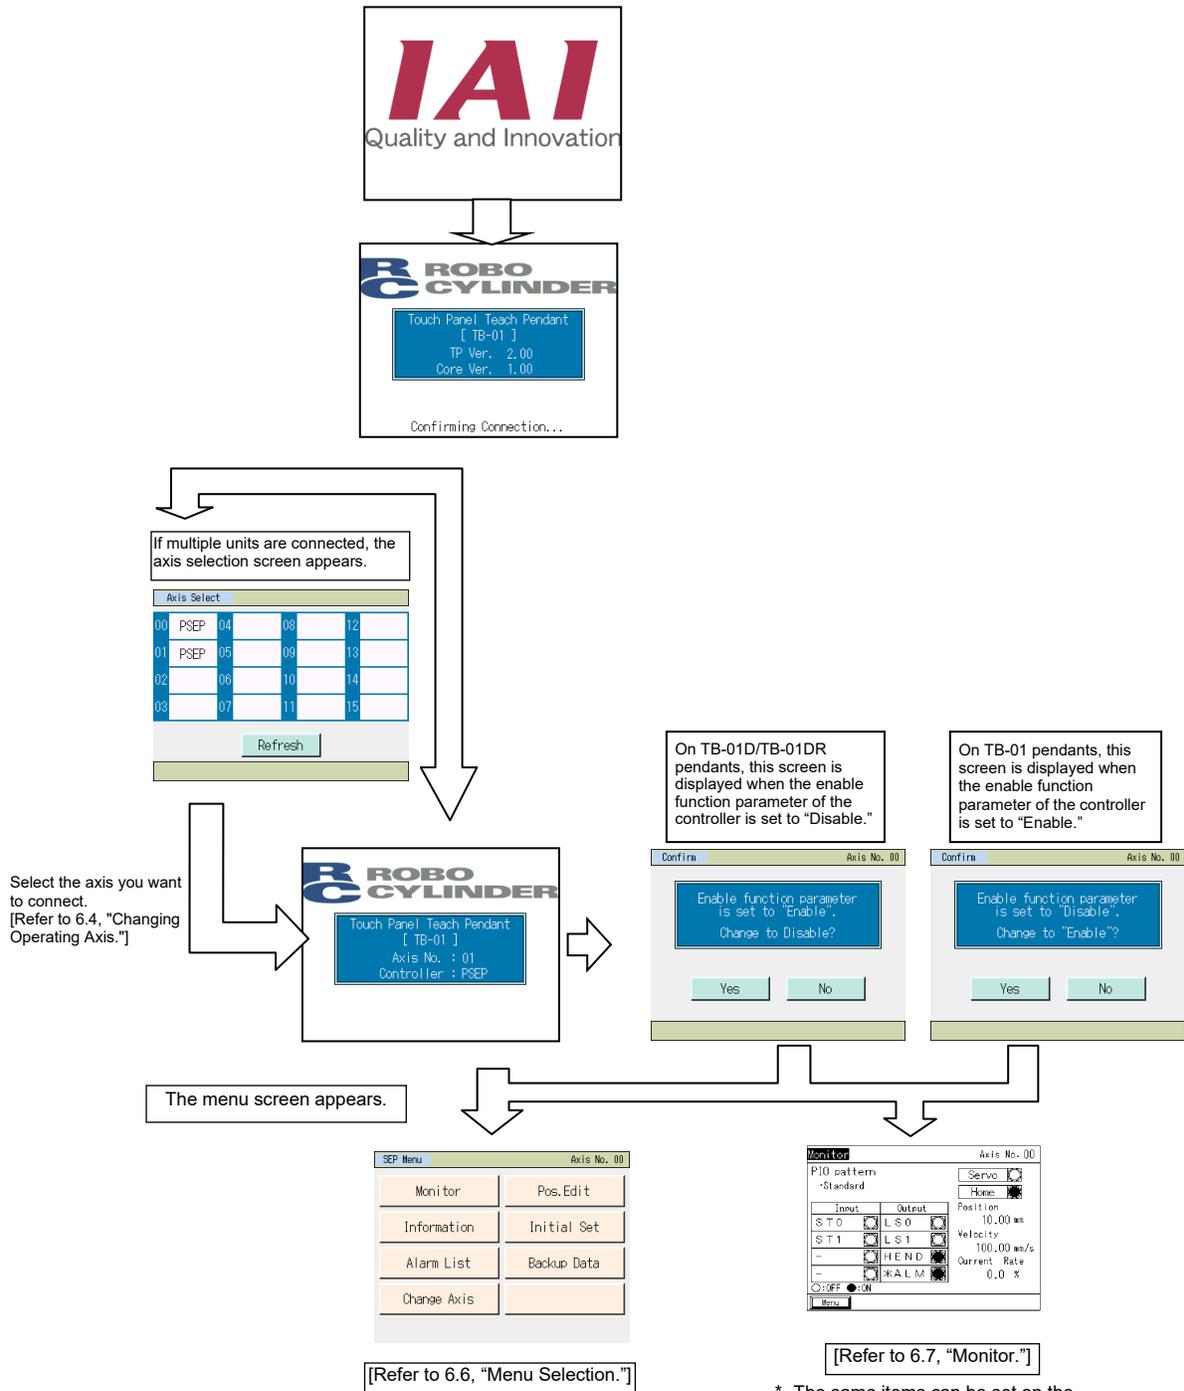


* The same items can be set on the automatic monitor setting screen accessible from the environment setting screen of the controller.

6.4 Initial Setting

When the power is turned on for the first time after the delivery of the controller, the initial setting screen will appear.

- Select [Yes], and the display will change to the I/O setting screen where you can set the operation pattern (PIO pattern). Select a desired operation pattern and, depending on the selected operation pattern, also set the single-solenoid, double-solenoid or other operation mode.
- Select [No], and the factory set operation pattern, or specifically operation pattern 0 of double-solenoid mode, will remain effective.

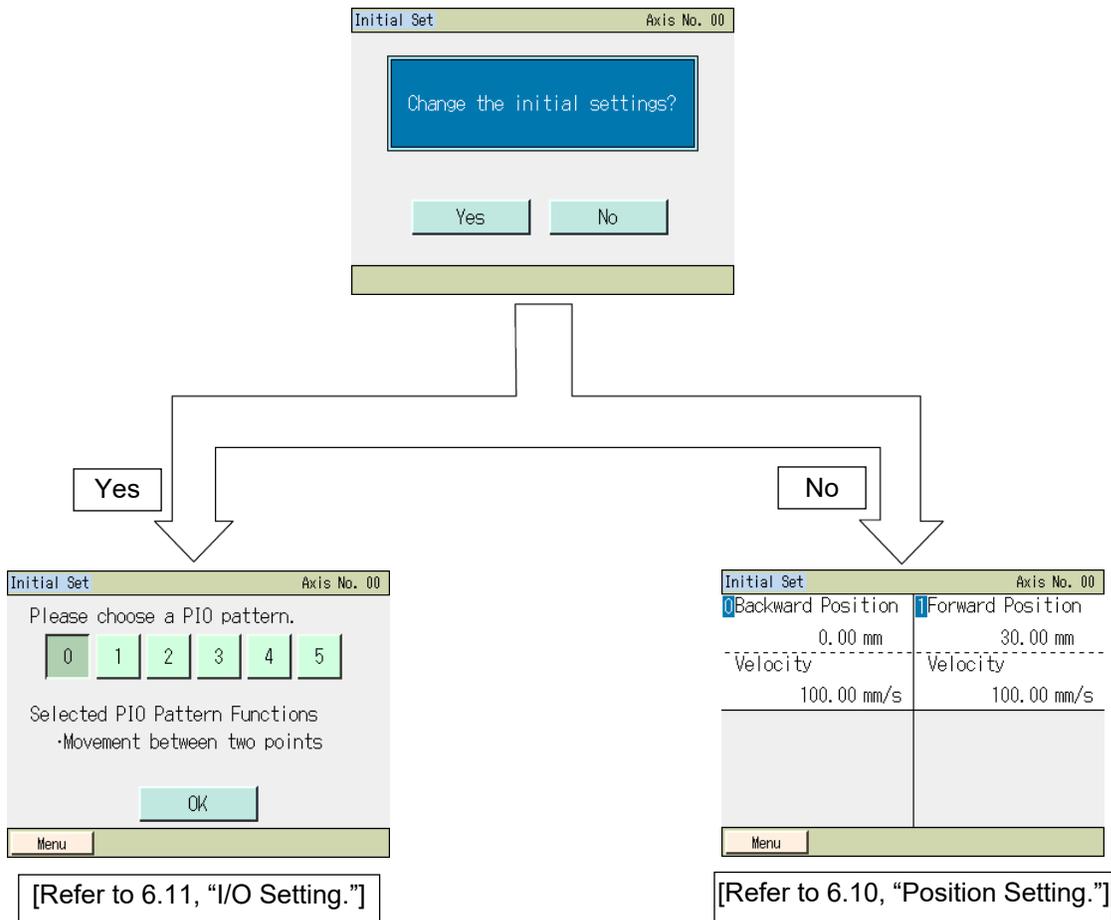


Factory settings

- Operation pattern 0
- Double-solenoid mode with continuous current flow
- No servo control
- Home return MANU
- Output mode LS

In MSEL, settings are also separately needed by the gateway parameter setting tool when starting up.
Refer to [Initial Setting] in the MSEP instruction manual.

6.5 Changing Operating Axis


If multiple controllers are connected to the communication line, the axis selection screen appears. This screen also appears when [Change Operate Axis] is touched on the menu screen. If only one controller is connected, you need not select an axis.

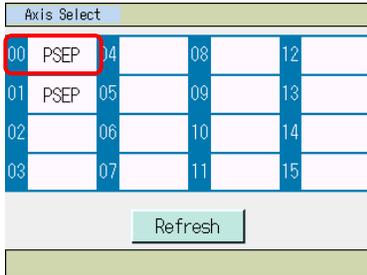

Select and touch the axis you want to connect the touch panel teaching pendant to.




Connection with the selected controller axis starts.

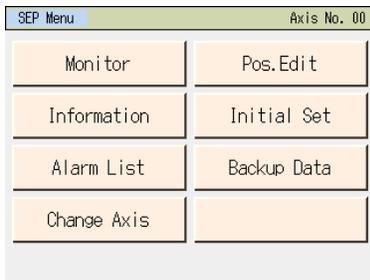

When connection with the controller is established, the SEP menu screen appears.

6.6 Menu Selection

SEP menu

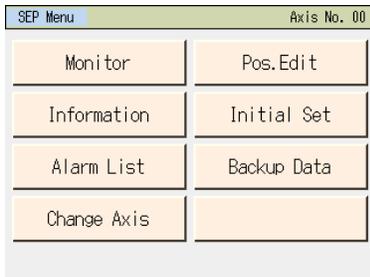


The SEP menu has seven items. Select and touch one of them. The screen changes to the one corresponding to the menu item you have touched.

Menu list

- Monitor Display the controller status. [Refer to 6.7, "Monitor."]
- Information Display the operation pattern, version and other information. [Refer to 6.8, "Information."]
- Alarm List Display alarm details. [Refer to 6.9, "Alarm List."]
- Change Axis Select the controller axis to connect the touch panel teaching pendant to. [Refer to 6.5, "Changing Operating Axis."]
- Pos. Edit Set the position, push power, push band, etc. Move by jogging. [Refer to 6.10, "Position Setting."]
- Backup Data Transfer data between the touch panel teaching pendant and controller. [Refer to 6.15, "Data Backup."]
- Initial Set

Touching [Initial Set] switches to the next selection screen, which is the initial setting screen.

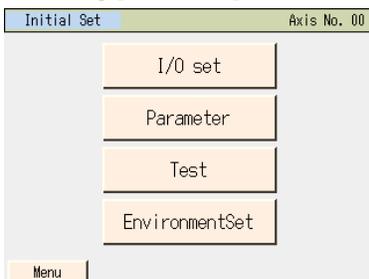


The initial setting screen shows a menu consisting of four items. Select and touch one of them. The screen changes to the one corresponding to the menu item you have touched. Touch Menu to return to the previous SEP menu screen.

Initial setting menu list


- I/O Set Select an operation pattern (PIO pattern 0 to 5), set an operation mode (single solenoid, double solenoid), etc. [Refer to 6.11, "I/O Setting."]
- Parameter Set parameters such as the default positioning band. [Refer to 6.12, "Parameters."]
- Test Perform I/O tests and operation tests for axis movement. [Refer to 6.13, "Test."]
- EnvironmentSet Set the environment such as touch tone. [Refer to 6.14, "Environment Setting."]

6.7 Monitor

The current position, speed, electrical current and system I/O statuses of the controller are displayed.

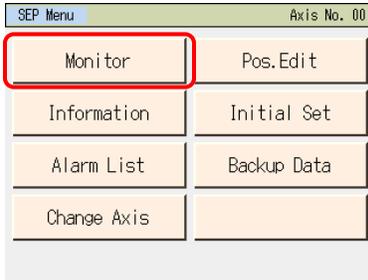

Touch [Monitor] on the SEP menu screen.

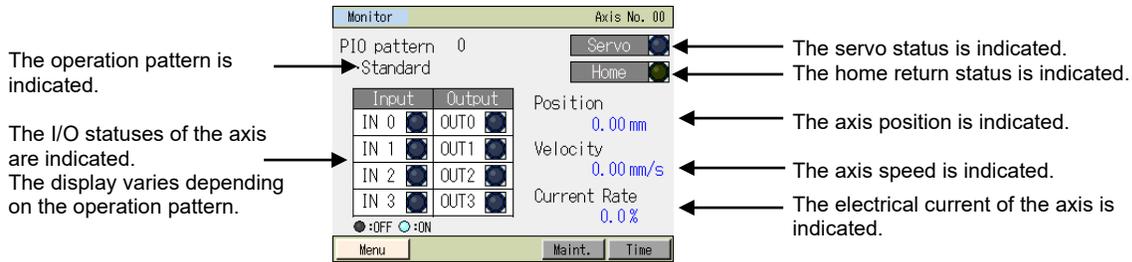

Touch [Menu] to return to the SEP menu screen.

For the MSEP controller:

Touch [Maint.] to change to the maintenance information screen.

Displayed items are the same as CON-related controllers. (FAN Total Driving is not displayed.)

Set a target value for the total number of movements by the parameter No. 26 and a target value for the total driving time by the parameter No. 27.

[Refer to 5.6.2, "Maintenance information screen."]

When replacing the actuator, the operating method is the same as CON-related controllers.

[Refer to 5.6.2.1, "Operating method when replacing the actuator."]

Touch [Time] to change to the time editing screen.

The time setting method is the same as CON-related controllers.

[Refer to 5.6.3, "Controller time setting screen."]

I/O display on monitor screen


PIO pattern Operation mode	Displayed item				
		IN3 (input)/OUT3 (output)	IN2 (input)/OUT2 (output)	IN1 (input)/OUT1 (output)	IN0 (input)/OUT0 (output)
Standard movement between 2 points: 0 Single solenoid	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	-/ *STP (pause signal)	ST0 (move signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Standard movement between 2 points: 0 Double solenoid	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Change travel speed: 1 Single solenoid	Input	-/ SON (servo ON signal) *1	SPDC (travel speed switching signal) RES (reset signal)	-/ *STP (pause signal)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Change travel speed: 1 Double solenoid	Input	-/ SON (servo ON signal) *1	SPDC (travel speed switching signal) RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Position data change: 2 Single solenoid	Input	-/ SON (servo ON signal) *1	CN1 (target position switching signal) RES (reset signal)	-/ *STP (pause signal)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Position data change: 2 Double solenoid	Input	-/ SON (servo ON signal) *1	CN1 (target position switching signal) RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Movement by 2 inputs among 3 points: 3	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	ST1 (forward end movement signal)	ST0 (movement signal 1)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	LS2 (intermediate position detection signal)/ PE2 (intermediate positioning complete signal)*2	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Movement by 3 inputs among 3 points: 4 Double solenoid	Input	-/ SON (servo ON signal) *1	ST2 (position movement 2) RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	LS2 (intermediate position detection signal)/ PE2 (intermediate positioning complete signal)*2	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Continuous back-and-forth operation: 5	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	-/ *STP (pause signal)	ASTR (continuous back-and-forth operation signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2

The signal name in parentheses indicates the signal state before home return.

- *1 If the default I/O setting for servo control is set to "Control", the SON signal applies.
- *2 If the default I/O setting for output signal type is set to "Limit Switch", LS is applied. If it is set to "Position End", PE is applied.
- *3 When "SV" is selected by the default I/O setting for output selection. In this case, the SV signal applies. Either OUT2 or OUT3 can be set depending on the operation parameter and operation mode.


6.8 Information

The operation pattern, version and other information is displayed.

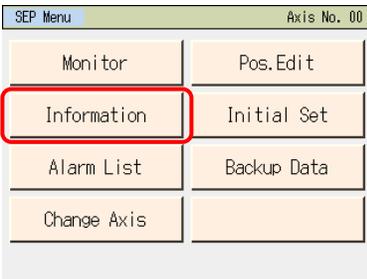

Touch [Information] on the SEP menu screen.

The information selection screen appears.

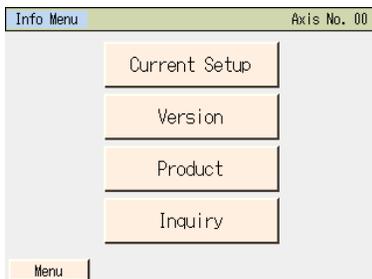


Touch the screen you want to display.

Touch [Menu] to return to the SEP menu screen.


[Current Setup]

You can confirm the operation pattern, operation mode and other information currently set.

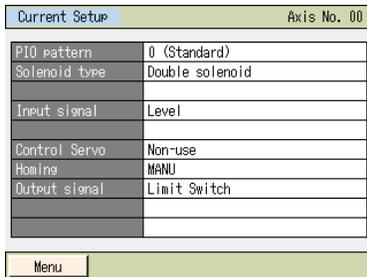

[Version]

You can check the version information, etc.

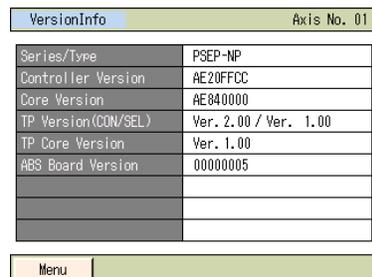

[Product]

You can check the serial number and other manufacturing information.

Product	Axis No. 00
Controller Serial No.	1234-5678-90AB-C
Controller PCB Revision	M.REV: F.REV:
Axis Serial No.	FEDC-BA09-8765-4

Menu


[Inquiry]

You can check how to contact IAI.

Inquiry
IAI Customer center "EIGHT"
 0800-888-0088
OPEN 24 HOURS A DAY. Weekend open 9:00AM to 5:00PM
http://www.iai-robot.co.jp/

6.9 Alarm List

A list of alarms that may generate after the controller power is turned on is shown. [For alarm details, refer to 8, "Error Display."]

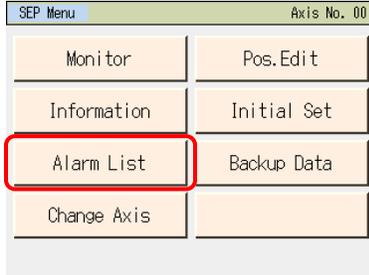

Touch [Alarm List] on the SEP menu screen.

The controller's alarm list appears.

Controller without the calendar function

Controller Alarm List						Axis No. 00	
No	Code	Message	Adrs	Detail	Time		
00	FFF	PowerUP No Error	****	****	0:00:00		
01	0A2	A,B disconnect	1214	0021	0:04:38		
02	FFF	PowerUP No Error	****	****	0:00:00		
03	000		****	****	0:00:00		
04	000		****	****	0:00:00		
05	000		****	****	0:00:00		
06	000		****	****	0:00:00		
07	000		****	****	0:00:00		

↓ Clear

Menu

Touching [↓] displays the list of the next screen.

Controller Alarm List						Axis No. 00	
No	Code	Message	Adrs	Detail	Time		
08	000		****	****	0:00:00		
09	000		****	****	0:00:00		
10	000		****	****	0:00:00		
11	000		****	****	0:00:00		
12	000		****	****	0:00:00		
13	000		****	****	0:00:00		
14	000		****	****	0:00:00		
15	000		****	****	0:00:00		

↑ Clear

Menu

Touching [↑] displays the list of the previous screen.

Touching [Erase] clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on. It does not indicate an error.
The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.

Controller with the calendar function

Controller Alarm List			Axis No. 00
No	Alarm Code	Address Detail Code	Time (yy/mm/dd hh:mm:ss) Message
00	FFF	****	11/08/03 18:32:13 PowerUP No Error
01	0E8	****	11/08/03 17:21:22 A,B disconnect
02	FFF	****	11/08/03 17:15:12 PowerUP No Error
03	0E8	****	11/08/03 17:14:17 A,B disconnect

Menu

Touching [↑] displays the list of the previous screen.


Touching [↓] displays the list of the next screen.

Touching [Erase] clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on.
The occurrence time corresponds to the time each alarm occurred.


6.10 Position Setting (Setting of Position-related Data, Jog/Inching Operation)

Position-related data, such as position, push power and push band, are set. You can move the axis by jogging or inching.

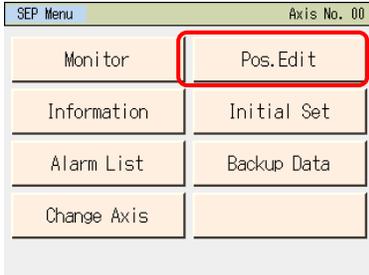

Touch [Pos. Edit] on the SEP menu screen.


If the position data edit password is not "0000," the password entry screen appears.

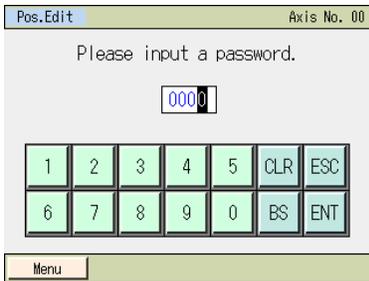

Enter a password and touch [ENT].

You can set a position data edit password from "Position edit password" on the parameter edit screen.

If the correct password has been entered, the display changes to the screen showing a position setting list. The display varies depending on the operation pattern.

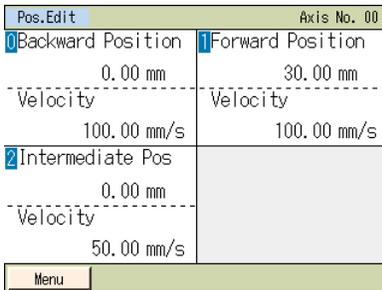

Touch the position you want to set.
Touch [Menu] to return to the SEP menu screen.
The screen shown to the left is an example of operation pattern 3.
The settings of various positions are shown.


Number of positions set

Operation pattern	Move	Number of positions set
Standard movement between 2 points: 0	Movement between two points	2
Change travel speed: 1	Movement between two points	2
Change position: 2	Movement between two points	4
Movement by 2 inputs among 3 points: 3	Movement among two points	3
Movement by 3 inputs among 3 points: 4	Movement among two points	3
Continuous back-and-forth operation: 5	Movement between two points	2
Positioner Mode: 6*1	—	256

*1 It is available to set only for Fieldbus Type of MSEP Controllers.

Touching a desired position displays the screen for setting the target position/speed for the position you have touched.

Set the position, speed, push power, push band, acceleration and deceleration.

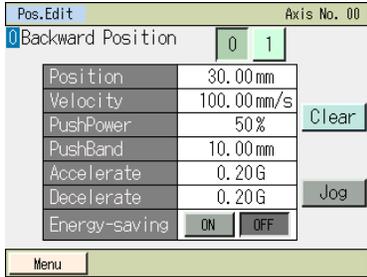


Touch [Menu] to return to the SEP menu screen.

You can perform jog operation on this setting screen.

[1] Position data

Set position data with which to operate the actuator.

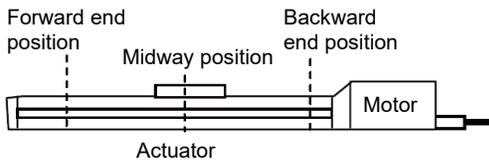

Position data

Position Data		[1]	[2]	[3]	[4]	[5]	[6]	[7]
		Position [mm]	Velocity [mm/s]	Accelerate [G]	Decelerate [G]	PushPower [%]	PushBand [mm]	Ecology
[1]	Forward Position	200.00	50.00	0.1	0.1	70	1.00	Valid
[2]	Backward Position	0.00	50.00	0.1	0.1	0	0	Valid
[3]	Midway Position	100.00	50.00	0.1	0.1	0	0	Valid

[1] Position (mm)--- Set the position to move the actuator to.

The positions must satisfy the following relationships: Backward position < Intermediate position < Forward position

Operation pattern	Move	Setting position		
		Forward Position	Backward Position	Intermediate Position
Standard movement between 2 points: 0	Movement between two points	○	○	
Change travel speed: 1	Movement between two points	○	○	
Position data change: 2	Movement between two points	○	○	
Movement by 2 inputs among 3 points: 3	Movement among three points	○	○	○
Movement by 3 inputs among 3 points: 4	Movement among three points	○	○	○
Continuous back-and-forth operation: 5	Movement between two points	○	○	

[2] Velocity [mm/s]--- Set the actuator speed.

[3] Accelerate [G] --- Set the actuator acceleration.


The input range permits entry of values greater than what is specified in the catalog. Refer to the catalog or instruction manual of your actuator.

[4] Decelerate [G]--- Set the actuator deceleration. [G]

(Reference) Acceleration is explained. The same concept applies to deceleration.

1 G = 9800 mm/s²: Acceleration at which the actuator can increase its speed up to 9800 mm/s per second.

0.3 G: Acceleration at which the actuator can increase its speed up to 2940 mm/s (9800 mm/s x 0.3) per second.

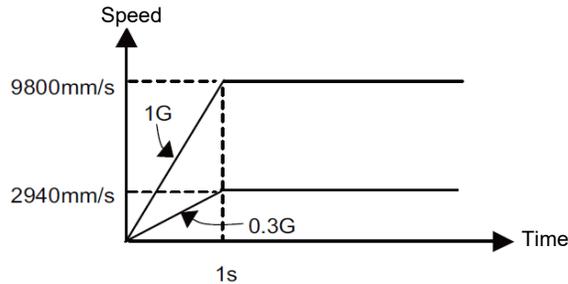


Caution: Acceleration/deceleration setting


- (1) Set accelerations/decelerations not exceeding the rated acceleration/deceleration specified in the catalog or the instruction manual of the actuator. If any acceleration/deceleration is set that exceeds the rated acceleration/deceleration, the life of the actuator may be significantly reduced.
- (2) If the actuator or work part receives impact or generates vibration, lower the acceleration/deceleration. If the system is used continuously with the actuator or work part receiving impact or generating vibration, the life of the actuator may be significantly reduced.
- (3) If the load transferred by the actuator is significantly lighter than the rated payload capacity, you may be able to set accelerations/decelerations exceeding the rating. If this is the case, the tact time can be reduced, so contact IAI. When contacting IAI, tell us the weight, shape and installation method of your work part and installation condition (horizontal/vertical) of your actuator.

[5] Push force [%] --- Set the push torque (current-limiting value) to be used in push-motion operation as a percent (%) value.
 Increasing the current-limiting value increases the push force.
 If "0" is set, positioning operation is performed.
 [For the relationship of push force and current-limiting value, refer to the catalog or the instruction manual.]

[6] Push band [mm]--- Set the travel during push-motion operation.
 Except for CON method pressing in Fieldbus Type of MSEP Controllers, the actuator moves with the speed and the rated torque set in the parameters for the positioning as it is for the normal positioning operation until the remaining movement amount gets into the area set here. Once it gets in the area, the actuator performs a pressing movement to the position of [1].
 The speed during push motion operation is 20 mm/s (when parameter number 7 is set as default). Do not specify the setting exceeding 20 mm/s. When the setting in [2] is less than the push-motion speed, push-motion will be performed at the speed of the setting value.

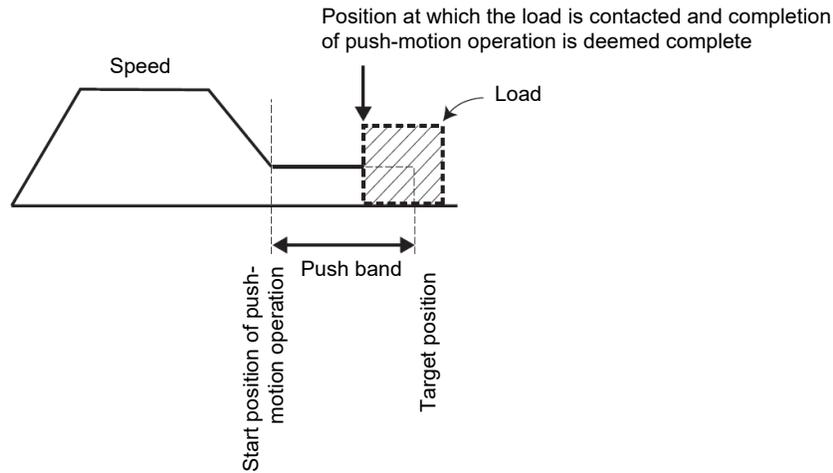

If CON method pressing in Fieldbus Type of MSEP Controllers is selected, the maximum pressing amount in the pressing operation from the target position is defined in Position Mode. While considering the mechanical inconsistency of the work piece, set the positioning band so the positioning would not end before the work piece gets pressed towards the target.

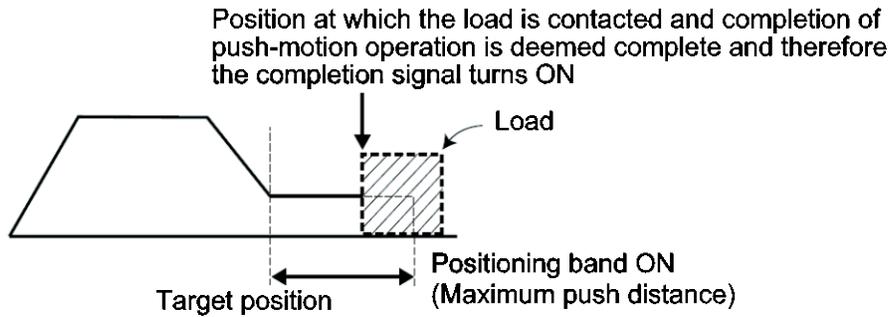


[7] Ecology... When Ecology is enabled, you can have the motor power (servo) turned off automatically upon elapse of a specified period to save power after completion of positioning. Set the applicable period beforehand using a parameter.

Parameter No.	Parameter name	Initial value	Setting range
10	Auto servo OFF delay time [sec]	1	0 ~ 9999

[Auto servo OFF]

The servo will turn off automatically upon elapse of a specified period after completion of positioning. When the next positioning command is issued, the servo turns on automatically and positioning is performed. Since no holding current flows while the motor is at standstill, power consumption can be reduced.

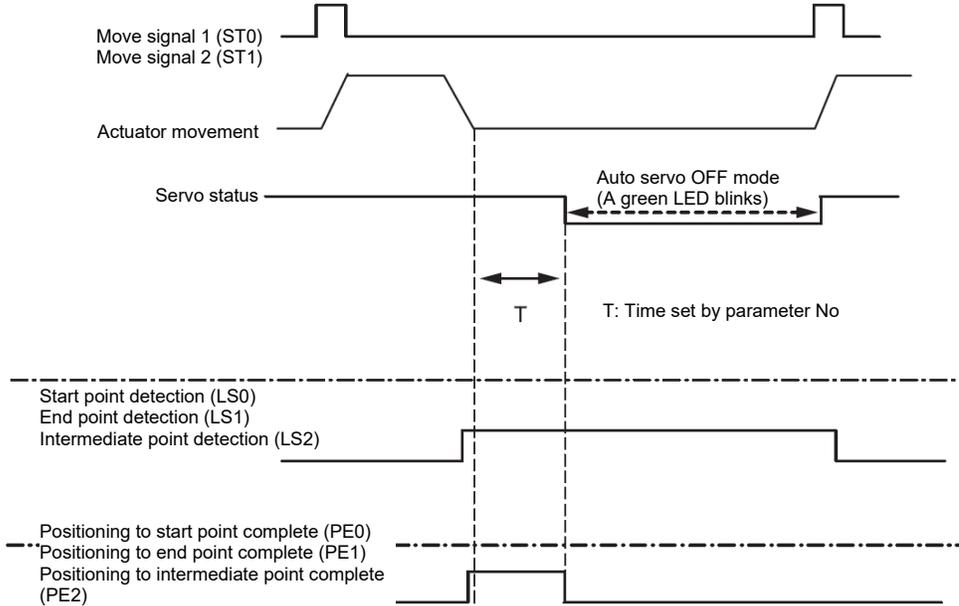

[Statuses of position detection output signals when the push function is not used]

Even when the servo is turned off, as long as the actuator is positioned within the positioning band (parameter No. 1) the start point detection signal (LS0), end point detection signal (LS1) or intermediate point detection signal (LS2) will turn ON according to the applicable position, just like when a sensor is used. Accordingly, the position detection signal that has turned ON will remain ON after completion of positioning unless the actuator moves.

[Status of position complete signals when the push function is used]

In push-motion operation, the servo does not turn off automatically while the actuator is pushing the work part. If the actuator has missed the work part, the servo turns off automatically. Once the servo turns off, a position complete status is lost. Accordingly, the push complete signal 0 (PE0), push complete signal 1 (PE1) and push complete signal 2 (PE2) will all turn OFF regardless of the stop position.



Caution: No holding torque is applied in the auto servo OFF mode. Since the actuator will move in this condition if an external force is applied, pay due attention to contact and safety when setting any operation involving auto servo OFF.

To change the travel speed for operation pattern (PIO pattern) 1, set the position at which to change the speed, and the new speed, in addition to the position data.

Position setting screen	Speed Chg Pos	
	[8] Change position [mm]	[9] Change speed [mm]
[0] Forward Position	60.00	30.00
[1] Backward Position	40.00	30.00


- [8] Speed Chg Pos --- Set the position at which to switch the speed while the actuator is moving to the forward end position or backward end position.
- [9] Speed Chg Vel --- Set the speed to change to.

To change the position data for operation pattern (PIO pattern) 2, set the new position data for forward end or backward end, in addition to the current position data for forward end position or backward end position.

- If CN1 (Operation switching signal) is OFF, the position data for forward end position becomes [1]: Forward end position.
If the signal is ON, the position data becomes [3]: Forward end position.
- If CN1 (Operation switching signal) is OFF, the position data for backward end position becomes [0]: Backward end position.
If the signal is ON, the position data becomes [2]: Backward end position.

Position Data	Position	Velocity	Accelerate	Decelerate	PushPower	PushBand	Ecology
[0]: Backward Position	0.00	50.00	0.1	0.1	0	0	Valid
[1]: Forward Position	200.00	50.00	0.1	0.1	70	1.00	Valid
[2]: Backward Position	10.00	50.00	0.1	0.1	0	0	Valid
[3]: Forward Position	100.00	50.00	0.1	0.1	60	1.00	Valid

[2] Basic operation

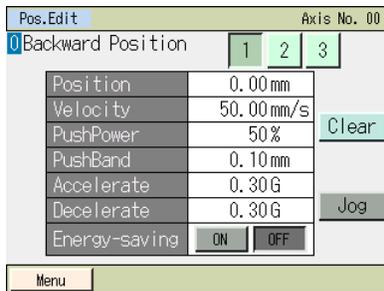

Touch the value of the position or other setting item.
When the numeric keypad appears, enter a desired value and then touch [ENT].


Touching [0], [1] or [2] switches to the corresponding setting screen for 0 (backward end position), 1 (forward end position) or 2 (intermediate position).

(Note) For the position, set a value meeting the condition "Home ≤ Backward end position ≤ Intermediate position ≤ Forward end position."

Touching [Jog] switches to jog operation.

[Jog operation]

You can acquire position data via jogging operation.

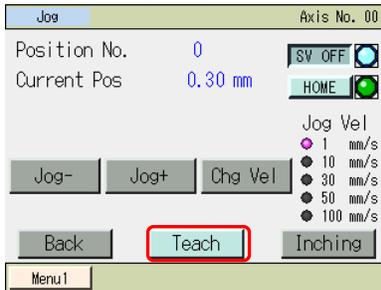

Operation on the jog screen


- [Jog-], [Jog+] :The axis jogs while each button is touched. [Jog-] moves the axis in the negative direction, while [Jog+] moves the axis in the positive direction.
- [SV ON] :Touching [SV ON] while the servo is OFF turns on the axis servo and \bigcirc becomes lit.
Touching [SV OFF] while the servo is ON turns off the axis servo and \bigcirc becomes unlit.
- [HOME] :Touching [HOME] while home return is not yet completed causes the axis to return home and \bigcirc becomes lit.
- [Chg Vel] :The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Chg Vel] is touched.
- [Inching] :Touching [Inching] changes to the inching screen.

Position acquisition operation

Touch [Teach]. A confirmation screen appears.


You can touch [\uparrow] or [\downarrow] to change the position number.

Touching [Yes] acquires the current position.

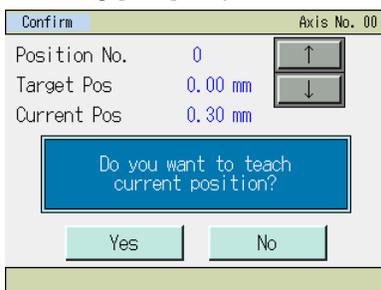

[Inching operation]

You can acquire position data via inching operation.

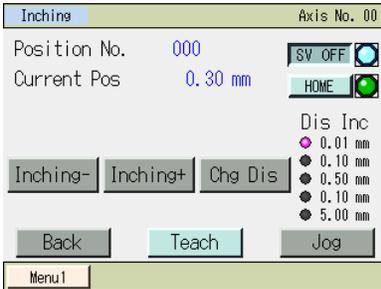

Operation on the jog screen


- [Inching-], [Inching+] :Touching each button once moves the axis by inching. [Inching-] moves the actuator in the negative direction. [Inching+] moves the actuator in the positive direction.
- [SV ON] :Touching [SV ON] while the servo is OFF turns on the axis servo and O becomes lit. Touching [SV OFF] when the servo is ON turns off the axis servo and O becomes unlit.
- [HOME] :Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Chg Dis] :The inching distance changes in the order of 0.01, 0.10, 0.50, 1.00 and 5.00 mm every time [Chg Dis] is touched.
- [Jog] :Touching [Jog] changes to the jog screen.

Position acquisition operation

Touch [Teach]. A confirmation screen appears.

You can touch [↑] or [↓] to change the position number.

Touching [Yes] acquires the current position.

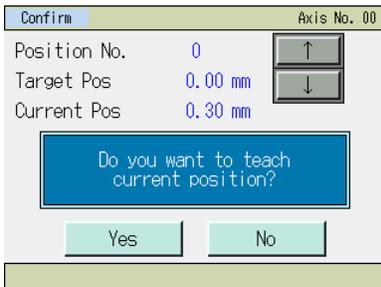






[3] Examples of position setting operations
Respective operations are explained by giving specific examples.

1) Setting of position, speed, acceleration and deceleration








An example of operation mode 0 (standard) is explained.







Set positions to move the actuator back and forth between 10.0 mm and 100.0 mm.

Forward end position: 100.0 mm, backward end position: 10.0 mm, back-and-forth speed: 50 mm/sec, back-and-forth acceleration: 0.3 G, back-and-forth deceleration: 0.3 G


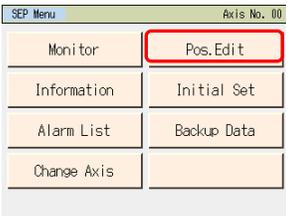
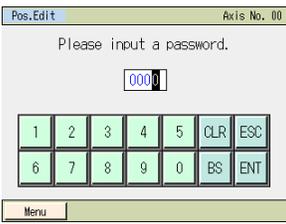
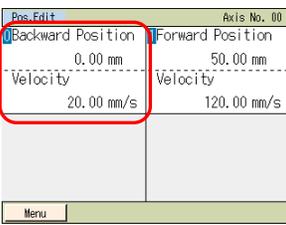
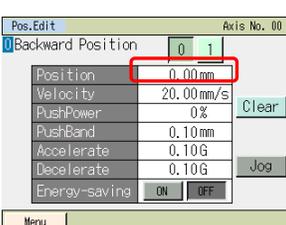
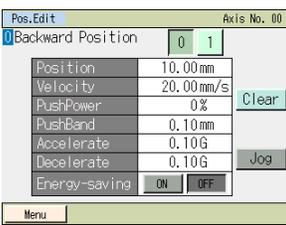
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Pos.Edit].		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position data edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch the value in Position. The numeric keypad appears. Touch [1] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
5	10.00 is shown in Position.		Touch [Menu] to return to the position setting screen.






No.	Operation	Screen	Remarks
6	Touch the value in Velocity. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
7	50.00 is shown in Velocity.		Touch [Menu] to return to the position setting screen.
8	Touch the value in Accelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
9	0.30 is shown in Accelerate.		Touch [Menu] to return to the position setting screen.
10	Touch the value in Decelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
11	0.30 is shown in Decelerate.		Touch [Menu] to return to the position setting screen.

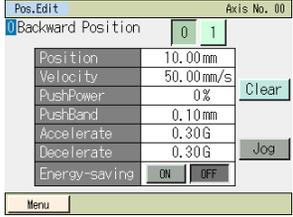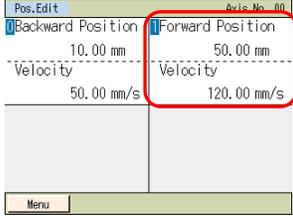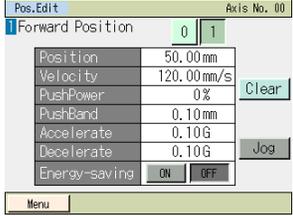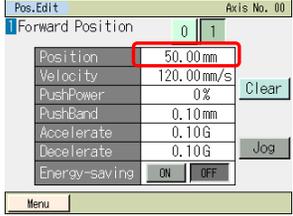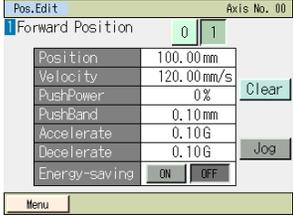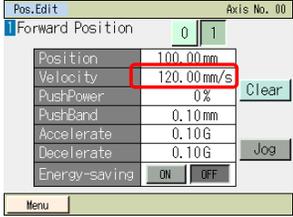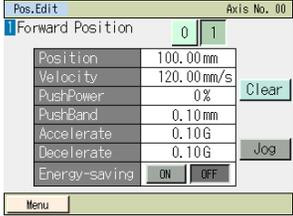No.	Operation	Screen	Remarks
12	Touch [Menu].		
13	Set the position, acceleration and deceleration relating to the forward end position. Touch [Forward Position].		Touch [Menu] to return to the SEP menu screen.
14	The display switches to the forward end screen. Set the position, acceleration and deceleration relating to the forward end position.		Touch [Menu] to return to the position setting screen.
15	Touch the value in Position. The numeric keypad appears. Touch [1], [0] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
16	100.00 is shown in Position.		Touch [Menu] to return to the position setting screen.
17	Touch the value in Velocity. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
18	50.00 is shown in Velocity.		Touch [Menu] to return to the position setting screen.

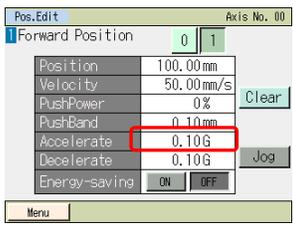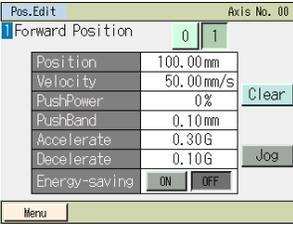
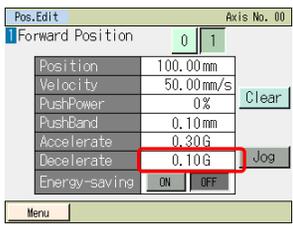
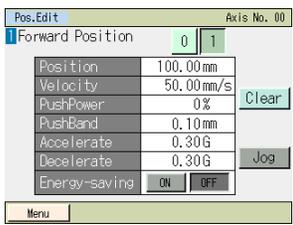
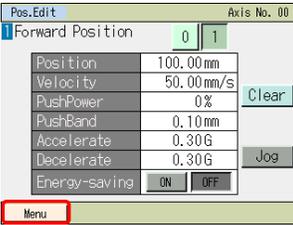
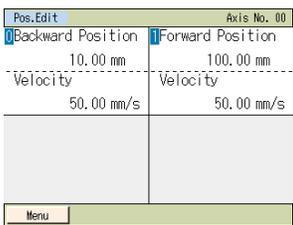
No.	Operation	Screen	Remarks
19	Touch the value in Accelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
20	0.30 is shown in Accelerate.		Touch [Menu] to return to the position setting screen.
21	Touch the value in Decelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
22	0.30 is shown in Decelerate.		Touch [Menu] to return to the position setting screen.
23	Touch [Menu].		Touch [Menu] to return to the position setting screen.
24			Touch [Menu] to return to the SEP menu screen.

- 2) Direct teaching (Manually move the slider to the target position and then acquire the achieved position (current position) as the forward end position or backward end position)
 An example of operation mode 0 (standard movement between 2 points) is explained.
 How to acquire the current position, or 50.0 mm, as the backward end position is explained.

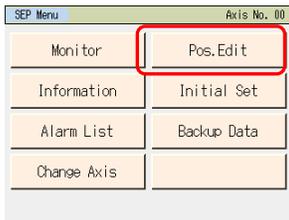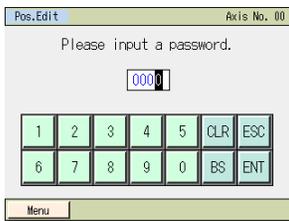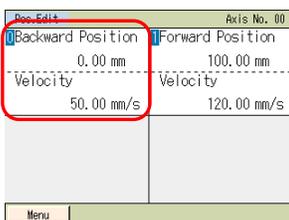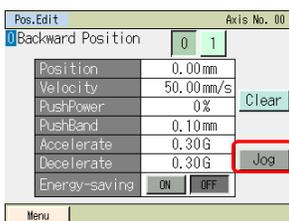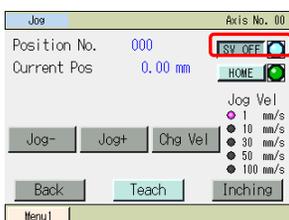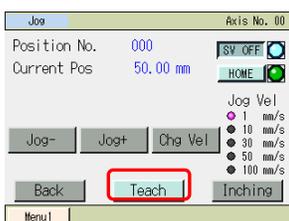No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Pos.Edit].		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is ON, touch [SV OFF] to turn off the servo.		
6	Manually move the slider or rod to the target position of 50.0 mm. Touch [Teach].		


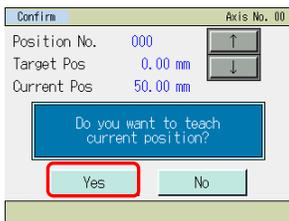
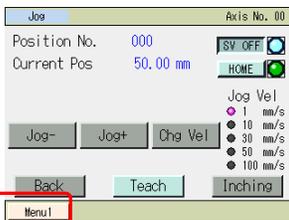
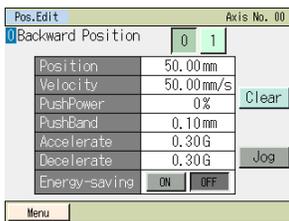
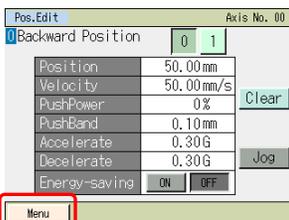
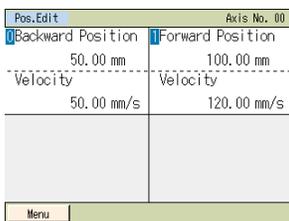
No.	Operation	Screen	Remarks
7	Touch [Yes].		
8	Touch [Menu].		
9	50.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
10	Touch [Menu].		Touch [Menu] to return to the position setting screen.
11			Touch [Menu] to return to the SEP menu screen.

- 3) Jog (Use the arrow keys [Jog-] and [Jog+] to jog the actuator to the target position and then acquire the achieved position (current position) as the forward end position or backward end position).
 An example of operation mode 0 (standard movement between 2 points) is explained.
 How to acquire the current position, or 80.0 mm, as the backward end position is explained.

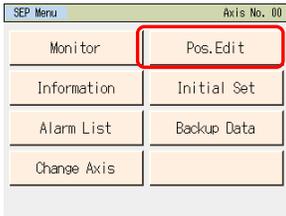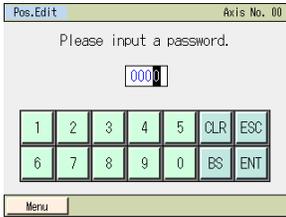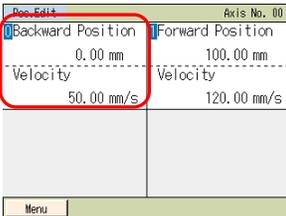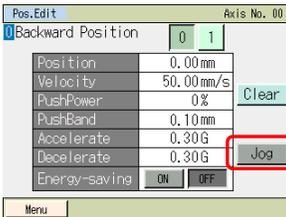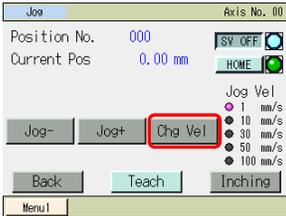
No.	Operation	Screen	Remarks
1	Touch [Pos. Edit] on the SEP menu screen.		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is off, touch [SV ON] to turn on the servo.		
6	Touch [Chg Vel] to set a desired jog speed.		

No.	Operation	Screen	Remarks
7	Use [Jog-] and [Jog+] to move the slider or rod to the target position of 80.0 mm.		
8	Touch [Teach].		
9	Touch [Yes].		
10	Touch [Menu].		
11	80.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
12	Touch [Menu].		Touch [Menu] to return to the position setting screen.
13			Touch [Menu] to return to the SEP menu screen.

- 4) Inching (Use the arrow keys [Inching-] and [Inching+] to inch the actuator to the target position and then acquire the achieved position (current position) as the forward end position or backward end position). An example of operation mode 0 (standard movement between 2 points) is explained. How to acquire the current position, or 30.0 mm, as the backward end position is explained.

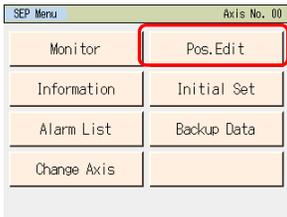
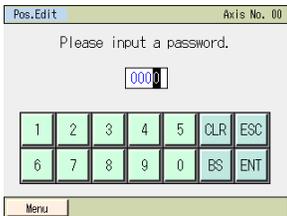
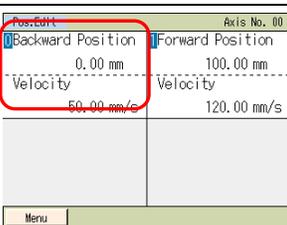
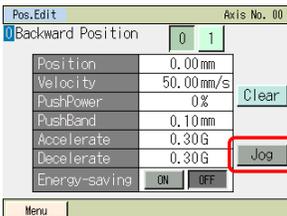
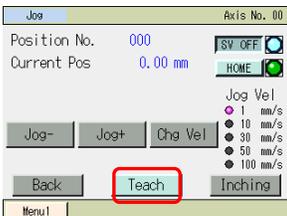
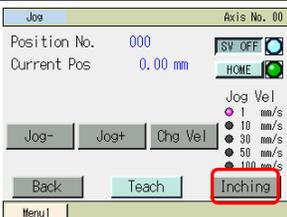
No.	Operation	Screen	Remarks														
1	On the SEP menu screen: Touch [Pos.Edit].																
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.														
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.														
4	Touch [Jog].	 <table border="1" data-bbox="704 1199 943 1346"> <tr> <td>Position</td> <td>0.00 mm</td> </tr> <tr> <td>Velocity</td> <td>50.00 mm/s</td> </tr> <tr> <td>PushPower</td> <td>0%</td> </tr> <tr> <td>PushBand</td> <td>0.10 mm</td> </tr> <tr> <td>Accelerate</td> <td>0.30 G</td> </tr> <tr> <td>Decelerate</td> <td>0.30 G</td> </tr> <tr> <td>Energy-saving</td> <td>ON / OFF</td> </tr> </table>	Position	0.00 mm	Velocity	50.00 mm/s	PushPower	0%	PushBand	0.10 mm	Accelerate	0.30 G	Decelerate	0.30 G	Energy-saving	ON / OFF	Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
Position	0.00 mm																
Velocity	50.00 mm/s																
PushPower	0%																
PushBand	0.10 mm																
Accelerate	0.30 G																
Decelerate	0.30 G																
Energy-saving	ON / OFF																
5	If the servo is off, touch [SV ON] to turn on the servo.																
6	Touch [Inching]. The display switches to the inching screen.		Touch [Menu] to return to the itemized position setting screen.														




No.	Operation	Screen	Remarks
7	Touch [Chg Dis] and set a desired inching distance.		
8	Use [Inching-] and [Inching+] to move the slider or rod to the target position of 30.0 mm.		
9	Touch [Teach].		
10	Touch [Yes].		
11	Touch [Menu].		
12	30.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
13	Touch [Menu].		Touch [Menu] to return to the position setting screen.

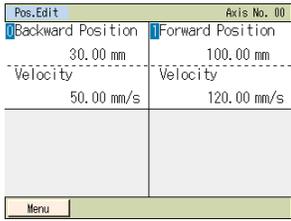No.	Operation	Screen	Remarks
14			Touch [Menu] to return to the SEP menu screen.

- 5) Setting of push-motion operation (push power, push band)
 An example of operation mode 0 (standard movement between 2 points) is explained.
 An example of push-motion operation at the backward end is explained.

Push power: 50%, push band: 5.0 mm

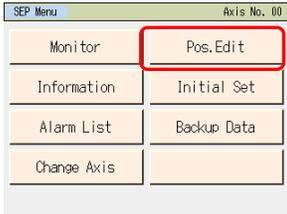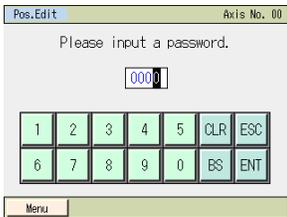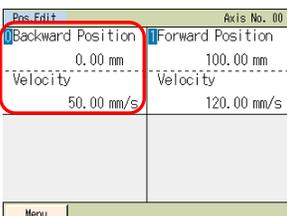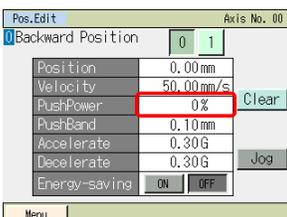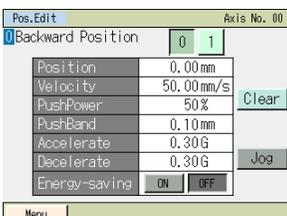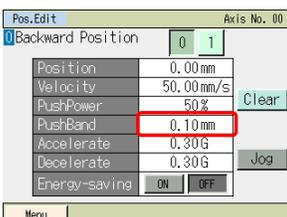No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Pos.Edit].		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch the value in [PushPower]. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
5	50 is shown in PushPower.		Touch [Menu] to return to the position setting screen.
6	Touch the value in [PushBand]. The numeric keypad appears. Touch [5], and touch [ENT].		Touch [Menu] to return to the position setting screen.



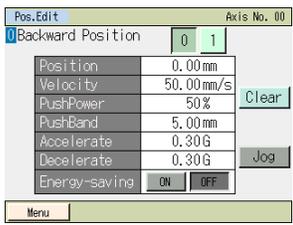
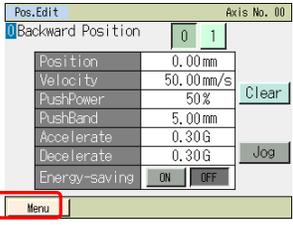
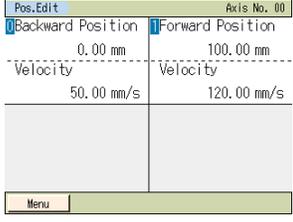
No.	Operation	Screen	Remarks
7	5.00 is shown in Push Band.		Touch [Menu] to return to the position setting screen.
8	Touch [Menu].		Touch [Menu] to return to the position setting screen.
9			Touch [Menu] to return to the SEP menu screen.








6) Setting of ecology function (automatic servo OFF function)

An example of operation mode 0 (standard) is explained.

How to turn off the servo automatically 5.0 seconds after stopping is explained.

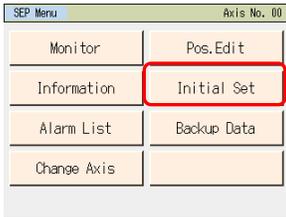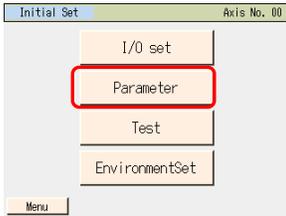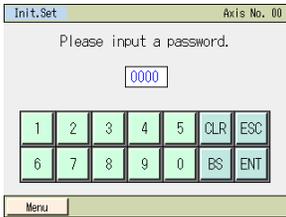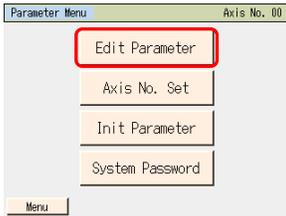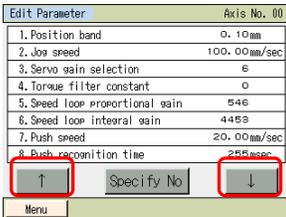
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Initial Set].		
2	Set a desired automatic servo OFF delay time. Touch [Parameter].		
3	If the system password is other than "0000," the password input screen appears. Input a system password and touch [ENT].		The default system password is "5119". For how to change the system password, refer to 6.12, "Parameters [Change System Password]."
4	Touch [Edit Parameter].		
5	Touch [↑] and [↓] to navigate through the screens until the one for setting the automatic servo OFF delay time is displayed.		
6	Touch the value of automatic servo OFF delay time. The numeric keypad appears. Touch [5], and touch [ENT].		

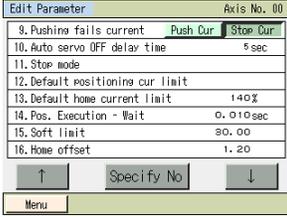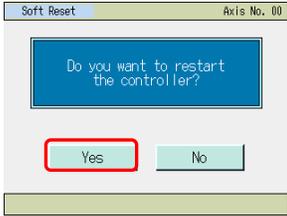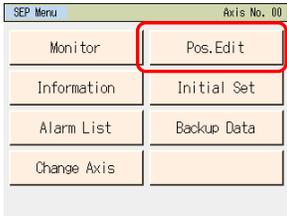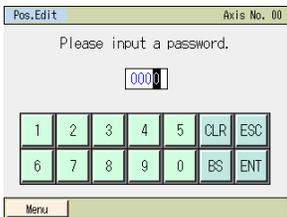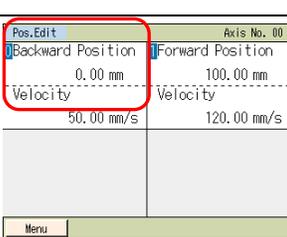No.	Operation	Screen	Remarks
7	5 is shown.		
8	Touch [Menu].		
9	Touch [Yes].		Touch [No], and the new setting will not be reflected in the controller until the power is reconnected.
10			
11	The controller is restarted and the SEP menu screen will appear. Touch [Pos.Edit].		
12	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password with the "Position edit password" parameter on the parameter edit screen.
13	Set the ecology function at the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.


No.	Operation	Screen	Remarks
14	Touch [ON].		Touch [Menu] to return to the position setting screen.
15	Touch [Menu].		Touch [Menu] to return to the position setting screen.
16	Set the ecology function at the forward end position. Touch [Forward Position].		Touch [Menu] to return to the SEP menu screen.
17	The display switches to the forward end screen. Set the ecology function related to the forward end position.		Touch [Menu] to return to the position setting screen.
18	Touch [ON].		Touch [Menu] to return to the position setting screen.
19	Touch [Menu].		Touch [Menu] to return to the position setting screen.
20			Touch [Menu] to return to the SEP menu screen.

6.11 I/O Setting (Setting of Operation Parameters, Etc.)

You can select an operation pattern (PIO pattern) (0 to 5), set an operation mode (single solenoid, double solenoid), etc.

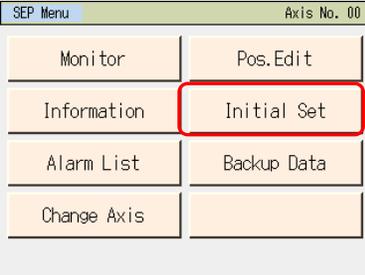


Touch [Initial Set] on the SEP menu screen.

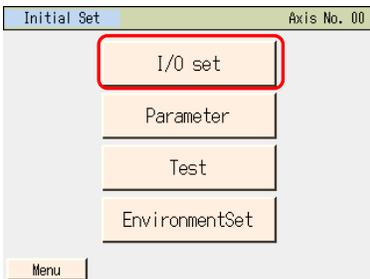

Touch [I/O set]

Touch [Menu] to return to the SEP menu screen.


If the system password is other than "0000," the password entry screen appears.

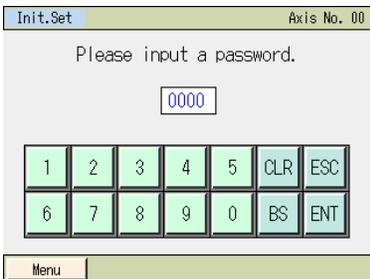

Enter a system password and then touch [ENT].

The default system password is "5119".
For how to change the system password, refer to 6.12, "Parameters [Change System Password]."

If the correct password has been entered, the display changes to the screen for setting the operation pattern.

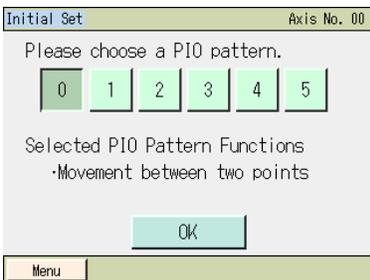


Select and touch one of operation patterns [0] to [5], and then touch [OK].


*(Note) If connected to Fieldbus Type in MSEP Controllers, [6] (Positioner Mode) is shown.
If selecting [6], it is not necessary to have an operation for the initial setting.
The operation is complete.*

The screen corresponding to the selected operation pattern appears.


Operation pattern 0 (standard movement between 2 points), operation pattern 1 (change travel speed), operation pattern 2 (change position data)

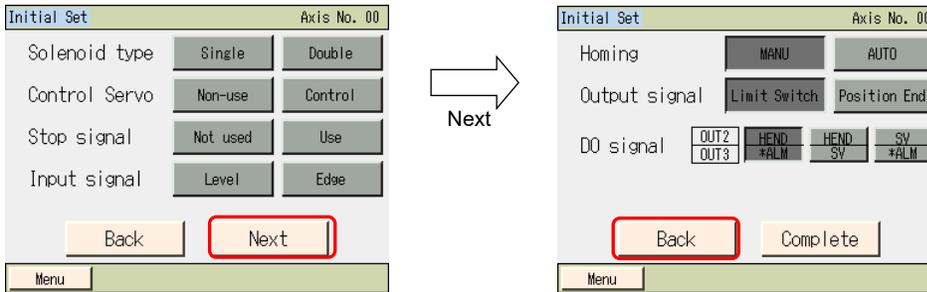

Operation pattern 3 (movement by 2 inputs among 3 points), operation pattern 4 (movement by 3 inputs among 3 points)

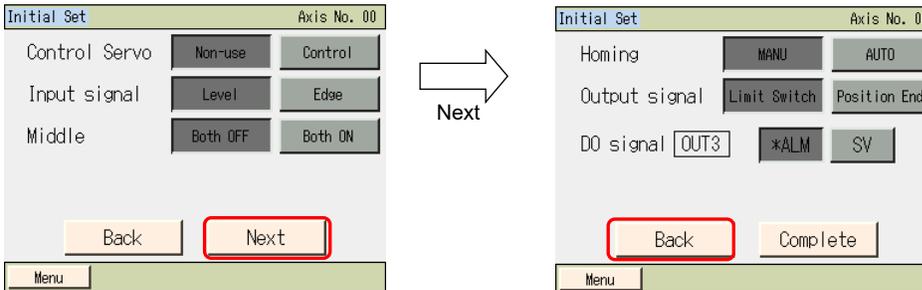

Operation pattern 5 (continuous back-and-forth operation)

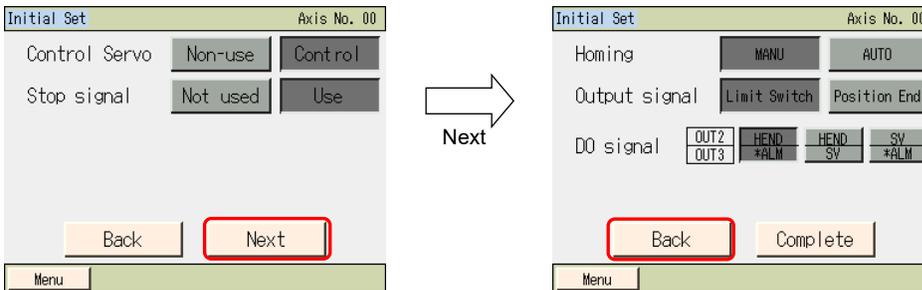

The items that can be set vary with each operation mode.

Touch [Back] to return to the operation pattern screen.

Setting item

Operation pattern	Operation mode	Intermediate position Movement method	Double solenoid type	Pause Signal *STP	Control Servo SON	OUT2, OUT3	OUT3	Home return	DO signal
	Single solenoid/ double solenoid	Both OFF/ Both ON	Level/ Edge	Not used/ Use	Non-use/ Control	HEND,*ALM/SV,*ALM/HEND,SV	*ALM/SV	MANU/AUTO	Limit switch LS/ Positioning PE
PIO pattern 0 Standard movement between 2 points	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 1 Change travel speed	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 2 Position data change	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 3 Movement by 2 inputs among 3 points		<input type="radio"/>			<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PIO pattern 4 Movement by 3 inputs among 3 points			<input type="radio"/>		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PIO pattern 5 Continuous back-and-forth operation				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>

For details on each setting item, refer to the instruction manual for your "ASEP/PSEP/DSEP controller Instruction Manual", "MSEP controller Instruction Manual".

Operation pattern

Equivalent air cylinder circuits are shown for your reference.

Operation pattern	Description	Motorized cylinder connection method	Air cylinder circuit (reference)
PIO pattern 0 Single solenoid type (Standard movement between 2 points)	The actuator can be moved between two points using the same control you normally use with an air cylinder. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 0 Double solenoid type (Standard movement between 2 points)			
PIO pattern 1 Single solenoid type (Movement between 2 points) (Change travel speed)	The actuator can be moved between two points using the same control you normally use with an air cylinder. The speed can be changed during movement. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 1 Double solenoid type (Movement between 2 points) (Change travel speed)			

(Note) The air cylinder circuits are drawn with signal symbols corresponding to those used by ASEP/PSEP/DSEP/MSEP controllers.
 For details on signal symbols, refer to your "ASEP/PSEP/DSEP Instruction Manual", "MSEP controller Instruction Manual".

Operation pattern

Equivalent air cylinder circuits are shown for your reference.

Operation pattern	Description	Motorized cylinder connection method	Air cylinder circuit (reference)
<p>PIO pattern 2</p> <p>Single solenoid type</p> <p>(Movement between two points)</p> <p>(Position data change)</p>	<p>The actuator can be moved between two points using the same control you normally use with an air cylinder.</p> <p>You can switch between positioning operation and push-motion operation during operation.</p> <p>The target position (forward end, backward end) can be set.</p> <p>The travel speed and acceleration/deceleration can be specified.</p>		
<p>PIO pattern 2</p> <p>Double solenoid type</p> <p>(Movement between two points)</p> <p>(Position data change)</p>	<p>Push-motion operation can also be performed.</p>		
<p>PIO pattern 3</p> <p>Single solenoid type</p> <p>(Movement by 2 inputs among 3 points)</p>	<p>The actuator can be moved among three points using the same control you normally use with an air cylinder.</p> <p>The target position (forward end, backward end) can be set.</p> <p>The travel speed and acceleration/deceleration can be specified.</p> <p>Push-motion operation can also be performed.</p>		
<p>PIO pattern 4</p> <p>Double solenoid type</p> <p>(Movement by 3 inputs among 3 points)</p>	<p>The actuator can be moved among three points using the same control you normally use with an air cylinder.</p> <p>The target position (forward end, backward end) can be set.</p> <p>The travel speed and acceleration/deceleration can be specified.</p> <p>Push-motion operation can also be performed.</p>		
<p>PIO pattern 5</p> <p>(Continuous back-and-forth operation)</p>	<p>The actuator moves back and forth between the two points of forward end and backward end.</p> <p>The target position (forward end, backward end) can be set.</p> <p>The travel speed and acceleration/deceleration can be specified.</p> <p>Push-motion operation can also be performed.</p>		

(Note) The air cylinder circuits are drawn with signal symbols corresponding to those used by ASEP/PSEP/DSEP/MSEP controllers.
For details on signal symbols, refer to your "ASEP/PSEP/DSEP Instruction Manual", "MSEP controller Instruction Manual".

[1] Types of I/O setting (setting of operation parameters, etc.)

[Operation mode]

Select either the single-solenoid operation mode or double-solenoid operation mode.

[Intermediate move method]

Select whether to move to the intermediate position with both ST0 and ST1 turned ON, or OFF, when operation pattern 3 is set.

[Double solenoid type]

Select either Level or Edge as the condition for turning the double solenoids ON when the double-solenoid type operation mode and operation pattern 4 are set.

[Pause signal *STP]

Select whether to use or not use the pause signal *STP (input to IN2) when the single-solenoid type operation mode and operation pattern 5 are set.

[Servo control SON]

Select whether to use or not use the servo control (IN3 input signal SON (servo ON/OFF control)).

[Output signal selection, operation pattern 0, 1, 2, 5]

When operation pattern 0, 1, 2 or 5 is set, set the OUT2 and OUT3 output signals if you have selected to use the servo control.

Select from the three patterns shown in the table.

	Selection 1	Selection 2	Selection 3
OUT2	HEND (home return complete signal)	SV (servo ON output signal)	HEND (home return complete signal)
OUT3	*ALM (alarm output signal)	*ALM (alarm output signal)	SV (servo ON output signal)

[Output signal selection operation pattern 3, 4]

When operation pattern 3 or 4 is set, set the OUT3 output signal if you have selected to use the servo control.

* Select either ALM (alarm status signal) or SV (servo ON status signal).

[Home return operation]

Select a home return method.

- AUTO: Home return starts when the power is turned on.
- MANU: Home return starts when the first ST0 signal is input following the power on.


[Output signal]

Select the output signal to turn ON when the actuator moves and positioning is completed.

Select either Limit Switch (LS) or Position End (PE).


[2] Basic operation

The setting method is explained using an example of operation pattern 0.

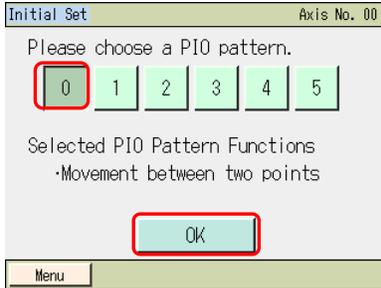


Touch [0] and touch [OK].

Touch [Menu] to return to the initial setting menu screen.

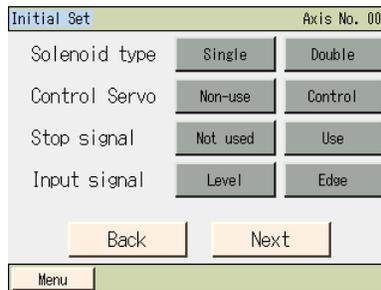


Touch [Menu] to return to the initial setting menu screen.

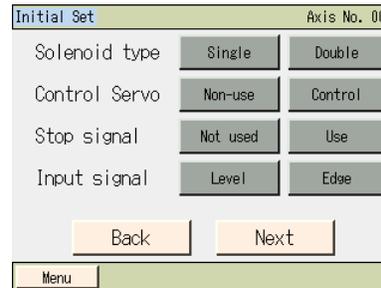

Select and touch either [Single] or [Double].


Hereafter, set one by one the items denoted by a O in the table of setting items in 6.11. When all items on this screen have been set, touch [Next].

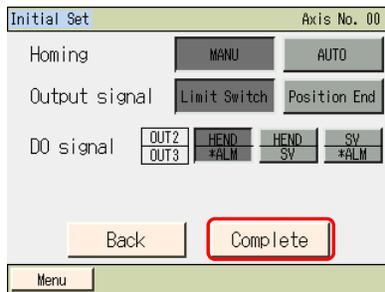

When the setting is complete, touch [Complete].


Touch [Back] to return to the previous screen.

Touch [Menu] to return to the initial setting menu screen. All settings you have made under the selected operation pattern become invalid.

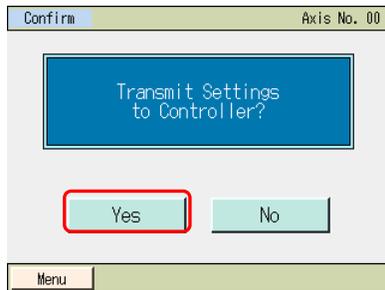

Touch [Yes].

Touch [No] to return to the operation pattern selection screen. All settings you have made under the selected operation pattern become invalid.

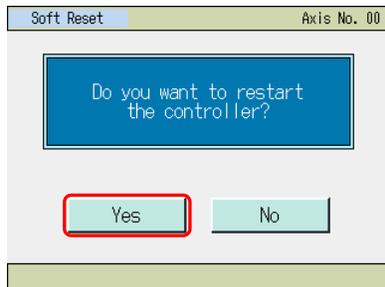

Touch [Yes].

The controller is restarted.

The controller operates according to the operation pattern settings you have made.

The display returns to the SEP menu screen.








Touch [No], and the controller will not operate according to the operation pattern settings you have made until restarted.




- [3] Examples of I/O setting operations
Respective operations are explained by giving specific examples.

Example of operation mode 0 (standard movement between 2 points) Set as follows:

Operation mode	Single solenoid
Use of pause command (*STP)	Not used
Control Servo	Control
OUT2, OUT3 output signals	OUT2 HEND, OUT3 *ALM
Home	AUTO (start home return upon power on)
DO signal	LS0 (backward end position detection), LS1 (forward end position detection)

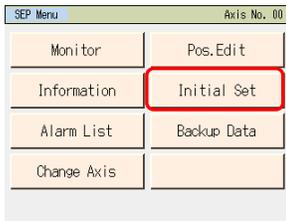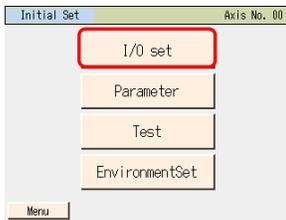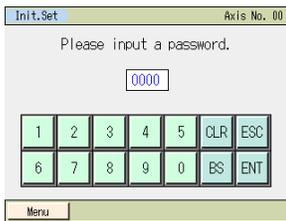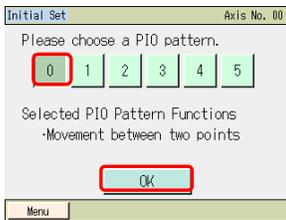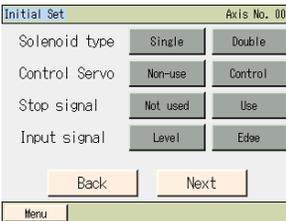
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Initial Set].		
2	Touch [I/O set].		Touch [Menu] to return to the SEP menu screen.
3	If the system password is other than "0000," the password input screen appears. Input a system password and touch [ENT].		The default system password is "5119". For how to change the system password, refer to 6.12, "Parameters [Change System Password]."
4	Touch [0] and touch [OK]. Operation pattern 0 is selected.		Touch [Menu] to return to the initial setting menu screen.
5			Touch [Menu] to return to the initial setting menu screen.

No.	Operation	Screen	Remarks
6	Touch [Single]. The single-solenoid operation mode is selected.		Touch [Menu] to return to the initial setting menu screen.
7	Touch [Control]. Servo control is selected.		Touch [Menu] to return to the initial setting menu screen.
8	Touch [Not used]. Non-use of pause command (*STP) is selected.		Touch [Menu] to return to the initial setting menu screen.
9	Touch [Next].		
10	Touch [AUTO]. AUTO home return is selected.		Touch [Menu] to return to the initial setting menu screen.
11	Touch [LimitSwitch]. LS0 (backward end position detection) and LS1 (forward end position detection) are selected as the output signals.		Touch [Menu] to return to the initial setting menu screen.
12	Touch [HEND*ALM]. HEND and *ALM are selected as the OUT2 and OUT3 outputs.		Touch [Menu] to return to the initial setting menu screen.

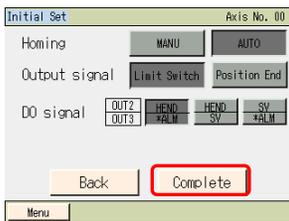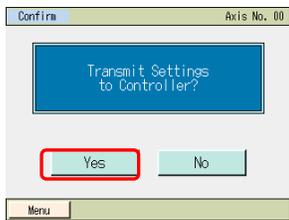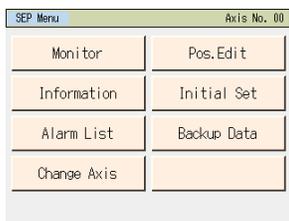
No.	Operation	Screen	Remarks
13	Touch [Complete].	 <p>The screen shows 'Initial Set' for 'Axis No. 00'. It includes buttons for 'MANU' and 'AUTO' under 'Homing', 'Limit Switch' and 'Position End' under 'Output signal', and 'OUT2', 'OUT3', 'HEND', 'HEND SV', 'SV', and '+2LM' under 'DO signal'. At the bottom, 'Back' and 'Complete' buttons are visible, with 'Complete' highlighted in red.</p>	<p>Touch [Back] to return to the previous screen.</p> <p>Touch [Menu] to return to the initial setting menu screen.</p>
14	Touch [Yes].	 <p>The screen shows 'Confirm' for 'Axis No. 00' with the question 'Transmit Settings to Controller?'. It has 'Yes' and 'No' buttons, with 'Yes' highlighted in red.</p>	<p>Touch [NO] to return to the operation pattern selection screen.</p> <p>All settings you have made under the selected operation pattern become invalid.</p>
15	Touch [Yes].	 <p>The screen shows 'Soft Reset' for 'Axis No. 00' with the question 'Do you want to restart the controller?'. It has 'Yes' and 'No' buttons, with 'Yes' highlighted in red.</p>	<p>The controller does not operate according to the operation pattern settings you have made until restarted.</p>
16		 <p>The screen shows 'Soft Reset' for 'Axis No. 00' with the message 'Restarting the controller. Please wait a minute.'</p>	
17		 <p>The screen shows 'SEP Menu' for 'Axis No. 00' with a grid of buttons: Monitor, Pos.Edit, Information, Initial Set, Alarm List, Backup Data, and Change Axis.</p>	<p>After the controller has restarted, the display switches to the SEP menu screen.</p>

6.12 Parameters (Parameter Editing, Axis Number Setting, Parameter Initialization to Factory Default Settings, System Password)

Parameters and axis number are set. You can change the system password or reset the parameters to their factory default settings.

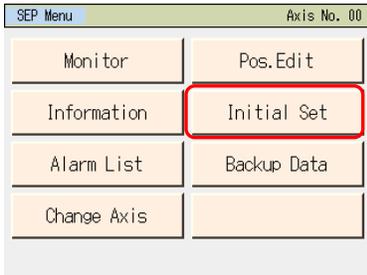


Touch [Initial Set] on the SEP menu screen.

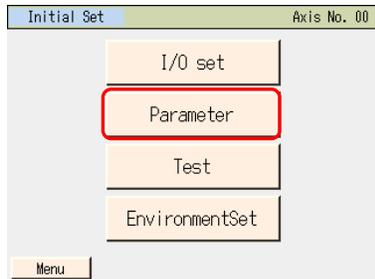


Touch [Parameter].

If the system password is other than "0000," the password input screen appears.

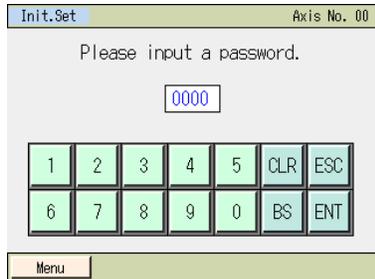

Enter a system password and then touch [ENT].


The default system password is "5119".
For how to change the system password, refer to 6.12, "Parameters [Change System Password]."

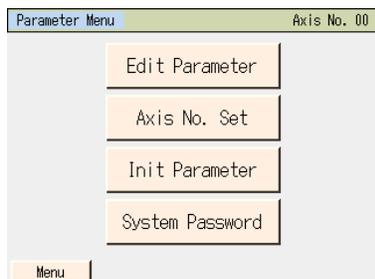


Select and touch [Edit Parameter], [Axis No. Set], [Init. Parameter] or [System Password].

The screen corresponding to the selected menu item appears.


- Edit Parameter: You can set 36 types of parameters.

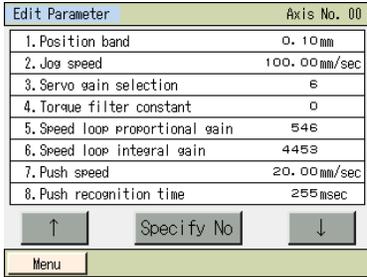

- Axis No. Set: Set the axis number.

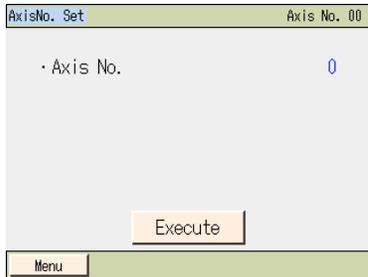

- Init Parameter: You can reset the parameters to their factory settings (initialize the parameters).

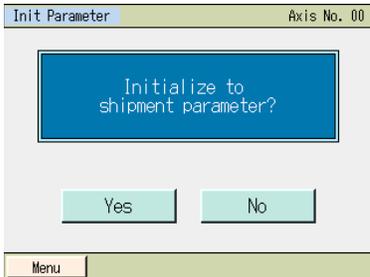

- Change System Password: You can change the password for I/O setting and parameter editing.



[1] Types of parameter editing

For details on each parameter, refer to the instruction manual for your ASEP/PSEP/DSEP controller or MSEP controller.

No.1 (Default positioning band)

Set the default positioning band.

No.2 (Jog speed)

Set the speed of jog operation.

No.3 (Servo gain number)

Set the servo gain number that determines the response of position control loops in servo control.

No.4 (Torque filter constant)

Set the torque filter time constant that determines the filter time constant for torque commands in servo control.

No.5 (Speed loop proportional gain)

Set the speed loop proportional gain that determines the response of speed control loops in servo control.

No.6 (Speed loop integral gain)

Set the speed loop integral gain that determines the response of speed control loops in servo control.

No.7 (Push speed)

Set the speed of push-motion operation.

No.8 (Push recognition time)

Set the push recognition time to recognize completion of operation after the work part was contacted in push-motion operation.

No.9 (Pushing fails current)

Set whether to use the push current or stop current as the current limiting value when the work part was missed in push-motion operation.

For ASEP/DSEP/MSEP (for servo motor), if the stop current is selected when the work part was missed in push-motion operation, the torque limit at the travel current limiting value is set.

No.10 (Auto servo OFF delay time)

Set the time until the servo turns off automatically when the ecology function is enabled.

No.11 (Stop mode) Displayed for PSEP, MSEP (for pulse motor) controllers

Set whether to implement servo stop based on the full servo control method or complete stop without servo control when the actuator stops.

(Note) When this parameter is changed, the new setting will not be reflected until the position data is written to the controller again.

No.12 (Current limiting value while stopped after positioning) Displayed for PSEP, MSEP (for pulse motor) controller

Set the current limiting value to be applied while the actuator is stopped after positioning.

No.13 (Current limiting value during home return)

Set the current limiting value to be applied during home return operation.

No.14 (Position execution wait time during continuous operation)

Set the stop time after the current movement is completed until the next movement is performed when operation pattern 5 (continuous operation) is set.

No.15 (Soft limit)

Set the positive soft limit.

No.16 (Home return offset)

Set the offset for home return.

No.17 (Home return direction)

Set whether to perform home return in the motor direction or front side direction.

The home return direction cannot be changed for some actuators, such as rod-type actuators.

No.18 (Simple Absolute board) Displayed for absolute specification controllers

Set whether to enable or disable this function when the controller is of absolute specification.

No.19 (Battery maintenance) Displayed for absolute specification controllers

Set how long the data will be maintained by the absolute battery when the controller is of absolute specification.

No.20 (Position edit password)

Set the password for editing position data.

No.21 (Zone boundary 1 + side)

Set + side of the area in which the zone signal (ZONE 1) is turned ON.

No.22 (Zone boundary 1 - side)

Set - side of the area in which the zone signal (ZONE 1) is turned ON.

No.23 (Zone boundary 2 + side)

Set + side of the area in which the zone signal (ZONE 2) is turned ON.

No.24 (Zone boundary 2 - side)

Set - side of the area in which the zone signal (ZONE 2) is turned ON.

No.25 (PIO inching distance)

Set a inching distance for the inching entry command from PLC.

No.26 (Target value for total number of movements)

If the total number of movement exceeds the setting of this parameter, an alarm is generated to inform.

No.27 (Target value for total travelled distance)

If the total travelled distance exceeds the setting of this parameter, an alarm is generated to inform.

No.28 (High output setting)

Set whether to use the high output function. However, the actuator complying with high power^(Note 1) has to be connected.

(Note 1) Actuator complying with high power: RCP 4 and RCP 5 series (except for high thrust types)

No.29 (BU Speed Loop Proportional Gain)

When setting the high output setting parameter valid, this parameter is effective for the speed loop proportional gain.

No.30 (BU Speed Loop Integral Gain)

When setting the high output setting parameter valid, this parameter is effective for the speed loop integral gain.

No.31 (Overload Level Ratio)

If it exceeds the rated current ratio set, the overload alarm (message level) is turned ON.

No.32 (Minor Failure Alarm Output Selection)

With setting 0, if the rated current ratio exceeds the value set in the overload level ratio parameter, ALM is output.

With setting 1, ALM is output by even message level alarms, such as the maintenance information error, in addition to the result of the overload level ratio.

No.33 (Enabled/disabled axis selection)

If you want to operate fewer axes than you bought, by setting this parameter disabled, the axis is considered as disabled and the alarm does not occur.

You can connect and operate only specific axes when starting up, or set them for expansion in future.

No.34 (Initial movement direction of excitation phase signal detection operation)

When the servo is first turned ON after power-on, the excitation detection is performed ^(Note 1). Define the detection direction at this time.

Usually, this parameter does not need to be changed. However, when it gets in touch with the mechanical end or any interfering object at the time of starting up, set the direction in which the motor is easy to move.

(Note 1) In the simple absolute specification, the excitation detection is performed at the time of completing home return.

No.35 (Excitation phase signal detection time)

When the servo is first turned ON after power-on, the excitation detection is performed ^(Note 2). Define the detection time at this time.

Usually, this parameter does not need to be changed. However, when the excitation detection error or any malfunction occurs, it may be effective to change the setting of this parameter.

If you want to change this parameter, contact to us.

(Note 2) In the simple absolute specification, the excitation detection is performed at the time of completing home return.

No.36 (Excitation detection type)

When the servo is first turned ON after power-on, the excitation detection is performed ^(Note 3). The new method makes this operation smooth and makes it possible to reduce noise. (In this company's comparison)

(Note 3) In the simple absolute specification, the excitation detection is performed at the time of completing home return.

[2] Basic operation
Set parameters.

[Parameter]

Edit Parameter		Axis No. 00
1. Position band	0.10mm	
2. Jog speed	100.00mm/sec	
3. Servo gain selection	6	
4. Torque filter constant	0	
5. Speed loop proportional gain	546	
6. Speed loop integral gain	4453	
7. Push speed	20.00mm/sec	
8. Push recognition time	255msec	
↑		Specify No
↓		
Menu		

Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Three screens are available, including one showing the default positioning band and others used to edit position data and password.

Touch [Menu] to return to the parameter menu screen.

An example of setting a soft limit is explained.

Touch [↑] and [↓] on the displayed screen until the soft limit setting screen appears.


Edit Parameter		Axis No. 00
9. Pushing fails current	Push Cur. Stop Cur.	
10. Auto servo OFF delay time	1 sec	
11. Stop mode		
12. Default positioning cur limit		
13. Default home current limit	140%	
14. Pos. Execution - Wait	0.010sec	
15. Soft limit	30.00	
16. Home offset	1.20	
↑		Specify No
↓		
Menu		

Touch the current value.


When the numeric keypad appears, enter a desired value and then touch [ENT].

Edit Parameter		Axis No. 00
9. Pushing fails current	Push Cur. Stop Cur.	
10. Auto servo OFF delay time	1 sec	
11. Stop mode		
12. Default positioning cur limit		
13. Default home current limit	140%	
14. Pos. Execution - Wait	0.010sec	
15. Soft limit	30.00	
16. Home offset	1.20	
↑		Specify No
↓		
Menu		

Change parameters and touch [Menu] to return to the controller restart screen.

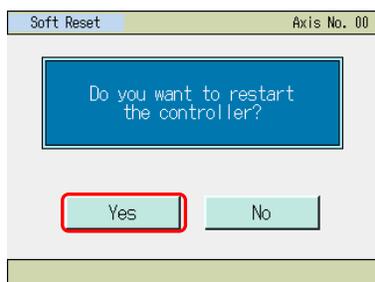


Touch [Yes].
The controller is restarted.
The controller operates according to the operation pattern settings you have made.
The display returns to the initial setting screen.

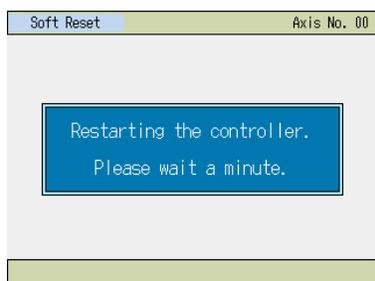


Touch [No], and the controller will not operate according to the operation pattern parameters you have set until restarted.

[Axis No. Set] Set the axis number.

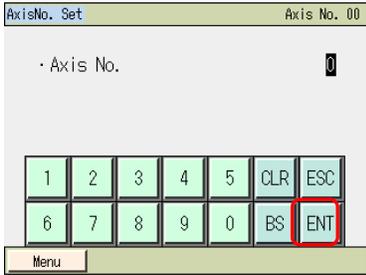

When the numeric keypad appears, enter a desired value and then touch [ENT].

You can set a value between 0 and 15.

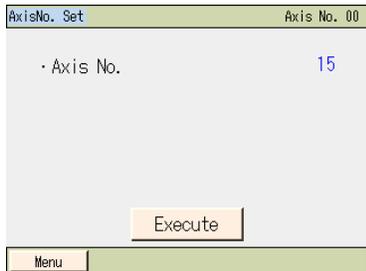


Touch [Execute].

In this example, 15 is set.


[Init Parameter]

The parameters are reset to their factory default settings.

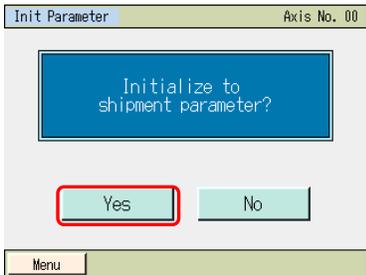

Touch [Yes].

Touch [No] to return to the parameter menu screen without resetting the parameters to their factory default settings.

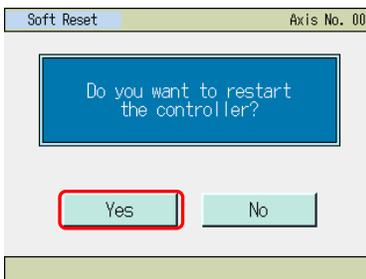

Touch [Yes].

The controller is restarted.

The controller operate according to the factory-set parameters.

The display returns to the initial setting screen.

Touch [No], and the controller will not operate according to the factory-set parameters until restarted.



[Change System Password]
Change the system password.




Enter the new system password to change to.
If you do not set the system password, enter 0000.


Touch [ENT].



Touch [Change].

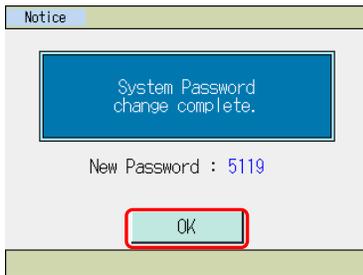


The system password changes.
Touch [OK] to return to the parameter menu screen.

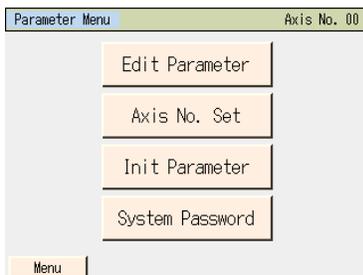


6.13 Test (I/O Tests, Operation Tests for Axis Movement)

You can perform I/O tests and operation tests for axis movement.

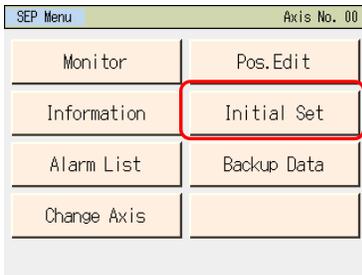


Touch [Initial Set] on the SEP menu screen.

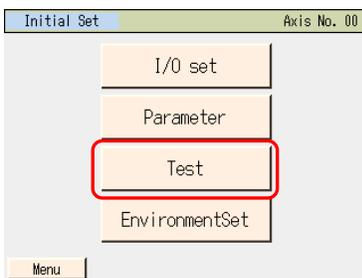


Touch [Test].

Touch [Menu] to return to the SEP menu screen.

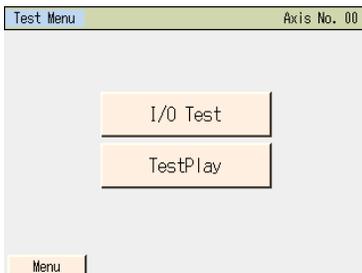


Select and touch either [I/O Test] or [TestPlay].

- I/O Test: PIO input signals can be monitored. Also, the output signals can be forcibly turned ON or OFF by touching OUT0, OUT1, OUT2 and OUT3.

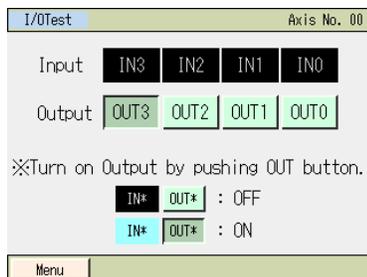


- Pos Test: Operation tests for axis movement can be performed.
The screen corresponding to the selected operation pattern appears.

Operation pattern 0
(standard movement between 2 points)

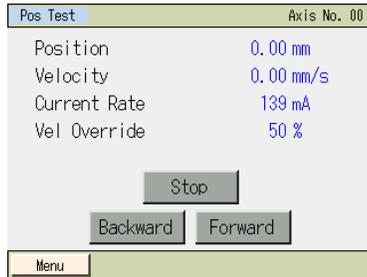


Operation 1 (change travel speed)

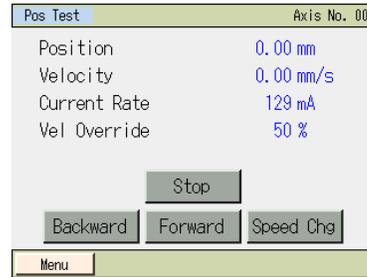


Operation pattern 2 (change position data)




Operation pattern 3
(movement by 2 inputs among 3 points)

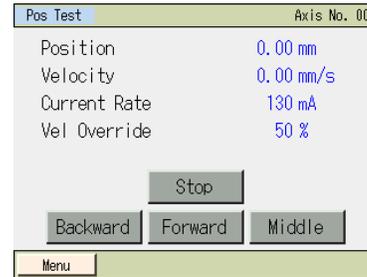


Operation pattern 4
(movement by 3 inputs among 3 points)

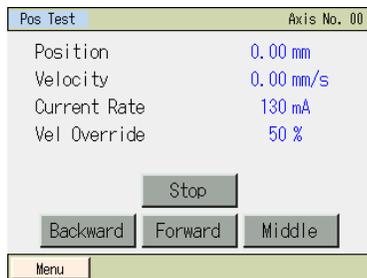


Operation pattern 5
(continuous back-and-forth operation)

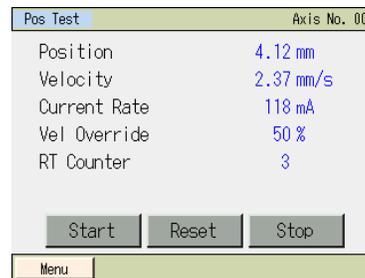

Operation pattern 6
(positioner)

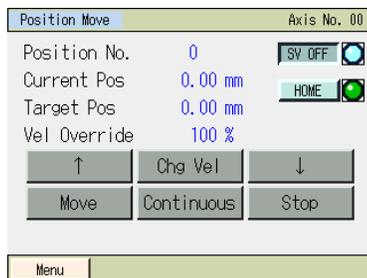

[1] Basic operation [I/O test]

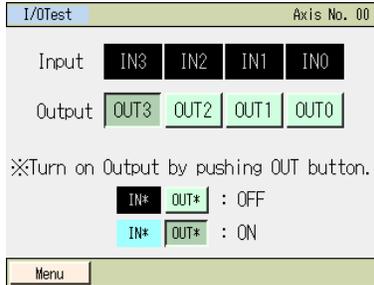


ON/OFF of input signals can be monitored.

The output signals OUT0 to OUT3 can be forcibly output by touching each signal.

Touch [Menu] to return to the test menu screen.

[Pos Test]

The operating method is explained using an example of operation pattern 0.

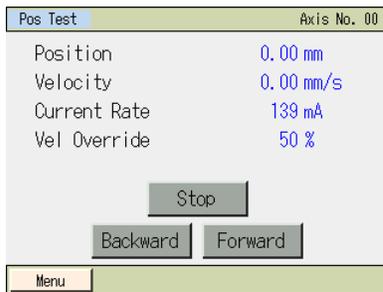

← The current axis position is indicated.

← The axis speed is indicated.

← The electric rated current ratio/current value of the axis is indicated by a percentage of the rating.

Touch [Menu] to return to the test menu screen.

- Current Rate/Current : You can switch the display between the rated current ratio (%) and current value (mA) every time you touch [Current Rate] or [Current].
- Vel Override : You can change the moving speed of the actuator to 10%, 50% or 100% of the speed set in the position data every time you touch [Vel Override].
- Backward :Touching [Backward] moves the actuator backward.
- Forward :Touching [Forward] moves the actuator forward.
- Stop :Touching [Stop] is stopped.

The settings of operation pattern 5 (continuous back-and-forth operation) vary partially from other operation patterns.

Pos Test	Axis No. 00
Position	4.12 mm
Velocity	2.37 mm/s
Current Rate	118 mA
Vel Override	50 %
RT Counter	3
<input type="button" value="Start"/> <input type="button" value="Reset"/> <input type="button" value="Stop"/>	
<input type="button" value="Menu"/>	


- ← The current axis position is indicated.
- ← The axis speed is indicated.
- ← The electric current of the axis is indicated by a percentage of the rating.
- ← The electric rated current ratio/current value of the axis is indicated by a percentage of the rating.

- **Current Rate/Current** : You can switch the display between the rated current ratio (%) and current value (mA) every time you touch [Current Rate] or [Current].
- **Vel Override** : You can change the moving speed of the actuator to 10%, 50% or 100% of the speed set in the position data every time you touch [Vel Override].
- **Start** : Continuous operation stops once the operation test screen appears. Touching [Start] causes the actuator to move back and forth continuously at the speed set by the override parameter.
- **Stop** : Touching [Stop] stops the actuator.
- **Reset** : Touching [Reset] resets the back-and-forth counter to 0.


Continuous operation resumes once the operation test screen closes.

6.14 Environment setting

You can set the language, touch operation sound, auto monitor function, sleeping time, data input warning, display and time.

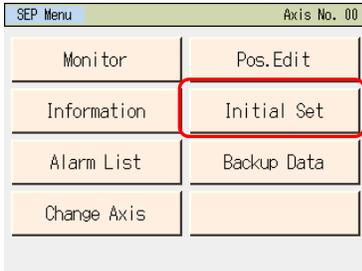


Touch [Initial Set] on the SEP menu screen.

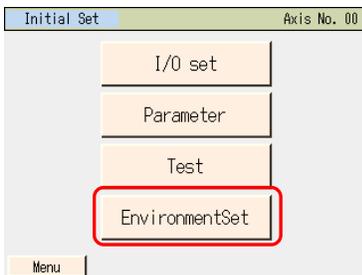

Touch [EnvironmentSet].


Touch [Menu] to return to the SEP menu screen.

The environment setting screen appears.

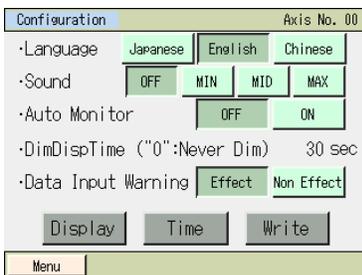

[1] Basic operation

- Language: Select a language to display.
Display for Japanese/English/Chinese languages setting change (No Chinese display after Ver.3.00)

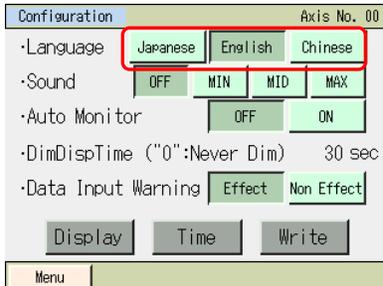


Touch a desired language ([English] etc.).

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- Sound: Set whether to output or not output a touch tone.

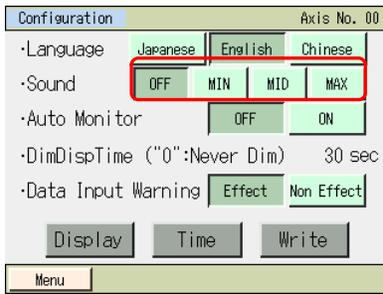


Touch [OFF]. A touch tone is not output.

Touch either of [MAX], [MID] or [MIN]. A touch tone is output.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- Auto Monitor: You can have the monitor screen appear first after the touch panel teaching pendant is connected.

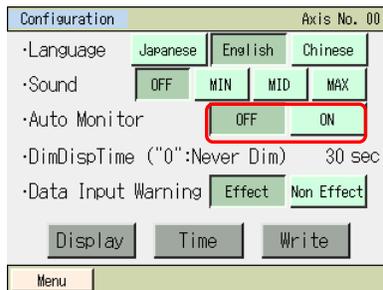


Touch [ON] to enable the auto monitor function.

Touch [OFF] to disable the auto monitor function.

Select either ON or OFF, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- Dim Display Time: Set the lights-out time when not being operated.
If "0 sec" is set, the display will remain lit at all times.

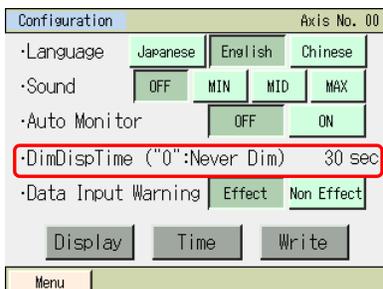

Touch [Dim Display Time ("0": Never Dim) 30 sec].


Enter the light off time.

A desired value between 0 and 255 sec can be set.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- **Data Input Warning:** The warning can be output when a value less than the minimum speed and a value exceeding the rated acceleration/deceleration speed are entered in the position data. Note that the value is entered even if the warning occurs. Always use within the specification of the actuator.

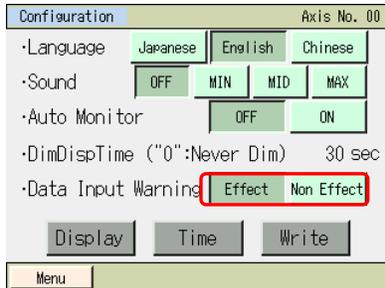


Touch [Effect] to give the warning.
Touch [Non Effect] not to give the warning.

Select either Effect or Non Effect, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.


[Display]

Adjustment of contrast and brightness of the screen, position tuning for touch panel and LCD screen check can be performed.

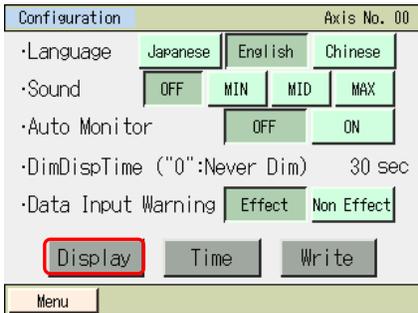

Touch [Display].

Display menu Window is displayed.

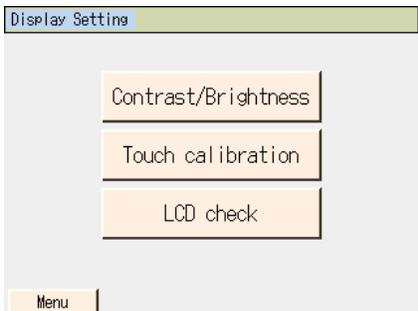


Select Display Setting menu.


Touch [Menu] and the display returns to EnvironmentSet screen.

● Change the Contrast/Brightness

You can adjust contrast (shading of liquid crystal) and brightness (of liquid crystal).

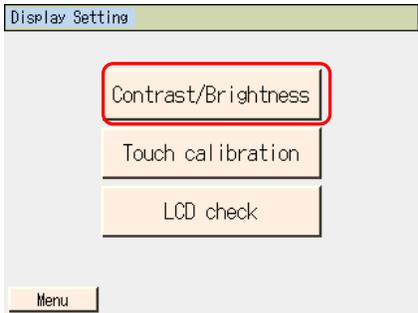

Touch [Contrast/Brightness].

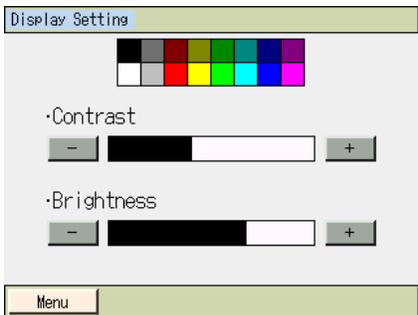

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.


Brightness adjustment

Touch [-] and [+] under Brightness to adjust the brightness of the screen.

Touch [Menu] to save the setting status and the display returns to Display menu screen.

● Touch calibration

A calibration for the position detection of the touch panel is performed.

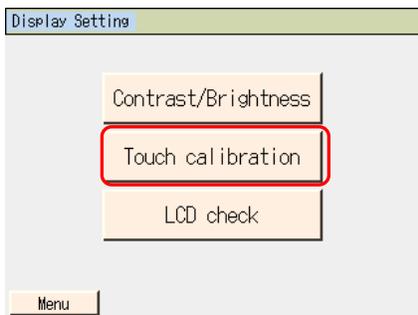

Touch [Touch Calibration].




Touch [·] in the order of 1, 2, 3 and 4.

The display returns to Display menu screen.


- LCD check

LCD display can be checked in the order of Color Pattern, White Only and Black Only.

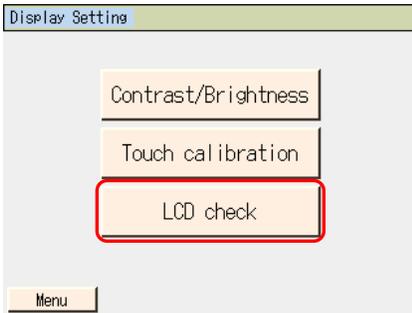

Touch [LCD Check].

Color Pattern is displayed.

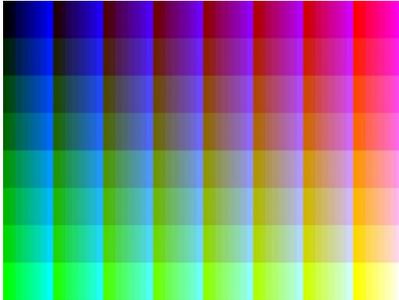


Touch any point on the screen.

White Only is displayed.



Touch any point on the screen.

Black Only is displayed.




Touch any point on the screen.
The display returns to Display menu screen.

[Time setting]

Time setting can be performed for TB-01/TB-01D/TB-01DR or controller with a calendar function.

1) Time setting for TB-01/TB-01D/TB-01DR

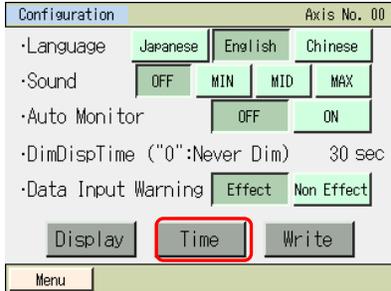

Touch [Time].



The time of teaching TB-01/TB-01D/TB-01DR is displayed.
Touch [Time Edit].




Touch the value of year, month, day, hour, minute or second that is required to be changed.



Numeric keys are displayed.
Input a value and touch [ENT].




Touch [Set].

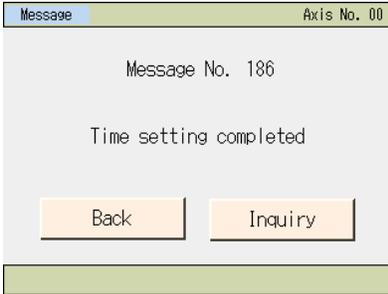

The time of the TB-01/TB-01D/TB-01DR is changed.
Touching [Back] can go back to the controller time setting screen.
Touching [Inquiry] displays the inquiry screen.

2) Time setting for controller with a calendar function

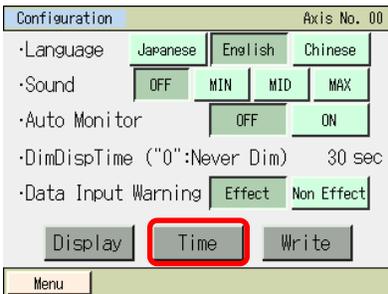

Touch [Time].



The time of teaching is displayed.
Touch [Time Edit].




When setting the time of teaching to the controller, the time does not need to be changed.
Touch any one of year, month, day, hour, and second to change the time.



Numeric keys are displayed.
Input a value and touch [ENT].



Touch [Set to controller].

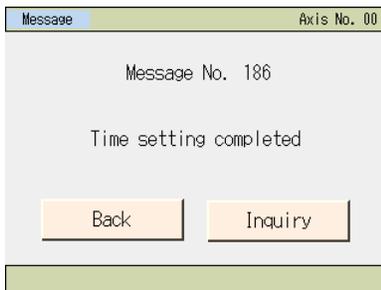

The time of the controller is changed.
Touch [Back] to return to the teaching time setting screen.
Touch [Inquiry] to display the inquiry screen.

6.15 Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

It is not applicable to the backup data storable in the RC PC software.

(Note) Extensions of the Stored Data

- *The file extensions of the data stored to the Secure Digital card are the same as those dealt in RC PC software, and are compatible. The position data for the ASEP controllers is ptas and parameters are pras. The position data for the PSEP controllers is ptps and parameters are prps. [Refer to the details of the file extensions in the RC PC Software Instruction Manual]*
- *The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.*

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore.


If the folder does not exist, it is automatically created.

- *Position Data : \CONPTA\Position\File Name*
- *Parameter : \CONPTA\Parameter\File Name*
- *Alarm List : \CONPTA\Alarmlist\File Name*

(Note) Files with Chinese names are not supported.


6.15.1 Data Backup of the Controller

The data in the controller is transferred to the Secure Digital memory card for backup.

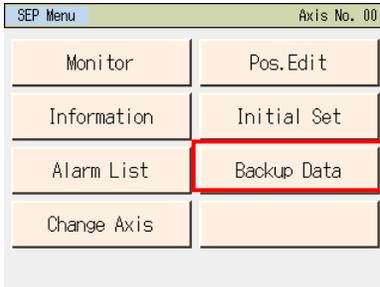

Touch [Backup Data] on the SEP Menu screen.


A screen for data transfer appears.

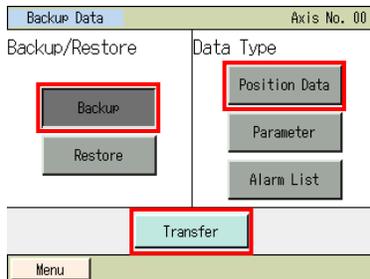

Touch [Backup].


Select the data type for the backup such as [Position Data] and touch it.

Touch [Transfer].

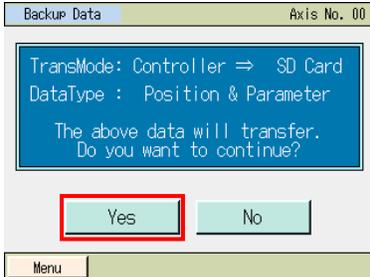


Touch [Yes].

If [No] is touched, the screen goes back to the data backup window.

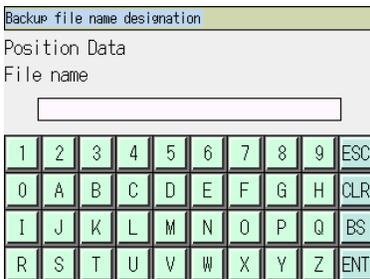


Numeric keys show up. Input a file name.

The file name is to be typed with 32 characters at maximum in letters and numbers.

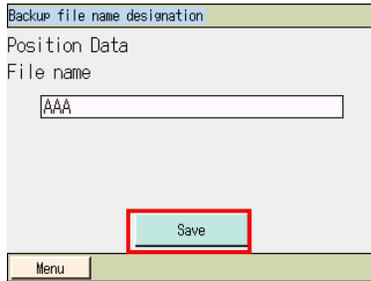


Touch [Save].

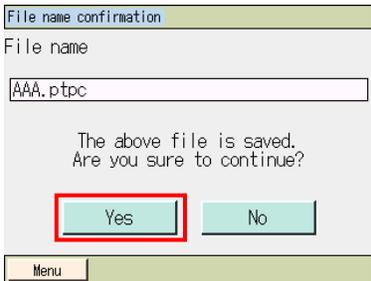

The screen below appears if the same name is not found.

Touch [Yes].


If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

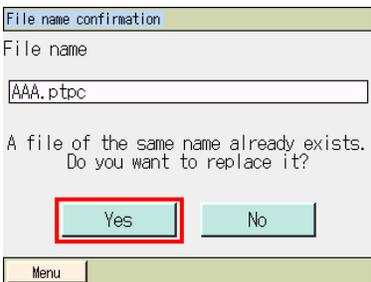

The screen below appears if the same name is not found.

Touch [Yes].

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

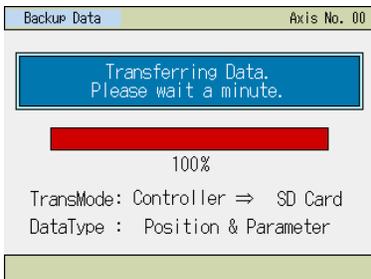

Data transfer screen will be shown.




A message to tell the data transfer is complete pops up and the backup process is finished.

Touching [Back] can go back to the Backup Data screen.


6.15.2 Restore to Controller

Data in the Secure Digital card is transferred to the controller.

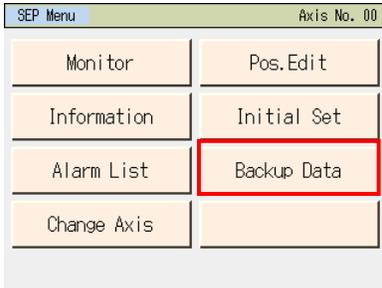

Touch [Backup Data] on the SEP Menu screen.


A window for data transfer appears.

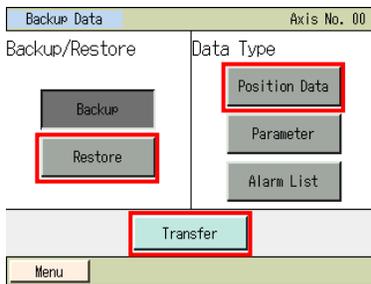

Touch [Restore].


Select the data type to transfer to the controller, such as [Position Data], and touch it.

Touch [Transfer].

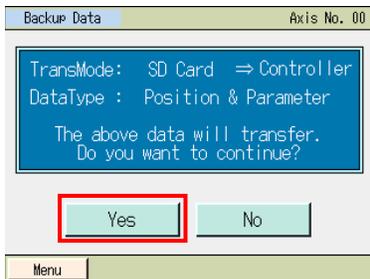


Touch [Yes].

If [No] is touched, the screen goes back to the data backup window.

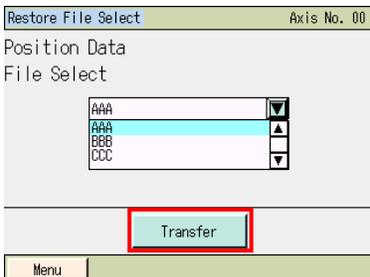


Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.

Touch [Transfer].

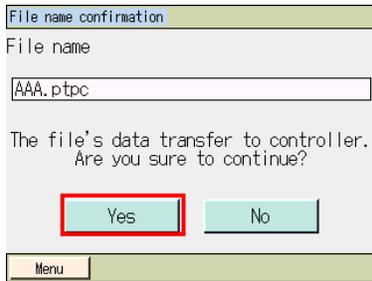


Touch [Yes].

If [No] is touched, the screen goes back to the previous one for the restore file select.

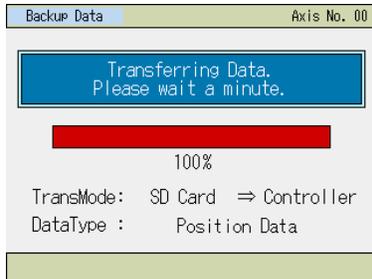

Data transfer screen will be shown.

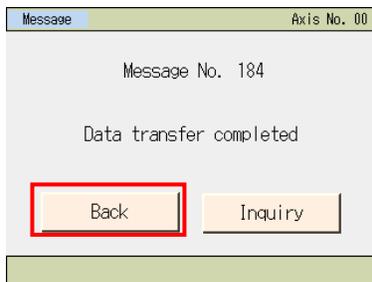

A message to tell the data transfer is complete pops up and the data transfer process to the controller is finished.

Touching [Back] can go back to the Backup Data screen.

7. Operation of MEC Related Controllers

MEC related controllers: P MEC, A MEC and ERC3 (MEC mode)

7.1 Transition of Operating States


The language can be changed by following the steps below.

For the operation after the language change, please refer to the instruction manual written in each language

Display change from English to Japanese			
<p>MEC Menu Axis No. 00</p>	<p>Maintenance Menu Axis No. 00</p>	<p>Configuration Axis No. 00</p>	<p>本体環境設定 軸番号 00</p>
Touch in MEC Menu.	Touch [EnvironmentSet].	Touch [Japanese].	Touch [書き込み].
Display change from Japanese to English			
<p>MECメニュー 軸番号 00</p>	<p>メンテナンスメニュー 軸番号 00</p>	<p>本体環境設定 軸番号 00</p>	<p>Configuration Axis No. 00</p>
Touch in MECメニュー	Touch [環境設定].	Touch [英語].	Touch [Write].
Display change from English to Chinese (The display cannot be switched to Chinese in Ver. 3.00 and after.)			
<p>MEC Menu Axis No. 00</p>	<p>Maintenance Menu Axis No. 00</p>	<p>Configuration Axis No. 00</p>	<p>本体環境設定 軸番号 00</p>
Touch in MEC Menu.	Touch [EnvironmentSet].	Touch [Chinese].	Touch [写入].
Display change from Chinese to English (The display cannot be displayed to Chinese in Ver. 3.00 and after.)			
<p>MEC菜单 轴编号 00</p>	<p>维护菜单 轴编号 00</p>	<p>本体环境设定 轴编号 00</p>	<p>Configuration Axis No. 00</p>
Touch in MEC菜单.	Touch [环境设定].	Touch [英语].	Touch [Write].

7.2 Operating Menu


Transition of operating states when the touch panel teaching pendant TB-01, TB-01D, TB-01DR is connected to a MEC related controller is shown.

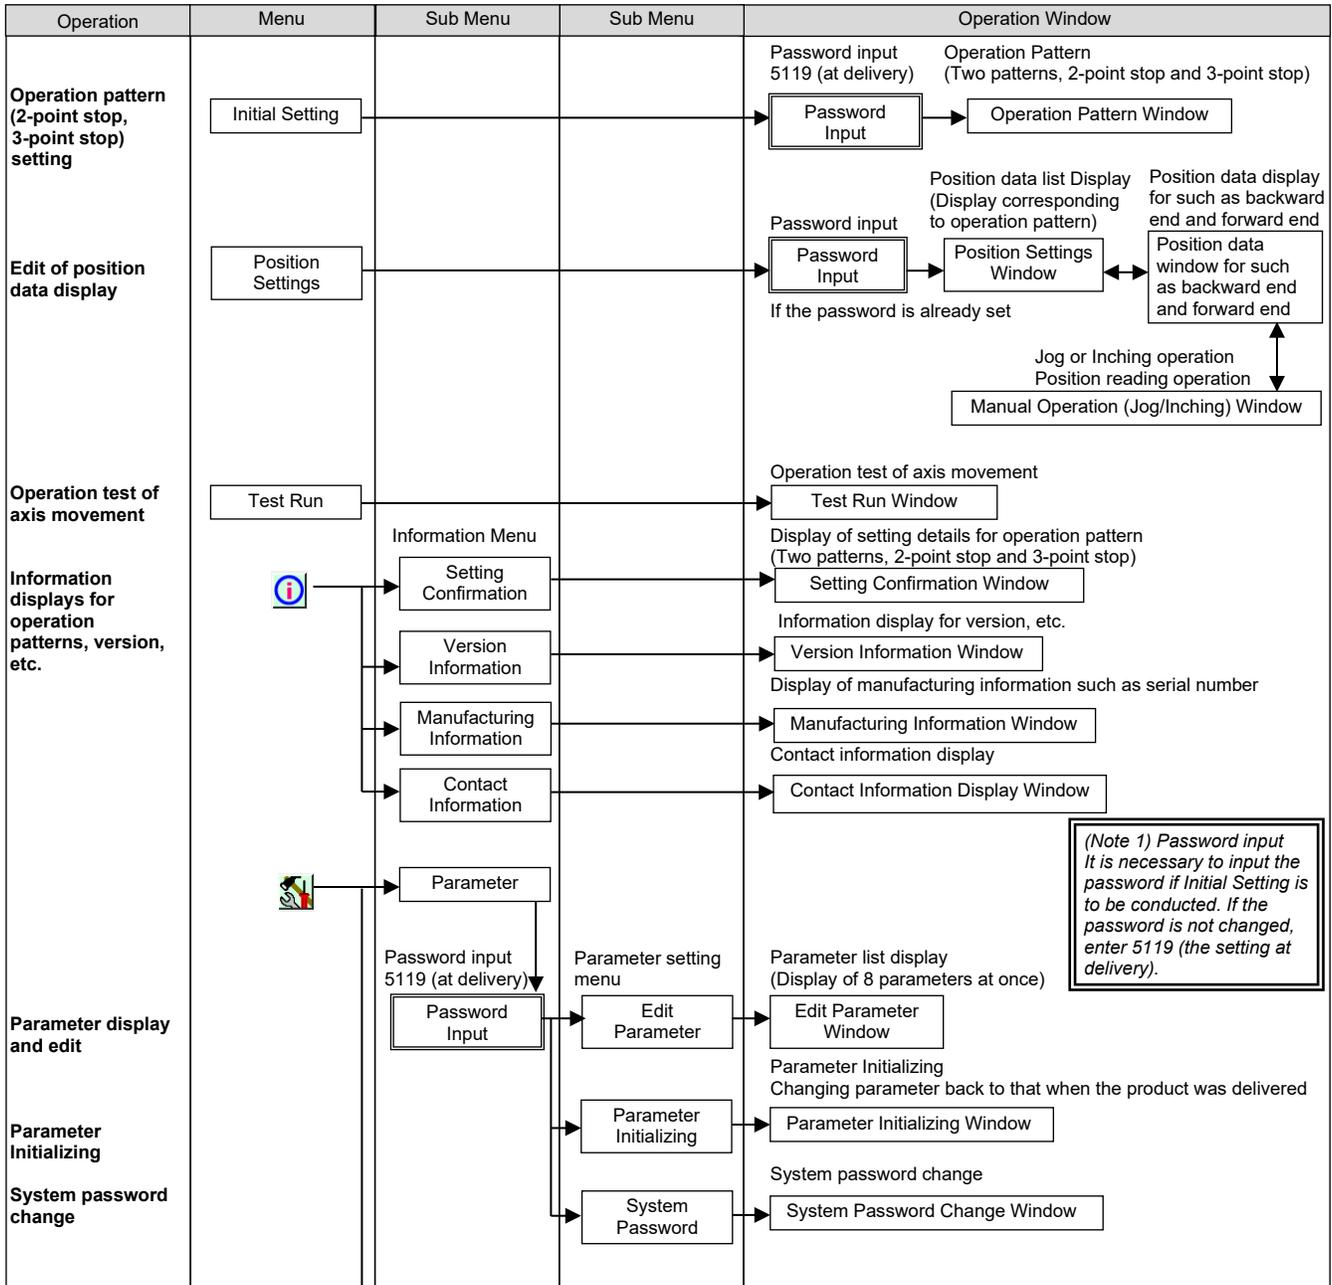

Operation	Menu	Sub Menu	Sub Menu	Operation Window
Display of PIO signal input and output		I/O Test		Display of PIO signal input and output and compulsory output of output signal I/O Test Window
Alarm content detailed display		Alarm List		Alarm detailed display (Display of 8 alarm at once) Alarm List Window
Data transfer between memory and controller		Data Backup		Data transfer between memory and controller Data Backup Window
Environment of Language Setting, Touch Sound Setting, etc.		Global		Language setting, touch operation sound, sleeping time, automatic monitor function, data input warning Global Window → Display Setting Window Display settings (contrast and brightness changes)
Display of conditions of input and output I/O, velocity,	68			Data display of input and output I/O, velocity, etc. Monitor Window

7.3 Initial Screen

When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen of the touch panel teaching pendant, after which version information is displayed.

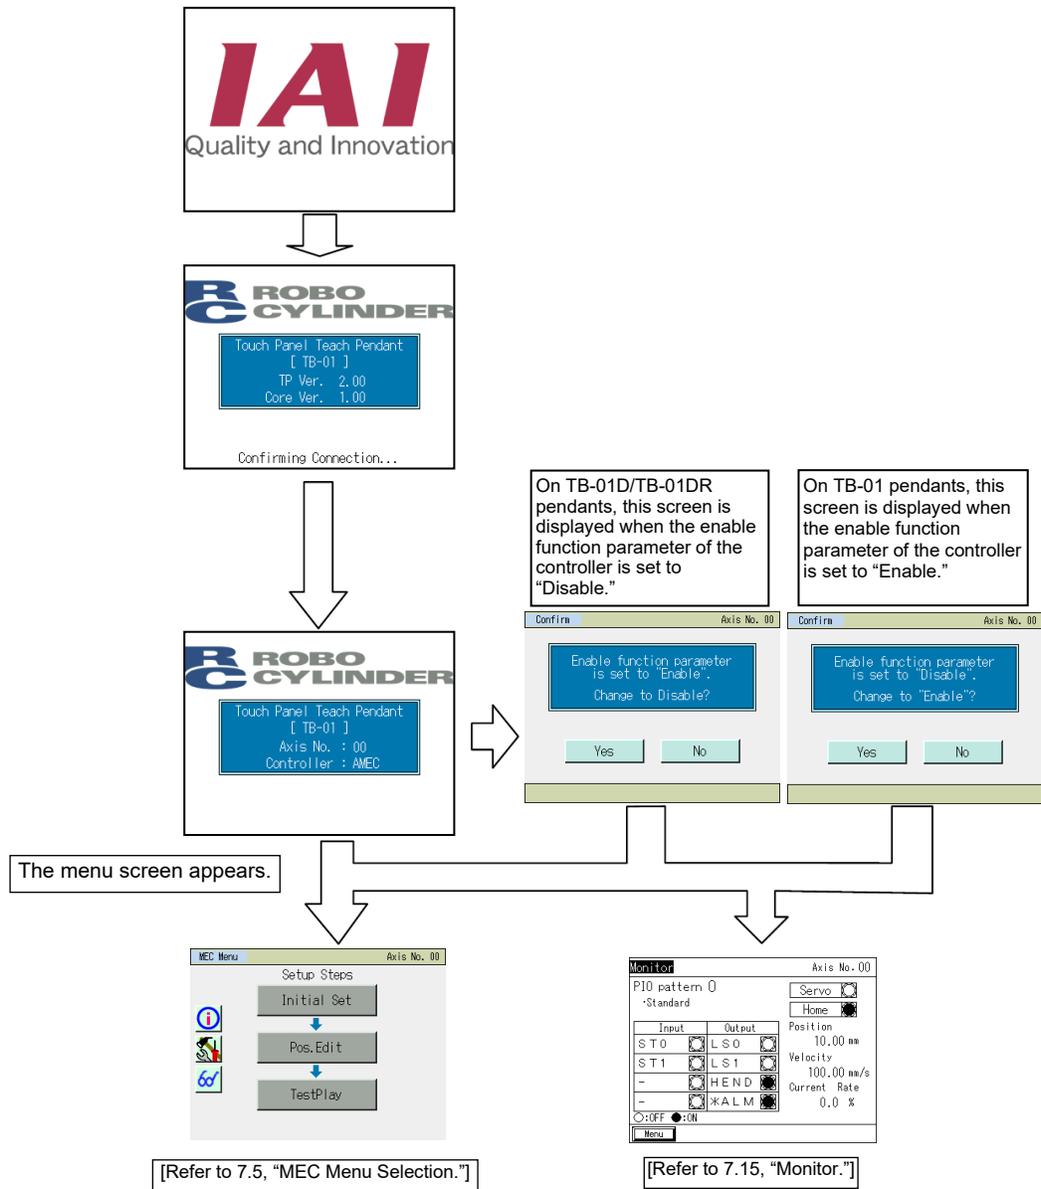


* The same items can be set on the automatic monitor setting screen accessible from the environment setting screen of the controller.

7.4 Initial Setting

When the power is turned on for the first time after the delivery of the controller, the initial setting screen will appear.


- Select [Yes], and the display will change to the initial setting screen where you can set the operation pattern.
- Select [No], and the factory set operation pattern, or specifically the 2-point stopping operation mode, will remain effective.
The display will switch to the position setting screen.

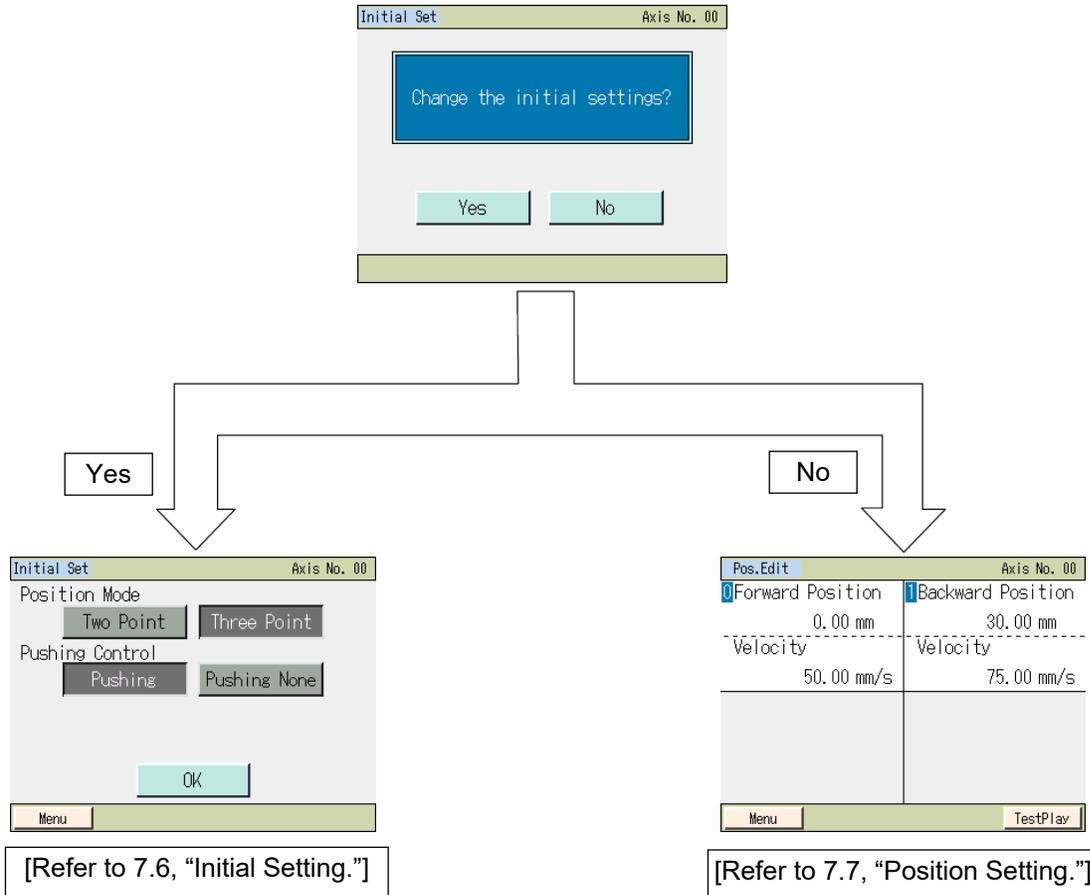

Factory settings

- Operation pattern: Stopping at 2 points


7.5 MEC Menu Selection

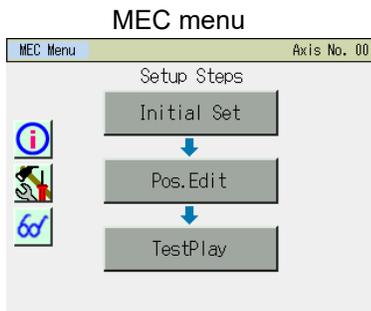

The MEC menu has six items. Select and touch one of them.
The screen changes to the one corresponding to the menu item you have touched.

Menu list

- Initial Set Set the operation pattern (stopping at 2 points or 3 points).
[Refer to 7.6, “Initial Setting.”]
- Pos. Edit Set the position, push force, push band, etc. The axis can be operated manually.
[Refer to 7.7, “Position Setting.”]
- TestPlay Conduct axis movement operation tests. [Refer to 7.8, “Trial operation.”]
- Information  The operation pattern, version and other information are displayed. [Refer to 7.9, “Information.”]
- Maintenance  Touching  switches the display to the maintenance menu screen, which is the next selection screen.

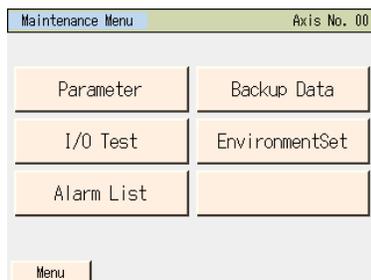


The maintenance screen shows five buttons, so select and touch a desired button.
The display will change to the menu screen corresponding to the button you have touched.
Touch [Menu] to return to the previous MEC menu screen.

Maintenance menu list

- Parameter Set the default positioning band and other parameters. [Refer to 7.10, “Maintenance – Parameters.”]
- I/O Test Conduct I/O Tests. [Refer to 7.11, “Maintenance – I/O Tests.”]
- Alarm List Detail internal information of alarms are displayed. [Refer to 7.12, “Maintenance – Alarm List.”]
- Backup Data Transfer data between the touch panel teaching pendant and controller. [Refer to 7.13, “Maintenance – Data Backup.”]
- EnvironmentSet Set the touch sound and other environment specifications. [Refer to 7.14, “Maintenance-Environment Setting.”]
- Monitor  The controller status is displayed. [Refer to 7.15 “Monitor.”]


7.6 Initial Setting

Select whether to stop at 2 points or 3 points.

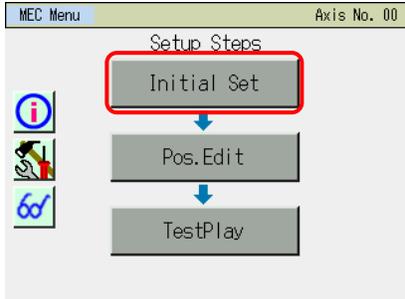

Touch [Initial Set] on the MEC menu screen.

The password entry screen appears if the system password is other than "0000."

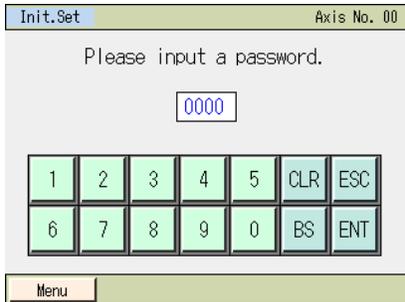


Enter the password and touch [ENT].

The default system password is "5119".
For how to change the system password, refer to 7.10, "Maintenance – Parameters [Change System Password]."

If the valid password has been entered, the display switches to the initial setting screen.

Stopping at 2 points

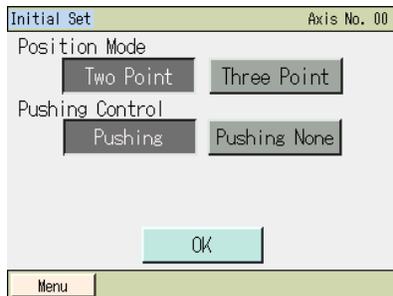



Select and touch either [Two Point] or [Three Point]. To perform positioning operation, select and touch [Pushing None]. To perform push-motion operation, select and touch [Pushing]. To stop at 3 points, select [Both OFF] or [Both ON] as the position specification method.

(Note) Take note that if push-motion operation is performed and therefore [Pushing None] is selected, the completion signal will not be output.

* If [Pushing None] is selected, LS0 and LS1 (LS2) will be used as output signals. If [Pushing] is selected, PE0 and PE1 (PE2) will be used as output signals.

Stopping at 3 points

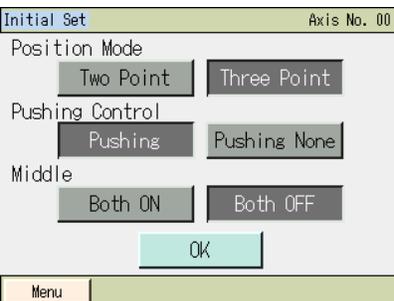

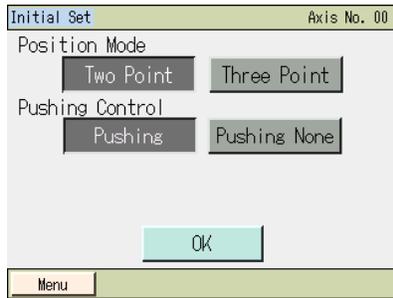

Touch [OK].

Touch [Menu] to return to the MEC menu screen.
All initial settings you have made will be discarded.



Touch [Yes].

The controller will restart.

After the restart, the controller will operate according to the initial settings you have made.

Return to the MEC menu screen.

If you touch [No], the initial settings you have made will not be reflected until the controller is restarted.



Operation Pattern






PMEC and AMEC and ERC3 (MEC mode) controllers offer two operation patterns. The table below gives an overview of the Operation specification of each pattern. [For the setting methods, refer to the sections on initial setting and stop position setting.]


Operation pattern		Description	Air cylinder circuit (Reference)	How to connect motorized cylinder
Stopping at 2 points (2-point positioning)	Movement by 1 input between 2 points [Single-solenoid mode]	You can move the actuator between 2 points using the same control you would normally use with an air cylinder. You can set the positions of the end point and start point. You can specify the moving speed and acceleration/deceleration. You can also specify push-motion Operation. The actuator moves to the end point when the ST0 turns ON, and returns to the start point when the signal turns OFF.		
	Movement by 2 input between 2 points [Double-solenoid mode]	You can move the actuator between 2 points using the same control you would normally use with an air cylinder. You can set the positions of the end point and start point. You can set the position of an intermediate point and perform positioning to the intermediate point. You can specify the moving speed and acceleration/deceleration. You can also specify push-motion operation. The actuator moves to the end point when the ST1 turns ON, and moves to the start point when the ST0 turns ON.		
Stopping at 3 points (3-point positioning)	Movement by 2 input between 3 points [Intermediate movement mode, both ON]	[Intermediate movement mode, both ON] When both the ST0 and ST1 are turned ON, the actuator will position to and stop at an intermediate point.		
	Movement by 2 input between 3 points [3-point positioning]	[Intermediate movement mode, both OFF] When both the ST0 and ST1 are turned OFF, the actuator will stop in the middle of movement. When both the ST0 and ST1 are turned ON, the actuator will stop in the middle of movement.		

(Note) The air cylinder circuits are drawn with symbols of signals corresponding to those used by PME, AMEC and ERC3 (MEC mode) controllers. For details on signals, refer to the "PME, AMEC and ERC3 (MEC mode) instruction manual."

[1] Example of initial setting operation
The operation is explained using specific examples.


Example of stopping at 2 points Set as follows.

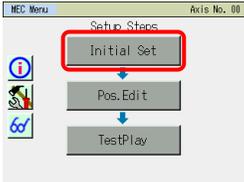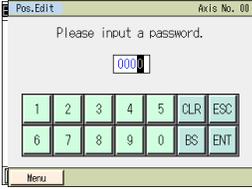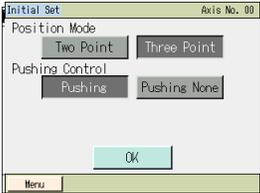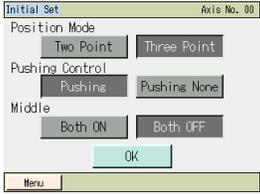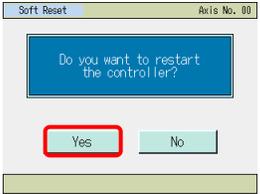No.	Operation	Screen	Remarks
1	Touch [Initial Set] on the MEC menu screen.		
2	If the system password is not "0000," the password entry screen appears. Enter the system password, and then touch [ENT].		The default system password is "5119". For how to change the system password, refer to 7.10, "Maintenance – Parameters [Change System Password]."
3	<ul style="list-style-type: none"> • Touch and select either [Two Point] or [Three Point] based on the number of positioning points. • To perform positioning operation select [Pushing None]. To perform push-motion operation select [Pushing]. • In the case of positioning to the intermediate position in the 3-point stop pattern, select [Both OFF] or [Both ON] for the ST0 and ST1 input signals, and then touch [OK]. 	<p>Stopping at 2 points</p>  <p>Stopping at 3 points</p> 	Touch [Menu] to return to the first MEC menu screen. (Reference) Factory setting Stop position: [Two Point] Push function: [Pushing None] Intermediate point specification method: [Both ON]
4	Touch [Yes].		To make the specified items effective, you must restart the controller. The settings you have made will not be reflected until the controller is restarted. Touch [No] to return to the previous screen.
5			

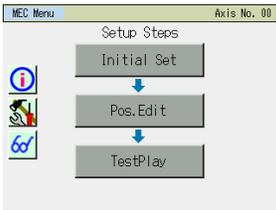No.	Operation	Screen	Remarks
6		 <p>The screenshot shows a screen titled 'MEC Menu' with 'Axis No. 00' in the top right corner. On the left side, there are three icons: a blue circle with a white 'i', a green square with a white 'S', and a blue square with a white '6d'. The main area of the screen contains a vertical flowchart with three rectangular buttons: 'Initial Set', 'Pos. Edit', and 'TestPlay'. Blue downward-pointing arrows connect 'Initial Set' to 'Pos. Edit', and 'Pos. Edit' to 'TestPlay'.</p>	Once the controller has restarted, the MEC menu screen appears.


7.7 Position Setting (Position Data Setting and Manual Axis operation (Jogging, Inching))

The position, push force, push band and other position data are set. You can move the actuator by jogging or inching.

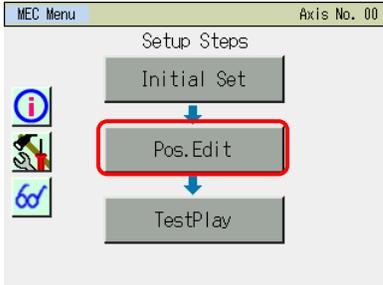

Touch [Pos.Edit] on the MEC menu screen.


The password entry screen appears if the position data edit password is other than "0000."

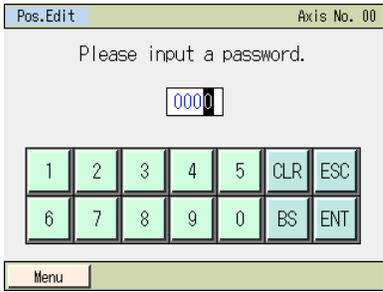

Enter the password and then touch [ENT].

A position data edit password can be set in the "position data edit password" field of the parameter edit screen.

If the valid password has been entered, the display switches to the position setting list screen. The displayed items vary depending on the operation pattern.

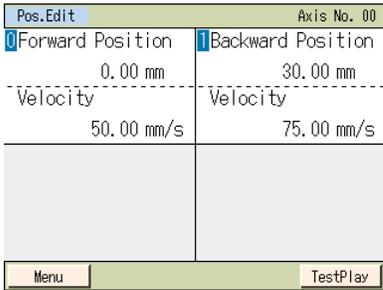


Touch the position you want to set.
 Touch [Menu] to return to the MEC menu screen.
 The screen shown to the left is an example of stopping at 2 points.
 The set value of each position is shown.

Number of positions to be set

Operation pattern	Movement	Number of positions to be set
Stopping at 2 points	Move between 2 points	2
Stopping at 3 points	Move between 3 points	3

Touch the position you want to set, and the target position/speed setting screen of the touched position will appear.

Set the position, speed, push force, push band, acceleration and deceleration.

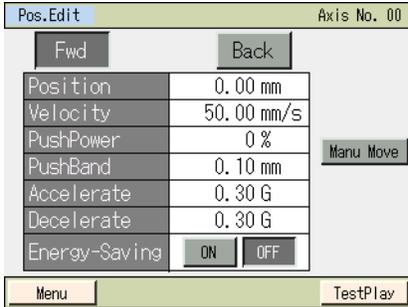


Touch [Menu] to return to the MEC menu screen.

You can select jog operation from this setting screen.

[1] Position data

Set the position data used to operate the actuator.

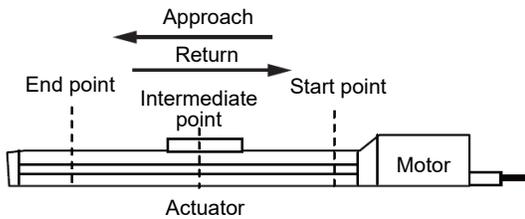

* In the figure, the home is located on the motor side.

Position data

Position data	[1]	[2]	[3]	[4]	[5]	[6]	[7]
	Position [mm]	Speed [mm/s]	Acceleration [G]	Deceleration [G]	Push force [%]	Push band [mm]	Ecology
[1] End point	200.00	50.00	0.1	0.1	70	1.00	Enabled
[0] Start point	0.00	50.00	0.1	0.1	0	0	Enabled
[2] Intermediate point	100.00	50.00	0.1	0.1	0	0	Enabled

1) Position [mm] --- Set the position to move the actuator to.

The positions must satisfy the following relationships: Start point < Intermediate point < End point

Operation pattern	Move	Positions to be set		
		End point	Start point	Intermediate point
Stopping at 2 points	Move between 2 points	○	○	
Stopping at 3 points	Move between 3 points	○	○	○

2) Speed [mm/s] --- Set the speed of the actuator.


3) Acceleration [G] --- Set the acceleration of the actuator.

The input range permits entry of values greater than what is specified in the catalog.

Refer to the catalog or instruction manual of your actuator.

4) Deceleration [G] --- Set the deceleration (G) at which the actuator stops.

(Reference) Acceleration is explained. The same concept applies to deceleration.
 1 G = 9800 mm/s²: Acceleration at which the actuator can accelerate to up to 9800 mm/s per second
 0.3 G: Acceleration at which the actuator can accelerate to up to 9800 mm/s × 0.3 = 2940 mm/s

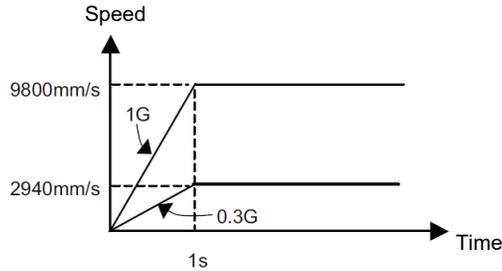

⚠ Caution: Setting the acceleration/deceleration

- (1) Make sure the acceleration/deceleration you set does not exceed the rated acceleration/deceleration stated in the catalog or the instruction manual of the actuator. If the rated acceleration/deceleration is exceeded, the life of the actuator may drop significantly.
- (2) If the actuator or work part receives impact or vibrates, lower the acceleration/deceleration. If the actuator is used continuously in such condition, the life of the actuator will drop significantly.
- (3) If the transferable weight is significantly smaller than the rated payload capacity, accelerations/decelerations greater than the rating may be set. You can shorten the tact time this way, so contact IAI if you are interested. When contacting IAI, let us know the weight, shape and installation method of the work part as well as installation condition of the actuator (horizontal/vertical).

5) Push force [%] --- Set the push torque (current-limiting value) to be used in push-motion operation as a percent (%) value.

Increasing the current-limiting value increases the push force.

If "0" is set, positioning operation is performed.

For the relationship of push force and current-limiting value, refer to the catalog or the instruction manual."


6) Push band [mm] --- Set the travel during push-motion operation.

When push-motion operation is performed, the actuator moves at the speed and rated torque set as part of positioning information, just like normal positioning, until the remaining travel enters the range set here. Once the remaining travel enters this range, the actuator moves to the position set in [1] while pushing the load. The speed of push-motion operation is set in parameter No. 7. Do not use any setting that causes this speed to be exceeded.


If the setting in [2] is less than the push speed, the actuator pushes the work part at the set speed.

How the actuator operates as it pushes the work part toward the end point, start point and intermediate point is illustrated below.

[Pushing toward the end point or intermediate point]

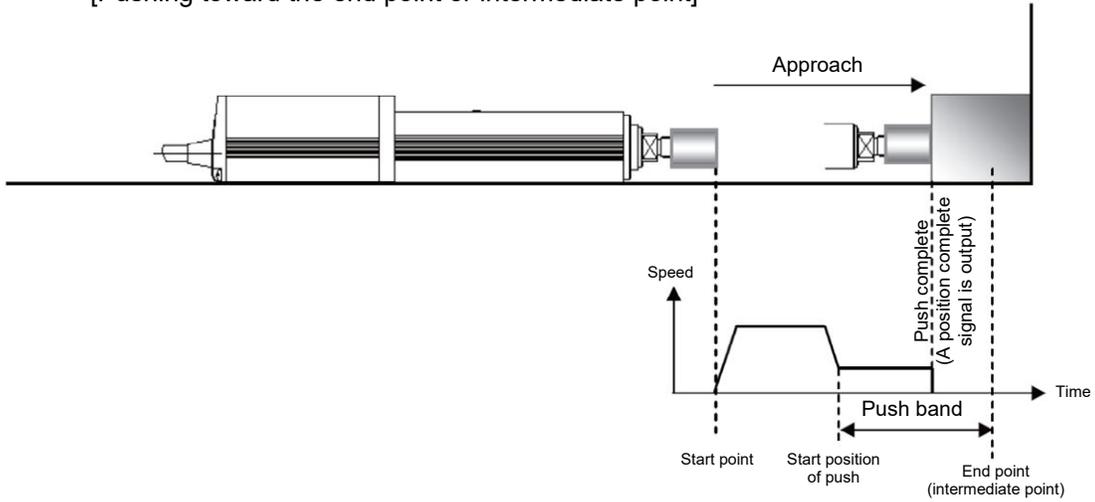

[pushing toward the start point or intermediate point = Pulling]

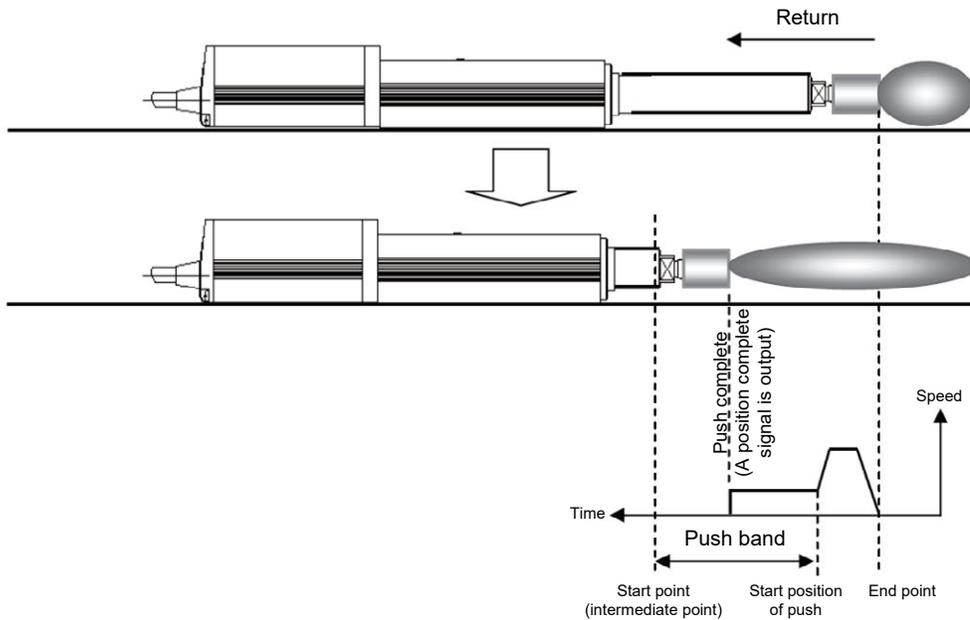


7) Ecology

--- When Ecology is enabled, you can have the motor power (servo) turned off automatically upon elapse of a specified period to save power after completion of positioning. Set the applicable period beforehand using a parameter.

Parameter No.	Parameter name	Initial value	Setting range
10	Auto servo OFF delay time [sec]	1	0 to 9999

[Auto motor power (Auto servo) OFF]

The motor power (servo) will turn off automatically upon elapse of a specified period after completion of positioning. When the next positioning command is issued, the motor power (servo) turns on automatically and positioning is performed. Since no holding current flows while the motor is at standstill, power consumption can be reduced.

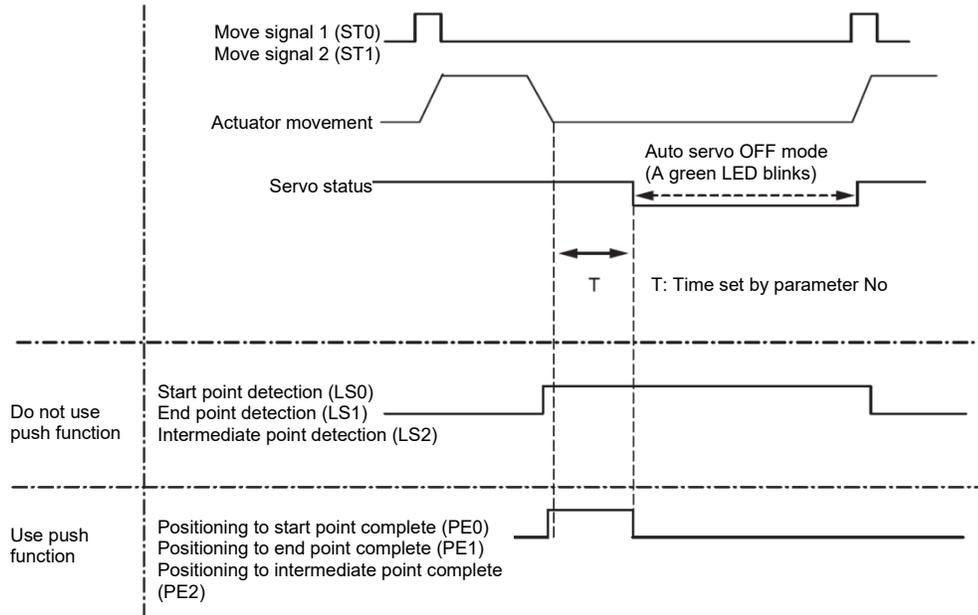

[Statuses of position detection output signals when the push function is not used]

Even when the motor power (servo) is turned off, as long as the actuator is positioned within the positioning band (parameter No. 1) the start point detection signal (LS0), end point detection signal (LS1) or intermediate point detection signal (LS2) will turn ON according to the applicable position, just like when a sensor is used. Accordingly, the position detection signal that has turned ON will remain ON after completion of positioning unless the actuator moves.

[Status of position complete signals when the push function is used]


In push-motion operation, the motor power (servo) does not turn off automatically while the actuator is pushing the work part.

If the actuator has missed the work part, the motor power (servo) turns off automatically.

Once the motor power (servo) turns off, a position complete status is lost. Accordingly, the push complete signal 0 (PE0), push complete signal 1 (PE1) and push complete signal 2 (PE2) will all turn OFF regardless of the stop position.

⚠ Caution: No holding torque is applied in the auto servo OFF mode. Since the actuator will move in this condition if an external force is applied, pay due attention to contact and safety when setting any operation involving auto motor power (servo) OFF.

[2] Basic operation

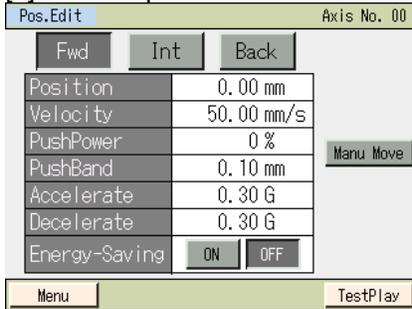

Touch the value field of each setting item such as position. When the numeric keypad is displayed, enter a desired value and then touch [ENT].


Touch either of Start, End or Int and the screen changes to the corresponding setting window for [Fwd], [Back] or [Int].

(Note) The positions must satisfy the following relationships: Home ≤ Start position ≤ Midway position ≤ End position

Touching [Jog] switches to jog operation.

[Manual axis operation (jogging/inching)]

You can load position data via manual axis operation (jogging/inching).

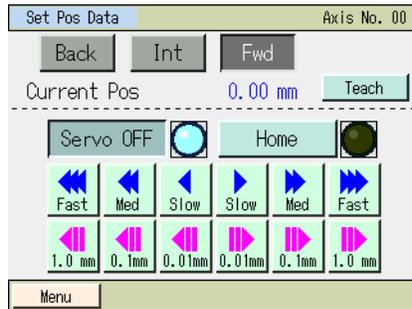

Operation on the manual axis operation (jogging/inching) screen



While any of these buttons is touched, the axis jogs in the direction of the arrow. The axis moves at 1 mm/s in the low-speed mode, 10 mm/s in the medium-speed mode, or 50 mm/s in the high-speed mode. Select one of the speed.



While any of these buttons is touched, the axis inches in the direction of the arrow. Select 0.01 mm, 0.1 mm or 1.0 mm as the inching distance.

- [Servo ON]

Touching [Servo ON] when the motor power (servo) is turned off turns on the motor power (servo) and the ○ lamp will become lit. Touching [Servo OFF] when the motor power (servo) is turned on turns off the motor power (servo) and the ○ lamp will become unlit.

- [HOME]


Touching [HOME] before the home return is completed causes the axis to return home and the ○ lamp will become lit.

Position loading operation

Touch [Teach]. The confirmation screen appears.

You can change the position number by touching [↑]/[↓].






Touching [Yes] loads the current position.






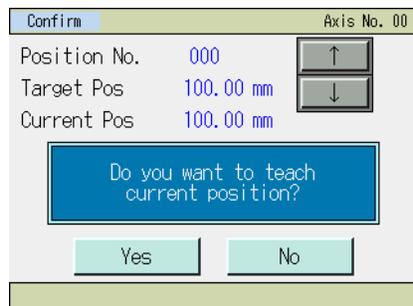









The image shows a confirmation screen with a light green header bar. On the left, the word "Confirm" is written in a small blue box. On the right, "Axis No. 00" is displayed. Below the header, there are three rows of text: "Position No. 000" with an up arrow button to its right, "Target Pos 100.00 mm" with a down arrow button to its right, and "Current Pos 100.00 mm". Below these fields is a blue rectangular box containing the text "Do you want to teach current position?". At the bottom of the screen are two light green buttons labeled "Yes" and "No".

[3] Example of position setting operation
The operation is explained using specific examples.







- 1) Setting the position, speed, acceleration and deceleration
An example of stopping at 2 points is explained.
Positions are set to operate the actuator back and forth between 10.0 mm and 100.0 mm.
End position: 100.0 mm, Start position: 10.0 mm

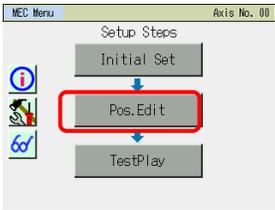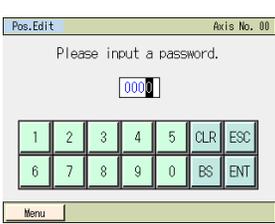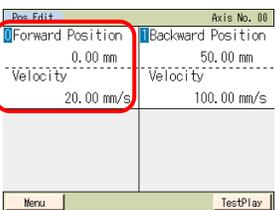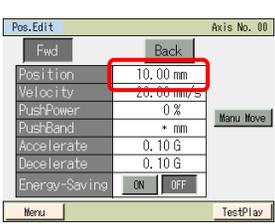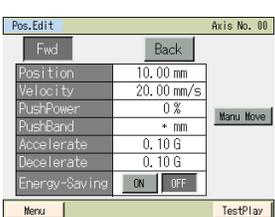No.	Operation	Screen	Remarks
1	Touch [Pos.Edit] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Forward Position].		Touch [Menu] to return to the MEC menu screen.
4	Touch the value field of position. When the numeric keypad is displayed, touch [1], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
5	"10.00" appears next to "Position."		Touch [Menu] to return to the position setting screen.

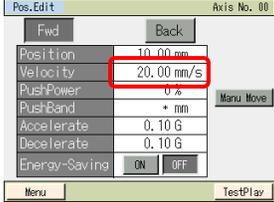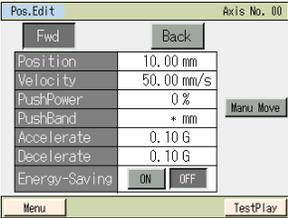
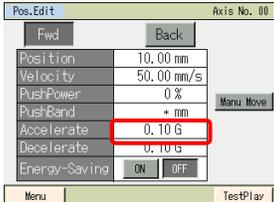
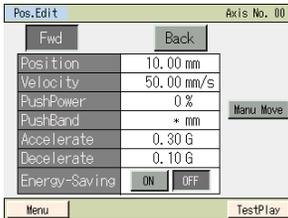
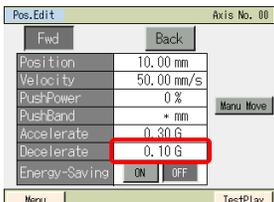
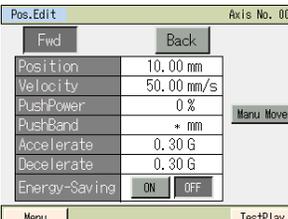
No.	Operation	Screen	Remarks
6	Touch the value field of position. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
7	“50.00” is shown in the speed field.		Touch [Menu] to return to the position setting screen.
8	Touch the value field of acceleration. When the numeric keypad is displayed, touch [0], [.] [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
9	“0.30” is shown in the acceleration field.		Touch [Menu] to return to the position setting screen.
10	Touch the value field of deceleration. When the numeric keypad is displayed, touch [0], [.] [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
11	“0.30” is shown in the deceleration field.		Touch [Menu] to return to the position setting screen.

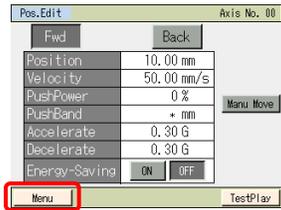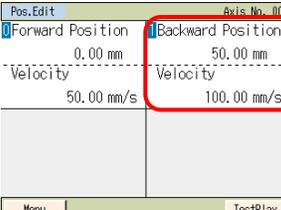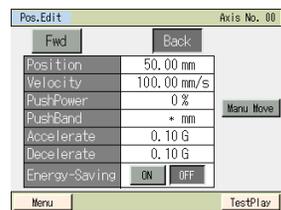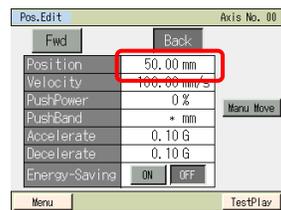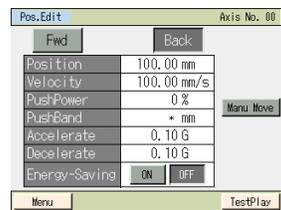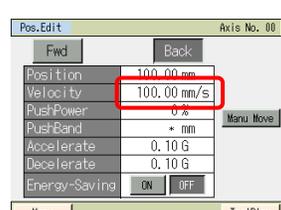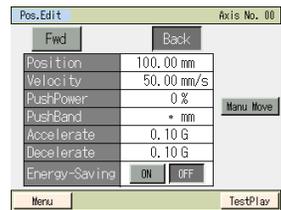No.	Operation	Screen	Remarks
12	Touch [Menu].		
13	Set the position relating to the end point, acceleration, and deceleration. Touch [Backward Position].		Touch [Menu] to return to the MEC menu screen.
14	The display switches to the end point screen. Set the position relating to the end point, acceleration, and deceleration.		Touch [Menu] to return to the position setting screen.
15	Touch the value field of position. When the numeric keypad is displayed, touch [1], [0], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
16	"100.00" is shown in the position field.		Touch [Menu] to return to the position setting screen.
17	Touch the value field of position. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
18	"50.00" is shown in the speed field.		Touch [Menu] to return to the position setting screen.

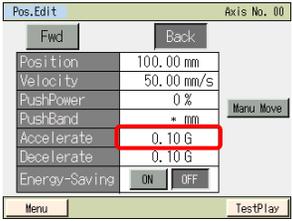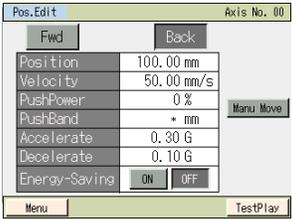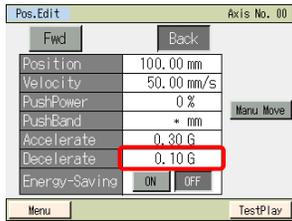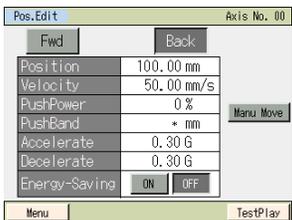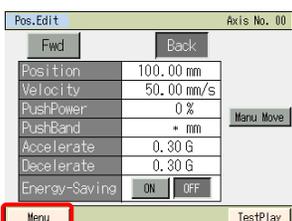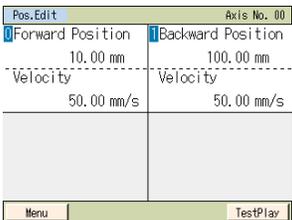






No.	Operation	Screen	Remarks
19	Touch the value field of acceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
20	“0.30” is shown in the acceleration field.		Touch [Menu] to return to the position setting screen.
21	Touch the value field of deceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
22	“0.30” is shown in the deceleration field.		Touch [Menu] to return to the position setting screen.
23	Touch [Menu].		Touch [Menu] to return to the position setting screen.
24			Touch [Menu] to return to the MEC menu screen.

- 2) Manual axis operation (jogging/inching) (Using ) jog/inch the actuator to the target position, and then loading the achieved position (current position) as the end point or start point)
 An example of stopping at 2 points is explained.
 How to load the current position of 80.0 mm as the start point is explained.

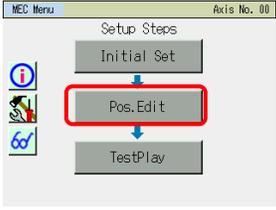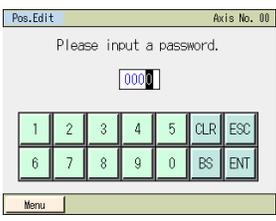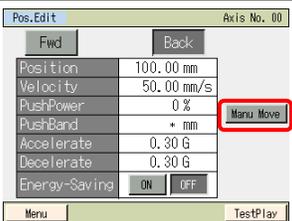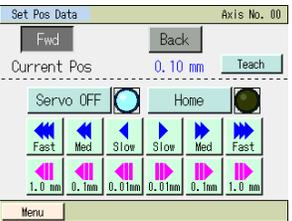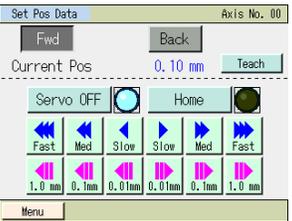No.	Operation	Screen	Remarks
1	Touch [Pos.Edit] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit password" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Forward Position].		Touch [Menu] to return to the MEC menu screen.
4	Touch [Manu Move].		Touch [Menu] to return to the position setting screen. * If home return is not yet complete, perform home return first.
5	If the motor power (servo) is currently OFF, touch [Servo ON] to turn ON the motor power (servo).		
6	Use  to move the slider or rod to the target position of 80.0 mm.		<ul style="list-style-type: none"> • Jogging Touch any of , and the axis will move and continue moving. • Inching Touch any of , and the axis will move by the distance corresponding to the button you have touched.






No.	Operation	Screen	Remarks
7	Touch [Teach].		
8	Touch [Yes].		
9	Touch [Menu].		
10	“80.00” is shown in the position field. This confirms that the position data has been loaded.		Touch [Menu] to return to the position setting screen.
11	Touch [Menu].		Touch [Menu] to return to the position setting screen.
12			Touch [Menu] to return to the MEC menu screen.




- 3) Direct teaching (Moving the slider by hand to the target position, and then loading the achieved position (current position) as the end point or start point)
 An example of stopping at 2 points is explained.
 How to load the current position of 50.00 mm as the start point is explained.

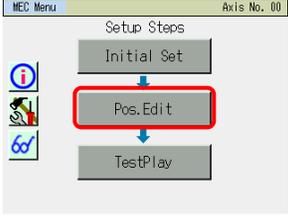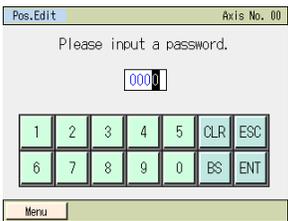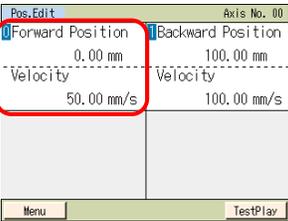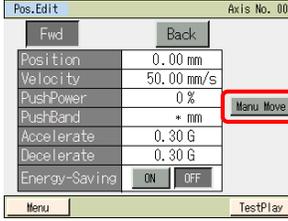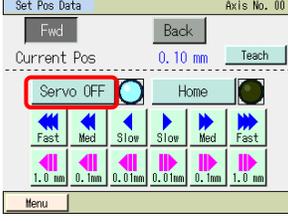No.	Operation	Screen	Remarks
1	Touch [Pos.Edit] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Forward Position].		Touch [Menu] to return to the MEC menu screen.
4	Touch [Manu Move].		Touch [Menu] to return to the position setting screen. * If home return is not yet complete, perform home return first.
5	If the motor power (servo) is currently ON, touch [Servo ON] to turn OFF the motor power (servo).		
6	Move the slider or rod by hand to the target position of 50.00 mm. Touch [Teach].		







No.	Operation	Screen	Remarks
7	Touch [Yes].		
8	Touch [Menu].		
9	“50.00” is shown in the position field. This confirms that the position data has been loaded.		Touch [Menu] to return to the position setting screen.
10	Touch [Menu].		Touch [Menu] to return to the position setting screen.
11			Touch [Menu] to return to the MEC menu screen.

- 4) Setting for push-motion operation (push force, push band)
 An example of stopping at 2 points is explained.
 In this example, push-motion operation is performed at the start point.
 Push force: 50%, Push band: 5.0 mm

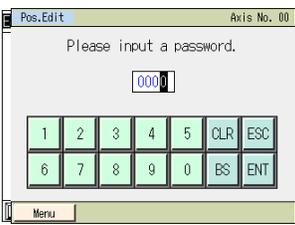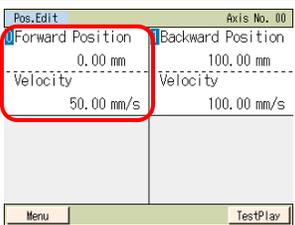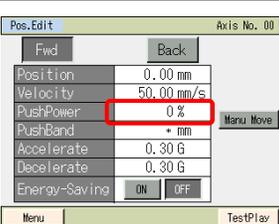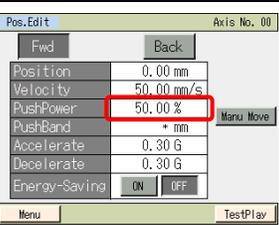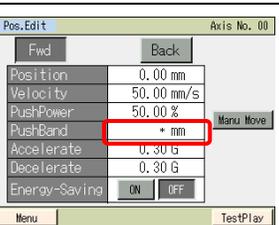No.	Operation	Screen	Remarks
1	Touch [Pos.Edit] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit password" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Forward Position].		Touch [Menu] to return to the MEC menu screen.
4	Touch the value field of [PushPower]. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
5	"50.00" is shown in the push power field.		Touch [Menu] to return to the position setting screen.
6	Touch the value field of [PushBand]. When the numeric keypad is displayed, touch [5] and then [ENT].		Touch [Menu] to return to the position setting screen.

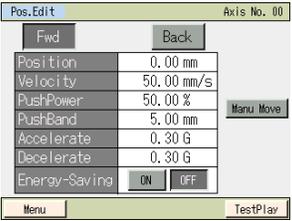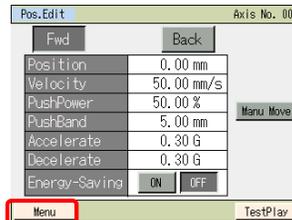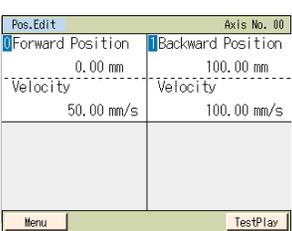No.	Operation	Screen	Remarks
7	"5.00" is shown in the push band field.		Touch [Menu] to return to the position setting screen.
8	Touch [Menu].		Touch [Menu] to return to the position setting screen.
9			Touch [Menu] to return to the MEC menu screen.

- 5) Setting the energy-saving function (auto motor power (auto servo) OFF function)
 An example of stopping at 2 points is explained.
 How to automatically turn off the servo in 5.0 seconds after stopping is explained.

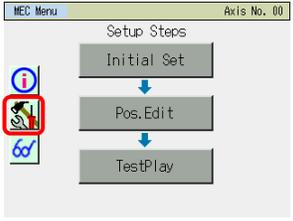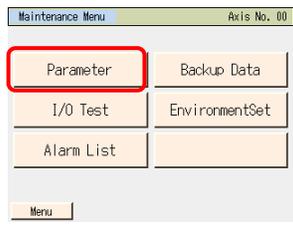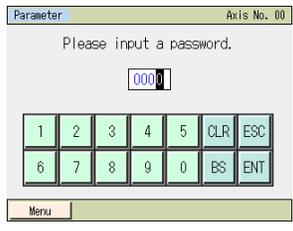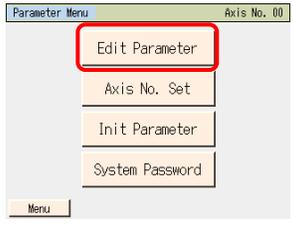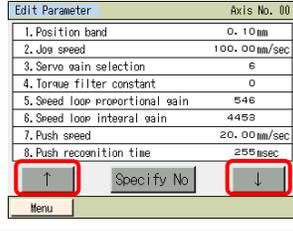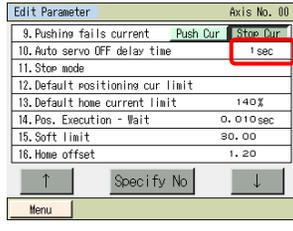
No.	Operation	Screen	Remarks
1	Touch  on the MEC menu screen.		
2	Set the auto motor power (auto servo) OFF delay time. Touch [Parameter].		
3	If the system password is other than "0000," the password input screen appears. Input a system password and touch [ENT].		The default system password is "5119". For how to change the system password, refer to 7.10, "Maintenance – Parameters [Change System Password]."
4	Touch [Edit Parameter].		
5	Touch [↑]/[↓] to navigate through the screens until the auto servo OFF delay time setting screen appears.		
6	Touch the value field of auto servo OFF delay time. When the numeric keypad is displayed, touch [5] and then [ENT].		

No.	Operation	Screen	Remarks
7	"5" is shown.		
8	Touch [Menu].		
9	Touch [Yes].		If you touch [No], the settings you have made will not be reflected until the controller is restarted.
10			
11	The controller is restarted and the MEC menu screen appears. Touch [Pos.Edit].		
12	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit password" field of the parameter edit screen.
13	Set the energy-saving function at the start point. Touch [Forward Position].		Touch [Menu] to return to the MEC menu screen.

No.	Operation	Screen	Remarks
14	Touch [ON].		Touch [Menu] to return to the position setting screen.
15	Touch [Menu].		Touch [Menu] to return to the MEC menu screen.
16	Set the energy-saving function at the end point. Touch [Backward Position].		Touch [Menu] to return to the MEC menu screen.
17	The display switches to the end point screen. Set the energy-saving function relating to the end point.		Touch [Menu] to return to the position setting screen.
18	Touch [ON].		Touch [Menu] to return to the position setting screen.
19	Touch [Menu].		Touch [Menu] to return to the position setting screen.
20			Touch [Menu] to return to the MEC menu screen.

7.8 Trial operation



You can perform I/O tests and axis movement operation tests.

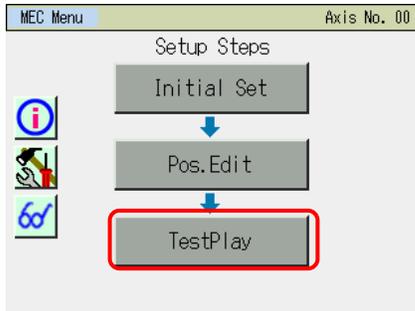


Touch [TestPlay] on the MEC menu screen.

- Operation test: You can perform operation tests of axis movement. A screen corresponding to the operation pattern you have selected appears. The display can be switched between the normal mode and reversed-home mode. If your actuator is of the reversed-home specification, you can switch to the reversed-home mode to align the display with the actual actuator.



Stopping at 2 points

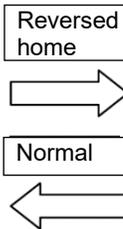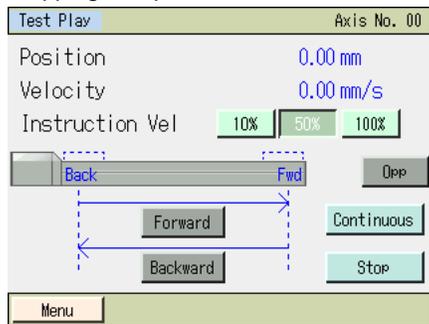


Stopping at 2 points (Reversed home)

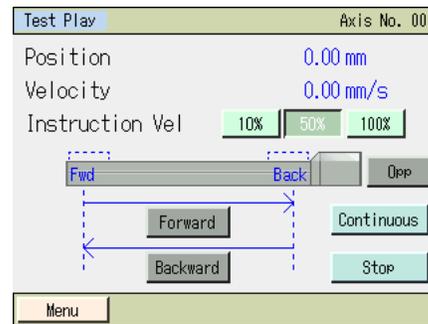


Stopping at 3 points

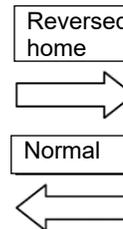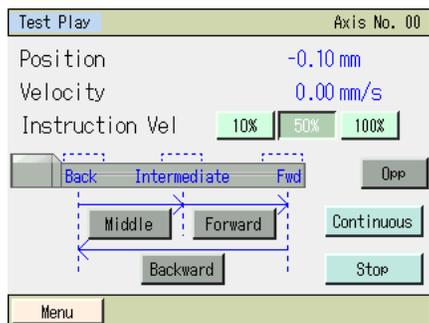

Stopping at 3 points (Reversed home)

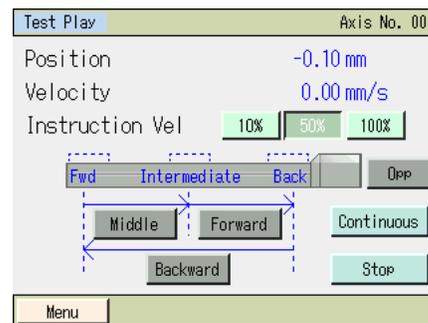

The operating direction is shown by using an example of stopping at 2 points.

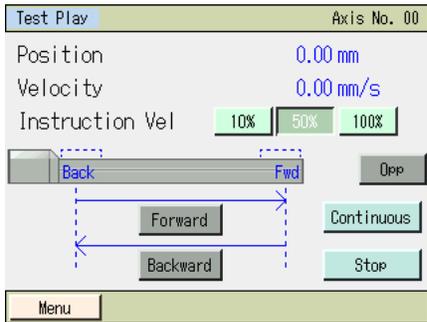


← The current position of the axis is shown.
 ← The speed of the axis is shown.

- **Instruction Vel:** Select [10%], [50%] or [100%] as the speed for trial operation. If the speed set on the position setting screen is 600 mm/s, for example, the trial Operation peed will become 600 mm/s if [100%] is selected, 300 mm/s if [50%] is selected, or 60 mm/s if [10%] is selected.
- **Forward:** Touching [Forward] causes the actuator to move toward the end point.
- **Backward:** Touching [Backward] causes the actuator to move toward the start point.
- **Continuous:** Touching [Continuous] causes the actuator to move continuously until [Stop] is touched.
 If the actuator is set to stop at 2 points, it will move between the start point and end point repeatedly.
 If the actuator is set to stop at 3 points, it will move in the sequence of intermediate point → end point → start point repeatedly.
- **Stop:** Touching [Stop] causes the actuator to stop.
- **Opp, Normal:** Touching [Opp] or [Normal] toggles the display mode between normal and reversed-home.


7.9 Information

The operation pattern, version and other information are shown.

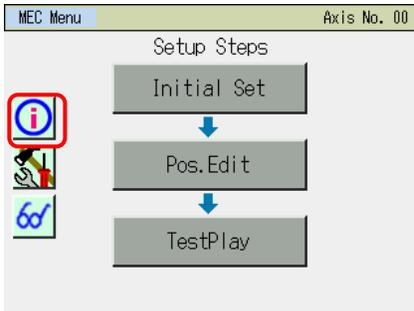

Touch  on the MEC menu screen.

The information selection screen appears.

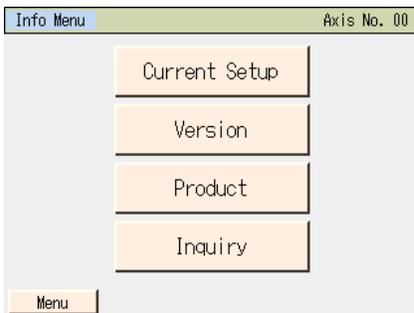


Touch the screen you want to display.
Touch [Menu] to return to the MEC menu screen.


[Setting check]

You can check the operation pattern, operation mode and other information currently set.

(Stopping at 2 points)

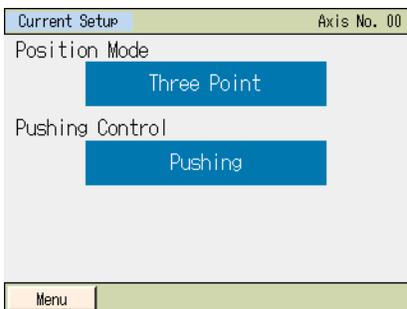

(Stopping at 3 points)

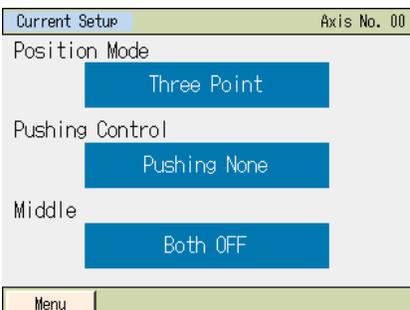

[Version/manufacturing information]

You can check the version information, etc.

VersionInfo		Axis No. 01
Series/Type	PSEP-NP	
Controller Version	AE20FFCC	
Core Version	AE840000	
TP Version (CON/SEL)	Ver. 2.00 / Ver. 1.00	
TP Core Version	Ver. 1.00	
ABS Board Version	00000005	
Menu		

[Manufacturing information]

You can check the serial numbers and other manufacturing information.

Product		Axis No. 00
Controller Serial No.	1234-5678-90AB-C	
Controller PCB Revision	M. REV: F. REV:	
Axis Serial No.	FE0C-BA09-8765-4	
Menu		


[Contact]

You can check the contact information of IAI.


Inquiry
IAI Customer center "EIGHT"
 0800-888-0088
OPEN 24 HOURS A DAY. Weekend open 9:00AM to 5:00PM
http://www.iai-robot.co.jp/

7.10 Maintenance – Parameters

Set the parameters and axis number. You can change the system password and reset all parameters to their factory defaults.

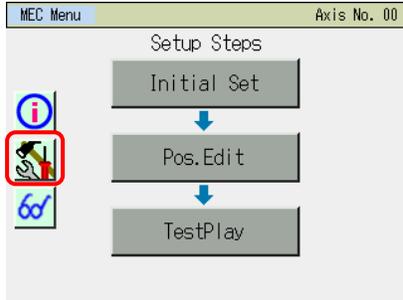


Touch  on the MEC menu screen.

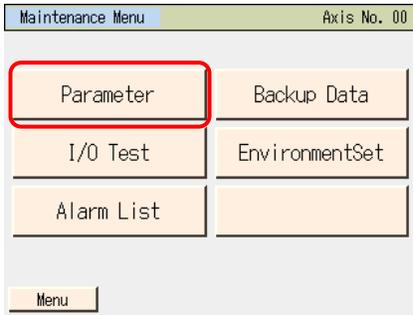

Touch [Parameter].
Touch [Menu] to return to the MEC menu screen.


The password entry screen appears if the system password is other than “0000.”

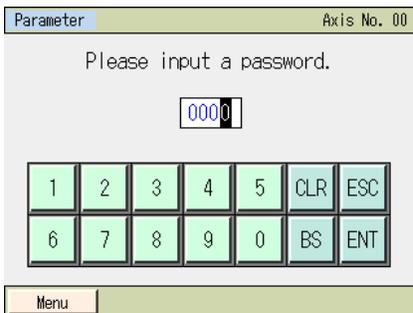

Enter the password and then touch [ENT].

The default system password is “5119”.
For how to change the system password, refer to 7.10, “Maintenance – Parameters [Change System Password].”

A desired password can be set using the “system password” parameter accessible from the maintenance menu.

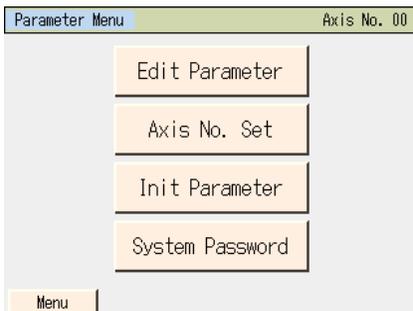

Select and touch [Edit Parameter], [Init Parameter] or [System Password].

A screen corresponding to the menu you have selected appears.

- **Parameter edit** : You can set 24 parameters.

Edit Parameter		Axis No. 00
1. Position band	0.10mm	
2. Jog speed	100.00mm/sec	
3. Servo gain selection	6	
4. Torque filter constant	0	
5. Speed loop proportional gain	546	
6. Speed loop integral gain	4453	
7. Push speed	20.00mm/sec	
8. Push recognition time	255msec	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
Menu		

- **Parameter initialization** : You can reset all parameters to their factory defaults (initialize the parameters).

Init Parameter		Axis No. 00
<div style="border: 1px solid black; padding: 10px; width: fit-content; margin: 0 auto;"> <p>Initialize to shipment parameter?</p> </div>		
Password : ****		
<input type="button" value="Yes"/> <input type="button" value="No"/>		
Menu		

- **System password change** : You can change the parameter edit password, etc.

Change System Password							
New Password : 5119							
1	2	3	4	5	CLR	ESC	
6	7	8	9	0	BS	ENT	
Menu							

[1] Types of parameter editing

For details on each parameter, refer to the instruction manual for your PMEC/AMEC controller and ERC3 (MEC mode).

No.1 (Positioning band)

Set the positioning band.

No.2 (Jog speed)

Set the speed of jog operation.

No.3 (Servo gain number)

Set the servo gain number that determines the response of position control loops in servo control.

No.4 (Torque filter constant)

Set the torque filter time constant that determines the filter time constant for torque commands in servo control.

No.5 (Speed loop proportional gain)

Set the speed loop proportional gain that determines the response of speed control loops in servo control.

No.6 (Speed loop integral gain)

Set the speed loop integral gain that determines the response of speed control loops in servo control.

No.7 (Push speed)

Set the speed of push-motion operation.

No.8 (Push recognition time)

Set the push recognition time to recognize completion of operation after the work part was contacted in push-motion operation.

No.9 (Pushing fails current)

Set whether to use the push current or stop current as the current limiting value when the work part was missed in push-motion operation.

For AMEC, if the stop current is selected when the work part was missed in push-motion operation, the torque limit at the travel current limiting value is set.

No.10 (Auto servo OFF delay time)

Set the time until the auto motor power (auto servo) turns off automatically when the ecology function is enabled.

No.11 (Stop mode) Displayed for PMEC, ERC3 (MEC mode) controllers

Set whether to implement servo stop based on the full servo control method or complete stop without servo control when the actuator stops.

(Note) When this parameter is changed, the new setting will not be reflected until the position data is written to the controller again.

No.12 (Current limiting value while stopped after positioning) Displayed for PMEC, ERC3 (MEC mode) controller

Set the current limiting value to be applied while the actuator is stopped after positioning.

No.13 (Current limiting value during home return)

Set the current limiting value to be applied during home return operation.

No.14 (Position execution wait time during continuous operation)

This parameter is not used with P MEC, A MEC and ERC3 (MEC mode) controllers.

No.15 (Soft limit)

Set the positive soft limit.

No.16 (Home return offset)

Set the offset for home return.

No.17 (Home return direction)

Set whether to perform home return in the motor direction or front side direction.

The home return direction cannot be changed for some actuators, such as rod-type actuators.

No.18 (Position edit password)

Set the password for editing position data.

No.46 (PIO Inching distance) Displayed for ERC3

Set the inching distance for when conducting the inching operation in Quick Teach.

No.147 (Target value for total number of movements) Displayed for ERC3

Set the threshold for total number of movements.

The total number of the actuator operation is counted in the maintenance function of ERC3.

An alarm is generated when the total operation distance exceeds the value set to threshold for total number of movements.

No.148 (Target value for total travelled distance) Displayed for ERC3

Set the threshold for total travelled distance.

The total travelled distance of the actuator operation is counted in the maintenance function of ERC3.

An alarm is generated when the total operation distance exceeds the value set to threshold for total travelled distance.

No.152 (High Output Setting) Displayed for ERC3

Set whether use the high output function. Enabling : Set to use the high output function.

No.153 (BU Speed Loop Proportional Gain) Displayed for ERC3

When the high output setting is activated, this parameter setting becomes effective for the speed loop proportional gain.

No.154 (BU Speed Loop Integral Gain) Displayed for ERC3

When the high output setting is activated, this parameter setting becomes effective for the speed loop integral gain.

- [2] Basic operation
Set parameters.

[Parameter]

Edit Parameter		Axis No. 00
1. Position band	0.10 mm	
2. Jog speed	100.00 mm/sec	
3. Servo gain selection	6	
4. Torque filter constant	0	
5. Speed loop proportional gain	546	
6. Speed loop integral gain	4453	
7. Push speed	20.00 mm/sec	
8. Push recognition time	255 msec	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

Touch [↑] to return to the previous screen.


Touch [↓] to move to the next screen.

Three screens are available, including one showing the default positioning band and others used to edit position data and password.

Touch [Menu] to return to the parameter menu screen.


An example of setting a soft limit is explained.

Touch [↑] and [↓] on the displayed screen until the soft limit setting screen appears.

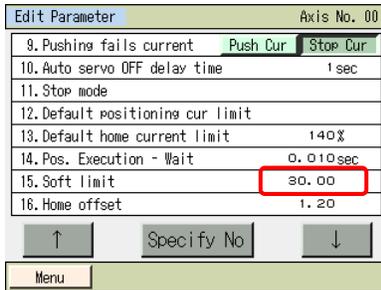


Touch the current value.

When the numeric keypad appears, enter a desired value and then touch [ENT].

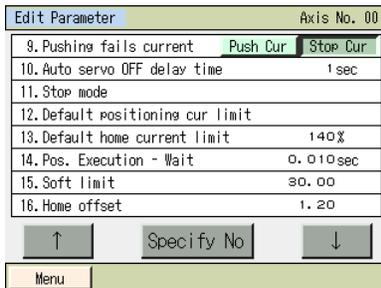

Change parameters and touch [Menu] to return to the controller restart screen.

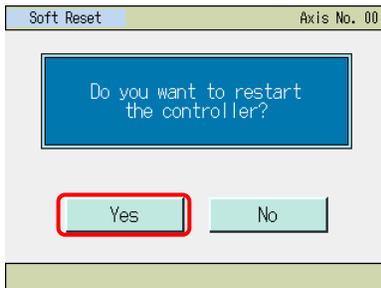

Touch [Yes].

The controller is restarted.

The controller operates according to the operation pattern settings you have made.


The display returns to the initial setting screen.



Touch [No], and the controller will not operate according to the operation pattern parameters you have set until restarted.


[Init Parameter]

The parameters are reset to their factory default settings.

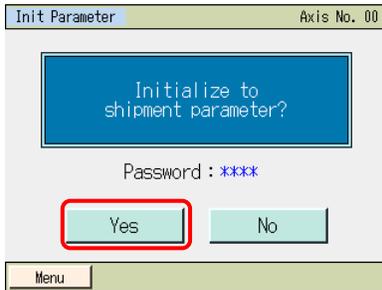

Touch [Yes].

Touch [No] to return to the parameter menu screen without resetting the parameters to their factory default settings.

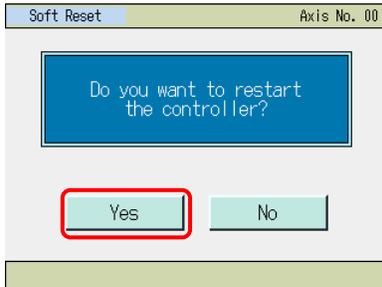


Touch [Yes].

The controller is restarted.

The controller operate according to the factory-set parameters.

The display returns to the initial setting screen.

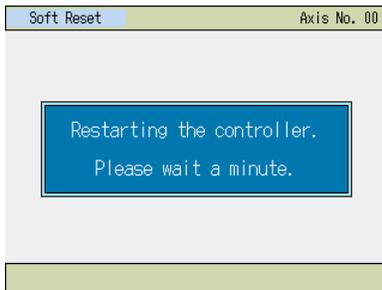


Touch [No], and the controller will not operate according to the factory-set parameters until restarted.

[Change System Password]
Change the system password.




Enter the new system password to change to.
If you do not set the system password, enter 0000.

Touch [ENT].

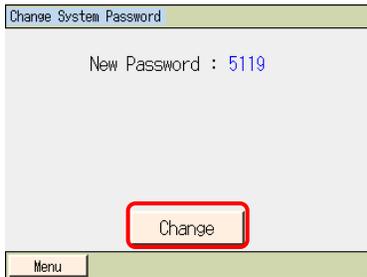


Touch [Change].

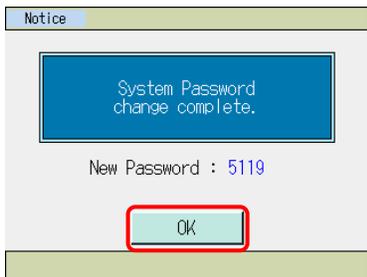


The system password changes.

Touch [OK] to return to the parameter menu screen.

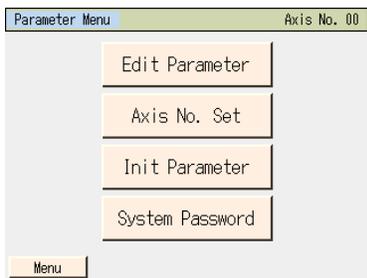


7.11 Maintenance – I/O Tests


You can monitor PIO input signals.
Output signals can be forcibly turned ON or OFF.

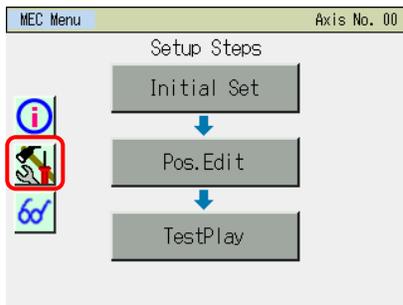

Touch  on the MEC menu screen.

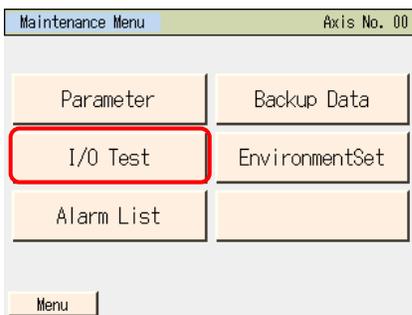

Touch [I/O Test].
Touch [Menu] to return to the MEC menu screen.

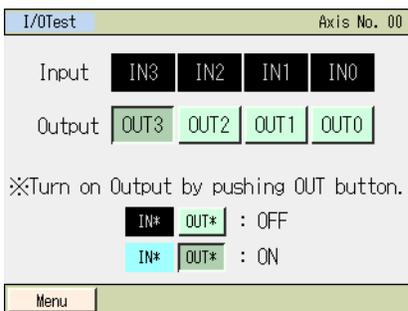


You can monitor the ON/OFF statuses of input signals.

Output signals OUT0 to OUT3 can be forcibly output by touching each signal button.


Touch [Menu] to return to the maintenance menu screen.

7.12 Maintenance – Alarm List

A list of alarms that have generated after the controller power was turned on is displayed. [Refer to 8, “Error Display” for the details of alarms.]

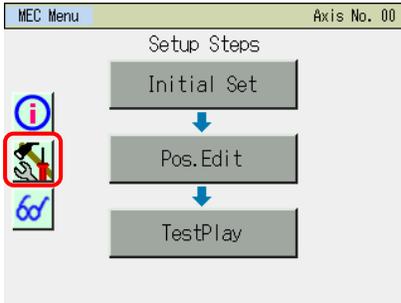

Touch  on the MEC menu screen.

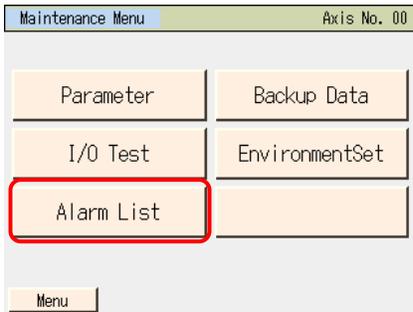

Touch [Alarm List].

Touch [Menu] to return to the MEC menu screen.

The alarm list of the controller is displayed.

Controller without the calendar function

No	Code	Message	Adrs	Detail	Time
00	FFF	PowerUP No Error	****	****	0:00:00
01	0A2	Pos Data Error	1214	0021	0:04:38
02	FFF	PowerUP No Error	****	****	0:00:00
03	000		****	****	0:00:00
04	000		****	****	0:00:00
05	000		****	****	0:00:00
06	000		****	****	0:00:00
07	000		****	****	0:00:00

Touch [↓] to display the list of the next screen.

Controller Alarm List						Axis No. 00
No	Code	Message	Adrs	Detail	Time	
08	000		****	****	0:00:00	
09	000		****	****	0:00:00	
10	000		****	****	0:00:00	
11	000		****	****	0:00:00	
12	000		****	****	0:00:00	
13	000		****	****	0:00:00	
14	000		****	****	0:00:00	
15	000		****	****	0:00:00	

Menu

Touch [↑] to display the list of the previous screen.

Touch [Clear], and the details of all alarms will be cleared.

(Note) *PowerUP No Error indicates that the controller power was turned on. It does not indicate an error. The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.*

Controller with the calendar function

Controller Alarm List						Axis No. 00
No	Alarm Code	Address	Detail Code	Time (yy/mm/dd hh:mm:ss)	Message	
00	FFF	****	****	11/08/03 18:32:13	PowerUP No Error	
01	0E8	****	****	11/08/03 17:21:22	A,B disconnect	
02	FFF	****	****	11/08/03 17:15:12	PowerUP No Error	
03	0E8	****	****	11/08/03 17:14:17	A,B disconnect	

Menu

Touching [↑] displays the list of the previous screen.

Touching [↓] displays the list of the next screen.

Touching [Clear] clears all alarms.

(Note) *"PowerUP No Error" indicates that the controller power was turned on. The occurrence time corresponds to the time each alarm occurred.*

7.13 Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

It is not applicable to the backup data storable in the MEC PC software.

Please note that MEC PC Software cannot deal with individual position data and parameters.

(Note) Extensions of the Stored Data

- *The file extensions for AMEC Controllers to be stored in the Secure Digital card are ptam for the position data and pram for the parameters. The position data for P MEC controllers is ptpm and parameters are prpm.*
- *The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.*

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore.


If the folder does not exist, it is automatically created.

- *Position Data : \CONPTA\Position\File Name*
- *Parameter : \CONPTA\Parameter\File Name*
- *Alarm List : \CONPTA\Alarmlist\File Name*


(Note) Files with Chinese names are not supported.

7.13.1 Data Backup of the Controller

The data in the controller is transferred to the Secure Digital memory card for backup.

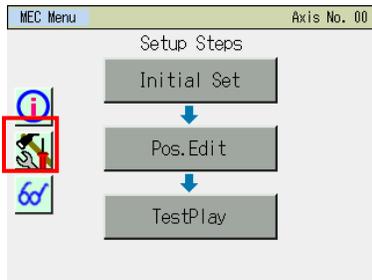


Touch  on the MEC Menu screen.

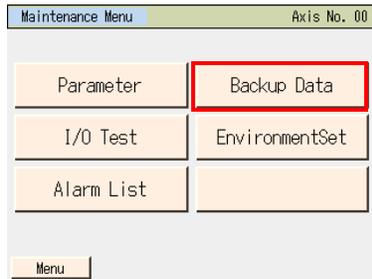

Touch [Backup Data].

Touch [Menu] to return to the MEC menu screen.


A screen for data transfer appears.

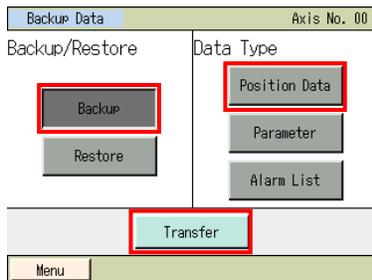

Touch [Backup].


Select the data type for the backup such as [Position Data] and touch it.

Touch [Transfer].

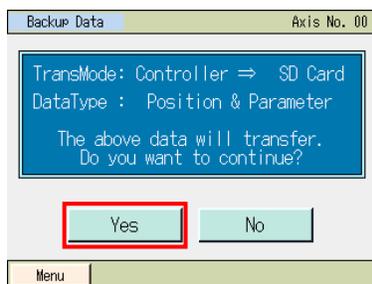

Touch [Yes].

If [No] is touched, the screen goes back to the data backup screen.

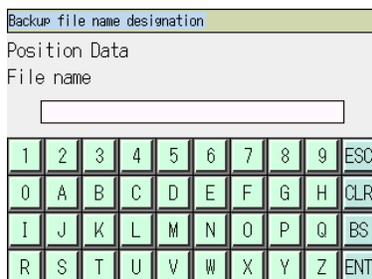

Numeric keys show up. Input a file name.

The file name is to be typed with 32 characters at maximum in letters and numbers.

Backup file name designation

Position Data

File name

AAA

Save

Menu

Touch [Save].

File name confirmation

File name

AAA.ptpc

The above file is saved.
Are you sure to continue?

Yes No

Menu

The screen below appears if the same name is not found.

Touch [Yes].

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

File name confirmation

File name

AAA.ptpc

A file of the same name already exists.
Do you want to replace it?

Yes No

Menu

The screen below appears if the same name is not found.

Touch [Yes].

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

Backup Data Axis No. 00

Transferring Data.
Please wait a minute.

100%

TransMode: Controller => SD Card
DataType: Position & Parameter

Data transfer screen will be shown.

Message Axis No. 00

Message No. 184

Data transfer completed


Back Inquiry

A message to tell the data transfer is complete pops up and the backup process is finished.


Touching [Back] can go back to the Backup Data screen.

7.13.2 Restore to Controller

Data in the Secure Digital card is transferred to the controller.

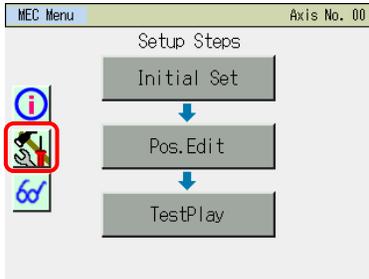


Touch  on the MEC menu screen.

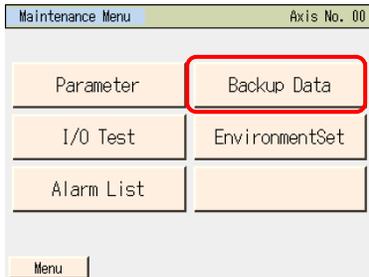

Touch [Backup Data].

Touch [Menu] to return to the MEC menu screen.


A screen for data transfer appears.

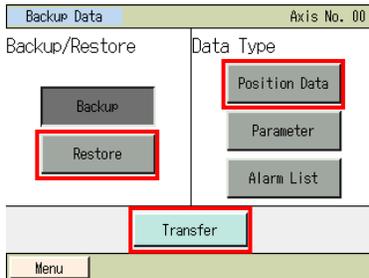

Touch [Restore].


Select the data type to transfer to the controller, such as [Position Data], and touch it.

Touch [Transfer].

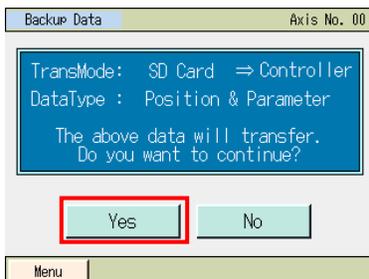


Touch [Yes].

If [No] is touched, the screen goes back to the data backup screen.

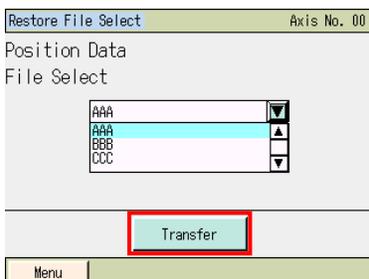


Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.

Touch [Transfer].

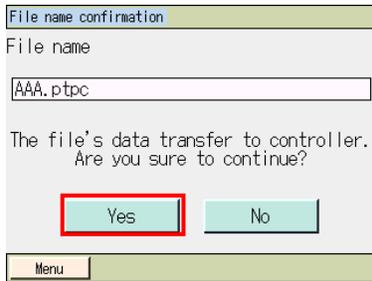

Touch [Yes].

If [No] is touched, the screen goes back to the previous one for the restore file select.

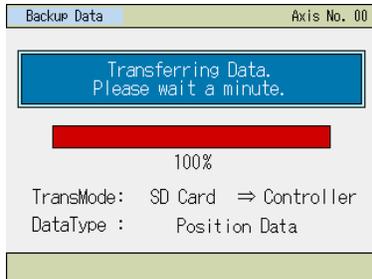

Data transfer screen will be shown.




A message to tell the data transfer is complete pops up and the data transfer process to the controller is finished.


Touching [Back] can go back to the Backup Data screen.

7.14 Maintenance – Environment Setting

You can set the language, touch operation sound, auto monitor function, dim display time, data input warning, display and time.

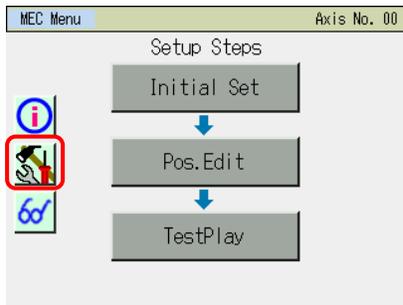


Touch  on the MEC menu screen.

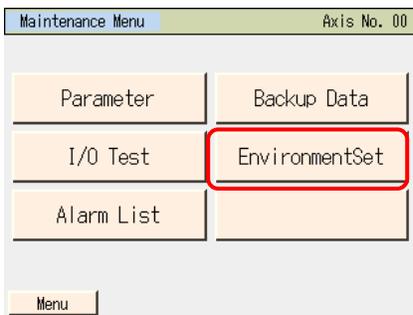

Touch [EnvironmentSet].


Touch [Menu] to return to the MEC menu screen.

The environment setting screen appears.

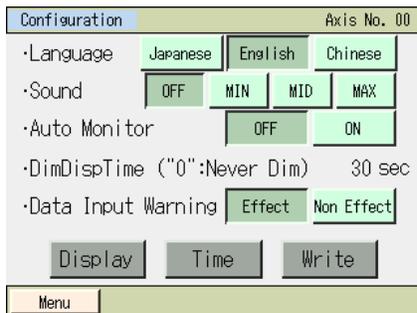

[1] Basic operation

- Language: Select a language to display.
Display for Japanese/English/Chinese languages setting change (No Chinese display after Ver.3.00)

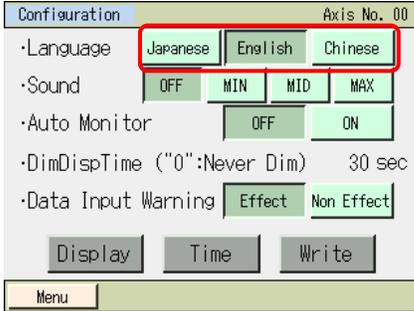


Touch a desired language ([English] etc.).

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- Sound: Set whether to output or not output a touch tone.

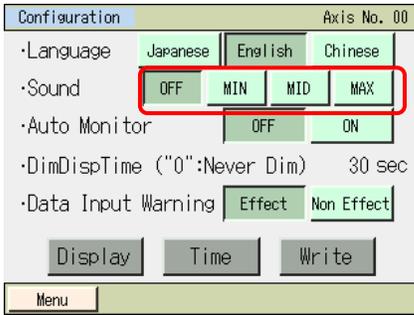


Touch [OFF]. A touch tone is not output.

Touch either of [MAX], [MID] or [MIN]. A touch tone is output.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- Auto Monitor: You can have the monitor screen appear first after the touch panel teaching pendant is connected.

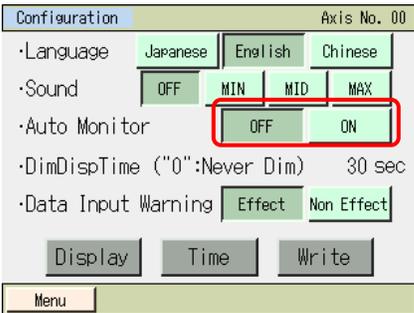


Touch [ON] to enable the auto monitor function.

Touch [OFF] to disable the auto monitor function.

Select either ON or OFF, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- Dim Display Time: You can set a desired dim display time when not being operated.
If "0 sec" is set, the display will remain lit at all times.

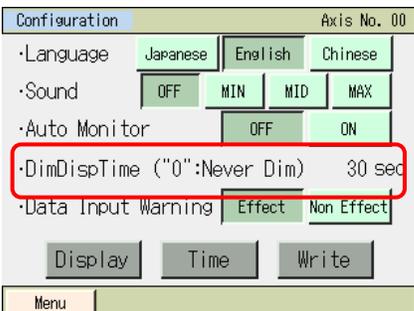

Touch [Dim Display Time ("0": Never Dim) 30 sec].


Enter the light off time.

A desired value between 0 and 255 sec can be set.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.

- **Data Entry Alarm:** The alarm can be output when a value less than the minimum speed and a value exceeding the rated acceleration/deceleration speed are entered in the position data. Note that the value is entered even if the alarm occurs. Always use within the specification of the actuator.

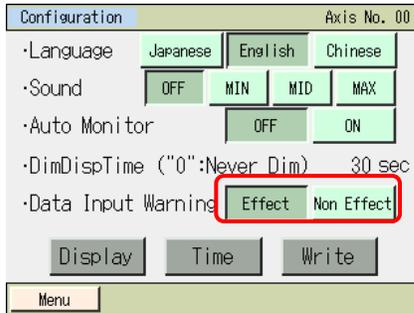


Touch [Effect] to give the warning.
Touch [Non Effect] not to give the warning.

Select either Effect or Non Effect, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another window.


[Display]

Adjustment of contrast and brightness of the screen, position tuning for touch panel and LCD screen check can be performed.

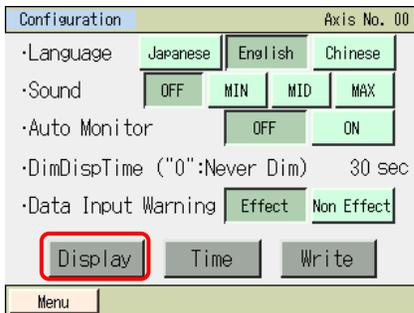

Touch [Display].

Display menu Window is displayed.

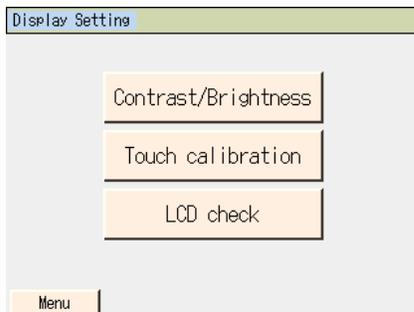


Select Display Setting menu.


Touch [Menu] and the display returns to EnvironmetSet screen.

- Change the Contrast/Brightness

You can adjust contrast (shading of liquid crystal) and brightness (of liquid crystal).

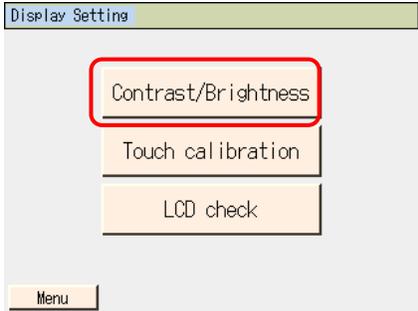

Touch [Contrast/Brightness].

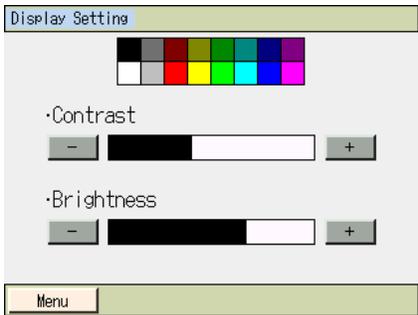

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.


Brightness adjustment

Touch [-] and [+] under Brightness to adjust the brightness of the screen.


Touch [Menu] to save the setting status and return to Display menu screen.

- Touch calibration

A calibration for the position detection of the touch panel is performed.

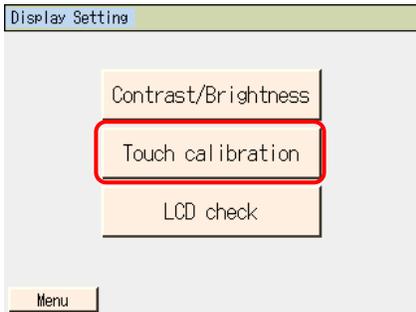

Touch [Touch Calibration].

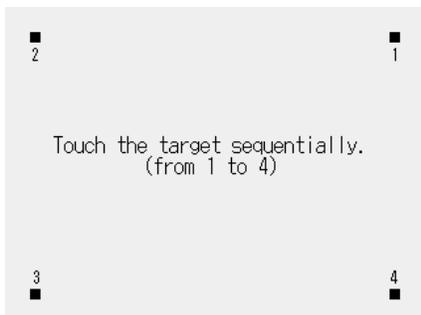


Touch [·] in the order of 1, 2, 3 and 4.

The display returns to Display menu screen.


- LCD check

LCD display can be checked in the order of Color Pattern, White Only and Black Only.

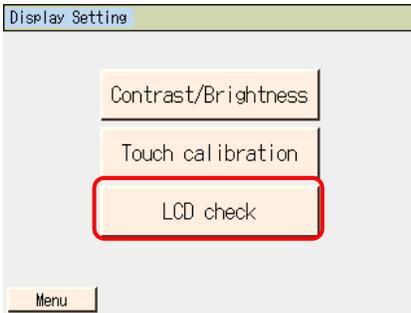

Touch [LCD Check].

Color Pattern is displayed.

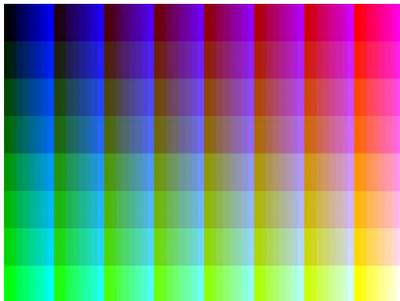


Touch any point on the screen.

White Only is displayed.



Touch any point on the screen.

Black Only is displayed.



Touch any point on the screen.
The display returns to Display menu screen.

[Time Setting]

Time setting can be performed for TB-01/TB-01D/TB-01DR.

Configuration Axis No. 00

- Language Japanese English Chinese
- Sound OFF MIN MID MAX
- Auto Monitor OFF ON
- DimDispTime ("0":Never Dim) 30 sec
- Data Input Warning Effect Non Effect

Display **Time** Write

Menu

Touch [Time].

Teaching Time Axis No. 00

Time Mon

yy/mm/dd hh:mm:ss

00 / 01 / 01 00 : 00 : 00

Time Edit

Menu

Touch [Time Edit].

Teaching Time Axis No. 00

Time Edit

yy/mm/dd hh:mm:ss

00 / 01 / 01 00 : 00 : 00

Time Mon **Set**

Menu

Touch the value of year, month, day, hour, minute or second that is required to be changed.

Teaching Time Axis No. 00

Time Edit

yy/mm/dd hh:mm:ss

00 / 01 / 01 00 : 00 : 00

1	2	3	4	5	CLR	ESC
6	7	8	9	0	BS	ENT

Menu

Numeric keys are displayed. Input a value and touch [ENT].

Teaching Time Axis No. 00

Time Edit

yy/mm/dd hh:mm:ss

00 / 01 / 01 00 : 00 : 00

Time Mon **Set**

Menu


Touch [Set].



The time of the TB-01/TB-01D/TB-01DR is changed.
Touching [Back] can go back to the controller time setting screen.
Touching [Inquiry] displays the inquiry screen.

7.15 Monitor

The current position, speed, electrical current, system status and I/O statuses of the controller are displayed.

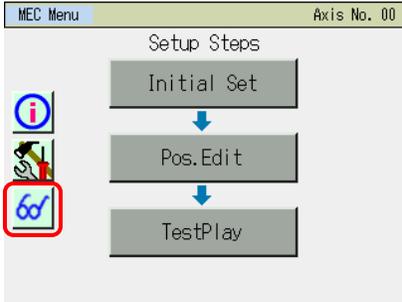

Touch **6d** on the MEC menu screen.

The operation pattern is shown. → PIO pattern 0
·Standard

The I/O statuses of the axis are shown. →

Input	Output
IN 0	OUT0
IN 1	OUT1
IN 2	OUT2
IN 3	OUT3

●:OFF ○:ON

The displayed signals vary depending on the operation pattern.

← The servo status is shown. (Servo)

← The home return status is shown. (Home)

← The axis position is shown. (Position 0.00 mm)

← The axis speed is shown. (Velocity 0.00 mm/s)

← The electrical current of the axis is shown. (Current Rate 0.0%)

Menu

Touch [Menu] to return to the MEC menu screen.

8. Error Display

8.1 Occurrence of Alarm

If an alarm occurs, the alarm screen appears.

Controller with the calendar function



Controller without the calendar function



8.1.1 Alarms Detected by Controller

Alarms of codes 000 to 0FF are those detected by the controller.

These alarms include major alarms relating to the servo control system, power system, etc. For details on these alarms, refer to the instruction manual for your controller.

If an alarm occurs, remove the cause of each alarm and then perform the following operation.

- To reset operation -cancellation level alarms, touch [Reset Alm] on the alarm screen.
- To reset cold-start level alarms, reconnect the control power.

8.1.2 Messages which occur when operating the touch panel teaching pendant

Codes from 100 to 3FF are messages which occur when operating the touch panel teaching pendant.

- 100 to 1FF: Message level (entry errors, guide messages)
- 200 to 2FF: Operation cancellation level (errors having a disadvantage for operation)
- 300 to 3FF: Cold-start level (which requires re-power-on or reconnection)

The following table shows the list and countermeasures.

Code	Message	Contents, occurring cases, and countermeasures
112	Input data error	An inadequate value was entered in the parameter setting. Retype a proper value with reference to the actuator specification and the parameter list.
113	Data too small	The input value is smaller than the setting range. Retype a proper value with reference to the actuator specification and the parameter list.
114	Data too large	The input value is bigger than the setting range. Retype a proper value with reference to the actuator specification and the parameter list.

Code	Message	Contents, occurring cases, and countermeasures
115	Not yet Homed	The operation of acquiring the current position was performed under the uncompleted home return in the teaching (display) mode. In first, execute the home return.
117	No position data	The target position is not set to the selected position number. In first, enter a target position.
11E	Unmatched pairedata	Inadequate values were entered in the magnitude relation of the data in a pair. Example: The case in which soft limit+ and limit- are the same on the parameter. Retype a proper value
11F	Value too small	The minimum settable travel to the target position depends on the lead length of the driving system and the resolution of the encoder. If the input target position is smaller than this minimum travel, this message is displayed. Example: If the lead length is 20 mm for the actuators of RCP2 series, since the resolution of the encoder is 800 pulses, the minimum travel is 0.025 mm/pulse (= 20 ÷ 800). In this case, if 0.02 mm is entered in the target position, this alarm occurs.
121	Search value error	The final arrival position exceeds the soft limit due to the push-motion operation. Set a value within the soft limits.
122	Duplicate link	An axis number was allocated despite that more than one axis were connected. Always allocate the axis number only when one axis is connected.
123	Password error	The input value of the system password, position editing password, or position data edit password does not match the setting value. Retype the correct password.
132	Detect Undefined Controller	An unsupported controller was recognized. Example: When ACON-CA compatible since Ver. 2.10 is connected in the environment of Ver. 2.00, the teaching pendant must be upgraded. Consult us about the version upgrade.
133	Prohibit changing Axis No.	The axis number was changed by the teaching pendant connected to the controller by which the axis number is set with the rotary switch on the front panel. The teaching pendant cannot change the axis number. Change the number by the rotary switch on the front panel.

Code	Message	Contents, occurring cases, and countermeasures
134	Controller Unsupport Function	The function number to which the controller does not correspond in the user adjustment mode was allocated. Example: If the adjustment number 6 "Load cell calibration execution" is performed to the model which does not support the load cell function.
160	SDcard open error	File cannot open. Example: Backup was performed without SD card inserted.
161	SDcard write error	SD card cannot be written. Example: Backup was performed under the following conditions. <ul style="list-style-type: none"> · Free space of the SD card is insufficient. · SD card write-protect switch is engaged. · File is set to the write prohibit property in overwriting. · An unsupported SD card is inserted.
162	SDcard read error	SD card cannot be read. Example: If a SD card is not inserted or files cannot be read, at the time of restoring.
164	SDcard file format error	File format is not matched. Example: If the content of the file which will be restored are different from the file format defined by data types.
180	Axis No. Change Complete	Messages to confirm the operation (It is not to say any operation mistake or abnormal occurrence)
181	Controller init Complete	
182	Home changed, All clear	
183	IO-function changed	
184	Data transfer completed	
185	LoadCell calibration completed	
186	Time setting completed	
187	Brownout of RTC backup battery	Voltage of the battery inside the teaching pendant is reduced. <i>(Note)</i> <i>Settings for time, languages, and touch operation sound are initialized.</i> <i>The message is displayed only in Japanese (the default language).</i> <i>Consult us about replacing the battery.</i>
188	Input warning of below Min. Vel	The speed, which is less than the "minimum speed" that depends on the lead and encoder pulses, was entered in the "speed" of position data. The message is displayed, but entering data is possible. Retype a proper value after the confirmation of the specification, because the movement in less than the minimum speed may cause abnormal noise and vibration.

Code	Message	Contents, occurring cases, and countermeasures
189	Input warning of over ratings ACC/DCL	An acceleration/deceleration speed, which exceeds the "rated acceleration/deceleration speed" of the actuator connected, was entered in the "acceleration/deceleration speed" of the position data. The message is displayed, but entering data is possible. Retype a proper value after the confirmation of the specification, because the movement in the excess high acceleration/deceleration speed may lead to actuator failures.
203	MotorPower sag	For the controller of the "external cutout relay type," the motor driving power is not supplied from MPI terminals adequately. <i>(Note)</i> <i>Despite that the proper voltage is applied to MPI terminals, if this error occurs, the controller may be broken down.</i>
204	ABS-Battery Power sag	ABS battery brownout at power-on was detected. Replace the ABS battery.
20A	Servo OFF while moving	1) Movement operation was performed with the servo OFF. 2) Since the servo ON signal (SON) from PLC was turned OFF during the movement operation, the servo was turned OFF and the movement operation became impossible. Turn the servo ON before the operation.
20C	Start ON while moving	The start signal (CSTR) from PLC was turned ON during the movement operation, so the movement command was duplicated. Check the output of the start signal (CSTR) from PLC.
20D	STP OFF while moving	The pause signal (*STP) from PLC was turned OFF during the movement operation, so the operation became impossible. Check the output of the pause signal (*STP) from PLC.
20E	Over soft-limit	It reached the soft limits. Check the settings of the soft limits, and use within the settings.
210	HOME ON while moving	The home return signal (HOME) from PLC was turned ON during the movement operation. Check the output of the home return signal (HOME) from PLC.
211	JOG ON while moving	The jogging movement signal (JOG) from PLC was turned ON during the movement operation. Check the output of the jogging movement signal (JOG) from PLC.
220	Write prohibit(AUTO)	The position data or parameter was written during the AUTO mode. Write them after changing to the teaching mode.

Code	Message	Contents, occurring cases, and countermeasures
221	Write prohibit(MON)	The position data or parameter was written during the monitor mode. Write them after changing to the teaching mode.
222	Move prohibit(AUTO)	The actuator movement was operated during the AUTO mode. Operate the movement after changing to the teaching mode.
223	Move prohibit(MON)	The actuator movement was operated during the monitor mode. Operate the movement after changing to the teaching mode.
301	Overrun error	Abnormality occurred on the serial communication with the controller 1) The controller connection cable may be open. Check the connection cable for wrong wiring or wire breakage. 2) The controller connection cable connector may be inserted improperly. Securely insert the connection cable connector. 3) Garbled data could occur due to the influence of noise. Review the wiring run, installation, etc. so that the noise does not influence them. 4) In the control of multiple units with the serial communication, the slave station number could be duplicated. Change the number so that the slave station number is not duplicated.
302	Framing error	
303	Parity error	
304	SCI Recieve-Que overflow	
305	SCI Send-Que overflow	
306	Recieve-Buffer overflow	
308	Response time out	
30A	Packet Recieve-Que overflow	
30B	Packet Send-Que overflow	
30C	Not connected	The axis number of the controller cannot be recognized. 1) The controller may not be functioning properly. Check that the RDY lamp of the controller is lighted. If the lamp is not lighted, the controller is broken down. 2) The communication lines (SGA/SGB) of the provided cable could break. If you have a spare teaching pendant, replace it, connect it with the PC, and try whether to recover. 3) If a SIO converter is used, the link cable could not be connected, though the power, 24 V, is supplied to the converter. Supply the power after connecting the link cable between the converter and the controller. 4) The same number could be mistakenly set by the ADRS switches under the condition that multiple controllers are connected. Do not duplicate the settings of the ADRS switches. If still having trouble, consult us.

Code	Message	Contents, occurring cases, and countermeasures
30D	Recieve exept responce	The abnormal response was returned from the controller. (This may be a temporary abnormality caused by noise, etc.) If the condition occurs frequently, check the cables, noise elimination measures taken on the power supply, etc.
320	Both CON and SEP are detected	CON-related and SEP-related controllers are on the same communication line. Example: Axis number 0: PCON-CA, axis number 1: if PSEP is linked

9. Appendix

9.1 Touch panel LCD life

The life of the touch panel is 20,000 hours (at atmospheric temperature 25°C).

9.2 Battery life

Battery connector BAT1, working battery CR2032

The maker's nominal life of the CR2032 button battery is approx. 5 years (at atmospheric temperature 25°C).

The battery cannot be replaced by the customer.
Always contact IAI when replacement is necessary.

9.3 Option parts

■ IAI products

- Touch pen (* Replacement if pen enclosed with product is lost or damaged.)
- Strap (STR-1)

10. Warranty

10.1 Warranty Period

One of the following periods, whichever is shorter:

- 18 months after shipment from our company
- 12 months after delivery to the specified location

10.2 Scope of Warranty

Our products are covered by warranty when all of the following conditions are met. Faulty products covered by warranty will be replaced or repaired free of charge:

- (1) The breakdown or problem in question pertains to our product as delivered by us or our authorized dealer.
- (2) The breakdown or problem in question occurred during the warranty period.
- (3) The breakdown or problem in question occurred while the product was in use for an appropriate purpose under the conditions and environment of use specified in the Instruction Manual and catalog.
- (4) The breakdown or problem in question was caused by a specification defect or problem, or by a quality issue with our product.

Note that breakdowns due to any of the following reasons are excluded from the scope of warranty:

- [1] Anything other than our product
- [2] Modification or repair performed by a party other than us (unless we have approved such modification or repair)
- [3] Anything that could not be easily predicted with the level of science and technology available at the time of shipment from our company
- [4] A natural disaster, man-made disaster, incident or accident for which we are not liable
- [5] Natural fading of paint or other symptoms of aging
- [6] Wear, depletion or other expected result of use
- [7] operation noise, vibration or other subjective sensation not affecting function or maintenance

Note that the warranty only covers our product as delivered and that any secondary loss arising from a breakdown of our product is excluded from the scope of warranty.

10.3 Honoring the Warranty

As a rule, the product must be brought to us for repair under warranty.

10.4 Limited Liability

- (1) We shall assume no liability for any special damage, consequential loss or passive loss such as a loss of expected profit arising from or in connection with our product.
- (2) We shall not be liable for any program or control method created by the customer to operate our product or for the result of such program or control method.

10.5 Conditions of Conformance with Applicable Standards/Regulations, Etc., and Applications

- (1) If our product is combined with another product or any system, device, etc., used by the customer, the customer must first check the applicable standards, regulations and/or rules. The customer is also responsible for confirming that such combination with our product conforms to the applicable standards, etc. In such a case we will not be liable for the conformance of our product with the applicable standards, etc.
- (2) Our product is for general industrial use. It is not intended or designed for the applications specified below, which require a high level of safety. Accordingly, as a rule our product cannot be used in these applications. Contact us if you must use our product for any of these applications:
 - [1] Medical equipment pertaining to maintenance or management of human life or health
 - [2] A mechanism or mechanical equipment intended to move or transport people (such as a vehicle, railway facility or aviation facility)
 - [3] Important safety parts of mechanical equipment (such as safety devices)
 - [4] Equipment used to handle cultural assets, art or other irreplaceable items
- (3) Contact us at the earliest opportunity if our product is to be used in any condition or environment that differs from what is specified in the catalog or Instruction Manual.

10.6 Other Items Excluded from Warranty

The price of the product delivered to you does not include expenses associated with programming, the dispatch of engineers, etc. Accordingly, a separate fee will be charged in the following cases even during the warranty period:

- [1] Guidance for installation/adjustment and witnessing of test operation
- [2] Maintenance and inspection
- [3] Technical guidance and education on operating/wiring methods, etc.
- [4] Technical guidance and education on programming and other items related to programs

11. Change History

Revision Date	Description of Revision
October 2013	First Edition
February 2014	First Edition (Version B) Supported models ACON-CA and DCON-CA supported with V2.10 Page 88 Operations for load cell calibration added to User adjustments
May 2014	Second Edition Support model Models compatible with V2.20 added Page 9: Cables added to accessories Page 19: Precautions for ejecting SD memory card added Page 21: Description on connection with controller revised Pages 38 to 40: Description on Maintenance screen revised Pages 42 to 72: Smart tuning related screens revised Page 46: Note regarding positioning width during pressing operation revised Page 92: Information screen revised Pages 183, 232, 234: Menu screen revised Page 243: Descriptions in alarm cause and remedy fields added
December 2014	Third Edition Chinese available Supported models: models compatible with Ver. 2.30 added The description concerning the password setting and password entry operation reviewed 5.6 and 6.7: the description about the monitor reviewed 5.17, 6.14 and 7.14: the data entry alarm added 6.9 and 7.12: the alarm list screen of the controller with a calendar function added 6.12 : 16-kind parameters added 6.14: the time setting of the controller with a calendar function added 8.1: the description concerning the alarm occurrence reviewed and the message list added Back cover: the address and telephone number of the office in Chicago changed
September 2022	Fourth Edition Models applicable in V2.40 to V3.00 added to supported models Not applicable to Chinese after V3.00



IAI Corporation

Head Office: 577-1 Obane Shimizu-KU Shizuoka City Shizuoka 424-0103, Japan
TEL +81-54-364-5105 FAX +81-54-364-2589
website: www.iai-robot.co.jp/

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505
TEL (310) 891-6015 FAX (310) 891-0815
Chicago Office: 110 East State Parkway, Schaumburg, IL 60173
TEL (847) 908-1400 FAX (847) 908-1399
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066
TEL (678) 354-9470 FAX (678) 354-9471
website: www.intelligentactuator.com

Technical Support available in Europe

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany
TEL 06196-88950 FAX 06196-889524
website: www.iai-automation.com

Technical Support available in Great Britain



Duttons Way, Shadsworth Business Park, Blackburn, Lancashire, BB1 2QR, United Kingdom
TEL 01254-685900
website: www.lcautomation.com

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China
TEL 021-6448-4753 FAX 021-6448-3992
website: www.iai-robot.com

IAI Robot (Thailand) Co., Ltd.

825 PhairojKijja Tower 7th Floor, Debaratana RD., Bangna-Nuea, Bangna, Bangkok 10260, Thailand
TEL +66-2-361-4458 FAX +66-2-361-4456
website: www.iai-robot.co.th