

Touch Panel Teaching TB-02

**Applicable for Position Controller,
ELECYLINDER**

Instruction Manual Thirteenth Edition



Confirming the Specifications	Chapter 1
Connection	Chapter 2
Operation of CON Related Controllers	Chapter 3
Operation of SEP Related Controllers	Chapter 4
Operation of MEC Related Controllers	Chapter 5
Operation of ELECYLINDER and ROBO PUMP	Chapter 6
Gateway Parameter Setting Tool	Chapter 7
Operation of Actuator Drive Power Supply Unit	Chapter 8
Error Display	Chapter 9
Appendix	Chapter 10
Warranty	Chapter 11



ME0356

This instruction manual describes the contents for position (CON/SEP/MEC system) controllers and ELECYLINDER / ROBO PUMP.

For how to use the position (SEL system) controllers, refer to the following instruction manual.

"Touch Panel Teaching TB-02 Program Controller Instruction Manual"

For details of applicable controllers, refer in the section for the supported models.

IAI Corporation

Please Read Before Use

Thank you for purchasing our product.

This instruction manual explains the handling methods, structure and maintenance of this product, providing the information you need in order to use the product safely.

Before using the product, be sure to read this manual and fully understand the contents explained herein to ensure safe use of the product.

Please download the user's manual from our website.

You can download it free of charge. User registration is required for the first time downloading.

URL : www.iai-robot.co.jp/data_dl/CAD_MANUAL/

When using the product, print out of the necessary portions of the relevant manual, or please display it on your computer, tablet terminal, etc. so that you can check it immediately.

After reading the instruction manual, keep it in a convenient place so that whoever is handling the product can refer to it quickly when necessary.

[Important]

- This instruction manual is an original document dedicated for this product.
- This product cannot be used in ways not shown in this instruction manual. IAI shall not be liable for any result whatsoever arising from the use of the product in any other way than what is noted in the manual.
- The information contained in this instruction manual is subject to change without notice for the purpose of product improvement.
- If any issues arise regarding the information contained in this instruction manual, contact our customer center or the nearest sales office.
- Use or reproduction of this instruction manual in full or in part without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the text are registered trademarks.

Supported Models

This Instruction Manual is for the position controller and ELECYLINDER / ROBO PUMP.

For details on handling the program controller (ASEL, PSEL, SSEL, XSEL, MSEL, TT/TTA and RSEL), refer to the separate [Touch Panel Teaching TB-02 Applicable for Program Controller Instruction Manual].

1. Supported Model List

Refer to [2. List of Gateway Parameter Setting Tool Supported Models] for the supported models to the gateway parameter setting tool.

Controller model	Supported from version	Controller model	Supported from version
ERC2 (Note 1)	V1.00	ASEP	V1.00
ERC3	V1.00	DSEP	V1.00
ACON	V1.00	PSEP	V1.00
DCON	V1.00	MSEP	V1.00
PCON (Note 5)	V1.00	AMEC	V1.00
SCON (Note 3)	V1.00	PMEC	V1.00
SCON2	V4.10	RACON	V1.00
MCON (Note 2)	V1.00	RPCON	V1.00
MSCON	V1.00	RCON (Note 4)	V2.10
RCP6S	V1.00	REC	V2.70
RCM-P6□C	V1.50	ADTB-PEC	V4.40
ELECYLINDER	Refer to Next Page	ROBO PUMP	V4.70

Note1: Only ERC2 models with 4904 or higher stamped on the Serial No. sticker can be connected.

Information on sticker

I/O type	Not supported	Supported
NP	NP U5 M	NP T1 4904, 4905, 6302
PN	PN U3 M	PN T1 4904, 4905, 6302

Note that touch panel teaching pendants can be connected to ERC2 controllers of SE type via a SIO converter regardless of their version.

Note2: SSCNET III/H and MECHATROLINK-III of MCON-C/CG are applicable in V1.20 and later and EtherCAT Motion in V3.00 and later.

Note3: SCON-CB-F/CGB-F/LC-F/LCB-F (Servo Press dedicated controller) applicable for S in V1.40 and later.

EtherCAT Motion of SCON-CB/CGB is applicable in V3.00 and later.

Note4: SSCNET III/H, MECHATROLINK-III and EtherCAT Motion of RCON are applicable in V3.10 and later.

Note5: PCON-CBP/CGBP is applicable in V3.50 and later.

In the table below shows the models that support ELECYLINDER.

ELECYLINDER Type	Supported from version
EC-S6□, EC-S7□, EC-R6□, EC-R7□, EC-S6□CR, EC-S7□CR, EC-S6□H, EC-S7□H, EC-RR6□, EC-RR7□, EC-R6□W, EC-R7□W, EC-RP4□, EC-GS4□, EC-GD4□, EC-TC4□, EC-TW4□, EC-RR6□H, EC-RR7□H, EC-S6□AH, EC-S7□AH, EC-RR6□AH, EC-RR7□AH, EC-S3□, EC-S4□, EC-S6□R, EC-S7□R, EC-S6□AHR, EC-S7□AHR, EC-RR3□, EC-RR4□, EC-RR6□R, EC-RR7□R, EC-RR6□AHR, EC-RR7□AHR, EC-S3□CR, EC-S4□CR, EC-RR6□W, EC-RR7□W, EC-B6S, EC-B7S, EC-S3□R, EC-S4□R, EC-RR3□R, EC-RR4□R, EC-RTC9M, EC-RTC12M, EC-ST15L, EC-ST15ME, EC-S13□, EC-S13X□, EC-S15□, EC-S15X□	V3.40
EC-RR6X□AH, EC-RR7X□AH, EC-WS10□, EC-WS12□, EC-S6□AHCR, EC-S7□AHCR, EC-GD5□, EC-RP5□, EC-TC5□, EC-TW5□, EC-GRB8M, EC-GRB10M, EC-GRB13M, EC-GRB13L, EC-S10□, EC-S10X□	V3.50
EC-S3□A, EC-S4□A, EC-S6□A, EC-S7□A, EC-S6X□AH, EC-S7X□AH, EC-WS10□R, EC-WS12□R, EC-WS10□CR, EC-WS12□CR, EC-ST11□, EC-SRG11□, EC-SRG15□, EC-SL3□, EC-GDS3□, EC-GDB3□, EC-T3□	V3.70
EC-S6□D, EC-S7□D, EC-S6□W, EC-S7□W, EC-RTC18M	V3.80
EC-S18□, EC-S18X□	V3.90
EC-S3□AR, EC-S4□AR, EC-S6□AR, EC-S7□AR, EC-S3□ACR, EC-S4□ACR, EC-S6□ACR, EC-S7□ACR, EC-S6X□AHR, EC-S7X□AHR, EC-S6X□AHCR, EC-S7X□AHCR	V4.00
EC-B8S, EC-B8SS	V4.10
EC-RR8□, EC-RR10□, EC-RR8□R, EC-RR10□R, EC-S8□, EC-S8□A, EC-S8X□A, EC-S8□R, EC-S8□AR, EC-S8X□AR, EC-S8□CR, EC-S8□ACR, EC-S8X□ACR	V4.11
EC-GRC6M, EC-GRC7□, EC-GRST3□, EC-GRST6□, EC-GRST7□ EC-GRBP8M, EC-GRBP10M, EC-GRBP13□ EC-GRBP8MW, EC-GRBP10MW, EC-GRBP13□W	V4.20
EC-GRTR14□, EC-WER1, EC-WEGR2	V5.00

The table above shows the versions available for operation in any way of connection.
Make sure to use a version started to support or later. (There should be some features not available to use in versions before supporting)

* The versions of the digital speed controller equipped type (EC-D ~) should be the same as those for the non equipped type.

2. List of Gateway Parameter Setting Tool Supported Models

Controller model	Supported from version
MSEP-C	V1.00
MCON-C/CG <small>(Note 6)</small>	V1.00
RCP6S Gateway	V1.00
RCON <small>(Note 7)</small>	V2.10
REC	V2.70

Note6: SSCNETIII/H, MECHATROLINK-III and EtherCAT Motion of MCON-C/CG are not applicable.

Note7: SSCNET III/H, MECHATROLINK-III and EtherCAT Motion of RCON-GW/GWG are applicable in V3.10 and later.

Note: PLC features equipped types (MSEP-LC, MCON-LC/LCG and RCON-LC/LCG) are not applicable.

3. Version Upgrade

How to version upgrade, refer to [10.2 Teaching Update].

Table of Contents

Safety Guide	Intro-1
Handling Precautions	Intro-8
International Standards Compliances	Intro-9
1. Confirming the Specifications	1-1
1.1 Product Check	1-1
1.1.1 Component (excluding options)	1-1
1.1.2 Instruction Manual Related to This Product	1-2
1.1.3 How to Read Model Nameplate	1-3
1.1.4 How to Read Model Number	1-3
1.2 Specification	1-5
1.2.1 Basic Specification	1-5
1.2.2 Environmental Specifications	1-6
1.3 Explanation of Each Part	1-7
1.3.1 Front (Standard Type, Dead Man's Switch Type)	1-7
1.3.2 Back (Standard Type)	1-8
1.3.3 Back (Dead Man's Switch Type)	1-8
1.4 How to Set in/out Secure Digital Memory Card	1-10
1.4.1 How to Take off Secure Digital Memory Card Slot Cover	1-10
1.4.2 How to Insert Secure Digital Memory Card	1-10
1.4.3 How to Take out Secure Digital Memory Card	1-11
1.5 External Dimensions	1-12
1.6 Life of Touch Panel LCD	1-13
1.7 Built-in Battery (Life of Battery and Replacement of Battery)	1-13
1.8 Optional Items	1-13
1.8.1 How to Attach Grip Belt	1-14
1.8.1.1 For GRP-2	1-14
1.8.1.2 For GRP-1	1-14
1.9 Actuator Driving Power Supply Unit for Teaching Pendant	1-15
1.9.1 Feature	1-15
1.9.2 How to Read Model Number	1-16
1.9.3 Basic Specification	1-17
1.9.4 External Dimensions	1-18
1.9.5 Explanation of Each Part	1-19
1.9.6 Feature of Each Part and Pin Assignment on Connector	1-20
1.9.7 Joining Unit	1-25
1.9.8 Accessories for ADTB-PEC	1-28
1.9.8.1 Accessories for Cable Tie Fixation	1-28
1.9.8.2 Accessories for Electrostatic Discharge	1-29
2. Connection	2-1
2.1 Connecting with the Controller	2-1
2.2 ELECYLINDER / Position Controller Connection Cable	2-2
2.3 Safety Category Compliance	2-3
2.4 Connection of Actuator Drive Power Supply Unit	2-4
2.4.1 Connecting with ELECYLINDER	2-4
2.4.2 Connecting with ROBOCYLINDER	2-4
2.5 Actuator Drive Power Supply Unit Connection Cable	2-6
2.5.1 EC Power Supply Connection Cable : CB-ADTB-PW□□□-RB	2-6
2.5.2 RCP Connection Cable: CB-ADPC-MPA□□□	2-6
2.5.3 RCP Connection Conversion Cable : CB-CAN-AJ002	2-6
2.5.4 RCP Connection High-Thrust Conversion Cable : CB-ADTBF-AJ002	2-6
2.5.5 List of Cables for RCP Connection of Actuator Drive Power Supply Unit	2-7
2.6 Actuator Drive Power Supply Unit Power Supply Cable	2-8
2.6.1 100V AC Power Supply Cable (Model: KWD-UJ-2MBS)	2-8

2.6.2	200V AC Power Supply Cable (Model: CB-APMEC-PW020-TM)	2-8
3.	Operation of CON Related Controllers	3-1
3.1	Displayed Language Change	3-1
3.2	Operating Menu	3-3
3.3	Initial Screen	3-5
3.4	Changing Operating Axis	3-6
3.5	Menu Selection	3-7
3.6	Position Edit Guide	3-10
3.7	I/O Control Guide	3-12
3.8	Easy Program Setting	3-15
3.9	Monitor	3-17
3.9.1	Monitor Screen	3-18
3.9.1.1	Monitor Main Screen	3-18
3.9.1.2	I/O Monitor Screen	3-20
3.9.1.3	Data Monitor Screen	3-21
3.9.1.4	Glossary Screen for Input and Output Signals	3-22
3.9.1.5	Network Data Monitor Screen	3-22
3.9.1.6	Functional Safety Unit Monitoring Screen	3-34
3.9.2	Maintenance Information Screen	3-35
3.9.2.1	Operating Method When Replacing the Actuator (When Replacing the Actuator)	3-38
3.9.2.2	Operating Method to Clear Pairing ID (When Replacing Motor Unit)	3-39
3.9.2.3	Operating Method When Replacing the FAN	3-40
3.9.2.4	Operating Method of Updating Maintenance Information Related to Lubrication	3-41
3.9.2.5	Operation When Changing Setting of Brake Equipment	3-42
3.9.3	Time Setting Screen for Controller	3-43
3.10	Position Editing	3-44
3.10.1	Position Data	3-45
3.10.2	Additional Setting Items for Controllers Applicable for Position Data Comment Input	3-52
3.10.3	Entering New Data	3-54
3.10.4	Changing Position Data	3-58
3.11	Parameter Editing	3-59
3.12	Test Run	3-61
3.12.1	Jog/Inching Operation	3-63
3.12.2	Position Movement Operation	3-64
3.12.3	Direct Movement Operation	3-66
3.12.4	I/O test	3-67
3.13	TP Operation Mode	3-68
3.14	Alarm List	3-69
3.15	Controller Reset	3-70
3.16	Other Settings	3-71
3.16.1	Parameter Initialization	3-71
3.16.2	Axis Number Change	3-72
3.16.3	Load Cell Calibration	3-72
3.16.4	Load Cell Inactivation	3-73
3.16.5	I/O Customizing	3-73
3.16.6	Encoder Cable Length Setting	3-76
3.16.7	Switching Drive Mode	3-77
3.17	Information Display	3-78
3.17.1	Display Screen for Each Type of Data	3-78
3.17.1.1	Software version information	3-78
3.17.1.2	Network information	3-78
3.17.1.3	Production information	3-79
3.17.1.4	Maintenance information	3-79
3.17.1.5	Connectable model	3-80
3.17.1.6	Inquiry	3-80

3.17.2	Axis Name Edit	3-81
3.18	Environment Setting	3-83
3.19	Data Backup	3-96
3.19.1	Data Backup of the Controller	3-97
3.19.2	Restore to Controller	3-99
3.20	Smart Tuning Function	3-101
3.20.1	Setting Operation for Max. Acceleration/Deceleration for Indicated Transported Load and Velocity	3-102
3.20.2	Operation to Automatically Set Velocity and Acceleration Speed from Moving Distance	3-104
3.21	Maintenance Parts List	3-107
3.21.1	Check Cable Model Number, Controller Parts	3-107
3.21.2	Schematic Display and Parts List Display	3-109
3.22	Easy Programming	3-110
3.23	Pulse Train Mode Setting	3-114
3.23.1	[Configuration Setting]	3-115
3.23.2	[Electric Gear Setting]	3-116
3.23.3	[Feedback Pulse Configuration Setting]	3-116
3.23.4	[Feedback Pulse Electric Gear Setting]	3-117
3.24	Offboard Tuning	3-118
3.24.1	For Controllers Applicable for Gain Calculation (such as servomotor type controllers)	3-119
3.24.2	For Controllers Not Applicable for Gain Calculation (such as pulse motor type controllers)	3-122
3.25	Servo Monitor	3-124
3.25.1	Servo Monitor (Waveform Display) Screen	3-126
3.25.1.1	Channel Settings	3-126
3.25.1.2	Display Setting Buttons	3-127
3.25.1.3	Monitor Operation Buttons	3-127
3.25.1.4	Other Displays	3-127
3.25.2	Sampling Frequency Setting	3-128
3.25.3	Trigger Setting	3-129
3.25.3.1	Setting Items in Trigger Setting	3-129
3.25.3.2	When Conducting Trigger Setting with Input and Output Signals	3-130
3.25.3.3	When Having Trigger Setting with Timer	3-131
3.25.3.4	Start Trigger Standby Status	3-131
3.25.4	Operation to Save Data	3-132
3.25.4.1	How to Save Waveform Data	3-132
3.25.4.2	To Obtain Screenshot	3-133
3.26	Press Program	3-134
3.26.1	Press Program Monitor	3-135
3.26.1.1	Press Program Monitor Screen	3-135
3.26.1.2	Data Monitor Screen	3-137
3.26.1.3	Input Signals Glossary	3-139
3.26.1.4	Output Signals Glossary	3-139
3.26.2	Press Program Edit	3-140
3.26.2.1	Press Program Select Screen	3-140
3.26.2.2	Press Program Edit Screen	3-141
3.26.2.3	Press Program Copy	3-153
3.26.2.4	Erasing Pressing Programs	3-154
3.26.3	Press Program Test Run	3-155
3.26.3.1	Jog Inching Screen	3-155
3.26.3.2	Press Program Operation Screen	3-158
3.26.3.3	Press Program Operation (Graph) Screen	3-160
3.26.3.4	Direct Move Screen	3-162
3.26.4	Secure Digital Memory Card	3-164
3.26.4.1	Press Program Save	3-165
3.26.4.2	Press Program Transfer	3-167

3.27	Drive Recorder Feature	3-171
3.27.1	Graph Display (Drive Recorder Screen)	3-171
3.27.1.1	Setting Display Items	3-172
3.27.1.2	Setting Display Items	3-172
3.27.1.3	Display Setting Buttons	3-173
3.27.1.4	Monitor Operation Buttons	3-173
3.27.1.5	Data Save	3-173
3.27.2	Data Display Feature at Alarm Generation (Data at Occurrence)	3-175
4.	Operation of SEP Related Controllers	4-1
4.1	Transition of Operating States	4-1
4.2	Operating Menu	4-2
4.3	Initial Screen	4-4
4.4	Initial Setting	4-5
4.5	Changing Operating Axis	4-6
4.6	Menu Selection	4-7
4.7	Monitor	4-8
4.8	Information	4-10
4.9	Alarm List	4-12
4.10	Position Setting (Setting of Position-related Data, Jog/Inching Operation)	4-14
4.11	I/O Setting (Setting of Operation Parameters, Etc.)	4-38
4.12	Parameters (Parameter Editing, Axis Number Setting, Parameter Initialization to Factory Default Settings, System Password)	4-49
4.13	Test (I/O Tests, Operation Tests for Axis Movement)	4-59
4.14	Environment Setting	4-63
4.15	Data Backup	4-71
4.15.1	Data Backup of the Controller	4-72
4.15.2	Restore to Controller	4-74
5.	Operation of MEC Related Controllers	5-1
5.1	Transition of Operating States	5-1
5.2	Operating Menu	5-2
5.3	Initial Screen	5-4
5.4	Initial Setting	5-5
5.5	Operation Axis Change	5-6
5.6	MEC Menu Selection	5-7
5.7	Initial Setting	5-8
5.8	Position Setting (Position Data Setting and Manual Axis operation (Jogging, Inching))	5-13
5.9	Trial Operation	5-33
5.10	Information	5-35
5.11	Maintenance – Parameters	5-37
5.12	Maintenance – I/O Tests	5-45
5.13	Maintenance – Alarm List	5-46
5.14	Maintenance, Data Backup	5-48
5.14.1	Data Backup of the Controller	5-49
5.14.2	Restore to Controller	5-51
5.15	Maintenance – Environment Setting	5-53
5.16	Monitor	5-60
6.	Operation of ELECYLINDER and ROBO PUMP	6-1
6.1	Displayed Language Change	6-1
6.2	Operating Menu	6-3
6.3	Initial Screen	6-5
6.4	Change Operating Axis	6-6
6.5	Menu Selection	6-7
6.6	Monitor	6-9
6.6.1	Monitor Screen (ELECYLINDER)	6-10

6.6.2	Monitor Screen (ROBO PUMP)	6-11
6.6.3	Maintenance Information Screen	6-12
6.6.3.1	Maintenance Information Screen (ELECYLINDER)	6-12
6.6.3.2	Maintenance Information Screen (ROBO PUMP)	6-15
6.7	Simple Data Setting (ELECYLINDER)	6-17
6.7.1	Positioning Operation	6-19
6.7.2	Pressing Operation	6-26
6.7.3	Manual Mode	6-32
6.7.4	Mounting Orientation Setting / Payload Setting	6-36
6.7.5	Auto servo OFF	6-38
6.8	ROBO PUMP Setting	6-40
6.8.1	Operation Status	6-41
6.8.2	I/O Signal	6-41
6.8.3	Pressure setting	6-42
6.8.4	Alarm	6-43
6.8.5	Manual Mode	6-43
6.8.6	Release Warning Confirmation Window	6-44
6.8.7	Deleting Data in Edit Confirmation Window	6-44
6.8.8	ROBO PUMP Advanced Settings screen	6-45
6.8.8.1	ROBO PUMP Advanced Settings 1 screen (Energy-saving mode)	6-45
6.8.8.2	ROBO PUMP Advanced Settings 2 screen (Level setting)	6-46
6.9	Parameter Edit	6-48
6.10	Test Run	6-50
6.10.1	Jog Inching Operation	6-51
6.10.2	Position Movement Operation	6-52
6.10.3	Direct Movement Operation	6-54
6.10.4	I/O Test	6-55
6.11	TP Operation Mode	6-56
6.12	Alarm List	6-57
6.13	Controller Reset	6-58
6.13.1	ELECYLINDER Reset	6-58
6.13.2	ROBO PUMP Reset	6-59
6.14	Other Setting	6-60
6.14.1	Parameter Initialization	6-60
6.14.2	Axis Number Change	6-61
6.14.3	Operating Noise Adjustment (Applicable models only)	6-62
6.15	Information Display	6-63
6.15.1	Display Screen for Each Type of Data	6-63
6.15.1.1	Software version information	6-63
6.15.1.2	Production information	6-64
6.15.1.3	Maintenance information	6-64
6.15.1.4	Connectable model	6-64
6.15.1.5	Inquiry	6-64
6.15.2	Axis Name Edit	6-65
6.16	Environment Setting	6-67
6.17	Data Backup	6-77
6.17.1	Data Backup of the Controller	6-78
6.17.2	Restore to Controller	6-80
6.18	Maintenance Parts List	6-82
6.19	Easy Programming	6-83
7.	Gateway Parameter Setting Tool	7-1
7.1	Starting up Gateway Parameter Setting Tool	7-1
7.2	Gateway Menu Select	7-3
7.3	Network Setting	7-4
7.3.1	Network Setting	7-4
7.3.2	Special Parameter Setting	7-8
7.4	Monitor Menu	7-12
7.4.1	Data Monitor	7-12

7.4.2	Diagnosis Information	7-13
7.4.3	Alarm List	7-14
7.5	Secure Digital Memory Card	7-15
7.5.1	Save from Gateway to Secure Digital Memory Card	7-15
7.5.2	Transfer from Secure Digital Memory Card to Gateway	7-16
7.6	Clock Setting	7-18
8.	Operation of Actuator Drive Power Supply Unit	8-1
8.1	Guideline	8-1
8.1.1	Applicable Actuators	8-1
8.1.2	Operation	8-2
8.1.3	Initial Screen	8-2
8.1.4	Specifications, Dimensions, Name of Each Part, etc.	8-3
8.1.5	Connection	8-3
8.2	Low Velocity Jog Mode	8-4
8.2.1	Low-speed jog mode screen	8-4
8.2.2	ADTB Connection Cable List Screen	8-5
8.2.3	Transfer to Coordinate Confirmation Operation Mode	8-6
8.3	Coordinate Confirmation Operation Mode	8-8
8.3.1	Coordinate Confirmation Operation Mode screen	8-8
8.3.2	ADTB Data Backup	8-9
8.3.2.1	ADTB Data Backup	8-10
8.3.2.2	Restore to ADTB	8-12
8.3.3	Transfer to Low Velocity Jog Mode	8-14
9.	Error Display	9-1
9.1	Occurrence of Alarm	9-1
9.1.1	Alarms Detected by Controller	9-1
9.1.2	Messages which Occur when Operating the Touch Panel Teaching Pendant	9-1
10.	Appendix	10-1
10.1	Screenshot	10-1
10.2	Teaching Update	10-2
10.2.1	How to Update when ELECYLINDER and ROBO PUMP Connected	10-3
10.2.2	How to Update when CON System Controller Connected	10-5
10.2.3	How to Update when SEP System Controller Connected	10-7
10.2.4	How to Update when MEC System Controller Connected	10-8
10.2.5	How to Update when Alarm Code 30C Displayed	10-9
10.2.6	How to and Compulsorily Update (in Common for All Models)	10-11
11.	Warranty	11-1
11.1	Warranty Period	11-1
11.2	Scope of Warranty	11-1
11.3	Honoring the Warranty	11-1
11.4	Limited Liability	11-1
11.5	Conditions of Conformance with Applicable Standards/Regulations, Etc., and Applications	11-2
11.6	Other Items Excluded from Warranty	11-2
	Change History	Post-1

Safety Guide

“Safety Guide” has been written to use the machine safely and so prevent personal injury or property damage beforehand. Make sure to read it before the operation of this product.

Safety Precautions for Our Products

The common safety precautions for the use of any of our robots in each operation.

No.	Operation Description	Description
1	Model Selection	<ul style="list-style-type: none"> This product has not been planned and designed for the application where high level of safety is required, so the guarantee of the protection of human life is impossible. Accordingly, do not use it in any of the following applications. <ol style="list-style-type: none"> Medical equipment used to maintain, control or otherwise affect human life or physical health. Mechanisms and machinery designed for the purpose of moving or transporting people (For vehicle, railway facility or air navigation facility) Important safety parts of machinery (Safety device, etc.) Do not use the product outside the specifications. Failure to do so may considerably shorten the life of the product. Do not use it in any of the following environments. <ol style="list-style-type: none"> Location where there is any inflammable gas, inflammable object or explosive Place with potential exposure to radiation Location with the ambient temperature or relative humidity exceeding the specification range Location where radiant heat is added from direct sunlight or other large heat source Location where condensation occurs due to abrupt temperature changes Location where there is any corrosive gas (sulfuric acid or hydrochloric acid) Location exposed to significant amount of dust, salt or iron powder Location subject to direct vibration or impact For an actuator used in vertical orientation, select a model which is equipped with a brake. If selecting a model with no brake, the moving part may drop when the power is turned OFF and may cause an accident such as an injury or damage on the work piece.

No.	Operation Description	Description
2	Transportation	<ul style="list-style-type: none"> • When carrying a heavy object, do the work with two or more persons or utilize equipment such as crane. • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • When in transportation, consider well about the positions to hold, weight and weight balance and pay special attention to the carried object so it would not get hit or dropped. • Transport it using an appropriate transportation measure. The actuators available for transportation with a crane have eyebolts attached or there are tapped holes to attach bolts. Follow the instructions in the instruction manual for each model. • Do not step or sit on the package. • Do not put any heavy thing that can deform the package, on it. • When using a crane capable of 1t or more of weight, have an operator who has qualifications for crane operation and sling work. • When using a crane or equivalent equipments, make sure not to hang a load that weighs more than the equipment’s capability limit. • Use a hook that is suitable for the load. Consider the safety factor of the hook in such factors as shear strength. • Do not get on the load that is hung on a crane. • Do not leave a load hung up with a crane. • Do not stand under the load that is hung up with a crane.
3	Storage and Preservation	<ul style="list-style-type: none"> • The storage and preservation environment conforms to the installation environment. However, especially give consideration to the prevention of condensation. • Store the products with a consideration not to fall them over or drop due to an act of God such as earthquake.
4	Installation and Start	<p>(1) Installation of Robot Main Body and Controller, etc.</p> <ul style="list-style-type: none"> • Make sure to securely hold and fix the product (including the work part). A fall, drop or abnormal motion of the product may cause a damage or injury. Also, be equipped for a fall-over or drop due to an act of God such as earthquake. • Do not get on or put anything on the product. Failure to do so may cause an accidental fall, injury or damage to the product due to a drop of anything, malfunction of the product, performance degradation, or shortening of its life. • When using the product in any of the places specified below, provide a sufficient shield. <ol style="list-style-type: none"> 1) Location where electric noise is generated 2) Location where high electrical or magnetic field is present 3) Location with the mains or power lines passing nearby 4) Location where the product may come in contact with water, oil or chemical droplets

No.	Operation Description	Description
4	Installation and Start	<p>(2) Cable Wiring</p> <ul style="list-style-type: none"> • Use our company's genuine cables for connecting between the actuator and controller, and for the teaching tool. • Do not scratch on the cable. Do not bend it forcibly. Do not pull it. Do not coil it around. Do not insert it. Do not put any heavy thing on it. Failure to do so may cause a fire, electric shock or malfunction due to leakage or continuity error. • Perform the wiring for the product, after turning OFF the power to the unit, so that there is no wiring error. • When the direct current power (+24V) is connected, take the great care of the directions of positive and negative poles. If the connection direction is not correct, it might cause a fire, product breakdown or malfunction. • Connect the cable connector securely so that there is no disconnection or looseness. Failure to do so may cause a fire, electric shock or malfunction of the product. • Never cut and/or reconnect the cables supplied with the product for the purpose of extending or shortening the cable length. Failure to do so may cause the product to malfunction or cause fire. <p>(3) Grounding</p> <ul style="list-style-type: none"> • The grounding operation should be performed to prevent an electric shock or electrostatic charge, enhance the noise-resistance ability and control the unnecessary electromagnetic radiation. • For the ground terminal (PE) on the AC power cable of the controller and the grounding plate in the control panel, make sure for grounding work. For security grounding, it is necessary to select an appropriate wire thickness suitable for the load. Perform wiring that satisfies the specifications (electrical equipment standards and criteria). For detail, follow the description in [an instruction manual of each controller or controller built-in actuator]. • Conduct functional grounding on the FG terminal for a controller supplying 24V DC or a controller built-in type actuator. In order to minimize influence to mechanical operation given by electromagnetic interference (noise) to an electrical device or insulation failure, conduct grounding on a terminal or a conductor that is electrically stable. The reference impedance should be Type D (Former Class 3, ground resistance 100Ω or less).





No.	Operation Description	Description
4	Installation and Start	<p>(4) Safety Measures</p> <ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • When the product is under operation or in the ready mode, take the safety measures (such as the installation of safety and protection fence) so that nobody can enter the area within the robot’s movable range. When the robot under operation is touched, it may result in death or serious injury. • Make sure to install the emergency stop circuit so that the unit can be stopped immediately in an emergency during the unit operation. • Take the safety measure not to start up the unit only with the power turning ON. Failure to do so may start up the machine suddenly and cause an injury or damage to the product. • Take the safety measure not to start up the machine only with the emergency stop cancellation or recovery after the power failure. Failure to do so may result in an electric shock or injury due to unexpected power input. • When the installation or adjustment operation is to be performed, give clear warnings such as “Under Operation; Do not turn ON the power!” etc. Sudden power input may cause an electric shock or injury. • Take the measure so that the work part is not dropped in power failure or emergency stop. • Wear protection gloves, goggle or safety shoes, as necessary, to secure safety. • Do not insert a finger or object in the openings in the product. Failure to do so may cause an injury, electric shock, damage to the product or fire. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity.
5	Teaching	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • Perform the teaching operation from outside the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign “Under Operation” at the position easy to see. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>

No.	Operation Description	Description
6	Trial Operation	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • After the teaching or programming operation, perform the check operation one step by one step and then shift to the automatic operation. • When the check operation is to be performed inside the safety protection fence, perform the check operation using the previously specified work procedure like the teaching operation. • Make sure to perform the programmed operation check at the safety speed. Failure to do so may result in an accident due to unexpected motion caused by a program error, etc. • Do not touch the terminal block or any of the various setting switches in the power ON mode. Failure to do so may result in an electric shock or malfunction.
7	Automatic Operation	<ul style="list-style-type: none"> • Check before starting the automatic operation or rebooting after operation stop that there is nobody in the safety protection fence. • Before starting automatic operation, make sure that all peripheral equipment is in an automatic-operation-ready state and there is no alarm indication. • Make sure to operate automatic operation start from outside of the safety protection fence. • In the case that there is any abnormal heating, smoke, offensive smell, or abnormal noise in the product, immediately stop the machine and turn OFF the power switch. Failure to do so may result in a fire or damage to the product. • When a power failure occurs, turn OFF the power switch. Failure to do so may cause an injury or damage to the product, due to a sudden motion of the product in the recovery operation from the power failure.

No.	Operation Description	Description
8	Maintenance and Inspection	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • Perform the work out of the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. • When the work is to be performed inside the safety protection fence, basically turn OFF the power switch. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign “Under Operation” at the position easy to see. • For the grease for the guide or ball screw, use appropriate grease according to the instruction manual for each model. • Do not perform the dielectric strength test. Failure to do so may result in a damage to the product. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. • The slider or rod may get misaligned OFF the stop position if the servo is turned OFF. Be careful not to get injured or damaged due to an unnecessary operation. • Pay attention not to lose the removed cover or screws, and make sure to put the product back to the original condition after maintenance and inspection works. Use in incomplete condition may cause damage to the product or an injury. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>
9	Modification and Dismantle	<ul style="list-style-type: none"> • Do not modify, disassemble, assemble or use of maintenance parts not specified based at your own discretion.
10	Disposal	<ul style="list-style-type: none"> • When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste. • When removing the actuator for disposal, pay attention to drop of components when detaching screws. • Do not put the product in a fire when disposing of it. The product may burst or generate toxic gases.
11	Other	<ul style="list-style-type: none"> • Do not come close to the product or the harnesses if you are a person who requires a support of medical devices such as a pacemaker. Doing so may affect the performance of your medical device. • See Overseas Specifications Compliance Manual to check whether complies if necessary. • For the handling of actuators and controllers, follow the dedicated instruction manual of each unit to ensure the safety.

Alert Indication

The safety precautions are divided into “Danger”, “Warning”, “Caution” and “Notice” according to the warning level, as follows, and described in the instruction manual for each model.

Level	Degree of Danger and Damage	Symbol
Danger	This indicates an imminently hazardous situation which, if the product is not handled correctly, will result in death or serious injury.	 Danger
Warning	This indicates a potentially hazardous situation which, if the product is not handled correctly, could result in death or serious injury.	 Warning
Caution	This indicates a potentially hazardous situation which, if the product is not handled correctly, may result in minor injury or property damage.	 Caution
Notice	This indicates lower possibility for the injury, but should be kept to use this product properly.	 Notice

Handling Precautions

- In this touch panel teaching, the language to be displayed can be changed. Refer to the following for how to change it.
 - CON related controllers 3.1 Displayed Language Change
 - SEP related controllers 4.1 Displayed Language Change
 - MEC related controllers 5.1 Displayed Language Change
 - ELECYLINDER / ROBO PUMP 6.1 Displayed Language Change
- Do not apply mechanical shocks on this touch panel teaching pendant TB-02, because they may cause failure.
- When operating this touch panel teaching pendant TB-02, be sure to hold the teaching pendant to prevent the cables from receiving unnecessary tensile loads.
- If using the liquid crystal display screen for a long time, the brightness decreases. In order to extend the life of LCD, take measures such as to set the time setting to turn off in the environment setting to turn it off automatically or to disconnect from the controller when it is not in use.
- Do not touch more than one point at the same time, because the touch panel is an analog resistive film system. If you touch more than one point, the center position of more than one point may react and operate.
- Operate the touch panel by 0.5 N force or less.
There is a risk that the panel will be broken if it is operated by stronger force than that.
- The life of the touch panel is around one million times under the condition of depression at the same point. (Based on the usage environment of 25 degrees C)
- Turn off the power to the controller before putting it in or out. Putting it in and out while the power is on may cause malfunction.
- When putting it in, check the connector matching position and insert it carefully with no excess force applied to any unexpected direction. Do not attempt to insert it forcefully when it does not go in smoothly.
- For a Secure Digital memory card, choose a SD/SDHC memory card with 1G to 32G. (Toshiba-made recommended) Also, use FAT32 Format for the file system.
- About JOG Switch in RCON Driver Unit Front Panel
In case the communication with a teaching tool gets disconnected during a window to operate an actuator is open, operation of JOG switch leaves invalid.
In order to get the function of JOG switch back to valid, it is necessary to reboot the RCON system power supplier or conduct the software reset.



Caution : *This touch panel teaching pendant TB-02 is exclusively designed for use with IAI controllers. Never connect it to other equipment. Failure may occur.*

International Standards Compliances

This product comply with the following international standards:
Refer to [Overseas Standard Compliance Manual (ME0287)] for more detailed information.



RoHS3 Directive	CE Marking	UL
○	○	-

1. Confirming the Specifications

1.1 Product Check

This product, if adopting a standard configuration, consists of the parts listed below.

1.1.1 Component (excluding options)

No.	Product name	Model number	Number	Remarks
1	Teaching pendant (equipped with 5m standard cable)	Refer to "How to Read Model Nameplate" and "How to Read Model Number."	1	Standard cable is affixed on body
Accessories				
2	Position controller / ELECYLINDER cable	CB-TB1-C002	1	When model C or SC is selected
3	Program controller cable	CB-TB1-X002	1	When model S or SC is selected
4	Replacement Cable	CB-SEL-SJS002	1	When model S or SC is selected
5	Touch pen	TCH-TB02	1	Provided with the teaching pendant φ4.5×102mm
6	Safety guide	M0194 	1	The picture shows an image.
7	First step guide	ME0358 	1	The picture shows an image.

1.1.2 Instruction Manual Related to This Product

No.	Name	Control number
1	Touch panel teaching TB-02 Applicable for Position Controller, ELECYLINDER Instruction Manual	ME0355
2	Instruction manual for actuator integrated with ERC2 controller (PIO type)	ME0158
3	Instruction manual for actuator integrated with ERC2 controller (SIO type)	ME0159
4	Instruction manual for actuator integrated with ERC3 controller	ME0297
5	PCP6S Fieldbus Communication Instruction Manual	ME0349
6	Instruction manual for ACON-CA/DCON-CA controller	ME0326
7	Instruction manual for ACON-CB/CGB, DCON-CB/CGB controller	ME0343
8	Instruction manual for ACON-CYB/PLB/POB, DCON-CYB/PLB/POB controller	ME0354
9	Instruction manual for PCON-CA/CFA controller	ME0289
10	Instruction manual for PCON-CB/CGB/CFB/CGFB/CBP/CGBP controller	ME0342
11	Instruction manual for PCON-CYB/PLB/POB controller	ME0353
12	Instruction manual for SCON-CA/CAL/CGAL controller	ME0243
13	Instruction manual for SCON-CB/CGB/LC/LCG controller	ME0340
14	Instruction manual for SCON-CB-F/CGB-F/LC-F/LCG-F controller servo press function	ME0345
15	Instruction manual for SCON2-CG controller	ME0458
16	Instruction manual for SCON2-CG controller servo press function	ME0470
17	Instruction manual for RCON System	ME0384
18	Instruction manual for REC System	ME0394
19	Instruction manual for ROBONET	ME0208
20	Instruction manual for ASEP/PSEP/DSEP controller	ME0267
21	Instruction manual for PMEC/AMEC controller	ME0245
22	Instruction manual for MSEP-C/LC controller	ME0299
23	Instruction manual for MCON-C/CG controller	ME0341
24	Instruction manual for MSCON controller	ME0306
25	ELECYLINDER Rod Type / Table Type Instruction Manual	ME3778
26	ELECYLINDER Rod Type Dust and Drip Proof Instruction Manual	ME3779
27	ELECYLINDER Slider Type Instruction Manual	ME3793
28	ELECYLINDER Rod Type / Radial Cylinder Type Instruction Manual	ME3794
29	ELECYLINDER Belt Driven Type Instruction Manual	ME3798
30	ELECYLINDER Stopper Cylinder Instruction Manual	ME3799
31	ELECYLINDER Rotary Instruction Manual	ME3800
32	ELECYLINDER Large Slider Type Instruction Manual	ME3801
33	ELECYLINDER Cleanroom Specification Instruction Manual	ME3804
34	ELECYLINDER Gripper Instruction Manual	ME3806
35	ELECYLINDER Slider Type Dust and Drip Proof Instruction Manual	ME3814
36	Ultra Mini ELECYLINDER Instruction Manual	ME3815
37	ELECYLINDER Electricity Section Instruction Manual	ME3816
38	ELECYLINDER Long Stroke Gripper Instruction Manual	ME3824
39	ELECYLINDER Slider Type / Radial Cylinder Type Instruction Manual	ME3825
40	ELECYLINDER Compact Type Instruction Manual	ME3826
41	ELECYLINDER 3-finger gripper Instruction Manual	ME3829
42	ELECYLINDER Vertical Compact / Dust Proof/Splash Proof Gripper Type Instruction Manual	ME3830
43	ROBO POMP Instruction Manual	ME3827

1.1.3 How to Read Model Nameplate

Model → MODEL TB-02-C
Serial number → SERIAL No. B20003218 V1

Input DC24V 0.15A
IP20

IAI Corporation

MADE IN JAPAN

⚠ IAI指定以外のケーブルは使用しないでください。
Use IAI specified cables only.

Applicable Controllers

ACON-C/CG/CY/SE/PO/PL/CA	XSEL-J/K/JX/KX/KT/KET
ACON-CB/CGB/CYB/POB/PLB	XSEL-P/Q/PX/QX/PCT/QCT
PCON-C/CG/CF/CY/SE/PO/PL	XSEL-R/S/RA/SA
PCON-CA/CFA/CB/CGB	XSEL-RX/SX/RAX/SAX
PCON-CFB/CGFB/CYB/POB/PLB	XSEL-RXD/SXD/RAXD/SAXD
PCON-CBP/CGBP, DCON-CA	TT-A/C, TTA-A/C
DCON-CB/CGB/CYB/POB/PLB	ASEL-C/CS, PSEL-C/CS
SCON-C/CA/CAL/CGAL	SSEL-C/CS
SCON-CB/CGB/LC/LCG/*-F	MSEL-PC/PG/PCF/PGF
SCON2-CG/*-F	MSEL-PCX/PGX
ERC2, ERC3, RCP6S, ROBONET	RSEL, XSEL2-T/TX
RCM-P6AC/P6PC/P6DC	EC, REC, CCM, ADTB, RP
MCON-C/CG/LC, MSCON-C, RCON	
ASEP, PSEP, DSEP, AMEC, PMEC	
MSEP-C/LC	

Note: When updating firmware, please add new information.

1.1.4 How to Read Model Number

TB-02-SC-SWR-ENG

<Language option>
Not specified : Screens are displayed in Japanese.
ENG : Screens are displayed in English.
CHI : Screens are displayed in Chinese.
(Display can be changed to other languages)

<Switch Specifications>
No Indication : Stop switch in gray
SWR : Stop switch in red

<Cable Type>
SCN : With No Cable (Main body only)
C : With Position Controller/ELECYLINDER Cable
S : With Program Controller Cable and Conversion Cable
SC : With Program Controller Cable, Conversion Cable and Position Controller/ELECYLINDER Cable

<Model number>
TB-02 : Standard type
TB-02D : With deadman switch type (left side)
TB-02E : Teaching Pendant Equipped with Power Supply Unit (For ELECYLINDER) *
TB-02P : Teaching Pendant Equipped with Power Supply Unit (In common for ELECYLINDER / ROBOCYLINDER) *

* Refer to [1.9.2 Actuator Drive Power Supply Unit for Teaching Pendant How to Read Model Number] for the model code of the teaching pendant equipped with power supply unit TB-02E/TB-02P.

Set model code for main unit + cables		Model code for enclosed cable	Remark
CON/SEL Common Cable Equipped Type	TB-02-SC	For Con : CB-TB1-C002 For SEL : CB-TB1-X002 + CB-SEL-SJS002	Standard type (with no dead man's switch) stop switch portion in gray
	TB-02-SC-SWR		Standard type (with no dead man's switch) stop switch portion in red
	TB-02D-SC		Dead man's switch type (left) stop switch portion in gray
	TB-02D-SC-SWR		Dead man's switch type (left) stop switch portion in red
CON-Dedicated Type Cable for SEL (CB-TB1-X002) is also available to connect	TB-02-C	For CON : CB-TB1-C002	Standard type (with no dead man's switch) stop switch portion in gray
	TB-02-C-SWR		Standard type (with no dead man's switch) stop switch portion in red
	TB-02D-C		Dead man's switch type (left) stop switch portion in gray
	TB-02D-C-SWR		Dead man's switch type (left) stop switch portion in red
SEL-Dedicated Type Cable for CON (CB-TB1-C002) is also available to connect	TB-02-S	For SEL : CB-TB1-X002 + CB-SEL-SJS002 (Note 1) XSEL-J/JX Type not available to connect	Standard type (with no dead man's switch) stop switch portion in gray
	TB-02-S-SWR		Standard type (with no dead man's switch) stop switch portion in red
	TB-02D-S		Dead man's switch type (left) stop switch portion in gray
	TB-02D-S-SWR		Dead man's switch type (left) stop switch portion in red

(Note) Language option can be indicated in the last digit of the unit model code. (Displayed in Japanese when no indication)

1) Screens are displayed in English : -ENG 2) Screens are displayed in Chinese : -CHI

Model code for main unit itself		Model code for enclosed cable	Remark
CON/SEL Common (Single) Type	TB-02-SCN	With no enclosed cable	Standard type (with no dead man's switch) stop switch portion in gray
	TB-02-SCN-SWR		Standard type (with no dead man's switch) stop switch portion in red
	TB-02D-SCN		Dead man's switch type (left) stop switch portion in gray
	TB-02D-SCN-SWR		Dead man's switch type (left) stop switch portion in red


Model code for cable itself		Remark
Separately sold cable	CB-TB1-C002	For position controller/ELECYLINDER connection
	CB-TB1-X002	For SEL system connection (XSEL-J/JX Type excluded)
	CB-SEL-SJS002	For ASEL, PSEL, SSEL and MSEL Connection (used together with CB-TB1-X002)
	CB-TB1-XJ005	For XSEL-J/JX connection
	CB-TB1-GC002	For positioner controller TP adapter connection (to comply with Safety Categories)

Option model code		Remark
Strap	STR-1	
Grip Belt	GRP-2	Delivered individually without being assembled to main unit
	GRP-1 (Production Ended)	
Spiral Cord	SIC-1	Connect the stylus pen on the main unit in order to avoid loosening or dropping it

Maintenance part code		Remark
Touch Pen	TCH-TB02	

1.2 Specification

1.2.1 Basic Specification


Item	Specifications
Rated voltage	24V DC $\pm 10\%$ (Supplied from controller)
Operating voltage range	21.6 to 26.4V DC
Power consumption	3.6W or less (150mA or less)
Insulation resistance	Between GND and FG 500V DC 10M Ω
Display colors	65536 colors (16-bit colors)
Backlight method	White LED backlight
Backlight life	15,000 hours
Touch panel screen	7 inch TFT color WVGA(800x480)
Touch detection method	4-wire resistive type
Touch panel life	1 million times
External memory	SD/SDHC memory card interface installed (1G to 32G) (Toshiba-made recommended)
Cable length	5m (Standard), 10m (Maximum)
Wall mounting hook	Hook available to use with M8 hex socket head cap screw
Touch pen (Accessory)	$\phi 4.5 \times 102$ mm
Language selection	Japanese/English/Chinese
Touch sound	ON/OFF Volume Settable in 3 steps, S, M, and L
Data save	Applicable to have data saved to and read from external Secure Digital memory card (FAT32 Format) (Position data, parameter, alarm list)
Display adjustment	Brightness adjustable for contrast and backlight
Time setting	Clock setting available with real time clock (Backup held with CR2032 button battery)
Communication standard	Based on RS485
Communication speed	115,200bps
Duration from the power being off to turned on	More than 2 seconds
Cooling method	Natural air-cooling
Size	TB-02 : 155 mm (H) \times 190 mm (W) \times 25 [45.1] mm (D) TB-02D : 155 mm (H) \times 190 mm (W) \times 55 [75.1] mm (D) Stop switch included in []
Mass	TB-02 : 470g approx. (Main Body) + 330g approx. (Cable 5m) TB-02D : 600g approx. (Main body) + 330g approx. (Cable 5m)
 SD memory card is a trademark of SD-3C, LLC and SDA.	

1.2.2 Environmental Specifications

Item	Specifications
Working ambient temperature	0 to 40°C
Working ambient humidity	5%RH to 85%RH (There should be no water condensation or freeze)
Storage ambient temperature	-20 to 70°C
Storage ambient humidity	5%RH to 85%RH (There should be no water condensation or freeze)
Altitude	1000 meters or less above the sea level
Environment	Environment with no corrosive or flammable gas Avoid use in places with dust or in places where oil mist or cutting fluid splashes.
Vibration resistance	Frequency 10 to 57Hz / Swing width: 0.035mm (Continued), 0.075mm (Continual) Frequency 57 to 150Hz / Acceleration: 4.9m/s ² (Continued), 9.8m/s ² (Continued) XYZ Each direction Sweep time: 10 min. Number of sweep: 10 times
Pollution degree	II
Protection class	IP20
Protection function against electric shock	III

1.3 Explanation of Each Part

1.3.1 Front (Standard Type, Dead Man's Switch Type)

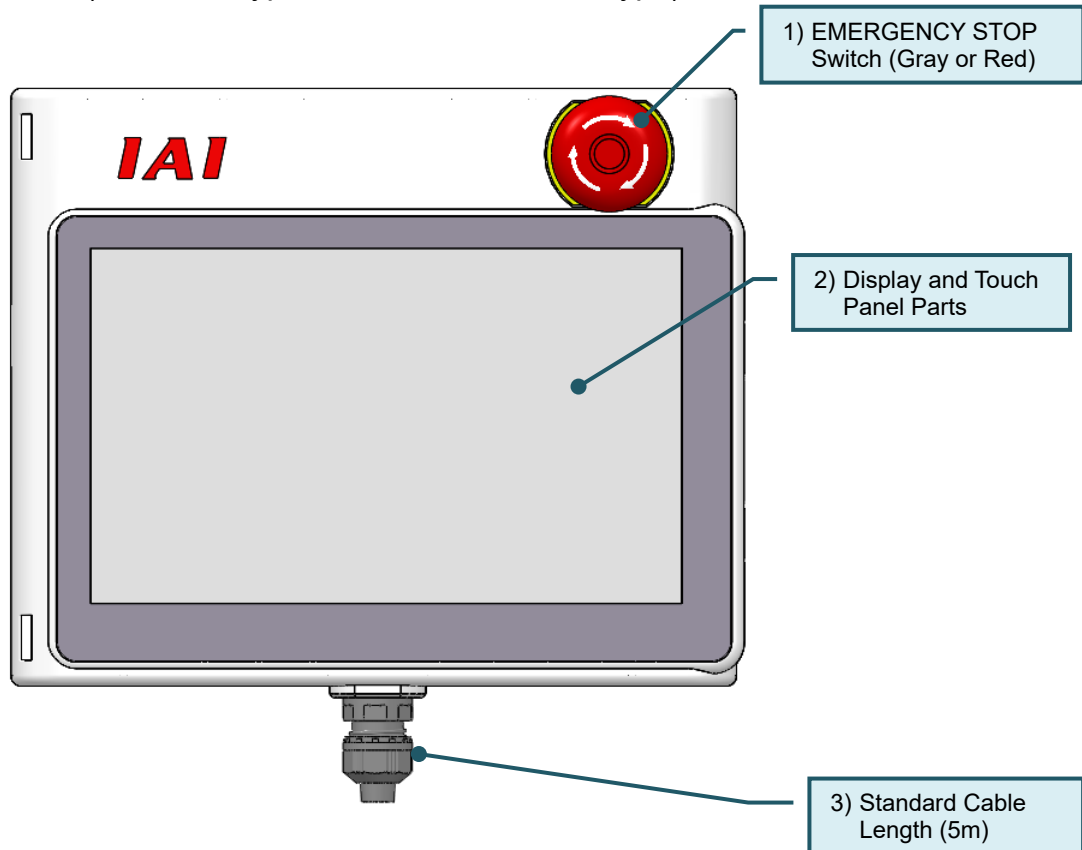


- 1) EMERGENCY STOP Switch
Press it to stop the operation.
To cancel, turn it in the direction of arrow.

- 2) Display and Touch Panel Parts
This screen is configured of a TFT color LCD and touch panel.
Use this screen to edit the various setting values and to display the teaching details, etc.
Touch the touch panel with a finger or touch pen to perform operations.


- *1 In a use of the LCD display for a long term, the brightness may drop.
In order to extend the life of LCD, take measures such as to set the time setting to turn off in the environment setting to turn it off automatically or to disconnect from the controller when it is not in use.
- *2 This touch panel is of analog resistance membrane type, so do not touch two or more locations on the screen at the same time.
If two or more locations are touched at the same time, the centers of all touched locations may respond and trigger multiple operations.
- *3 When operating the touch panel, do not apply a force exceeding 0.5 N.
If any greater force is applied, the touch panel may be damaged.
- *4 The life of touch panel is approx. 1 million touches at the same location. (Assuming a use environment of 25°C)

- 3) Standard Cable
5m cable is connected to the main unit.

1.3.2 Back (Standard Type)

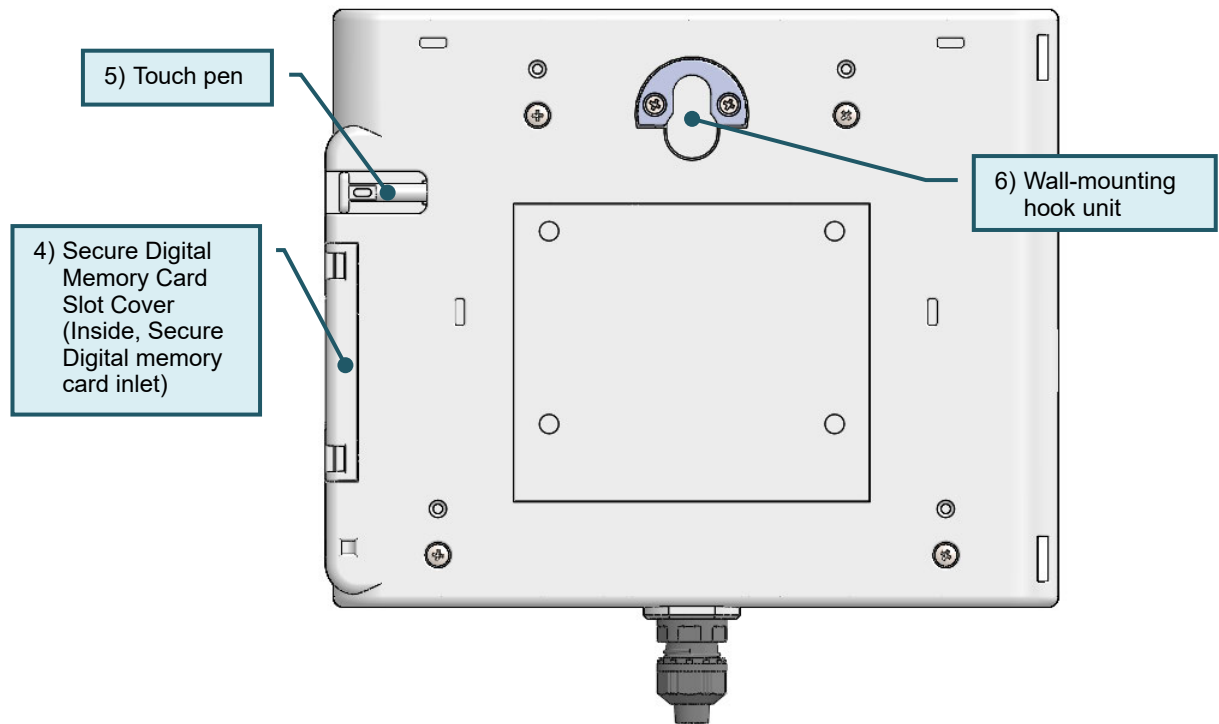

1.3.3 Back (Dead Man's Switch Type)

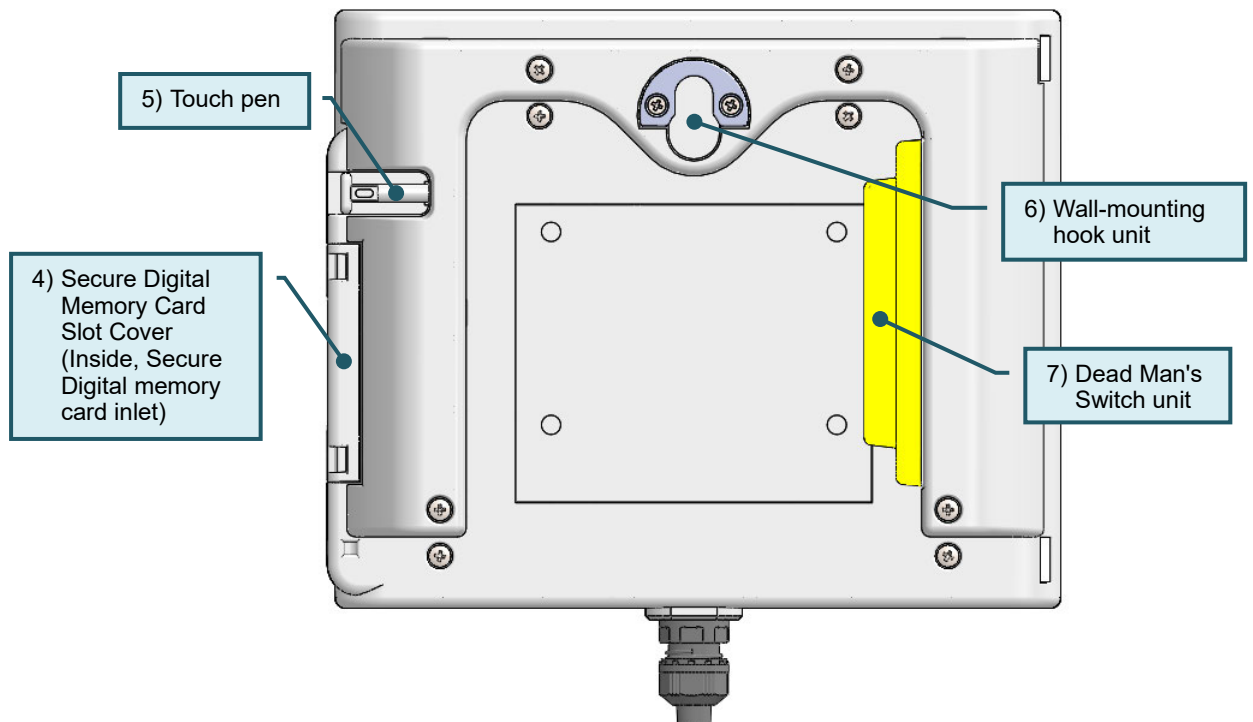

4) Secure Digital Memory Card Slot Cover

There is an inlet for Secure Digital memory card inside the cover.

Refer to [1.4 How to Set in/out Secure Digital Memory Card] to set in or out a Secure Digital memory card.

5) Touch pen

Use this pen to touch the touch panel's operation and display screen.

6) Wall-mounting hook unit

Use this hook to hang the unit on a wall. The hook is available to hang with an M8 hex socket head cap screw.

7) Dead man's Switch unit (It is not equipped on the standard type.)

The dead man's switch has three conditions corresponding to three levels. The meaning of ON/OFF in each condition is explained below.

Level 1	Switch OFF	The hand is off the switch, or the switch is pressed with a very small force.
Level 2	Switch ON	The switch is pressed with an appropriate force.
Level 3	Switch OFF	The switch is pressed with a strong force.

When the switch is ON, the servo can be turned ON.


When the switch is OFF, the drive source is cut off and the servo remains OFF.

Even when the switch is OFF, operation is still possible in modes where the servo need not be ON (such as in the edit mode).

1.4 How to Set in/out Secure Digital Memory Card


1.4.1 How to Take off Secure Digital Memory Card Slot Cover

Slide it towards the back while pushing it against the unit.

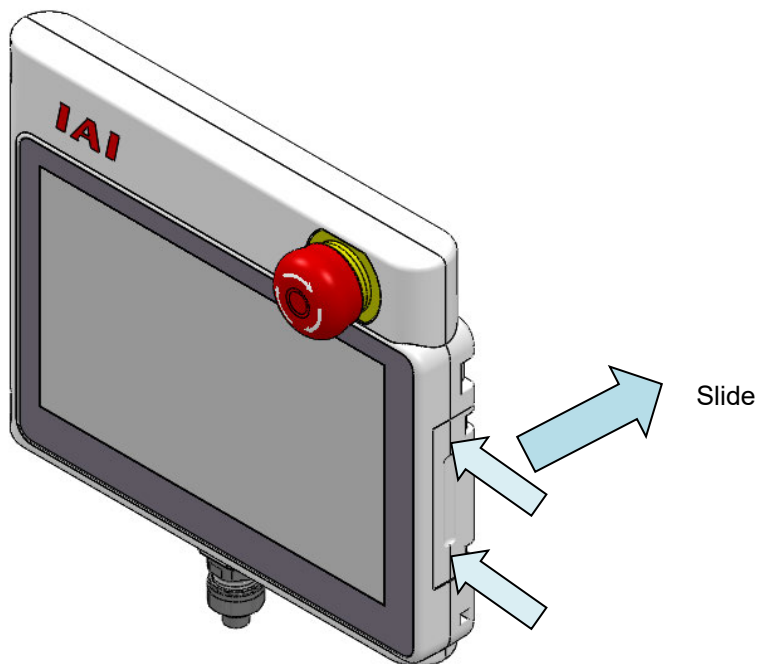


1.4.2 How to Insert Secure Digital Memory Card

Face the electrode side of a Secure Digital memory card to the front and push it in until it makes a click sound.

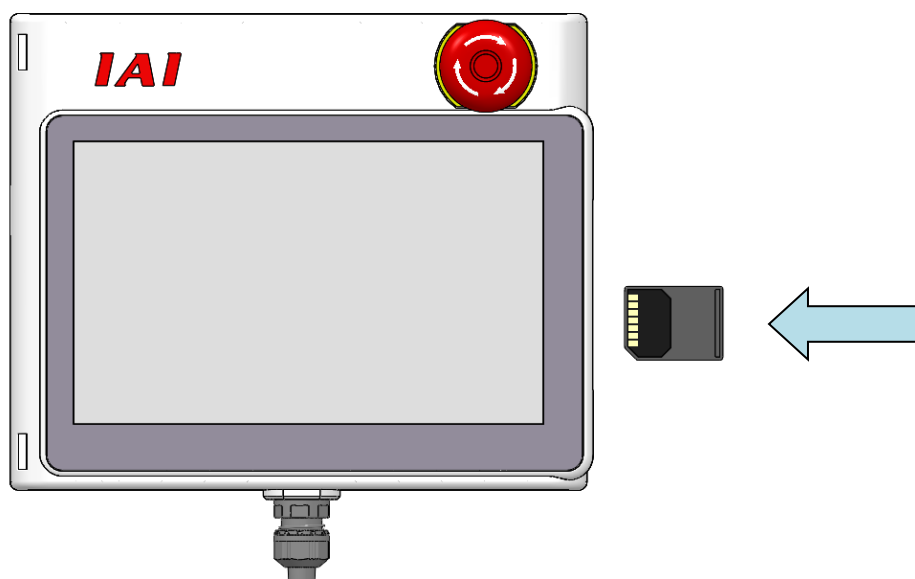


1.4.3 How to Take out Secure Digital Memory Card

Press the Secure Digital memory card lightly and release and the card pops out a little. Pull it out straight.

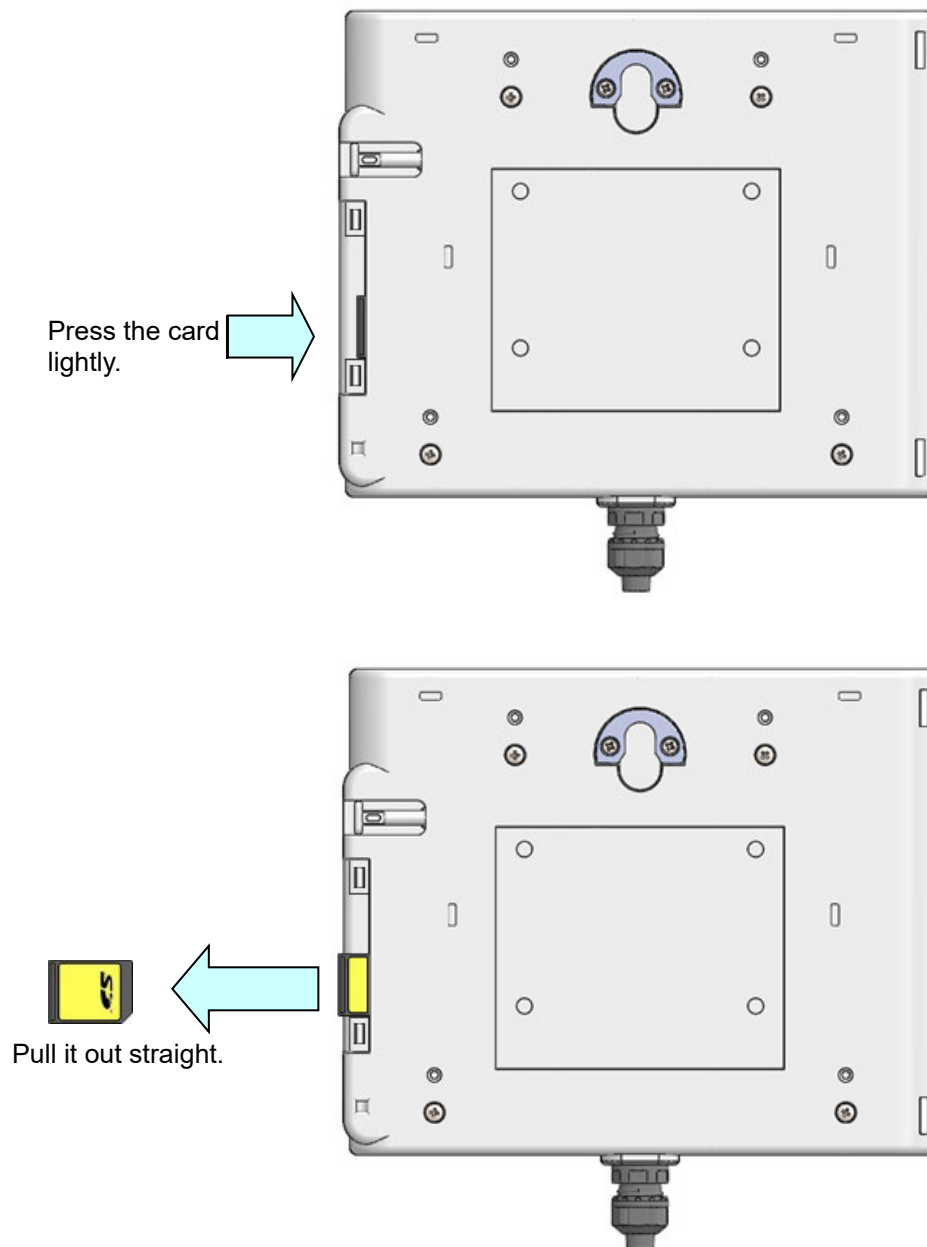


1.5 External Dimensions

Standard type (with no dead man's switch)

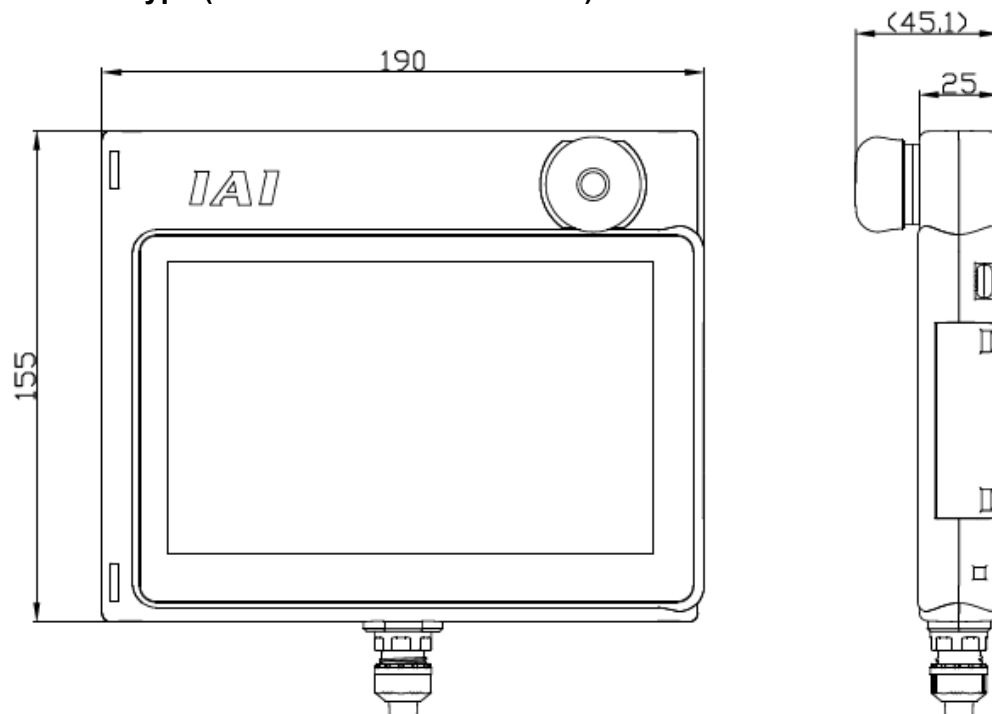

Dead man's switch type

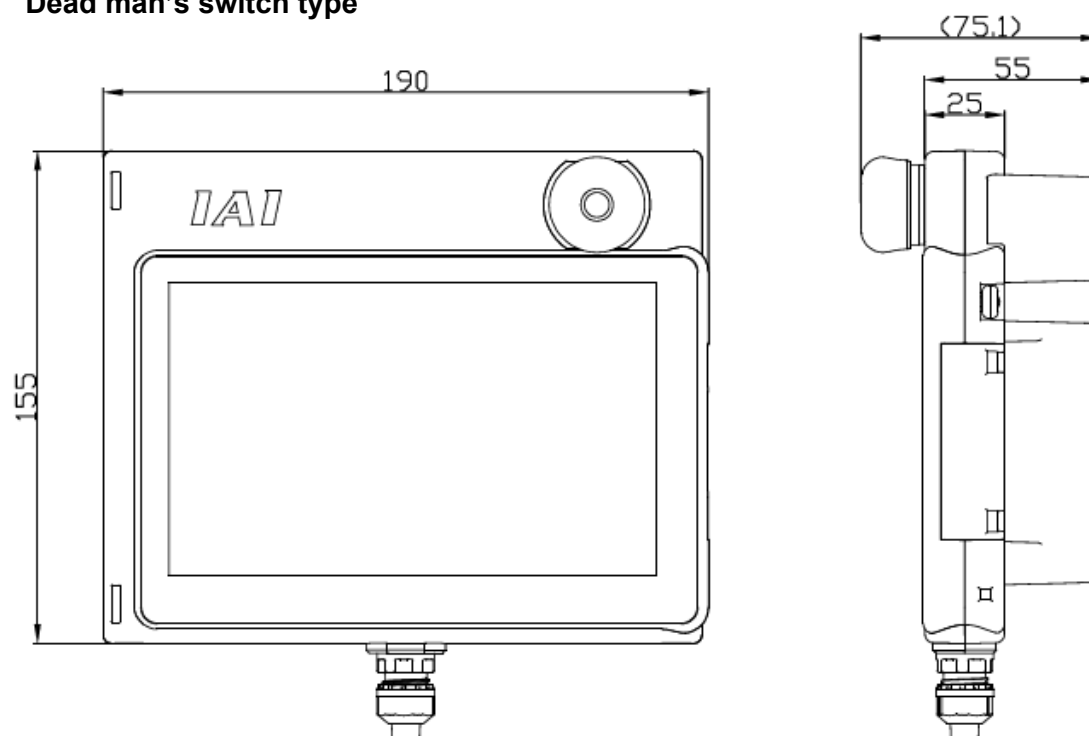

1.6 Life of Touch Panel LCD

The product life of the touch panel is 1,000,000 times of touches and that of the LCD backlight is 15,000 hours. (Ambient temperature at 25°C)

1.7 Built-in Battery (Life of Battery and Replacement of Battery)

With a button battery built-in the main body, the data set in the environment setting window, such as time and language settings and touch sound setting, is retained. The data should get reset to the default setting once the battery gets flat.

The nominal life of the button battery CR2032 that the manufacturer states is approximately five years (Ambient temperature at 25°C).

You will get notified with a message "187 RTC Backup Battery Voltage Drop" once the voltage of the battery gets low. As the battery cannot be replaced at a customer's site, make a request to IAI.

1.8 Optional Items

■ IAI Products

- Grip Belt (GRP-2) for support to hold on left hand
(GRP-1) * Production Ended
- Spiral Cord (SIC-1) for stylus pen connection
- Touch Pen (* enclosed to main unit, for cases of loss and malfunction)
- Strap (STR-1)




Grip Belt



Strap

1.8.1 How to Attach Grip Belt

1.8.1.1 For GRP-2

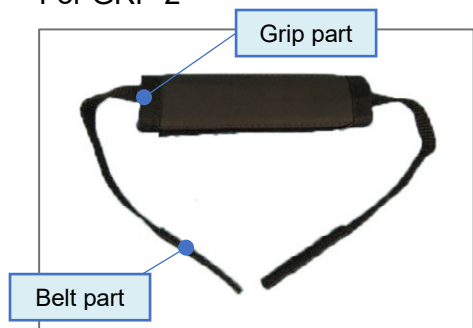

1) Put the belt through the slits at the grip belt attaching area.



2) Fix the belt to the fabric hook-and-loop fastener in the opened grip area.



3) Close the grip area and fix it to the fabric hook-and-loop fastener in the grip area.

1.8.1.2 For GRP-1



1) Pull out the belt part from the grip part.



2) Attach the belt at the slit on the left bottom of the main unit.



3) Put the belt part through the grip part.



4) Attach the belt at the slit on the left top of the main unit and attach the belt to the grip part with the fabric hook-and-loop fastener.

1.9 Actuator Driving Power Supply Unit for Teaching Pendant


* ELECYLINDER described in this section (1.9) includes ROBO PUMP.

1.9.1 Feature

The actuator drive power supply unit is an option component of a teaching pendant that supplies power to an actuator in equipment with electric wiring not completed and enables brake release and simple operations at startup of the equipment. It saves time to currently build up the power supply line and enables to have a quick trial run.

It is detachable to a teaching pendant, and enables to have a trial run in such cases as actuator position tuning and data setting.

1) Unit configuration

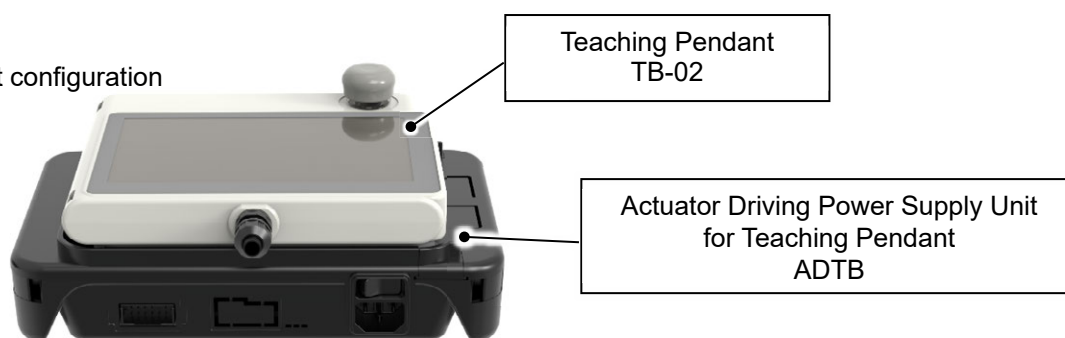

2) Compatible actuator

The applicable actuator should differ between EC Type (ADTB-EC) and PEC Type (ADTB-PEC).

EC type..... ELECYLINDER (24V pulse motor type) is available.

PEC type..... Operation of ROBOCYLINDER (pulse motor type: RCP2 Series and later) and ELECYLINDER (24V pulse motor type) is available.

3) Connection

For how to make connection, refer to [2.4 Connection of Actuator Drive Power Supply Unit].


4) Operation

For how to operate ELECYLINDER, it is the same as that of normal ELECYLINDER. Refer to [Chapter 6 Operation of ELECYLINDER and ROBO PUMP].


For how to operate ROBOCYLINDER, refer to [Chapter 8 Operation of Actuator Drive Power Supply Unit]

1.9.2 How to Read Model Number

1) Model Code for Actuator Driving Power Supply Unit (ADTB) Individually

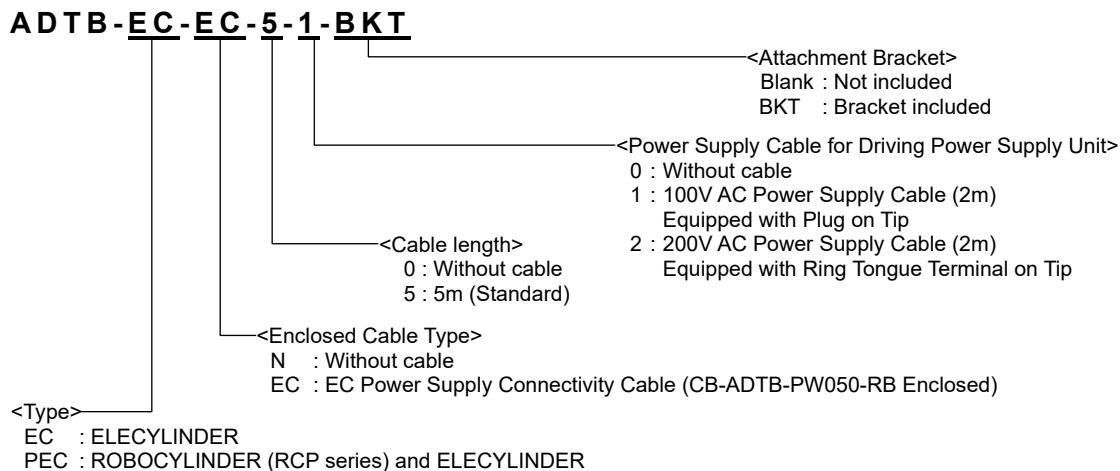

2) Teaching Pendant Equipped with Power Supply Unit (TB-02 + Drive Power Supply Unit ADTB Set Model Code)

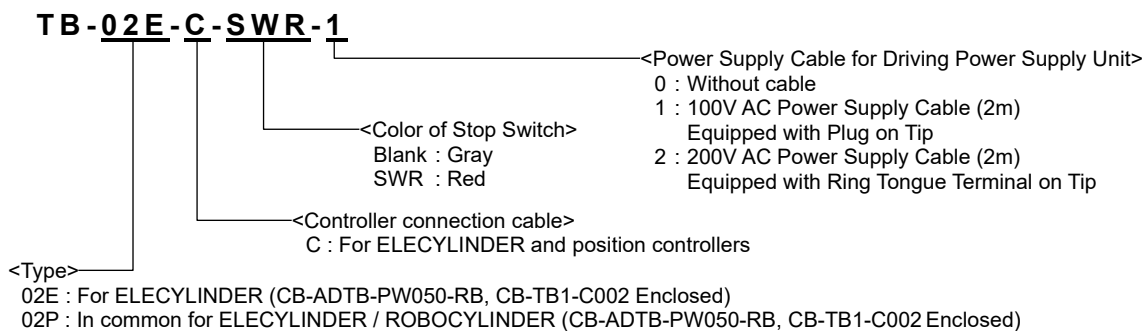

* Some types of RCP actuators to be connected may require another cable.
Prepare an applicable motor/encoder cable separately.
Refer to [2.5.5 List of Cables for RCP Connection of Actuator Drive Power Supply Unit] for details.

3) Model Code for Enclosed Power Supply Cables Individually

- 100V AC Power Supply Cable : KWD-UJ-2MBS (Cable length should be 2mm)
- 200V AC Power Supply Cable : CB-APMEC-PW020-TM (Cable length should be 2mm)


1.9.3 Basic Specification

Item			Specifications
Rated Input Voltage			Single-Phase 100 to 230V AC ±10%
Input Current			1.4A _{typ.} (AC100V), 0.6A _{typ.} (AC230V)
Frequency Range			50/60Hz±5%
Current Amperage			141VA (AC100V), 145VA (AC230V)
Output Current			DC24V ±10%
Load Current	ELE CYLINDER	Standard Dustproof and splashproof High-Stiffness	When Power Saving Setting Invalid: Rating 3.5A, Max. 4.2A When Power Saving Setting Valid: Rating 2.2A, Max. 4.2A
		Slim and Small	Max. 2.0A
		S8, B8S, RR8, RR10, RTC18	Max. 6.0A
	ROBO CYLINDER	20P, 20SP, 28P, 35P, 42P, 42SP, 56P	When High Output Setting Invalid: Max. 2.2A When High Output Setting Valid: Rating 3.5A, Max. 4.2A
		56SP, 60P, 86P	Max. 6.0A
Heat Radiation (ROBOCYLINDER)		20P, 20SP, 28P, 35P, 42P, 42SP, 56P	RCP2, RCP3 : 5W RCP4, RCP5, RCP6 : 8W
		56SP, 60P, 86P	19.2W
Ambient operating temperature			0 to 40°C (There should be no water condensation or freeze)
Ambient operating humidity			5%RH to 85%RH (There should be no water condensation or freeze)
Ambient storage temperature			-20 to 70°C
Ambient storage humidity			5%RH to 85%RH (There should be no water condensation or freeze)
Environment			Avoid corrosive gas and in particular avoid excessive dust
Altitude			1000 meters or less above the sea level
Vibration resistance			Frequency 10 to 57Hz / Swing width: 0.075mm Frequency 57 to 150Hz / Acceleration: 9.8m/s ² XYZ Each direction Sweep time: 10 min. Number of sweep: 10 times
Dropped in package			From height 800mm, dropped on 1 corner + 3 edges + 6 surfaces
Overvoltage category			II
Pollution degree			2
Protection function against electric shock			II
Degree of protection			IP30
Mass			ADTB-EC : Approx. 740g / ADTB-PEC : Approx. 825g
Cooling method			TB-02E : Natural cooling / TB-02P : Forced air cooling with internal fan


Note 20P, 20SP, 28P, 35P, 42P, 42SP, 56P, 56SP, 60P and 86P in ROBOCYLINDER show the motor type.

1.9.4 External Dimensions


Driving Power Supply Unit Individually

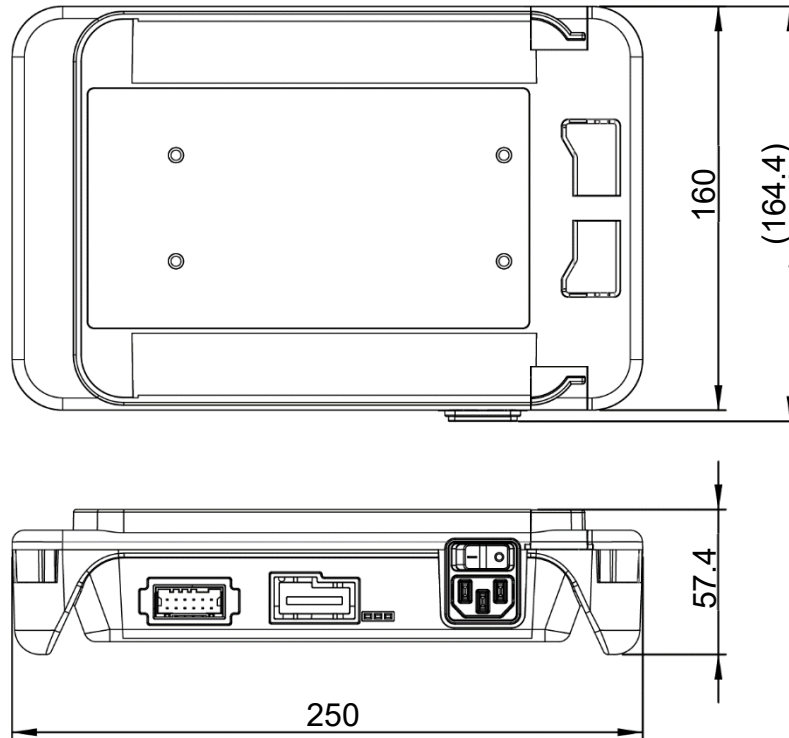

Teaching Pendant Equipped with Power Supply Unit (Linked with Drive Power Supply Unit)

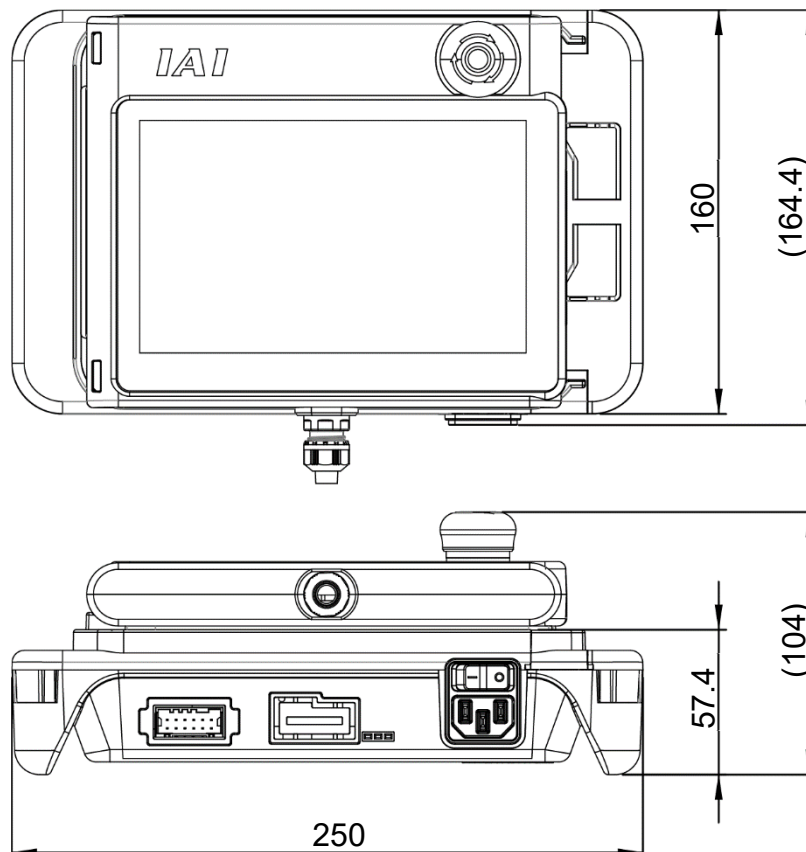

1.9.5 Explanation of Each Part

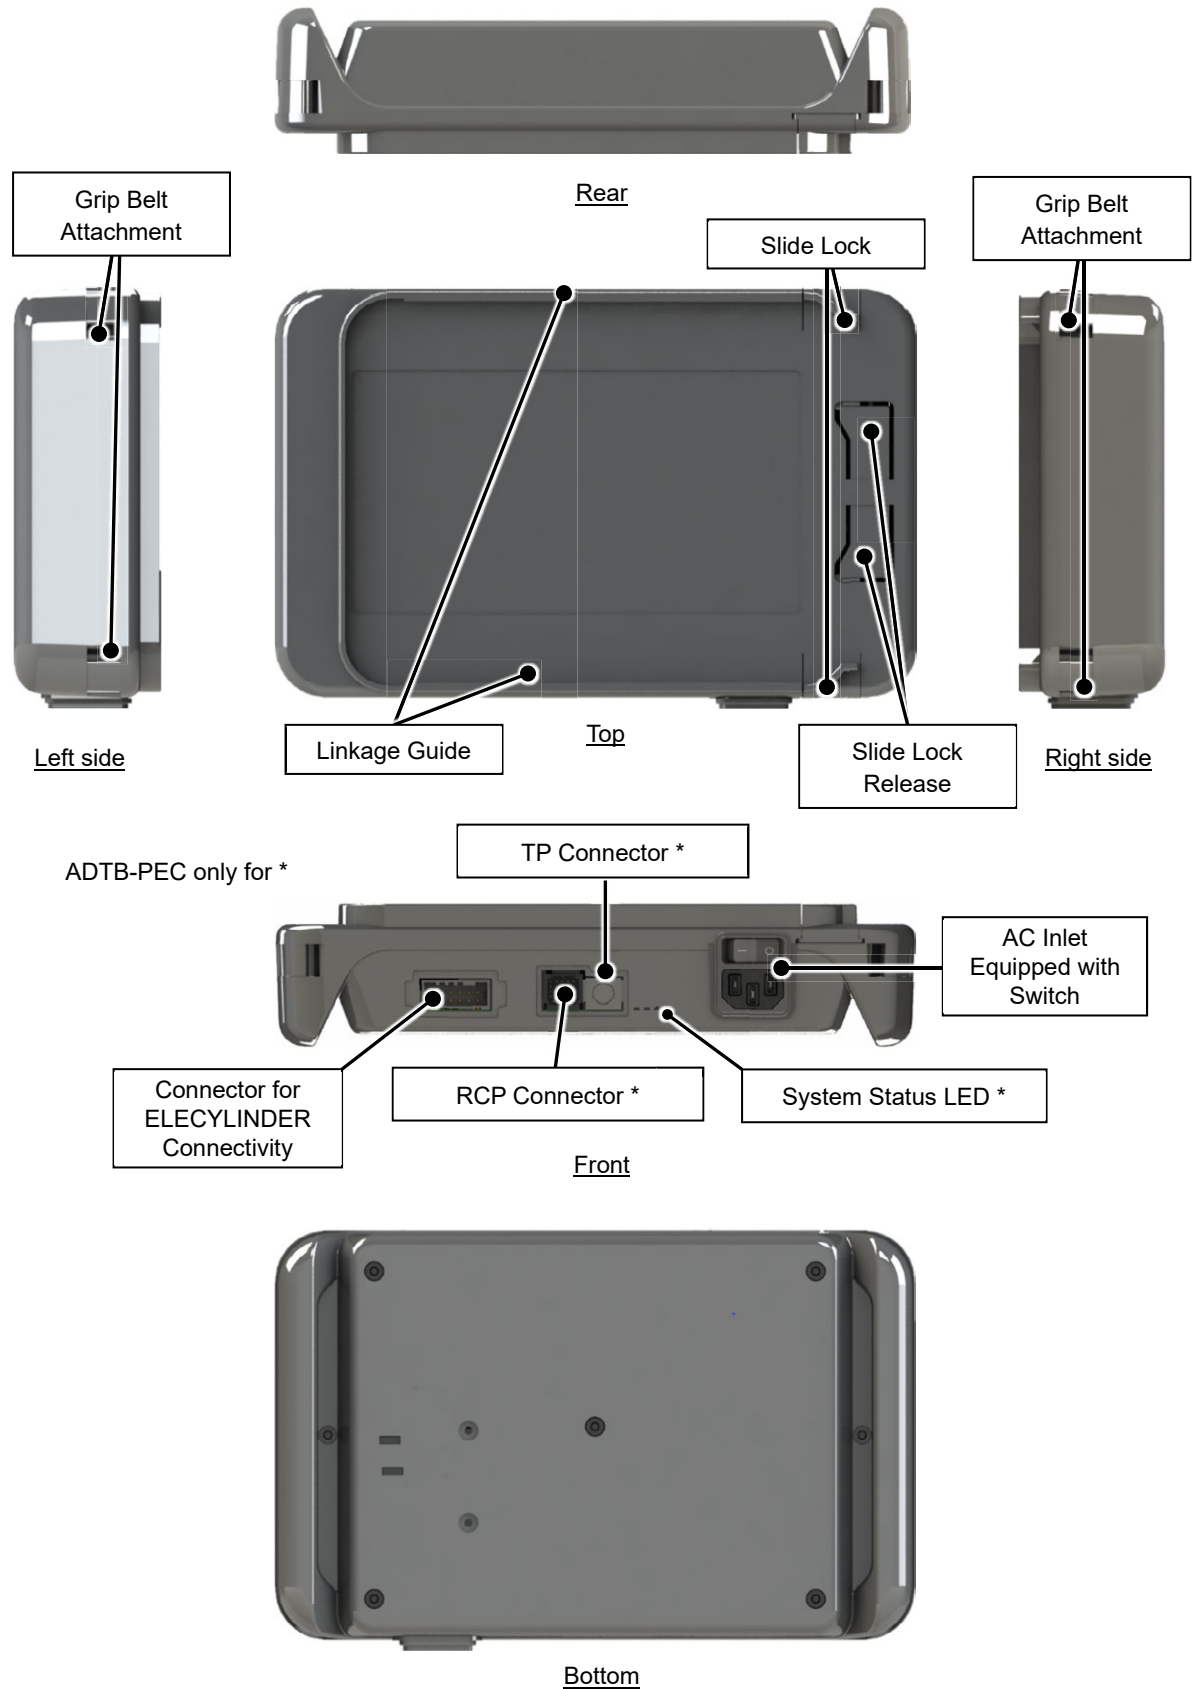


1.9.6 Feature of Each Part and Pin Assignment on Connector

1) AC Inlet Equipped with Switch




Model	DC11.0001.403	
Manufacturer	SCHURTER	
Pin No.	Signal name	Explanation
1	L	AC Input Live Terminal (Non-Grounding Side)
2	N	AC Input Neutral Terminal (Grounding Side)
3	PE	Protective Grounding Terminal (Class D Grounding)
Rated Voltage	Single-Phase 100 to 230V AC ±10%	
Input Current	1.4A _{typ.} (AC100V), 0.6A _{typ.} (AC230V)	
Connectivity Cable Specifications		
Item	Model	
100V AC Power Supply Cable	KWD-UJ-2MBS	
200V AC Power Supply Cable	CB-APMEC-PW020-TM	

2) Connector for ELECYLINDER Connectivity

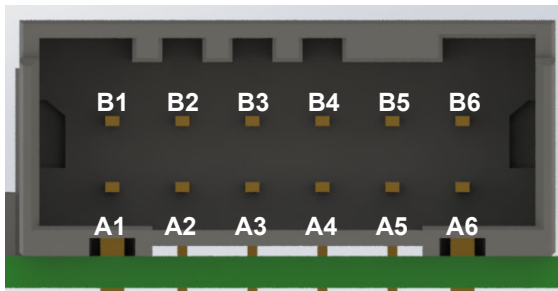


Model	1-1871935-6	
Manufacturer	TE	
Pin No.	Signal name	Explanation
A1	0V	GND
A2	24V (CP)	24V output (CP)
A3	NC	Not connected
A4	NC	Not connected
A5	NC	Not connected
A6	NC	Not connected
B1	/EC_CONE	EC Connector Fitting Detection Signal
B2	NC	Not connected
B3	NC	Not connected
B4	NC	Not connected
B5	GND	GND
B6	NC	Not connected
Output Voltage	24V DC±10%	
Load Current	Refer to [1.9.3 Basic Specification]	
Connectivity Cable Specifications		
Item	Model	
Connectivity Cable	EC Power Supply Connectivity Cable CB-ADTB-PW□□□-RB	
	EC Power Supply + TB-03 Integrated Connectivity Cable CB-ADTB-PWTB□□□	

3) RCP Connector (ADTB-PEC only)

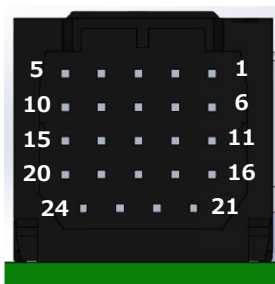


Model	DF62-24P-2.2DS(01)				
Manu- facturer	Hirose Electric Co., Ltd.				
Pin No.	Signal name	Explanation	Pin No.	Signal name	Explanation
1	A+	Encoder A-Phase + Input	13	LS_GND	Grounding for Limit Switch
2	BK-	Brake Release Negative Side	14	LS-	Limit Switch Negative Side
3	ΦA+	Motor Drive Line A-Phase +	15	ΦB-	Motor Drive Line B-Phase -
4	ΦA-	Motor Drive Line A-Phase -	16	B-	Encoder B-Phase - Input
5	VMM	Motor Power Supply Line	17	ENC_SD-	Battery-less Absolute Communication Line -
6	A-	Encoder A-Phase - Input	18	VPS	Encoder Line Driver Enable Output
7	GND	0V	19	NC	Not connected
8	LS+	Limit Switch Positive Side	20	BK+	Brake Release Positive Side
9	VMM	Motor Power Supply Line	21	VCC	Encoder Power Supply 5V for Motor
10	ΦB+	Motor Drive Line B-Phase +	22	CF_VCC	Encoder Power Supply 5V for High-Thrust Motor
11	B+	Encoder B-Phase + Input	23	NC	Not connected
12	ENC_SD+	Battery-less Absolute Communication Line +	24	FG	Frame Ground
Connectivity Cable Specifications					
Item	Model				
Connec- tivity Cable	Motor Encoder Integrated Cable	CB-ADPC-MPA□□□□ / CB-ADPC-MPA□□□□-RB			
	High-Thrust Conversion Cable	CB-ADTBF-AJ002			

4) TP Connector (ADTB-PEC only)

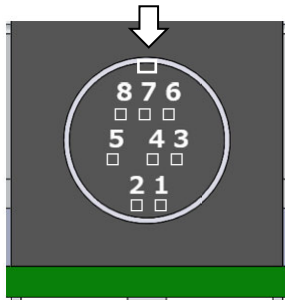

Model	TCS7587-0121077	
Manufacturer	Hosiden Corporation	
Pin No.	Signal name	Explanation
1	SD+	RS485 Communication
2	SD-	RS485 Communication
3	T5V	TP Connection Detection
4	ENB	Teaching Enable
5	EMGA	Teaching Stop Signal
6	T24V	Teaching Power Supply
7	GND	GND
8	EMGB	Teaching Stop Signal
F1	GND	GND
F2	GND	GND
F3	GND	GND
Connectivity Cable Specifications		
Item	Model	
Connectivity Cable	TB-01 Controller Connection Cable (For A/P/SCON, A/PSEP and A/PMEC) CB-TB1-C□□□	
	TB-03 Controller Connection Cable CON Connection Type	

5) System Status LED (ADTB-PEC only)

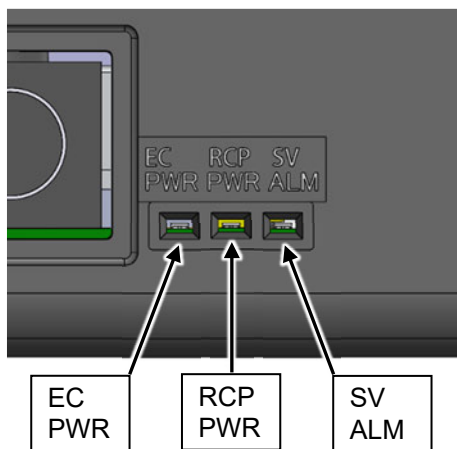


LED Display Type			
Panel Display	Display Color	Status	Explanation
EC PWR	Green	Light ON	In process to supply power to connector for ELECYLINDER (in normal condition)
	Red	Light ON	Alarm generated while supplying power to connector for ELECYLINDER
		Light OFF	Power supply to connector for ELECYLINDER stopped
RCP PWR	Green	Light ON	In process to supply power to internal controller (in normal condition)
	Red	Light ON	Alarm generated while supplying power to internal controller
		Light OFF	Power supply to internal controller stopped
SV ALM	Green	Light ON	Servo-on
		Blinking	Update mode (repeating flashing 2 times in 2 Hz and turned off for 1 sec)
	Green	Light ON	Alarm above operation release levels in generation Motor power supply voltage dropped STOP in process to input (in drive power cutoff)
		Blinking	In-rush detected (flashing in 1 Hz)
		Light OFF	Servo-off


1.9.7 Joining Unit

Here explains how to join an actuator driving power supply unit to a teaching pendant.


- 1 Put the attachment bracket on the back of the teaching pendant.

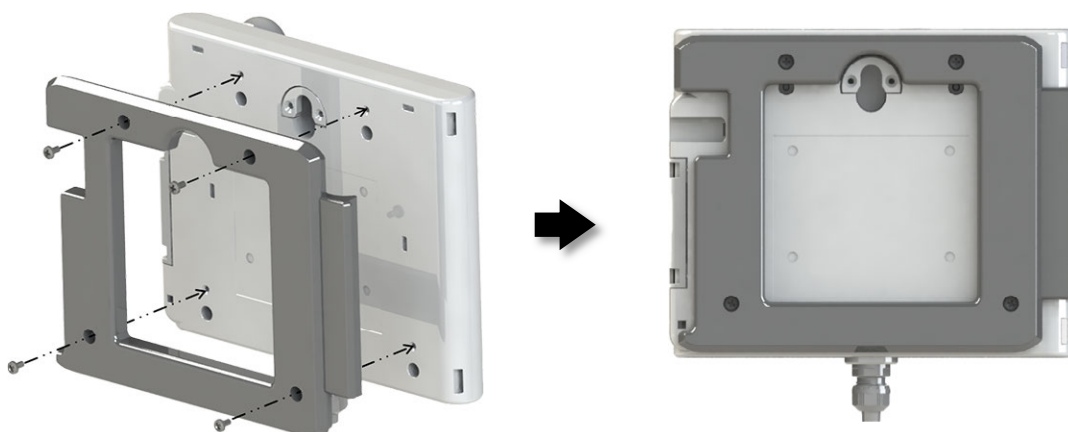


- 2 While pressing the slide lock release (broken line areas) on the driving power supply unit, slide the slide locks to make them open.

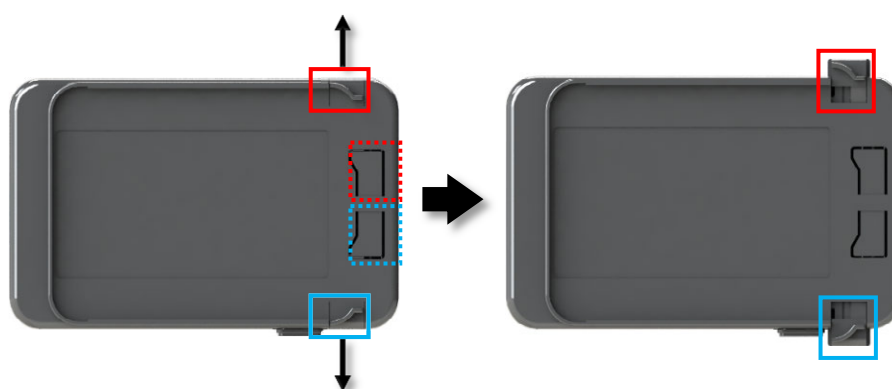


- 3** Insert the slots (red broken line areas in the figure) formed between the teaching pendant and the attachment bracket to the linkage guides on the actuator driving power supply unit from the right side.

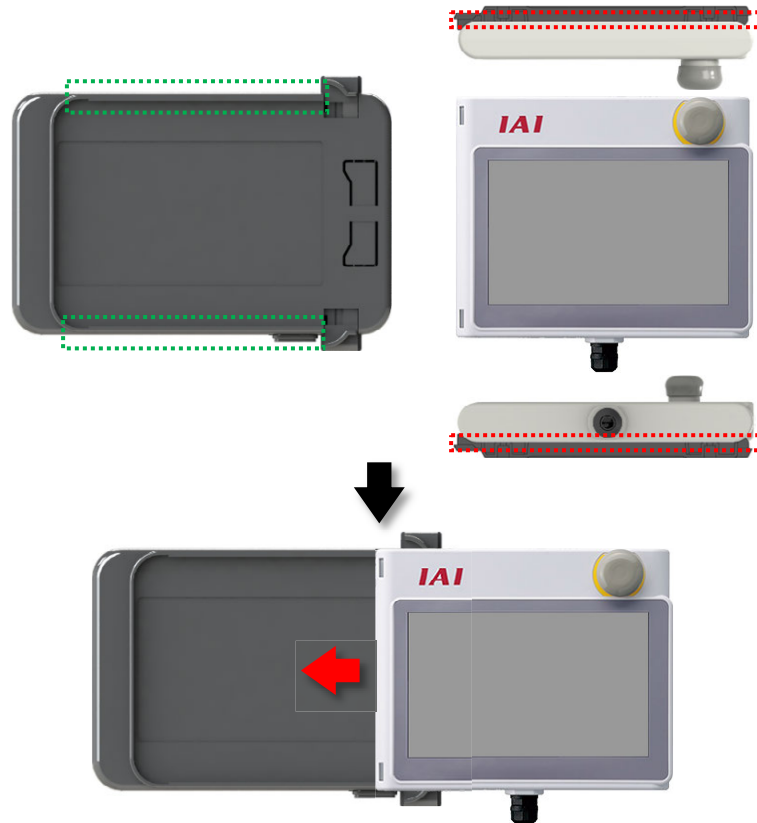

- 4** Insert the teaching pendant along the linkage guides on the actuator driving power supply unit till the teaching pendant reaches the area marked with the broken line.

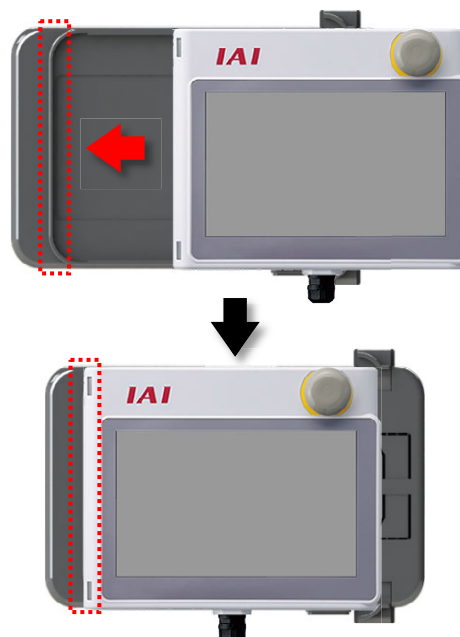

- 5** Slide it till the slide locks get locked to lock the teaching pendant.

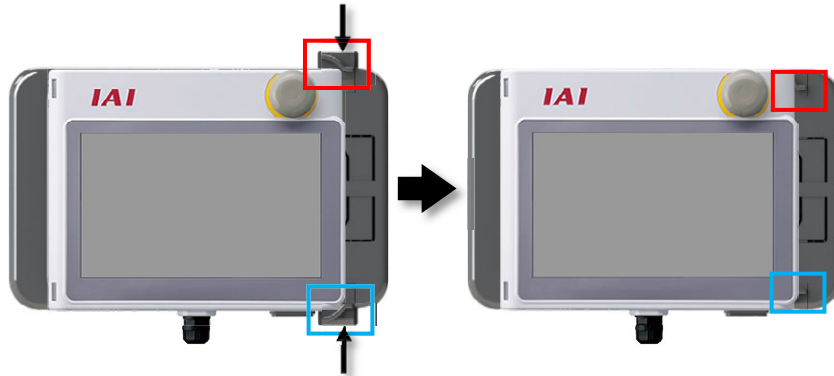


1.9.8 Accessories for ADTB-PEC

- (1) Cable Attachment Fabric Fastener (2 pcs)
- (2) Magic Band Strap Type (2 pcs)
- (3) 3.5mm WtoB/W Connector Housing: Female (1 pc)
- (4) DF62DL-24S-2.2C Connector Housing: Female (1 pc)
- (5) Protection Cap (1 pc)


1.9.8.1 Accessories for Cable Tie Fixation

- (1) Cable Attachment Fabric Fastener (To be attached by user)
Attach the fabric fasteners on the bottom of ADTB as shown in [Attached Condition].

[Appearance]

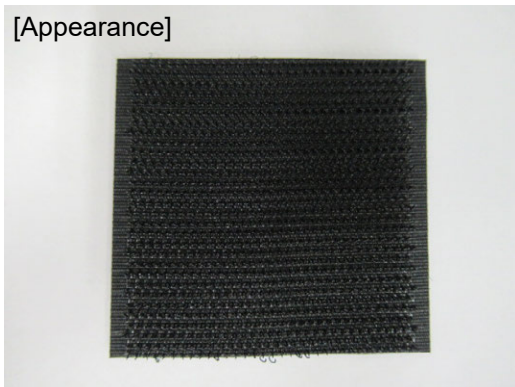

[Attached Condition]

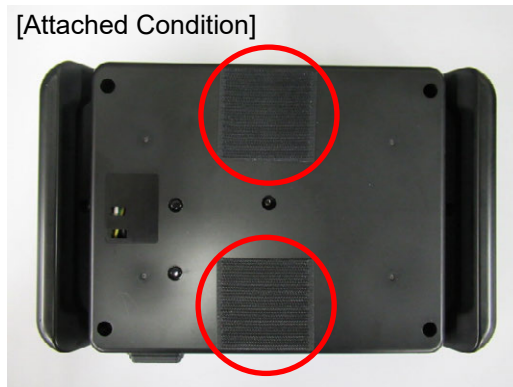

- (2) Magic Band Strap Type (To be attached by user)
Attach the magic bands on the teaching cable as shown in [Attached Condition].
Color: Black, Size: 25mm x 200mm, Manufacturer: Kuraray Fastening Co.,Ltd.

[Appearance]



[Attached Condition]




Attached Condition of Accessories for Cable Tie Fixation




To the fabric fasteners attached on the bottom of the housing, put the magic bands tying the cable to fix the cable.

1.9.8.2 Accessories for Electrostatic Discharge


(3) 3.5mm WtoB/W Connector Housing: Female (To be attached by user)

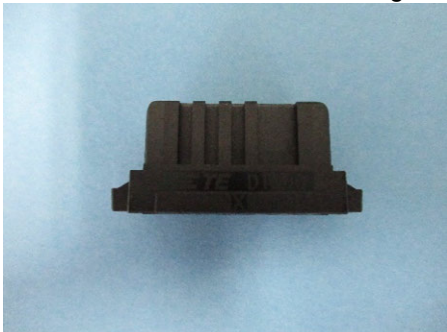


(4) DF62DL-24S-2.2C Connector Housing: Female (To be attached by user)

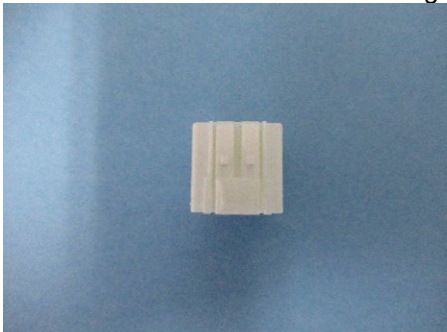

(5) Protection Cap: Female (To be attached by user)

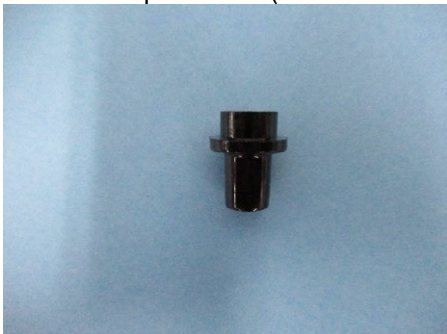

Attached Condition of Accessories for Electrostatic Discharge

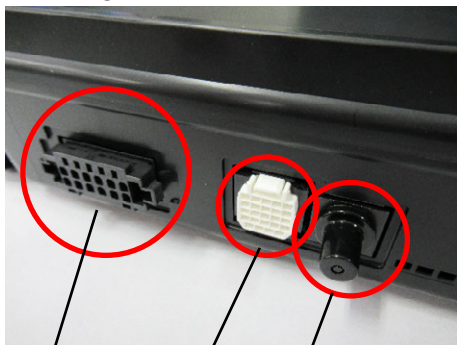


When a cable is not connected, apply the accessories for electrostatic discharge to each connector.

2. Connection

2.1 Connecting with the Controller


Turn the controller power OFF before connecting or disconnecting the touch panel teaching TB-02.

- Caution:**
- Connecting or disconnecting the unit while the controller power is ON could result in faults.
 - Confirm the connector engagement section and connect/disconnect while taking care not to apply excessive force. If the connector does not fit in smoothly, do not push it in with force. Failure to observe this could result in faults.

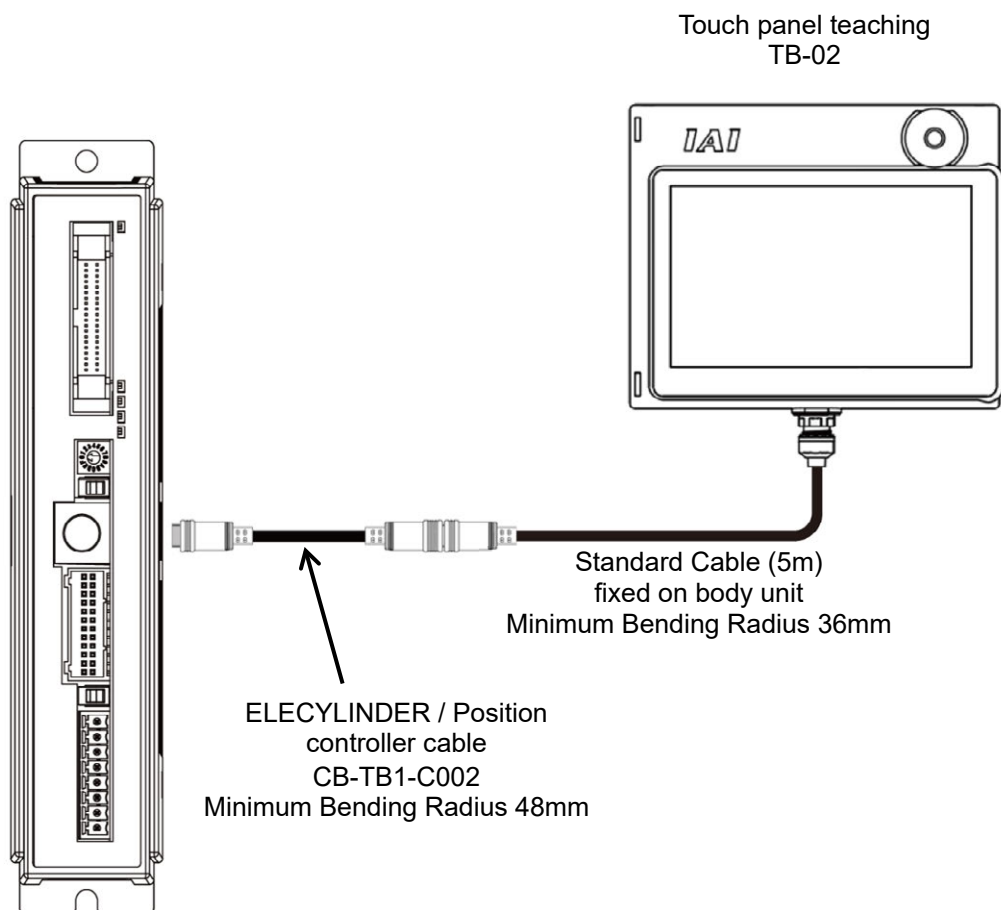

2.2 ELECYLINDER / Position Controller Connection Cable


Model	CB-TB1-C002
Name	TB-02 ELECYLINDER / Position controller connection cable
Controller side connector type	MD connector (JST Mfg. Co., Ltd.)
TB-02 unit side connector type	RP13A-12PH-20SC (71) (HIROSE)
Minimum Cable Bending Radius	48mm

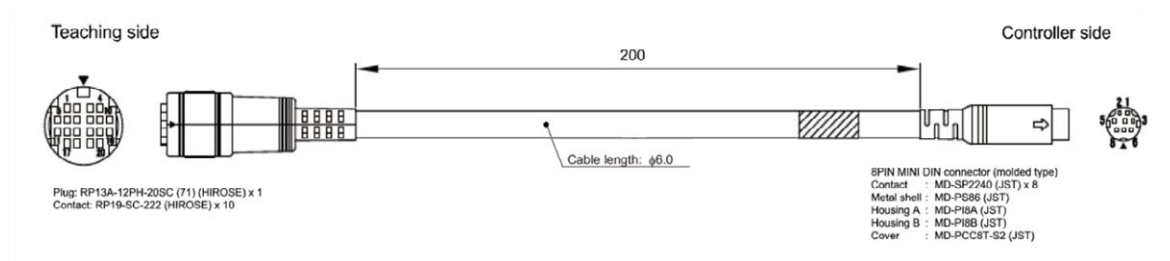

2.3 Safety Category Compliance

It is capable to comply with Safety Categories by connecting TB-02 and TP adapter (RCB-LB-TGS) for position controller and establishing wiring for safety circuit.


Join the Safety Category applicable cable CB-TB1-GC002 to the TB-02 standard cable.

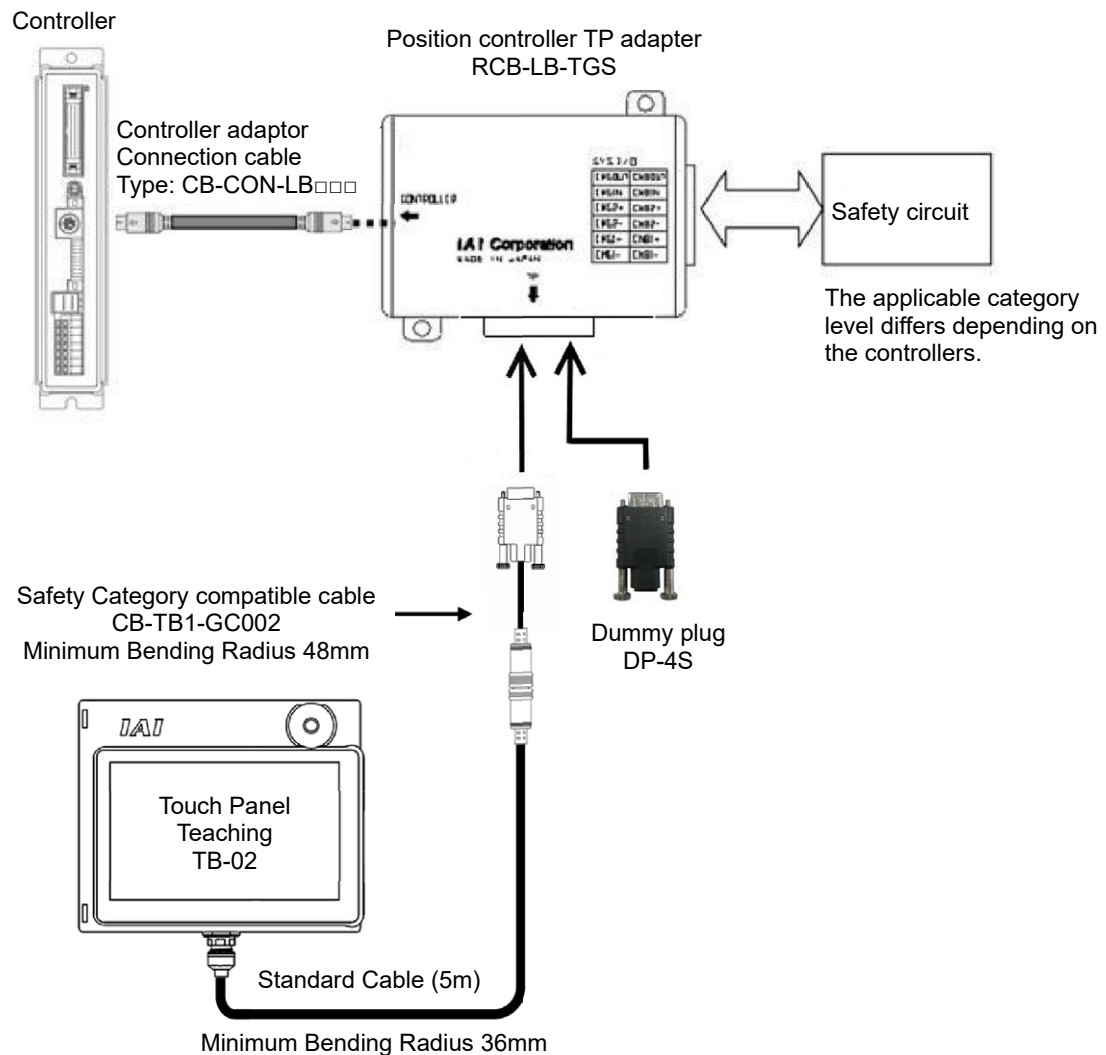


Note: When not connecting the TB-02, always insert a dummy plug DP-4S into the position controller's TP adapter.

2.4 Connection of Actuator Drive Power Supply Unit

2.4.1 Connecting with ELECYLINDER

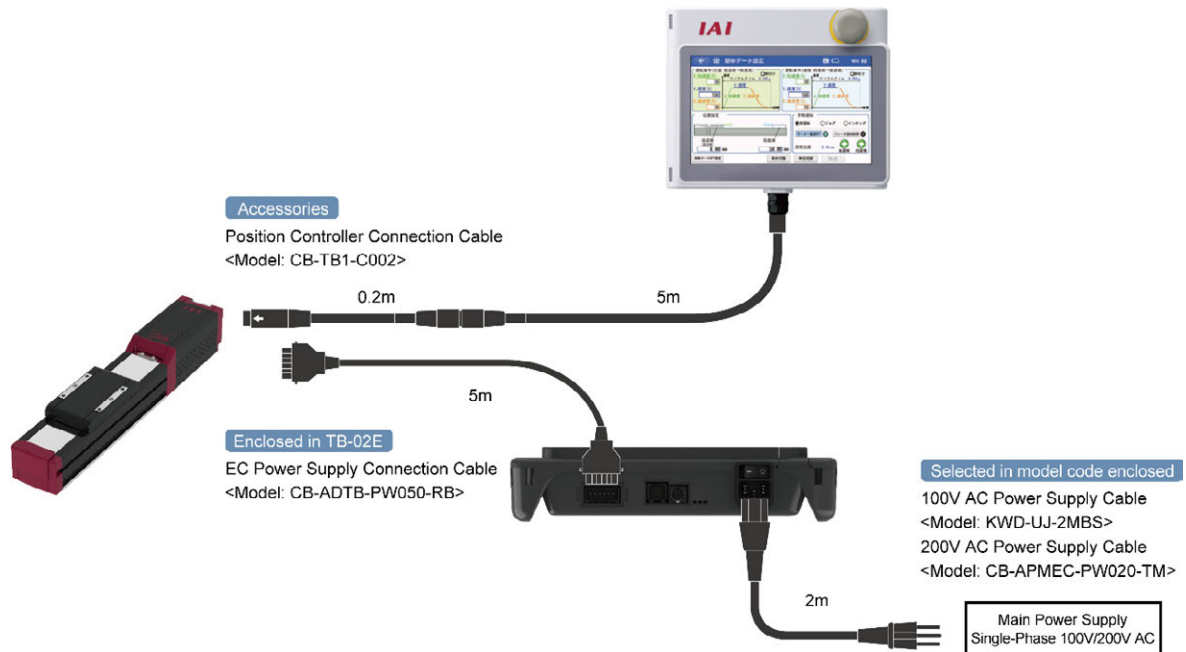

2.4.2 Connecting with ROBOCYLINDER

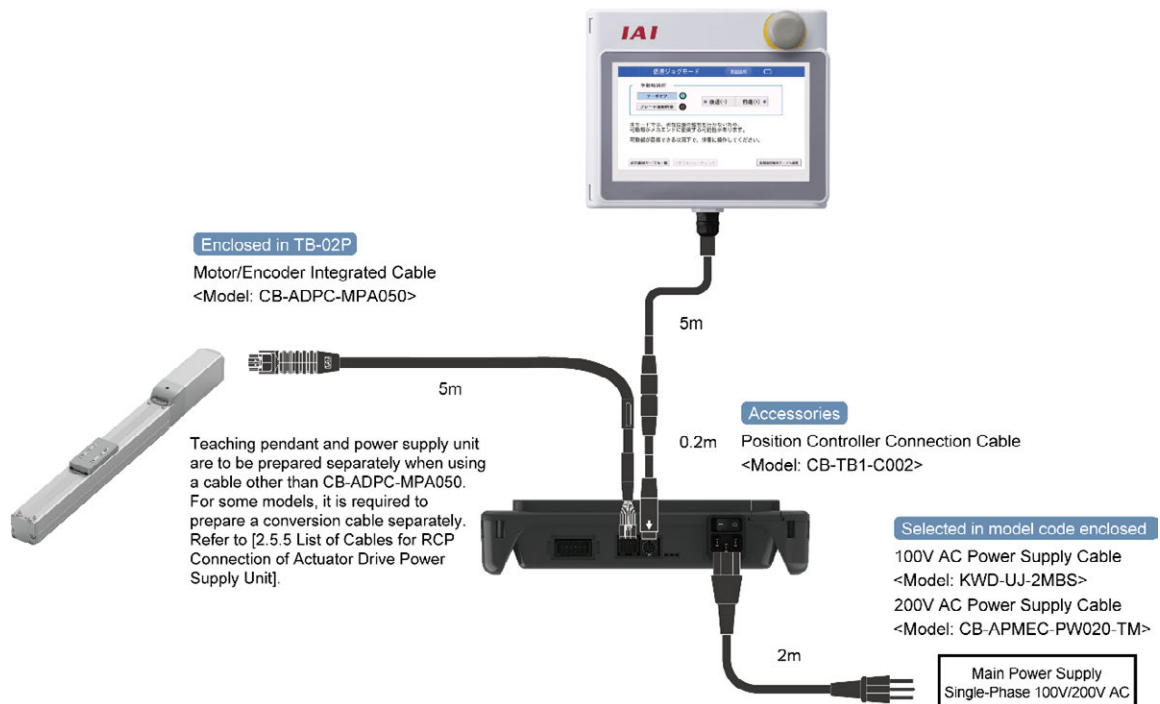




Caution:

- Turn the controller power OFF before connecting or disconnecting the teaching pendant. Putting it on and off while the power supply to the controller is on may cause malfunction.
- Confirm the connector engagement section and connect/disconnect while taking care not to apply excessive force. If the connector does not fit in smoothly, do not push it in with force. Failure to observe this could result in faults.
- Do not attempt to connect (1) and (2) at the same time. It may cause malfunction.




2.5 Actuator Drive Power Supply Unit Connection Cable


2.5.1 EC Power Supply Connection Cable : CB-ADTB-PW□□□-RB

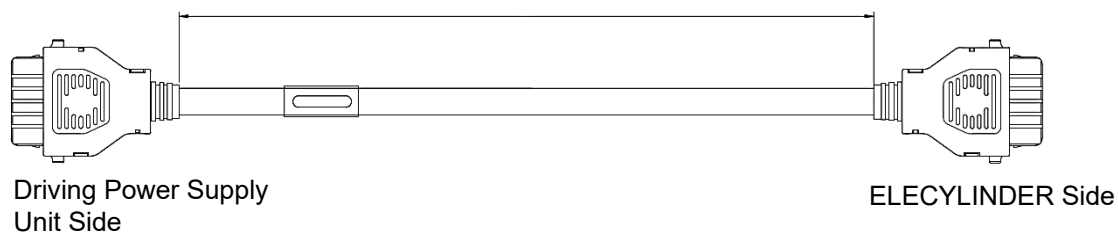


2.5.2 RCP Connection Cable: CB-ADPC-MPA□□□

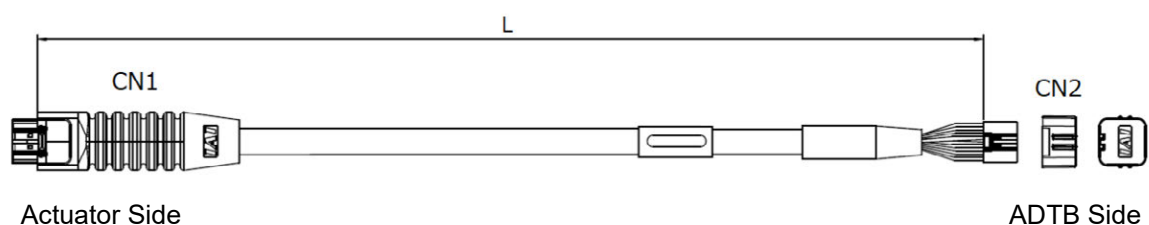

2.5.3 RCP Connection Conversion Cable : CB-CAN-AJ002





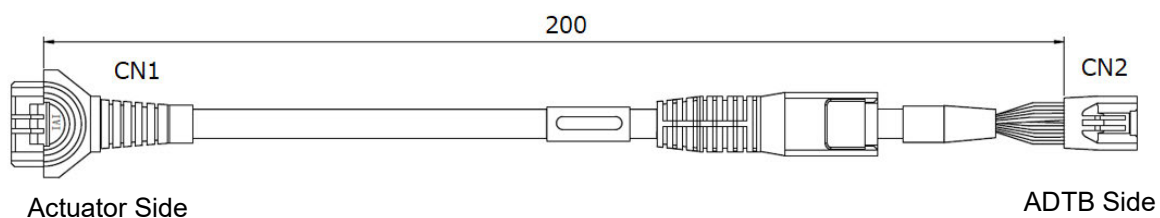








2.5.4 RCP Connection High-Thrust Conversion Cable : CB-ADTBF-AJ002

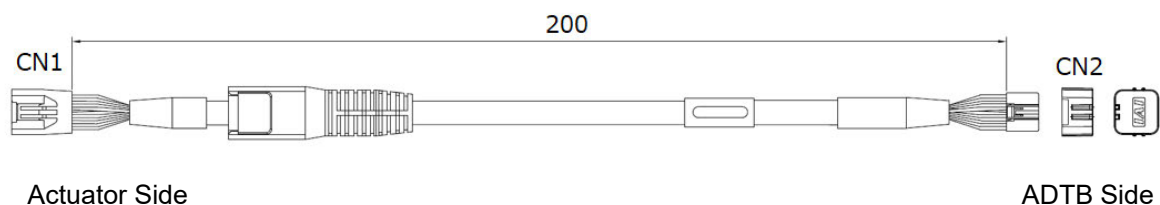

2.5.5 List of Cables for RCP Connection of Actuator Drive Power Supply Unit

It is necessary to prepare the following cables / conversion units when connecting to RCP Series. When using a cable or conversion cable / conversion unit other than CB-ADPC-MPA050, it is necessary to prepare a teaching pendant and power supply unit separately.


Actuator		Connection Cable (-RB: Robot Cable)
Series	Type	
RCP6 RCP6CR RCP6W RCP5 RCP5CR RCP5W	High-Thrust Type (56SP,60P,80P) SA8/WSA16 RA8/RA10/RRA8/WRA16	
	Other than High-Thrust Type	
RCP4 RCP4CR RCP4W	SA3/RA3/ST4525E Gripper Type (All Models) GRSML/GRSLL/GRSWL GRLM/GRL/GRLLW	
	High-Thrust Type (56SP,60P,80P) RA6(56SP)	
	Models Other than Above SA5/SA6/SA7 RA5/RA6(56P) ST615E/ST68E	
RCP3	All Models	
RCP2	RTBS(L), RTCS(L)	
RCP2 RCP2CR RCP2W	GRSS/GRLS/GRST/GRHM/GRHB SRA4R/SRGS4R/SRGD4R	
	High-Thrust Type (56SP,60P,80P) HS8/RA8/RA10	
	Models Other than Above BA□/SA5/SA6/SA7/SS7/SS8 RA2/RA3/RA4/RA6 RGS□C/RGD□C/GR3LS/GR3LM Rotary Type in Standard Environment Specifications RTB(L)/RTBB(L)/RTC(L)/RTCB(L) Grippers in Standard Specifications GRS/GRM	
RCP2CR RCP2W	GRS/GRM/GR3SS/GR3SM Rotary Type (All Models) RTB(L)/RTBB(L)/RTBS(L) RTC(L)/RTCB(L)/RTCS(L)	

* The cable length from ADTB to an actuator should be 20m at maximum regardless of a conversion unit.


Note : Make sure to use a high-thrust conversion cable (CB-ADTBF-AJ002) for the high-thrust type.
As the connector profile is the same, connection can be made without a conversion cable, but control cannot be established without a conversion cable being connected.

2.6 Actuator Drive Power Supply Unit Power Supply Cable

2.6.1 100V AC Power Supply Cable (Model: KWD-UJ-2MBS)

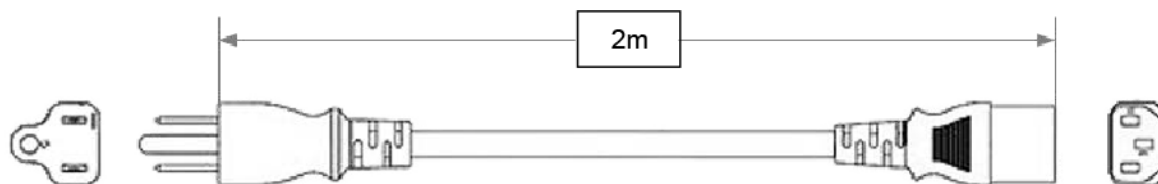

2.6.2 200V AC Power Supply Cable (Model: CB-APMEC-PW020-TM)

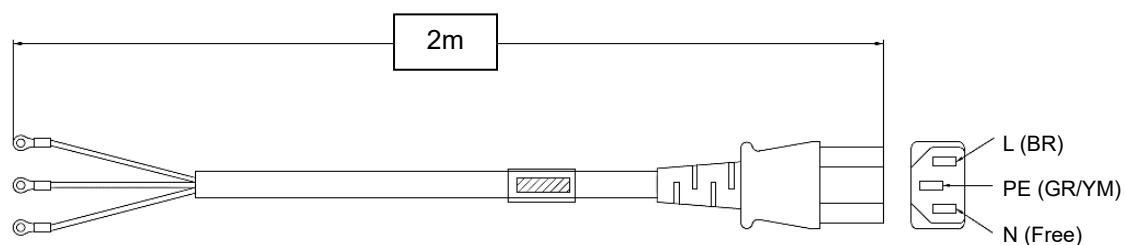

3. Operation of CON Related Controllers


CON related controllers: ACON, DCON, PCON, SCON, SCON2, MCON, MSCON, RCP6S, RCM-P6□C, ERC2, ERC3, RACON, RPCON, RCON-PC/PCF/AC/DC/SC

3.1 Displayed Language Change


The language can be changed by following the steps below.

- Display change from English to Japanese


(1) Touch [Menu2] in Menu1.

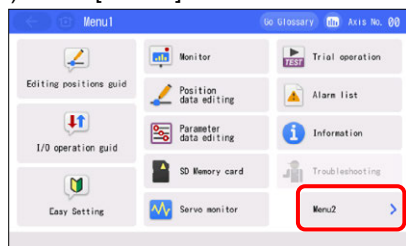


(2) Touch [Environment Setting] in Menu2.

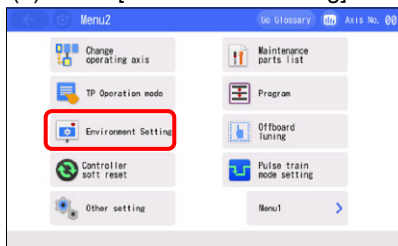

(3) Touch [Japanese].

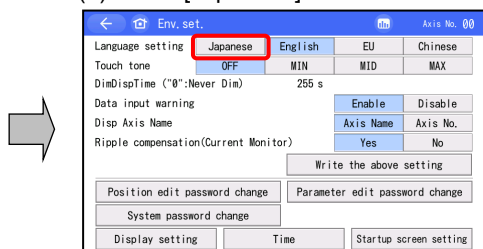

(4) Touch [上記設定を書き込み].

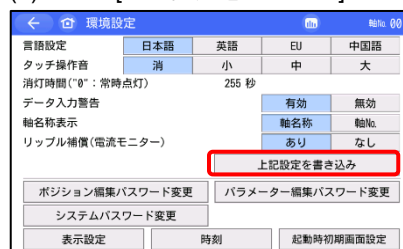


(Note) Skipping to another window without touching 上記設定を書き込み will allow language to go back to that before changed.

- Display change from Japanese to English


(1) Touch [メニュー2] in メニュー1.




(2) Touch [環境設定] in メニュー2.

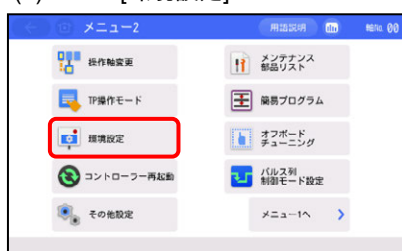

(3) Touch [英語].

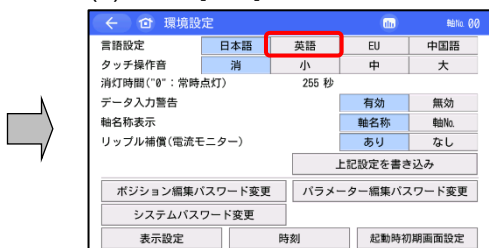


(4) Touch [Write the above setting].

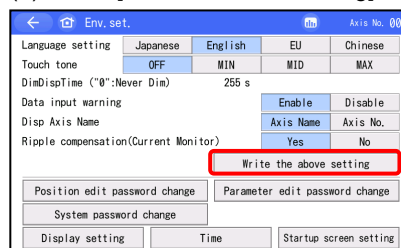


(Note) Skipping to another window without touching Write the above setting will allow language to go back to that before changed.

• Display change from English to Chinese


(1) Touch [Menu2] in Menu1.

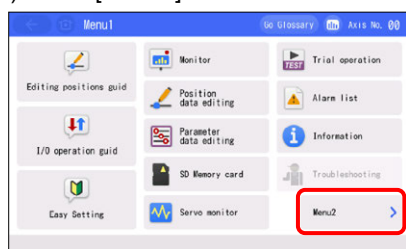


(2) Touch [Environment Setting] in Menu2.

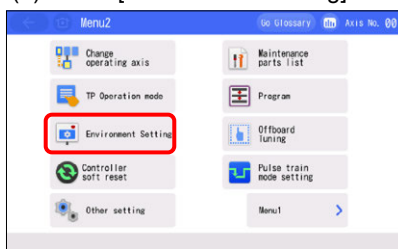

(3) Touch [Chinese].

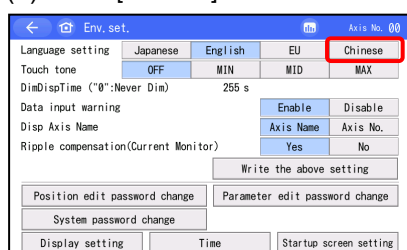

(4) Touch [写入上述设定].

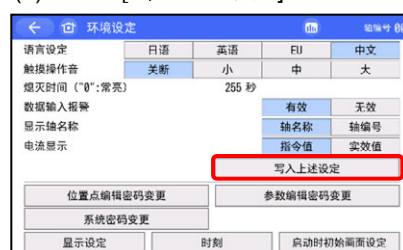


(Note) Skipping to another window without touching **写入上述设定** will allow language to go back to that before changed.

• Display change from Chinese to English

(1) Touch [菜单 2] in 菜单 1.




(2) Touch [环境设定] in 菜单 2.

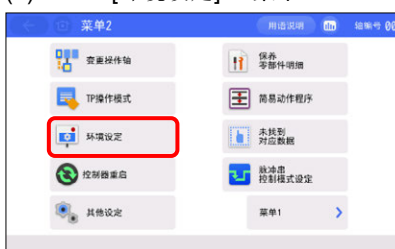

(3) Touch [英语].




(4) Touch [Write the above setting].

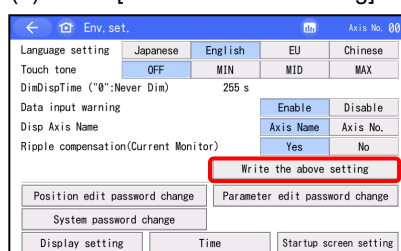


(Note) Skipping to another window without touching **Write the above setting** will allow language to go back to that before changed.

3.2 Operating Menu





Operating menu when the touch panel teaching pendant TB-02 is connected to a CON related controller is shown. (It may not be displayed for some controllers.)

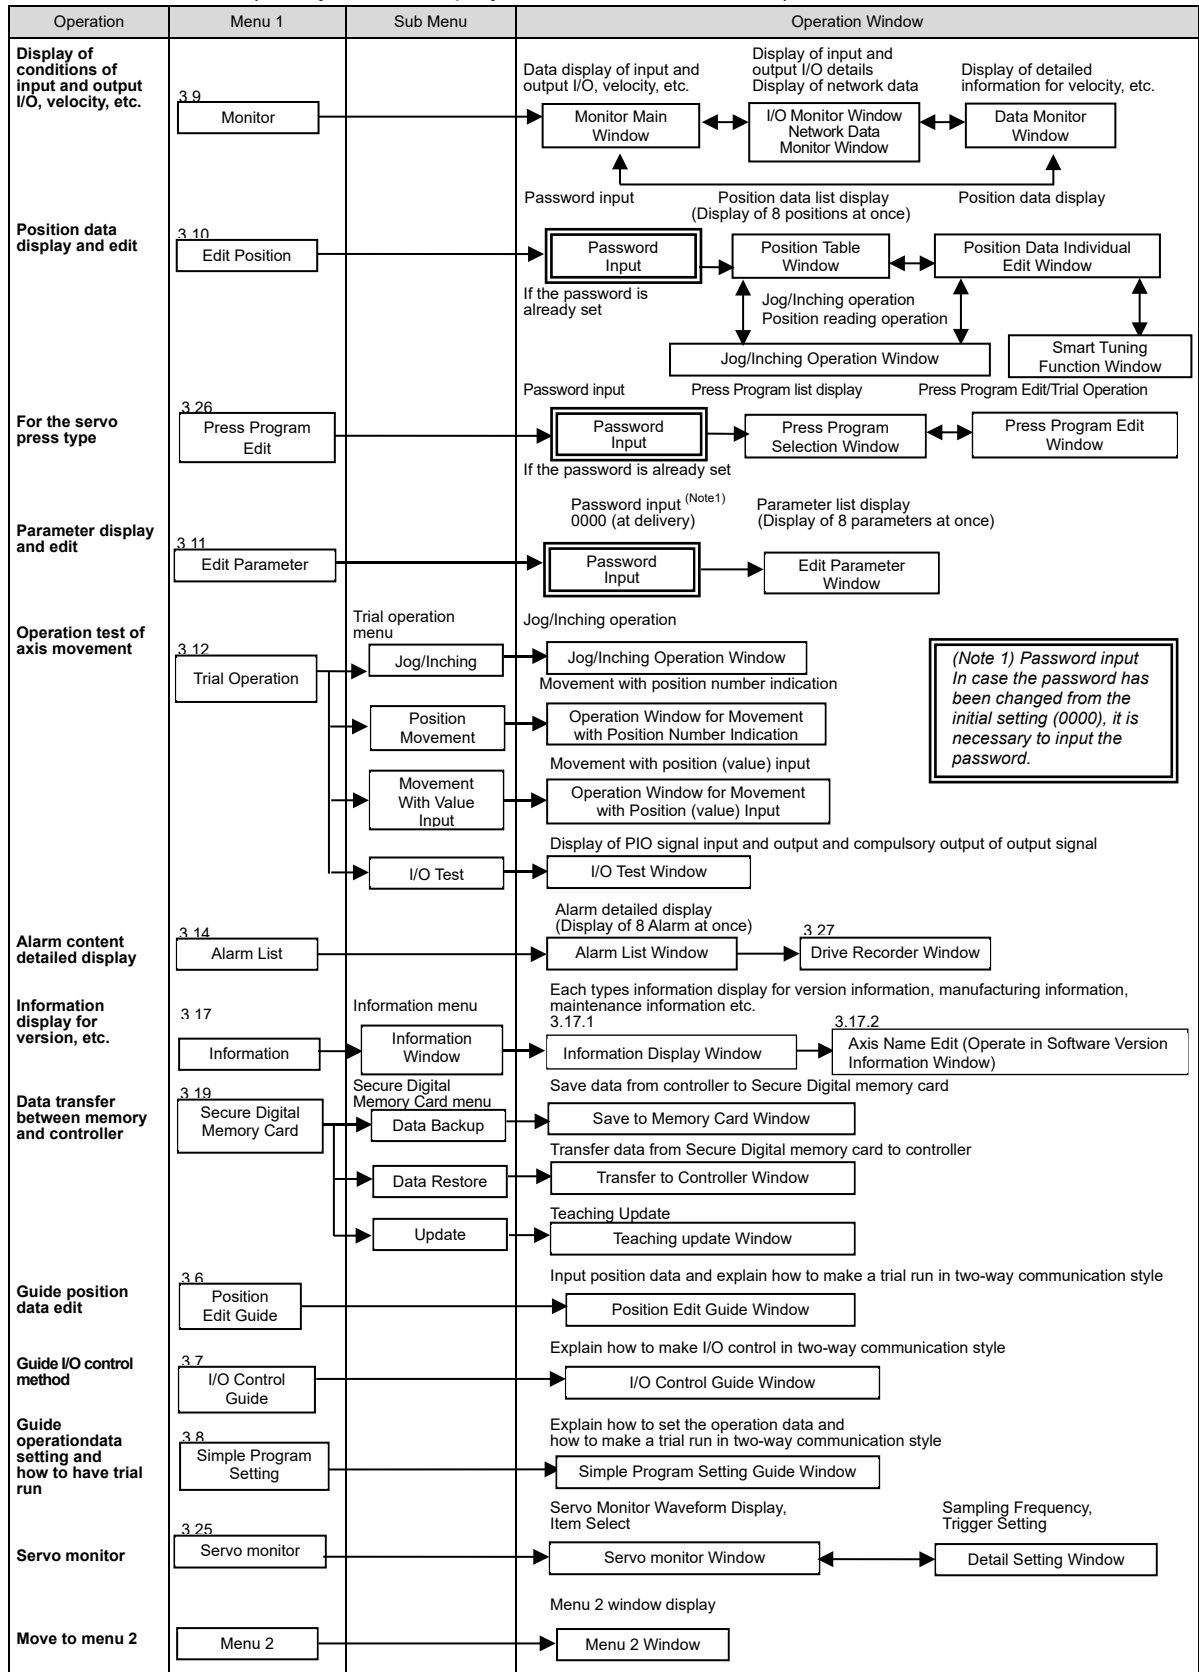

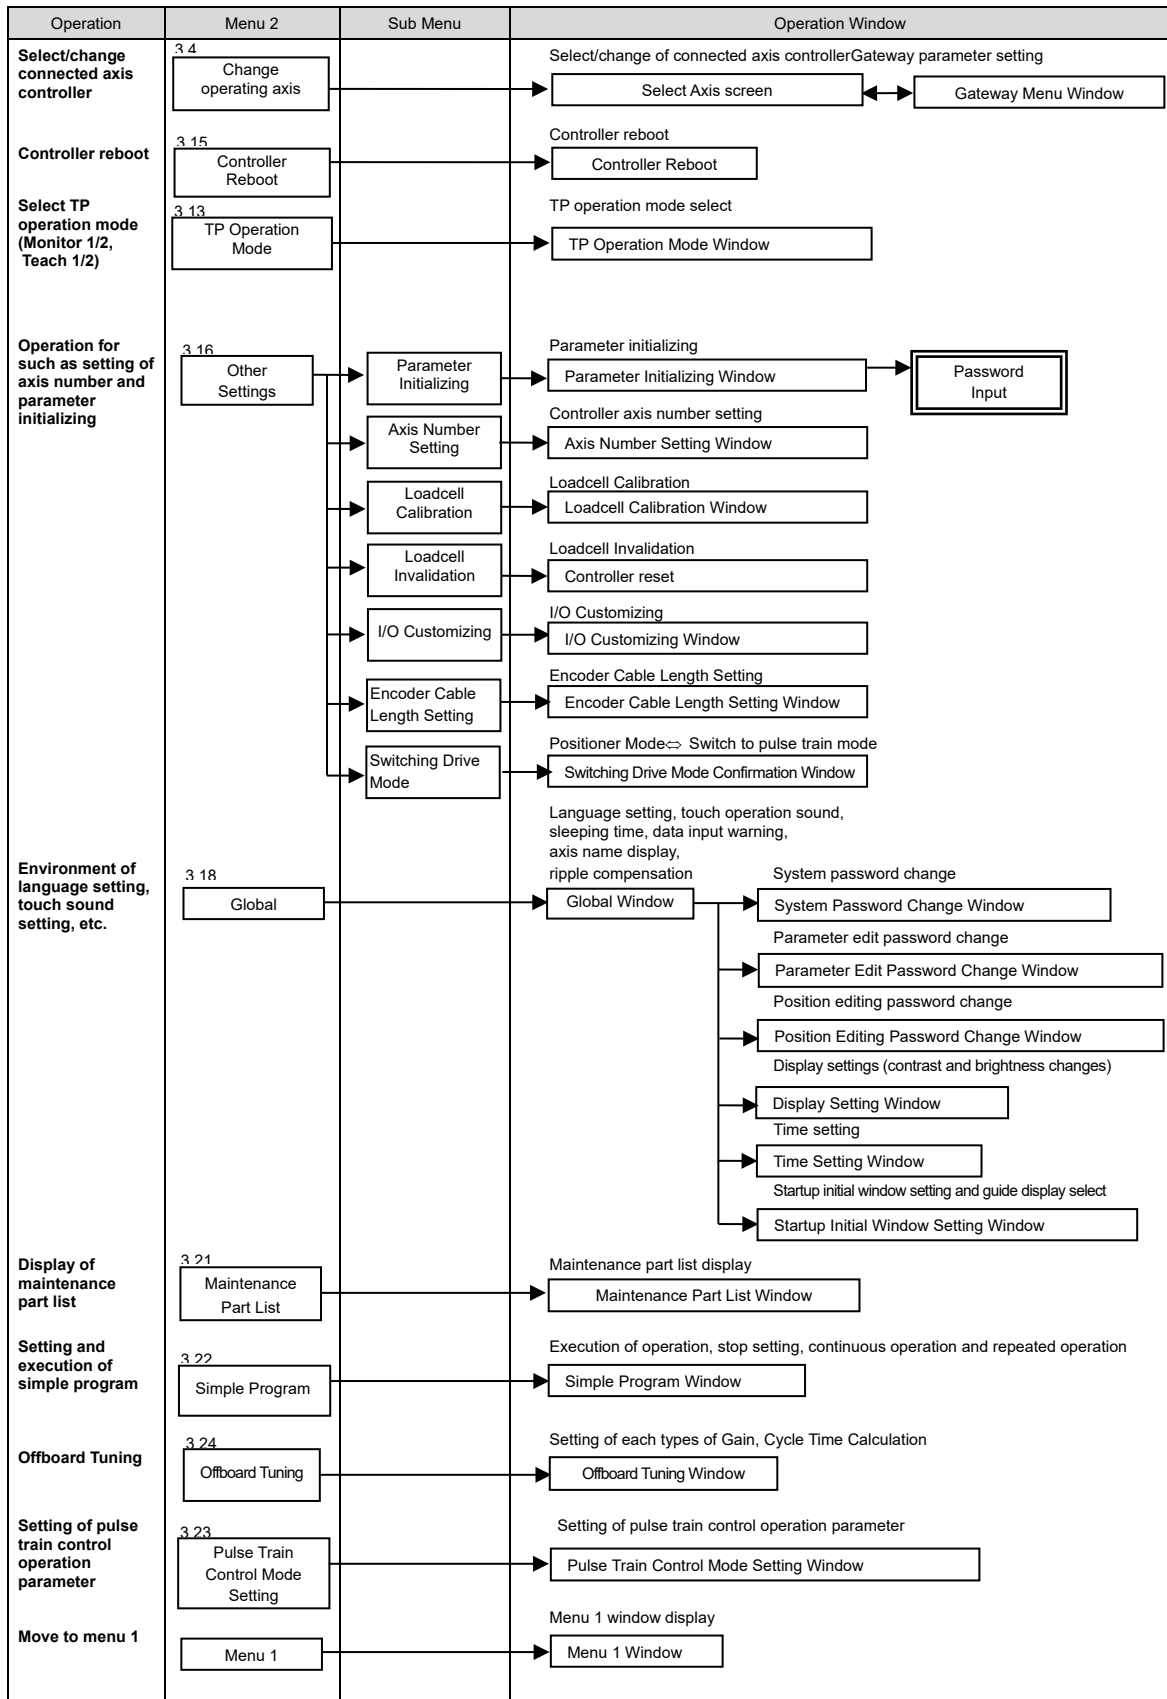

3.3 Initial Screen


When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen of the touch panel teaching pendant and then the version information is displayed.

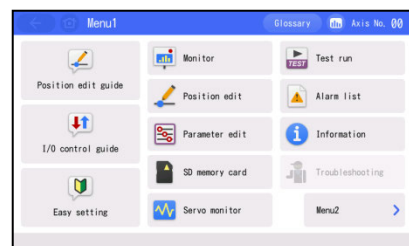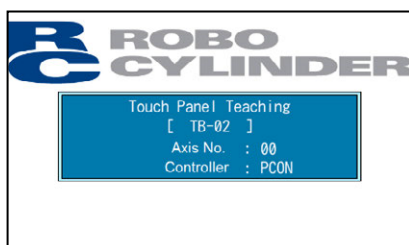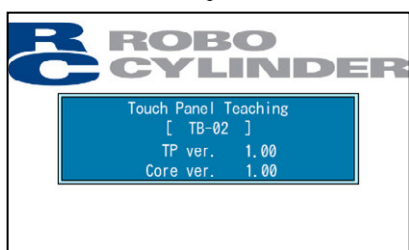

The Menu 1 screen appears.

When Multiple Units Connected


If multiple units are connected, the axis selection screen appears.

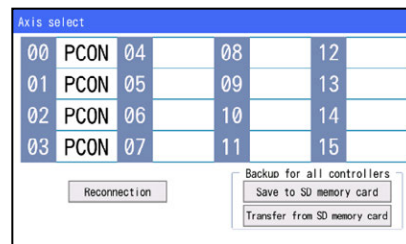

Select an axis to be operated with TB-02. Refer to [3.4, "Changing Operating Axis."]


Enable Unmatched

1. On TB-02 pendants, this screen is displayed when the enable function parameter of the controller is set to "Enable."

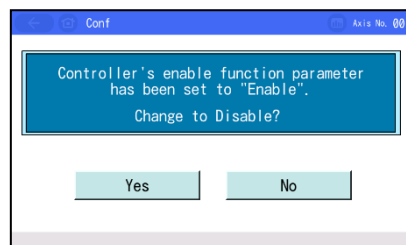

Select either [Yes] (Inactivate Enable Feature) or [No] (Activate Enable Feature).

2. On TB-02D pendants, this screen is displayed when the enable function parameter of the controller is set to "Disable."

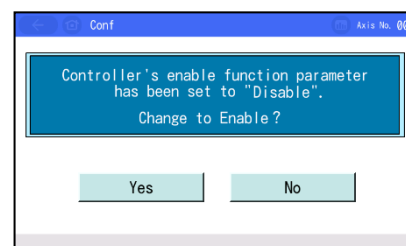


Select either [Yes] (Activate Enable Feature) or [No] (Inactivate Enable Feature).

3.4 Changing Operating Axis


If multiple controllers are connected to the communication line, the axis selection screen appears.

Also, it opens by touching [Change operation axis] in the Menu 2 screen or [Axis Select] in the Gateway Menu screen.


If only one controller is connected, you need not select an axis.

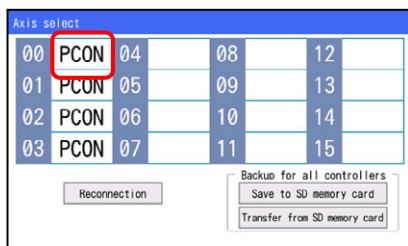

Select the axis to be operated in the touch panel teaching pendant and touch it.

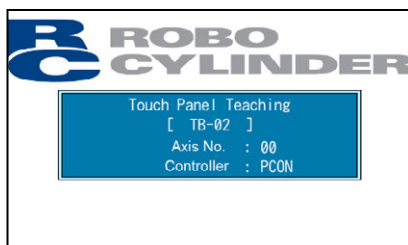


Connection with the selected controller axis starts.

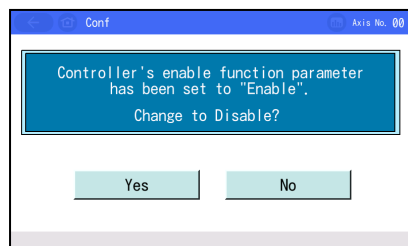

The following screen is shown when the enable feature parameter of the controller is valid in TB-02.

Select either [Yes] (Inactivate Enable Feature) or [No] (Activate Enable Feature).

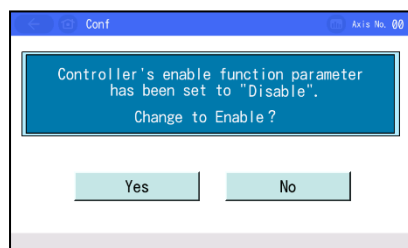


The following screen is shown when the enable feature parameter of the controller is invalid in TB-02D.

Select either [Yes] (Activate Enable Feature) or [No] (Inactivate Enable Feature).



When connection with the controller is established, the Menu 1 screen appears.

3.5 Menu Selection

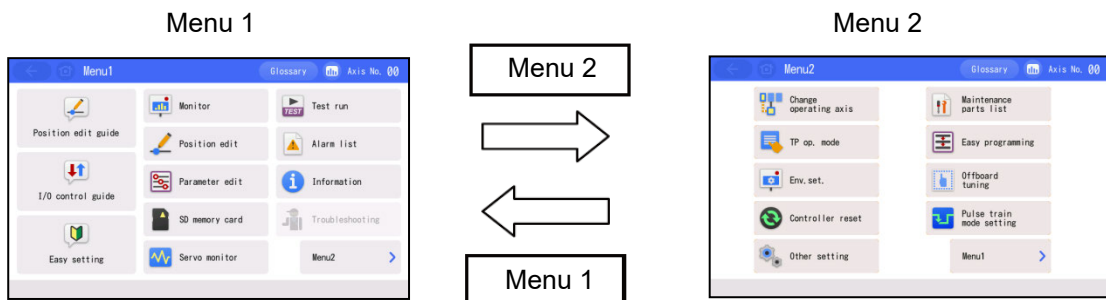

Two menu selection screens, Menu 1 and Menu 2, are available.
Touching [Menu2] on the Menu 1 screen changes the display to the Menu 2 screen.
Touching [Menu1] on the Menu 2 screen changes the display to the Menu 1 screen.



- 1) **Menu 1 (Virtual Axis)** Screen Name : Shows the name of a screen.
A virtual axis should be displayed as (Virtual Axis).
- 2) Monitor Button : Opens the Monitor Screen
- 3) **Axis No. 00** Change operating axis Button : Shows Select Axis screen.
(It should not function in a screen available to operate axes)
- 4) Return Button : Returns to Previous Screen
- 5) Home Button : Returns to Menu 1 Screen
- 6) **Glossary** Glossary Button : Shows the Explanation Screen for Terms
- 7) Stop Status Icons An icon should blink in the following status.
 - The "STOP" icon should be displayed in a stop status.
Press and hold the icon and the "202: Stop" message should be displayed.
 - The "ENG" icon should be displayed in an emergency stop status.
Press and hold the icon and the "202: Emergency stop" message should be displayed.
 - The "MP" icon should be displayed in a motor voltage drop status.
Press and hold the icon and the "203: Motor Voltage Drop" message should be displayed.
 - The "ENB" icon should be displayed in a disable status.
Press and hold the icon and the "226: Enable Circuit Open" message should be displayed.
 - The "Safe" icon should be displayed in the stop status in STO/SS1-t in the safety function or driver stop status.
Press and hold the icon and the "225: STO/SS1-t" or "206:DRV-STOP" message should be displayed.

Described below are the functions of each button on the menu selection screen.

[Menu 1]

There are the following menus in Menu 1. Touch either of them to select it.

The screen should shift to the touched menu.

- Position edit guide Explains how to input position data and how to make a trial run in two-way communication style using the actual position data edit screen.
Refer to [3.6 Position Edit Guide]
- I/O control guide Explains with actual operation how to perform positioning operation by I/O control when PIO Pattern is set to 0 in two-way communication style. Refer to [3.7 I/O Control Guide]
- Easy setting Conducts data setting necessary for the requested operation from the sample program and then makes a trial operation in order in two-way communication style. Refer to [3.8 Simple Program Setting]
- Monitor Displays the actuator status, I/O signal status, maintenance information and manufacturing information. Refer to [3.9 Monitor]
- Position edit Conduct setting for position, velocity and acceleration / deceleration in order to operate an actuator. Refer to [3.10 Position Edit]
- Pressing program edit It should be displayed when a servo pressing type controller (SCON-CB-F/SCON2-CG-F) is connected. Refer to [3.26 Pressing Program Edit]
- Parameter edit Conduct parameter tunings to adjust system, to use additional features and so on. Refer to [3.11 Parameter Edit]
- SD memory card Conduct readout of each type of data such as position data, parameters and alarm list, and save them and teaching update.
- Servo monitor The actual operation status of the actuator is displayed in a waveform. It is available to record the displayed data. Refer to [3.25 Servo Monitor]
- Test run Conduct manual operation with JOG, Inching and number indication and also make a trial run of I/O. Refer to [3.12 Trial Run]
- Alarm list Shows a list of alarms and the time when they occurred. Refer to [3.14 Alarm List]
- Information Shows the software version, network information, manufacturing information, maintenance information and models available for connection. Refer to [3.17 Information Display]
- Troubleshooting Shows the contents of an alarm and the countermeasure when an alarm has been generated.

[Menu 2]


There are the following menus in Menu 2. Touch either of them to select it.
The screen should shift to the touched menu.

- Change operating axis Select an axis to operate when multiple units of controllers are connected to the communication line. Refer to [3.4 Operation Axis Change]
- TP op. mode Switch over between forbidden and permitted for PIO operation and between invalid and valid for the safety velocity. Refer to [3.13 TP Operation Mode]
- Env. set. Conduct settings for display language, touch sound, turn-off time, data input warning, axis name display, ripple compensation, password, display, clock and initial window setting at startup. Refer to [3.18 Environment Setting]
- Controller reset Restart the controller. Refer to [3.15, Restarting Controller.]
- Other setting Conduct parameter initializing and axis number, loadcell calibration, loadcell invalidation, I/O customizing change, switching drive mode. Refer to [3.16 Other Settings]
- Maintenance parts list Displays information of maintenance parts. Refer to [3.21 Maintenance Part List]
- Easy programming It is a window that enables setting of movement between positions, timer and repeated operation by indicating number, and to have continuous operation manually. Refer to [3.22 Simple Program]
- Offboard tuning Setting of optimum controlling parameters, each types of gain and calculation of cycle time are performed. Refer to [3.24 Offboard tuning]
- Pulse train mode setting Conduct the settings to have the pulse train control. Refer to [3.23 Pulse Train Control Mode Setting]

[When Alarm Occurred]

When an alarm generates, the corresponding alarm code and message will appear at the bottom of the screen and the background color will change to orange (Red for some alarms).


Touch the gray part at the bottom of the window that the alarm information is displayed, and the screen switches to the display window of alarm details.

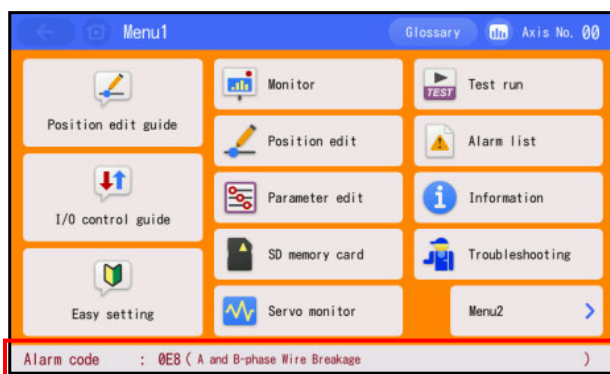

3.6 Position Edit Guide

In the guide, explains how to input position data and how to make a trial run in two-way communication style using the actual position data edit screen.

Operate in the order of [Introduction] → [Item select] → [Position input] → [Test run] → [End].

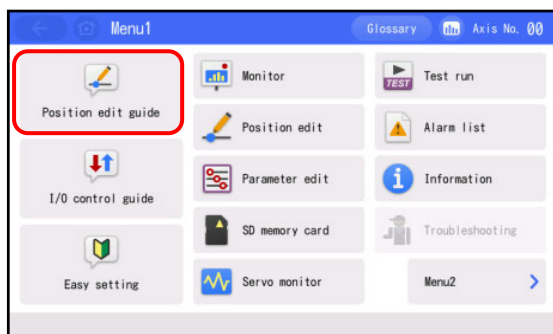





Touch [Position edit guide] icon.

After that, follow the instruction on the screen to operate.

Touch [←] button and the screen goes back to the previous window.

Some processes may be skipped depending on the actuator condition.




For the terms bracketed with “ ”, touch [Glossary] at the bottom right of the screen and the explanation can be confirmed.

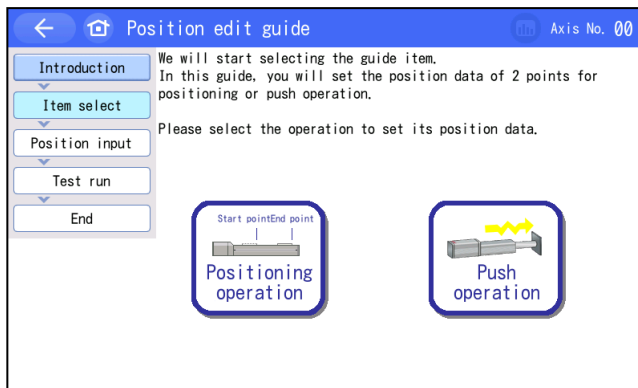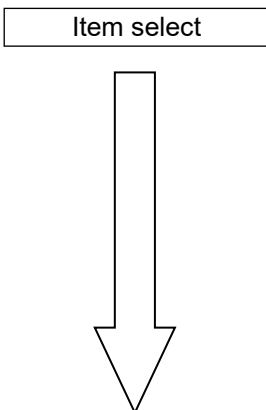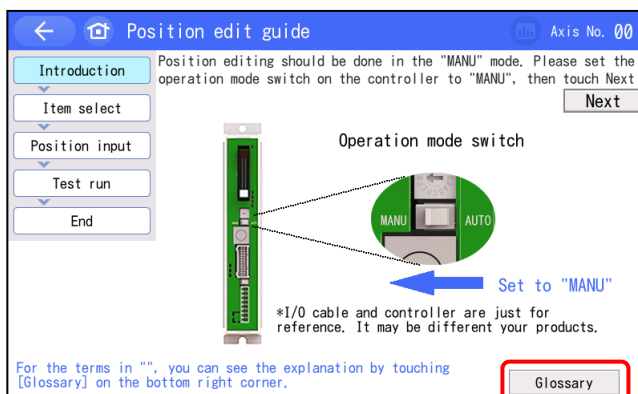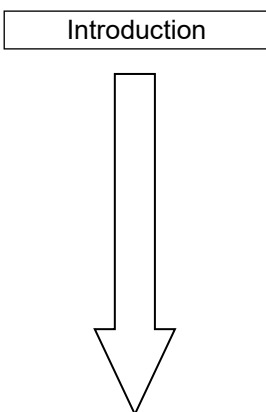


Position input

Positioning operation


Push operation

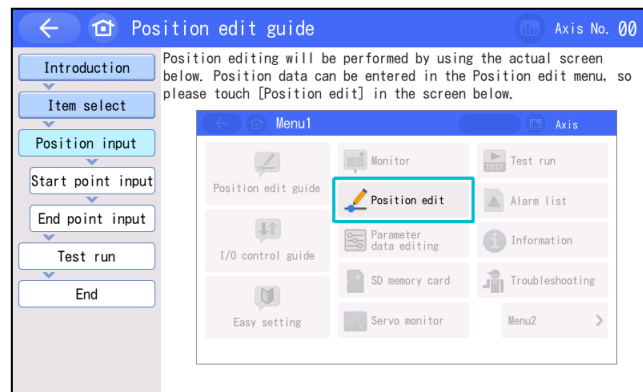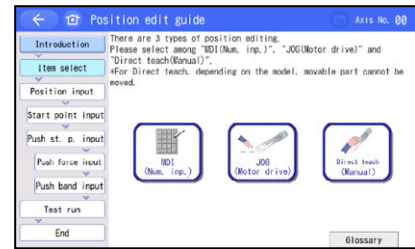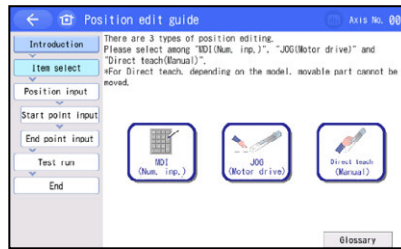


Test run

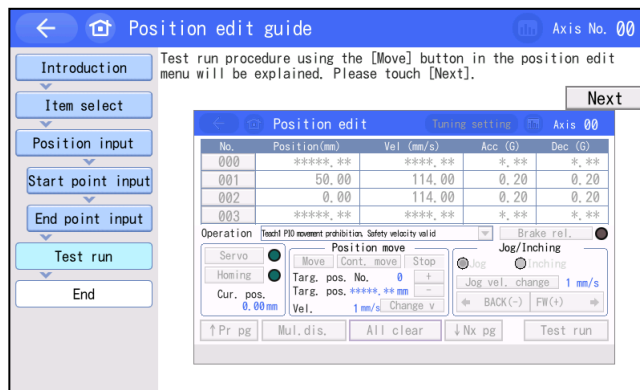

End

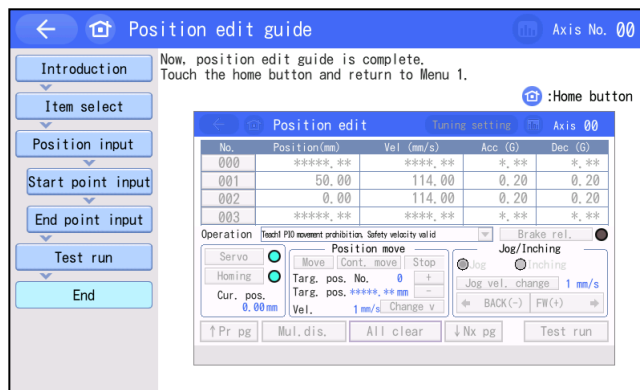


 Touch the home button to return to Menu 1 screen.


3.7 I/O Control Guide

Here, explains with actual operation how to perform positioning operation by I/O control when PIO Pattern is set to 0 in two-way communication style.

Perform operation in order of [Introduction] → [Servo ON] → [Release of pause] → [Homing] → [Expl. for pos.] → [Positioning] → [End].

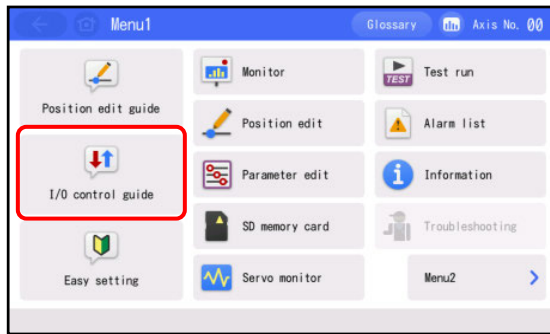

Touch [I/O control guide] icon.

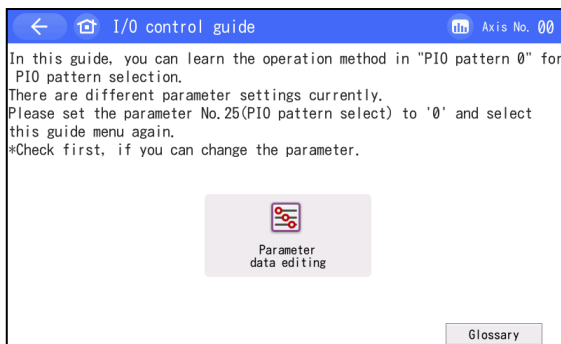

This window appears when PIO Pattern Select is set to a number except for "0".

Confirm that there would be no problem if a change is made to the parameter, set PIO Pattern Select to "0", and then select this guide menu.



Follow the following descriptions to perform operation.

Touch [←] button to return to the previous screen.



There may be some procedures to skip depending on the condition of the actuator.

Also, for those terms marked with " ", explanation can be checked by touching [Glossary] on the right bottom of the screen.



Introduction

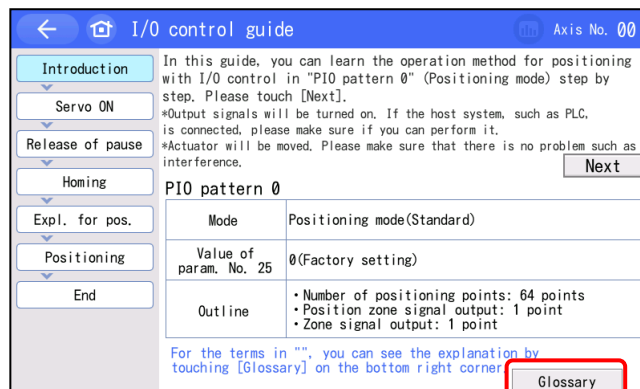



Servo ON

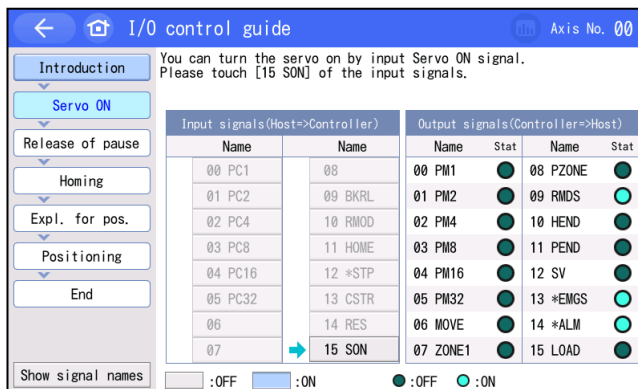



Release of pause

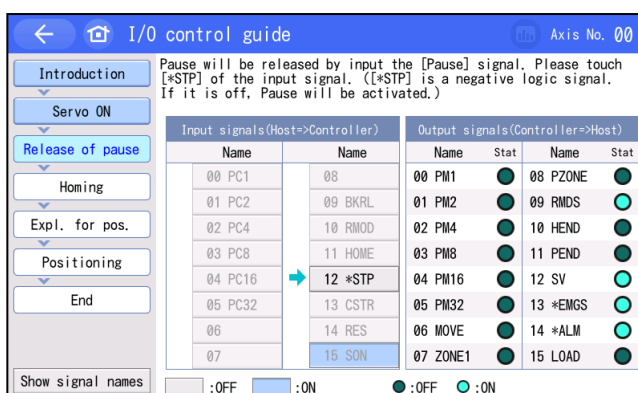


Homing

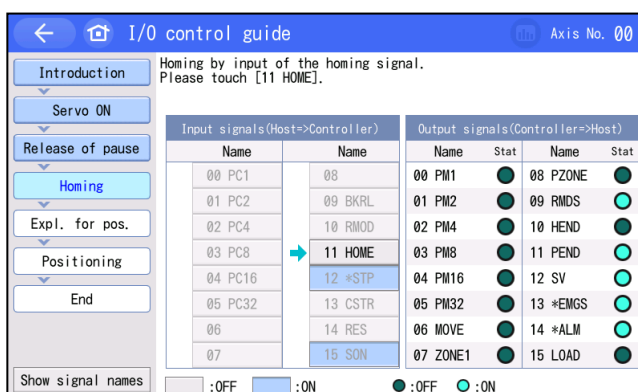

Expl. for pos.

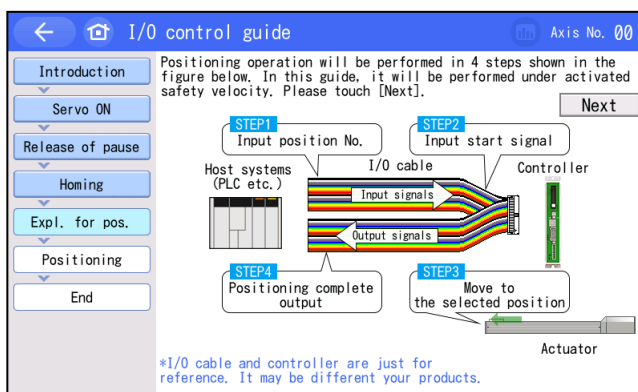

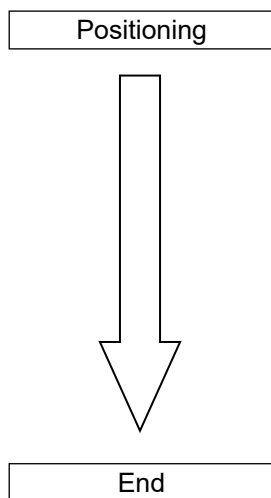

← I/O control guide Axis No. 00

Introduction When you touch PC1*32, you can see the selected position No.. After confirming the indicated position No., touch [Next]. You can see the set position data and an example of selecting a position by touching the button on the bottom left corner. Next

Servo ON

Release of pause

Homing

Expl. for pos.

Positioning

End

Check position data Example of selecting a position Show signal names

Input signals(Host->Controller)		Output signals(Controller->Host)			
Name	Name	Name	Stat	Name	Stat
00 PC1	08	00 PM1	●	08 PZONE	●
01 PC2	09 BKRL	01 PM2	●	09 RMDS	●
02 PC4	10 RMOD	02 PM4	●	10 HEND	●
03 PC8	11 HOME	03 PM8	●	11 PEND	●
04 PC16	12 *STP	04 PM16	●	12 SV	●
05 PC32	13 CSTR	05 PM32	●	13 *EMGS	●
06	14 RES	06 MOVE	●	14 *ALM	●
07	15 SON	07 ZONE1	●	15 LOAD	●

Selected position 000

← I/O control guide Axis No. 00

Introduction I/O control guide is complete. Please touch the home button to return to Menu 1. :Home button

Servo ON

Release of pause

Homing

Expl. for pos.

Positioning

End

Check position data Example of selecting a position Show signal names

Input signals(Host->Controller)		Output signals(Controller->Host)			
Name	Name	Name	Stat	Name	Stat
00 PC1	08	00 PM1	●	08 PZONE	●
01 PC2	09 BKRL	01 PM2	●	09 RMDS	●
02 PC4	10 RMOD	02 PM4	●	10 HEND	●
03 PC8	11 HOME	03 PM8	●	11 PEND	●
04 PC16	12 *STP	04 PM16	●	12 SV	●
05 PC32	13 CSTR	05 PM32	●	13 *EMGS	●
06	14 RES	06 MOVE	●	14 *ALM	●
07	15 SON	07 ZONE1	●	15 LOAD	●


:OFF :ON ●:OFF ●:ON

Touch the home button to return to Menu 1 screen.

3.8 Easy Program Setting

Conducts data setting necessary for the requested operation from the sample program and then makes a trial operation in order in two-way communication style.

Perform operation in order of [Sample program select] → [Stop p.select] → [Position d. create] → [Test run] → [End].

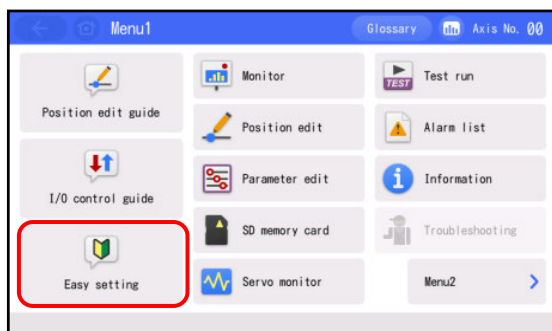

Touch [Easy setting] icon.


Follow the following descriptions to perform operation.

Touch [←] button to return to the previous screen.




There may be some procedures to skip depending on the condition of the actuator.

Also, for those terms marked with “”, explanation can be checked by touching [Glossary] on the right bottom of the screen.


Sample program
select




Stop p. select

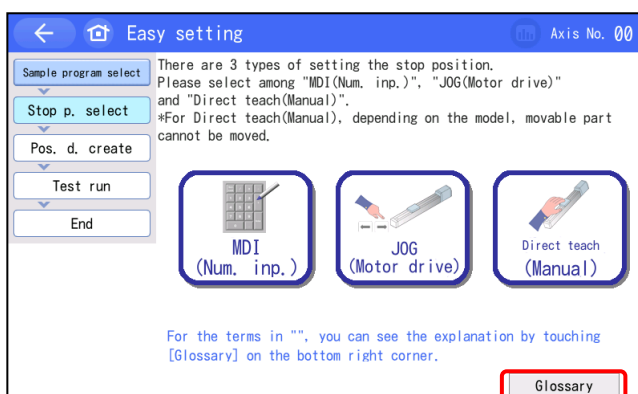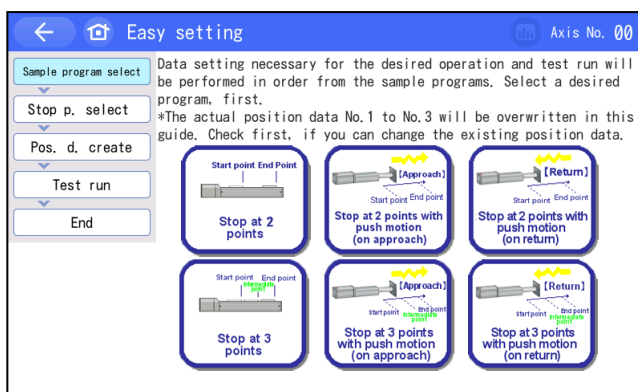



Pos. d. create



Test run



End

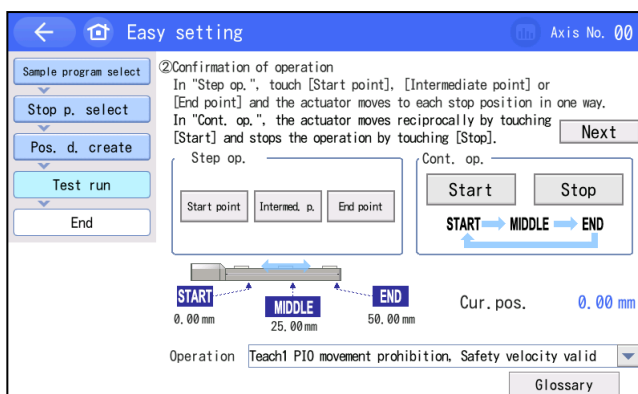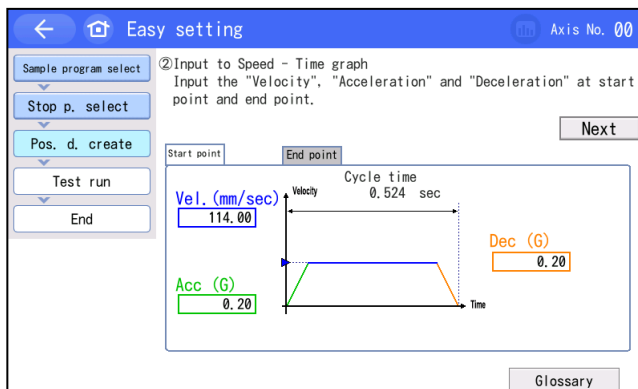


No.	Position	Position (mm)	Vel. (mm/sec)	Acc (G)	Dec (G)	Push force (%)	Pos band (mm)
No. 1 (St. p.)	Positioning	0.00	114.00	0.20	0.20	0	0.10
No. 2 (In. p.)	Positioning	25.00	114.00	0.20	0.20	0	0.10
No. 3 (End p.)	Positioning	50.00	114.00	0.20	0.20	0	0.10

Touch the home button to return to Menu 1 screen.


3.9 Monitor

The I/O statuses, current position and other information of the controller connected are displayed.

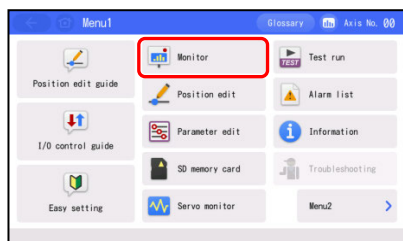

Touch [Monitor] on the Menu 1 screen.

If the TP operation mode is not Monitor Mode 1 or 2, the following message screen appears.

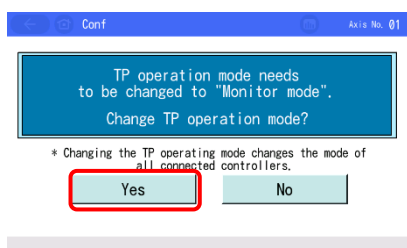


Touch [Yes] to change to Monitor Mode 1 or 2.
If not, touch [No].

(Note) The safety speed does not change.


If the current mode is Teaching Mode 1, it changes to Monitor Mode 1.
If the current mode is Teaching Mode 2, it changes to Monitor Mode 2.

Note: For the multiple-axis controllers, TP Operation Mode of all the controllers should change.

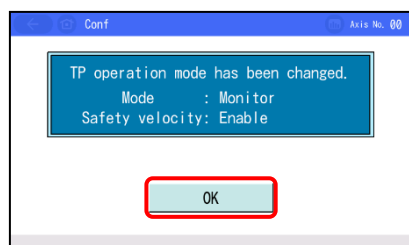

Touch [OK].


The main monitor screen appears.

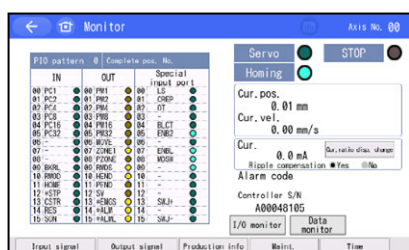


The items and buttons to be shown will differ depending on the controller models.
The signal names to be shown will also differ depending on the controller models and operation patterns.

3.9.1 Monitor Screen


3.9.1.1 Monitor Main Screen

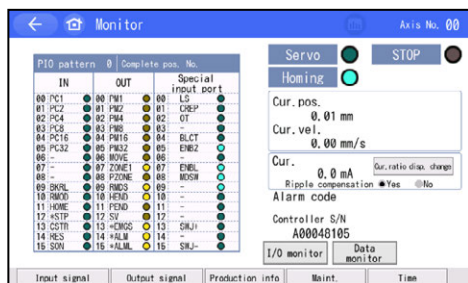


Positioner Mode

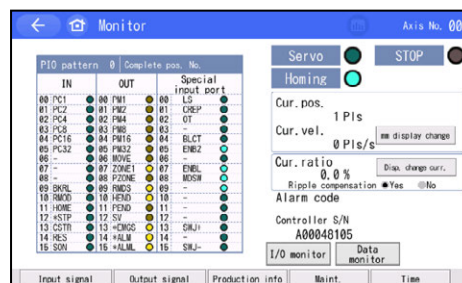

Pulse Train Mode

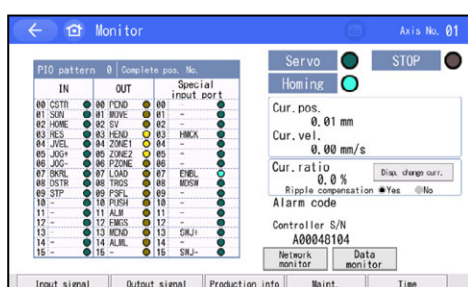

Network Type

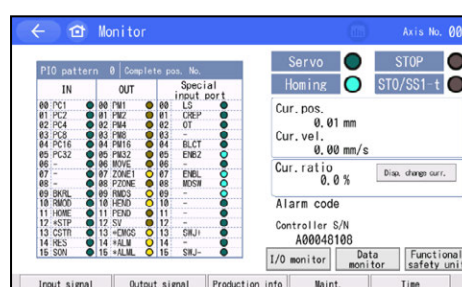

Equipped with Functional Safety Unit

Touch [I/O monitor] and the I/O monitor screen will be displayed. Refer to [3.9.1.2 I/O Monitor Screen]
 Touch [Data monitor] and the data monitor screen will be displayed. Refer to [3.9.1.3 Data Monitor Screen] (For Network Type Single Axis Controllers)
 Touch [Network monitor] and the network data monitor window opens. (For the network type single axis controllers) Refer to [3.9.1.5 Network Data Monitor Screen]
 Touch [Functional safety unit] and the functional safety unit screen will be displayed. (For equipped with functional safety unit) Refer to [3.9.1.6 Functional Safety Unit Monitoring Screen]

Touch [Input signal] and the term explanation screen for input signals will be displayed.
 Touch [Output signal] and the term explanation screen for output signals will be displayed. } Refer to [3.9.1.4 Glossary Screen for Input and Output Signals]

Touch [Production info] and the manufacturing information screen will be displayed. Refer to [3.17 Information Display]
 Touch [Maint.] and the maintenance information screen will be displayed. Refer to [3.9.2 Maintenance Information Screen]
 Touch [Time] and the controller clock setting screen will be displayed. Refer to [3.9.3 Time Setting Screen for Controller]

Touch [Disp. change cur.] and the value of current will be displayed.
 Touch [Cur. ratio disp. change] and the current ratio will be displayed.

For Pulse Train Control Mode

Touch [Disp. change pulse] and the current position is shown in Pls and the current velocity in Pls/s.
 Touch [mm display change] and the current position is shown in mm and the current velocity in mm/s.

[Displayed Items]

- PIO pattern The PIO pattern number set to the controller is shown.
- Complete pos. No The position number achieved upon completion of positioning is shown.
- IN The status of each input port is shown. ON is lit. OFF is unlit.
- OUT The status of each output port is shown. ON is lit. OFF is unlit.
- Special input port The statuses of the enable switch, etc., are shown. ON is lit. OFF is unlit.
- Servo The servo ON status is shown. ON is lit. OFF is unlit.

- Homing The home return status is shown. It on when the home-return operation is complete, and off when incomplete.
- Stop It shows the status of stop. It is on when it is stopped. It turns off when the stop condition is released.
- STO/SS1-t It shows the status of STO/SS1-t for STO/SS1-t type of SCON-CB/SCON2. It is on when in STO/SS1-t condition. It turns off when the condition is released.
- Cur. pos. The current position is shown.
- Cur. vel. The current speed is shown.
- Cur. Shows the current.
- Cur. ratio The value of electrical current is shown as a percentage of the rated current.
- Ripple compensation (Note 1) It can be chosen with the radio button whether to display the current/current ratio with ripple compensation or without ripple compensation.
 - Yes : Shown in command current (Note 2)
 - No : Shown in output current (Note 3)
- Alarm code The applicable alarm code is shown.
- Controller S/N Shows the manufacturing number of the controller.

The items and buttons to be shown will differ depending on the controller models.
The signal names to be shown will also differ depending on the controller models and operation patterns.

Note 1 Ripple compensation is a feature for the pulse motor type controllers.
Shown below is the list of applicable models and applicable versions.
(Same for Safety Category Complied Type)


Tool/Controller	Applicable Versions
Teaching Pendant TB-02	V2.40 and later
RCON-PC	V0004 and later
PCON-CB/CFB/CBP	V0006 and later
PCON-CB/CFB (MECHATROLINK-III Connected Type)	V0005 and later
PCON-CYB/POB/PLB	V0003 and later
MPCON/MPCON-A	V0007 and later
MPCON/MPCON-A (EtherCAT Motion Connected Type)	V0004 and later
MPCON/MPCON-A (MECHATROLINK- III Connected Type)	
MPCON/MPCON-A (SSCNET III /H Connected Type)	
RCP6S, RCM-P6PC	V0003 and later

- In versions other than those listed above, the selections of ripple compensation should not be displayed.
- For those models with no selections of ripple compensation, the display should be shown in command current (Note 2).


Note 2 In the pulse motor type controllers, the command current should compensate for the amount of current ripple considering transistor switching.

Note 3 In the pulse motor type controllers, output current close to the effective value should be figured out by calculation as it will not acquire the output current.

Pulse motor type controllers

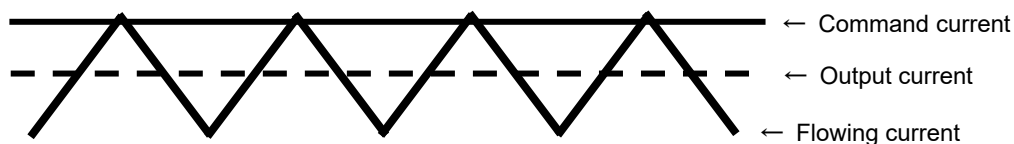

3.9.1.2 I/O Monitor Screen

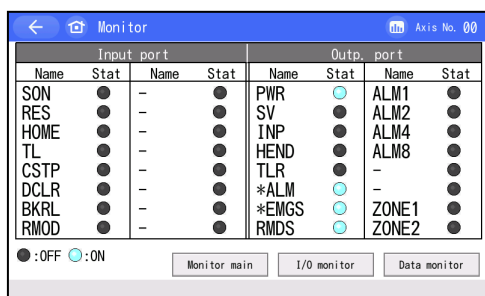

Touch [Monitor main] and the monitor main screen will be displayed.

Refer to [3.9.1.1 Monitor Main Screen]

Touch [Data monitor] and the data monitor screen will be displayed.

Refer to [3.9.1.3 Data Monitor Screen]


[Displayed Items]

- Input port The status of each input port is shown. ON is lit. OFF is unlit.
- Outp. port The status of each output port is shown. ON is lit. OFF is unlit.

The items and buttons to be shown will differ depending on the controller models.

The signal names to be shown will also differ depending on the controller models and operation patterns.

3.9.1.3 Data Monitor Screen

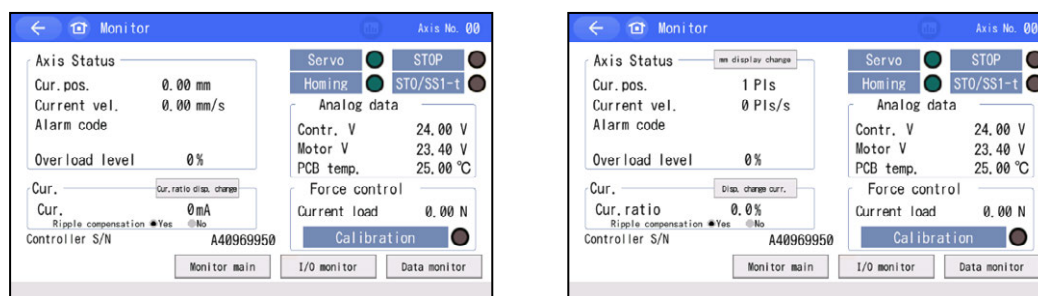

Touch [Monitor main] and the monitor main screen will be displayed. Refer to [3.9.1.1 Monitor Main Screen]

Touch [I/O monitor] and the I/O monitor screen will be displayed. Refer to [3.9.1.2 I/O Monitor Screen]

Touch [Disp. change cur.] and the value of current will be displayed.

Touch [Cur. ratio disp. change] and the current ratio will be displayed.

For Pulse Train Mode

Touch [Disp. change pulse] and the current position is shown in Pls and the current velocity in Pls/s.

Touch [mm display change] and the current position is shown in mm and the current velocity in mm/s.

[Displayed Items]

- | | |
|-----------------------|---|
| • Cur. pos. | The current position is shown. |
| • Current vel. | The current speed is shown. |
| • Alarm code | The applicable alarm code is shown. |
| • Overload level | Shows the overload level. |
| • Cur. | Shows the current. |
| • Cur. ratio | The value of electrical current is shown as a percentage of the rated current. |
| • Ripple compensation | It can be chosen with the radio button whether to display the current/current ratio with ripple compensation or without ripple compensation. <ul style="list-style-type: none"> • Yes : Shown in command current • No : Shown in output current (Refer to [3.9.1.1 Monitor Main Screen for details of ripple compensation]) |
| • Controller S/N | Shows the manufacturing number of the controller. |
| • Servo | The servo ON status is shown. ON is lit. OFF is unlit. |
| • Homing | The home return status is shown. It is on when it is stopped. It turns off when the stop condition is released. |
| • Stop | It shows the status of stop. It is on when it is stopped. It turns off when the stop condition is released. |
| • STO/SS1-t | It shows the status of STO/SS1-t for STO/SS1-t type of SCON-CB/SCON2. It is on when in STO/SS1-t condition. It turns off when the condition is released. |
| • Control Voltage | The voltage of the control power supply is shown. |
| • Motor V | The voltage of the motor power supply is shown. |
| • PCB temp. | The PCB temperature is shown. |

When PCON-CBP/CGBP and SCON-CB-F/SCON2-CG-F controllers are connected, the following items should be displayed.

- | | |
|----------------|--|
| • Current load | When a loadcell is connected, it should display the current load. |
| • Calibration | It should display the condition of loadcell calibration. It is on when calibration is completed. |

The items and buttons to be shown will differ depending on the controller models.

The signal names to be shown will also differ depending on the controller models and operation patterns.

3.9.1.4 Glossary Screen for Input and Output Signals

In this screen, you can check the explanations for terms related to input and output signals. Touch the [glossary] button and the contents for each feature can be checked.

Glossary Screen for Input Signals

Input signals		
Input signals(Host>Controller)		
CSTR	Start signal	Glossary
PC1~PC256	Command position No.	Glossary
BKRL	Brake release	Glossary
RMOD	Operation mode switch	Glossary
+STP	Pause	Glossary
RES	Reset	Glossary
SON	Servo ON	Glossary
HOME	Homing	Glossary
Input signals(Host>Controller)		
MODE	Teaching mode	Glossary
JISL	Jog/Inching switch	Glossary
JOG+/JOG-	Jog	Glossary
PIWRT	Read current position	Glossary
ST0~ST6	Start signal	Glossary
CLBR	Load cell calibration	Glossary

*You can see the explanation of each function by touching "Glossary".
 "" represents a negative logic s

Glossary Screen for Output Signals

Output signals		
Output signals(Controller>Host)		
PEND/INP	Positioning complete	Glossary
PM1~PM256	Complete position No.	Glossary
HEND	Homing complete	Glossary
ZONE1	Zone	Glossary
PZONE	Position zone	Glossary
RMODS	Operation mode status	Glossary
+ALM	Alarm	Glossary
MOVE	Moving	Glossary
SV	Servo ON	Glossary
+EMGS	Emergency stop output	Glossary
Output signals(Controller>Host)		
MODES	Teaching mode output	Glossary
WEND	Writing complete	Glossary
PE0~PE6	Current position No.	Glossary
LS0~LS6	Limit switch output	Glossary
CEND	Load cell calibration	Glossary
+BALM	Absolute battery low voltage warning	Glossary
LOAD	Load output judgment	Glossary
TRQS	Torque level output	Glossary

*You can see the explanation of each function by touching "Glossary".
 "" represents a negative logic s

3.9.1.5 Network Data Monitor Screen

Network Data Monitor		
Network setting		
Fieldbus operation mode	Full	
Fieldbus input/output format	0	
Data monitor		
	Input (PLC Output)	Setting Available Range
Position(mm)	0.00	-0.15 ~ 50.15
Pos band(mm)	0.00	0.02 ~ 50.30
Vel (mm/s)	0.00	0.01 ~ 200.00
Zone1(mm)	0.00	-9999.99 ~ 9999.99
Zone2(mm)	0.00	-9999.99 ~ 9999.99
Acc (G)	0.00	0.01 ~ 0.50
Dec (G)	0.00	0.01 ~ 0.50
Push	0	0 ~ 102
Load Current Threshold	0	0 ~ 255
Control Signal1	0000000000000000	
Control Signal2	0000000000000000	

Network Data Monitor		
Network setting		
Fieldbus operation mode	Full	
Fieldbus input/output format	0	
Data monitor		
	Output (PLC Input)	
Current position(mm)	0.00	
Command Current(mA)	0	
Current vel. (mm/s)	0.00	
Alarm code	0000	
Overload level(%)	0	
Current load(N)	0.00	
Total travel count	0	
Total travel dist. (m)	0	
Status Signal1	0000000000000000	
Status Signal2	0000000000000000	

Touch [Input] and the input value should be displayed on the data monitor.
 Touch [Output] and the output value should be displayed on the data monitor.

Network Data Monitor		
Network setting		
Fieldbus operation mode	Full	
Fieldbus input/output format	0	
Data monitor		
	Input (PLC Output)	Setting Available Range
Position(mm)	0.00	-0.15 ~ 50.15
Pos band(mm)	0.00	0.02 ~ 50.30
Vel (mm/s)	0.00	0.01 ~ 200.00
Zone1(mm)	0.00	-9999.99 ~ 9999.99
Zone2(mm)	0.00	-9999.99 ~ 9999.99
Acc (G)	0.00	0.01 ~ 0.50
Dec (G)	0.00	0.01 ~ 0.50
Push	0	0 ~ 102
Load Current Threshold	0	0 ~ 255
Control Signal1	0000000000000000	
Control Signal2	0000000000000000	

Network Data Monitor		
Network setting		
Fieldbus operation mode	Full	
Fieldbus input/output format	0	
Data monitor		
	Output (PLC Input)	
Current position(mm)	0.00	
Command Current(mA)	0	
Current vel. (mm/s)	0.00	
Alarm code	0000	
Overload level(%)	0	
Current load(N)	0.00	
Total travel count	0	
Total travel dist. (m)	0	
Status Signal1	0000	
Status Signal2	0000	


Values in "Control Signal 1" and "Control Signal 2" of input and "Status Signal 1" and "Status Signal 2" of output should be displayed in the binary numbers or hexadecimal numbers.

Touch [Binary] and the values are displayed in binary numbers.
 Touch [Hexadecimal] and the values are displayed in hexadecimal numbers.

[Displays]

- Network setting ----- Refer to [3.9.1.5 (1) Network Setting]
- Data monitor (Positioner Type) ----- Refer to [3.9.1.5 (2) Data Monitor (Positioner Type)]
- Data monitor (Servo Press Type) ----- Refer to [3.9.1.5 (3) Data Monitor (Servo Press Type)]

3.9.1.5 (1) Network Setting

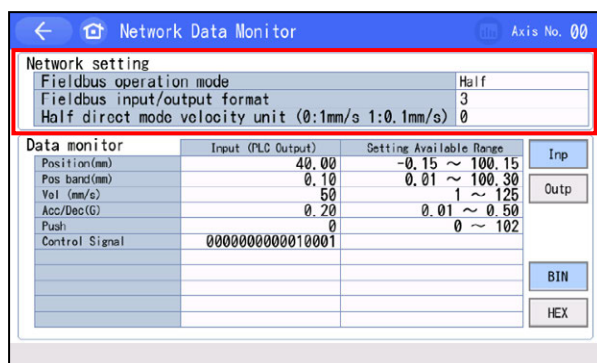

- Fieldbus operation mode
An operation mode name should be displayed in accordance with the setting in Parameter No. 84 “Fieldbus Operation Mode”.

Fieldbus operation mode setting

Parameter No. 84 Setting	Positioner Type	Servo Press Type
0	Remote I/O (Not Displayed)	Remote I/O (Not Displayed)
1	Simple Direct	Full Function
2	Half Direct	Pressing Direct
3	Full Direct	
4	Remote I/O 2	
5	Simple Direct 2	
6	Half Direct 2	
7	Remote I/O 3	
8	Half Direct 3	

- Fieldbus input/output format
The value set in Parameter No. 90 [Fieldbus Input and Output Format] should be displayed.
The setting will be reflected to the input and output values in the data monitor.

Fieldbus input/output format setting


Parameter No. 90 Setting	Name
0	No swapping should be conducted. Data is to be sent as it is to PLC.
1	Upper bytes and lower bytes in each resistor should be swapped.
2	Upper words and lower words in two-word resistors should be swapped.
3	Upper bytes and lower bytes in each resistor should be swapped. For two-word resistors, upper words and lower words are to be swapped in addition.

- Half direct mode velocity unit
The value set in Parameter No.159 [Half Direct Mode Velocity Unit] should be displayed.

It should be displayed when the fieldbus operation mode setting is either “2. Half Direct”, “6. Half Direct 2” or “8. Half Direct 3”.

3.9.1.5 (2) Data Monitor (Positioner Type)

Input values to a controller, settable range and output values from a controller should be displayed.

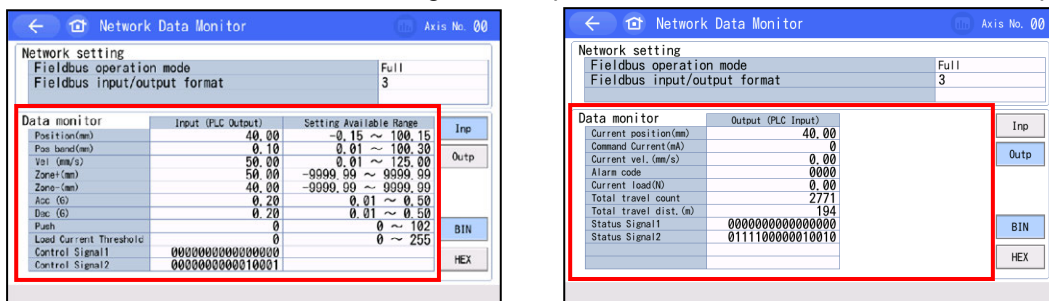

The window shown above is the display in Fieldbus Operation Mode “3: Full Direct”. Shown in “Input and Output Display List for Each Positioner Type Fieldbus Operation Mode” is the screen displayed in each setting of Fieldbus Operation Mode.

Positioner Type Input and Output Display List for Each Fieldbus Operation Mode

Fieldbus Operation Mode	Input Value	Output Value
0 : Remote I/O	Network data monitor should not be displayed.	
1 : Simple Direct		
2 : Half Direct		
3 : Full Direct		

Fieldbus Operation Mode	Input Value	Output Value
4 : Remote I/O2		
5 : Simple Direct 2		
6 : Half Direct 2		
7 : Remote I/O 3		
8 : Half Direct 3		

Shown in "Positioner Type Data List" is the input and output contents in each setting of Fieldbus Operation Mode.

Positioner Type Data List

		Fieldbus Operation Mode								
		0	1	2	3	4	5	6	7	8
Input	Transition to network monitor information window cannot be conducted.	Target position	Target position	Target position	Occupied area (not displayed)	Target position	Target position	Occupied area (not displayed)	Target position	
		Specified position No.	Positioning band	Positioning band		Specified position No.	Positioning band		Positioning band	
		Control signal	Instruction speed	Pressing current limit		Control signal	Instruction speed		Instruction speed	
			Command speed	Zone boundary on positive			Command speed		Command speed	
			Push	Zone boundary on negative			Push		Push	
			Control signal	Accelerate			Control signal		Control signal	
				Decelerate						
				Load Current Threshold						
				Control signal 1						
				Control signal 2						
Output	Transition to network monitor information window cannot be conducted.	Current position	Current position	Current position	Current position	Current position	Current position	Current position	Current position	
		Completed position No.	Command current value	Command current value	Command Current value	Completed position No.	Current load	Current load	Command current value	
		Status signal	Current speed	Current speed		Status signal	Current speed		Current speed	
			Alarm code	Alarm code			Alarm code		Alarm code	
			Status signal	Current load			Status signal		Status signal	
				Total number of movements						
				Total travelled distance						
				Status signal 1						
				Status signal 2						

Shown in "Positioner Type Input List" is the list of detailed explanations for the input items.

Positioner Type Input List

	Item	Explanations
1	Target position	It shows the target position at direct position movement command. Unit : 0.01mm or 0.001mm
2	Positioning band	It shows the positioning band at direct position movement command. Unit : 0.01mm or 0.001mm
3	Command speed	It shows the velocity at direct position movement command. Unit : 0.01mm/s
4	Acceleration and deceleration speed	It shows the acceleration and deceleration at direct position movement command. Unit : 0.01G
5	Zone boundary on positive	It shows a value in the forward side when the zone output signal turns on. Unit : 0.01mm or 0.001mm Range available to indicate : -999999 to 999999
6	Zone boundary on negative	It shows a value in the backward side when the zone output signal turns on. Unit : 0.01mm or 0.001mm Range available to indicate : -999999 to 999999
7	Accelerate	It shows the acceleration at direct position movement command. Unit : 0.01G
8	Decelerate	It shows the deceleration at direct position movement command. Unit : 0.01G
9	Push	It shows the value in the pressing operation.
10	Load current threshold	It shows the threshold of the pressing motion.
11	Specified position No.	It shows the position number to be executed.
12	Control signal	It shows the control signals. Input should be displayed in the binary numbers or hexadecimal numbers. Refer to "Positioner Type Control Signals and Status Signals List" for show to set it up.
13	Control signal 1	It shows the control signal 1. Input should be displayed in the binary numbers or hexadecimal numbers. Refer to "Positioner Type Control Signals and Status Signals List" for show to set it up.
14	Control signal 2	It shows the control signal 2. Input should be displayed in the binary numbers or hexadecimal numbers. Refer to "Positioner Type Control Signals and Status Signals List" for show to set it up.

Shown in “Positioner Type Output List” is the list of detailed explanations for the input items.

Positioner Type Output List

	Item	Explanations
1	Current position	It shows the current position.
2	Command current	It shows the command current.
3	Current velocity	It shows the current velocity.
4	Alarm code	It shows the alarm code which is currently being occurred. It shows “0000” when an alarm is not occurred.
5	Overload level	Shows the overload level. (SCON2 only)
6	Current load	It shows the feedback values of the load data from the loadcell attached on the tip of an axis.
7	Total number of movements	It shows the total number of movement.
8	Total travelled distance	It shows the total travelled distance.
9	Completed position No.	Is shows the completed position number.
10	Status signal	It shows the status signal. Output should be displayed in the binary numbers or hexadecimal numbers. Refer to “Positioner Type Control Signals and Status Signals List” for show to set it up.
11	Status signal 1	It shows the status signal 1. Output should be displayed in the binary numbers or hexadecimal numbers. Refer to “Positioner Type Control Signals and Status Signals List” for show to set it up.
12	Status signal 2	It shows the status signal 2. Output should be displayed in the binary numbers or hexadecimal numbers. Refer to “Positioner Type Control Signals and Status Signals List” for show to set it up.

Positioner Type Control Signals and Status Signals List

	Bits	Fieldbus Operation Mode									
		0	1	2	3		4	5	6	7	8
					Control signal 1	Control signal 2					
Input	00	Not Applicable	CSTR	DSTR	-	DSTR	Not Applicable	CSTR	DSTR	Not Applicable	DSTR
	01		HOME	HOME	PUSH	HOME		HOME	HOME		HOME
	02		STP	STP	DIR	STP		STP	STP		STP
	03		RES	RES	INC	RES		RES	RES		RES
	04		SON	SON	GSL0	SON		SON	SON		SON
	05		JISL	JISL	GSL1	JISL		JISL	JISL		-
	06		JVEL	JVEL	MOD0	JVEL		JVEL	JVEL		MOD0
	07		JOG-	JOG-	MOD1	JOG-		JOG-	JOG-		MOD1
	08		JOG+	JOG+	ASO0	JOG+		JOG+	JOG+		NTC0
	09		PWRT	-	ASO1	CLBR		CLBR	CLBR		NTC1
	10		MODE	GSL0	-	-		-	GSL0		GSL0
	11		PMOD	GSL1	-	-		PMOD	GSL1		GSL1
	12		-	PUSH	NTC0	-		-	PUSH		PUSH
	13		-	DIR	NTC1	-		-	DIR		DIR
	14		RMOD	PMOD	-	PMOD		RMOD	PMOD		PMOD
	15		BKRL	BKRL	-	BKRL		BKRL	BKRL		BKRL
	Bits	0	1	2	3		4	5	6	7	8
					Control signal 1	Control signal 2					
Output	00		PEND	PEND	BALM	PEND		PEND	PEND		PEND
	01		HEND	HEND	CEND	HEND		HEND	HEND		HEND
	02		MOVE	MOVE	-	MOVE		MOVE	MOVE		MOVE
	03		ALM	ALM	-	ALM		ALM	ALM		ALM
	04		SV	SV	-	SV		SV	SV		SV
	05		PSFL	PSFL	-	PSFL		PSFL	PSFL		PSFL
	06		-	-	-	PUSH		PUSH	PUSH		-
	07		BALM	BALM	-	GHMS		BALM	BALM		BALM
	08		RMDS	RMDS	-	RMDS		RMDS	RMDS		RMDS
	09		WEND	-	-	TRQS		TRQS	CEND		-
	10		MODES	-	-	LOAD		LOAD	-		-
	11		PZONE	-	-	PZONE		PZONE	-		-
	12		ZONE1	ZONE1	-	ZONE1		ZONE1	ZONE1		ZONE1
	13		ZONE2	ZONE2	-	ZONE2		CEND	ZONE2		ZONE2
	14		PWR	PWR	-	PWR		PWR	PWR		PWR
	15		EMGS	EMGS	-	EMGS		EMGS	EMGS		EMGS

Refer to the instruction manual of each controller for the details of the signals.

3.9.1.5 (3) Data Monitor (Servo Press Type)

Full Feature Mode

It is the mode applicable for the program operations and direct position movement commands.

It is not capable for a direct position movement command while a program is executed or program startup during direct position movement.

• Display of Input Values

It shows the input (PLC output) values to a controller and the settable range.

* Output a value within the settable range from the PLC.

Item	Input (PLC Output)	Setting Available Range
Position(mm)	40.000	-0.150 ~ 115.150
Pos band(mm)	0.100	0.001 ~ 115.300
Vel (mm/s)	50.00	0.01 ~ 75.00
Acc (G)	0.20	0.01 ~ 0.30
Dec (G)	0.20	0.01 ~ 0.30
Command Program No.	0	0 ~ 63
Control Signal1	0000000000000000	
Control Signal2	1000000100000001	

Shown in "Servo Press Type Input List" is the list of detailed explanations for input items.

Servo Press Type Input List


	Item	Explanations
1	Position	It shows the target position at direct position movement command. Unit : 0.01mm or 0.001mm
2	Pos band	It shows the positioning band at direct position movement command. Unit : 0.01mm or 0.001mm
3	Vel	It shows the velocity at direct position movement command. Unit : 0.01mm/s
4	Acc	It shows the acceleration at direct position movement command. Unit : 0.01G
5	Dec	It shows the deceleration at direct position movement command. Unit : 0.01G
6	Command Program No.	It shows the pressing program number to be executed.
7	Control Signal 1	Reserved Domain
8	Control Signal 2	It shows the status signal 2. Input should be displayed in the binary numbers or hexadecimal numbers. Refer to [Servo Press Type Status Signal 2 Detail] for the displayed contents.

Servo Press Type Control Signal 2 Details

Bits	Symbol	Name
00	SON	Servo ON command
01	HOME	Home return
02	RES	Alarm reset
03	CLBR	Loadcell calibration command
04	RMOD	Operation mode switchover
05	BKRL	Brake compulsory release
06	PSTR	Program startup
07	PHOM	Program home-position movement
08	ENMV	Axis operation permission
09	FPST	Program compulsory stop
10	SSTP	Searching stop
11	JISL	JOG/Inching switchover
12	JVEL	JOG velocity / Inching distance switchover
13	JOG+	JOG + Command
14	JOG-	JOG – Command
15	DSTR	Direct Positioning Startup Command

• Display of Output Values

It shows the output (PLC input) values from a controller.

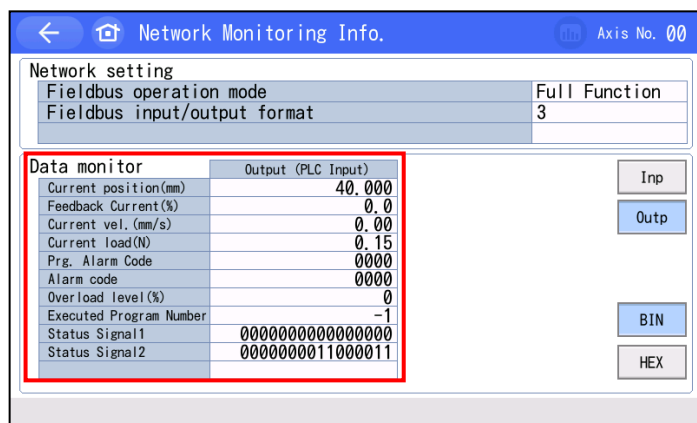

Shown in “Servo Press Type Output List” is the list of detailed explanations for output items.

Servo Press Type Output List

	Item	Explanations
1	Current position	It shows the current position.
2	Feedback Current	It shows the rate of the feedback current to the rated value.
3	Current vel.	It shows the current velocity.
4	Current load	It shows the feedback values of the load data from the loadcell attached on the tip of an axis.
5	Prg. Alarm Code	It shows the program alarm code which is currently being occurred. It shows “0000” when an program alarm is not occurred.
6	Alarm Code	It shows the alarm code which is currently being occurred. It shows “0000” when an alarm is not occurred.
7	Overload level	It shows the overload level.
8	Executed Program Number	It shows the program number being executed by the program startup command. It should be “-1” before the pressing program is executed.
9	Control Signal 1	It shows the status signal. Output should be displayed in the binary numbers or hexadecimal numbers. Refer to “Servo Press Type Status Signal 1 Detail” for the displayed contents.
10	Control Signal 2	It shows the status signal. Output should be displayed in the binary numbers or hexadecimal numbers. Refer to [Servo Press Type Status Signal 2 Detail] for the displayed contents.


Servo Press Type Control Signal 1 Details

Bits	Symbol	Name
00	APRC	In Approaching Operation
01	SERC	In Searching Operation
02	PRSS	In Pressurizing Operation
03	PSTP	Pressurizing in Stop
04	DCMP	In Depressurizing Operation
05	RTRN	In Return Operation
06	WAIT	Program in Standby
07	-	(Reserved)
08	-	(Reserved)
09	-	(Reserved)
10	PJOK	Position (Distance) Judgment Passed
11	PJNG	Position (Distance) Judgment Failure
12	LJOK	Load Judgment Passed
13	LJNG	Load Judgment Failure
14	JDOK	Total Judgment Passed
15	JDNG	Total Judgment Failure

Servo Press Type Control Signal 2 Details

Bits	Symbol	Name
00	SV	Servo-on Status
01	HEND	Home-Return Complete
02	CEMD	Loadcell Calibration Complete
03	RMDS	Operation Mode Status
04	PEND	Positioning Completion
05	-	(Reserved)
06	ZONE1	ZONE 1
07	ZONE2	ZONE 2
08	PCMP	Program Completed in Normal Condition
09	PRUN	Program Executed
10	PORG	Program Home Position
11	MPHM	In Move to Program Home Position
12	PALM	Program Alarm
13	ALML	Light Malfunction Alarm
14	ALM	Alarm
15	EMSG	Emergency Stop

3.9.1.6 Functional Safety Unit Monitoring Screen

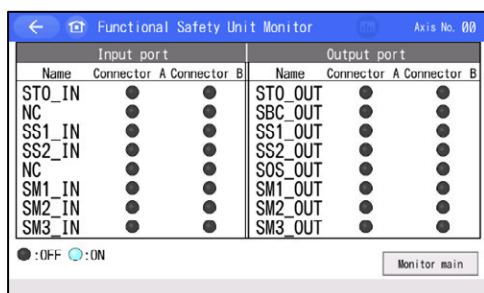


Touch [Monitor main] and it returns to the monitor main window. Refer to [3.9.1.1]

[Display Detail]

- Input Port The status of the input port on the functional safety unit should be displayed. On when illuminated. Off when light out.
- Output Port The status of the output port on the functional safety unit should be displayed. On when illuminated. Off when light out.


The safety input and output connector pin assignment of the functional safety unit should be as shown below.

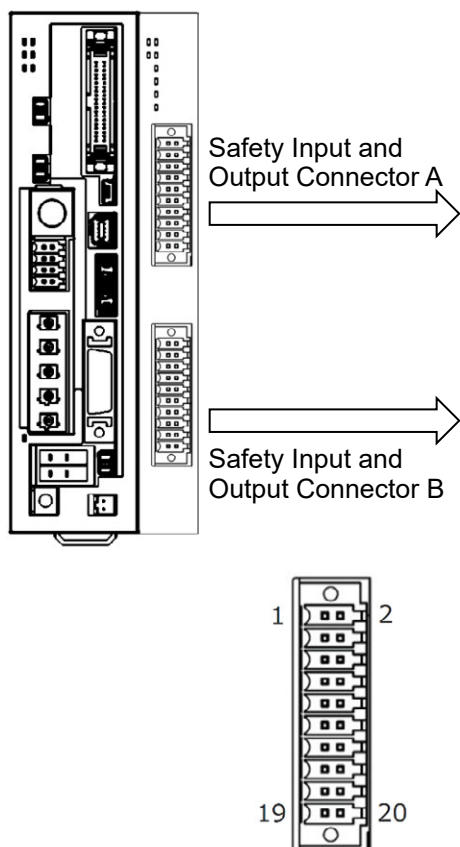

Safety Input and Output Connector A			
No.	Signal Name	Signal Name	No.
1	STO_IN_A	STO_OUT_A	2
3	NC	SBC_OUT_A	4
5	SS1_IN_A	SS1_OUT_A	6
7	SS2_IN_A	SS2_OUT_A	8
9	NC	SOS_OUT_A	10
11	SM1_IN_A	SM1_OUT_A	12
13	SM2_IN_A	SM2_OUT_A	14
15	SM3_IN_A	SM3_OUT_A	16
17	IN_COM_A	OUT_COM_A	18
19	FG	FG	20

Safety Input and Output Connector B			
No.	Signal Name	Signal Name	No.
1	STO_IN_B	STO_OUT_B	2
3	NC	SBC_OUT_B	4
5	SS1_IN_B	SS1_OUT_B	6
7	SS2_IN_B	SS2_OUT_B	8
9	NC	SOS_OUT_B	10
11	SM1_IN_B	SM1_OUT_B	12
13	SM2_IN_B	SM2_OUT_B	14
15	SM3_IN_B	SM3_OUT_B	16
17	IN_COM_B	OUT_COM_B	18
19	FG	FG	20

3.9.2 Maintenance Information Screen

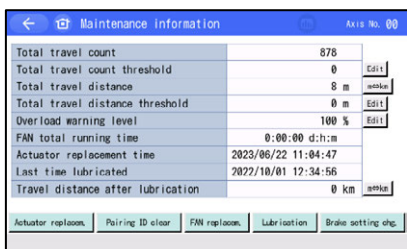

Touch either [Maintenance] in Monitor Window [3.9.1] or [Maintenance Information] in Information Window [3.17], and the maintenance information window should open.

- [Actuator replacem.]----- It should be conducted when an actuator is to be replaced.
Refer to [3.9.2.1, "Operating Method When Replacing the Actuator."]
- [Pairing ID clear] ----- It should be conducted when only the motor unit is to be replaced.
Refer to [3.9.2.2, "Operating Method to Clear Pairing ID (When Replacing Motor Unit)"]
- [FAN replacem.] (Note 1) ----- It should be conducted when the fan is to be replaced.
Refer to [3.9.2.3, "Operating Method When Replacing the FAN."]
- [Lubrication] (Note 2) ----- It should be conducted when lubrication is to be supplied to an actuator.
Refer to [3.9.2.4, "Operating Method of Updating Maintenance Information Related to Lubrication"]
- [Brake setting chg.] (Note 3) ---- It is to be conducted when a change is to be made whether there is a brake equipment or not.
Refer to [3.9.2.5, "Operation When Changing Setting of Brake Equipment"]

[Contents of Display]

- Total travel count The cumulative total number of actuator movements is shown.
- Total travel count threshold A notice should be made with an alarm when the total number of movement times has exceeded this setting value.
- Total travel distance The cumulative total distance travelled by the actuator is shown.
- Total travel distance threshold A notice should be made with an alarm when the total distance of drive has exceeded this setting value.
- Overload warning level It shows the threshold to output an overload alarm.
- FAN total running time (Note 1) Shows the total driving time of the fan on the controller.
- Actuator replacement time It shows the day and time of when an actuator was replaced.
- Last time lubricated (Note 2) It shows the day of when lubrication was supplied.
- Travel distance after lubrication (Note 2) It shows the travel distance after lubrication.

The items and buttons to be shown will differ depending on the controller models.

Note 1 It should be shown in a controller that is equipped with a fan.

Note 2 It should be shown when the controller and actuators are applicable for the information management system.


Note 3 It should be displayed when the controller is either SCON or SCON2.

[Setting Values for Total Travel Count and Total Travel Distance]

It is available to issue a message level alarm when the total travel count has exceeded the setting threshold for the total travel count or when the total travel distance has exceeded the threshold for the total travel distance.


The settings for the total travel count threshold and the total travel distance threshold can be established by the process below.

(1) Establish Setting in Maintenance Information Window

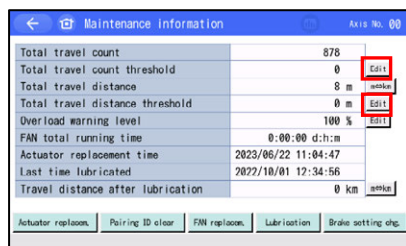

Touch Edit on the right hand of the total travel count threshold or on the right hand of the total travel distance threshold, and the setting can be adjusted for each value.

(2) Establish Setting by Parameters

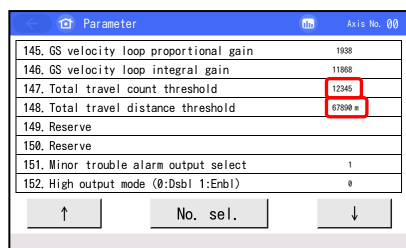

Show the following items in Parameter Edit screen refer to [3.11] and touch each value to adjust the setting for each value.

Item	Parameter No.
Total travel count threshold	147
Total travel distance threshold	148

Adjustment of values in either way of (1) and (2) should be reflected to each other.

* It is necessary to reboot it in order to activate the settings.

Message Level Alarm to be Output

Alarm code	Name	Description
04E	Exceeded Movement Count Threshold	It should be issued when the movement count has exceeded the movement count threshold (Parameter No. 147).
04F	Exceeded Operated Distance Threshold	It should be issued when the operated distance has exceeded the operated distance threshold (Parameter No. 148).

[Example of use of Total travel distance]

For example when using the RCPW rod type actuator, if the travel distance within three months exceeds 300km, the scraper section should be greased during the periodic inspection after every 300km of travel. (If distance does not exceed 300km, grease every 3 months.)

In this case, if the total travel distance threshold (Parameter No. 148) is set to '300' before starting operation, alarm will notify you the timing for grease supply at the timing of exceeding 300km of the drive distance.


After that, set the total travel distance threshold (Parameter No. 148) to '600', '900' ..., which are values that 300km of drive distance is added on top, and you can be continuously notified the timings for grease supply.

[About Overload Warning Level Setting]

With the motor temperature in operation in rated values as 100%, an alarm in the message level should be generated when the motor temperature has exceeded the ratio set in this section. Set it to 100% and a judgement should not be made.


The overload warning level setting should be established in the way shown below.

(1) Establish Setting in Maintenance Information Window

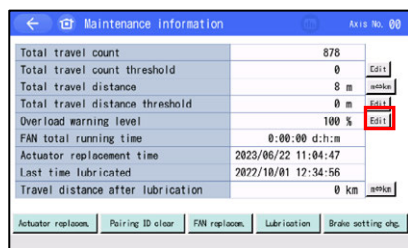

Touch [Edit] on the right side of Overload Warning Level to set the value.

(2) Establish Setting by Parameters

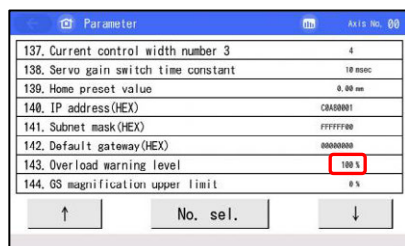

Show the following items in Parameter Edit screen refer to [3.11] and touch each value to adjust the setting for each value.

Item	Parameter No.
Over Load Warning Load Level Ratio	143

Adjustment of values in either way of (1) and (2) should be reflected to each other.

* It is necessary to reboot it in order to activate the settings.

Message Level Alarm to be Output

Alarm code	Name	Description
048	Driver overload warning	With motor temperature in operation in rated values as 100%, message level alarm to be generated when motor temperature exceeded ratio set in this section

3.9.2.1 Operating Method When Replacing the Actuator (When Replacing the Actuator)

The following shows the method that resets the Total travel count and Total travel distance at the time of replacing the actuator that connects to the controller with the maintenance information function.

(Note) Do not implement this procedure when replacing only the motor unit.

Maintenance information		Axis No. 00
Total travel count	878	
Total travel count threshold	0	Edit
Total travel distance	8 m	settle
Total travel distance threshold	0 m	Edit
Overload warning level	100 %	Edit
FAN total running time	0:00:00 d:h:m	
Actuator replacement time	2023/06/22 11:04:47	
Last time lubricated	2022/10/01 12:34:56	
Travel distance after lubrication	0 km	settle

Actuator replacem. Pairing ID clear FAN replacem. Lubrication Brake setting chg.

Touch [Actuator replacem.] to display the password entry screen.

Enter "5119", and then touch [ENT].

Conf Axis No. 01

New maintenance information will be imported due to actuator replacement. Current information data will be overwritten. Are you sure to continue?

Yes No

The actuator replacement confirmation screen appears.

Touch [Yes].

The pairing ID clear confirmation screen appears, if the actuator is equipped with a battery-less absolute encoder.

Conf Axis No. 00

Do you want to clear the paired encoder's ID for actuator replacement?

*Please don't clear during motor unit replacement.

Yes No

The controller has the mechanism that if the encoder ID is different after checking the ID, then the absolute encoder error is output.

When replacing with the actuator which is absolutely reset, the last ID (pairing ID) of the actuator must be cleared.

Touch [Yes].

Maintenance information		Axis No. 00
Total travel count	878	
Total travel count threshold	0	Edit
Total travel distance	8 m	settle
Total travel distance threshold	0 m	Edit
Overload warning level	100 %	Edit
FAN total running time	0:00:00 d:h:m	
Actuator replacement time	2023/06/22 11:04:47	
Last time lubricated	2022/10/01 12:34:56	
Travel distance after lubrication	0 km	settle

Actuator replacem. Pairing ID clear FAN replacem. Lubrication Brake setting chg.

The Total travel count and Total travel distance are reset to 0.

The Actuator replacement time should be updated to the current day and time.

In the actuator which is equipped with the battery-less absolute encoder, the pairing ID is cleared.

With that, the preparatory work of actuator replacement is finished. Turn off the power of the controller, and then replace the actuator.


* It is not possible to change the serial number and manufacturing information of the actuator which can be changed in the PC supported software.

3.9.2.2 Operating Method to Clear Pairing ID (When Replacing Motor Unit)

Stated below is how to clear only the pairing ID.


[Pairing ID Clear] button appears only when the actuator is equipped with the battery-less absolute encoder.

(Note) This process is to be conducted when only motor unit is to be replaced. Follow the process in “3.9.2.1 Operating Method When Replacing the Actuator” when replacing an actuator.

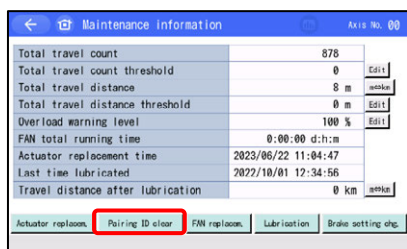

Touch [Pairing ID clear] to display the password entry screen.


Enter “5119”, and then touch [ENT].

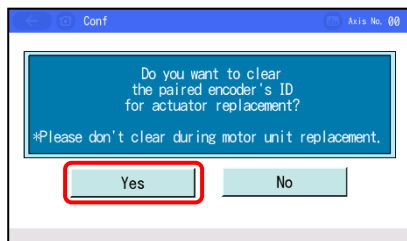

The controller has the mechanism that if the encoder ID is different after checking the ID, then the absolute encoder error is output.

When replacing with the actuator which is absolutely reset, the last ID (pairing ID) of the actuator must be cleared.


Touch [Yes].

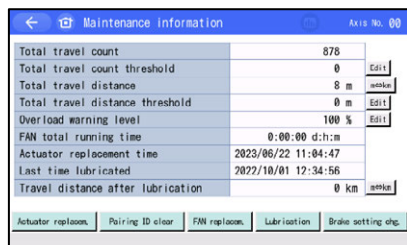

The pairing ID is cleared.


3.9.2.3 Operating Method When Replacing the FAN

Shown below is how to reset the total fan operation time at the time of the fan replaced.
The total fan operation time and [FAN replacem.] button should be shown only when the controller is equipped with a fan.

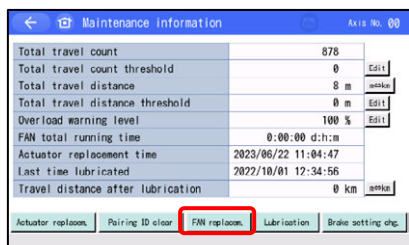


Touch [FAN replacem.] to display the password entry screen.

Enter "5119", and then touch [ENT].

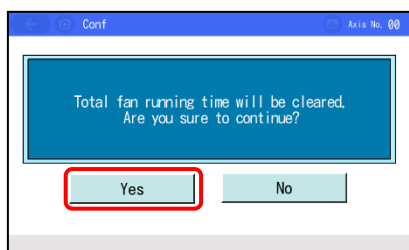

The FAN total running time clear confirmation screen appears.

Touch [Yes].

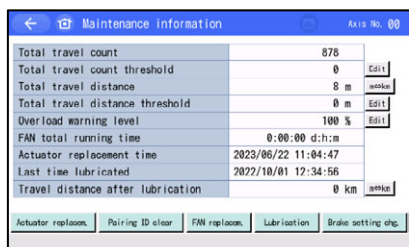

The FAN total running time is reset to 0.

3.9.2.4 Operating Method of Updating Maintenance Information Related to Lubrication

Shown below is how to record the time of lubrication and how to reset the drive distance after lubrication when lubrication to an actuator.

Last time lubrication, travel distance after lubrication and [Lubrication] button should be shown when both the controller and actuators are applicable for the information management system and Parameter No. 192 Actuator Identification System Use Flag is set to 1: Valid.

Maintenance information		Axis No. 00
Total travel count	878	
Total travel count threshold	0	Edit
Total travel distance	8 m	Reset
Total travel distance threshold	0 m	Edit
Overload warning level	100 %	Edit
FAN total running time	0:00:00 d:h:m	
Actuator replacement time	2023/06/22 11:04:47	
Last time lubricated	2022/10/01 12:34:56	
Travel distance after lubrication	0 km	Reset

Actuator replace. Pairing ID clear FAN replace. **Lubrication** Brake setting chp.

Touch [Lubrication] to display the password entry screen.

Enter '5119', and then touch [ENT].

Conf Axis No. 00

Update the maintenance information related to lubrication. Data will be overwritten. Are you sure to continue?

Yes No

Lubrication information clear confirmation window should be displayed.

Touch [Yes].

Controller reset Axis No. 00

Restart the controller?

Yes No

Confirmation window for controller reboot should appear.

Touch [Yes].

If touch [No], controller would not reboot.

Maintenance information		Axis No. 00
Total travel count	878	
Total travel count threshold	0	Edit
Total travel distance	8 m	Reset
Total travel distance threshold	0 m	Edit
Overload warning level	100 %	Edit
FAN total running time	0:00:00 d:h:m	
Actuator replacement time	2023/06/22 11:04:47	
Last time lubricated	2022/10/01 12:34:56	
Travel distance after lubrication	0 km	Reset

Actuator replace. Pairing ID clear FAN replace. **Lubrication** Brake setting chp.


The lubrication time to the current day and time should be updated and the value in the drive distance after lubrication should be reset.

* Some models may require the power to be rebooted instead of controller being restarted. Follow the message in the shown window to make operation.


3.9.2.5 Operation When Changing Setting of Brake Equipment

How to change the brake equipment setting is as shown below.

[Brake setting chg.] button should be displayed when SCON/SCON2 controller gets connected.

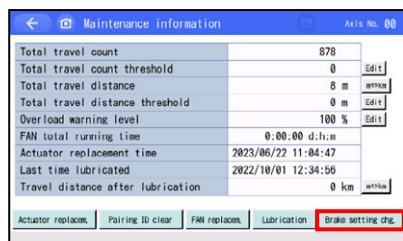


Touch [Brake setting chg.].

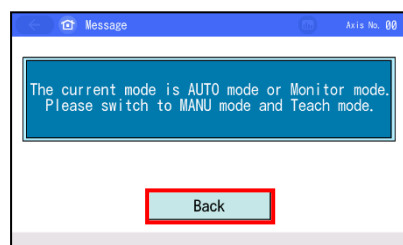

For Auto Mode and Monitoring Mode, there will be a message window shown up to encourage a switchover to MANU or Teaching Mode.


Touch [Back] and the screen goes back to the maintenance window.

Refer to [3.13 TP Operation Mode] for mode switchover.

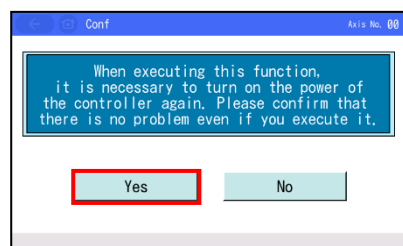


For MANU and Teaching Mode, a window for confirmation of execution should appear.

Confirm that there is no problem in executing it, and touch [Yes].

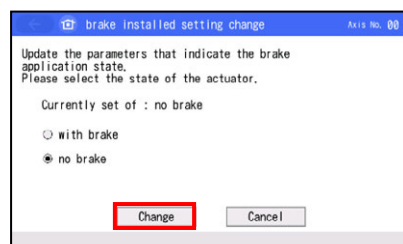

Select whether there is a brake or not in the brake equipment setting window, and touch [Change].

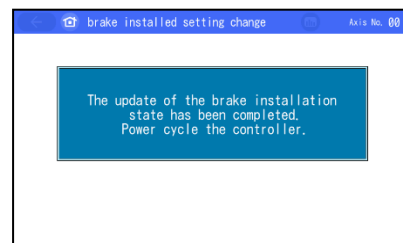

A window to show that the setting has changed should show up.

As the changed setting should become valid after the power supplied to the controller is rebooted, the power supplied to the controller should be rebooted.




Note: If the information of a brake being equipped or not does not match in an actuator and a controller, not only that operation cannot be performed, but also it may cause malfunction. Make sure there is no mismatch in the setting.


3.9.3 Time Setting Screen for Controller

In the controller with a calendar function, the time setting for the controller can be set.


[How to Set Time]

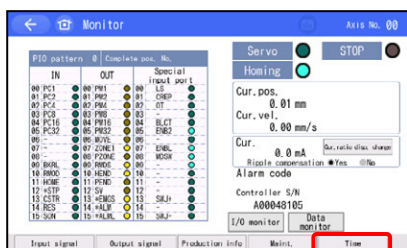


Touching [Time] displays the time setting screen.

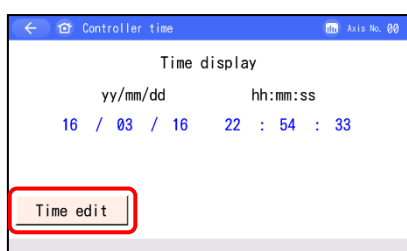


Controller's time is displayed.
Touch [Time edit].

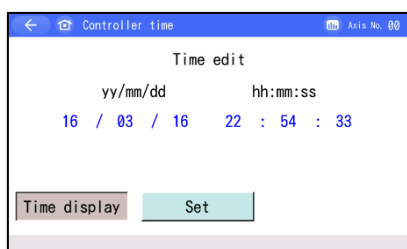

Touch the value of year, month, day, hours, minutes or seconds you want to change.

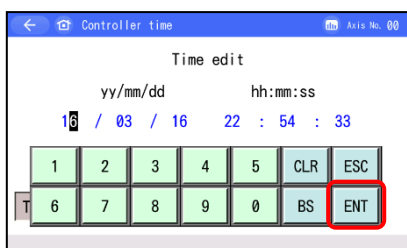

The numeric key pad appears. Enter a desired value, and then press [ENT].

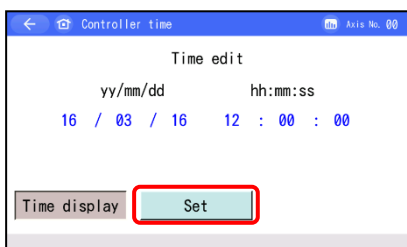


Touch [Set].



A screen telling the clock setting is complete appears, and then the controller clock will be displayed.


3.10 Position Editing

Set/edit the target position, speed, acceleration, deceleration and other data related to positions. You can move the axis by jogging or inching.

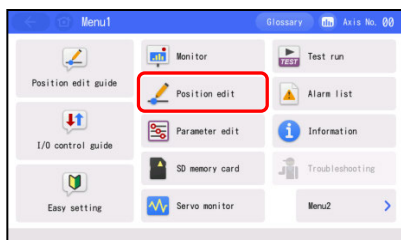

Touch [Position edit] on the Menu 1 screen.


If a position edit password is other than "0000," the password entry screen appears.

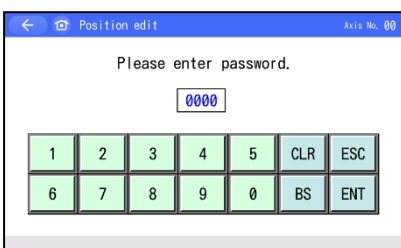

Enter the position edit password.
Touch [ENT].

The default position edit password is "0000."
For how to change the position edit password, refer to 3.18, "Environment setting [Change Pos Edit Password]."


A position data table appears.

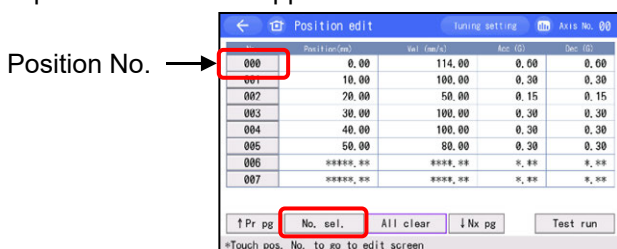

Touch [No. sel.] to set the position number you want to set, and a table showing the position number you have just set appears.

To set data other than the target position, speed, acceleration and deceleration shown in the table, touch other position number such as "000."


Data of the selected position number appears. (Position Data Individual Edit Screen)

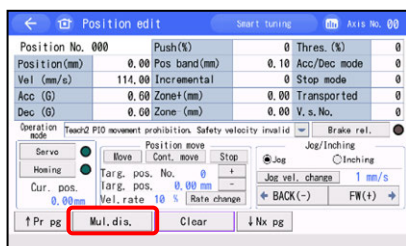


Touching [Mul. dis.] returns the screen to the position data table display.

The contents of display and setting items should differ depending on the controller.
For a controller applicable for comment input to position data (Refer to 3.10.2)

Position data table screen

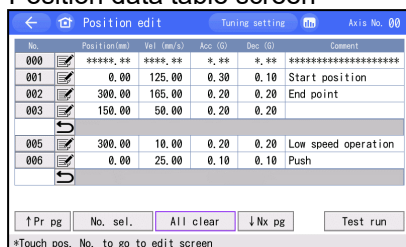

Position Data Individual Edit Screen

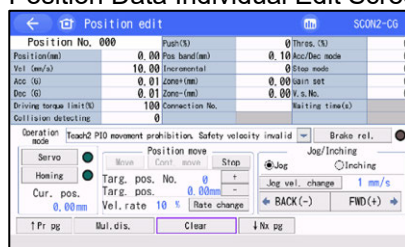


3.10.1 Position Data

For the controllers applicable for comment input of the position data (RCON-PC/PCF/AC/DC/SC, SCON-CB RCON connection type and SCON2), refer to [3.10.2] together.

Position data table screen

No.	Position(mm)	Vel. (mm/s)	Acc. (G)	Dec. (G)
000	0.00	114.00	0.00	0.60
001	10.00	100.00	0.30	0.30
002	20.00	50.00	0.15	0.15
003	30.00	100.00	0.30	0.30
004	40.00	100.00	0.30	0.30
005	50.00	80.00	0.30	0.30
006	*****	*****	*****	*****
007	*****	*****	*****	*****

Position Data Individual Edit Screen

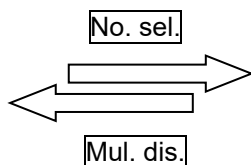

The items set in the position data table include target position, speed, acceleration, deceleration, push, positioning band, incremental, zone+, zone-, threshold, acceleration/deceleration mode, stop mode, transportation load / gain set and Vibration No. The setting of Zone +, Zone -, threshold, Acceleration / Deceleration Modes, Stop Mode, gain set and anti-vibration number are enabled or disabled depending on the controller types as shown in the table below, and the items to be displayed may differ accordingly.

Caution: Operation with JOG Switch on Front Panel of RCON
If TB-02 gets disconnected from the controller in the condition that this window is open, JOG switch operation will get disabled.

- (1) No.
The position data number is shown.

Warning: Be sure to specify absolute coordinates on PCON-C/CF/CA/CFA/CB/CFB/CBP, ACON-C/CA/CB, DCON-CA/CB, SCON-C/CA/CAL/CB, SCON2, ROBONET, ERC3 PIO Converter, RCP6S, MCON, MSCON (Remote I/O mode) controllers of solenoid valve mode 2, or PCON-CY/CYB, ACON-CY/CYB and DCON-CYB controllers of solenoid valve mode 1. (same for Safety Category Complied Type)
If incremental coordinates are specified on these controllers, a position data error occurs.
Also note that completion of push motion cannot be determined when the push is specified if incremental coordinates are specified.

- (2) Target position [mm]
Enter the target position to move the actuator to.
 - Absolute coordinate specification : Enter the target position you want to move the actuator to, based on the distance from the home. A negative value cannot be entered.
 - Incremental coordinate specification : Enter the target position you want to move the actuator to, based on the distance from the current position. A negative value can also be entered. (Negative direction on displayed coordinate system)
- (3) Speed [mm/sec]
Enter the speed at which to move the actuator.
The default value varies depending on the actuator type.
(Note) For SCON-CA/CAL/CB, SCON2, PCON-CA/CFA/CB/CFB/CBP/CYB, ACON-CA/CB/CYB, DCON-CA/CB/CYB, ERC3, RCP6S, MCON and MSCON, an alarm will be displayed if the set value is lower than the minimum velocity. (Same for Safety Category Complied Type)

(4) Acceleration/deceleration [G]

Enter the acceleration/deceleration at which to move the actuator.

Basically you should set acceleration/deceleration not exceeding the rated value shown in the catalog.


The input range permits entry of values larger than the rated value shown in the catalog, but this is because "shorter tact time when the transferring mass is significantly lighter than the rated value" is assumed.

If the load vibrates during acceleration/deceleration to present problems, decrease the value set here.

(Reference) Acceleration is explained. The same concept applies to deceleration.

1 G = 9800 mm/s²: Acceleration at which the actuator can increase its speed up to 9800 mm/s per second.

0.3 G: Acceleration at which the actuator can increase its speed up to 2940 mm/s (9800 mm/s × 0.3) per second.

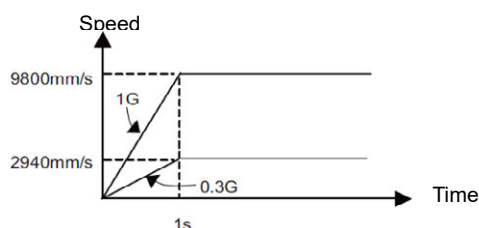

(Note) For SCON-CA/CAL/CB, SCON2, PCON-CA/CFA/CB/CFB/CBP/CYB, ACON-CA/CB/CYB, DCON-CA/CB/CYB, ERC3, RCP6S, MCON and MSCON, an alarm will be displayed if the set value exceeds the rated acceleration/deceleration.

(Same for Safety Category Complied Type)

⚠ Caution: Acceleration/deceleration setting

- (1) Set accelerations/decelerations not exceeding the rated acceleration/deceleration specified in the catalog or in the instruction manual of the actuator. If any acceleration/deceleration is set that exceeds the rated acceleration/deceleration, the life of the actuator may be significantly reduced.
- (2) If the actuator or work part receives impact or generates vibration, lower the acceleration/deceleration. If the system is used continuously with the actuator or work part receiving impact or generating vibration, the life of the actuator may be significantly reduced.
- (3) If the load transferred by the actuator is significantly lighter than the rated payload capacity, you may be able to set accelerations/decelerations exceeding the rating. If this is the case, the tact time can be reduced, so contact IAI. When contacting IAI, tell us the weight, shape and installation method of your work part and installation condition (horizontal/vertical) of your actuator.

(5) Push [% / N]

Select "Positioning operation" or "Push-motion operation."

The factory setting is 0.

0 : Positioning operation is performed.


Other than 0: Push-motion operation with the entered value as the current-limiting value is performed.

In PCON-CBP/CGBP Controllers, values in N (newton) are also shown as a reference except for when the input value is 0.


← Position edit		Axis No. 00	
Position No. 001	Push(%)	60 (600N)	Thres. (%)
Position(mm)	Pos band(mm)	15.00	Acc/Dec mode
			0

By setting Parameter No. 205 (Select Pressing Unit System) to 1: N Unit System in pressing using the force sensor in SCON2 Controller, the pressing force gets available to be input in N (Newton) unit.

Parameter No. 206 (Pressing Force Min. Unit) = 2: 1N

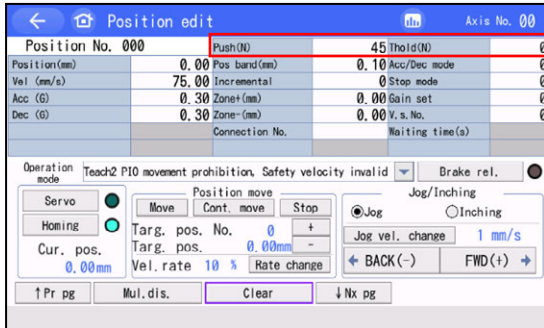

Parameter No. 206 (Pressing Force Min. Unit) = 3: 10N

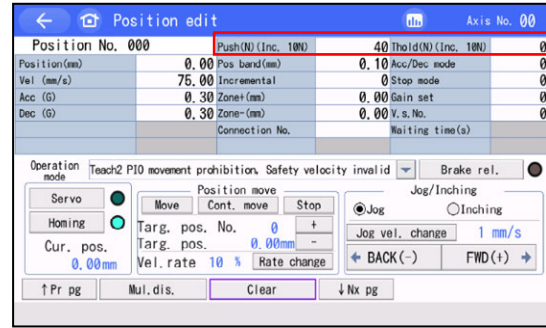

* In case of input in 10N unit system, the last digit of an input value should get rounded down. (e.g.) In "45" is input, it should be "40".

(6) Positioning band [mm]

What this setting means is different between "Positioning operation" and "Push-motion operation."


"Positioning operation":

Define how far before the target position you want to turn the completion signal ON.

The factory setting is 0.1 mm.

For "Positioning operation" (except for the solenoid valve mode below):


Increasing the value of positioning band quickens the start of the next sequence operation, so the tact time can be reduced. Set an optimal value by considering the balance of the entire system.

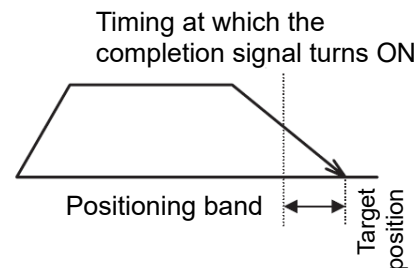

For "Positioning operation" (of the solenoid valve mode below):


Note that on PCON-C/CF/CA/CFA/CB/CFB/CBP, ACON-C/CA/CB, DCON-CA/CB, SCON-C/CA/CAL/CB, SCON2, ROBONET, ERC3 PIO Converter, RCP6S, MCON and MCON (Remote I/O mode) controllers of solenoid valve mode 2 or PCON-CY/CYB, ACON-CY/CYB, DCON-CYB controllers of solenoid valve mode 1, set the band after which the completion signal turns ON. (same for Safety Category Complied Type)

PCON-C/CF/CA/CFA/CB/CFB/CBP, ACON-C/CA/CB, DCON-CA/CB, SCON-C/CA/CAL/CB, SCON2, ROBONET, ERC3 PIO Converter, RCP6S, MCON and MCON (Remote I/O mode) in solenoid valve mode 2, PCON-CY/CYB, ACON-CY/CYB and DCON-CYB in solenoid valve mode 1 (same for Safety Category Complied Type)

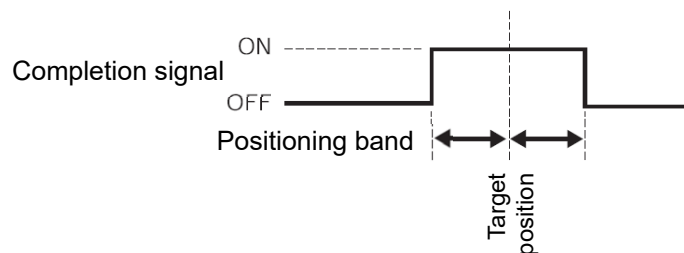

For "Push-motion operation":

Define the maximum push distance from the target position in push-motion operation.
Set an appropriate positioning band by considering the mechanical variation of the work part, by making sure positioning will not complete before the actuator contacts the work part.

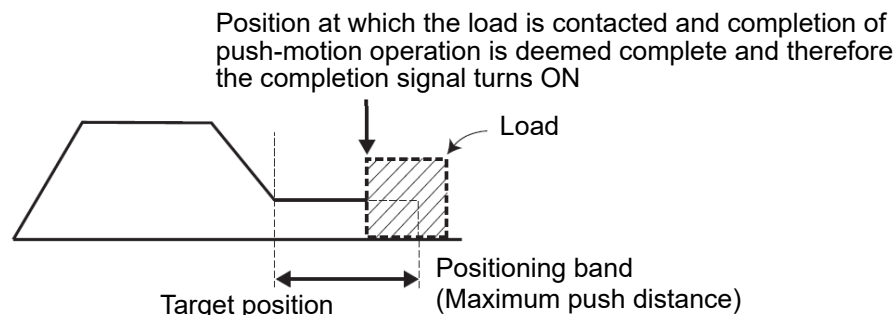

(Note) Depending on the combination with the actuator, PCON-CA/CFA/CB/CFB/CBP, SCON-CA/CAL/CB, SCON2 and ERC3 may not be able to set a value smaller than the minimum positioning width. (same for Safety Category Complied Type)

- (7) Incremental
Specify absolute coordinates or incremental coordinates.
The factory setting is 0.
0: Absolute coordinate specification
1: Incremental coordinate specification

Warning: Be sure to specify absolute coordinates on PCON-C/CF/CA/CFA/CB/CBP, ACON-C/CA/CB, DCON-CA/CB, SCON-C/CA/CAL/CB, SCON2, ROBONET, ERC3 PIO Converter, RCP6S, MCON and MSCON (Remote I/O mode) controllers of solenoid valve mode 2, or PCON-CY/CYB, ACON-CY/CYB and DCON-CYB controllers of solenoid valve mode 1. (same for Safety Category Complied Type)
(Note) If incremental coordinates are specified on these controllers, a position data error occurs.

(8) Zone +/- [mm]


Define, for the standard type, the zone in which the zone output signal turns ON.

These parameters can be set differently for each target position.


[Setting example]

No.	Position [mm]	Zone + [mm]	Zone - [mm]	Remarks
0	5.00	100.00	0.00	Backward end
1	380.00	400.00	300.00	Forward end
2	200.00	250.00	150.00	Intermediate position


Movement command to backward end

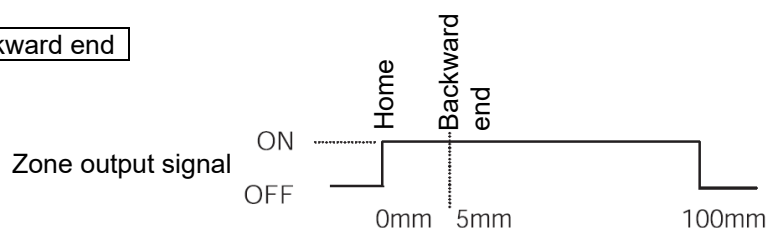

Movement command to forward end

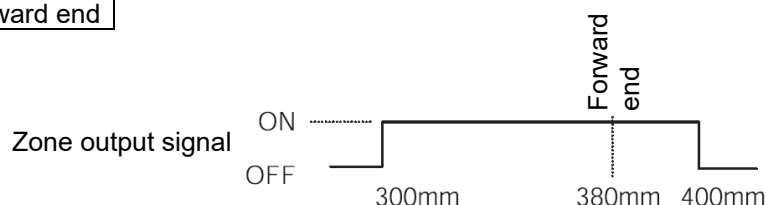

Movement command to intermediate position

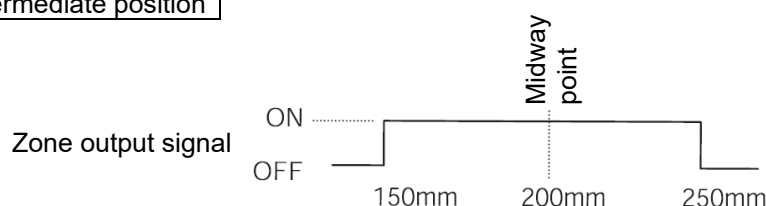

(9) Threshold [% / N]

The setting of the threshold for the pressing torque should be established. The detection signal should be output when the torque (load current) reaches this set value or above in the range of the position zone during the pressing operation. It should be used for judgment of acceptance and failure of operation by monitoring the load current in such operation as press-fitting with the pressing operation.

* In PCON-CBP/CGBP, values are also displayed in N (newton) as a reference. (Except for case of 0)

Also, by setting Parameter No. 205 (Select Pressing Unit System) to 1: N Unit System in pressing using the force sensor in SCON2 Controller, the threshold gets available to be input in N unit or 10N unit. Refer to [(5) Pressing] screen.

Also, it can be used as the threshold for judgment in collision detection.

Refer to the [instruction manual of the controller] for detail.

* Refer to [3.10.2 (6) Collision Detection (for SCON2-CG only)] for the collision detection of SCON2-CG.

(10) Acceleration/deceleration mode

Define the acceleration/deceleration pattern.


The factory setting is 0.

0: Trapezoid pattern

1: S-motion

2: Primary delay filter


Trapezoid pattern

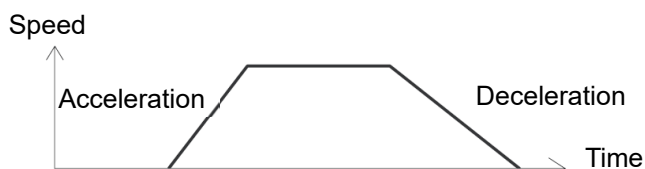

- * Set the acceleration and deceleration in the "Acc" and "Dcl" fields of the position table.

S-motion

The acceleration curve rises gradually at first and then suddenly shoots up in the middle. Use this mode if you want to set high acceleration/deceleration to meet the required tact time, but want to move the actuator gradually at the start of movement and immediately before stopping.

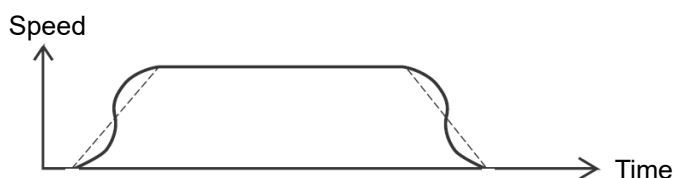


- * The S-motion level is set by parameter No. 56 [S-motion ratio setting]. The setting unit is %, while the setting range is 0 to 100.
(The graph above assumes that the parameter is set to 100%.)
If 0 is set, the S-motion control is disabled.
Note that the setting made here is not reflected in jogging or inching feed performed from a PC or teaching pendant.
- (Note) This setting is not available on ERC2 and PCON (excluding PCON-CA/CFA/CB/CFB/CBP) controllers. On these controllers, parameter No. 56 is reserved.

Primary delay filter

The acceleration/deceleration curve becomes more gradual than linear acceleration/deceleration (trapezoid pattern).

Use this mode if you don't want to apply fine vibration to the work part during acceleration/deceleration.

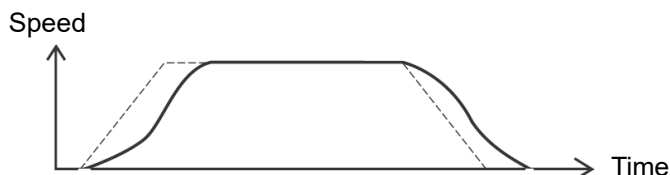

- * The primary delay level is set by parameter No. 55 [Primary filter time constant for position commands]. The setting unit is 0.1 msec, while the setting range is 0.0 to 100.0.
If 0 is set, the primary delay filter is disabled.
Note that the setting made here is not reflected in jogging or inching feed performed from a PC or teaching pendant.
- (Note) This setting is not available on ERC2 and PCON (excluding PCON-CA/CFA/CB/CFB/CBP) controllers. On these controllers, parameter No. 55 is reserved.

(11) Stop mode

Define the power-saving mode to be used while the actuator is standing by after completion of positioning to the target position set in the "Position" field of the applicable position number.


- 0: Disable power-saving mode * The factory setting is 0 (Disable).
- 1: Auto servo OFF mode, with the delay time defined by parameter No. 36
- 2: Auto servo OFF mode, with the delay time defined by parameter No. 37
- 3: Auto servo OFF mode, with the delay time defined by parameter No. 38
- 4: Full servo control mode

Auto servo OFF mode

The servo is turned OFF automatically upon elapse of a specified time after completion of positioning.

(Since holding current does not flow, power consumption is reduced.)

When the PLC issues the next movement command, the servo is turned ON and then the actuator starts moving.

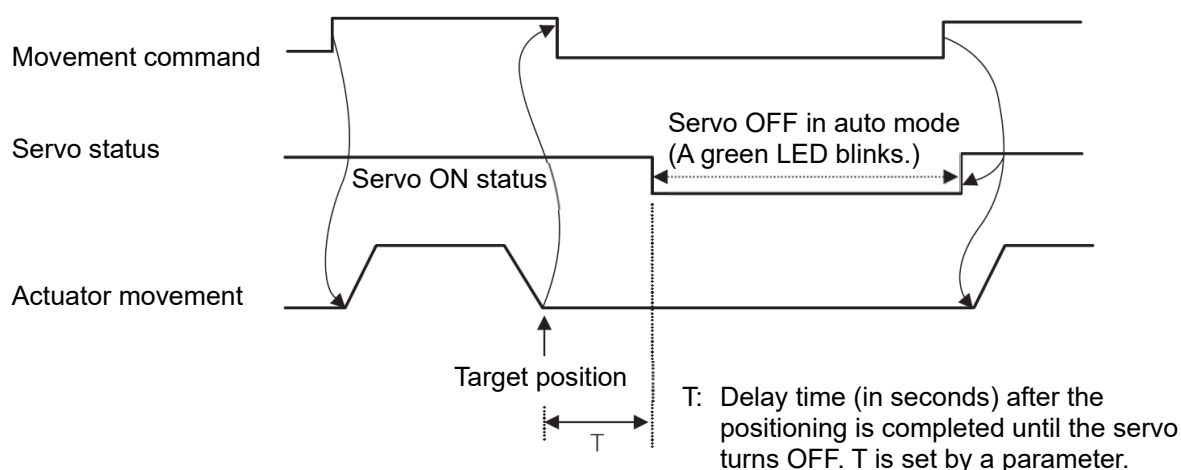

(Note) For RACON and RPCON, this mode cannot be set.

Full servo control mode

selectable for the PCON (for the pulse motor) controller

The holding current can be decreased by servo-controlling the pulse motor.

Although the rate of decrease in holding current varies depending on the actuator model, loading condition, etc., the holding current decreases to approx. one-half to one-quarter.


Note that the servo remains ON, meaning that unwanted position shift does not occur.

The actual holding current can be checked on the current monitor screen of the PC software.

3.10.2 Additional Setting Items for Controllers Applicable for Position Data Comment Input

In addition to items in 3.10.1, following items should be added for controllers applicable for comment input in position data (RCON-PC/PCF/AC/DC/SC and SCON-CB RCON connection type and SCON2).


(1) Comment

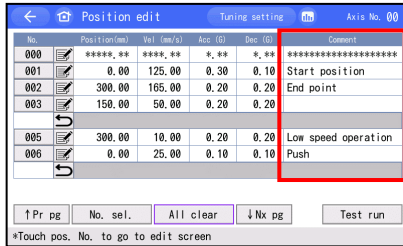

Comment can be set with up to 20 characters of half size font.


The set comment data should be saved in the controller.


(2) One-Row Comment

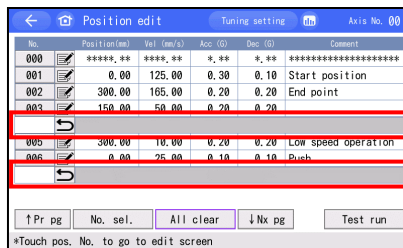

Comment can be set with up to 56 characters of half size font.

The line set to one-row comment should not show a position number.

Touch  on the right hand of a position number, and a confirmation window asking “Do you change the position data on one-row comment?” should appear. Touch [Yes] to set as a one-row comment.

Touch  on the line set as a one-row comment, and a confirmation window asking “Do you change the one-row comment to the position data?” should appear. Touch [Yes] to set it back to position data.




Touch the comment box in a comment or a one-row comment, and the full keyboard should open and input in half size alphabetical and numerical symbols will get available. (If you use the PC software, full size characters will also get available for input.)

Input Operation on Full Keyboard

If you touch a text box in a comment or a one-row comment, the text set in the box should be displayed and a cursor should be shown at the end of the text. If a text is entered in this condition, the text already there should all be erased and a new text will be entered. If it is required to keep the existing text and add another, use an arrow key to move the cursor once, and then enter a text. When you want to finish text edit without confirming the entered text, touch ESC.

Position Data Individual Edit Screen

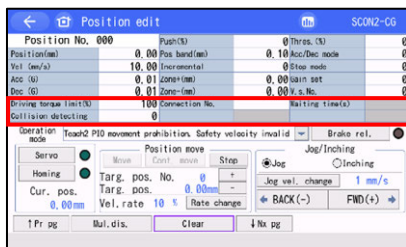

- (3) **Parameter Select Area**
The setting items should differ depending on the value set in Parameter No. 191 Position Data Extension Feature.

Parameter No.191	Setting Item
0	No Setting Item
1	Drive Torque Limitation
2	Push speed

Drive Torque Limitation : Setting for movement current limitation at position movement can be established.

Push speed : Setting for pressing velocity limitation at position movement can be established.

- (4) **Linked Number**
A position number to move to in a row after a movement has finished can be set.
Make it blank and linked operation will get invalid. (If you want it blank, touch [CLR] and [ENT].)
- (5) **Wait Time**
When the setting is established for the linked number, standby time after a movement has finished can be set.
Setting should be available in a range between 0.01 and 600.00 [s].
- (6) **Collision detection (SCON2-CG only)**
There are three types of parameter sets prepared for collision detection.
Establish the parameter set to use for the collision detection for each position.

Collision detection	Parameter Set to be Used
0	Not to be Used
1	Parameter set 1
2	Parameter set 2
3	Parameter set 3

Each parameter set operates with the parameters below.


Collision Detection Feature Parameter Names	Parameter No.			
	0: Not to be Used	1 : : Set No.1	2: Set No.2	3: Set No.3
Collision Judgment Current	—	213	217	221
Collision Judgment Distance	—	214	218	222
Collision Judgment Time	—	215	219	223
Reversing Operation Position Number at Collision Detection	—	216	220	224
Collision Detection Feature Output Selection	—	225		

* Refer to [SCON2 Instruction Manual (ME0458)] for details such as the input range of parameters.

3.10.3 Entering New Data

You can enter new position data in one of four ways.

- (1) Numerical input . . . Enter position data directly as numerical values from the numerical keypad on the teaching pendant.
- (2) Direct teaching . . . Turn off the servo control, move the rod or slider by hand to the target position, and then acquire the achieved position (current position) into the position table and specify that position.
- (3) Jogging . . . Use [Forward+] or [Backward-] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
- (4) Inching . . . Use [Forward+] or [Backward-] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
Touching [Forward+] or [Backward-] once moves the actuator by the specified feed pitch (0.01, 0.10, 0.50, 1.00 or 5.00 (mm)).
Touching and holding the key for 2 seconds will start jogging movement at 1 mm/sec. Thereafter, the speed increases every second. This way, the actuator can be moved more finely than when jogged.


 **Warning:** *To enter position data after the power is turned on, or enter position data beforehand using the method of (2), (3) or (4), you must perform home return first. (Incremental specification)
Before home return is completed, jogging/inching is possible only to the mechanical end. Operate the actuator by visually checking for potential interference.*

(1) Basic operation

[Data entry on the position data table screen]

You can set the target position, speed, acceleration and deceleration in the position data table.

Touch [↑ Pr pg] and [↓ Nx pg] to display the table showing the desired position data number.
Or, touch [No. sel.] and set the desired position data number to display the table.

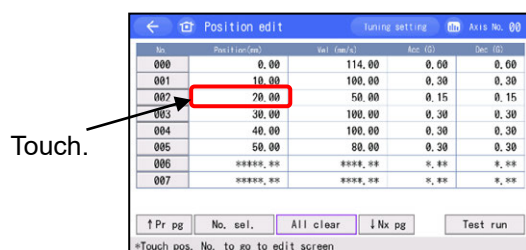

Touch a value in the target position or other field of the desired position data number.

When the numeric keypad appears, key in the desired value and touch [ENT], and the value will be entered.

Touching [All clear] clears all position data.

[Important]


Do not touch [↑ Pr pg] key or [↓ Nx pg] key too fast to switch the windows.

'0' is occasionally shown to the data values that are already registered.

The data is not lost even though '0' is displayed. Touch [↑ Pr pg] key and [↓ Nx pg] key to switch the window and come back, and you will find the data showing the right values.

[Data Input in Position Data Individual Edit Screen]

In Position Data Individual Edit screen, all the items are available for setting.

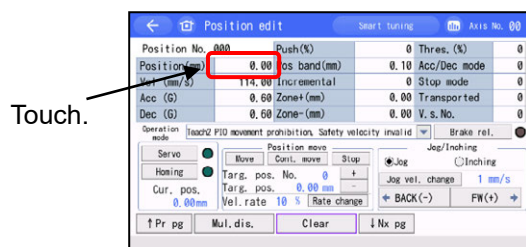


Touch a value in the target position or other desired field.

When the numeric keypad appears, key in the desired value and touch [ENT], and the value will be entered.

Touch [↑ Pr pg] or [↓ Nx pg] to change to the screen of the previous or next position number.
Touching [Mul. dis.] returns the screen to the position data table display.

[JOG / Inching Operation]

Movement and position data reading can be performed by JOG / Inching operation.

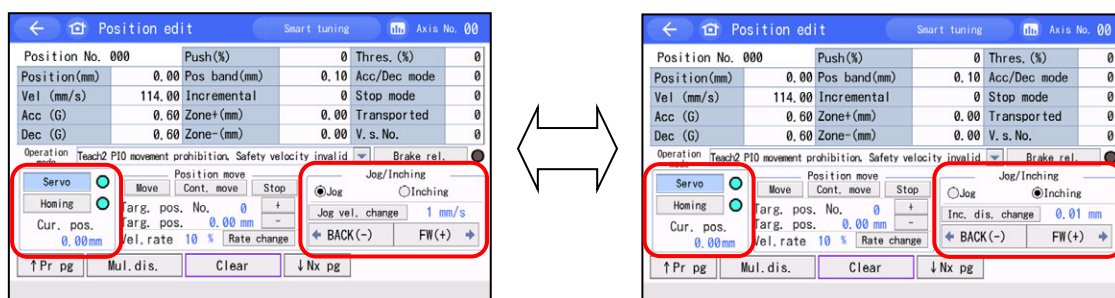

Operation in Position edit Window

- [Servo] : Touching [Servo] while the servo is OFF turns on the axis servo and ☐ becomes lit. Touching [Servo] while the servo is ON turns off the axis servo and ☐ becomes unlit.
- [Homing] : Touching [Homing] while home return is not yet completed causes the axis to return home and ☐ becomes lit.
- ☐ Jog ☐ Inching : Select either JOG or Inching operation. Touch the letter, and the circle (radio button) on the touched side will be marked with a black dot.

While JOG Selected;


- [Jog vel. change] : The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Jog vel. change] is touched.
- [BACK(-)], [FW(+)] : While touching, the axis moves in JOG. [BACK(-)] performs JOG operation in negative direction, and [FW(+)] in positive direction.

While Inching Selected;

- [Inc. dis. change] : Inching distance changes in order of 0.01, 0.10, 0.50, 1.00 and 5.00mm/s for every touch on [Inc. dis. change]
- [BACK(-)], [FW(+)] : A touch performs inching operation of an axis. [BACK(-)] performs inching operation in negative direction, and [FW(+)] in positive direction.

Touch and hold it for two seconds, and JOG operation will be performed in 1mm/sec. The speed increases in every 1 second afterwards.


It is also available to perform JOG / Inching operation by touching [Test run] in the window of the multi-display.

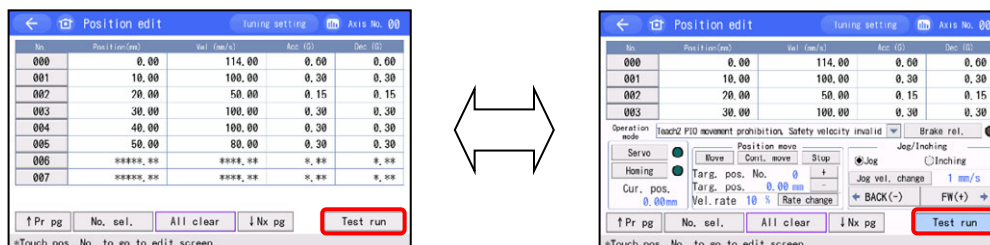


Touch [Test run] again and the window goes back to the multi-display.

Position acquisition operation


Move to the position that you would like to read by JOG / Inching operation.

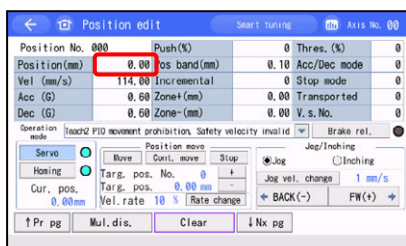

Touch the target position of the position number that you would like to read.

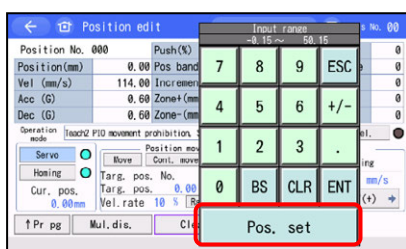

Touch [Pos. set] button.

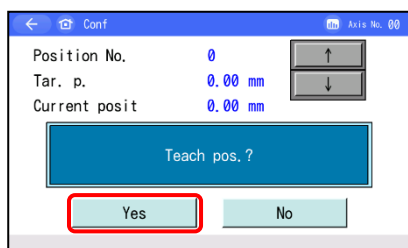

The confirmation window appears.
You can touch [↑] or [↓] to change the position number.
Touching [Yes] acquires the current position.

Return to the position edit window.

3.10.4 Changing Position Data

You can change all position data by overwriting the current values.
Accordingly, four cases are considered just like when data is entered anew.


- (1) Numerical input . . . Enter position data directly as numerical values from the numeric keypad.
- (2) Direct teaching . . . Turn off the servo control, move the rod or slider by hand to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
- (3) Jogging . . . Use [FW(+)] or [BACK(-)] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
- (4) Inching . . . Use [FW(+)] or [BACK(-)] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
The axis moves by the specified pitch (0.01, 0.10, 0.50, 1.00 or 5.00 (mm)) every time [FW(+)] or [BACK(-)] is touched. Touch and hold it for two seconds, and JOG operation will be performed in 1mm/sec. The speed increases in every 1 second afterwards. Severer movement than JOG operation is available.

Take note of the following points when performing a data change operation:

- * In the case of numerical input, only the items overwritten from the numeric keypad will change.
- * In the case of direct teaching, jogging or inching, only the target position will be updated after the current position is acquired. The speed, etc., will remain unchanged.
- * Once the position data is cleared, none of the previously set data will remain. Accordingly, the default data values will be applied, other than positions, the next time you register position data.
To clear the position data table specified for push-motion operation and register data again, be sure to check all position data items and enter necessary data.


3.11 Parameter Editing

Parameters are displayed and edited.

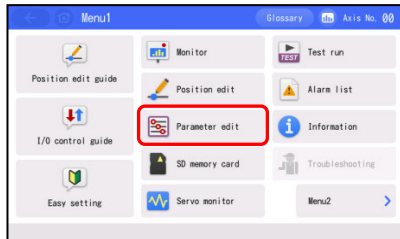

Touch [Parameter edit] on the Menu 1 screen.

If a system password is not "0000," the password entry screen appears.

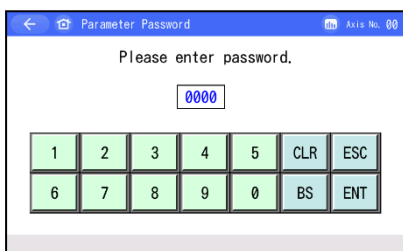

Input the parameter edit password.
Touch [ENT].

The parameter edit password at delivery is set to "0000".

For how to change the parameter edit password, refer to 3.18 Environmental Setting [Parameter Edit Password Change].


A parameter table is displayed.

The screenshot shows the 'Parameter' screen displaying a table of parameters. The table has two columns: parameter name and value. Below the table are navigation buttons: an up arrow, 'No. sel.', and a down arrow.

1. Zone boundary + side	50.30 mm
2. Zone boundary - side	-0.30 mm
3. Soft limit + side	50.30 mm
4. Soft limit - side	-0.30 mm
5. Homing direction (0: CW 1: C CW)	1
6. Pushing stop recognition time	255 msec
7. Servo gain number	11
8. Velocity initial value	114 mm/sec

* The types of parameters vary from one controller to another. Refer to the instruction manual for each controller.

(1) Basic operation

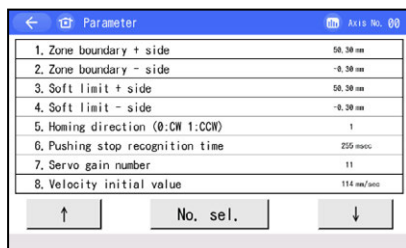


Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Touch [No. sel.] and enter a desired parameter number, and the screen showing the parameter you want to set will appear.


In this example, soft limit+ side is set.

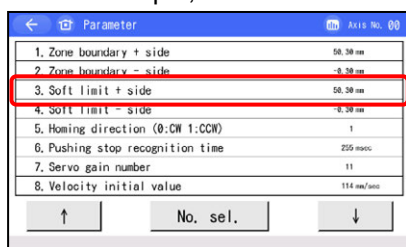

Touch Soft limit+ side, and the numeric keypad will appear. Enter a value and then touch [ENT] on the numeric keypad.

To cancel the change after the numeric keys are displayed, touch [ESC].

Touching the Home button opens a confirmation screen with a message asking if you want to restart the controller.

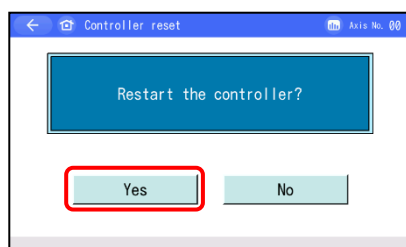


Touch [Yes].

Touch [No] to return to the parameter screen without restarting the controller or reflecting the parameter you have set. To reflect the parameter you have set, you must restart the controller.


Caution: If the controller is not restarted, the parameter that has been rewritten does not translate to the intended action. The parameter will become effective once the controller is restarted or power is reconnected.

The controller is restarted, after which the parameter you have set will be reflected.

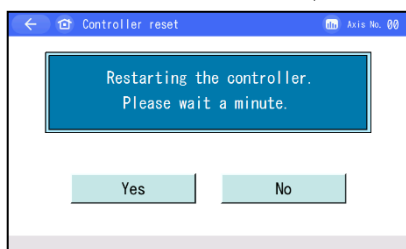


3.12 Test Run

You can perform jogging/inching operations, move to a position or continuously to multiple positions registered in the position table, or move to a position by specifying the position directly.

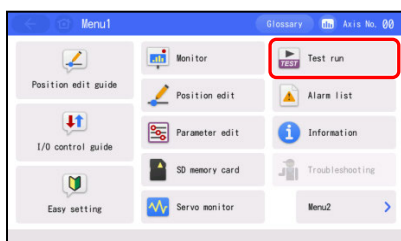

Touch [Test run] on the Menu 1 screen.

The movement menu screen appears.

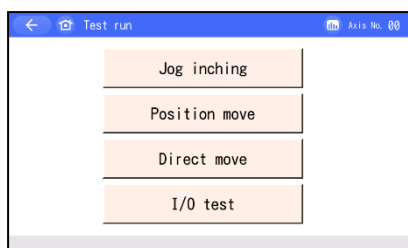

Touch either one of [Jog inching], [Position move], [Direct move] or [I/O test].

(1) Jog inching

Perform jog/inching operation.

Refer to [3.12.1 JOG / Inching Operation] for details about how to operate.

(2) Position move

Move to a position or continuously to multiple positions registered in the position table.

- Move
The actuator moves, in a single step, from the current position to the position corresponding to an arbitrary position data number registered in the position table.
- Continuous
The actuator operates continuously from the specified position data number through successive position data numbers.

* What is continuous movement?

Assume that the following position table has been set. If a continuous movement command is issued from position No. 2, the actuator operates over a group of positions from the position at which the movement command is issued through successive positions where data is available (until the position before the one where no data is registered(*)), such as position No. 2 → No. 3 → No. 1 → No. 2, and so on.

No.	Position (mm)	Vel. (mm/s)	Acc. (G)	Dec. (G)
000	*****	***	***	***
001	0.00	100.00	0.30	0.30
002	10.00	100.00	0.30	0.30
003	50.00	100.00	0.30	0.30
004	100.00	100.00	0.30	0.30
005	*****	***	***	***
006	0.00	114.00	0.20	0.20
007	100.00	114.00	0.20	0.20



↑ Pr pg No. sel. All clear ↓ Nx pg Test run

*Touch pos. No. to go to edit screen

On a touch panel teaching pendant, continuous movement is only permitted over 64 positions from position No. 000 to 063, 064 to 127, etc.

As shown in the example, the actuator returns to position No. 061 after No. 063 (returns to the beginning of a group of successive positions where position data is entered), and moves continuously.

It does not move from position No. 063 to No. 064.

No.	Target position (mm)	Speed (mm/s)
000	*	*
001	100.00	20
	⋮	
060	*	*
061	300.00	30
062	400.00	40
063	500.00	50
064	600.00	60
065	700.00	70
	⋮	



Refer to [3.12.2 Position Movement Operation] for details about how to operate.

(3) Direct move

Input the target position and the speed on the numeric keys to perform movement.

Refer to [3.12.3 Direct Movement Operation] for details about how to operate.


(4) I/O test

Monitoring of the PIO input signals and compulsory output of the output signals can be conducted.

Refer to [3.12.4 I/O test] for details about how to operate.

3.12.1 Jog/Inching Operation

You can perform jog operation and inching operation.

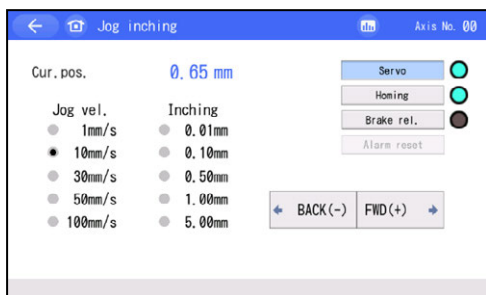

Jog/Inching Screen



When Alarm Generated

[Operation on the jog/inching screen]


- **Jog vel. / Inching** :Select either of 1, 10, 30, 50 or 100mm/s of JOG speed or 0.01, 0.10, 0.50, 1.00, 5.00mm of inching distance, and JOG operation with the selected speed or inching operation with the selected distance can be conducted. The circle (radio button) on the selected one will be marked with a black dot.
- **[Servo]** :Touching [Servo] while the servo is OFF turns on the axis servo and becomes lit.
Touching [Servo] while the servo is ON turns off the axis servo and becomes unlit.
- **[Homing]** :Touch [Homing] and the home-return operation should get executed after a confirmation window for execution is displayed. display should get illuminated when the home-return operation is completed and display should turn off when the home-return operation is incomplete.
- **[Brake rel.]** :For an actuator equipped with a brake, touch [Brake rel.] and the brake gets compulsorily released and the circle turns on.
Touch [Brake rel.] again and the brake works and the circle turns off.
- **[Alarm reset]** :After removing a cause of an error, touch [Alarm reset] to cancel the alarm.
- **[BACK(-)], [FWD(+)]** :When JOG operation is selected, while touching them, the axis moves in the set speed. When inching operation is selected, every time touching them, the axis moves for the set distance.
[BACK(-)] performs JOG operation in negative direction.
[FWD(+)] performs JOG operation in positive direction.
In inching operation, touch and hold them for two seconds, and JOG operation will be performed in 1mm/sec. The speed increases in every 1 second afterwards.

Caution: An axis could drop if the brake compulsory release is performed while the servo is off when the axis is installed in the vertical orientation.


Caution: Operation with JOG Switch on Front Panel of RCON
If TB-02 gets disconnected from the controller in the condition that this window is open, JOG switch operation will get disabled.

3.12.2 Position Movement Operation


Move to a position or continuously to multiple positions registered in the position table.
The items to be displayed should differ depending on valid/invalid of the safety velocity. Refer to [3.13 TP Operation Mode]

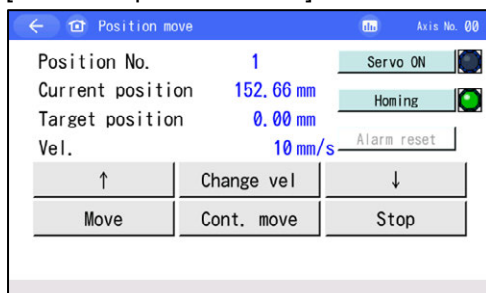


When Safety Velocity is Valid

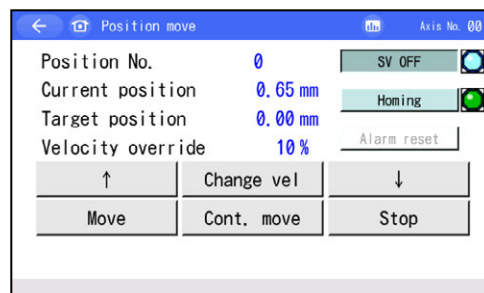

When Safety Velocity is Invalid

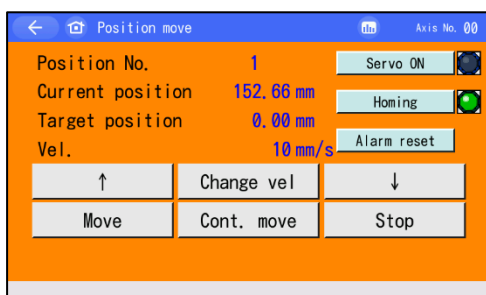

When Alarm Generated
with Safety Velocity Activated

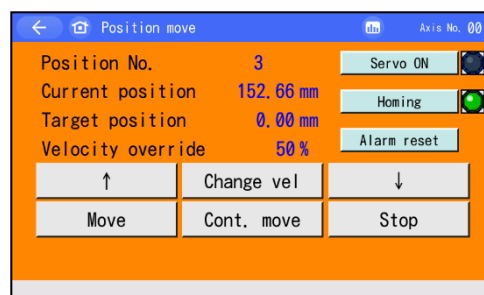

When Alarm Generated
with Safety Velocity Inactivated

[Operation on the position movement screen]

- Position No. : Displays the selected position number.
- Current position : Displays the current position.
- Target position : Displays the target position set in the selected position number.

When Safety Velocity is Valid;

- Vel. : The set velocity (mm/s) should be displayed.

When Safety Velocity is Invalid;

- Velocity override : Displays the selected speed override (%).
- [Servo ON] : Touching [Servo ON] while the servo is OFF turns on the axis servo and becomes lit.
Touching [Servo OFF] while the servo is ON turns off the axis servo and becomes unlit.
- [Homing] : Touch [Homing] and the home-return operation should get executed after a confirmation window for execution is displayed. display should get illuminated when the home-return operation is completed and display should turn off when the home-return operation is incomplete.
- [Alarm reset] : After removing a cause of an error, touch [Alarm reset] to cancel the alarm.

- [↑], [↓] : Touch [↑] and [↓] to select a desired position number.
- [Change vel] : When Safety Velocity is Valid
Speed can be changed in order of 1mm/s, 10 mm/s, 30 mm/s, 50 mm/s and 100 mm/s every time touching [Change vel]


: When Safety Velocity is Invalid
Speed override can be changed in order of 10%, 50% and 100% every time touching [Change vel].
- [Move] : Touch [Move] after the home-return operation is completed, and an axis moves to a target position.
- [Cont. move] : Touch [Cont. Move] after the home-return operation is completed, and an axis performs continuous drive until pressing [Stop].
- [Stop] : Touching [Stop] stops the axis.




Caution: Operation with JOG Switch on Front Panel of RCON
If TB-02 gets disconnected from the controller in the condition that this window is open, JOG switch operation will get disabled.

3.12.3 Direct Movement Operation

A position is specified directly to move the axis.

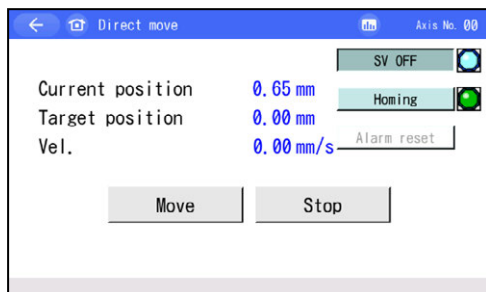

Direct Movement Screen

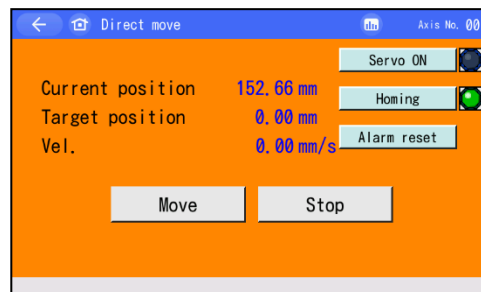

When Alarm Generated

[Operation on the direct movement screen]

- **Current position** : Displays the current position.
- **Target position** : Touching "Target position" displays the numeric keypad. Enter a desired target position and then touch [ENT].
- **Vel.** : Touching "Vel." displays the numeric keypad. Enter a desired speed and then touch [ENT].
- **[Servo ON]** : Touching [Servo ON] while the servo is OFF turns on the axis servo and ○ becomes lit.
Touching [Servo OFF] while the servo is ON turns off the axis servo and ○ becomes unlit.
- **[Homing]** : Touch [Homing] and the home-return operation should get executed after a confirmation window for execution is displayed. ○ display should get illuminated when the home-return operation is completed and ○ display should turn off when the home-return operation is incomplete.
- **[Alarm reset]** : After removing a cause of an error, touch [Alarm reset] to cancel the alarm.
- **[Move]** : Touching [Move] moves the axis to the target position you have set.
- **[Stop]** : Touching [Stop] stops the axis movement.




Caution: Operation with JOG Switch on Front Panel of RCON
If TB-02 gets disconnected from the controller in the condition that this window is open, JOG switch operation will get disabled.


3.12.4 I/O test

PIO input signal and the output signal can be monitored.
You can also touch OUT00 to OUT15 to forcibly turn ON/OFF the corresponding output signals.

[Operation on the I/O test screen]

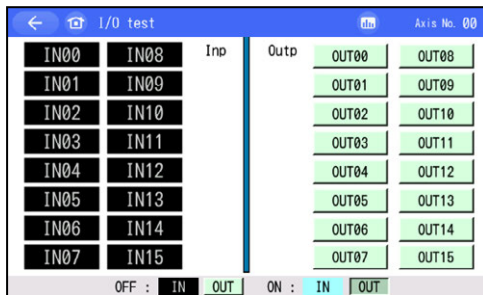

If it is required to have OUT00 in status of off to turn on, touch [OUT00].

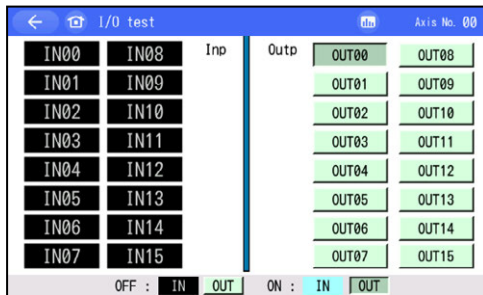


OUT00 should turn on.

Touch [OUT00] again and it should turn off.


3.13 TP Operation Mode

An operation mode is set if the manual (MANU) mode is selected.

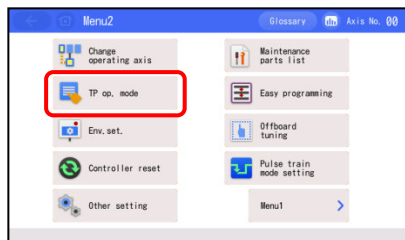

Touch [TP op. mode] on the Menu 2 screen.

The TP operation mode screen appears.

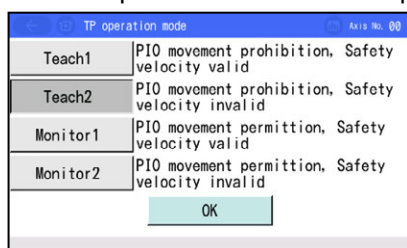


Select and touch [Teach1] or other desired mode.

Select a manual operation mode from the menu containing the following four items:

- Teach1 (Safety velocity valid / PIO movement prohibition)**
 - PIO movement prohibition** : You can write position data, parameters, etc., to the controller and issue actuator operation commands.
 - Safety velocity valid** : The maximum speed corresponds to the safety speed set by a parameter, regardless of the speed specified in the position data table.
- Teach2 (Safety velocity invalid / PIO movement prohibition)**
 - PIO movement prohibition** : You can write position data, parameters, etc., to the controller and issue actuator operation commands.
 - Safety velocity invalid** : You can move the actuator at the speed (greater than the safety speed) set in the position data table.
- Monitor1 (Safety velocity valid / PIO movement permission)**
 - PIO movement permission** : Only monitoring is permitted. You cannot write position data, parameters, etc., to the controller or issue actuator operation commands. Operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 - Safety velocity valid** : The maximum speed corresponds to the safety speed set by a parameter, regardless of the speed command from the PLC.
- Monitor2 (Safety velocity invalid / PIO movement permission)**
 - PIO movement permission** : Only monitoring is permitted. You cannot write position data, parameters, etc., to the controller or issue actuator operation commands. Operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 - Safety velocity invalid** : You can move the actuator at the speed (greater than the safety speed) according to the command from the PLC.

3.14 Alarm List


A list of alarms that may generate after the controller power is turned on is shown. [For alarm details, refer to 9, “Error Display.”]

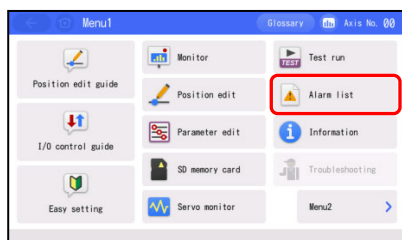


Touch [Alarm list] on the Menu 1 screen.

The controller's alarm list appears.

Controller without the calendar function

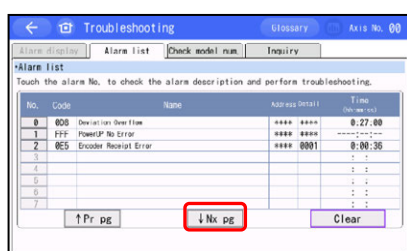

Touching [↓ Nx pg] displays the list of the next screen.

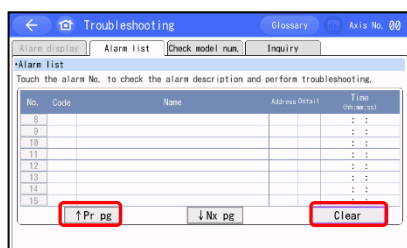


Touching [↑ Pr pg] displays the list of the previous screen.

Touching [Clear] clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on. It does not indicate an error.
The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.

Controller with the calendar function

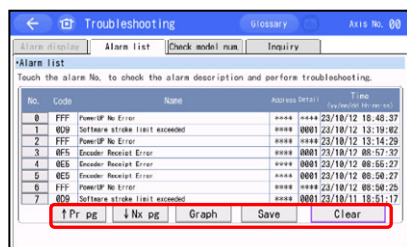

Touching [↑ Pr pg] displays the list of the previous screen.

Touching [↓ Nx pg] displays the list of the next screen.

Touch [Save] and the screen goes to the window to save to a Secure Digital memory card to save the alarm information.

Refer to [3.19.1 Data Backup of the Controller]


Touching [Clear] clears all alarms.

The screen can be moved to the drive recorder window from [Graph] from SCON2 controller. Refer to [3.27 Drive Recorder Feature]


(Note) “PowerUP No Error” indicates that the controller power was turned on. It does not indicate an error.
The occurrence time corresponds to the time each alarm occurred.

3.15 Controller Reset

The controller is restarted.

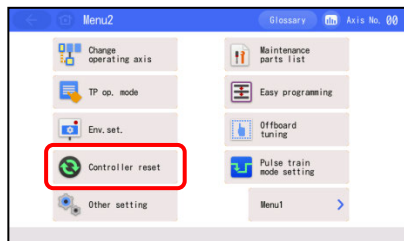


Touch [Controller reset] on the Menu 2 screen.

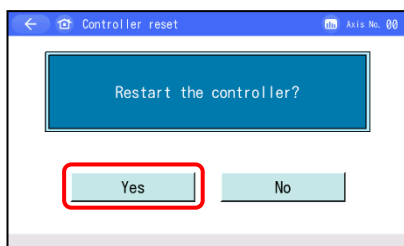

Touch [Yes].


Touch [No] to return to the Menu 2 screen without restarting the controller.

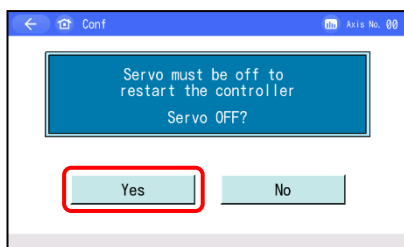

This window appears if the servo is on.

Touch [Yes].

Touch [No] to return to the Menu 2 screen without restarting the controller.

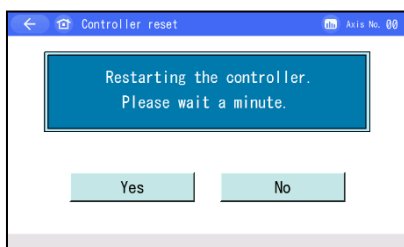


The controller is restarted.


Returns to Menu 1 Screen.

3.16 Other Settings

Parameter initializing, axis number change, loadcell calibration, loadcel invalidation, I/O customizing, switching drive mode can be conducted.

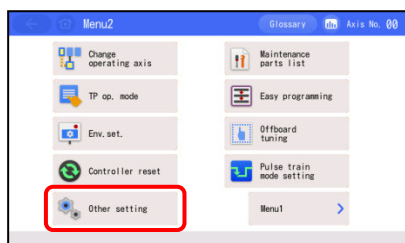

Touch [Other setting] in Menu 2 screen.

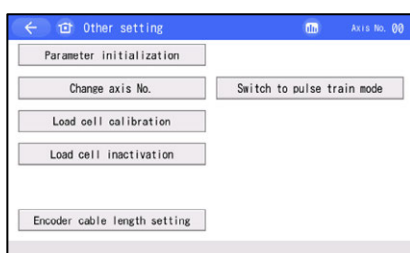

Other setting screen opens.
(Buttons to be displayed should differ depending on the controller models.)


Touch a button of the feature that you would like to conduct such as [Parameter initialization].

3.16.1 Parameter Initialization


The parameters are reset to their factory default settings (initialized).

Caution: Once the parameters are initialized (to their factory default settings), all parameters the user has set will return to the values set at the factory. Exercise caution.


Touch [Parameter initialization] in Other setting screen to display Parameter initialization screen.

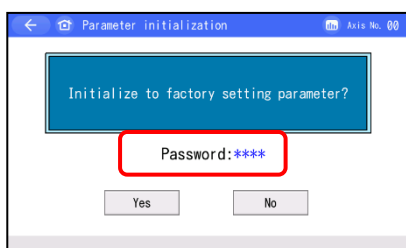

Touching Password displays the numerical keypad. Input "5119" and touch [ENT].

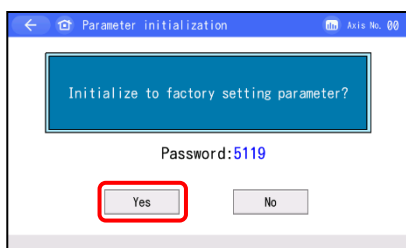

Touch [Yes], and the confirmation screen for controller reboot appears.

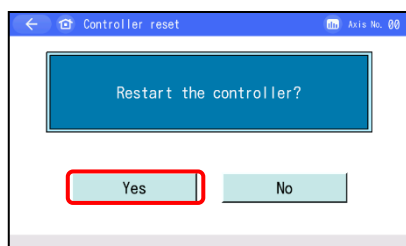


Touch [Yes].

Touch [No], and the controller will not be rebooted and the screen returns to the previous.


Caution: If the controller is not restarted, the parameters that have been rewritten to their factory settings do not translate to the factory-set operations. The factory settings will become effective once the controller is restarted or power is reconnected.

3.16.2 Axis Number Change

Touch [Change axis No.] in Other setting window to display Axis No. setting screen.

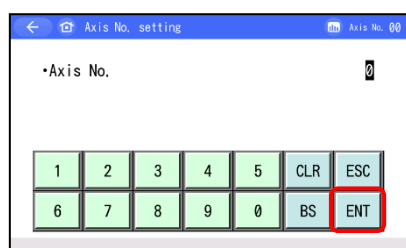

You can set a value between 0 and 15.
Set a desired axis number and then touch [ENT].

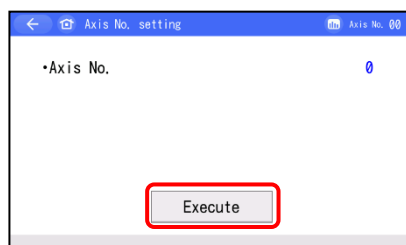


Touch [Execute].

3.16.3 Load Cell Calibration

Loadcell calibration can be conducted on an actuator equipped with a loadcell. (SCON-CB-F, SCON2-CG-F, PCON-CBP/CGBP)

Touch [Load cell calibration] in Other setting window to display Load cell calibration screen.

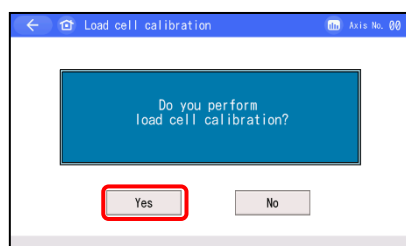

Touch [Yes].

3.16.4 Load Cell Inactivation

Function of the loadcell can be invalidated temporarily on an actuator equipped with a loadcell. (SCON-CB-F, SCON2-CG-F, PCON-CBP/CGBP)

Touch [Load cell inactivation] in Other setting screen, and the controller gets rebooted and the loadcell becomes invalid.

Caution: There will be no confirmation window appearance after touching [Load cell inactivation] button.

Loadcell becomes valid at reboot of the next controller or when the power is back on.

3.16.5 I/O Customizing

Feature Dedicated for PCON-CYB/ACON-CYB/DCON-CYB

I/O customizing becomes available if PIO pattern is set to "5: User Select Mode] in PCON-CYB, ACON-CYB and DCON-CYB.

Select a desired number of the positions (4, 8, 16, 32 or 64), and necessary number of command position number signals (PC*) and the start signal CSTR should be assigned to the input ports, and necessary number of complete position number signals (PM*) and the positioning complete signal PEND to the output ports. Desired signals from the indicated signals (refer to Signals Available for Assignment) can be assigned to the other ports.

Touch [I/O Customizing] in Other Setting window to show the I/O customizing window.

(It is set to the initial assignment condition as shown in the table below at delivery.)

Select a number of positions.

In accordance with the selected number of positions, necessary signals should be assigned to the input and output ports.

A pulldown button button should be displayed to a port available for signal assignment.

Touch the pulldown button and select a signal to be assigned.

Once all the necessary items are selected, touch [OK] to confirm the assignment.

The number of positioning points will be changed and the input and output signals will become valid after a reboot.

Number of positioning points	IN/OUT	IN/OUT 0	IN/OUT 1	IN/OUT 2	IN/OUT 3	IN/OUT4	IN/OUT5	IN/OUT 6	IN/OUT 7
4 points	IN	PC1	PC2	CSTR	Available for Assignment	Available for Assignment	Available for Assignment	Available for Assignment	Available for Assignment
	OUT	PM1	PM2	PEND	Available for Assignment	Available for Assignment	Available for Assignment	Available for Assignment	Available for Assignment
8 points	IN	PC1	PC2	PC4	CSTR	Available for Assignment	Available for Assignment	Available for Assignment	Available for Assignment
	OUT	PM1	PM2	PM4	PEND	Available for Assignment	Available for Assignment	Available for Assignment	Available for Assignment
16 points	IN	PC1	PC2	PC4	PC8	CSTR	Available for Assignment	Available for Assignment	Available for Assignment
	OUT	PM1	PM2	PM4	PM8	PEND	Available for Assignment	Available for Assignment	Available for Assignment
32 points	IN	PC1	PC2	PC4	PC8	PC16	CSTR	Available for Assignment	Available for Assignment
	OUT	PM1	PM2	PM4	PM8	PM16	PEND	Available for Assignment	Available for Assignment
64 points	IN	PC1	PC2	PC4	PC8	PC16	PC32	CSTR	Available for Assignment
	OUT	PM1	PM2	PM4	PM8	PM16	PM32	PEND	Available for Assignment

Initial Assignment at Delivery									
64 点	IN	PC1	PC2	PC4	PC8	PC16	PC32	CSTR	RES
	OUT	PM1	PM2	PM4	PM8	PM16	PM32	PEND	*ALM

■ Signals Available for Assignment

Any signal in the list of signals below can be selected.

For the detail of each signal, please refer to the instruction manual of each controller.


Input	
Signal name	Content
NC (-)	Feature not assigned
* STP	Release of pause : Pause command when OFF
SON	Servo ON command : Servo turned on when ON
HOME	Home returnc : Home-return command when ON
RES	Reset : Reset executed when ON
JISL	Jog/inching switching : JOG operation when OFF, Inching operation when ON
JVEL	Jog-speed/inch-distance switching : Parameter No. 26 "JOG Velocity" and Parameter No. 48 "Inching Distance" are used when it is off and Parameter No. 47 "JOG Velocity 2" and Parameter No. 49 "Inching Distance 2" when it is on.
JOG+/JOG-	Jog : JOG+ : Movement to direction opposite home when ON JOG- : Movement to direction of home when ON * The direction of movement should be the other way around of the reversed type.
RMOD	Operation mode : AUTO Mode when OFF, MANU Mode when ON
BKRL	Brake release : Brake Released when ON

Output	
Signal name	Content
NC(-)	Feature not assigned
MOVE	Moving signal : It turns ON during actuator movement process
SV	Operation preparation end : Servo turned on when ON
HEND	Home return completion : Home-return command when ON
* ALM	Alarm : It turns OFF when an alarm is generated
ZONE1	ZONE : It turns ON when the current position is in the zone setting
ZONE2	ZONE 2 : It turns ON when the current position is in the zone setting
PZONE	Position zone : It turns ON when the current position is in the position zone setting
* EMGS	Emergency stop : It turns OFF when in emergency stop status.
RMDS	Operation Mode Condition : It turns off when the current condition is in AUTO Mode and on when in MANU Mode
LOAD	Load Output Judgment : It turns ON when reached and OFF when not reached
TRQS	Torque level : It turns ON when reached and OFF when not reached
PSFL	Pressing and a miss : It turns ON when miss-pressing occurred
PWR	Controller ready : It turns ON when it is ready
CM1, CM2, CM4, CM8	<p>With the combination of the output of these signals, the current command current rate (ratio to the rated value) should be output.</p> <p>* In order to output the command current rate, it is necessary that all of the four signals, CM1, CM2, CM4 and CM are assigned. With this as a reason, it is available only when the number of positioning points is either four points or eight points.</p> <ul style="list-style-type: none"> • PCON-CYB outputs the current load current in every 6.25% period. • ACON-CYB and DCON-CYB output the current load current in every 18.75% period.
PUSH	In Pressing Process : It turns ON during pressing process
GHMS	In Home-Return Process : It turns on during home-return process
* ALMC	Critical Malfunction Status : It turns off when an alarm occurred which disables operation to be continued (It is necessary to reboot the power)
MEND	It turns on when positioning is complete, pressing is complete or miss-pressing is occurred and turns off when operation started
* OVLW	Overload Warning Signal : It turns on when the estimated motor temperature exceeds the setting and turns off when it falls below the setting
* ALML	Light Malfunction Status : It turns off when an alarm occurred for light malfunction which operation is still possible to continue


(Note) “*” in the symbol names above shows signals in active low.

3.16.6 Encoder Cable Length Setting


Set the "Encoder Voltage Level" suitable for the selected encoder cable length (m)

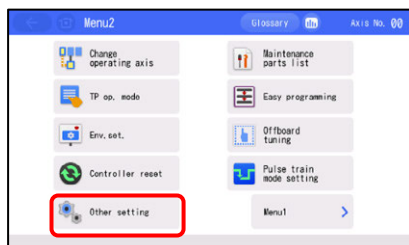

Touch [Other setting] on the Menu 2 screen.

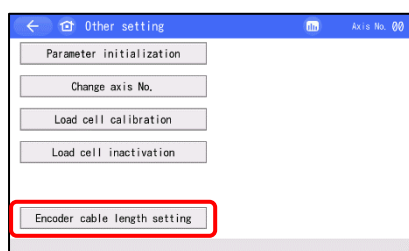


Touch [Encoder cable length setting]

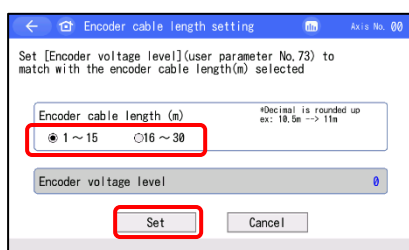


Select the encoder cable length.

Touch [Set]

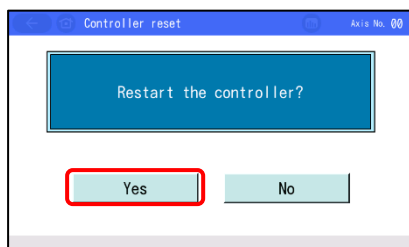


Touch [Yes]

Touch No and the controller will not perform reboot and the screen will go back to the previous.

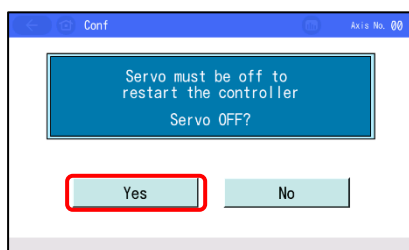

Touch [Yes]

Touch No and the controller will not perform reboot and the screen will go back to the previous.

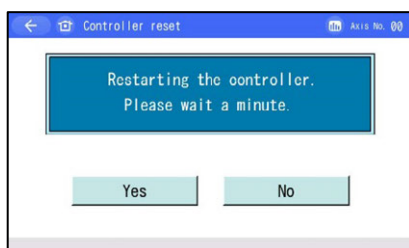

The controller should be rebooted.


The screen goes back to Menu 1.

3.16.7 Switching Drive Mode


It is a feature dedicated for SCON2 controllers.

The mode can be switched over between Positioner Mode and Pulse Train Control Mode.


[1] Switching over from Positioner Mode to Pulse Train Control Mode

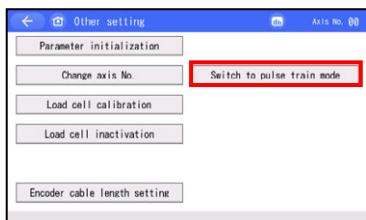

Touch [Switch to pulse train mode].

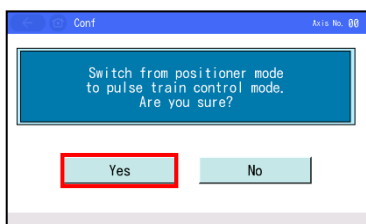


Touch [Yes].

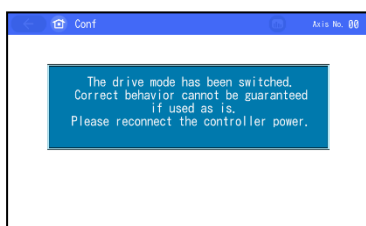


Reboot the power supplied to the controller.


[2] Switching over from Pulse Train Control Mode to Positioner Mode

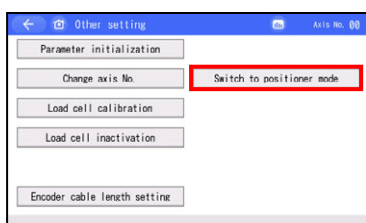

Touch [Switch to positioner mode].

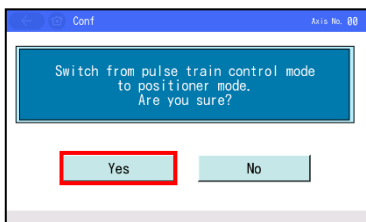


Touch [Yes].

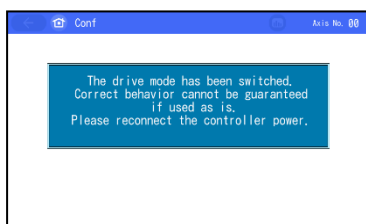


Reboot the power supplied to the controller.

3.17 Information Display

Information such as the controller version, manufacturing information and maintenance information is displayed.

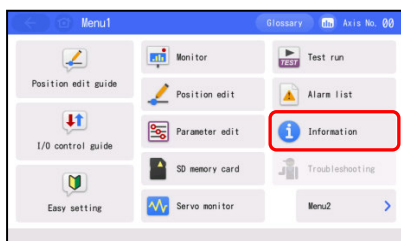

Touch [Information] on the Menu 1 screen.

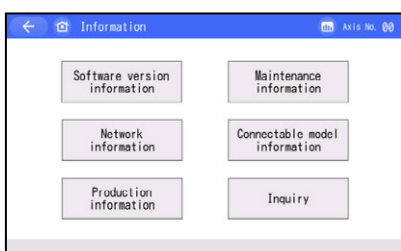


The information screen appears.

Touch a button of the feature that you would like to display such as [Software version information].

3.17.1 Display Screen for Each Type of Data

3.17.1.1 Software version information

Touch [Software version information] in Information screen.

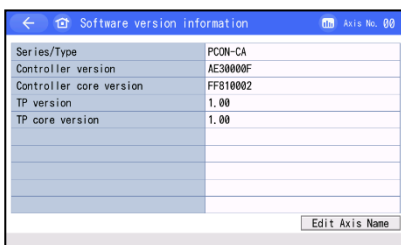

Software version information screen opens.


In this, shows the series/type of the controller and versions of the controller and this teaching pendant.

Touch [Edit Axis Name] and the name of axes can be edited.

Refer to [3.17.2 Axis Name Edit] for how to edit an axis name.

3.17.1.2 Network information

Touch [Network information] in Information screen.

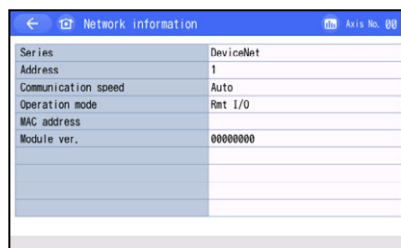


Network information screen opens.

In this, shows various of information regarding the network.


3.17.1.3 Production information

Touch [Production information] in Information screen.

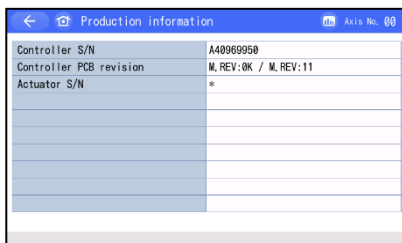


Production information screen opens.

In this, shows manufacturing information such as the serial number of the controller and actuators.

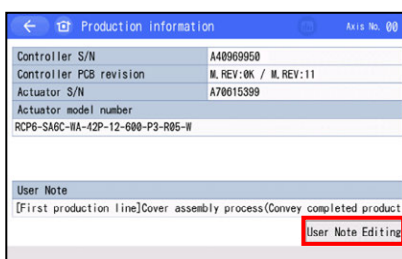

Actuator S/N, actuator model number and user note should be displayed when both the controller and actuators are applicable for the information management system and Parameter No. 192 Actuator Identification System Use Flag is set to 1: Valid.

For the Actuator S/N, actuator model number and user note, the information saved in the encoder should be displayed.

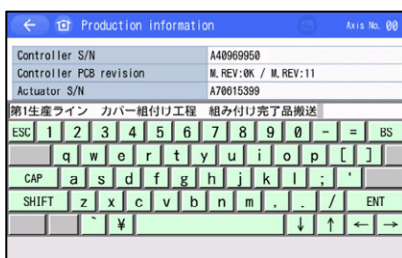


Touch [User Note Editing], show the full keyboard, and it is available to edit the memo.

The user note is available for editing up to 124 characters in half size at the maximum. (Only half size alphabetical and numerical characters and half size symbols are available for input in TB-02.)

Refer to “Input Operation on Full Keyboard” in 3.10.2 for entering a text.

3.17.1.4 Maintenance information

Touch [Maintenance information] in Information screen.

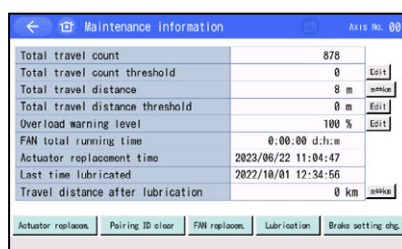


Maintenance information screen opens.

Refer to [3.9.2 Maintenance Information Screen] for the items to be shown and how to operate the buttons.

3.17.1.5 Connectable model

Touch [Connectable model] in Information screen.

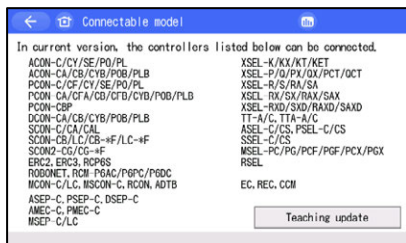

Connectable model screen opens.

Controllers connectable to this teaching pendant with the current version should be displayed.

Refer to [10.2 Teaching Update] for how to update teaching.

3.17.1.6 Inquiry

Touch [Inquiry] in Information screen.




Inquiry screen opens.

3.17.2 Axis Name Edit


A name can be set on an axis. To show the axis name, select Axis Name at the axis name display section in the environment setting screen. Refer to [3.18 Environment Setting [Axis Name Display]]

Axis name is shown in the right top of each screen or select axis screen. Even if the axis name is set to be shown, axis number will be shown if there is no axis name setting conducted.

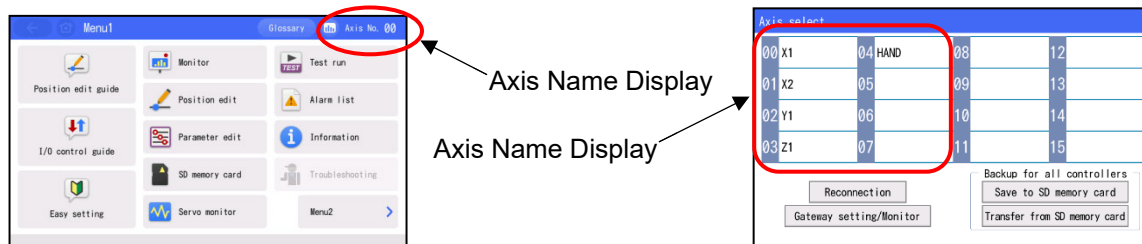


(Note) The available characters for setting in TB-02 are capitalized font English characters (from A to Z) and numbers (from 0 to 9).

[Axis Name Edit Operation]

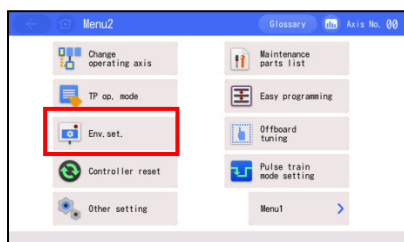


Touch [Env. set.] on the Menu 2 screen.

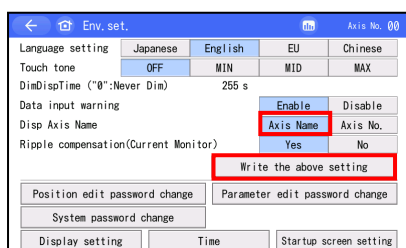


Set to "Axis Name" for the axis name display.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

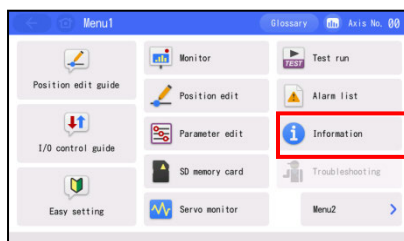


Touch [Information] on the Menu 1 screen.

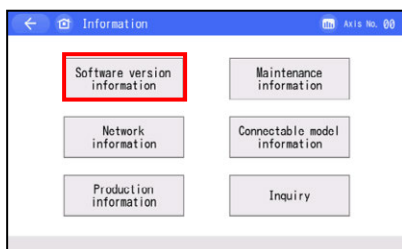


Information screen opens.


Touch [Software version information].

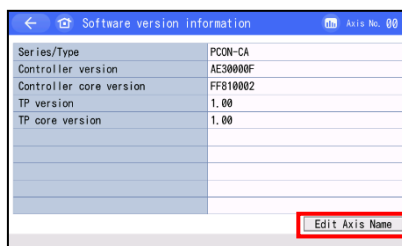

Touch [Edit Axis Name] in Software version information screen.

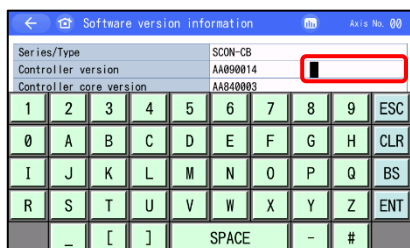


The right of the controller core version display is the input area. Character select buttons are shown in the half bottom of the screen.

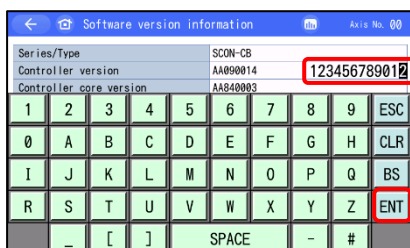

Input a name and touch [ENT].

The number of characters available for input is 12 in half-size font characters.

Touch [ENT] with nothing input, and it is defined as no setting. With no setting, an axis number will be shown.

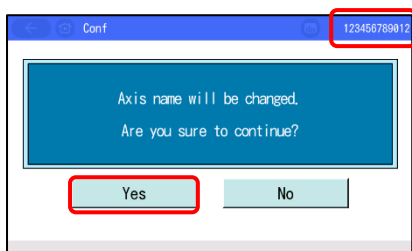


The axis name should be shown on the top right. (Temporary setting)

Touch [Yes].


Touch [No] and the condition goes back to before setting.

3.18 Environment Setting

You can change the language setting, touch operation sound setting, dim display time setting, data input warning setting, axis name display setting, position editing password change / PrsProgram edit password change, parameter edit password change, system password change, display setting, time setting and Startup screen setting.

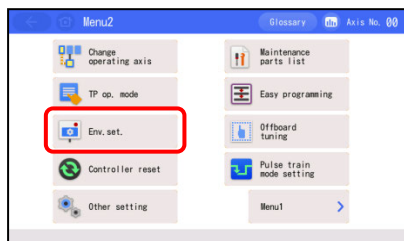


Touch [Env. set.] on the Menu 2 screen.

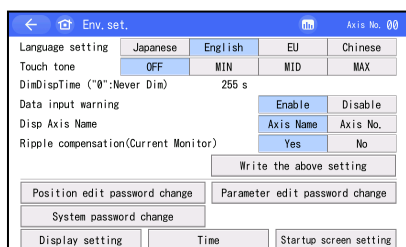

The environment setting screen appears.


Servo Press Type Controller

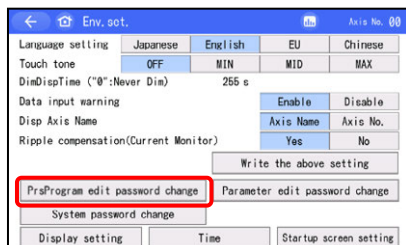

For the servo press type controllers; [Change Prs Program Edit Password] button should be shown instead of [Change Position Edit Password] button.

[language setting]

Select a language to show from Japanese / English / EU / Chinese.

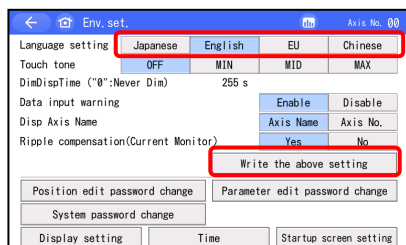


Touch a language (such as [Japanese]) to show.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

For the operation procedures in detail to change the language, refer to 3.1 Switching Display Language.

[Touch tone]

You can select whether or not to output a touch tone.

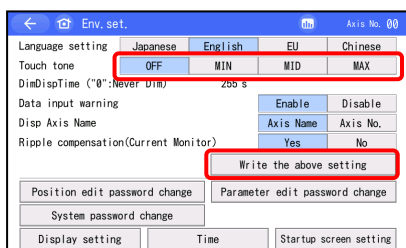


Touch [OFF]. A touch tone is not output.

Touch [MAX], [MID] or [MIN]. A touch tone is output.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

[DimDispTime]

Set the dim display time when not being operated.
Zero seconds mean the display is on all the time.

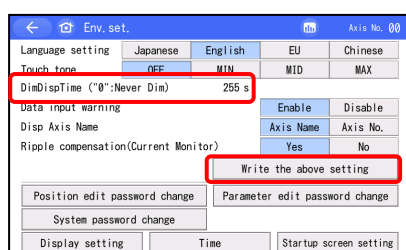

Touching [DimDispTime ("0": Never Dim) 0 sec] displays the numerical keypad.


Enter a desired time and touch [ENT].

You can set a value between 0 to 255 seconds.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

[Data input warning]

The warning can be output when a value less than the minimum speed and a value exceeding the rated acceleration/deceleration speed are entered in the position data. Note that the value is entered even if the warning occurs. Always use within the specification of the actuator.

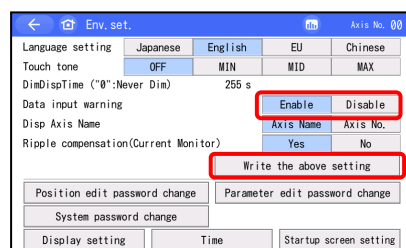


Touch [Enable] to give the warning.

Touch [Disable] not to give the warning.

Select either Enable or Disable, and then touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

[Axis Name Display]

Make a selection whether to show the name or number for axis display.

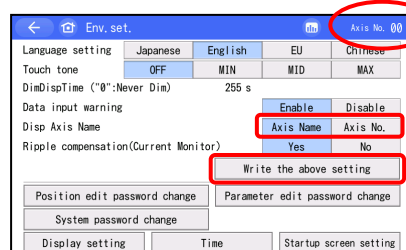

Axis Name Display

Touch [Axis Name] and the name will be shown.


Touch [Axis No.] and the number will be shown.

Select either Axis Name or Axis No, and touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

The axis name can be set in Software version information screen.
Refer to [3.17.2 Axis Name Edit]

[Ripple Compensation]

Setting should be conducted whether to have the ripple compensation or not in the monitor window and data monitor window.

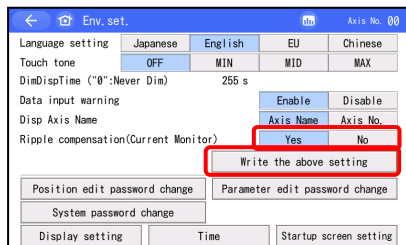


Touch [Yes] and the setting should be established with ripple compensation.

Touch [No] and the setting should be established without ripple compensation.

Select either yes or no and touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.


[Change Pos Edit Password/Prs Program edit password change]
Change the position edit password or Prs Program edit password.

In Change Prs Program Edit Password, the display “Position Edit Password” is replaced with “Prs Program Edit Password”, but the way to operate the window should be the same.

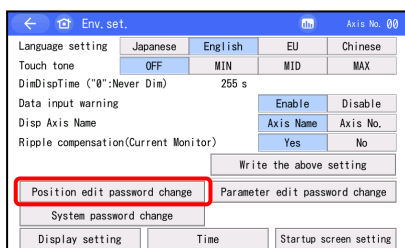


Touch [Position edit password change] or [Prs Program edit password change].

If the system password is not “0000,” the password entry screen appears.

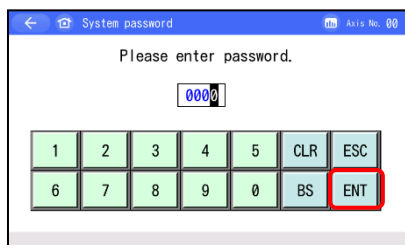


Input a system password.
Touch [ENT].

The default system password is “5119.”
For how to change the system password, refer to [Change System Password] as described later.

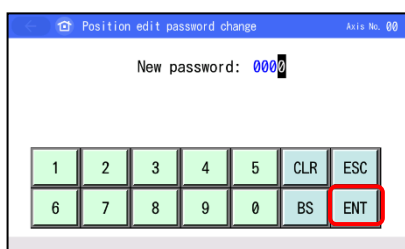


Enter the new position edit password/Prs Program edit password change to change to.
If the position edit password/Prs Program edit password is not set, enter “0000.”

Touch [ENT].

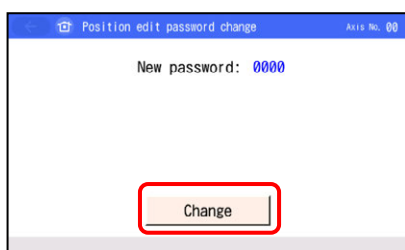


Touch [Change].

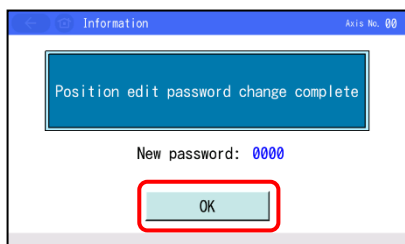

The new password after change will be displayed. Make sure it shows the same as the password you have set.


Touch [OK].

[Change Parameter Edit Password] Change the parameter edit password.

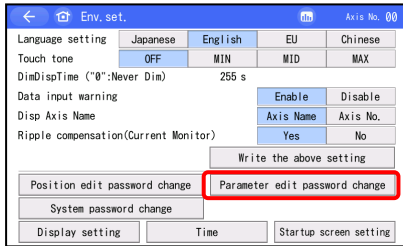


Touch [Parameter edit password change].

If the system password is not "0000," the password entry screen appears.

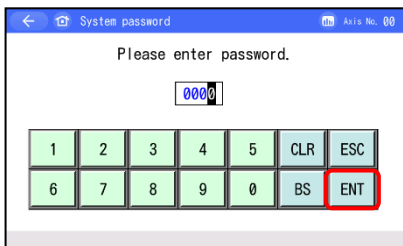


Input a system password.
Touch [ENT].

The default system password is "5119."
For how to change the system password, refer to
[Change System Password] in the next page.

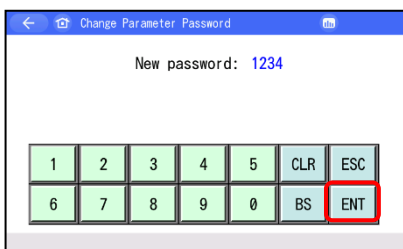


Enter the new parameter edit password to change to.
If the parameter edit password is not set, enter "0000."

Touch [ENT].

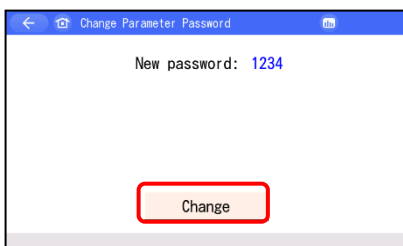


Touch [Change].

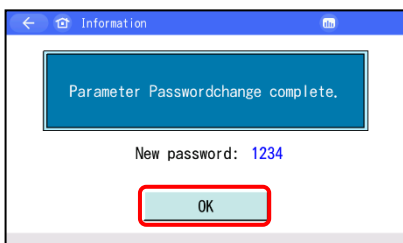

The new password after change will be displayed. Make sure it shows the same as the password you have set.


Touch [OK].

[Change System Password] Change the system password.

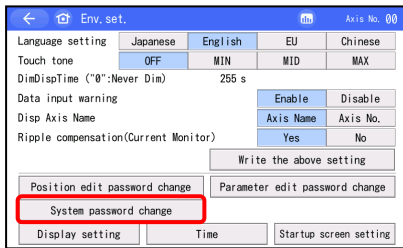

Touch [System password change].


If the system password is not "0000," the password entry screen appears.

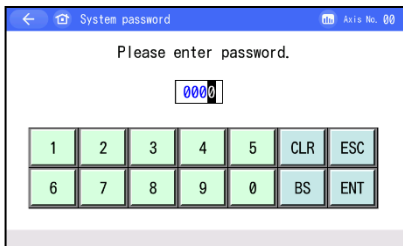

Input the system password that is currently set.


Touch [ENT].

The default system password is "5119."

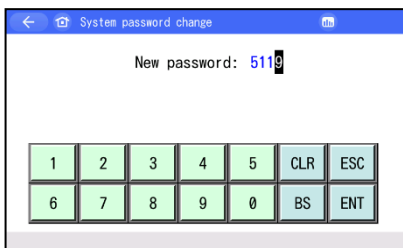


Enter the new system password to change to.
If you do not set the system password, enter 0000.

Touch [ENT].

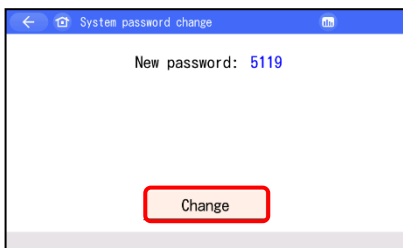

Touch [Change].

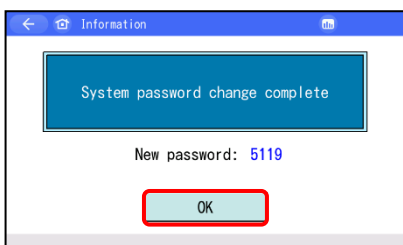


The new password after change will be displayed. Make sure it shows the same as the password you have set.

Touch [OK].


[Display setting]

Adjustment of contrast and brightness of the screen, position tuning for touch panel and LCD screen check can be performed.

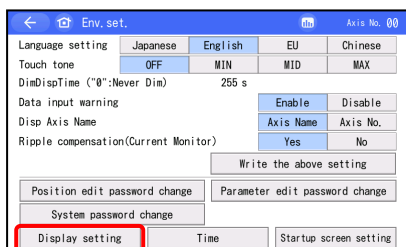

Touch [Display setting].


Display setting menu window is displayed.

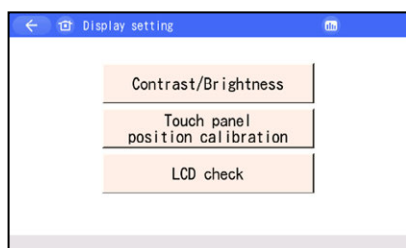


Select Display setting menu.

● Change the Contrast/Brightness

You can adjust contrast (shading of liquid crystal) and brightness (of liquid crystal).

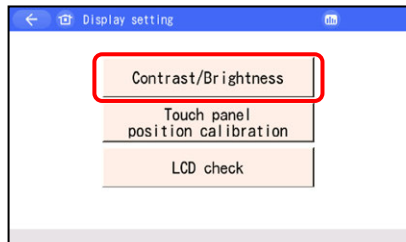

Touch [Contrast/Brightness]

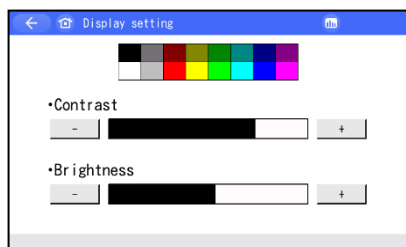

Contrast adjustment


Touch [-] and [+] under Contrast to adjust the contrast of the screen.

Brightness adjustment


Touch [-] and [+] under Brightness to adjust the brightness of the screen.

- Touch panel position calibration

A calibration for the position detection of the touch panel is performed.

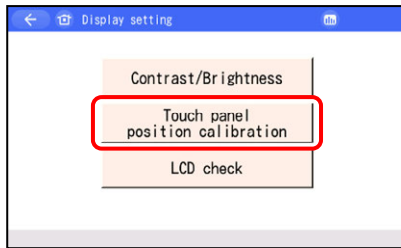

Touch [Touch panel position calibration].

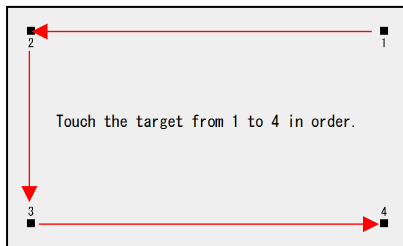


Touch [■] in the order of 1, 2, 3 and 4.

The display returns to Display setting menu screen.


●LCD Check

LCD display can be checked in the order of Color Pattern, White Only and Black Only.

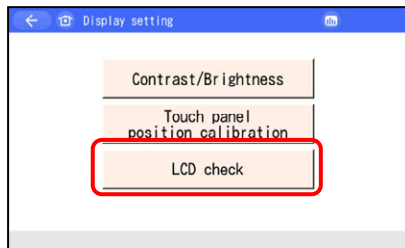


Touch [LCD check].

Color Pattern is displayed

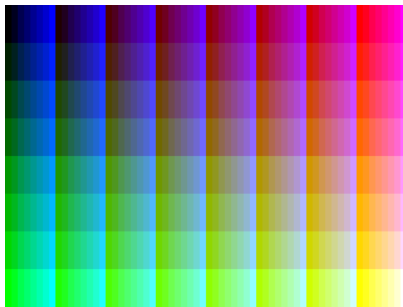


Touch any point on the screen.

White Only is displayed



Touch any point on the screen.

Black Only is displayed




Touch any point on the screen.

The display returns to Display setting menu screen.


[Time Setting]

You can set the time for TB-02 or controller with the calendar function.


1) Time setting for TB-02.

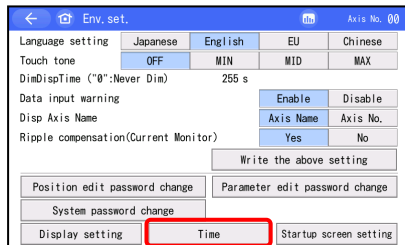


Touch [Time].

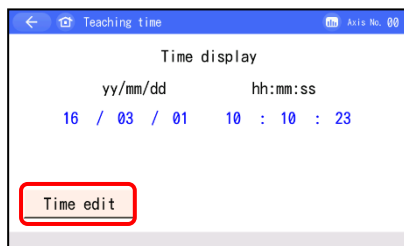


The time of TB-02 is displayed.
Touch [Time edit].

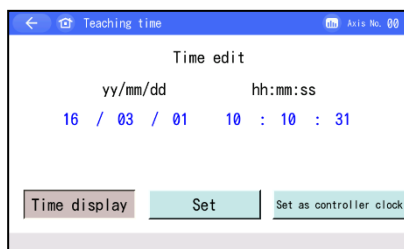


Touch the value of year, month, day, hour, minute or second that is required to be changed.

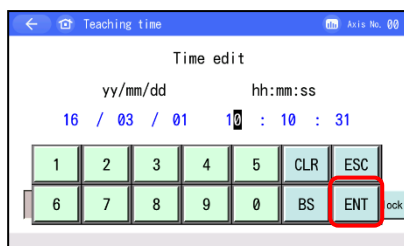

Numeric keys are displayed
Input a value and touch [ENT]

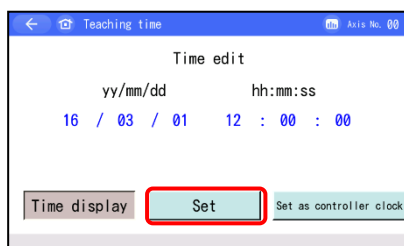


Touch [Set].

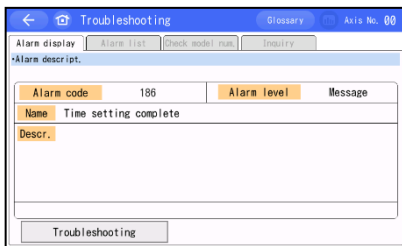


The clock setting complete window is shown and the clock in TB-02 gets changed.


2) Time setting for controller with the calendar function.

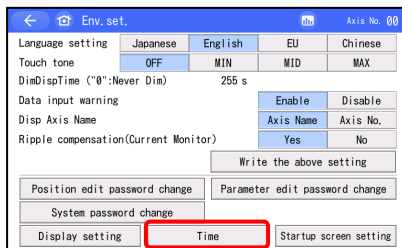


Touch [Time].

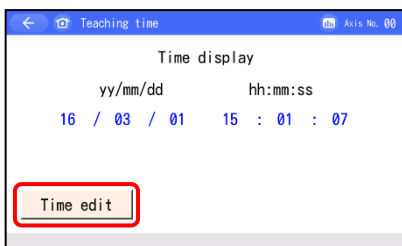


Teaching time is displayed.
Touch [Time edit].

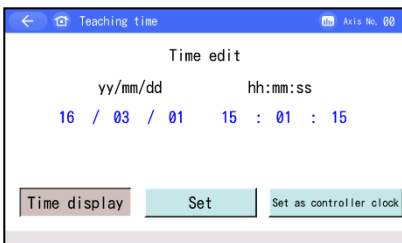


You don't need to change the time in the case of setting the time of the teaching to the controller.
Touch the value of year, month, day, hour, minute or second that is required to be changed.

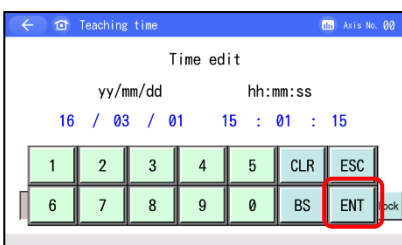

Numeric keys are displayed
Input a value and touch [ENT]

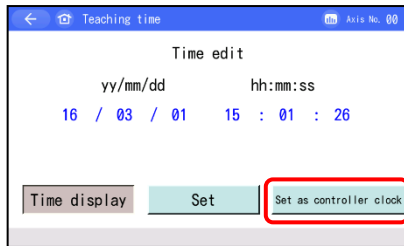


Touch [Set as controller clock].

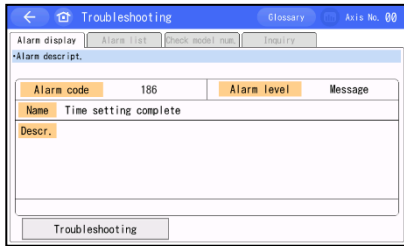

The clock setting complete screen is shown and the clock in the controller gets changed.


[Startup screen setting]

Setting can be established for the window shown in the screen first after the power is turned on. Also, show / hide can be selected for the icons of Position edit guide, I/O control guide and Easy setting in Menu 1 screen.

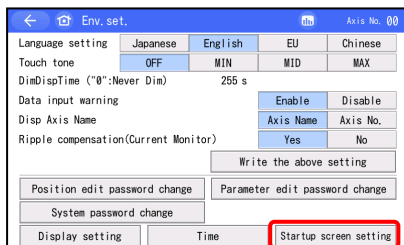

Touch [Startup screen setting].

1) Guide Icon Display Select

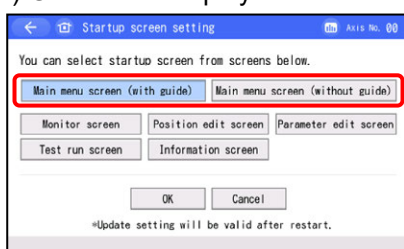


[Main menu screen (with guide)]
: Displays the guide icons (Note 1).

[Main menu screen (without guide)]
: Displays no guide icon (Note 1).


Touch [OK].

(Note1) Position edit guide Icon, I/O control guide Icon and Easy setting Icon

Menu 1 screen with guide icons (Note 1) hidden

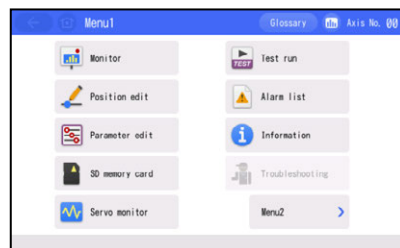


2) Initial Screen Select at Startup

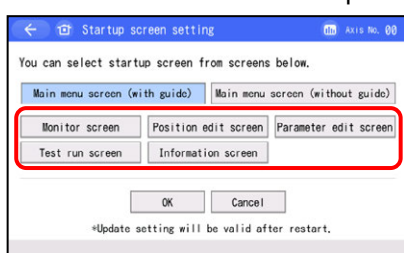

Select a screen from those below for the screen shown first after the power is turned on.

[Monitor screen]
[Position edit screen]
[Parameter edit screen]
[Test run screen]
[Information screen]

Touch either one to select and touch [OK].

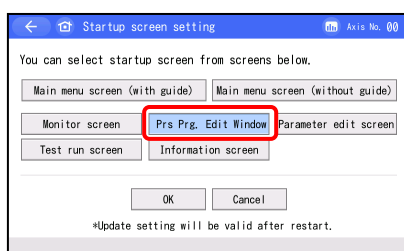

For the servo press type controllers;

[Prs Program Edit Window] should be shown instead of [Position Edit Window].

3.19 Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

It is not applicable to the backup data storable in the RC PC software.

** For how to operate the press program data, refer to 3.26.4 Secure Digital Memory Card*

(Note) Extensions of the Stored Data

- *The file extensions of the data stored to the Secure Digital card are the same as those dealt in RC PC software, and are compatible. For instance, the position data for the PCON-C controllers is ptpc and the parameters are prpc.*

Refer to [the details of the file extensions in the RC PC Software Instruction Manual]

- *The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.*

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore. If the folder does not exist, it is automatically created.

- *Position Data : \TB_CON\Position\File Name*
- *Parameter : \TB_CON \Parameter\File Name*
- *Alarm List : \TB_CON \Alarmlist\File Name*


(Note) Files with Chinese names are not supported.




Caution: For a Secure Digital memory card, choose a SD/SDHC memory card with 1G to 32G. (Toshiba-made recommended) Also, Have FAT32 Format for the file system.

3.19.1 Data Backup of the Controller

The data in the controller is transferred to the Secure Digital memory card for backup.

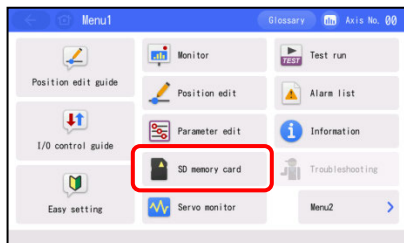


Touch [SD memory card] in Menu 1 screen.

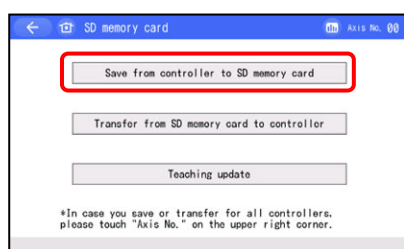


SD memory card screen opens.

Touch [Save from controller to SD memory card].

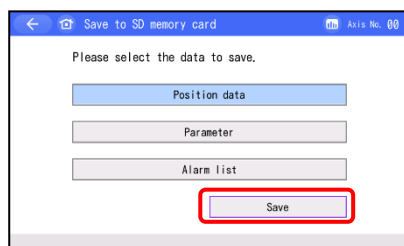


Select the data type for the backup such as [Position data] and touch it. (Multiple selection available)
The data type been selected will be shown in light blue.

Touch [Save].

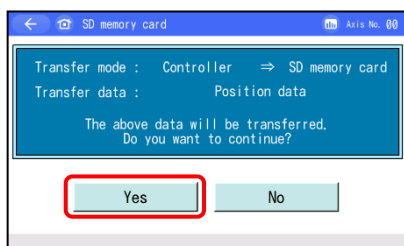


Touch [Yes].

Touch [No], and the screen returns to the previous screen.

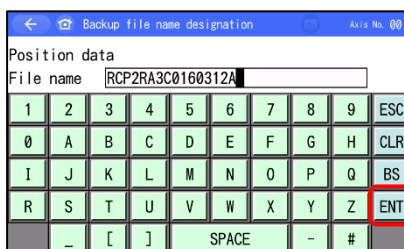


Numeric keys are displayed. Input a file name and touch [ENT].

The file name is to be typed with 32 characters at maximum in letters and numbers.

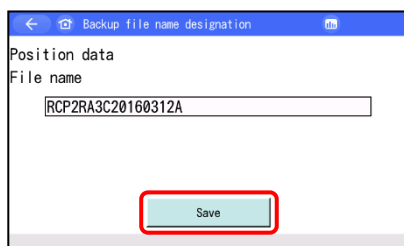


Touch [Save].

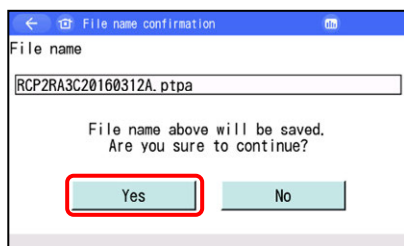

The screen below appears if the same name is not found.

Touch [Yes].


If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

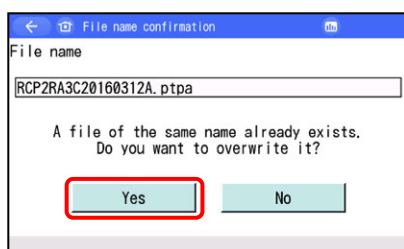


The screen below appears if the same name is found.

Touch [Yes] if overwriting data.

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

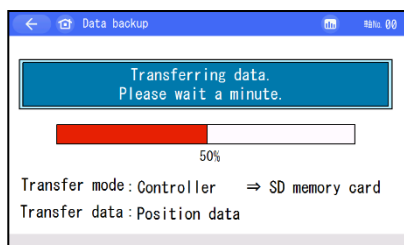

Data transfer screen will be shown.

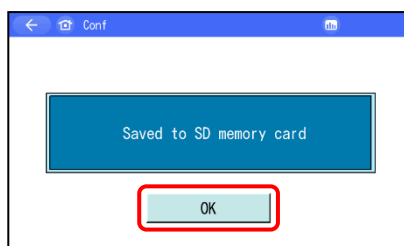


A message to tell the data transfer is complete pops up and the backup process is finished.


Touch [OK], and the screen returns to Secure Digital Memory Card screen.

3.19.2 Restore to Controller

Data in the Secure Digital Memory card is transferred to the controller.

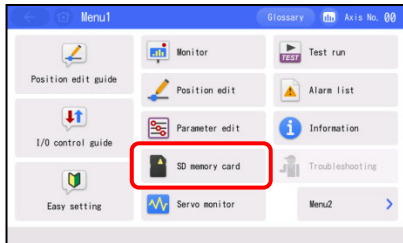


Touch [SD memory card] in Menu 1 screen.

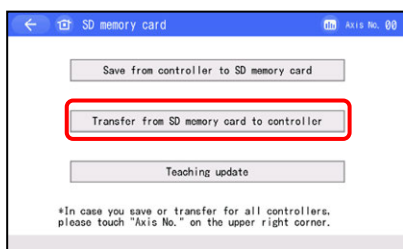


SD memory card screen opens.

Touch [Transfer from SD memory card to controller].

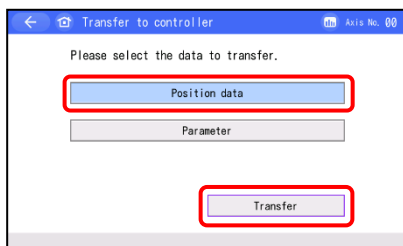


Select the data type to transfer to the controller, such as [Position data], and touch it. (Multiple selection available)
The data type been selected will be shown in light blue.

Touch [Transfer].

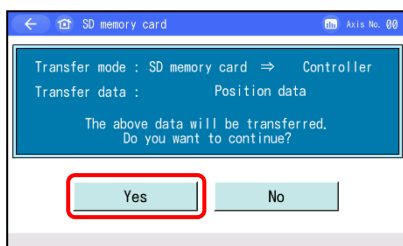


Touch [Yes].


If [No] is touched, the screen goes back to the data backup screen.

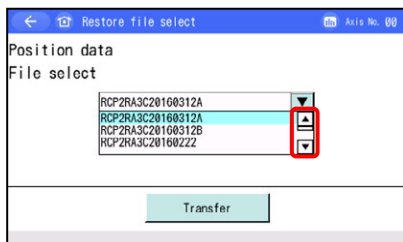

Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.

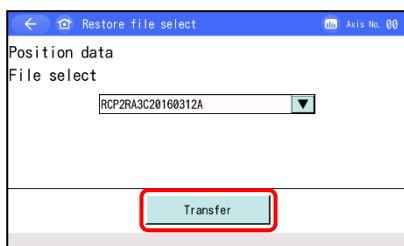


Touch [Transfer].

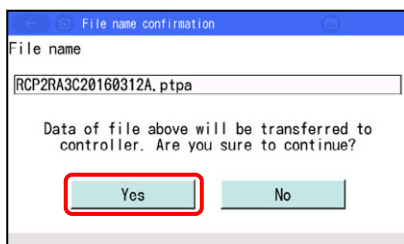


Touch [Yes].

If [No] is touched, the screen goes back to the previous one for the restore file select.

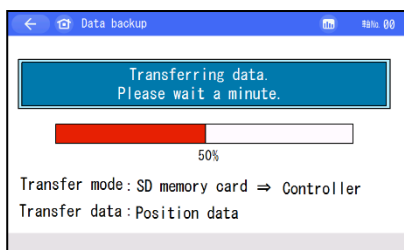


Data transfer screen will be shown.

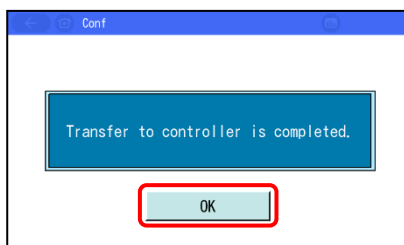

A message to tell the data transfer is complete pops up and the data transfer process to the controller is finished.

Touch [OK].

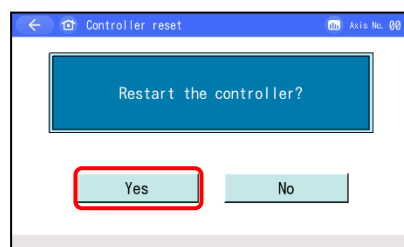

If the position data is transferred, the reboot window should not be shown. The reboot window should be displayed only when the parameter data is transferred.

Touch [Yes] to reboot the system when it is displayed.

3.20 Smart Tuning Function

With the Smart Tuning Function, the following 2 operations can be performed.

- 1) Setting of maximum acceleration/deceleration speed considering the indicated transported load and velocity
- 2) Setting of acceleration/deceleration speed to provide the shortest operation time figured out from the indicated transported load and moving distance

- (1) Setting of maximum acceleration/deceleration speed considering the indicated transported load and velocity

It is the function to set the maximum acceleration/deceleration speed available at the indicated transported load and velocity.

- (2) Setting of acceleration/deceleration speed to provide the shortest operation time figured out from the indicated transported load and moving distance

It is the function to set the combination of velocity and acceleration/deceleration that provide the shortest operation time for the indicated moving distance in several patterns of selectable combinations of the velocity and acceleration/deceleration with accordance with the transported load.

When 12.0 [Kg] is indicated for the transported load, for an instance, the combination of the velocity and acceleration/deceleration to provide the shortest operation time for each moving distance is as shown below:

- 1) When 30.00 [mm] is indicated
⇒ Velocity and acceleration for shortest operation time : 250.00 [mm/sec], 0.70 [G]
- 2) When 40.00 [mm] is indicated
⇒ Velocity and acceleration for shortest operation time : 300.00 [mm/sec], 0.50 [G]

(Note) The search of the combination of velocity and acceleration/deceleration for the shortest operation time refers to the operation schedule time.

For a reference, the following table shows the list of the operation time for each moving distance.


List of Operation Time for Each Moving Distance

Carrier load [Kg]	Movement distance [mm]	Velocity [mm/sec]	Acceleration/Deceleration [G]	Operation time [msec]
12.0	30.00	250.00	0.70	156
		300.00	0.50	161
	40.00	250.00	0.70	196
		300.00	0.50	195


3.20.1 Setting Operation for Max. Acceleration/Deceleration for Indicated Transported Load and Velocity

1) Basic Information Settings


Set the model code, lead, stroke, actuator posture and the payload of the applicable actuator.

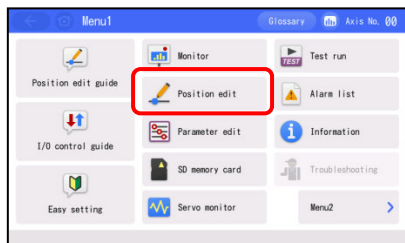


Touch [Position edit].

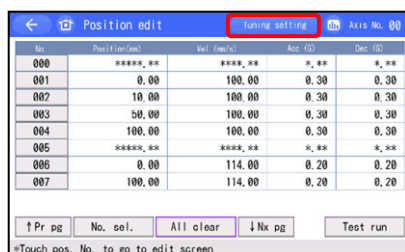


Touch [Tuning setting].

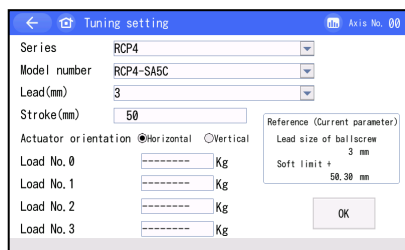

Tuning setting screen opens.

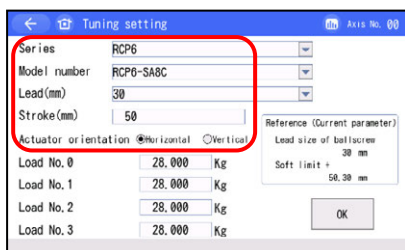

Touch ▼ and ▲ to select the applicable series, model type, lead (mm). For the stroke, numeric keys will appear if touching it. Input a value on the numeric keys. Select the actuator posture from either horizontal or vertical.

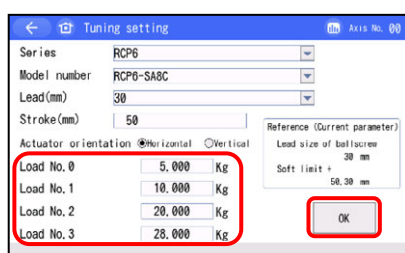


Touch the number input box from Load No. 0 to No. 3. Numeric keys appear. Set the payload.

Touch [OK] to return to Position edit screen.

2) Way to Handle Smart Tuning Function

Set the velocity and carrier load number to the set position number.

Select "Automatically Tune Acceleration from Transported Load and Velocity" from the ways for tuning.

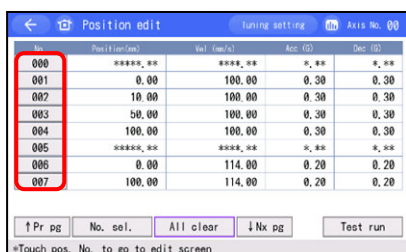


Select the position to have Smart Tuning Function and touch it.




Select one from 0 (Transported Load No. 0) to 3 (Transported Load No. 3) and set to the transported load.

Set the necessary items except for acceleration and deceleration such as target position.

Touch [Smart tuning].

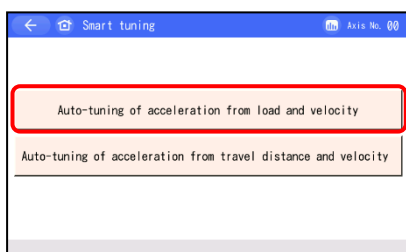


Touch [Auto-tuning of acceleration from load and velocity].

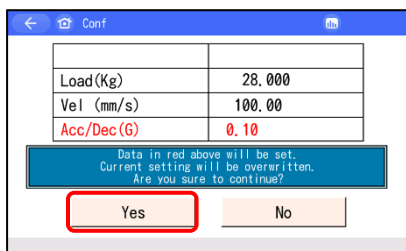

Acceleration and deceleration after automatic tuning are shown.

Touch [Yes].


3) Maximum acceleration speed and maximum deceleration speed are set for the indicated velocity and transported load number.

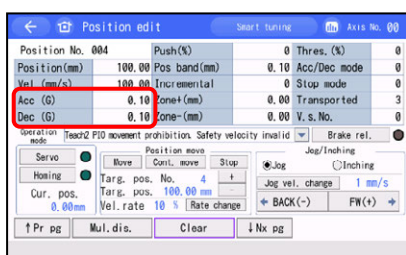


3.20.2 Operation to Automatically Set Velocity and Acceleration Speed from Moving Distance

1) Basic Information Settings


Set the model code, lead, stroke, actuator posture and the payload of the applicable actuator.

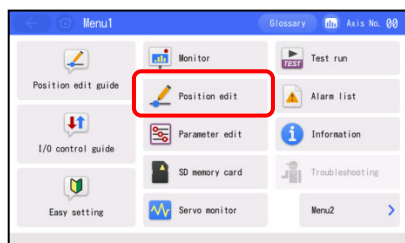


Touch [Position edit].

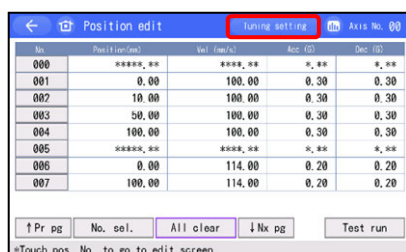


Touch [Tuning setting].

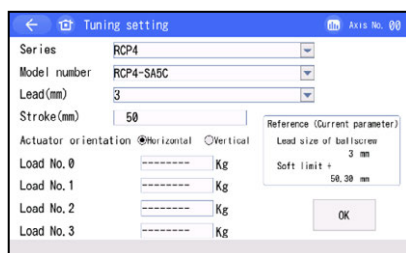

Tuning setting screen opens.

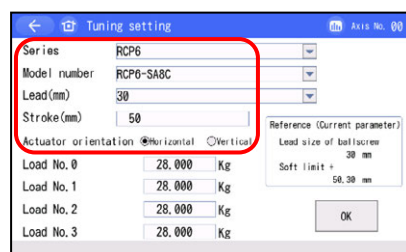

Touch ▼ and ▲ to select the applicable series, model type, lead (mm). For the stroke, numeric keys will appear if touching it. Input a value on the numeric keys. Select the actuator posture from either horizontal or vertical.

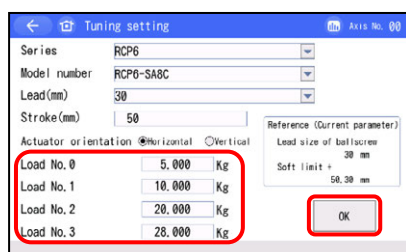


Touch the number input box from Load No. 0 to No. 3. Numeric keys appear. Set the payload.

Touch [OK] to return to Position edit window.


2) Way to Handle Smart Tuning Function

Set the distance and carrier load number to the set position number.

Select “Automatically Tune Acceleration from Transported Load and Velocity” from the ways for tuning.

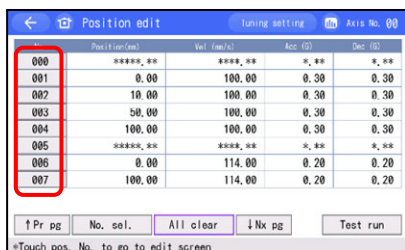


Select the position to have Smart Tuning Function and touch it.

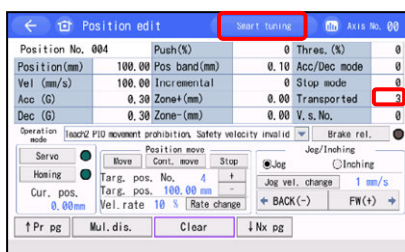

Select one from 0 (Transported Load No. 0) to 3 (Transported Load No. 3) and set to the transported load.

Set the necessary items except for acceleration and deceleration such as target position.

Touch [Smart tuning].

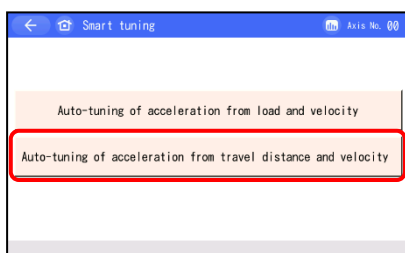

Touch [Auto-tuning of acceleration from travel distance and velocity].

There are two ways to set up the moving distance.

- Position 2 points designation
- Travel distance designation

(Position 2 points designation)

Select Position 2 points designation.
Touch the value on the start position and the numeric key will be shown.
Set the Start position.

Touch the value on the end position and the numeric key will be shown.
Set the End position.

(Note) For the end position, the position number to have Smart Tuning Function is shown.
The end position can be changed. However, even if the end position is changed, it is set to the position where Smart Tuning Function is held by the calculation of the velocity, acceleration and deceleration from the distance between the set start position and end position.

(Travel distance designation)

Select [Travel distance designation].
Touch the value on the moving distance [mm] and the numeric key will be shown.
Set the Distance.

Dist. (mm)	25.00
Load (Kg)	28.000
Vel (mm/s)	114.00
Acc/Dec (G)	0.10

Data in red above will be set.
Current setting will be overwritten.
Are you sure to continue?

Acceleration and deceleration after automatic tuning are shown.


Touch [Yes].

3) The velocity, acceleration and deceleration are set to provide the shortest tact time to run between two points for the indicated transported load number.


Position No.	004	Push (%)	0	Thres. (%)	0
Position (mm)	100.00	Pos. band (mm)	0.10	Acc/Dec mode	0
Vel (mm/s)	114.00	Incremental	0	Stop mode	0
Acc (G)	0.10	one+ (mm)	0.00	Transported	3
Dec (G)	0.10	one- (mm)	0.00	V.s.No.	0

3.21 Maintenance Parts List

Information of maintenance components is displayed.

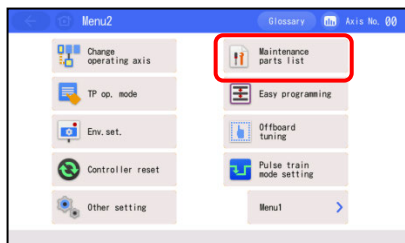


Touch [Maintenance parts list] in Menu 2 screen.

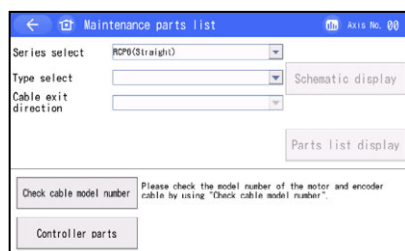


Maintenance parts list screen opens.

3.21.1 Check Cable Model Number, Controller Parts

[Check cable model number]

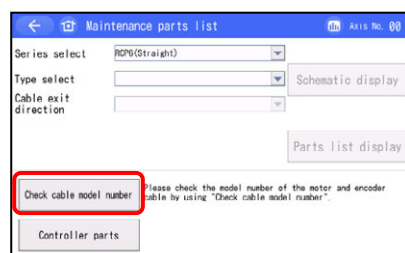

Touch [Check cable model number].

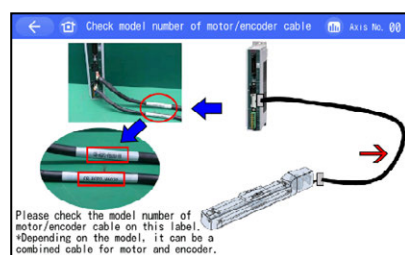


Check model number of motor / encoder cable opens.


Touch [←] button and the screen goes back to the previous page.

Caution: For the model number of the motor / encoder cable, check the cable model number that is actually used referring to "Check cable model number".

[Controller parts]

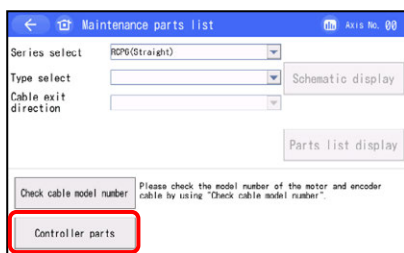

Touch [Controller parts].

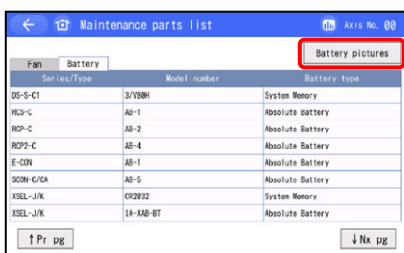


The battery list opens.

Touch [↑ Pr pg], and the screen shifts to the list in the previous window.


Touch [↓ Nx pg], and the screen shifts to the list in the next screen.

Touch [Battery pictures].

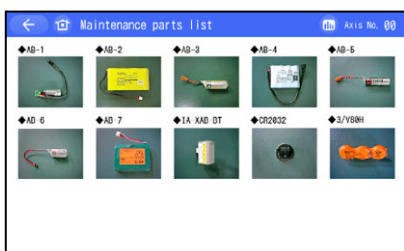

The screen shows the list of battery pictures.

Touch [←] button and the screen goes back to the previous page.

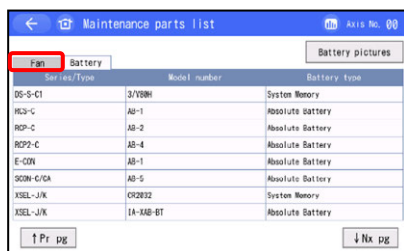

Touch [Fan].



The fan list opens.

Touch [↑ Pr pg], and the screen shifts to the list in the previous screen.

Touch [↓ Nx pg], and the screen shifts to the list in the next screen.

3.21.2 Schematic Display and Parts List Display

[Schematic display]

Open Maintenance parts list window.


Touch ▼ and ▲ in the series select column to choose the actuator model type.

Items to be displayed will differ depending on the selected model type.

Touch ▼ and ▲ in each item to choose the appropriate contents.

Touch [Schematic display].

(Note) There are some models with no Schematic display.

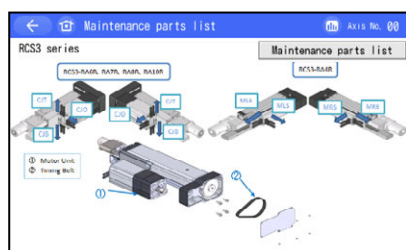

Schematic display is displayed.

Touch [Maintenance parts list] to display the components list described below.

Touch [←] button to return to the previous screen.

[Parts list display]

Touch [Parts list display].

Maintenance parts name	Model number
① Stainless steel shaft model	-
② Motor Unit (Motor Type) equipped without brake	RC33-MBSC-100-MA-A1S-00
③ Motor Unit (Motor Type) equipped with brake	RC33-MBSC-100-MA-A1S-B-00
④ Equipped with Coupling	○
⑤ Equipped with Pulley	-
⑥ Timing Belt Model Code	-
⑦ Load cell type	-

The parts list opens.

Touch [←] button to return to the previous screen.

3.22 Easy Programming


The easy programming is a test mode same as the position movement. You can set any movement order or set time for pause between movements to perform continuous operation. You can also indicate the number of repeated times.

[How to Establish Setting]


Set the position number (0 to maximum position number) of the destination to the easy programming input part (step). In order to have a pause between operations, use prepared five timers T1 to T5. Timer can be set in 0.1 second unit from 0 to 99.9sec. When it is required to repeat operation, input R (repeat indication symbol) at the end.

The number of steps available to indicate is 10 at maximum including R.

If there is a space, the step after that is not valid. The easy programming stops. Steps after R are also invalid.

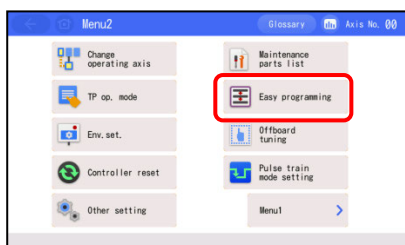


Touch [Easy programming] in Menu 2 screen.

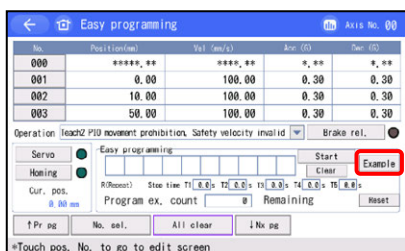

Easy programming screen opens.

Touch [Example] and examples for how to construct a program are displayed.

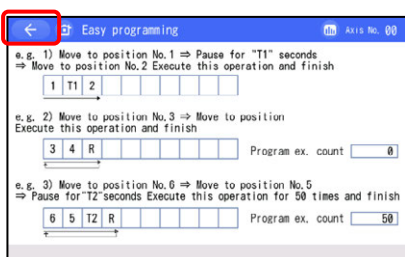


Touch [←] button to return to the previous screen.


Take this as a reference when constructing a Easy programming.

Caution: Operation with JOG Switch on Front Panel of RCON
If TB-02 gets disconnected from the controller in the condition that this window is open, JOG switch operation will get disabled.


[Driving Easy Programming]

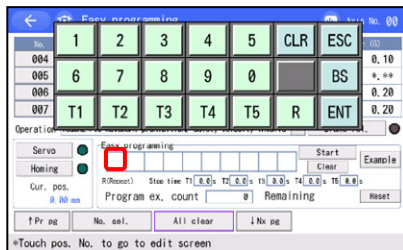


Touch the first (on the most left) step of the easy programming.

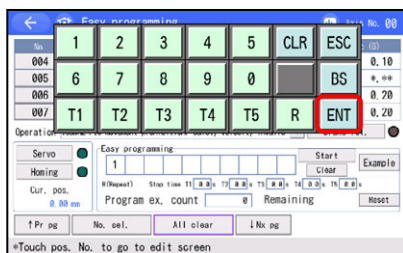


Input a position number or a timer (T1 to T5) and touch [ENT].

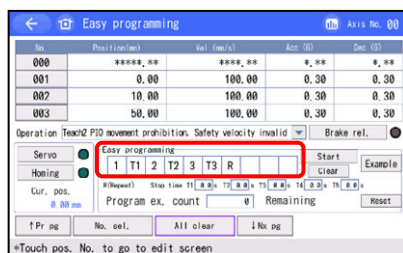


Set the next step and after in the same manner. Set R at the end when it is required to repeat the operation.

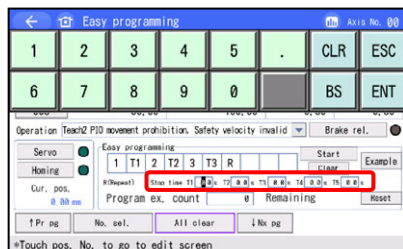


Touch a timer to use (T1 to T5) when it is required to have time for pause.

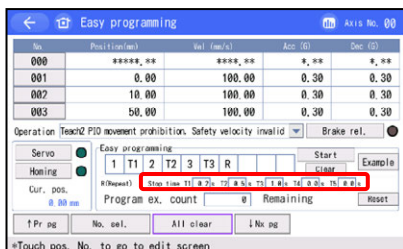

Set the time for pause.

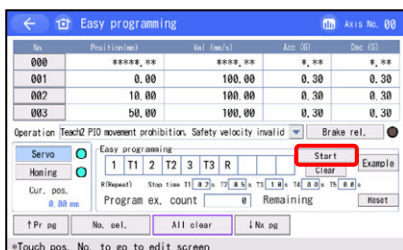


Have the servo on and the home-return conducted, and then touch [Start] to start the operation.

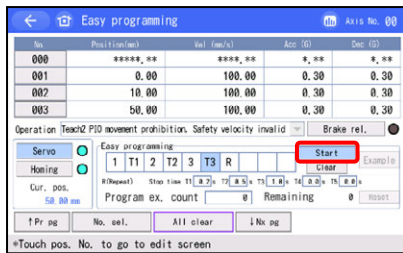


During the operation, the [Start] and the step number in execution turn to blue.

To stop operation, touch the [Start] again.

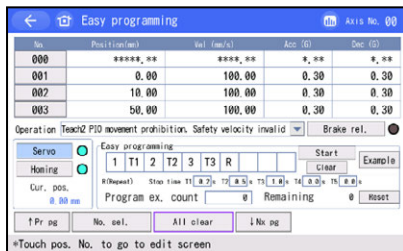


Operation stops.

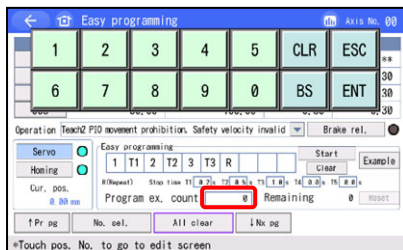

Touch the number to execute the program when it is required to set number of repeating.




Set the number to repeat and touch [ENT].

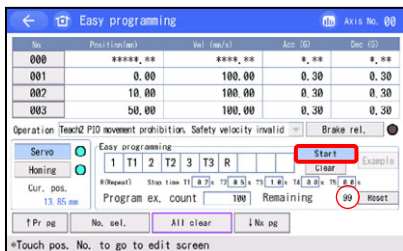


Touch [Start] to start operation.


The number of remaining for repeating is displayed, and counts down as 100 → 99 → 98 → ...

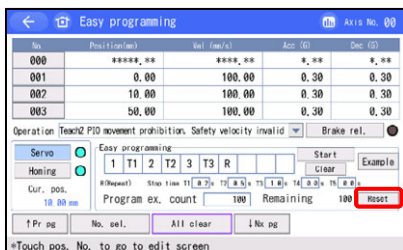

Touch [Reset] and the remained times go back to the number of program execution times.

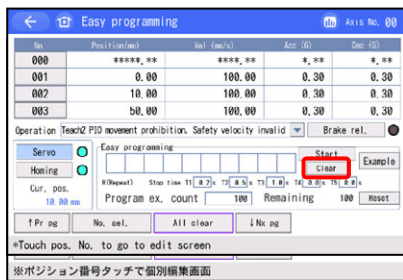

Touch [Clear], and the set easy program will be all deleted.

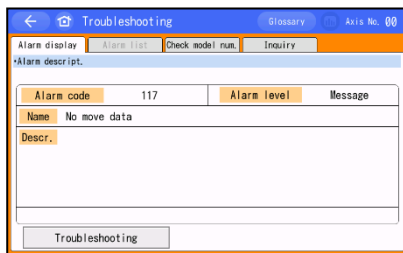


Caution: When there is an alarm issued due to such a reason as making a mistake in position number indication, go back to Easy programming screen with [←] button. In case of moving from Menu 2 screen to Easy programming screen, the set simple program will be deleted.

(Note) A Easy programming cannot be saved.


3.23 Pulse Train Mode Setting

Establish the settings to conduct the pulse-train control.

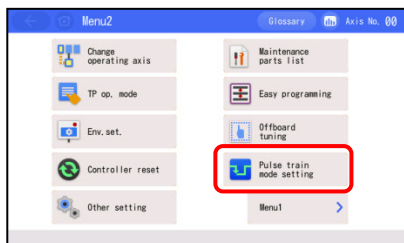


Touch [Pulse train mode setting] in Menu 2 screen.

The icon will not be shown for the controllers that are not applicable for the pulse-train control.

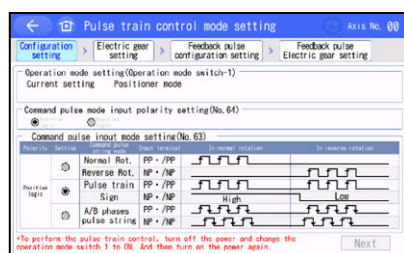



A message in red will appear if the setting is not done appropriately for the pulse-train control mode. Follow the message for appropriate action.

(Shown in the figure on the left is the display for SCON)

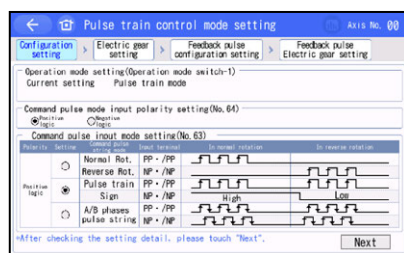


For the pulse-train control mode, pulse-train control mode setting screen is displayed.

In the pulse-train control mode setting, set the parameters necessary for control in four screens.

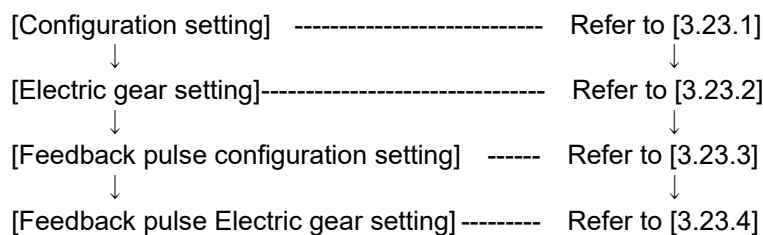

3.23.1 [Configuration Setting]

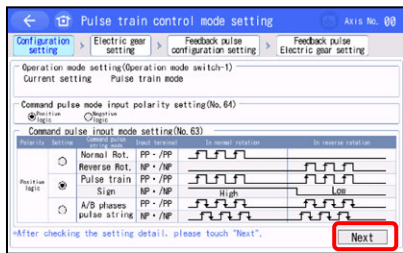

First, display the [Configuration setting] screen.


Once setting is finished, touch [Next].

[Contents of Display]

- Operation mode setting
Displays the current operation mode. Confirm that it shows Pulse-Train Control Mode.
- Command pulse mode input polarity setting
Set the input polarity whether active high or active low.
(Parameter No. 64)
- Command pulse input mode setting
Set the format for the command pulse input.
(Parameter No. 63)

Command Pulse Train Format	Input Terminal	In Clockwise	In Counterclockwise	Setting Value
Active Low	CW Pulse Train	PP · /PP		2
	CCW Pulse Train	NP · /NP		
	CW pulse train shows the motor rotation amount in clockwise and CCW pulse train in counterclockwise.			
	Pulse Train	PP · /PP		1
	Symbol	NP · /NP		
	The command pulse shows the motor rotation amount, and the command symbol shows the rotation direction.			
	A/B-Phase Pulse Train	PP · /PP NP · /NP		0
It is the A/B phase quad edge evaluation pulse of the phase difference in 90deg, and is the command for rotation amount and the rotation direction.				
Active High	CW Pulse Train	PP · /PP		2
	CCW Pulse Train	NP · /NP		
	Pulse Train	PP · /PP		1
	Symbol	NP · /NP		
	A/B-Phase Pulse Train	PP · /PP NP · /NP		0

3.23.2 [Electric Gear Setting]

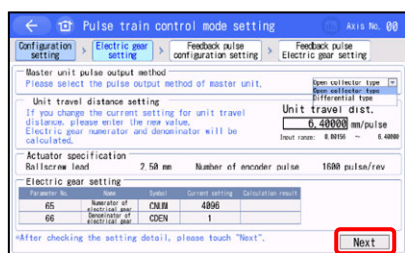

Second, display the [Electric gear setting] screen.

Once setting is finished, touch [Next].

[Contents of Display]

- Master unit pulse output method
- Unit travel distance setting
- Actuator specification
- Electronic gear setting

Select the pulse output system of the host unit whether it is the open collector type or differential (line drive) type.

Set the unit movement amount of the actuator for one pulse. With this input value, the numerator and the denominator of the electronic gear are automatically figured out. In case the value is out of the input range as a result of calculation, an error message will be displayed in red. Change the value.


The ball screw lead and the number of encoder pulses of the actuator are displayed.

It is a parameter to determine the unit movement amount of the actuator for one pulse of the command pulse train input. Input the unit movement amount and this parameter can be automatically figured out and the set numbers for the numerator and the denominator of the electronic gear get displayed.

Electronic Gear Numerator (Parameter No. 65)

Electronic Gear Denominator (Parameter No. 66)

3.23.3 [Feedback Pulse Configuration Setting]

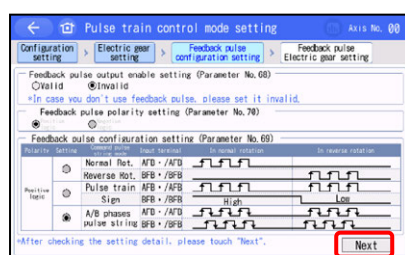

Third, display the [Feedback pulse configuration setting] screen.

Once setting is finished, touch [Next].


[Contents of Display]

- Feedback pulse output enable setting Set the validation of the feedback pulse output. (Parameter No. 68)

When the feedback pulse output is “valid”, conduct the following settings.

- Feedback pulse polarity setting Set the feedback pulse whether active high or active low. (Parameter No. 70)
- Feedback pulse configuration Setting Set the format for the feedback pulse output. (Parameter No. 69)

3.23.4 [Feedback Pulse Electric Gear Setting]

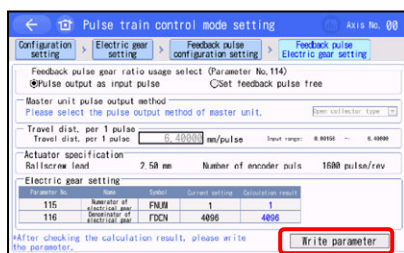

Lastly, display the [Feedback pulse Electric gear setting] screen.

Once setting is finished, touch [Write parameter].

[Contents of Display]

- Feedback pulse gear ratio usage select Select whether to have the feedback pulse output and input pulse in equal ratio or to be set individually. (Parameter No. 114)

When Feedback pulse gear ratio usage select is set to “Set feedback pulse free”, conduct the following settings.

- Master unit pulse output method

Select the pulse output system of the host unit whether it is the open collector type or differential (line drive) type.

- Travel dist. per 1 pulse

Set the unit movement amount of the actuator for one pulse. With this input value, the numerator and the denominator of the electronic gear are automatically figured out. In case the value is out of the input range as a result of calculation, an error message will be displayed in red. Change the value. The ball screw lead and the number of encoder pulses of the actuator are displayed.

- Actuator specification

It is a parameter to determine relation between the movement amount of the actuator and the number of output pulse.

- Electronic gear setting


Input the unit movement amount and this parameter can be automatically figured out and the set numbers for the numerator and the denominator of the electronic gear get displayed.

Electronic Gear Numerator (Parameter No. 115)


Electronic Gear Denominator (Parameter No. 116)

3.24 Offboard Tuning

Offboard tuning function is a feature established in purpose of calculating the optimum gain considering the payload. By inputting the operational conditions, optimum controlling parameter (each types of gain) settings and cycle time will be figured out.

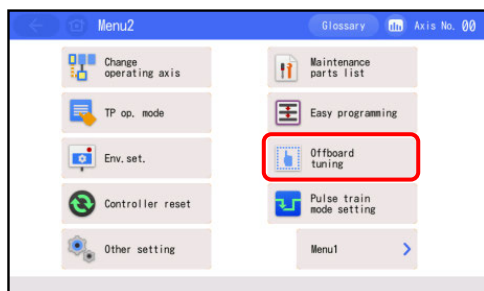

In no controller of offboard tuning function, it does not appear in the off-board tuning icon.

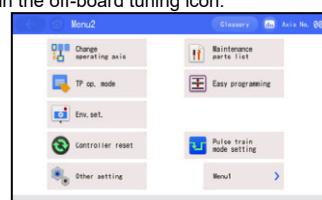

The gain to be calculated is the following six types (from 1) to 6)).

There are four gain set prepared to save the six types of the gain to the controller parameters, and it is available to write the calculated gain in the indicated gain set.

	ParameterName	Parameter No.			
		Set No.0	Set No.1	Set No.2	Set No.3
1)	Servo gain number	7	120	126	132
2)	Position Field Forward Gain	71	121	127	133
3)	Speed loop proportional gain	31	122	128	134
4)	Speed loop integral gain	32	123	129	135
5)	Torque filter constant	33	124	130	136
6)	Current Control Band Number	54	125	131	137

Restrictions

1. Actuators not Applicable for Offboard Tuning Function

Actuators not listed in the select menu for the model code in the offboard tuning setting screen are not applicable for the offboard tuning function.

2. Caution for Gain Set No. 0

As the home-return operation is performed by using the gain in Gain Set No. 0, it is necessary to establish setting in Gain Set No. 0 following the caution notes below.

(1) When the payload is lighter than the rating

1) In Gain Set No. 0, set either type of the gain below.

- Gain that is set at delivery
- Adjusted gain suitable to the rated payload

2) Adjusted gain is to be set in Gain Set No. 1 to 3, not in Gain Set No. 0. If an adjusted gain is set in Gain Set No. 0, it may cause a problem at home-return operation such as vibration.


(2) When the payload is heavier than the rating

Adjusted gain is to be set in Gain Set No. 0.


As the load is heavier than the rated payload in the gain set at the delivery, home-return operation may not be able to be conducted.

3.24.1 For Controllers Applicable for Gain Calculation (such as servomotor type controllers)


Setting of controlling parameters (each types of gain) and cycle time calculation are available.

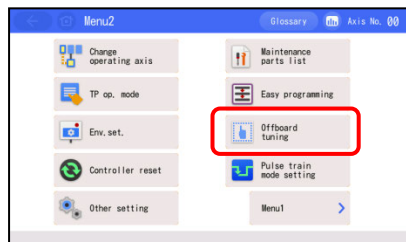

Touch [Offboard Tuning] in Menu 2 screen.

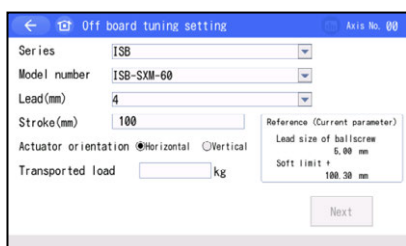


Offboard tuning window is displayed.

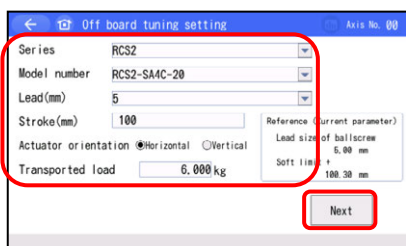

Select and input the following items and touch [Next].


- Series
- Model number
- Lead (mm)
- Stroke (mm)
- Actuator orientation
- Transported load

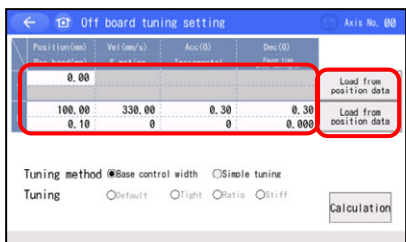

Set the start the positions of the start point and end point, velocity, acceleration / deceleration, positioning band, S-shaped motion, incremental and standby duration after movement.


Touch a value on an item to make setting.

To read in from the position data, touch [Read in from Position Data] on the start or end point.

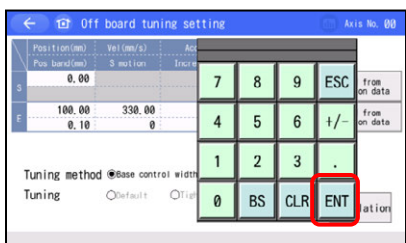

<To input setting value>

Input a setting value and touch [ENT].

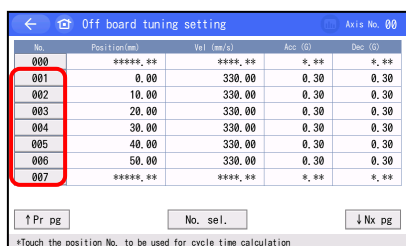

<To read in from position data>

Touch a position number to read in from.

Select either “Base Control width” or “Simple Tuning” in the tuning method.

Base Control Width	It is suitable when it is required to calculate the gain automatically considering the payload, but not necessary to increase the responsiveness.
Simple Tuning	It is suitable when it is required to calculate the gain automatically considering the payload, and also to increase the responsiveness.

When “Simple Tuning” is selected in the tuning method, select a tuning rule from the following four types.

Touch [Calculation].

Tuning Rules	Explanations
Default	Select the optimum rule to the selected actuator and tuning is performed based on that rule. (Note) Optimum Rule : Out of three rules, Tight, Ratio and Stiff, a rule capable to consider not to generate vibration and abnormal noise, and to increase responsiveness as much as possible at the same time
Tight	It is a rule that increases the responsiveness the most in the three rules, but has the highest risk of generating vibration and abnormal noise at the same time.
Ratio	It is a rule of which the increase of the responsiveness is higher than Stiff and lower than Tight, and the risk of generating vibration and abnormal noise is lower than Tight and higher than Stiff.
Stiff	It is a rule that generates less vibration and abnormal noise in the three rules, but makes smallest increase to the responsiveness in the three.

Cycle time and gain value are calculated and displayed.

Touch [Graph], and the graph of the cycle time will be displayed.


Calculated Items

Cycle time

Item name	Unit
Posit. time	(s)
Cycle time (include pause time)	(s)
Load factor	(%)

Gain

Item name
Servo gain No.
Position feedforward gain
Vel. loop proportional gain
Vel. loop integral gain
Torque filter constant
Current control width No.

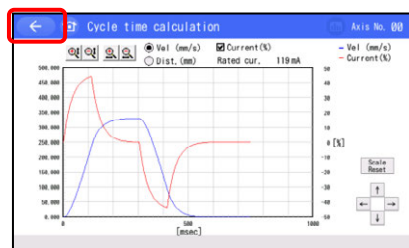


Select either velocity (mm/s) or drive distance (mm) to show its graph. (Values displayed on the left)
The graph for current (%) will be displayed at the same time. (Values displayed on the right)

Touch [←] button to return to the offboard tuning screen.

[Window Setting Buttons]



Scale
Reset




- : Touch it to enlarge the scale of the graph in vertical axis.
- : Touch it to reduce the scale of the graph in vertical axis
- : Touch it to enlarge the scale of the graph in horizontal axis
- : Touch it to reduce the scale of the graph in horizontal axis

- : Touch it to slide the displayed waveform frame upwards.
- : Touch it to slide the displayed waveform frame downwards.
- : Touch it to slide the displayed waveform frame to the left.
- : Touch it to slide the displayed waveform frame to the right.


Scale
Reset

: Touch it to initialize the scale of the graph.

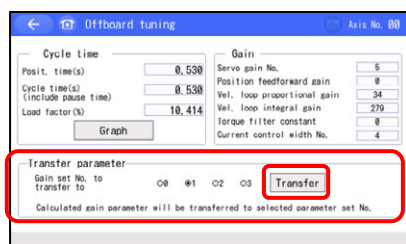


The calculated gain values can be transferred to a controller.

Select the gain set number (from 0 to 3) to be transferred and touch [Transfer] button.

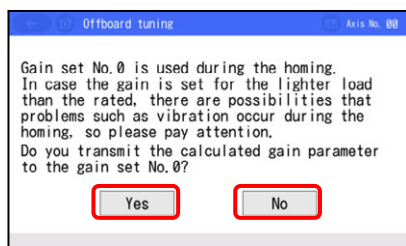

As stated in the restrictions, a confirmation window will appear to show that a problem could occur if transferred to Gain Set No. 0.

Touch [Yes] or [No].

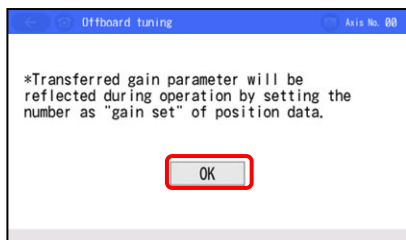


As the transfer is complete, a window for caution before reflection will show up.

Set a gain set number to the position data and use it.


Touch [OK].

3.24.2 For Controllers Not Applicable for Gain Calculation (such as pulse motor type controllers)


Setting of controlling parameters (each types of gain) cannot be performed, but cycle time calculation is available.

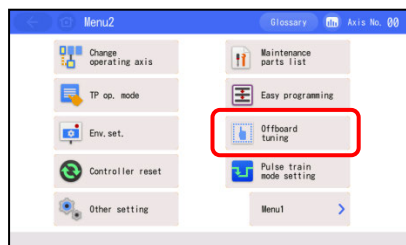

Touch [Offboard Tuning] in Menu 2 screen.

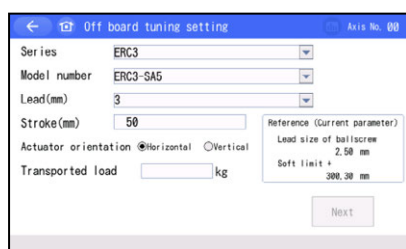


Offboard tuning window is displayed.

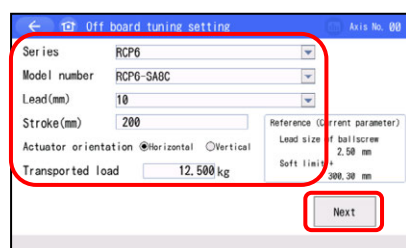

Select and input the following items and touch [Next].


- Series
- Model number
- Lead (mm)
- Stroke (mm)
- Actuator orientation
- Transported load

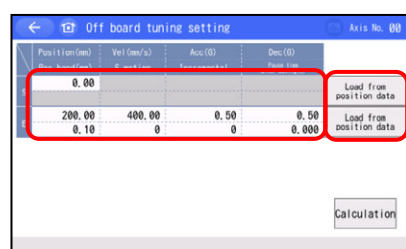

Set the start the positions of the start point and end point, velocity, acceleration / deceleration, positioning band, S-shaped motion, incremental and standby duration after movement.


Touch a value on an item to make setting.

To read in from the position data, touch [Read in from Position Data] on the start or end point.

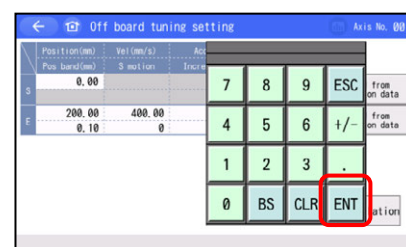


<To input setting value>

Input a setting value and touch [ENT].

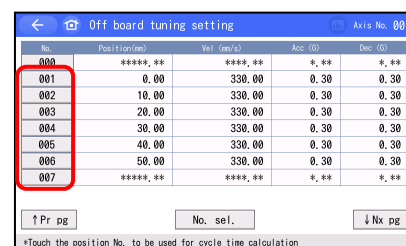


<To read in from position data>

Touch a position number to read in from.

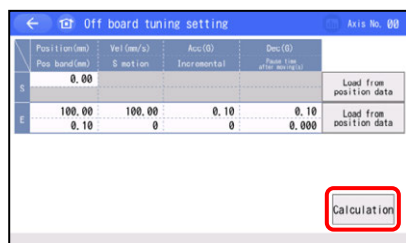


Touch [Calculation].

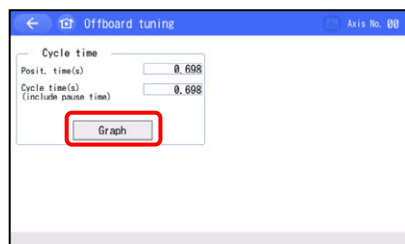

Cycle time is calculated and displayed.

Item name	Unit
Posit. time	(s)
Cycle time (include pause time)	(s)

Touch [Graph], and the graph of the cycle time will be displayed.

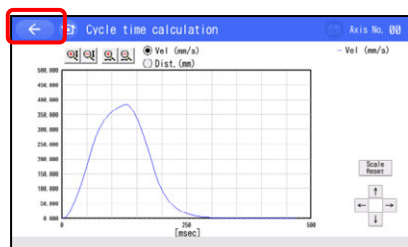


Select either velocity (mm/s) or drive distance (mm) to show its graph. (Values displayed on the left)

Touch [←] button to return to the offboard tuning window.

[Window Setting Buttons]



Scale
Reset



- : Touch it to enlarge the scale of the graph in vertical axis.
- : Touch it to reduce the scale of the graph in vertical axis
- : Touch it to enlarge the scale of the graph in horizontal axis
- : Touch it to reduce the scale of the graph in horizontal axis


- : Touch it to slide the displayed waveform frame upwards.
- : Touch it to slide the displayed waveform frame downwards.
- : Touch it to slide the displayed waveform frame to the left.
- : Touch it to slide the displayed waveform frame to the right.

: Touch it to initialize the scale of the graph.


3.25 Servo Monitor

The actual operation status of the actuator is displayed in a waveform. It is available to record the displayed data.

Caution: As ACON-C, PCON-C, SCON-C, SCON-CAL, ERC2, RACON and RPCON are not equipped with the servomotor features, there will be no servo monitor icons displayed. (Same for Safety Category Complied Type)

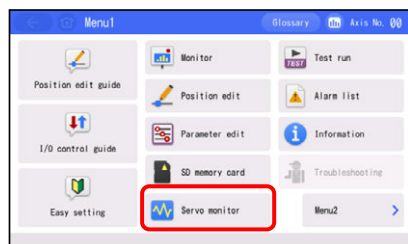

Touch [Servo monitor] in Menu 1 screen.

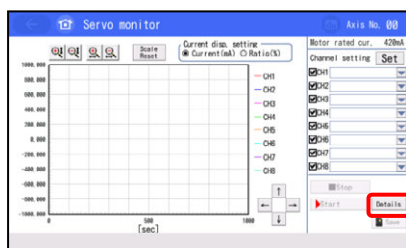


The servo monitor (waveform display) screen is displayed. Operations can be performed in this screen to select items, display settings, start/stop monitoring and display/save waveform.

Refer to [3.25.1 Servo Monitor (Waveform Display) Screen] for details of each button in this screen.

Touch [Details].


For ACON-CB/CYB, DCON-CB/CYB, PCON-CB/CYB/CBP, SCON-CB, SCON2, MCON and RCP6S

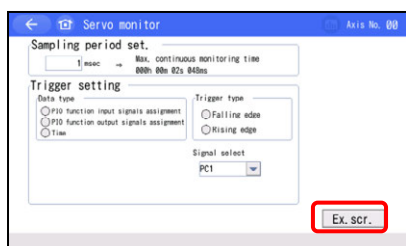

Display the window to conduct the sampling frequency setting and trigger setting. (Same for Safety Category Complied Type) Refer to [3.25.2 Sampling Frequency Setting] and [3.25.3 Trigger Setting] for details of item settings.


Touch [Ex. Scr.] and the screen returns to the servo monitor (waveform display) screen.

For ACON-CA, DCON-CA, PCON-CA, SCON-CA, MCON, ERC3 and ERC3-GW

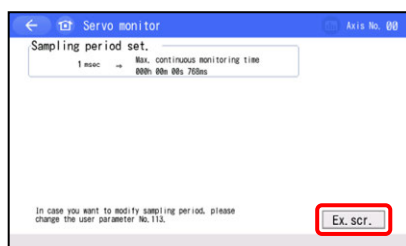

Current sampling frequency setting and continuous monitoring available time can be checked. Sampling frequency setting is to be conducted in Parameter No. 113 "Monitoring Frequency". Trigger setting cannot be conducted. (Same for Safety Category Complied Type)


Touch [Ex. scr.] and the screen returns to the servo monitor (waveform display) screen.

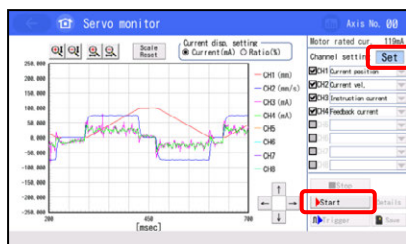


After confirming the channel setting, touch [Start Monitoring] to start monitoring. To have it in standby status for triggering, touch [Trigger Standby].

Caution: Moving to another window during monitoring or trigger standby, the status of monitoring and trigger standby will be cancelled.


■ Automatic Scroll Feature

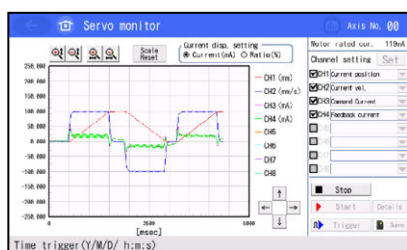

After monitoring has started, when the graph is drawn up to the end of the display area, the display area will be shifted.




Automatic Scroll

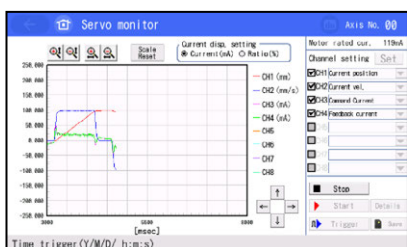

The automatic scroll stops if the monitoring is finished or any of **Scroll Reset**, **↑**, **→**, **↓** or **←** button (a button to scroll the display area) is pressed.

3.25.1 Servo Monitor (Waveform Display) Screen

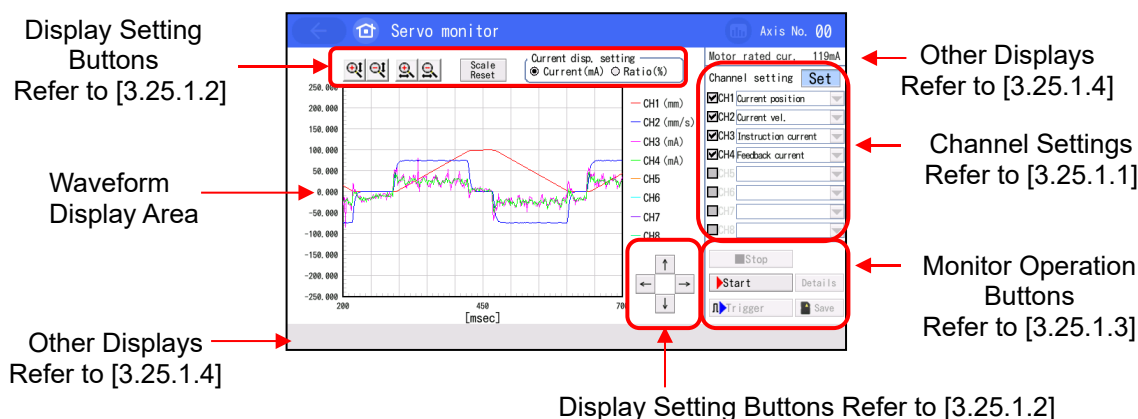

3.25.1.1 Channel Settings

Select an item to be monitored in channel settings.



Select an item to be monitored from the select menu in each channel. Once selection is made, touch [Confirm] to set it to monitoring standby status.

■ Checkmarks in the Left of Items

Items with a checkmark on can show the waveform in the screen.

For the items with no checkmark, the waveform will not be shown, but the data is acquired.

■ About Number of Channels

For the number of channels, selection can be made from 2, 4 and 8 (4 and 8 for SCON-CA).

Number of channels can be set in Parameter No. 112 "Monitoring Mode Select".

[Reference] (Note) It differs depending on models.

- Number of channels when No. 112 is 1 = 4
- Number of channels when No. 112 is 2 = 8
- Number of channels when No. 112 is 3 = 2


The monitor items are shown in the table below.






(Note) Items subject to monitoring differ depending on models.

	Item name	Units	Unit (Note 1)
1)	Current Position	[mm]	←
2)	Velocity Operation Amount	[mm/s]	←
3)	Velocity Actual Command Value	[mm/s]	←
4)	Current Velocity	[mm/s]	←
5)	Command Current	[mA]	[%]
6)	Feedback Current	[mA]	[%]
7)	Current Load (for SCON-CA/CB/CGB, SCON2, PCON-CBP/CGBP only)	[N]	←
8)	Deviation	[PIs]	←
9)	Command Pulse Counter	[PIs]	←
10)	Overload Level Monitor	[%]	←
11)	Motion Driver Target Position (Motion type only)	[PIs]	←


Note 1 : Unit when rated ratio display selected





3.25.1.2 Display Setting Buttons

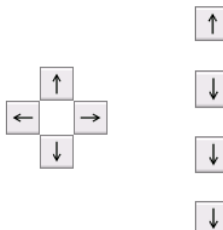


 : Touch it to enlarge the scale of the graph in vertical axis.
 : Touch it to reduce the scale of the graph in vertical axis
 : Touch it to enlarge the scale of the graph in horizontal axis
 : Touch it to reduce the scale of the graph in horizontal axis
 : Touch it to initialize the scale of the graph.

Current disp. setting
☒ Current (mA) ☐ Ratio(%) : Current Display Setting: System to display current can be selected




 : Touch it to slide the displayed waveform frame upwards.
 : Touch it to slide the displayed waveform frame downwards.
 : Touch it to slide the displayed waveform frame to the left.
 : Touch it to slide the displayed waveform frame to the right.

3.25.1.3 Monitor Operation Buttons



[Start] : Touch it to start monitoring.
 [Stop] : Touch it to stop monitoring and trigger standby.
 [Trigger] : Monitoring starts once the triggering conditions are satisfied.
 Refer to [3.25.3 Trigger Setting]
 [Details] : Touch it to display the window to conduct sampling frequency setting and trigger setting.
 Refer to [3.25.2 Sampling Frequency Setting and 3.25.3 Trigger Setting]
 It is available to touch when [Confirm] button is not on.
 [Save] : Touch it to save the acquired data to a Secure Digital memory card in the CSV format.
 Refer to [3.25.4.1 How to Save Waveform Data for the details of procedures]

3.25.1.4 Other Displays

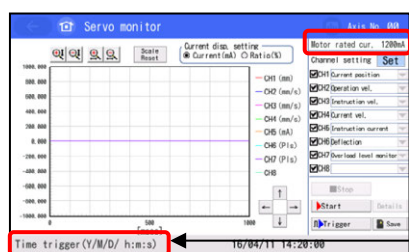

Motor Rated Current
 Setting Trigger Occurred Time (YY/MM/DD HH:MM:SS)

Motor Rated Current : It shows the motor rated current.
 Setting Trigger Occurred Time (YY/MM/DD HH:MM:SS) : It shows the time when the triggering conditions are satisfied and monitoring is started.


3.25.2 Sampling Frequency Setting

Press [Detail Setting] button in the servo monitor (waveform display) screen to show this screen.


Sampling period set. and continuous monitoring available time display can be conducted.

There are some models that setting of the Sampling period set. cannot be conducted, and only display of the current Sampling period set. is available.

(For the models only with display, the setting can be conducted in Parameter No. 113 "Monitoring Frequency")

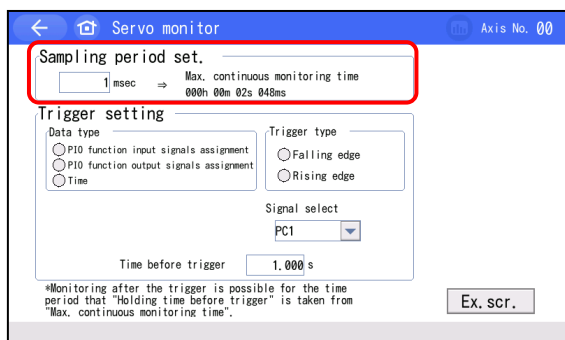

Screen for Models Only with Display

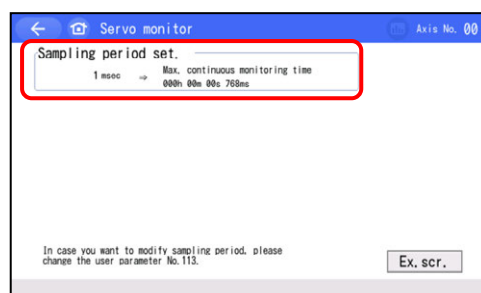

Sampling period Setting in This Screen

- After transition to this window, the value in Parameter No. 113 "Monitoring Frequency" gets initialized and the setting items for the sampling frequency will be displayed.
- Change to the setting is available in the range of the sampling frequency setting (refer to table below) for each controller.
- The value in Parameter No. 113 "Monitoring Frequency" will not be changed.

The sampling period and the number of records available to monitor for each controller are shown in the table below.


Controller (Same for Safety Category Complied Type)	Sampling period [ms]		Number of Records Available to Monitor		
	Availability of Setting	Setting Range	2-Channel Mode	4-Channel Mode	8-Channel Mode
ACON-CA, DCON-CA	Display Only	1 to 1000	8192	4096	2048
PCON-CA, ERC3	Display Only	1 to 1000	3072	1536	768
SCON-CA	Display Only	1 to 1000	-	15000	7500
MSCON	Display Only	1 to 1000	30000	15000	7500
SCON-CB, SCON2	Available for Setting	1 to 1000	30000	15000	7500
ACON-CB/CYB/PLB/POB, DCON-CB/CYB/PLB/POB, PCON-CB/CBP/CYB/PLB/POB, RCP6S	Available for Setting	1 to 60000	8192	4096	2048
MCON	Available for Setting	1 to 60000	4096	2048	1024

Continuous monitoring available time should be: Sampling period * Number of Records Available to Monitor

3.25.3 Trigger Setting

Trigger setting is available on ACON-CB/CYB/PLB/POB, DCON-CB/CYB/PLB/POB, PCON-CB/CBP/CYB/PLB/POB, SCON-CB, SCON2, MCON and RCP6S. (Same for Safety Category Complied Type)

Press [Detail Setting] button in the servo monitor (waveform display) screen to show this screen.

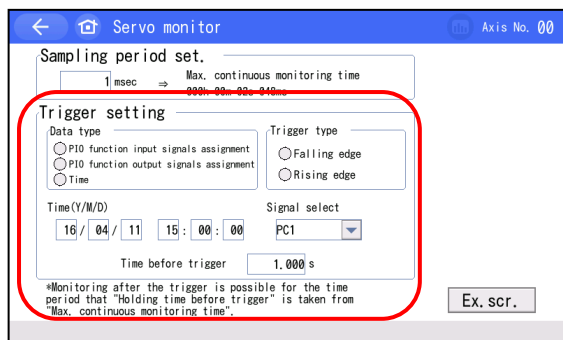

Left of the screen, for purposes of explanation, it displays all of the configuration items. Depending on the model and setting values that are connected, there are items that you do not want to display.

3.25.3.1 Setting Items in Trigger Setting

[Data type]

Select a condition to start monitoring from the three types below:

Data type

☐ PIO function input signals assignment

☐ PIO function output signals assignment

☐ Time

- ☐ PIO function input signals assignment
- ☐ PIO function output signals assignment
- ☐ Time

[Trigger type]

When "PIO Function Input Assignment (Bit)" or "PIO Function Output Assignment (Bit)" has been selected as the data type, select with which of the signal rising or falling the monitor should be started.

Trigger type

☐ Falling edge

☐ Rising edge

- ☐ Falling edge
- ☐ Rising edge

[Time (Y/M/D)]

When "Clock" has been selected at the data type, set the monitoring starting day.

Time (Y/M/D)

16 / 04 / 11 14 : 13 : 51

[Signal select]

When "PIO Function Input Assignment (Bit)" or "PIO Function Output Assignment (Bit)" has been selected as the data type, select the trigger signal.

Signal select

PC1

It is available to select the signals assigned to the operation mode for each controller.

[Time before trigger]

It is available to acquire data for the indicated time from the triggering condition satisfaction.


Time before trigger 1.000 s

(Note) The time to acquire data after the triggering condition satisfaction is time that "Retain Time before Triggering" is subtracted from "Continuous Monitoring Available Time".

Feature for
SCON-CB, SCON2 Only

3.25.3.2 When Conducting Trigger Setting with Input and Output Signals


Indicate the condition to start monitoring with the input or output signal (1 bit) assigned to the operation mode for each controller.

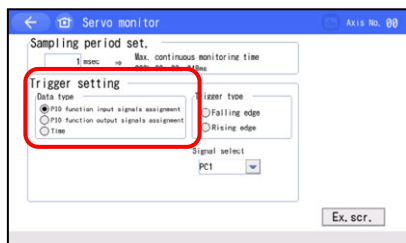

Select either of “PIO Function Input Assignment (Bit)” or “PIO Function Output Assignment (Bit)” in the data type.

When required to establish setting with input signal: select “PIO Function Input Assignment (Bit)”


When required to establish setting with output signal: select “PIO Function Output Assignment (Bit)”

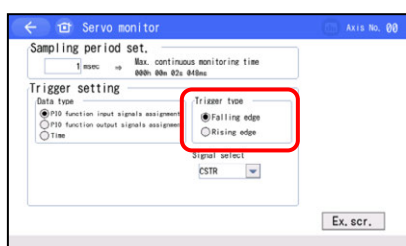

Select either of “Falling Edge” or “Rising Edge” in the trigger type.


When required to establish setting with falling: select “Falling Edge”

When required to establish setting with rising: select “Rising Edge”

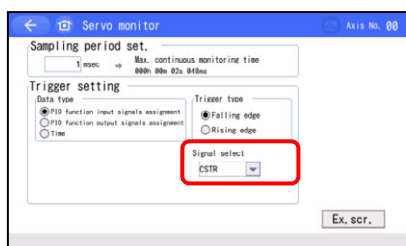

Select a signal that can be a trigger in the signal select.

Signal can be selected from the input or output signals assigned to the operation mode for each controller.

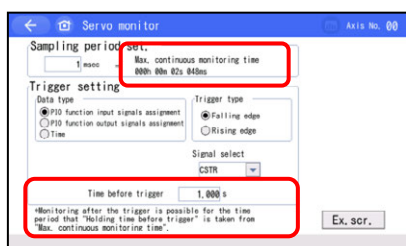


Feature for SCON-CB, SCON2 Only

Setting of the retain time before triggering is available.

By setting the time to this item, it is available to acquire data for the indicated time from the triggering condition satisfaction.

Set 0 when it is not required to use this feature.


(Note) The time to acquire data after the triggering condition satisfaction is time that this setting is subtracted from the continuous monitoring available time.

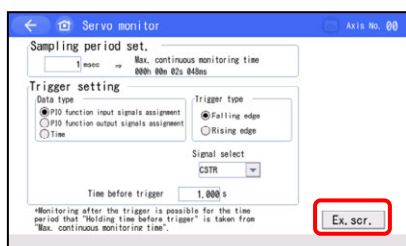


Touch [Ex. Scr.] button and the screen returns to the servo monitor (waveform display) window.

3.25.3.3 When Having Trigger Setting with Timer

The condition to start monitoring is indicated by day and time.

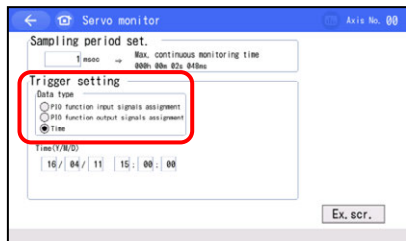


Select "Time" in Data Type.

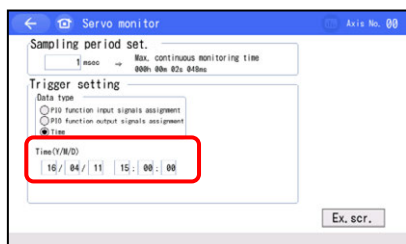

The item setting for Year/Month/Day, Time gets displayed. In the item setting, Year/Month/Day, Time when the screen was transited to the servo monitor window gets displayed.


Set Year/Month/Day, Time that is later than now.

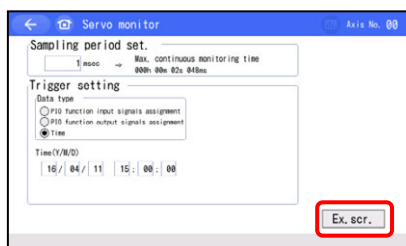


Touch [Ex. Scr.] button and the screen returns to the servo monitor (waveform display)

3.25.3.4 Start Trigger Standby Status

Trigger standby status can be started with procedures below for both situations when trigger setting was conducted with input and output signals and when conducted with time.

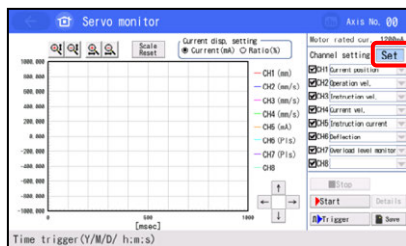

Touch [Set] in the servo monitor (waveform display) window to confirm the channel setting.

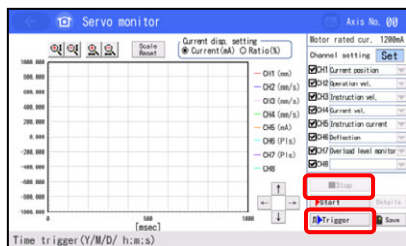


Touch [Trigger] to make it to the trigger standby status. In order to cancel the trigger standby status, touch [Stop Monitoring].

Monitoring starts once the triggering conditions are satisfied. Monitoring start time gets displayed on the right in "Setting Trigger Occurred Time" on the very bottom of the screen.


3.25.4 Operation to Save Data

3.25.4.1 How to Save Waveform Data

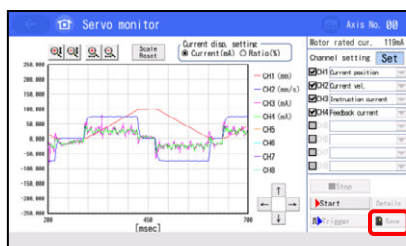


Insert a Secure Digital memory card.


Touch [Save] while monitoring is stopped.

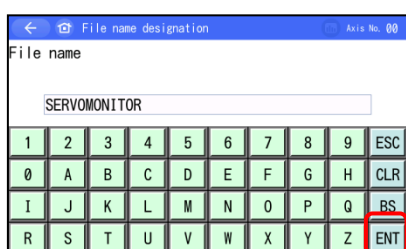

The file name indication screen opens. Input a file name and touch [ENT].

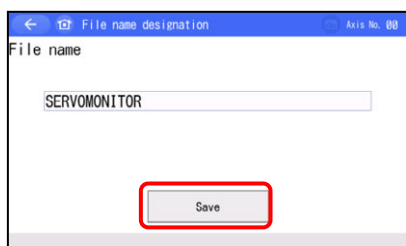


Touch [Save].

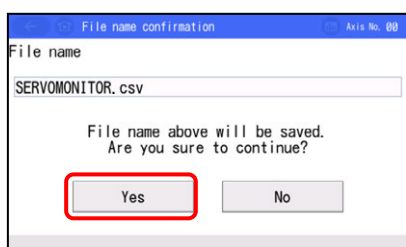

The file name confirmation screen pops up. Touch [Yes].

Save the data, and return to the servo monitor screen.

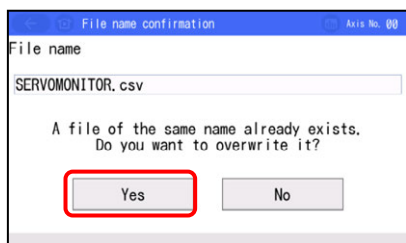

In case there is a file with the same name exists, overwriting confirmation window appears. Touch **Yes** if it is allowed to overwrite the old.

Save the data, and return to the servo monitor screen.

Domain to Save Data (cannot be changed)

The domain that the servo monitor data is saved is the folder stated below in a Secure Digital memory card.

\\TB_CON\\MonitorData\\FileName.csv

3.25.4.2 To Obtain Screenshot

It is not available to obtain a screenshot while in monitoring.
Stop monitoring first, and then obtain a screenshot.
For detail of operation, refer to [10.1 Screenshot]


3.26 Press Program

Operation of controller in the servo pressing type should be conducted in windows for pressing program.

- SCON-CB Controller Servo Pressing Type Applicable in Ver. 1.40 and later
- SCON2 Controller Servo Pressing Type..... Applicable in Ver. 4.10 and later

The pressing program is to be used instead of the position data in the servo press type. Therefore, “Edit Position” icon will be replaced with “Edit Pressing Program” icon, and the display of the operation windows for test run and Secure Digital memory card will be changed to those applicable for the operations and edit / save for the pressing programs. Monitoring feature also be changed to that suitable for the servo press type.

Below shows the items that have windows dedicated for the pressing programs.

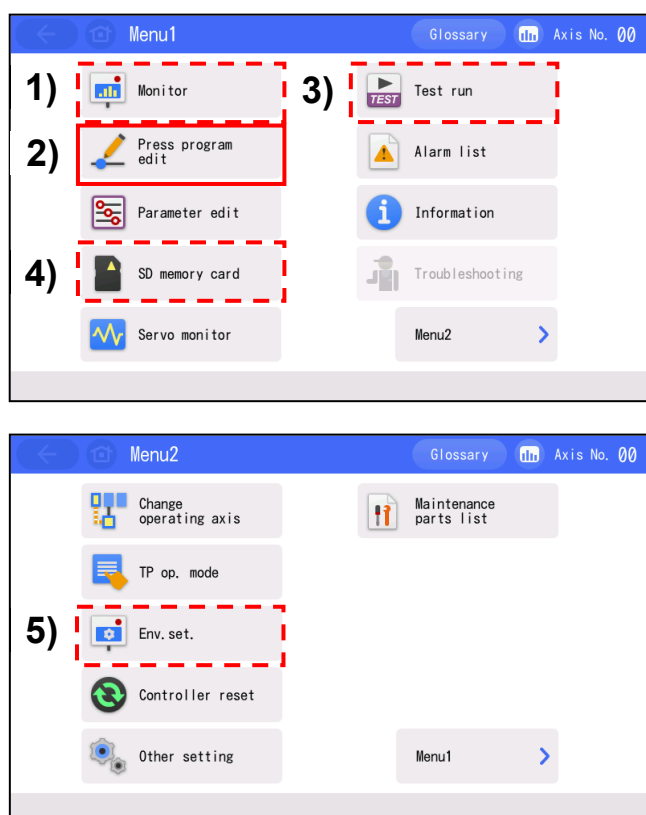

- 1) Windows in the monitor will differ. Refer to [3.26.1 Press Program Monitor]
- 2) “Edit Pressing Program” icon will be displayed in Menu 1 window. Refer to [3.26.2 Press Program Edit]
- 3) Windows in the test run will differ. Refer to [3.26.3 Press Program Test run]
- 4) Windows in the Secure Digital memory card will differ. Refer to [3.26.4 Secure Digital Memory Card]
- 5) Windows partially differ in the environment setting. Refer to [3.18 Environment Setting]
- 6) Guide related features ^(Note 1) cannot be used. (Guide icon in Menu 1 window will not be displayed)

Note 1 Features of “Position Edit Guide”, “I/O Control Guide” and “Simple Program Setting”


In 3.26, explains about 1) to 4).

3.26.1 Press Program Monitor

3.26.1.1 Press Program Monitor Screen

Touch [Monitor] button on the Menu 1 screen.

It shows the I/O status and current position of the connected controller.

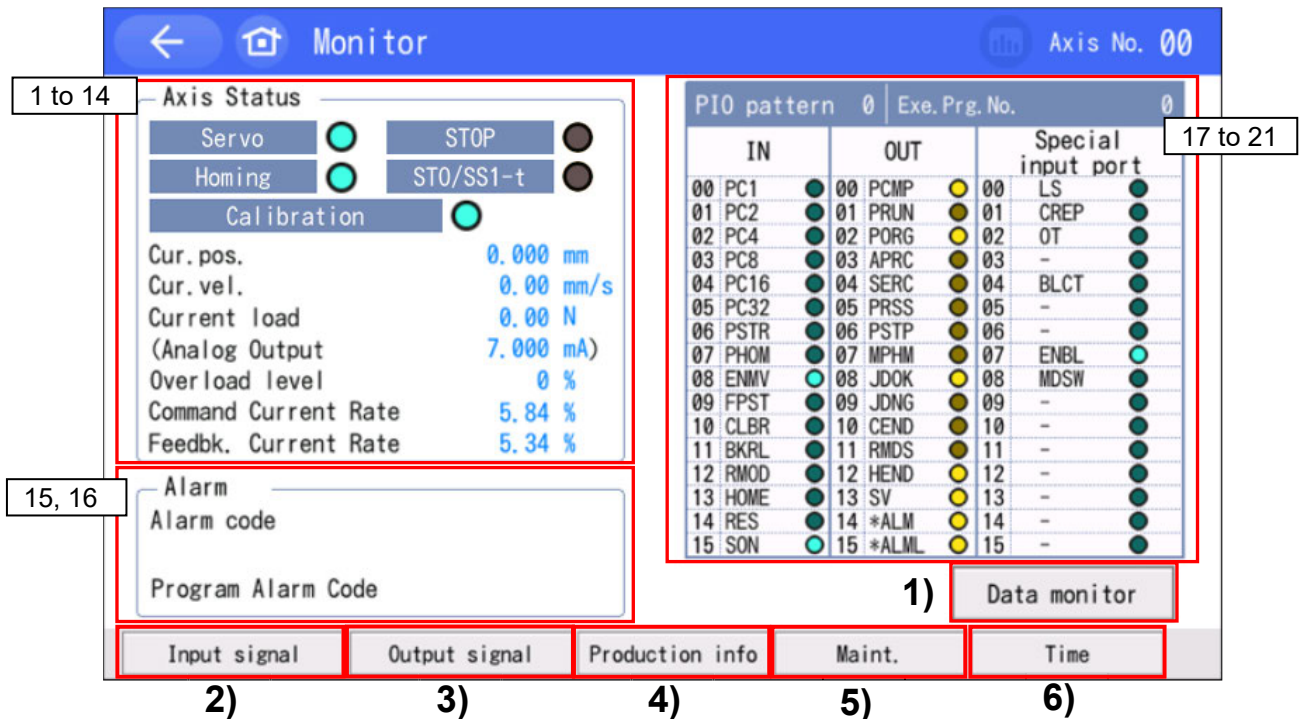

Press program Monitor Screen Button List


	Botton Name	Explanations
1)	Data monitor	Data monitor screen opens. Refer to [3.26.1.2]
2)	Input signal	It shows the term explanation window for input signals. Refer to [3.26.1.3]
3)	Output signal	It shows the term explanation window for output signals. Refer to [3.26.1.4]
4)	Production info	Production information screen opens. Refer to [3.17]
5)	Maint.	Maintenance screen opens. Refer to [3.9.2]
6)	Time	It shows the controller clock setting window. Refer to [3.9.3]

Press Program Monitor Screen Display List

	Name	Explanations
1	Servo	The servo status is shown. ON is lit. OFF is unlit.
2	Homing	The home return status is shown. Lit, if home return has completed.
3	Stop	It shows the status of stop. It is on when it is stopped. It turns off when the stop condition is released.
4	STO/SS1-t	It shows the status of STO/SS1-t for STO/SS1-t type of SCON-CB/SCON2. It is on when in STO/SS1-t condition. It turns off when the condition is released.
5	Calibration	The status of loadcell calibration is shown. Lit, if loadcell calibration has completed.
6	Cur. pos.	The current position is shown.
7	Cur. vel.	The current speed is shown.
8	Current load	The current load is shown.
9	Analog output	It shows the analog current output from the MF I/F connector on the controller in accordance with the current load.
10	Overload level	The overload level is shown.
11	Command current rate	The command value of electrical current is shown as a percentage of the rated current. The current value will be shown if touching the command current rate .
12	Feedbk. current ratio	It shows the rate of the feedback current to the rated value. The current value will be shown if touching the feedback current rate.
13	Command current value	The command current value is shown. The current rate will be shown if touching the command current value.
14	Feedbk. Current Value	The feedback current is shown. The current rate will be shown if touching the feedback current value.
15	Alarm code	It shows the alarm codes of the controller. It shows a blank if there is no alarm occurred.
16	Program Alarm Code	The program alarm code is shown.
17	PIO pattern	It shows the PIO pattern numbers set to the controller.
18	Exe. Prg. No.	It shows the pressing program number currently being executed.
19	IN	The press program home return status is shown. ON is lit. OFF is unlit.
20	OUT	The output status is shown. ON is lit. OFF is unlit.
21	Special Input port	It shows the status of such as the enable switch. ON is lit. OFF is unlit.

3.26.1.2 Data Monitor Screen

Touch [Data Monitor] button in the pressing program monitor window.

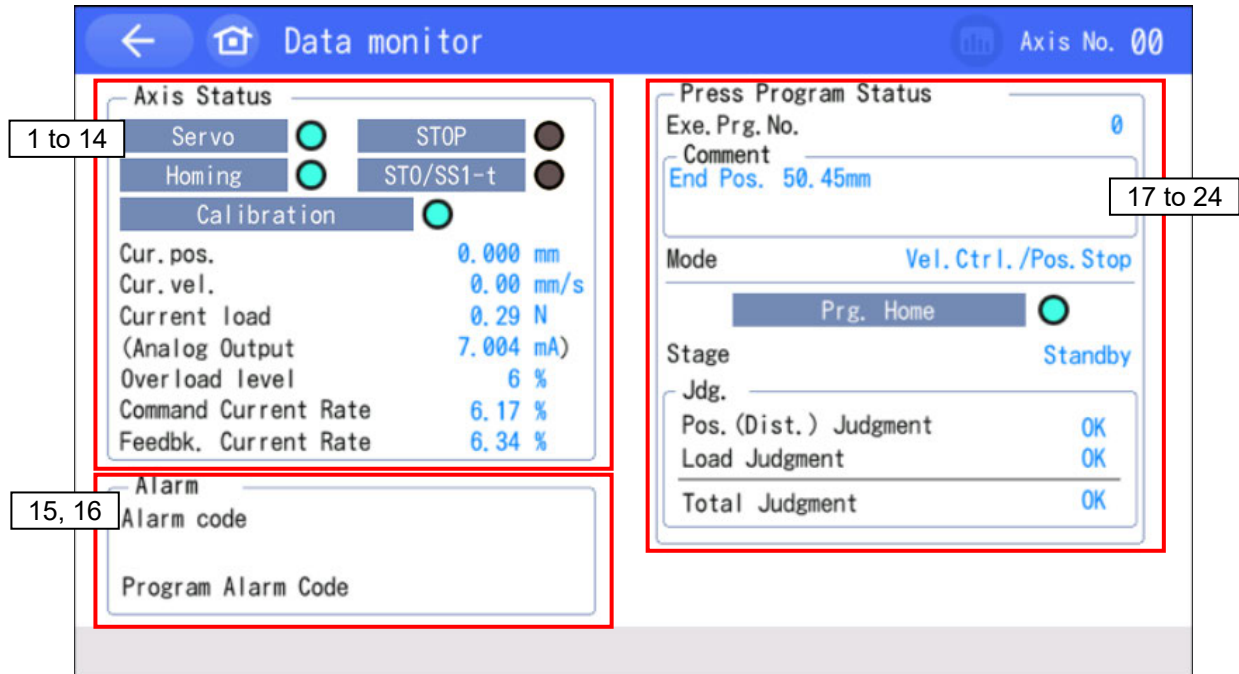

Press Program Data Monitor Screen Display List

	Name	Explanations
1	Servo	The servo status is shown. ON is lit. OFF is unlit.
2	Homing	The home return status is shown. Lit, if home return has completed.
3	Stop	It shows the status of stop. It is on when it is stopped. It turns off when the stop condition is released.
4	STO/SS1-t	It shows the status of STO/SS1-t for STO/SS1-t type of SCON-CB/SCON2. It is on when in STO/SS1-t condition. It turns off when the condition is released.
5	Calibration	The status of loadcell calibration is shown. Lit, if loadcell calibration has completed.
6	Cur. pos.	The current position is shown.
7	Cur. vel.	The current speed is shown.
8	Current load	The current load is shown.
9	Analog Output	It shows the analog current output from the MF I/F connector on the controller in accordance with the current load.
10	Overload level	The overload level is shown.
11	Command Current Rate	The command value of electrical current is shown as a percentage of the rated current. The current rate will be shown if touching the command current value.

	Name	Explanations
12	Feedbk. Current Rate	It shows the rate of the feedback current to the rated value. The current value will be shown if touching the feedback current rate.
13	Command Current Value	The command current is shown. The current rate will be shown if touching the command current value.
14	Feedbk. Current Value	The feedback current is shown. The current rate will be shown if touching the feedback current value.
15	Alarm code	It shows the alarm codes of the controller. It shows a blank if there is no alarm occurred.
16	Program Alarm Code	The program alarm code is shown.
17	Exe. Prg No.	It shows the pressing program number currently being executed.
18	Comment	It shows the comment set in the pressing program number currently being executed.
19	Mode	It shows the pressurizing operation mode set in the pressing program number currently being executed.
20	Prg Home	The program home return status is shown. It turns on when the movement operation to the program home position is complete.
21	Stage	It shows the control stage of the pressing program number currently being executed.
22	Pos. (Dist.) Judgment	It shows the result of the position (distance) judgment. If the result is passed, it shows OK and NG if it resulted failed. It shows blank before judgment is conducted.
23	Load Judgment	It shows the result of the load judgment. If the result is passed, it shows OK and NG if it resulted failed. It shows blank before judgment is conducted.
24	Total Judgment	It shows the result of the position (distance) judgment and the load judgment. It shows OK if both of the position (distance) judgment and the load judgment resulted passed. It shows NG if both of the position (distance) judgment and the load judgment resulted failed. It shows NG if the position (distance) judgment resulted passed but the load judgment failed, or the position (distance) judgment resulted failed while the load judgment passed. It shows OK if the position (distance) judgment resulted passed but the load judgment unjudged, or the position (distance) judgment is unjudged while the load judgment resulted passed. It shows blank before judgment is conducted.

3.26.1.3 Input Signals Glossary

Touch [Input Signal Explanation] button in the pressing program monitor window.

← Glossary
Axis No. 00

Input signals

Input signals(Host=>Controller)		
PC1~PC32	Command Program No.	Glossary
PSTR	Program Start	Glossary
PHOM	Program Home-return	Glossary
ENMV	Axis Motion Enabling	Glossary
FPST	Prg. Compulsory Termination	Glossary
SSTP	Search Stop	Glossary
CLBR	Load cell calibration command	Glossary
RMOD	Operation mode switch	Glossary

Input signals(Host=>Controller)		
HOME	Homing	Glossary
RES	Reset	Glossary
SON	Servo ON	Glossary
BKRL	Brake rel.	Glossary
JISL	Jog/Inching switch	Glossary
JVEL	Jog Speed / Inching Distance Switchover	Glossary
JOG+/JOG-	Jog	Glossary
DSTR	Positioning Start	Glossary

*You can see the explanation of each function by touching "Glossary".

**" represents a negative logic signal.

Touch [Glossary] in each item and you can check the details of features.

3.26.1.4 Output Signals Glossary

Touch [Output Signal Explanation] button in the pressing program monitor window.

← Glossary
Axis No. 00

Output signals

Output signals(Controller=>Host)		
PCMP	Prg. Nrml. Completion	Glossary
PRUN	Program Running	Glossary
PORG	Program Home Position	Glossary
APRC	Approach	Glossary
SERC	Searching	Glossary
PRSS	Pressurizing	Glossary
PSTP	Pressurizing Stop	Glossary
MPHM	Program Home-return Running	Glossary
JDOK/JDNG	Pass/Fail Judgment	Glossary
PALM	Program Alarm	Glossary

Output signals(Controller=>Host)		
*ALML	Minor Malfunction Alarm	Glossary
*ALM	Alarm	Glossary
EMGS	Emergency stop output	Glossary
SV	Servo ON	Glossary
HEND	Homing complete	Glossary
PEND	Positioning complete	Glossary
RMOD	Operation mode output	Glossary
CEND	Load cell calibration complete	Glossary
ZONE1	Zone	Glossary

*You can see the explanation of each function by touching "Glossary".

**" represents a negative logic signal.

Touch [Glossary] in each item and you can check the details of features.

3.26.2 Press Program Edit

3.26.2.1 Press Program Select Screen

Touch [Press Program] button on the Menu 1 screen.

It is a window to select, copy and delete the saved pressing programs.

No.	Pressurizing Op. Md.	Program Comment
000	1 : Vel. Ctrl. /Pos. Stop	End Pos. 50.45mm
001	2 : Vel. Ctrl. /Dis. Stop	End Dist. 1.5mm
002	0 : Program Invalid	End Pos. 50.5mm
003	3 : Vel. Ctrl. /Ld. Stop	Caulking 550N
004	3 : Vel. Ctrl. /Ld. Stop	Approach - First Press 100N
005	3 : Vel. Ctrl. /Ld. Stop	Second Press 150N
006	7 : Frc. Ctrl. /Ld. Stop	Third Press 500N - Return 10.00m...
007	1 : Vel. Ctrl. /Pos. Stop	Only Approach 75mm/s

1) ↑ Pr pg 2) No. sel. 3) All clear 4) ↓ Nx pg 5) Copy

* To Edit Window by Touching Press Program Number

Press Program Select Screen Button List

	Botton Name	Explanations
1)	Press Program No.	It shows the individual edit window for the selected pressing program number.
2)	↑ Pr pg, ↓ Nx pg	It shows the previous and next pages of the pressing program list.
3)	No. sel.	Indicate a pressing program number, and it show the page including the indicated pressing program.
4)	All clear	Delete all the pressing programs in the controller. Refer to [3.26.2.4 (1)]
5)	Copy	The press program copy is shown.Refer to [3.26.2.3]

Press Program Select Screen Display List

	Botton Name	Explanations
1	Pressurizing Op.Md.	It shows the pressurizing operation mode set to the pressing program.
2	Program Comment	It shows the comment set in the pressing program. It can show 32 half-size font characters and 16 full-size font characters at the maximum, and show "..." after that.

3.26.2.2 Press Program Edit Screen

Touch a button for the pressing program number to be edited in the pressing program select window.

Pressing program setting can be performed.

Press Program Select Screen Button List

	Botton Name	Explanations
1)	Tab Select	Select each tab and the input display can be switched over. If any change is made in a tab, the name of the tab gets displayed in red. If the setting in the pressurizing operation mode has not been established, no tab but the overall tab can be selected.
2)	↑ PrvPrg, ↓ NxtPrg	The previous pressing program and the next pressing program can be displayed.
3)	Reload	It puts back the values in the pressing program to the ones before change. It cannot be made before making any change.
4)	Prg. Clr.	It deletes the pressing programs in display in the controller. Refer to [3.26.2.4 (2)]
5)	Transfer	It transfers the setting values which change is made in the pressing program to a controller. It cannot be made before making any change.
6)	Test run	It shows the test run window for the pressing program. Refer to [3.26.3]

Press Program Select Screen Display List

	Name	Explanations
1	Program No.	It shows the pressing program number which is currently in edit.
2	Figure of Control Stage	It shows the name and the arrow of the control stage which is currently in edit in red. It shows the name and the arrow of the control stage in gray when each control stage is inactivated. It shows all the names and arrows in gray when the pressurizing operation mode is set to "0: Program Invalid" and no registration is made.

Press Program Select Screen Input List

000 Program Select Screen Input List

	Name	Explanations																								
i	Pressurizing Op.Md.	<p>Following settings can be performed in the pressurizing operation mode.</p> <table><tr><th></th><th>Pressurizing Op.Md.</th></tr><tr><td></td><td>Blank (program setting not established)</td></tr><tr><td>0</td><td>Program Invalid</td></tr><tr><td>1</td><td>Velocity Control / Positon Stop</td></tr><tr><td>2</td><td>Velocity Control / Distance Stop</td></tr><tr><td>3</td><td>Velocity Control / Load Stop</td></tr><tr><td>4</td><td>Velocity Control / Incremental Load Stop</td></tr><tr><td>5</td><td>Force Control / Position Stop</td></tr><tr><td>6</td><td>Force Control / Distance Stop</td></tr><tr><td>7</td><td>Force Control / Load Stop</td></tr><tr><td>8</td><td>Force Control / Incremental Load Stop</td></tr><tr><td>9</td><td>Force Control / Position Stop 2</td></tr></table> <p>Setting in each item cannot be changed if [0: Program Invalid] or blank. Any pressurizing operation mode that the controller is not applicable will not be displayed. Refer to the instruction manual of the controller for detail.</p>		Pressurizing Op.Md.		Blank (program setting not established)	0	Program Invalid	1	Velocity Control / Positon Stop	2	Velocity Control / Distance Stop	3	Velocity Control / Load Stop	4	Velocity Control / Incremental Load Stop	5	Force Control / Position Stop	6	Force Control / Distance Stop	7	Force Control / Load Stop	8	Force Control / Incremental Load Stop	9	Force Control / Position Stop 2
	Pressurizing Op.Md.																									
	Blank (program setting not established)																									
0	Program Invalid																									
1	Velocity Control / Positon Stop																									
2	Velocity Control / Distance Stop																									
3	Velocity Control / Load Stop																									
4	Velocity Control / Incremental Load Stop																									
5	Force Control / Position Stop																									
6	Force Control / Distance Stop																									
7	Force Control / Load Stop																									
8	Force Control / Incremental Load Stop																									
9	Force Control / Position Stop 2																									
ii	Program Comment	<p>A comment can be input for the pressing program. A comment can be made with 64 half-size font characters at the maximum. The display is also capable for full-size font characters. A comment can be input even when the pressurizing operation mode is set to [0: Program Invalid]. A comment cannot be input when the pressurizing operation mode is blank.</p>																								

Information for Each Tab

(1) Overall : Touch [Overall] tab.

Press Program Edit Axis No. 00

Program No. 000 Pressurizing Op. Md. 1 : Vel. Ctrl. /Pos. Stop

Program Comment End Pos. 50.45mm

Overall 1. Approach 2. Search 3. Press 4. Deprs 5. Return Jdg.

Overall

Prg. Home(mm) **1)** 0.000 Wait Time (s) **3)** 1.0

Linked Prg. No. **2)** No Prg. Allw. Time(s) **4)** 60.0

Return Operation at Prg. Alm. ☒ Yes ☐ No

Gain set **6)** **5)** ☒ 0 ☐ 1 ☐ 2 ☐ 3

1 Lump-sum Accel. Setting Acc/Dec(G) **7)** 0.20

↑ PrvPrg Reload **Prg. Clr.** ↓ NxtPrg Transfer Test run

Sequence Diagram: Prg. Home → 1. Approach → 2. Search → 3. Press (Stop) → 4. Deprs → 5. Return → Wait → Prg. Home. Jdg. is shown between 3. Press and 4. Deprs.

Press Program Select Screen [Overall] tab Setting List

	Name	Explanations
1)	Prg. Home (mm)	The program home position can be input.
2)	Linked Prg. No.	The pressing program number to be executed next can be input. The pressing program currently running can also be available for setting.
3)	Wait Time (s)	The standby time after finishing a pressing program can be input.
4)	Prg. Allw. Time (s)	Program execution allowable time can be input. It does not include the standby time. Input the program allowable time to make "Program Allowable Time > Pressurizing Stop Time". Monitoring of the program allowable time will not be conducted if set to "0".
5)	Return Operation at Prg. Alm.	Setting can be established for operation after a program alarm has been generated. With Setting: Returns to the program home position when a program alarm has been generated. With No Setting: Stays at the current position when a program alarm has been generated.
6)	Gain set	Gain set can be established.
7)	Acc/Dec (G)	Acceleration and deceleration of the whole pressing program can be input. If the acceleration and deceleration in the whole pressing program are the same at the time of change to acceleration and deceleration lump-sum setting, the value should be displayed. In case it is different, "*" will be displayed.

Press Program Select Screen [Overall] tab Button List

	Botton Name	Explanations
1	Lump-sum Accel. Setting	<p>Select if acceleration and deceleration setting should be conducted at once.</p> <p>If “Acceleration and Deceleration Lump-Sum Setting” button is selected, acceleration and deceleration can be input.</p> <p>If “Acceleration and Deceleration Lump-Sum Setting” button is not selected, acceleration and deceleration input box will not be displayed.</p>

(2) Approach : Touch [1. Approach] tab.

←
Press Program Edit
Axis No. 00

Program No. 000
Pressurizing Op. Md. 1 : Vel. Ctrl. /Pos. Stop

Program Comment
End Pos. 50.45mm

Overall
1. Approach
2. Search
3. Press
4. Deprs
5. Return
Jdg.

1. Approach 1)	
Vel (mm/s)	2) 75.00
Acc (G)	0.20
Dec (G)	3) 0.20
End Pos (mm)	4) 47.000
Maximum Load (N)	5) 30.00

↑ PrvPrg
Reload
Prg. Clr.
↓ NxtPrg
Transfer
Test run

Press Program Select Screen [1. Approach] tab Setting List

	Name	Explanations
1)	Approaching Valid / Invalid	Setting should be established whether to perform the approaching operation. Put a check mark to activate it. Remove a check mark to make it invalid, and input of velocity, acceleration, deceleration, complete position and maximum load will become unavailable.
2)	Vel (mm/s)	Velocity of the approaching operation can be input.
3)	Acc (G) Dec (G)	Acceleration and deceleration of the approaching operation can be input. The setting should basically be made within the range of the rated value stated in the catalog. A greater number than the rated value stated in the catalog may be able to be selected for the input range, however, it is for the case assuming "the purpose to shorten the takt time in the case that the transported weight is much lighter than the rated value". Decrease the value if a problem could be caused by vibration on transported object during acceleration and deceleration. If the acceleration and deceleration lump-sum setting is valid, input cannot be made.
4)	End Pos (mm)	A positon to complete the approaching operation can be input. Input should be made for the complete position to make it "Approaching Complete Position < Searching Limit Position" and "Approaching Complete Position ≤ Pressurizing Complete Position".
5)	Maximum Load (N)	The allowable value for the load in the approaching operation can be input.

(3) Search : Touch [2. Search] tab.

Press Program Edit Axis No. 00

Program No. 000 Pressurizing Op. Md. 1 : Vel. Ctrl. /Pos. Stop

Program Comment End Pos. 50.45mm

Overall | 1. Approach | **2. Search** | 3. Press | 4. Deprs | 5. Return | Jdg.

2. Search 1)

Vel (mm/s)	2)	1.00
Acc (G)		0.20
Dec (G)	3)	0.20
End Load (N)	4)	60.00
Limit Pos (mm)	5)	50.000

↑ PrvPrg | Reload | **Prg. Clr.** | ↓ NxtPrg | Transfer | Test run

Press Program Select Screen [2. Search] tab Setting List

	Name	Explanations
1)	Search Valid / Invalid	Setting should be established whether to perform the searching operation. Put a check mark to activate it. Remove a check mark to make it invalid, and input of velocity, acceleration, deceleration, complete position and maximum load will become unavailable.
2)	Vel (mm/s)	Velocity of the searching operation can be input.
3)	Acc (G) Dec (G)	Acceleration and deceleration of the searching operation can be input. The setting should basically be made within the range of the rated value stated in the catalog. A greater number than the rated value stated in the catalog may be able to be selected for the input range, however, it is for the case assuming "the purpose to shorten the takt time in the case that the transported weight is much lighter than the rated value". Decrease the value if a problem could be caused by vibration on transported object during acceleration and deceleration. If the acceleration and deceleration lump-sum setting is valid, input cannot be made.
4)	End Pos (mm)	A load to complete the approaching operation can be input.
5)	Limit Pos (mm)	A limit position for the searching operation can be input. Input should be made for the limit position to make it "Approaching Complete Position < Searching Limit Position" and "Searching Limit Position ≤ Pressurizing Complete Position".

(4) Press : Touch [3. Press] tab.

←
Press Program Edit
Axis No. 00

Program No. 000
Pressurizing Op. Md. 1 : Vel. Ctrl. / Pos. Stop

Program Comment
End Pos. 50.45mm

Overall
1. Approach
2. Search
3. Press
4. Deprs
5. Return
Jdg.

3. Press			
Vel (mm/s)	1)	10.00	Stop Time (s)
Acc (G)	2)	0.20	Op. Allw. Time(s)
Dec (G)		0.20	Vel. Sw. Load(N)
Maximum Load (N)	3)	600.00	Vel. Sw. Pos. (mm)
End Pos (mm)	4)	50.450	Sw. Vel. (mm/s)
			5)
			6)
			7)
			8)
			9)

↑ PrvPrg
Reload
Prg. Clr.
↓ NxtPrg
Transfer
Test run

Press Program Select Screen [3. Press] tab Setting List

	Name	Explanations
1)	Vel (mm/s)	Velocity of the pressurizing operation can be input.
2)	Acc (G) Dec (G)	Acceleration and deceleration of the pressurizing operation can be input. The setting should basically be made within the range of the rated value stated in the catalog. A greater number than the rated value stated in the catalog may be able to be selected for the input range, however, it is for the case assuming "the purpose to shorten the takt time in the case that the transported weight is much lighter than the rated value". Decrease the value if a problem could be caused by vibration on transported object during acceleration and deceleration. If the acceleration and deceleration lump-sum setting is valid, input cannot be made.
3)	Maximum Load (N)	Allowable value of the load in the pressurizing operation can be input. * It should be displayed when "1: Velocity Control / Position Stop", "2: Velocity Control / Distance Stop", "5: Force Control / Position Stop" or "6: Force Control / Distance Stop" in the pressurizing operation mode is selected.
	End Pos (N)	The load to finish the pressurizing operation can be input. * It should be displayed when "3: Velocity Control / Load Stop" in the pressurizing operation mode is selected.
	Target Load (N)	The load to target the pressurizing operation can be input. * It should be displayed when "3: Velocity Control / Load Stop" in the pressurizing operation mode is selected.
	Complete Incremental Load (N)	Incremental value from the start of pressurizing operation to the load can be input. * It should be displayed when "4: Velocity Control / Incremental Load Stop" in the pressurizing operation mode is selected.

	Name	Explanations
	Target Incremental Load (N)	The load to be targeted in pressurizing operation can be input in incremental value from the pressurizing operation start. * It should be displayed when "8: Force Control / Incremental Load Stop" in the pressurizing operation mode is selected.
4)	End Pos (mm)	The position to finish the pressurizing operation can be input. Input should be made for the complete position to make it "Approaching Complete Position \leq Pressurizing Complete Position" and "Searching Limit Position \leq Pressurizing Complete Position".
	Complete Distance (mm)	The position to finish the pressurizing operation can be input in distance from the pressurizing operation start. * It should be displayed when "2: Velocity Control / Distance Stop" or "6: Force Control / Distance Stop" in the pressurizing operation mode is selected.
	Limit Pos (mm)	The limit position to finish the pressurizing operation can be input. "Approaching Complete Position \leq Pressurizing Complete Position" and "Searching Limit Position \leq Pressurizing Complete Position". * It should be displayed when "3: Velocity Control / Load Stop" or "7: Force Control / Load Stop" in the pressurizing operation mode is selected.
5)	Stop Time (s)	The stop time after the pressurizing operation can be input.
6)	Op. Aiiw. Time (s)	The allowable time for the pressurizing operation can be input.
7)	Vel. Sw. Load (N)	Load to switch the speed during the pressurizing operation can be input. Load to switch over during the pressurizing operation can be input. * It should be displayed when "1: Velocity Control / Position Stop", "2: Velocity Control / Distance Stop", "3: Velocity Control / Load Stop", "5: Force Control / Position Stop", "6: Force Control / Distance Stop", "7: Force Control / Load Stop" or "9: Force Control / Position Stop 2" in the pressurizing operation mode is selected.
	Velocity Swchover Incremental Load (N)	Incremental to switch the speed during the pressurizing operation can be input. * It should be displayed when "4: Velocity Control / Incremental Load Stop" or "8: Force Control / Incremental Load Stop" in the pressurizing operation mode is selected.
8)	Vel. Sw. Pos. (mm)	Position to switch the speed during the pressurizing operation can be input. * It should be displayed when "1: Velocity Control / Position Stop", "3: Velocity Control / Load Stop", "4: Velocity Control / Incremental Load Stop", "5: Force Control / Position Stop", "7: Force Control / Load Stop", "8: Force Control / Incremental Load Stop" or "9: Force Control / Position Stop 2" in the pressurizing operation mode is selected.
	Velocity Swchover Distance (mm)	Distance to switch the speed during the pressurizing operation can be input. * It should be displayed when "2: Velocity Control / Distance Stop" or "6: Force Control / Distance Stop" in the pressurizing operation mode is selected.
9)	Sw.Vel. (mm/s)	Velocity to switch over during the pressurizing operation can be input.

(5) Deprs : Touch [4. Deprs] tab.

Press Program Edit

Axis No. 00

Program No. 000 Pressurizing Op. Md. 1 : Vel. Ctrl. /Pos. Stop

Program Comment End Pos. 50.45mm

Overall 1. Approach 2. Search 3. Press 4. Deprs 5. Return Jdg.

1) 4. Deprs

Vel (mm/s)	2) 10.00
Acc (G)	0.20
Dec (G)	3) 0.20
End Load (N)	4) 30.00

↑ PrvPrg Reload Prg. Clr. ↓ NxtPrg Transfer Test run

Press Program Select Screen [4. Deprs] tab Setting List

	Name	Explanations
1)	Deceleration Valid / Invalid	Setting should be established whether to perform the deceleration operation. Put a check mark to activate it. Remove a check mark to make it invalid, and input of velocity, acceleration, deceleration, complete position and maximum load will become unavailable.
2)	Vel (mm/s)	Velocity of the deceleration operation can be input.
3)	Acc (G) Dec (G)	Acceleration and deceleration of the deceleration operation can be input. The setting should basically be made within the range of the rated value stated in the catalog. A greater number than the rated value stated in the catalog may be able to be selected for the input range, however, it is for the case assuming "the purpose to shorten the takt time in the case that the transported weight is much lighter than the rated value". Decrease the value if a problem could be caused by vibration on transported object during acceleration and deceleration. If the acceleration and deceleration lump-sum setting is valid, input cannot be made.
4)	End Load [N]	A load to complete the deceleration operation can be input.

(6) Return : Touch [5. Return] tab.

Press Program Edit

Axis No. 00

Program No. 000 Pressurizing Op. Md. 1 : Vel. Ctrl. /Pos. Stop

Program Comment End Pos. 50.45mm

Overall 1. Approach 2. Search 3. Press 4. Deprs 5. Return Jdg.

1) ☒ 5. Return

2) Vel (mm/s) 75.00

3) Acc (G) 0.20

Dec (G) 0.20

↑ PrvPrg Reload Prg. Clr. ↓ NxtPrg Transfer Test run

Press Program Select Screen [5. Return] tab Setting List

	Name	Explanations
1)	Return Valid / Invalid	Setting should be established whether to perform the return operation. Put a check mark to activate it. Remove a check mark to make it invalid, and input of velocity, acceleration, deceleration, complete position and maximum load will become unavailable.
2)	Vel (mm/s)	Velocity of the return operation can be input.
3)	Acc (G) Dec (G)	Acceleration and deceleration of the return operation can be input. The setting should basically be made within the range of the rated value stated in the catalog. A greater number than the rated value stated in the catalog may be able to be selected for the input range, however, it is for the case assuming "the purpose to shorten the takt time in the case that the transported weight is much lighter than the rated value". Decrease the value if a problem could be caused by vibration on transported object during acceleration and deceleration. If the acceleration and deceleration lump-sum setting is valid, input cannot be made.

(7) Jdg. : Touch [Jdg.] tab.

←

🏠

Press Program Edit

Axis No. 00

Program No. 000

Pressurizing Op. Md. 1 : Vel. Ctrl. /Pos. Stop

Program Comment

End Pos. 50.45mm

Overall

1. Approach

2. Search

3. Press

4. Deprs

5. Return

Jdg.

Jdg.

Pos. Jdg. Type ☒ Pos. ☐ Dist. 1)

Pos. UpperLimit(mm)	2) 51.000
Pos. LowerLimit(mm)	3) 47.000
LoadUpperLimit(mm)	4) 600.00
LoadLowerLimit(mm)	5) 500.00

↑ PrvPrg

Reload

Prg.

↓ NxtPrg

Transfer

Test run

Pos.jdg Type : Pos. Dist

Overall

1. Approach

2. Search

3. Press

4. Deprs

5. Return

Jdg.

Jdg.

Pos. Jdg. Type ☐ Pos. ☒ Dist.


Dis. UpperLimit(mm)	6) 1.600
Dis. LowerLimit(mm)	7) 1.000
LoadUpperLimit(mm)	0.00
LoadLowerLimit(mm)	0.00

Press Program Select Screen [Jdg.] tab Setting List

	Name	Explanations
1)	Pos. Jdg. Type	Position judgment method can be set. Select "Position" to make the judgment made with position, and "Distance" with distance.
2)	Pos. UpperLimit (mm)	The upper limit for the position judgement can be input. Set the upper and lower positions to the same value and the position judgement becomes invalid.
3)	Pos. LowerLimit (mm)	The lower limit for the position judgement can be input. Set the upper and lower positions to the same value and the position judgement becomes invalid.
4)	LoadUpperLimit (N)	The upper limit for the load judgement can be input. Set the upper and lower loads to the same value and the load judgement becomes invalid.
5)	LoadLowerLimit (N)	The lower limit for the load judgement can be input. Set the upper and lower loads to the same value and the load judgement becomes invalid.
6)	Dis. UpperLimit (mm)	The upper limit for the distance judgement can be input. Set the upper and lower distance s to the same value and the distance judgement becomes invalid.
7)	Dis. LowerLimit (mm)	The lower limit for the distance judgement can be input. Set the upper and lower distance s to the same value and the distance judgement becomes invalid.


3.26.2.3 Press Program Copy

Copy of a saved pressing program can be made.

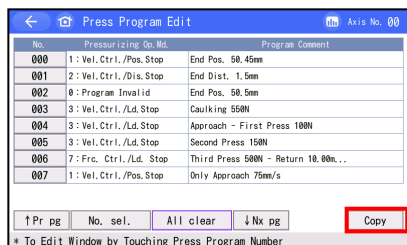

Check the program number to make a copy from and the domain number to make a copy to in the pressing program select window.

Touch [Copy].

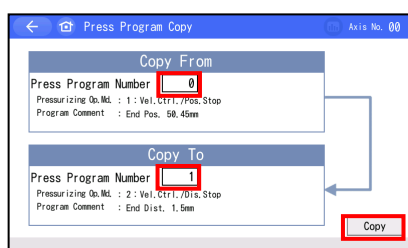


The press program copy screen appears.

Input the number to copy from and the number to copy to.

Touch [Copy].

(Note) [Copy] cannot be touched unless both of the number to copy from and the number to copy to are input.

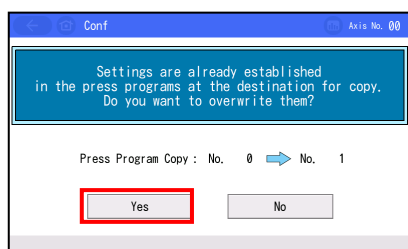


A confirmation window for overwriting will show up if a pressing program is saved in the number to make a copy to.

Touch [Yes] when overwriting.

Touch [No] to cancel overwriting.

(The screen will go back to the pressing program copy window in this case.)

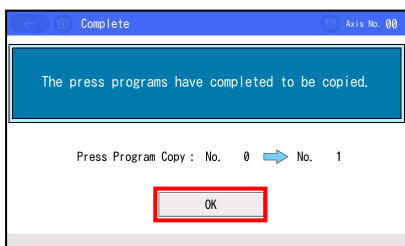


Copy Complete window will be displayed once the copy is complete.

Touch [OK].


Return to the press program edit screen.

3.26.2.4 Erasing Pressing Programs

(1) How to Delete All Pressing Programs at Once

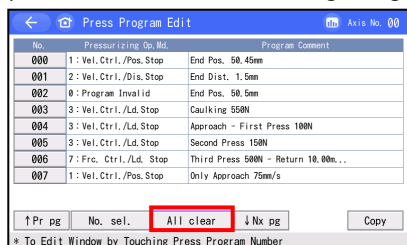

Touch [All clear] on the press program edit screen.

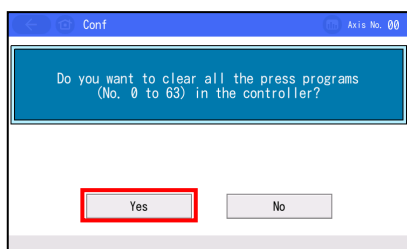


The press program all clear confirmation screen appears. Touch [Yes].


To cancel the clear all, touch [No].

Return to the press program edit screen.

(2) How to Delete Pressing Program Individually

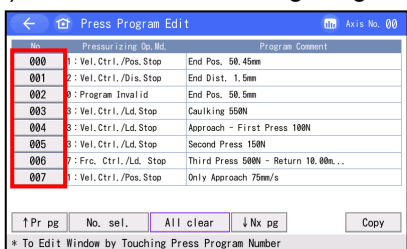


Touch the pressing program numbers that you would like to delete in the pressing program select window.

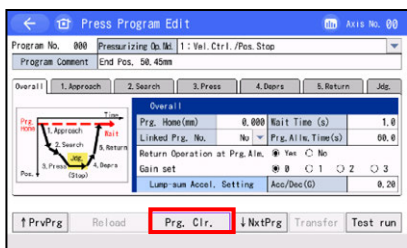

The press program clear confirmation screen appears.

Touch [Prg. Clr.].

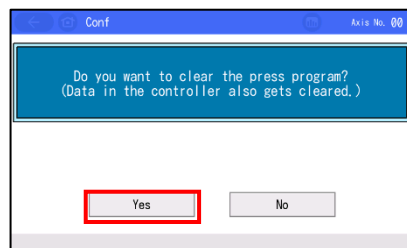


The press program clear conf screen appears. Touch [Yes].

Return to the press program edit screen.

3.26.3 Press Program Test Run

Touch [Test run] button in Menu 1 window.

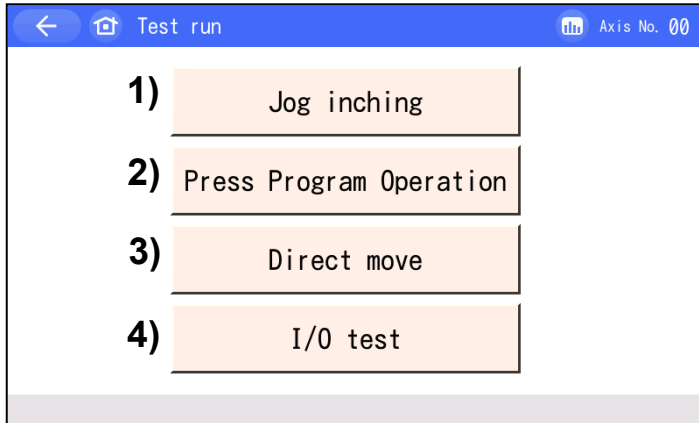


Press Program Test run Menu Screen Button List

	Botton Name	Explanations
1)	Jog inching	It shows the window for JOG / Inching. Refer to [3.26.3.1]
2)	Press Program Operation	It shows the pressing program operation window. Refer to [3.26.3.2]
3)	Direct move	It shows the direct numerical command movement window. Refer to [3.26.3.4]
4)	I/O test	It shows the I/O testing window. Refer to [3.12.4]

3.26.3.1 Jog Inching Screen

JOG / Inching operation can be conducted.

Touch the JOG / Inching operation button in the pressing program test run menu window.

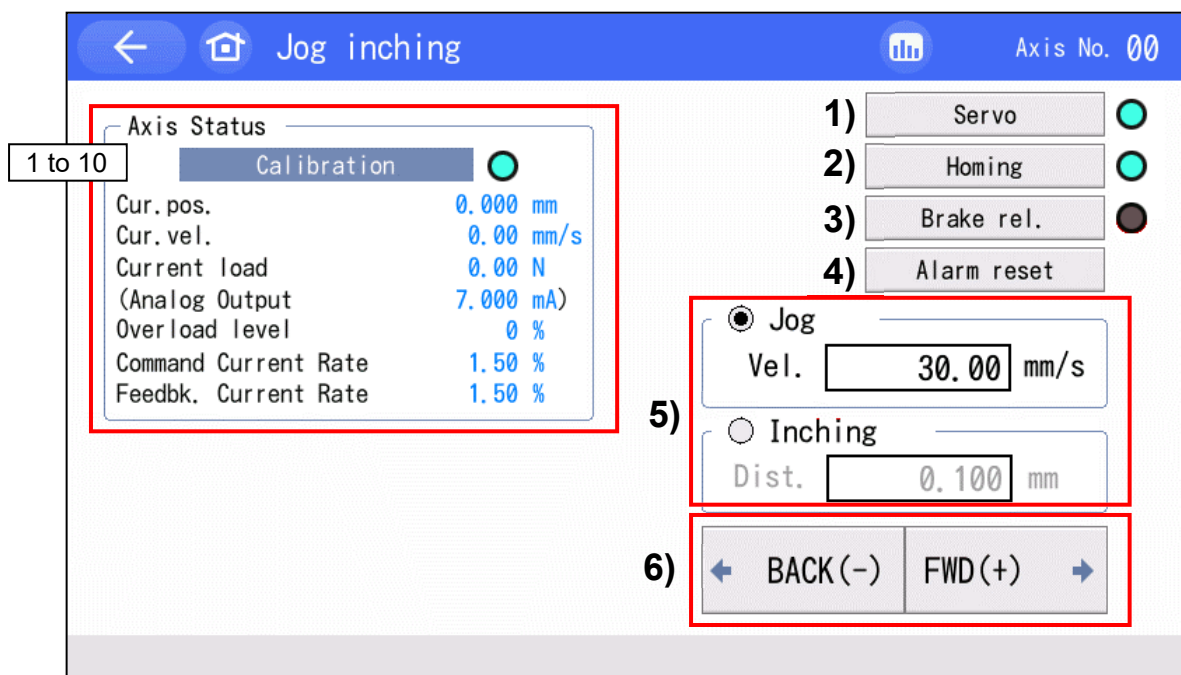

Press Program Jog Inching Screen Button List

	Name	Explanations
1)	Servo	Touch [Servo] while the servo is off to turn the servo on for an axis and turn on the status display. If touching [Servo] while the servo is on, the servo for an axis will turn off and the status display turns off.
2)	Homing	Touch [Home-Return], and an axis performs the home-return operation and the status display turns on.
3)	Brake rel.	For an actuator equipped with a brake, touch [Brake Compulsory Release], and the screen shifts to the brake compulsory release confirmation window. Once the brake gets compulsorily released, the status display turns on. Touch [Brake Compulsory Release] again, and the brake gets locked and the status display turns off.
4)	Alarm Reset	Touch [Alarm reset] to cancel an alarm.
5)	Jog Inching	Select JOG, and the JOG velocity becomes valid and input gets available. Select Inching, and the inching velocity becomes valid and input gets available. While JOG setting is activated, input of inching distance becomes unavailable. While inching setting is activated, input of JOG velocity becomes unavailable.
6)	FWD (+), BACK (-)	When the JOG operation is selected, an axis moves in the set velocity while it is being touched. When the inching operation is selected, an axis moves in the set distance every time it is touched. [FWD (+)] moves an axis in the positive direction. [BACK (-)] moves an axis in the negative direction. Touching it and hold it for two seconds in the inching operation, and JOG operation can be made in 1mm/s. After that the speed increases as 1mm/s → 10mm/s → 30mm/s → 50mm/s → 100mm/s in every one second.


Press Program Jog Inching Screen Display List

	Botton Name	Explanations
1	Calibration	The loadcell calibration status is shown. It turns on if calibration has been completed.
2	Cur. pos.	The current position is shown.
3	Cru. vel.	The current speed is shown.
4	Current load	The current load is shown.
5	Analog Output	It shows the analog current output from the MF I/F connector on the controller in accordance with the current load.
6	Overload level	The overload level is shown.
7	Command Current Rate	The command value of electrical current is shown as a percentage of the rated current. The current value will be shown if touching the command current rate.
8	Feedbk. Current Rate	It shows the rate of the feedback current to the rated value. The current value will be shown if touching the feedback current rate.
9	Command Current Value	The command current is shown. The current rate will be shown if touching the command current value.
10	Feedbk. Current Value	The feedback current is shown. The current rate will be shown if touching the feedback current value.

3.26.3.2 Press Program Operation Screen

A pressing program can be indicated and made executed.

Touch [Run Pressing Program] button in the pressing program test run menu window.
Or, touch [Test Run] button in the pressing program edit window.

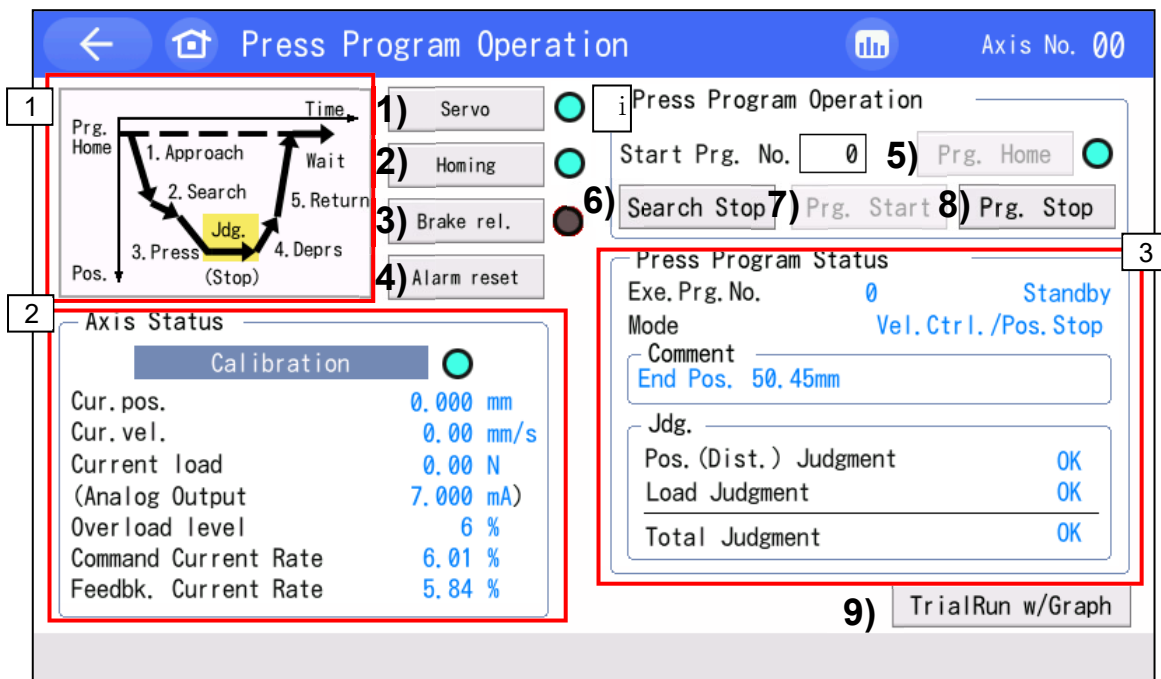

Press Program Operation Screen Button List

	Botton Name	Explanations
1)	Servo	Touch [Servo] while the servo is off to turn the servo on for an axis and turn on the status display. If touching [Servo] while the servo is on, the servo for an axis will turn off and the status display turns off.
2)	Homing	Touch [Home-Return], and an axis performs the home-return operation and the status display turns on.
3)	Brake rel.	For an actuator equipped with a brake, touch [Brake Compulsory Release], and the screen shifts to the brake compulsory release confirmation window. Touch [Brake Compulsory Release] again, and the brake gets locked and the status display turns off.
4)	Alarm Reset	Touch [Alarm reset] to cancel an alarm.
5)	Prg. Home	An axis moves to the program home position of the pressing program set in Start Prg No. The status display turns on once the axis movement has completed. The status display flashes during the depressurizing operation and return operation.

	Botton Name	Explanations
6)	Search Stop	It performs the operation in the control stage [1. Approaching] and [2. Searching] and stops an axis. Touch [Prg Start] while [Searching Stop] is selected, and an axis gets in the searching stop status, and gets in the normal execution when it is not selected. If it is executed with [1. Approaching] invalid, operation of only [2. Searching] will be conducted. If it is executed with [2. Searching] invalid, operation of only [1. Approaching] will be conducted. If it is executed with both [1. Approaching] and [2. Searching] invalid, the axis operation will not be conducted.
7)	Prg. Start	The pressing program set in Start Prg No. should be executed.
8)	Prg. Stop	Touch [Stop], and the axis stops.
9)	TrialRun w/Graph	It shows the pressing program run (graph) window. Refer to [3.26.3.3]

Press Program Operation Screen Display List

	Botton Name	Explanations
1	Figure of Control Stage	It shows the status of the control stage being executed. The arrow and letter for the control stage that is currently being executed should be shown in red. It shows the arrow and the letters in gray after the program has been executed when operation in each control stage is inactivated.
2	Axis Status	Monitor main in common
3	Press Program Status	Data monitor in common


Press Program Operation Screen Setting List

	Botton Name	Explanations
i	Start Prg. No.	The pressing program number to be executed first can be indicated. When transited from the pressing program individual edit window, the pressing program number can be carried over.

3.26.3.3 Press Program Operation (Graph) Screen

Pressing program and servo monitoring can be conducted at the same time.

Touch [Test Run with Graph] button in the pressing program test run window.

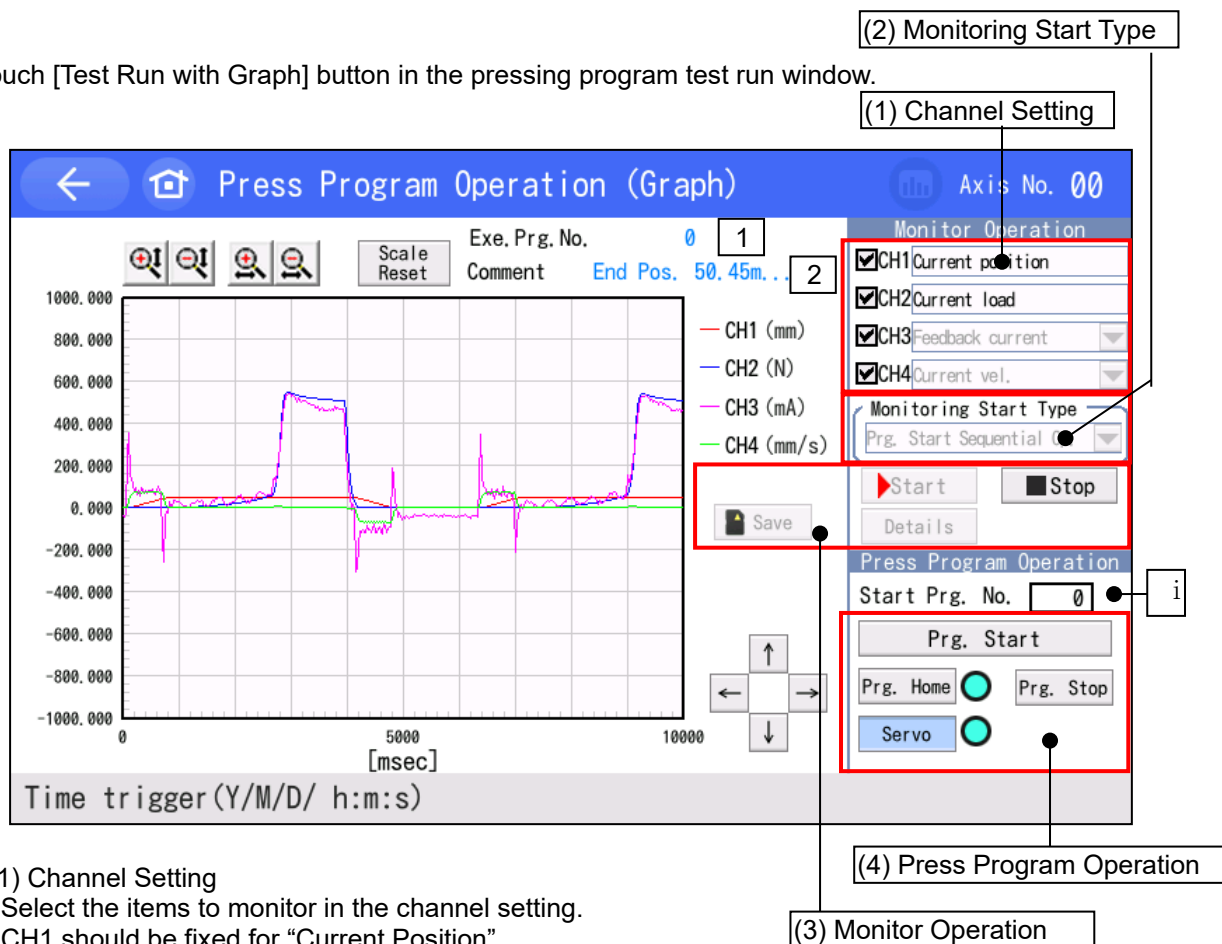

(1) Channel Setting

Select the items to monitor in the channel setting.

CH1 should be fixed for "Current Position".

CH2 should be fixed for "Current Load".

Select items to monitor from the list for CH3 and CH4. "Feedback Current" is set in CH3 and "Current Velocity" in CH4 in the initial display.

• Check Marks on Left of Items

A waveform can be displayed in the screen for those with a check mark.

Even though a waveform is not displayed in the screen for those without a check mark, data is acquired.

Channel Setting Monitoring List

Item Name	Unit	Item Name	Unit
Current position	mm	Command Current Value	mA
Velocity Operation Amount	mm/s	Feedback Current Value	mA
Velocity Actual Command Value	mm/s	Current load	N
Current speed	mm/s	Deviation	Pls
		Overload Level Monitor	%

(2) Monitor Start Type List of Monitoring Start Method

Item Name	Explanations
Linked with Prg Start	Monitoring starts at the same time as a program starts.
Normal Monitoring	Touch [Start], and monitoring starts.
Standby for Trigger	Monitoring starts with a method indicated in the trigger setting in the detail setting window.

(3) Monitor Operation Button List

	Botton Name	Explanations
1)	Start	Touch [Start], and monitoring starts when the monitoring start type is set to "Normal Monitoring". When the monitoring start type is "Standby for Trigger", touch [Start], and the status gets to the standby for a trigger, and [Start] starts flashing. When the monitoring start type is "Linked with Prg Start", [Start] becomes invalid.
2)	Stop	It stops monitoring and standby for a trigger.
3)	Details	It shows the window for sampling cycle settings and trigger settings.
4)	Save	Acquired data can be saved in CSV format to a Secure Digital memory card.

(4) Press Program Operation Button List

	Botton Name	Explanations
5)	Prg. Start	The pressing program set in Start Prg No. should be executed. When the monitoring start type is "Linked with Prg Start", touch [Prg Start], and monitoring starts at the same time.
6)	Prg. Home	It moves an axis to the program home position set in the pressing program edit. The status display turns on once the axis movement has completed.
7)	Prg. Stop	Touch [Stop], and an axis stops.
8)	Servo	Touch [Servo] while the servo is off to turn the servo on for an axis and turn on the status display. If touching [Servo] while the servo is on, the servo for an axis will turn off and the status display turns off.

Press Program Operation Display List

	Name	Explanations
1	Exe. Prg. No.	It shows the pressing program number currently being executed.
2	Comment	It shows the comment set in the pressing program number currently being executed. It can show 15 half-size font characters and 7 full-size font characters at the maximum, and show "..." after that.

Press Program Operation Setting List

	Name	Explanations
i	Start Prg. No.	A pressing program number to start with can be set.

3.26.3.4 Direct Move Screen

Indicate the target position and velocity directly to make an operation.

Touch [Numerical Command Movement] button in the pressing program test run menu window.

Press Program Direct Move Screen Button List

	Botton Name	Explanations
1)	Servo	Touch [Servo] while the servo is off to turn the servo on for an axis and turn on the status display. If touching [Servo] while the servo is on, the servo for an axis will turn off and the status display turns off.
2)	Homing	Touch [Home-Return] while home-return operation is incomplete, and an axis performs the home-return operation and the status display turns on.
3)	Brake rel.	For an actuator equipped with a brake, touch [Brake Compulsory Release], and the screen shifts to the brake compulsory release confirmation window. Touch [Brake Compulsory Release] again, and the brake gets locked and the status display turns off.
4)	Alarm Reset	Touch [Alarm reset] to cancel an alarm.
5)	Move	Touch [Move], and an axis moves to the target position in the set velocity.
6)	Stop	Touch [Stop], and the axis stops.

Press Program Direct Move Screen Status Display List

	Name	Explanations
1	Calibration	The loadcell calibration status is shown. It turns on if calibration has been completed.
2	Cur.pos.	The current position is shown.
3	Cur.vel.	The current speed is shown.
4	Current load	The current load is shown.
5	Analog Output	It shows the analog current output from the MF I/F connector on the controller in accordance with the current load.
6	Overload level	The overload level is shown.
7	Command Current Rate	The command value of electrical current is shown as a percentage of the rated current. The current value will be shown if touching the command current rate.
8	Feedbk. Current Rate	It shows the rate of the feedback current to the rated value. The current value will be shown if touching the feedback current rate.
9	Command Current Value	The command current is shown. The current rate will be shown if touching the command current value.
10	Feedbk. Current Value	The feedback current is shown. The current rate will be shown if touching the feedback current value.

Press Program Direct Move Screen Display List

	Name	Explanations
i	Target Pos. (mm)	The target position for an axis to be moved can be input.
ii	Vel. (mm/s)	The velocity to move an axis can be input.

3.26.4 Secure Digital Memory Card

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

It is not applicable to the backup data storable in the RC PC software.

(Note) Extensions of the Stored Data

- *The file extensions of the data stored to the Secure Digital card are the same as those dealt in RC PC software, and are compatible. For instance, the position data for the PCON-C controllers is ptpc and the parameters are prpc. Refer to [the details of the file extensions in the RC PC Software Instruction Manual]*
- *The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.*

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore. If the folder does not exist, it is automatically created.


- *Press Program : \TB_CON \PressProgram \File Name*
- *Parameter : \TB_CON \Parameter \File Name*
- *Alarm List : \TB_CON \Alarmlist \File Name*

(Note) Files with Chinese names are not supported.




Caution: For a Secure Digital memory card, choose a SD/SDHC memory card with 1G to 32G. (Toshiba-made recommended) Also, Have FAT32 Format for the file system.

3.26.4.1 Press Program Save

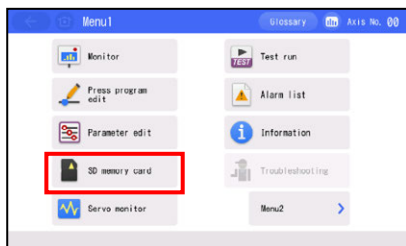


Touch [SD memory card] in Menu 1 screen.

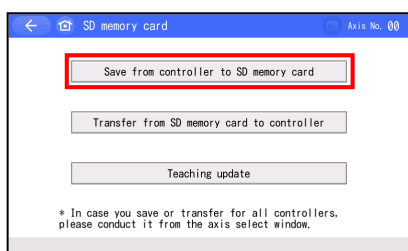


SD memory card screen opens.

Touch [Save from controller to SD memory card].

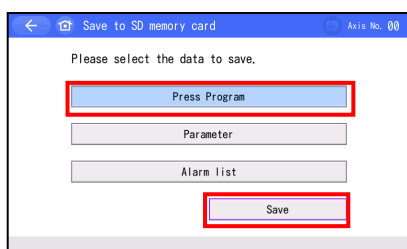

Select the data type for the backup such as [Press program] and touch it. (Multiple selection available)
The data type been selected will be shown in light blue.

Touch [Save].

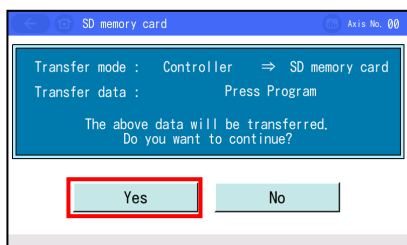


Touch [Yes].

Touch [No], and the screen returns to the previous screen.




Numeric keys are displayed. Input a file name and touch [ENT].

The file name is to be typed with 32 characters at maximum in letters and numbers.

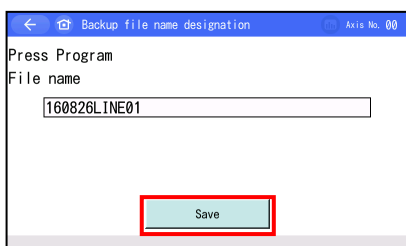


Touch [Save].

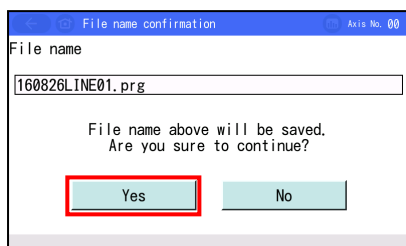

The screen below appears if the same name is not found.

Touch [Yes].


If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

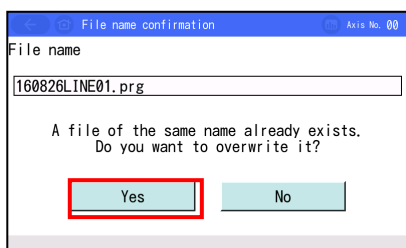


The screen below appears if the same name is found.

Touch [Yes] if overwriting data.

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

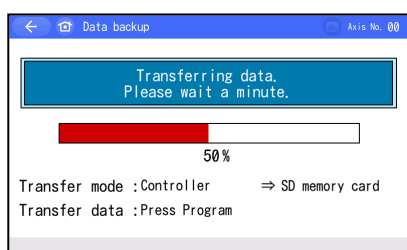


Data transfer screen will be shown.

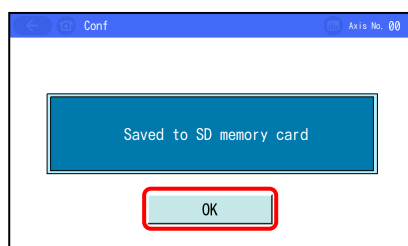


A message to tell the data transfer is complete pops up and the backup process is finished.

Touch [OK], and the screen returns to Secure Digital Memory Card screen.

3.26.4.2 Press Program Transfer

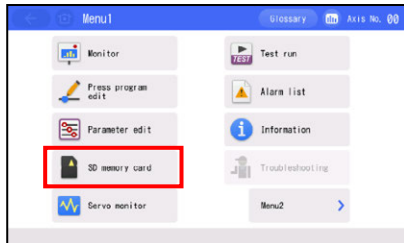


Touch [SD memory card] icon in Menu 1 screen.

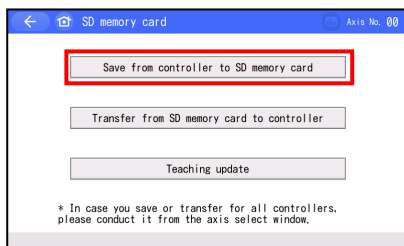


SD memory card screen opens.

Touch [Transfer from SD memory card to controller].

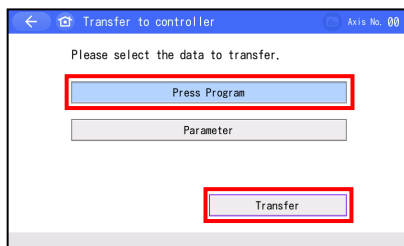


Select [Pressing Program] and touch [Transfer].
(Multiple selection available)

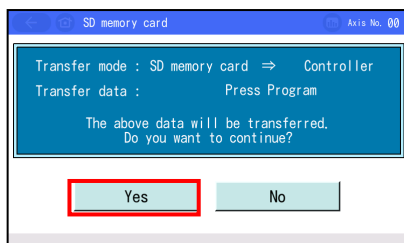


Touch [Yes].

If [No] is touched, the screen goes back to the data backup screen.

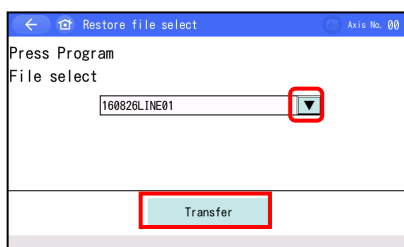

Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.


Touch [Transfer].

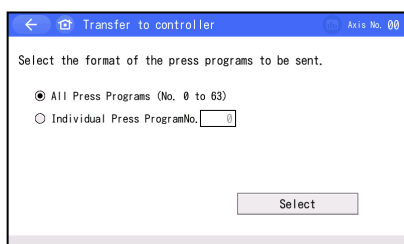

A window to select a pressing program to be transferred will show up.


If transferring all the pressing programs, conduct the operation of 1), and conduct 2) if transferring individual pressing programs.

(1) Transfer of All Press Programs

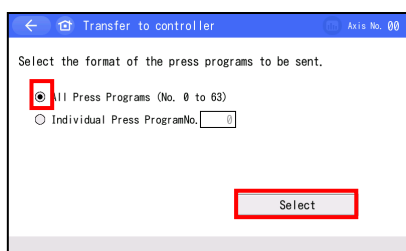


Select All Press programs.

Touch [Select].

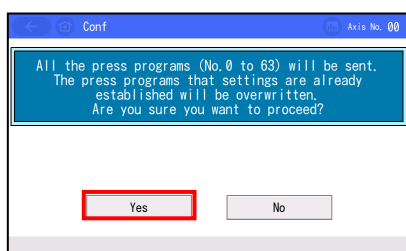


Touch [Yes].

Touch No, and the screen goes back to the pressing program transfer format select window.

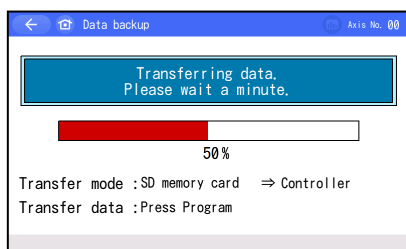


A window stating transferring data will be displayed.

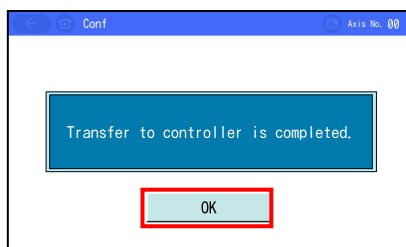


A message telling data transfer is completed will show up. The data transfer to a controller has now been completed.

Touch OK, and the screen goes back to the Secure Digital memory card window.

(2) Transfer of Individual Press Programs

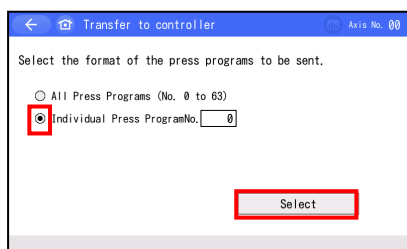


Select Individual Press ProgramNo..

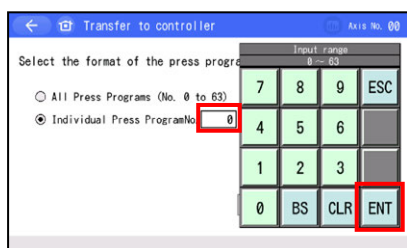

Touch Individual Press ProgramNo..


The numeric keys will appear. Input the input range and touch [ENT].

Touch [Select].

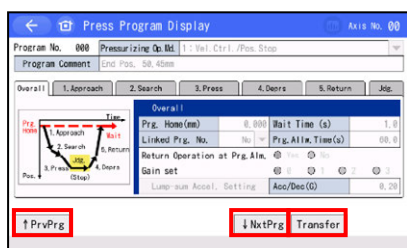


Touch [↑PrvPrg] and [↓NxtPrg] to select a pressing program to be transferred.

Touch [Transfer].

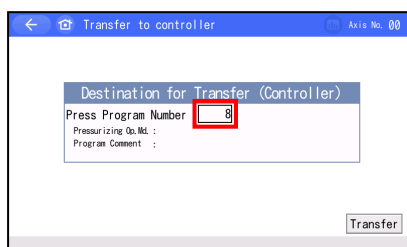


Input a pressing program number that the data is to be transferred to.

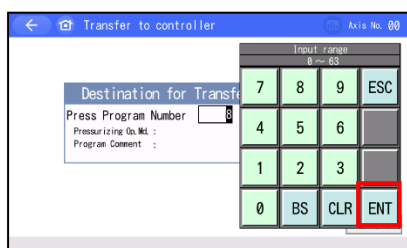


The numeric keys will appear. Input a pressing program number that the data is to be transferred to and touch [ENT].

Indicate a pressing program number that the data is to be transferred to and touch [Transfer].

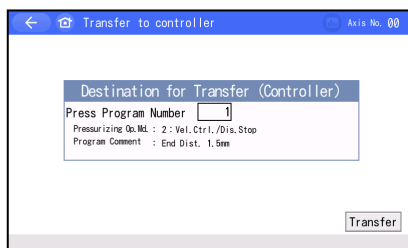


A pressurizing operation mode and a program comment will be displayed if a pressing program has already been registered.

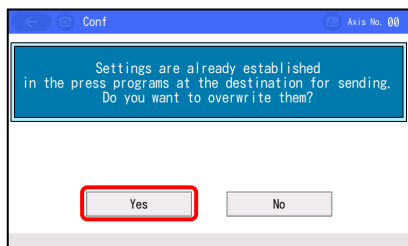


Select the pressing program number already registered, and this window will be shown.

Touch [Yes] if overwriting data.

Touch [No], and the screen goes back to the previous destination pressing program number select window.

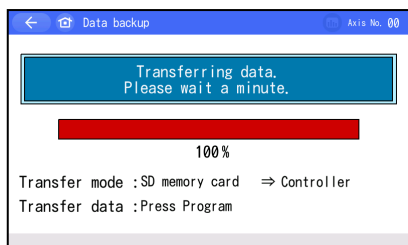

A window stating transferring data will be displayed.

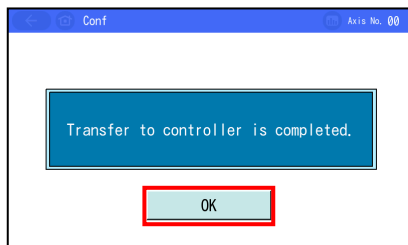

A message telling data transfer is completed will show up. The data transfer to a controller has now been completed.

Touch [OK], and the screen goes back to the Secure Digital memory card window.

3.27 Drive Recorder Feature

It is a feature dedicated for SCON2 controllers.


The drive recorder feature is a feature to support root cause analysis and quick recovery by recording behaviors of an actuator when an alarm is generated.

This feature should be categorized into two functions as stated below.

- 1) Graph Display Function
Saving the operation data for several tens of seconds before and after generation of an alarm and shows it in a graph. Refer to [3.27.1]
- 2) Data Display at Alarm Generation Function
Saving the data at the moment of an alarm being generated and shows it. Refer to [3.27.2]


* Refer to SCON2 Controller Instruction Manual (ME0458) for detail of the drive recorder feature.

3.27.1 Graph Display (Drive Recorder Screen)

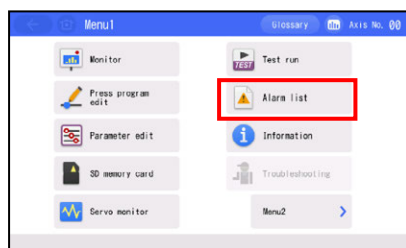


Display of Drive Recorder Screen

Touch [Alarm list] in the Menu 1 screen.

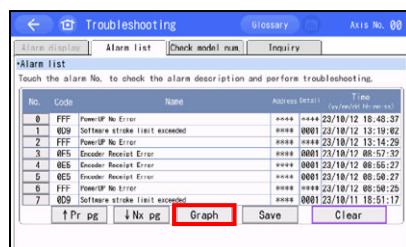


An alarm list of a controller should be displayed.

Touch [Graph].

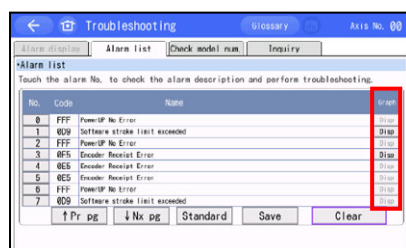


A button to show a graph should be shown on the right of each alarm.

Touch [Disp] on the right of an alarm that you would like to check.

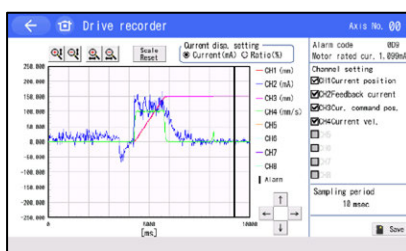

After a window of data acquisition in process is shown, the drive recorder screen should appear.

Drive Recorder Screen

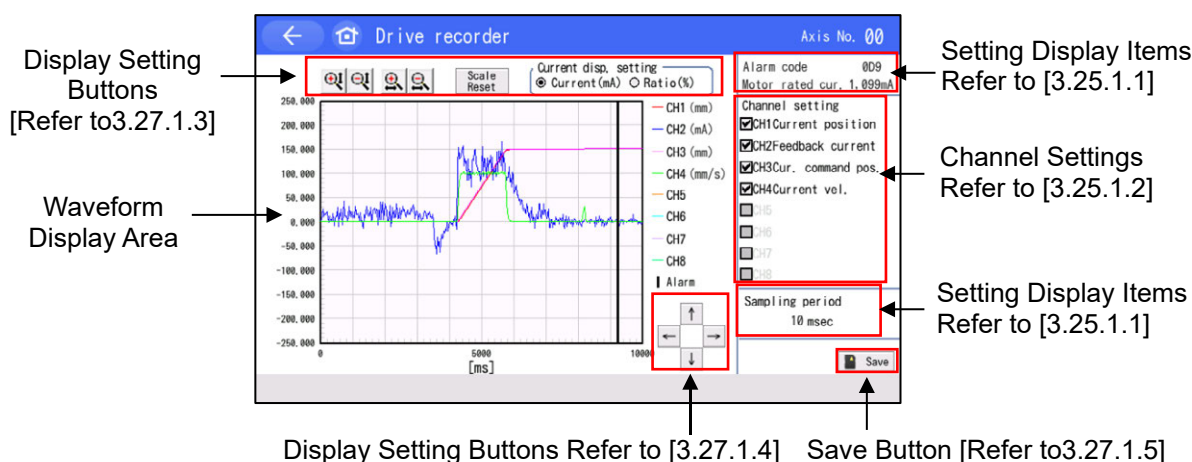

3.27.1.1 Setting Display Items

- Alarm Code : A code number of an alarm in displayed data should be displayed.
- Motor rated current : The motor rated current value should be displayed.
- Sampling Frequency : The sampling frequency of data should be displayed.

The sampling frequency can be changed in Parameter No. 212 in SCON2 controller. (1 to 1000ms)

3.27.1.2 Setting Display Items

The monitoring items selected in each channel should be displayed.
The monitoring items should be determined in Parameter No. 210 in SCON2 controller.

The monitor items are shown in the table below.

Parameter No.210				CH	Item name	Unit
0	1	2	3			
●	—	—	—	—	Drive recorder feature inactivated	—
×	●	●	●	1	Current position	[mm] or [pulse]
×	●	●	●	2	Feedback current	[%] or [mA]
×	●	●	×	3	Current command position	[mm] or [pulse]
×	●	●	×	4	Current velocity	[mm] or [pps]
×	×	●	×	5	Operation plan velocity	[mm] or [pps]
×	×	●	×	6	Current load	[N]
×	×	●	×	7	DC bus voltage	[V]
×	×	●	×	8	Estimated regenerative discharge electric energy	[W]








* About Check Marks ☒ on Left of Item Names in Screen

The items with a check mark on show a wave form on the screen.






Those with no check mark should not show a wave form on the screen, but the data is acquired.

Refer to SCON2 Controller Instruction Manual (ME0458) for details.

3.27.1.3 Display Setting Buttons

- 
-  : Touch it to enlarge the scale of the graph in vertical axis.
 -  : Touch it to reduce the scale of the graph in vertical axis.
 -  : Touch it to enlarge the scale of the graph in horizontal axis.
 -  : Touch it to reduce the scale of the graph in horizontal axis.
 -  : Touch it to initialize the scale of the graph.
 -  : Current Display Setting: System to display current can be selected.

3.27.1.4 Monitor Operation Buttons


- 
-  : Touch it to slide the displayed waveform frame upwards.
 -  : Touch it to slide the displayed waveform frame downwards.
 -  : Touch it to slide the displayed waveform frame to the left.
 -  : Touch it to slide the displayed waveform frame to the right.

3.27.1.5 Data Save

[Save] : The acquired data should be saved in a Secure Digital memory card in the CSV format.

* Refer to the next page for the process to save data.

How to Save Drive Recorder Data

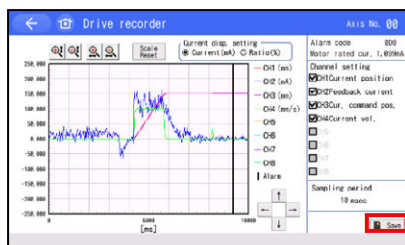


Insert a Secure Digital memory card.


Touch [Save] while monitoring is stopped.



The file name indication screen opens. Input a file name and touch [ENT].

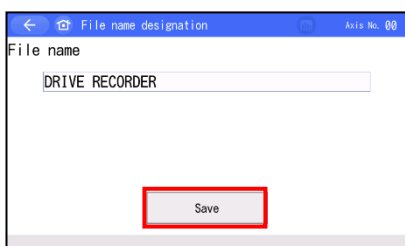


Touch [Save].

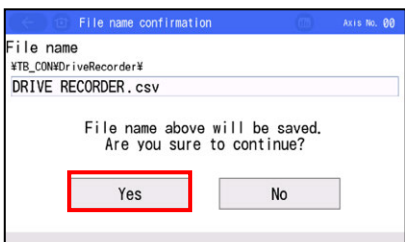

The file name confirmation screen pops up. Touch [Yes].

Save the data, and return to the servo monitor screen.

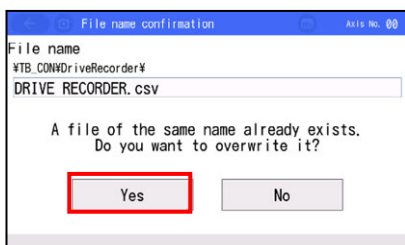

In case there is a file with the same name exists, overwriting confirmation window appears. Touch [Yes] if it is allowed to overwrite the old.

Save the data, and return to the servo monitor screen.


Domain to Save Data (cannot be changed)

The domain that the servo monitor data is saved is the folder stated below in a Secure Digital memory card.


\\TB_CON\\DriveRecorder\\FileName.csv

3.27.2 Data Display Feature at Alarm Generation (Data at Occurrence)

Display of Data at Occurrence

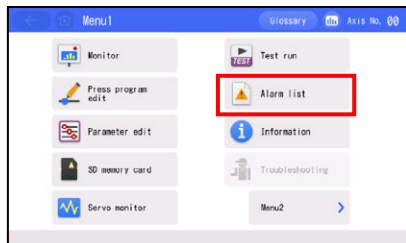


Touch [Alarm list] in the Menu 1 screen.

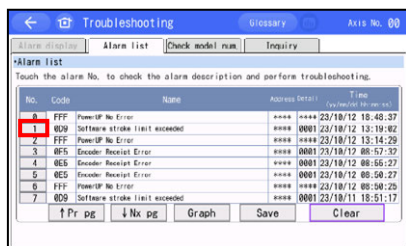


An alarm list of a controller should be displayed.

Touch [No.] on an alarm that you would like to check.

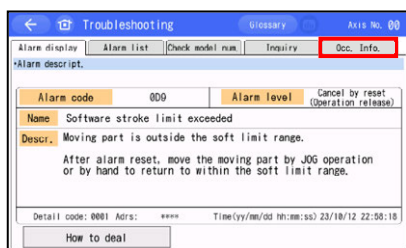

The alarm display screen should be displayed.

Touch the tab of the data at occurrence.

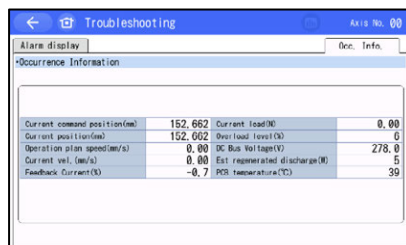

The window for data at occurrence should be displayed and the data when an alarm was generated can be checked.

4. Operation of SEP Related Controllers


SEP related controllers: ASEP, PSEP, DSEP, MSEP

4.1 Transition of Operating States


The language can be changed by following the steps below.

For the operations after the language change, please refer to the instruction manual written in each language.


Display change from English to Japanese

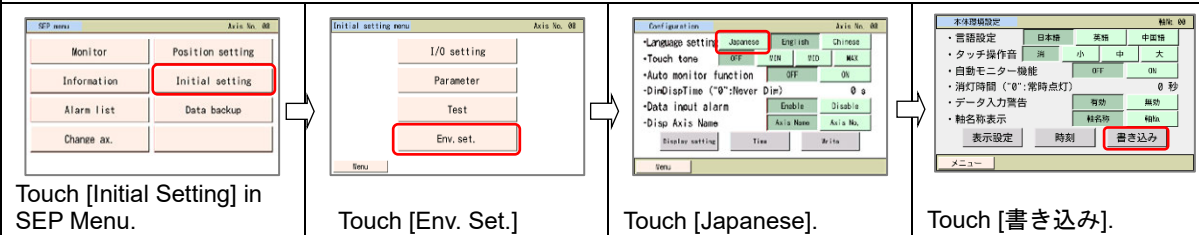


Display change from Japanese to English

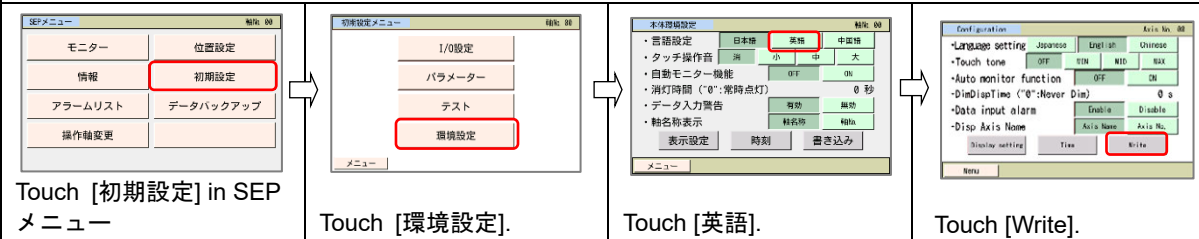

Display change from English to Chinese

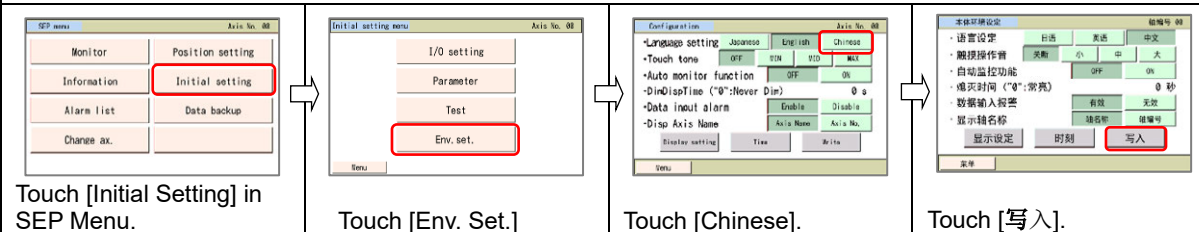



Display change from Chinese to English

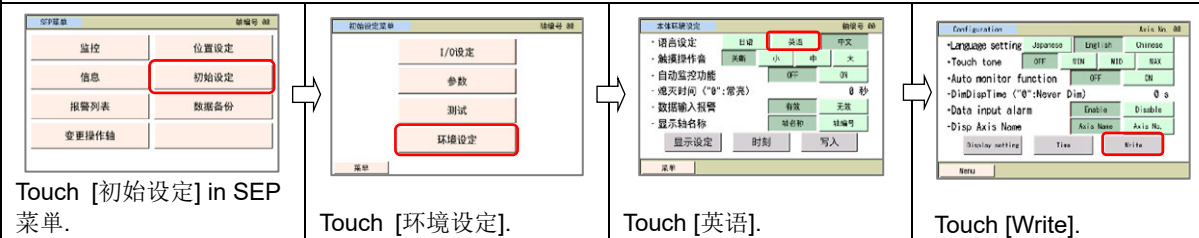

4.2 Operating Menu


Transition of operating states when the touch panel teaching pendant TB-02 is connected to a SEP related controller is shown.

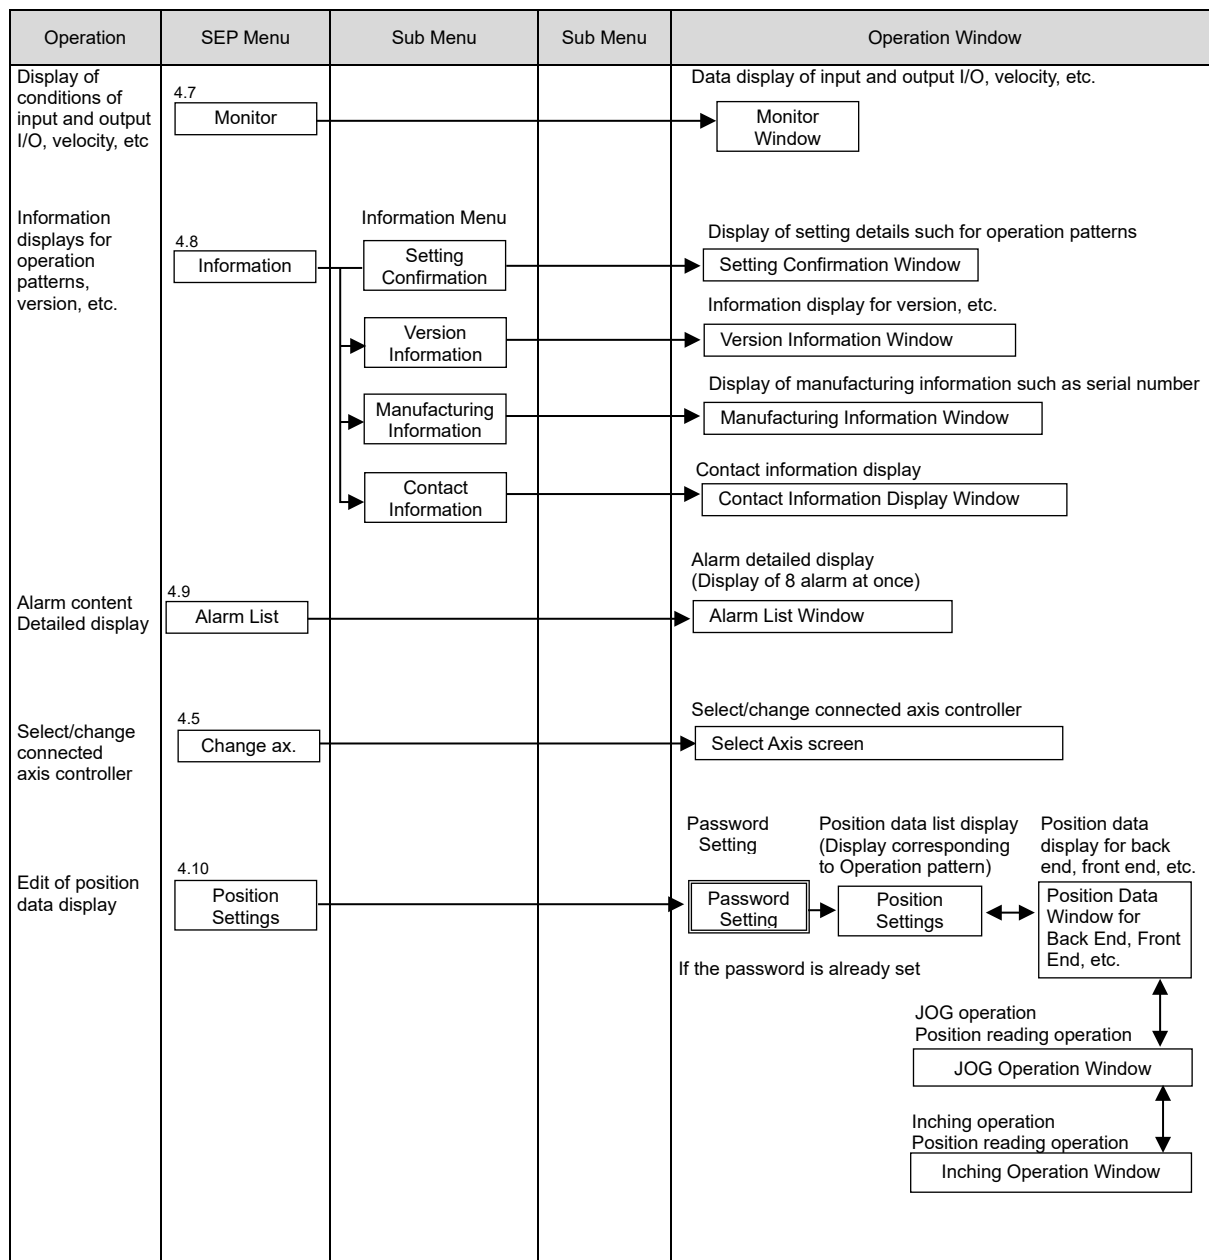

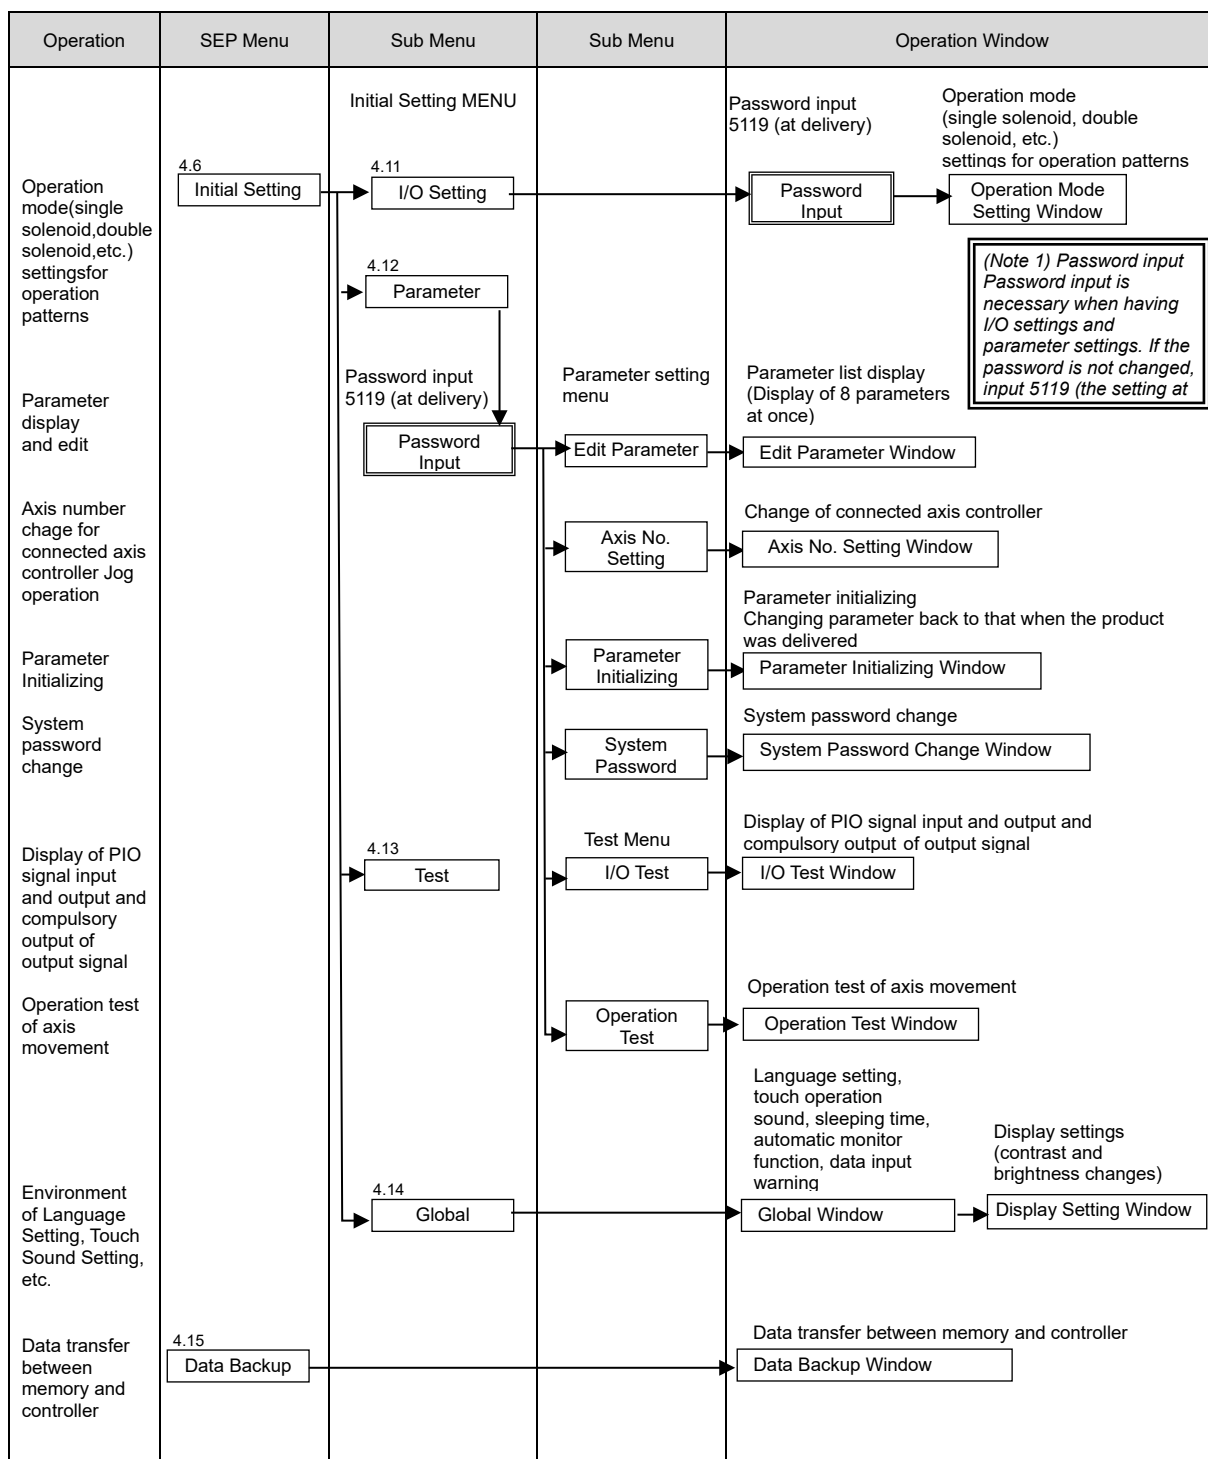

4.3 Initial Screen

When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen of the touch panel teaching pendant, after which version information is displayed.

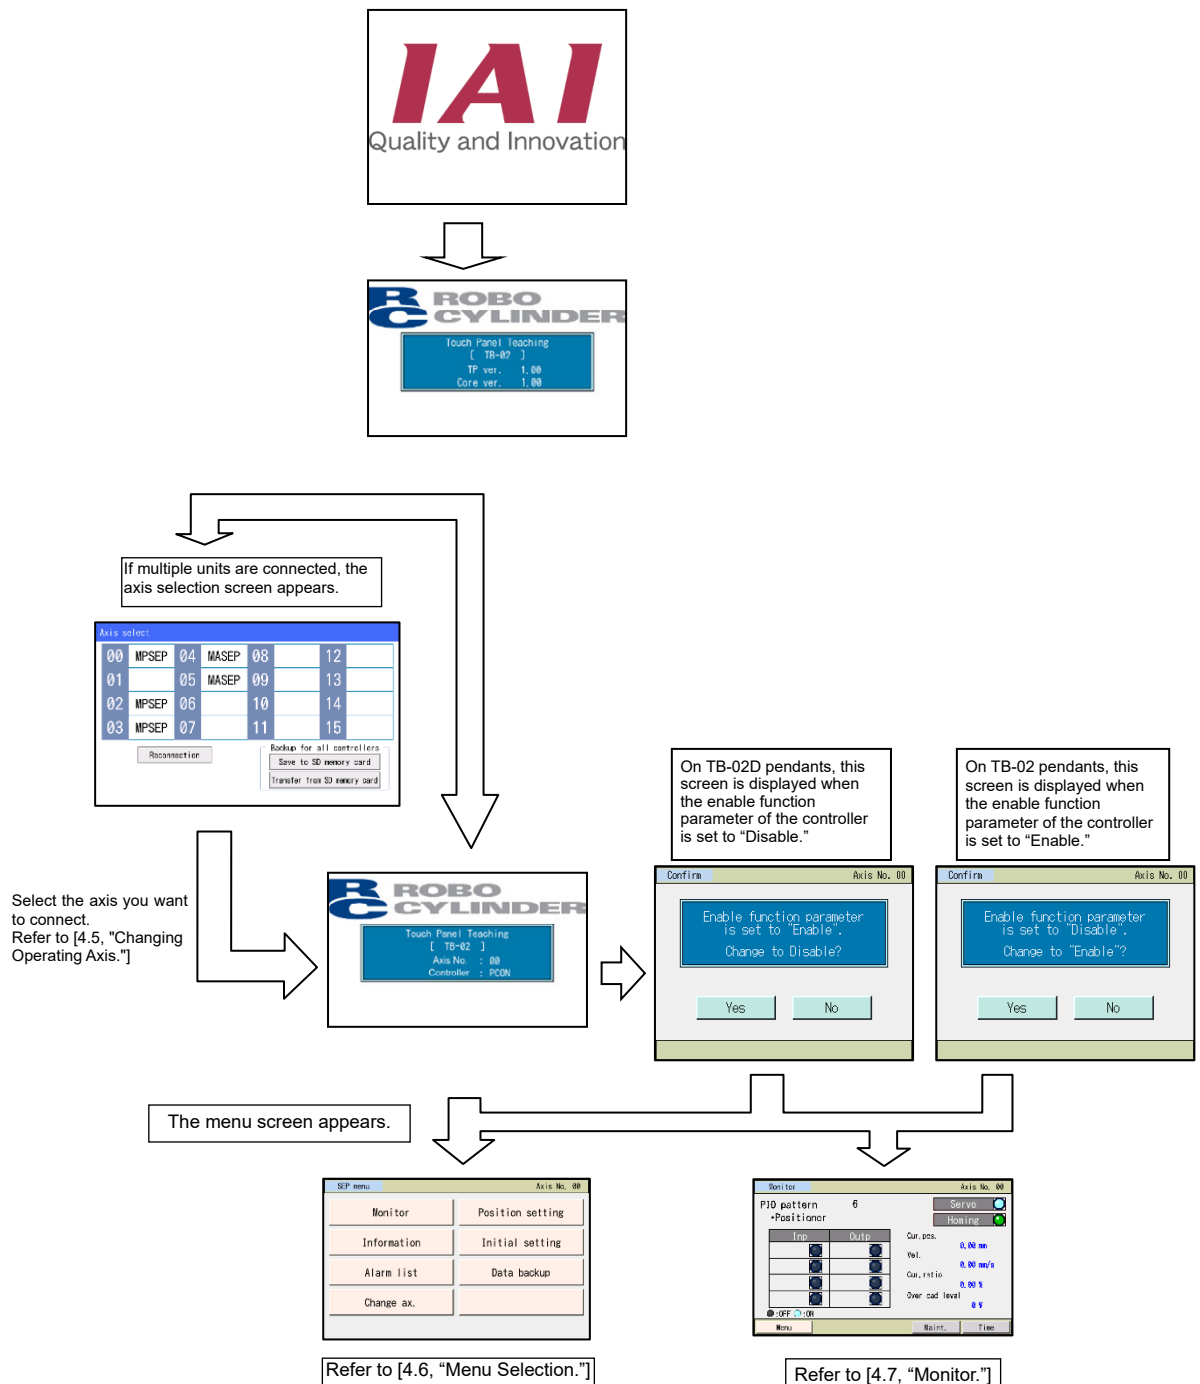


* The same items can be set on the automatic monitor setting screen accessible from the environment setting screen of the controller.

4.4 Initial Setting

When the power is turned on for the first time after the delivery of the controller, the initial setting screen will appear.

- Select [Yes], and the display will change to the I/O setting screen where you can set the operation pattern (PIO pattern). Select a desired operation pattern and, depending on the selected operation pattern, also set the single-solenoid, double-solenoid or other operation mode.
- Select [No], and the factory set operation pattern, or specifically operation pattern 0 of double-solenoid mode, will remain effective.

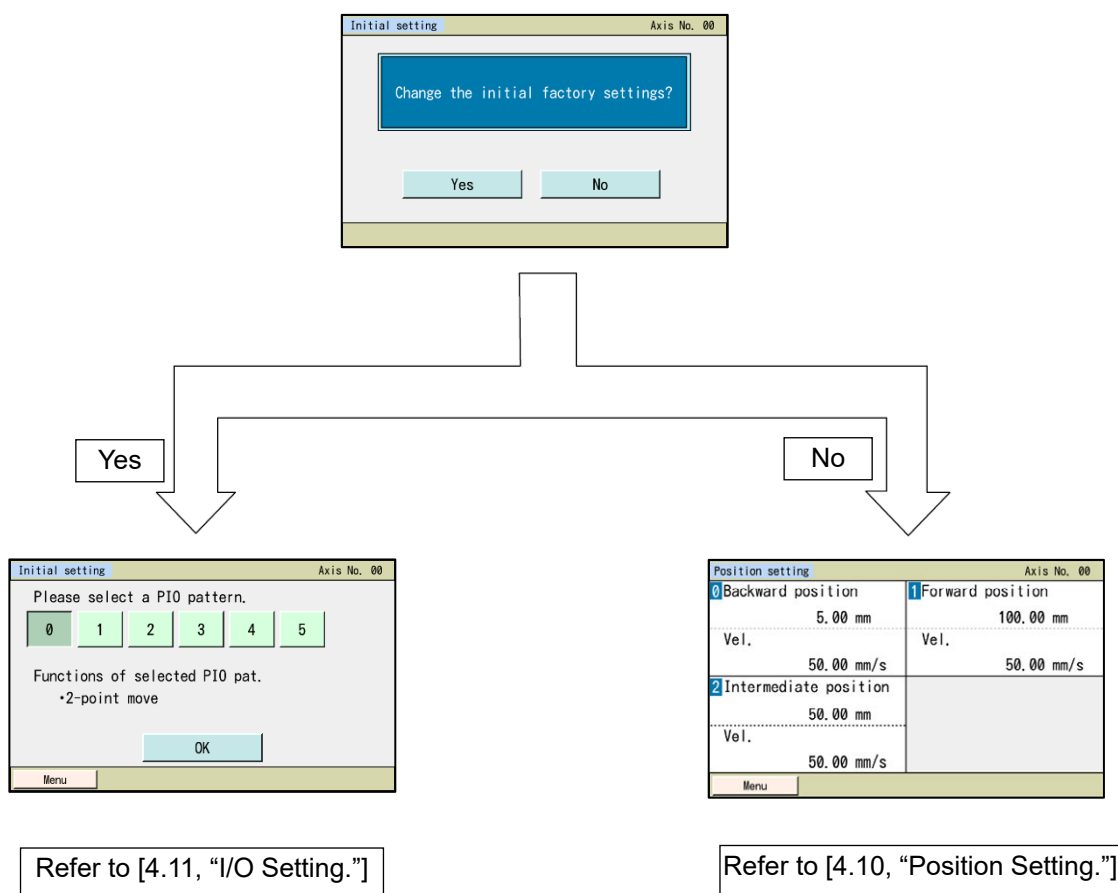

Factory settings

- Operation pattern 0
- Double-solenoid mode with continuous current flow
- No servo control
- Home return MANU
- Output mode LS


In MSEL, settings are also separately needed by the gateway parameter setting tool when starting up.
Refer to Chapter 7 Gateway Parameter Setting Tool or [Initial Setting] in MSEP Instruction Manual.

4.5 Changing Operating Axis


If multiple controllers are connected to the communication line, the axis selection screen appears.

This screen also appears when [Change ax.] is touched on the menu screen.


If only one controller is connected, you need not select an axis.

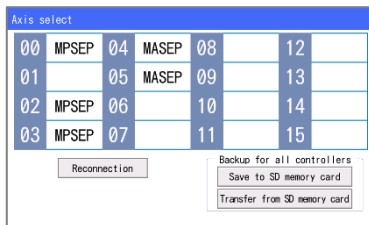

Select and touch the axis you want to connect the touch panel teaching pendant to.

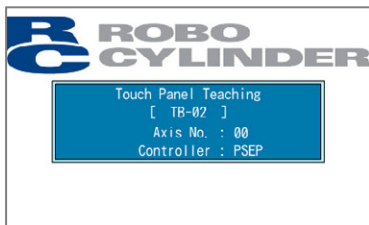


Connection with the selected controller axis starts.

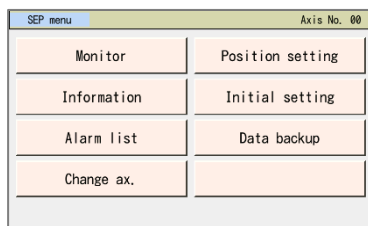

When connection with the controller is established, the SEP menu screen appears.

4.6 Menu Selection

SEP menu

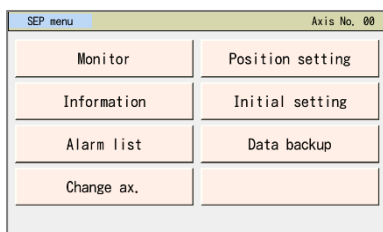


The SEP menu has seven items. Select and touch one of them.
The screen changes to the one corresponding to the menu item you have touched.

Menu list

- Monitor Display the controller status. Refer to [4.7, "Monitor."]
- Information Display the operation pattern, version and other information. Refer to [4.8, "Information."]
- Alarm List Display alarm details. Refer to [4.9, "Alarm List."]
- Change ax. Select the controller axis to connect the touch panel teaching pendant to. Refer to [4.5, "Changing Operating Axis."]
- Pos. Edit Set the position, push power, push band, etc. Move by jogging. Refer to [4.10, "Position Setting."]
- Backup Data Transfer data between the touch panel teaching pendant and controller. Refer to [4.15, "Data Backup."]
- Initial Set

Touch [Initial Setting], and the screen goes to the initial setting menu screen which is the next selection screen.

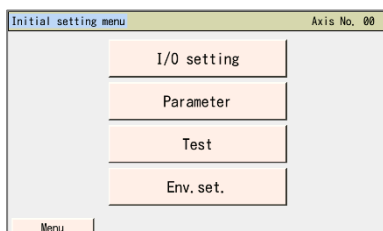

There are four types of menu in the initial setting menu screen. Select one of them and touch it. The screen goes to the touched menu.


Touch Menu to return to the previous SEP menu screen.

Initial setting menu list


- I/O Set Select an operation pattern (PIO pattern 0 to 5), set an operation mode (single solenoid, double solenoid), etc. Refer to [4.11, "I/O Setting."]
- Parameter Set parameters such as the default positioning band. Refer to [4.12, "Parameters."]
- Test Perform I/O tests and operation tests for axis movement. Refer to [4.13, "Test."]
- EnvironmentSet Set the environment such as touch tone. Refer to [4.14, "Environment Setting."]

4.7 Monitor

The current position, speed, electrical current and system I/O statuses of the controller are displayed.

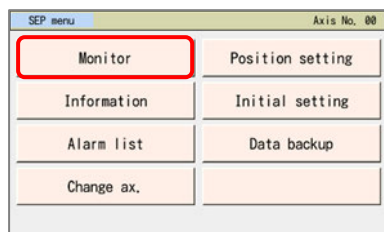

Touch [Monitor] on the SEP menu screen.

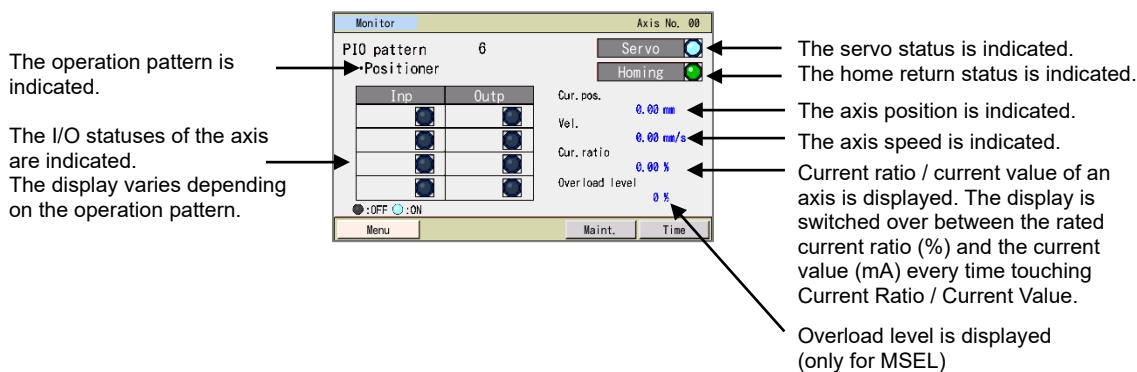

Touch [Menu] to return to the SEP menu screen.

For the MSEP controller:

Touch [Maint.] to change to the maintenance information screen.

Displayed items are the same as CON-related controllers. (FAN Total Driving is not displayed.) Set a target value for the total number of movements by the parameter No. 26 and a target value for the total driving time by the parameter No. 27.

Refer to [3.9.2, "Maintenance information screen."]

When replacing the actuator, the operating method is the same as CON-related controllers.

Refer to [3.9.2.1, "Operating method when replacing the actuator."]

Touch [Time] to change to the time editing screen.

The time setting method is the same as CON-related controllers.

Refer to [3.9.3, "Controller time setting screen."]

I/O display on monitor screen


PIO pattern Operation mode		Displayed item			
		IN3 (input)/OUT3 (output)	IN2 (input)/OUT2 (output)	IN1 (input)/OUT1 (output)	IN0 (input)/OUT0 (output)
Standard movement between 2 points: 0 Single solenoid	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	-/ *STP (pause signal)	ST0 (move signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Standard movement between 2 points: 0 Double solenoid	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Change travel speed: 1 Single solenoid	Input	-/ SON (servo ON signal) *1	SPDC (travel speed switching signal) RES (reset signal)	-/ *STP (pause signal)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Change travel speed: 1 Double solenoid	Input	-/ SON (servo ON signal) *1	SPDC (travel speed switching signal) RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Position data change: 2 Single solenoid	Input	-/ SON (servo ON signal) *1	CN1 (target position switching signal) RES (reset signal)	-/ *STP (pause signal)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Position data change: 2 Double solenoid	Input	-/ SON (servo ON signal) *1	CN1 (target position switching signal) RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Movement by 2 inputs among 3 points: 3	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	-/ ST1 (forward end movement signal)	ST0 (movement signal 1)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	LS2 (intermediate position detection signal)/ PE2 (intermediate positioning complete signal)*2	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Movement by 3 inputs among 3 points: 4 Double solenoid	Input	-/ SON (servo ON signal) *1	ST2 (position movement 2) RES (reset signal)	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	LS2 (intermediate position detection signal)/ PE2 (intermediate positioning complete signal)*2	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Continuous back-and-forth operation: 5	Input	-/ SON (servo ON signal) *1	-/ RES (reset signal)	-/ *STP (pause signal)	ASTR (continuous back-and-forth operation signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2

The signal name in parentheses indicates the signal state before home return.

- *1 If the default I/O setting for servo control is set to "Control", the SON signal applies.
- *2 If the default I/O setting for output signal type is set to "Limit Switch", LS is applied. If it is set to "Position End", PE is applied.
- *3 When "SV" is selected by the default I/O setting for output selection. In this case, the SV signal applies. Either OUT2 or OUT3 can be set depending on the operation parameter and operation mode.


4.8 Information

The operation pattern, version and other information is displayed.

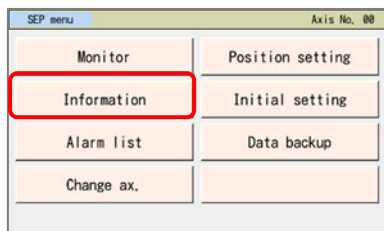

Touch [Information] on the SEP menu screen.

The information selection screen appears.

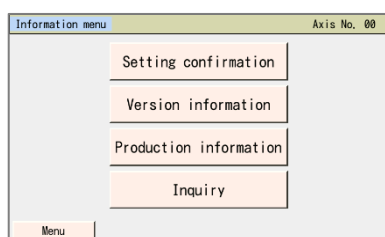


Touch the screen you want to display.

Touch [Menu] to return to the SEP menu screen.


[Current Setup]

You can confirm the operation pattern, operation mode and other information currently set.

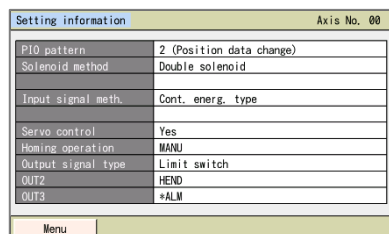

[Version]

You can check the version information, etc.

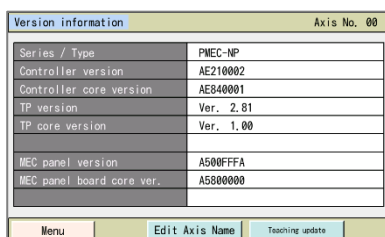

[Product]

You can check the serial number and other manufacturing information.

Production information	Axis No. 00
Controller S/N	900140215
Controller PCB revision	
M. REV: 0	
F. REV: 0	
Actuator S/N	900140213
Menu	


[Inquiry]

You can check how to contact IAI.

Inquiry
IAI customer support center
"EIGHT"
0800-888-0088
24-hour-support!
(Weekends and holidays: 8:00AM to 5:00PM)
http://www.iai-robot.co.jp/

4.9 Alarm List

A list of alarms that may generate after the controller power is turned on is shown. [For alarm details, refer to 9. "Error Display."]

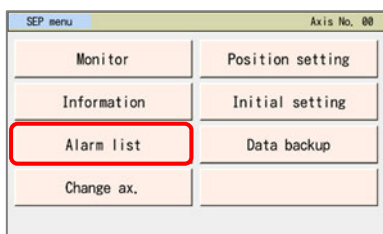

Touch [Alarm list] on the SEP menu screen.

The controller's alarm list appears.

Controller without the calendar function

Controller alarm list				Axis No. 00	
No	Code	Message	Address	Detail	Time of occurrence
00	FFF	PowerUP No Error	****	****	-----
01	0E8	A, B disconnect	****	****	0:00:01
02	FFF	PowerUP No Error	****	****	-----
03	000		****	****	-----
04	000		****	****	-----
05	000		****	****	-----
06	000		****	****	-----
07	000		****	****	-----
		↓	Clear		
Menu					

Touching [↓] displays the list of the next screen.

Controller alarm list				Axis No. 00	
No	Code	Message	Address	Detail	Time of occurrence
08	000		****	****	-----
09	000		****	****	-----
10	000		****	****	-----
11	000		****	****	-----
12	000		****	****	-----
13	000		****	****	-----
14	000		****	****	-----
15	000		****	****	-----
		↑	Clear		
Menu					

Touching [↑] displays the list of the previous screen.

Touching [Clear] clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on. It does not indicate an error.
The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.

Controller with the calendar function

Controller Alarm List				Axis No. 00
No.	Alarm Code	Address	Time (yy/mm/dd hh:mm:ss)	Message
00	FFF	****	11/08/03 18:32:13	PowerUP No Error
01	0E8	****	11/08/03 17:21:22	A,B disconnect
02	FFF	****	11/08/03 17:15:12	PowerUP No Error
03	0E8	****	11/08/03 17:14:17	A,B disconnect
				↑ ↓ Clear
				Menu

Touching [↑] displays the list of the previous screen.


Touching [↓] displays the list of the next screen.

Touching [Clear] clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on.
The occurrence time corresponds to the time each alarm occurred.


4.10 Position Setting (Setting of Position-related Data, Jog/Inching Operation)

Position-related data, such as position, push power and push band, are set. You can move the axis by jogging or inching.

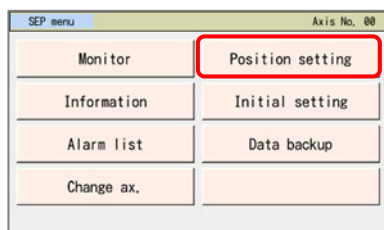

Touch [Position setting] on the SEP menu screen.

If the position data edit password is not "0000," the password entry screen appears.

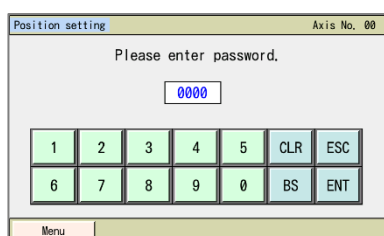


Enter a password and touch [ENT].

You can set a position data edit password from "Position edit password" on the parameter edit screen.

If the correct password has been entered, the display changes to the screen showing a position setting list.

The display varies depending on the operation pattern.

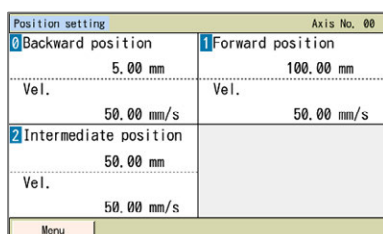

Touch the position you want to set.

Touch [Menu] to return to the SEP menu screen.

The screen shown to the left is an example of operation pattern 3.

The settings of various positions are shown.

Number of positions set

Operation pattern	Move	Number of positions set
Standard movement between 2 points: 0	Movement between two points	2
Change travel speed: 1	Movement between two points	2
Change position: 2	Movement between two points	4
Movement by 2 inputs among 3 points: 3	Movement among three points	3
Movement by 3 inputs among 3 points: 4	Movement among three points	3
Continuous back-and-forth operation: 5	Movement between two points	2
Positioner Mode: 6*1	—	256

*1 It is available to set only for Fieldbus Type of MSEP Controllers.


Touching a desired position displays the screen for setting the target position/speed for the position you have touched.
Set the position, speed, push power, push band, acceleration and deceleration.

Touch [Menu] to return to the SEP menu screen.

You can perform jog operation on this setting screen.

[1] Position data

Set position data with which to operate the actuator.

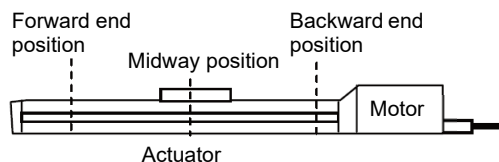

Position data

Position Data		[1]	[2]	[3]	[4]	[5]	[6]	[7]
		Position [mm]	Velocity [mm/s]	Accelerate [G]	Decelerate [G]	PushPower [%]	PushBand [mm]	Ecology
[1]	Forward Position	200.00	50.00	0.1	0.1	70	1.00	Valid
[2]	Backward Position	0.00	50.00	0.1	0.1	0	0	Valid
[3]	Midway Position	100.00	50.00	0.1	0.1	0	0	Valid

[1] Position (mm) ··· Set the position to move the actuator to.

The positions must satisfy the following relationships: Backward position < Intermediate position < Forward position

Operation pattern	Move	Setting position		
		Forward Position	Backward Position	Intermediate Position
Standard movement between 2 points: 0	Movement between two points	○	○	
Change travel speed: 1	Movement between two points	○	○	
Position data change: 2	Movement between two points	○	○	
Movement by 2 inputs among 3 points: 3	Movement among three points	○	○	○
Movement by 3 inputs among 3 points: 4	Movement among three points	○	○	○
Continuous back-and-forth operation: 5	Movement between two points	○	○	

[2] Velocity [mm/s] ··· Set the actuator speed.

[3] Accelerate [G] ··· Set the actuator acceleration.


The input range permits entry of values greater than what is specified in the catalog. Refer to the catalog or instruction manual of your actuator.

[4] Decelerate [G] . . . Set the actuator deceleration. [G]

(Reference) Acceleration is explained. The same concept applies to deceleration.

1 G = 9800 mm/s²: Acceleration at which the actuator can increase its speed up to 9800 mm/s per second.

0.3 G: Acceleration at which the actuator can increase its speed up to 2940 mm/s (9800 mm/s x 0.3) per second.

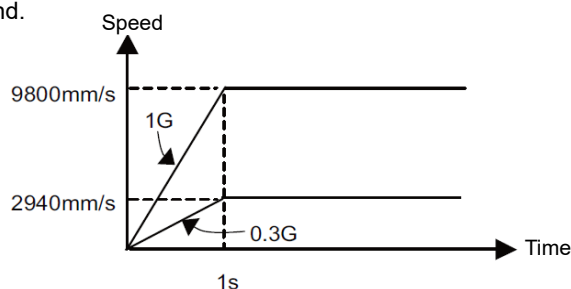


Caution: Acceleration/deceleration setting


- (1) Set accelerations/decelerations not exceeding the rated acceleration/deceleration specified in the catalog or the instruction manual of the actuator. If any acceleration/deceleration is set that exceeds the rated acceleration/deceleration, the life of the actuator may be significantly reduced.
- (2) If the actuator or work part receives impact or generates vibration, lower the acceleration/deceleration. If the system is used continuously with the actuator or work part receiving impact or generating vibration, the life of the actuator may be significantly reduced.
- (3) If the load transferred by the actuator is significantly lighter than the rated payload capacity, you may be able to set accelerations/decelerations exceeding the rating. If this is the case, the tact time can be reduced, so contact IAI. When contacting IAI, tell us the weight, shape and installation method of your work part and installation condition (horizontal/vertical) of your actuator.

[5] Push power [%] . . . Set the push torque (current-limiting value) to be used in push-motion operation as a percent (%) value.
Increasing the current-limiting value increases the push force.
If "0" is set, positioning operation is performed.
For the relationship of push force and current-limiting value, refer to the catalog or the instruction manual.

[6] Push band [mm] . . . Set the travel during push-motion operation.
Except for CON method pressing in Fieldbus Type of MSEP Controllers, the actuator moves with the speed and the rated torque set in the parameters for the positioning as it is for the normal positioning operation until the remaining movement amount gets into the area set here. Once it gets in the area, the actuator performs a pressing movement to the position of [1].
The speed during push motion operation is 20 mm/s (when parameter number 7 is set as default). Do not specify the setting exceeding 20 mm/s. When the setting in [2] is less than the push-motion speed, push-motion will be performed at the speed of the setting value.

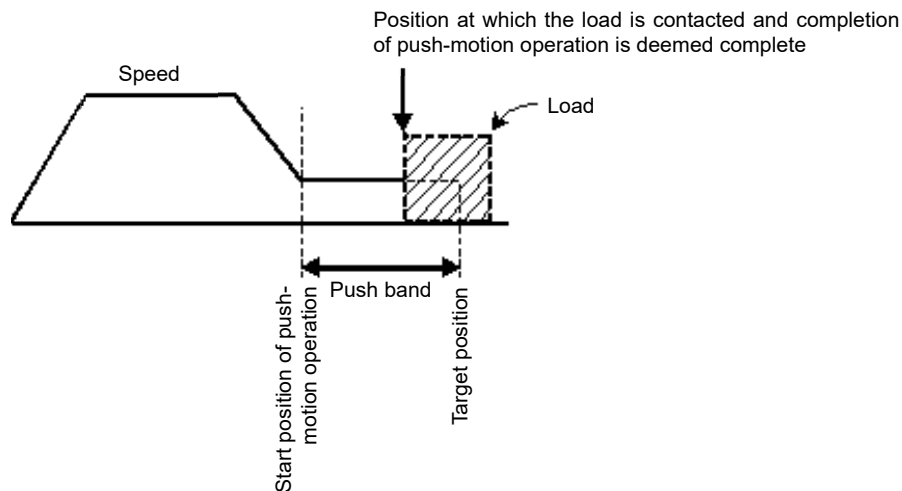

If CON method pressing in Fieldbus Type of MSEP Controllers is selected, the maximum pressing amount in the pressing operation from the target position is defined in Position Mode. While considering the mechanical inconsistency of the work piece, set the positioning band so the positioning would not end before the work piece gets pressed towards the target.

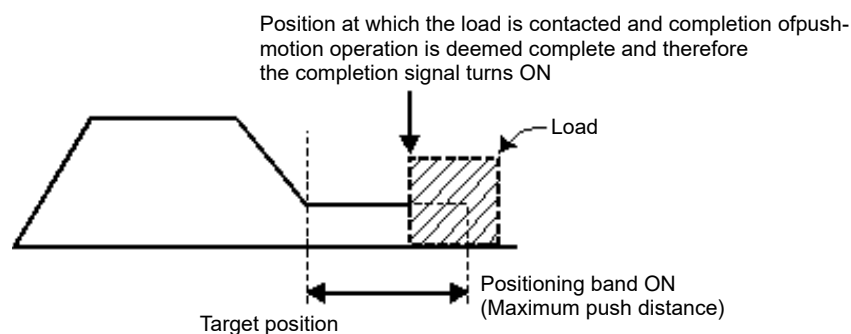


[7] Ecology... When Ecology is enabled, you can have the motor power (servo) turned off automatically upon elapse of a specified period to save power after completion of positioning. Set the applicable period beforehand using a parameter.

Parameter No.	Parameter name	Initial value	Setting range
10	Auto servo OFF delay time [sec]	1	0 ~ 9999

[Auto servo OFF]

The servo will turn off automatically upon elapse of a specified period after completion of positioning. When the next positioning command is issued, the servo turns on automatically and positioning is performed. Since no holding current flows while the motor is at standstill, power consumption can be reduced.

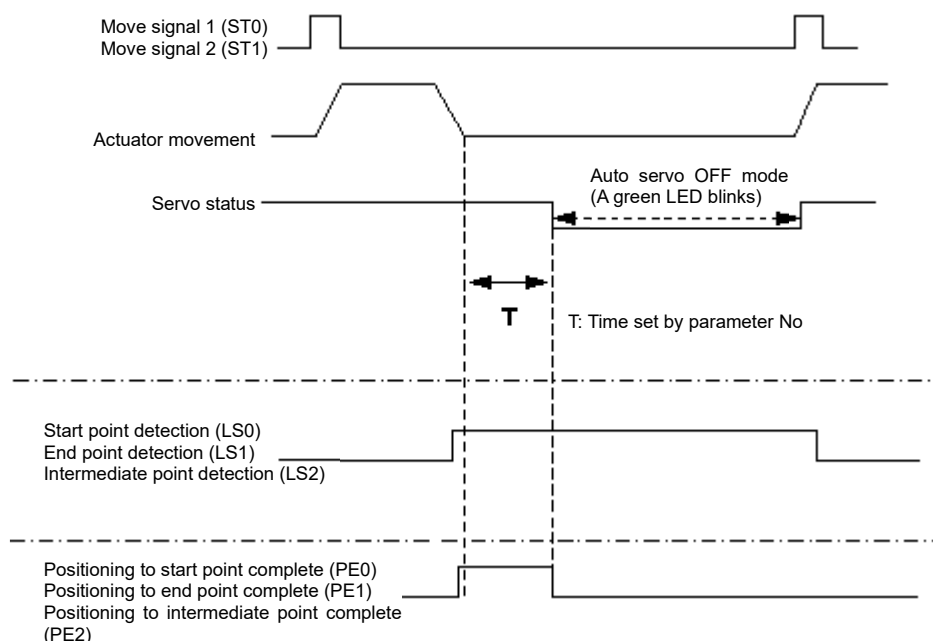

[Statuses of position detection output signals when the push function is not used]

Even when the servo is turned off, as long as the actuator is positioned within the positioning band (parameter No. 1) the start point detection signal (LS0), end point detection signal (LS1) or intermediate point detection signal (LS2) will turn ON according to the applicable position, just like when a sensor is used. Accordingly, the position detection signal that has turned ON will remain ON after completion of positioning unless the actuator moves.

[Status of position complete signals when the push function is used]

In push-motion operation, the servo does not turn off automatically while the actuator is pushing the work part.

If the actuator has missed the work part, the servo turns off automatically.

Once the servo turns off, a position complete status is lost. Accordingly, the push complete signal 0 (PE0), push complete signal 1 (PE1) and push complete signal 2 (PE2) will all turn OFF regardless of the stop position.



Caution: No holding torque is applied in the auto servo OFF mode. Since the actuator will move in this condition if an external force is applied, pay due attention to contact and safety when setting any operation involving auto servo OFF.

To change the travel speed for operation pattern (PIO pattern) 1, set the position at which to change the speed, and the new speed, in addition to the position data.

Position setting screen	Speed Chg Pos	
Position Data	[8] Change position [mm]	[9] Change speed [mm]
[0] Forward Position	60.00	30.00
[1] Backward Position	40.00	30.00

- [8] Speed Chg Pos . . . Set the position at which to switch the speed while the actuator is moving to the forward end position or backward end position.
- [9] Speed Chg Vel . . . Set the speed to change to.

To change the position data for operation pattern (PIO pattern) 2, set the new position data for forward end or backward end, in addition to the current position data for forward end position or backward end position.

- If CN1 (Operation switching signal) is OFF, the position data for forward end position becomes [1]: Forward end position.
If the signal is ON, the position data becomes [3]: Forward end position.
- If CN1 (Operation switching signal) is OFF, the position data for backward end position becomes [0]: Backward end position.
If the signal is ON, the position data becomes [2]: Backward end position.

Position Data	Position	Velocity	Accelerate	Decelerate	PushPower	PushBand	Ecology
[0]: Backward Position	0.00	50.00	0.1	0.1	0	0	Valid
[1]: Forward Position	200.00	50.00	0.1	0.1	70	1.00	Valid
[2]: Backward Position	10.00	50.00	0.1	0.1	0	0	Valid
[3]: Forward Position	100.00	50.00	0.1	0.1	60	1.00	Valid

[2] Basic operation

Position setting

Axis No. 00

0 Backward position

Pos.	0.00 mm
Vel.	50.00 mm/s
Push force	50 %
Push band	0.10 mm
Acceleration	0.30 G
Deceleration	0.30 G
Energy-sav. func.	ON OFF

Clear

Jog

Menu

Touch the value of the position or other setting item. When the numeric keypad appears, enter a desired value and then touch [ENT].


Touching [0], [1] or [2] switches to the corresponding setting screen for 0 (backward end position), 1 (forward end position) or 2 (intermediate position).

(Note) For the position, set a value meeting the condition “Home ≤ Backward end position ≤ Intermediate position ≤ Forward end position.”

Touching [Jog] switches to jog operation.

[Jog operation]

You can acquire position data via jogging operation.

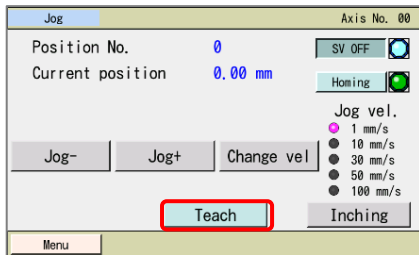

Operation on the jog screen


- [Jog-], [Jog+] : The axis jogs while each button is touched. [Jog-] moves the axis in the negative direction, while [Jog+] moves the axis in the positive direction.
- [SV ON] : Touching [SV ON] while the servo is OFF turns on the axis servo and becomes lit.
Touching [SV OFF] while the servo is ON turns off the axis servo and becomes unlit.
- [HOME] : Touching [HOME] while home return is not yet completed causes the axis to return home and becomes lit.
- [Chg Vel] : The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Chg Vel] is touched.
- [Inching] : Touching [Inching] changes to the inching screen.

Position acquisition operation

Touch [Teach]. A confirmation screen appears.


You can touch or to change the position number.

Touching [Yes] acquires the current position.

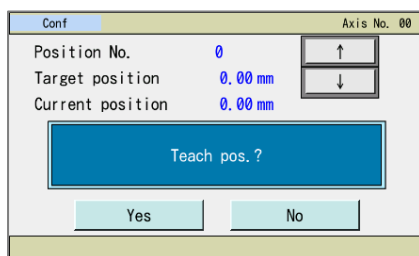

[Inching operation]

You can acquire position data via inching operation.

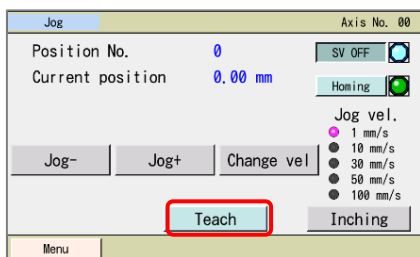

Operation on the jog screen


- [Inching-], [Inching+] : Touching each button once moves the axis by inching.
[Inching-] moves the actuator in the negative direction.
[Inching+] moves the actuator in the positive direction.
- [SV ON] : Touching [SV ON] while the servo is OFF turns on the axis servo and ○ becomes lit. Touching [SV OFF] when the servo is ON turns off the axis servo and ○ becomes unlit.
- [HOME] : Touching [HOME] while home return is not yet completed causes the axis to return home and ○ becomes lit.
- [Chg Dis] : The inching distance changes in the order of 0.01, 0.10, 0.50, 1.00 and 5.00 mm every time [Chg Dis] is touched.
- [Jog] : Touching [Jog] changes to the jog screen.

Position acquisition operation

Touch [Teach]. A confirmation screen appears.

You can touch [↑] or [↓] to change the position number.

Touching [Yes] acquires the current position.

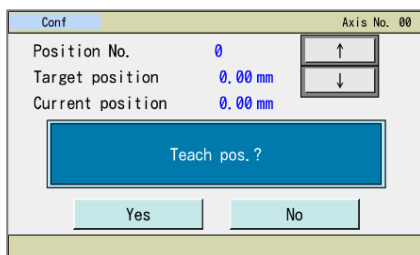






[3] Examples of position setting operations Respective operations are explained by giving specific examples.







1) Setting of position, speed, acceleration and deceleration








An example of operation mode 0 (standard) is explained.







Set positions to move the actuator back and forth between 10.0 mm and 100.0 mm.

Forward end position: 100.0 mm, backward end position: 10.0 mm, back-and-forth speed: 50 mm/sec, back-and-forth acceleration: 0.3 G, back-and-forth deceleration: 0.3 G


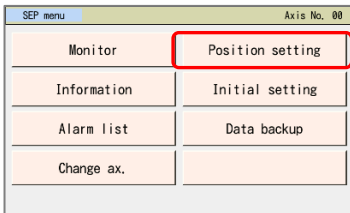
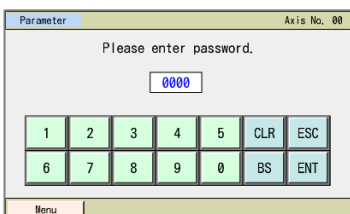
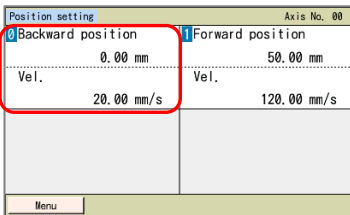
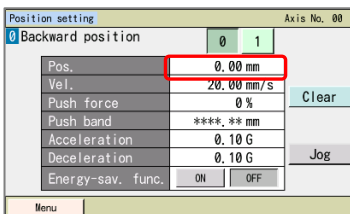
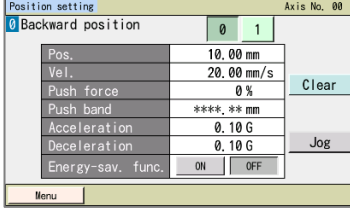
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Position setting].		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position data edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch the value in Position. The numeric keypad appears. Touch [1] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
5	10.00 is shown in Position.		Touch [Menu] to return to the position setting screen.

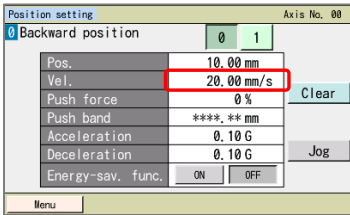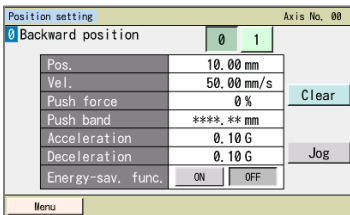
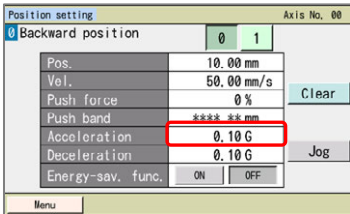
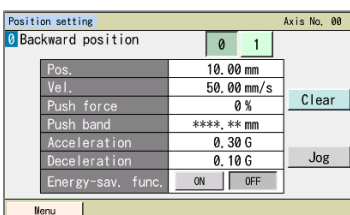
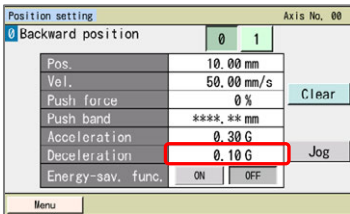
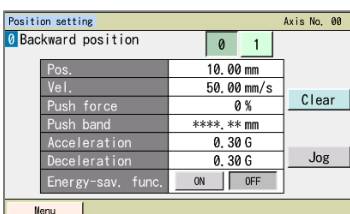
No.	Operation	Screen	Remarks
6	Touch the value in Velocity. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
7	50.00 is shown in Velocity.		Touch [Menu] to return to the position setting screen.
8	Touch the value in Accelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
9	0.30 is shown in Accelerate.		Touch [Menu] to return to the position setting screen.
10	Touch the value in Decelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
11	0.30 is shown in Decelerate.		Touch [Menu] to return to the position setting screen.

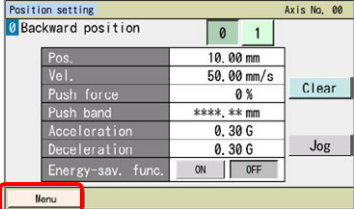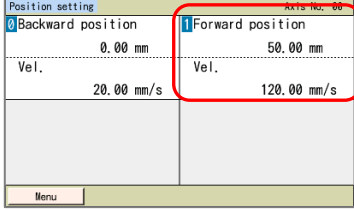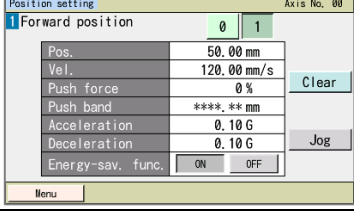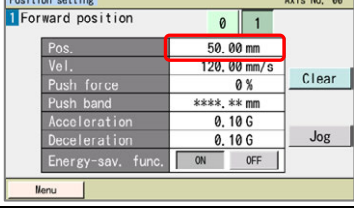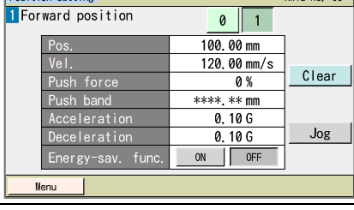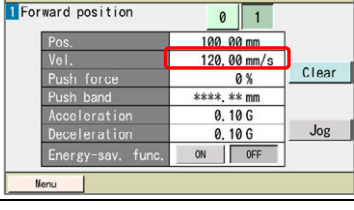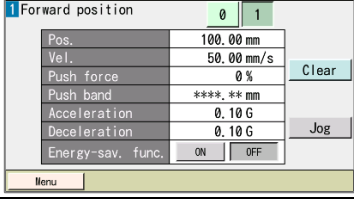No.	Operation	Screen	Remarks
12	Touch [Menu].		
13	Set the position, acceleration and deceleration relating to the forward end position. Touch [Forward Position].		Touch [Menu] to return to the SEP menu screen.
14	The display switches to the forward end screen. Set the position, acceleration and deceleration relating to the forward end position.		Touch [Menu] to return to the position setting screen.
15	Touch the value in Position. The numeric keypad appears. Touch [1], [0] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
16	100.00 is shown in Position.		Touch [Menu] to return to the position setting screen.
17	Touch the value in Velocity. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
18	50.00 is shown in Velocity.		Touch [Menu] to return to the position setting screen.

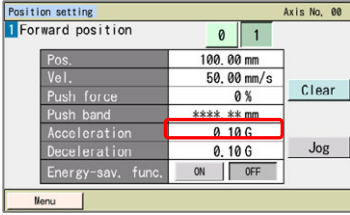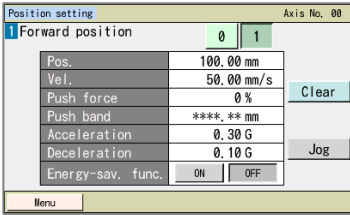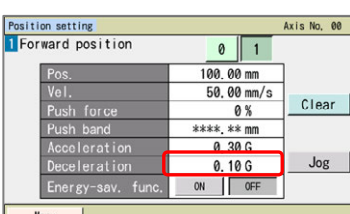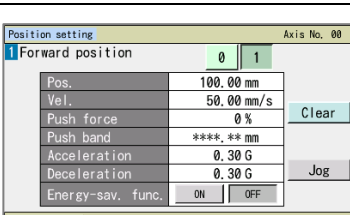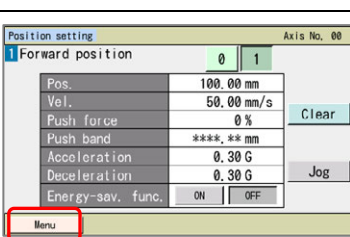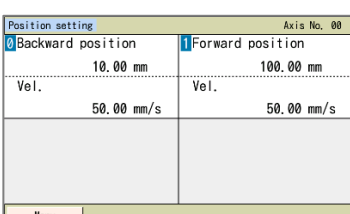No.	Operation	Screen	Remarks
19	Touch the value in Accelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
20	0.30 is shown in Accelerate.		Touch [Menu] to return to the position setting screen.
21	Touch the value in Decelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
22	0.30 is shown in Decelerate.		Touch [Menu] to return to the position setting screen.
23	Touch [Menu].		Touch [Menu] to return to the position setting screen.
24			Touch [Menu] to return to the SEP menu screen.

- 2) Direct teaching (Manually move the slider to the target position and then acquire the achieved position (current position) as the forward end position or backward end position)
An example of operation mode 0 (standard movement between 2 points) is explained.
How to acquire the current position, 50.0 mm, as the backward end position is explained.

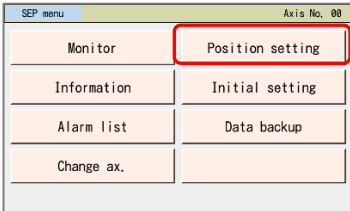
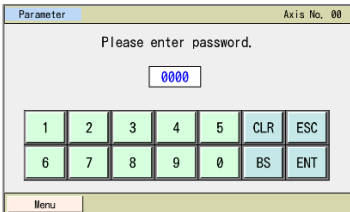
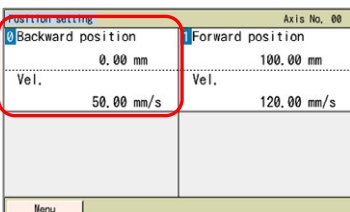
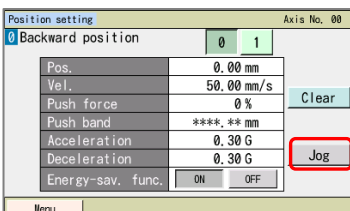
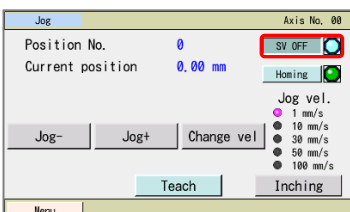
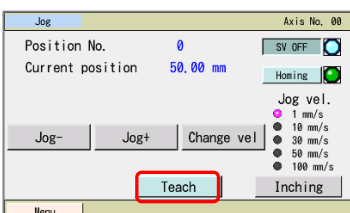
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Position setting].		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is ON, touch [SV OFF] to turn off the servo.		
6	Manually move the slider or rod to the target position of 50.0 mm. Touch [Teach].		



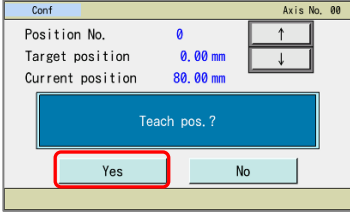
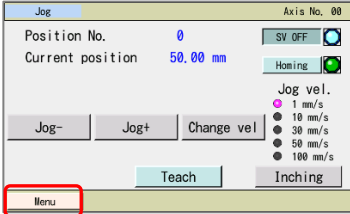
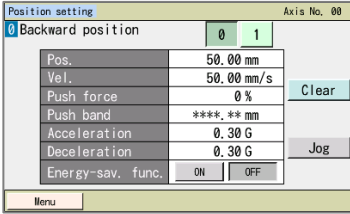
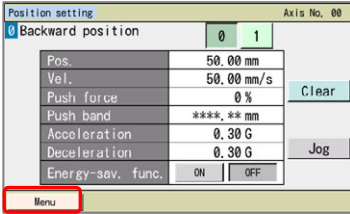
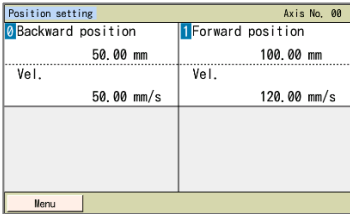
No.	Operation	Screen	Remarks
7	Touch [Yes].		
8	Touch [Menu].		
9	50.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
10	Touch [Menu].		Touch [Menu] to return to the position setting screen.
11			Touch [Menu] to return to the SEP menu screen.

- 3) Jog (Use the arrow keys [Jog-] and [Jog+] to jog the actuator to the target position and then acquire the achieved position (current position) as the forward end position or backward end position).

An example of operation mode 0 (standard movement between 2 points) is explained.

How to acquire the current position, 80.0 mm, as the backward end position is explained.

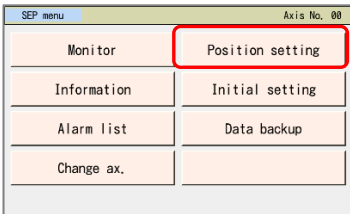
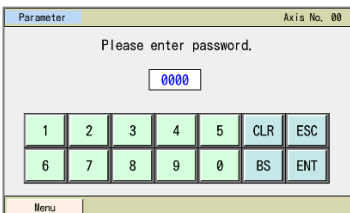
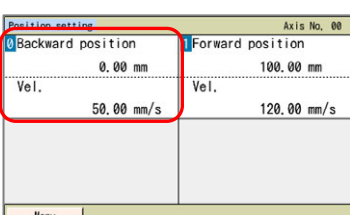
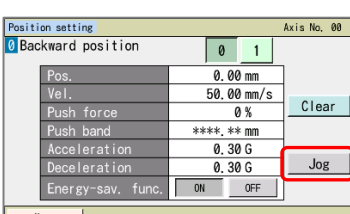
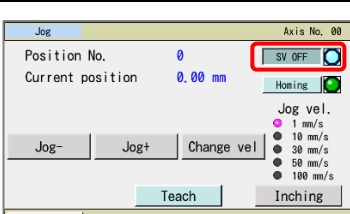
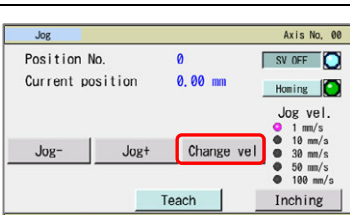
No.	Operation	Screen	Remarks
1	Touch [Position setting] on the SEP menu screen.		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is off, touch [SV ON] to turn on the servo.		
6	Touch [Change Vel] to set a desired jog speed.		

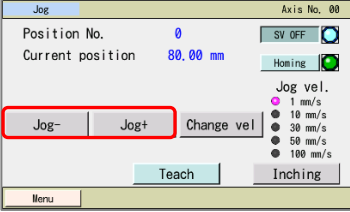
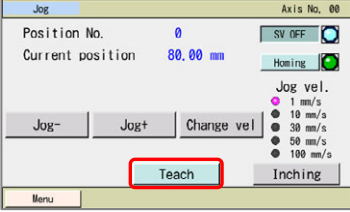
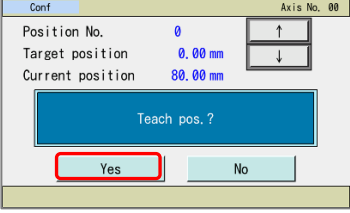
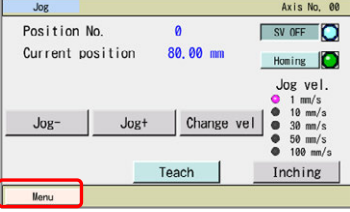
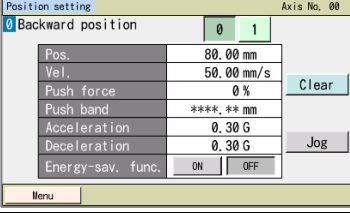
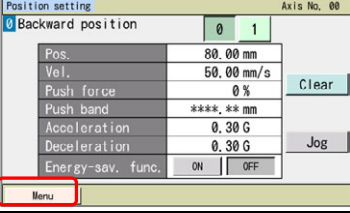
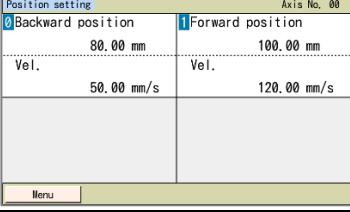
No.	Operation	Screen	Remarks
7	Use [Jog-] and [Jog+] to move the slider or rod to the target position of 80.0 mm.		
8	Touch [Teach].		
9	Touch [Yes].		
10	Touch [Menu].		
11	80.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
12	Touch [Menu].		Touch [Menu] to return to the position setting screen.
13			Touch [Menu] to return to the SEP menu screen.

- 4) Inching (Use the arrow keys [Inching-] and [Inching+] to inch the actuator to the target position and then acquire the achieved position (current position) as the forward end position or backward end position).

An example of operation mode 0 (standard movement between 2 points) is explained.

How to acquire the current position, 30.0 mm, as the backward end position is explained.

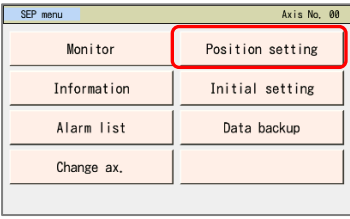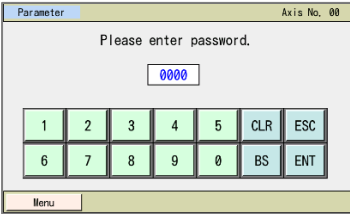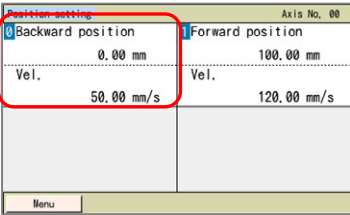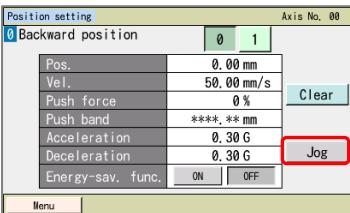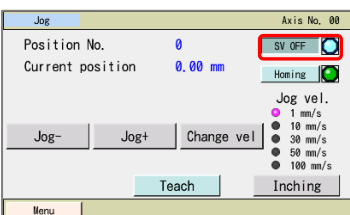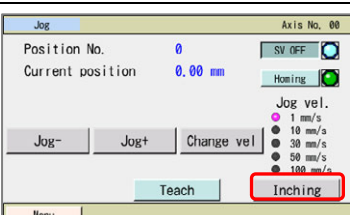No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Position setting].		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is off, touch [SV ON] to turn on the servo.		
6	Touch [Inching]. The display switches to the inching screen.		Touch [Menu] to return to the itemized position setting screen.

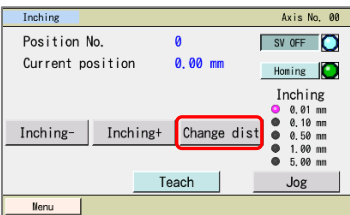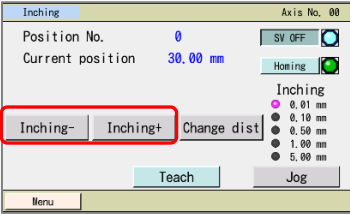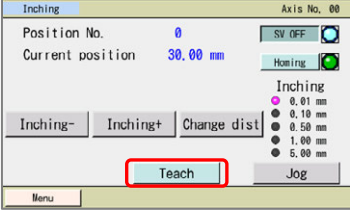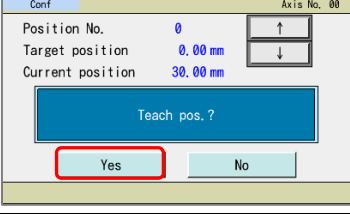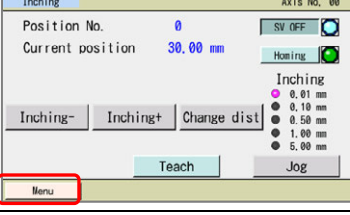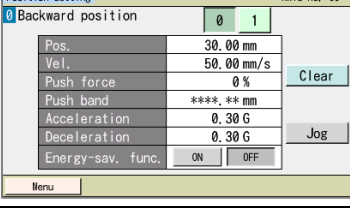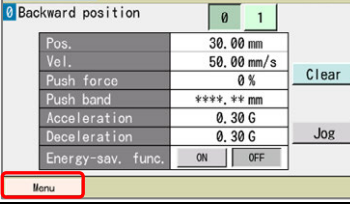No.	Operation	Screen	Remarks
7	Touch [Change dist] and set a desired inching distance.		
8	Use [Inching-] and [Inching+] to move the slider or rod to the target position of 30.0 mm.		
9	Touch [Teach].		
10	Touch [Yes].		
11	Touch [Menu].		
12	30.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
13	Touch [Menu].		Touch [Menu] to return to the position setting screen.







No.	Operation	Screen	Remarks
14		<div> <div>Position setting</div> <div>Axis No. 00</div> <div> <div>Q Backward position</div> <div>30.00 mm</div> <div>Vel. 50.00 mm/s</div> </div> <div> <div>I Forward position</div> <div>100.00 mm</div> <div>Vel. 120.00 mm/s</div> </div> <div>Menu</div> </div>	Touch [Menu] to return to the SEP menu screen.




5) Setting of push-motion operation (push power, push band)

An example of operation mode 0 (standard movement between 2 points) is explained.

An example of push-motion operation at the backward end is explained.

Push power: 50%, push band: 5.0 mm

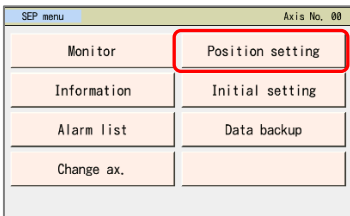
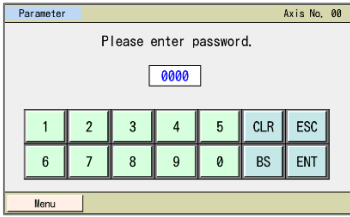
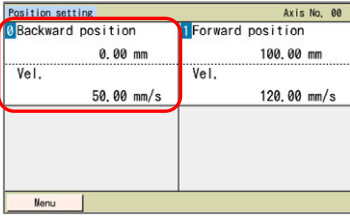
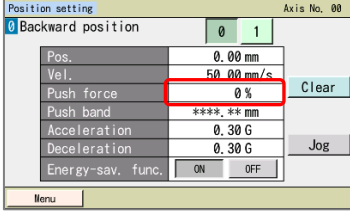
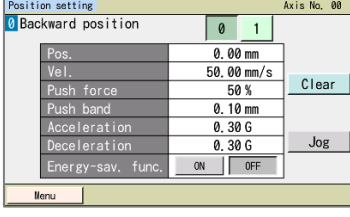
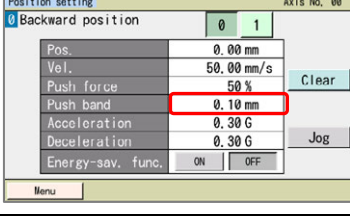
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Position setting].		
2	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch the value in [PushPower]. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
5	50 is shown in PushPower.		Touch [Menu] to return to the position setting screen.
6	Touch the value in [PushBand]. The numeric keypad appears. Touch [5], and touch [ENT].		Touch [Menu] to return to the position setting screen.





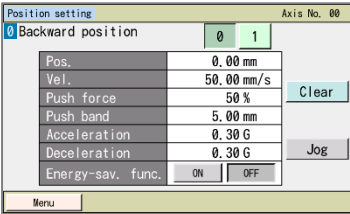
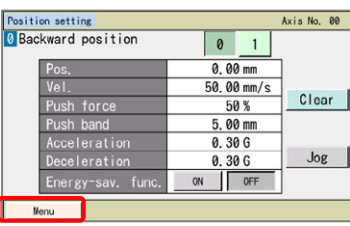
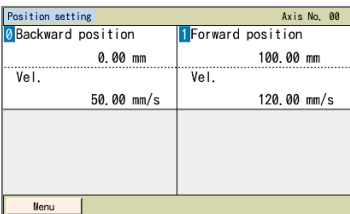
No.	Operation	Screen	Remarks
7	5.00 is shown in Push Band.		Touch [Menu] to return to the position setting screen.
8	Touch [Menu].		Touch [Menu] to return to the position setting screen.
9			Touch [Menu] to return to the SEP menu screen.








6) Setting of ecology function (automatic servo OFF function)

An example of operation mode 0 (standard) is explained.

How to turn off the servo automatically 5.0 seconds after stopping is explained.

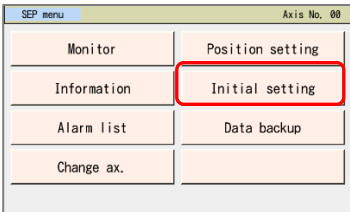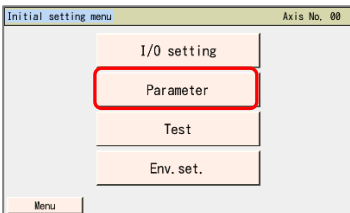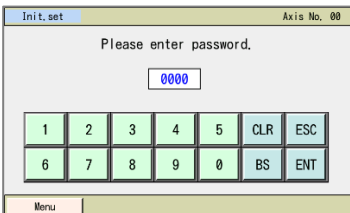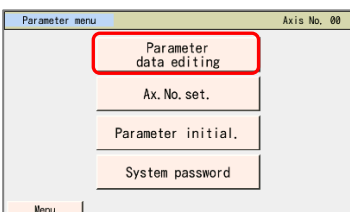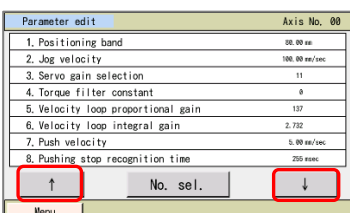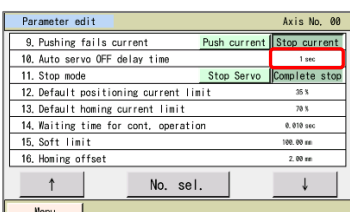
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Initial setting].		
2	Set a desired automatic servo OFF delay time. Touch [Parameter].		
3	If the system password is other than "0000," the password input screen appears. Input a system password and touch [ENT].		The default system password is "5119". For how to change the system password, refer to 4.12, "Parameters [Change System Password]."
4	Touch [Parameter data editing].		
5	Touch [↑] and [↓] to navigate through the screens until the one for setting the automatic servo OFF delay time is displayed.		
6	Touch the value of automatic servo OFF delay time. The numeric keypad appears. Touch [5], and touch [ENT].		

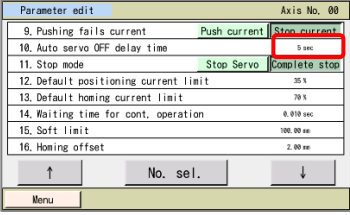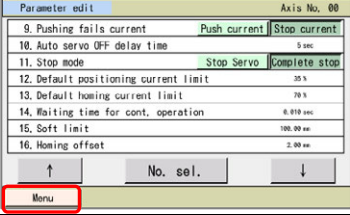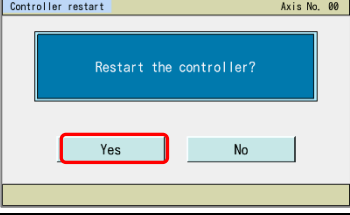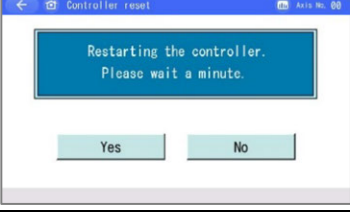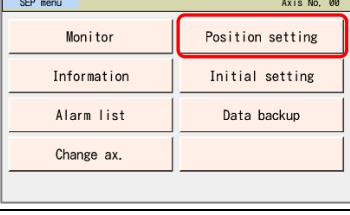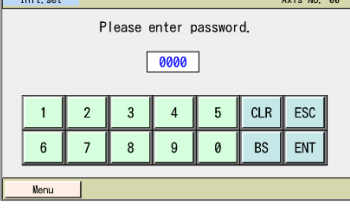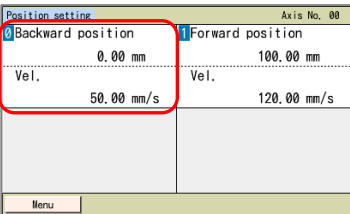No.	Operation	Screen	Remarks
7	5 is shown.		
8	Touch [Menu].		
9	Touch [Yes].		Touch [No], and the new setting will not be reflected in the controller until the power is reconnected.
10			
11	The controller is restarted and the SEP menu screen will appear. Touch [Position setting].		
12	If the position data edit password is other than "0000," the password input screen appears. Input a position data edit password and touch [ENT].		You can set a position data edit password with the "Position edit password" parameter on the parameter edit screen.
13	Set the ecology function at the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.

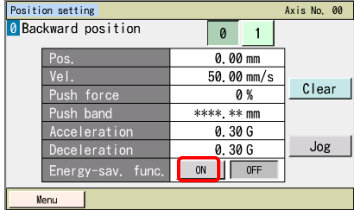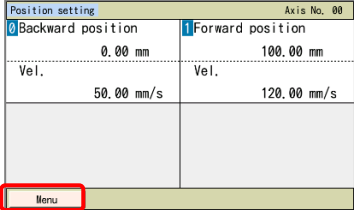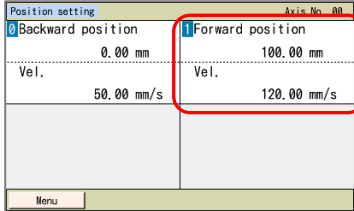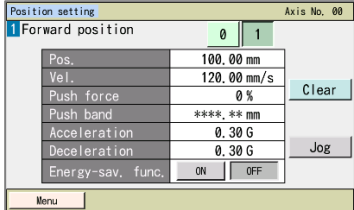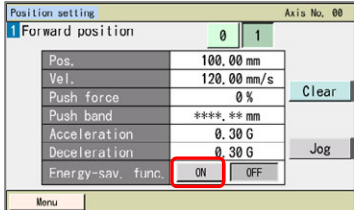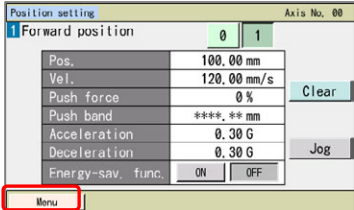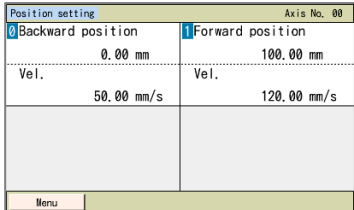
No.	Operation	Screen	Remarks
14	Touch [ON].		Touch [Menu] to return to the position setting screen.
15	Touch [Menu].		Touch [Menu] to return to the SEP menu screen.
16	Set the ecology function at the forward end position. Touch [Forward Position].		Touch [Menu] to return to the SEP menu screen.
17	The display switches to the forward end screen. Set the ecology function related to the forward end position.		Touch [Menu] to return to the position setting screen.
18	Touch [ON].		Touch [Menu] to return to the position setting screen.
19	Touch [Menu].		Touch [Menu] to return to the position setting screen.
20			Touch [Menu] to return to the SEP menu screen.

4.11 I/O Setting (Setting of Operation Parameters, Etc.)

You can select an operation pattern (PIO pattern) (0 to 5), set an operation mode (single solenoid, double solenoid), etc.

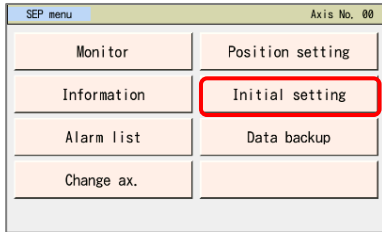


Touch [Initial setting] on the SEP menu screen.

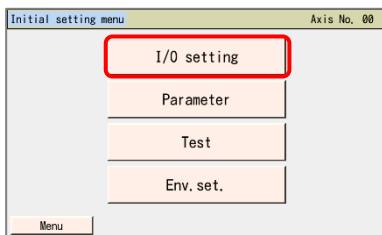

Touch [I/O setting]

Touch [Menu] to return to the SEP menu screen.


If the system password is other than "0000," the password entry screen appears.

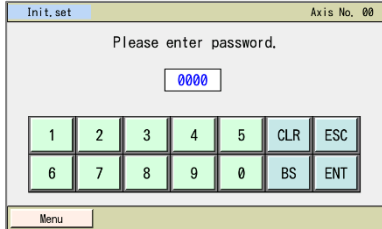

Enter a system password and then touch [ENT].

The default system password is "5119".
For how to change the system password, refer to 4.12, "Parameters [Change System Password]."

If the correct password has been entered, the display changes to the screen for setting the operation pattern.

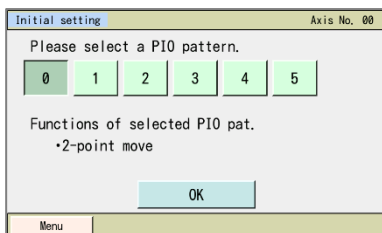


Select and touch one of operation patterns [0] to [5], and then touch [OK].


*(Note) If connected to Fieldbus Type in MSEP Controllers, [6] (Positioner Mode) is shown.
If selecting [6], it is not necessary to have an operation for the initial setting.
The operation is complete.*

The screen corresponding to the selected operation pattern appears.


Operation pattern 0 (standard movement between 2 points), operation pattern 1 (change travel speed), operation pattern 2 (change position data)

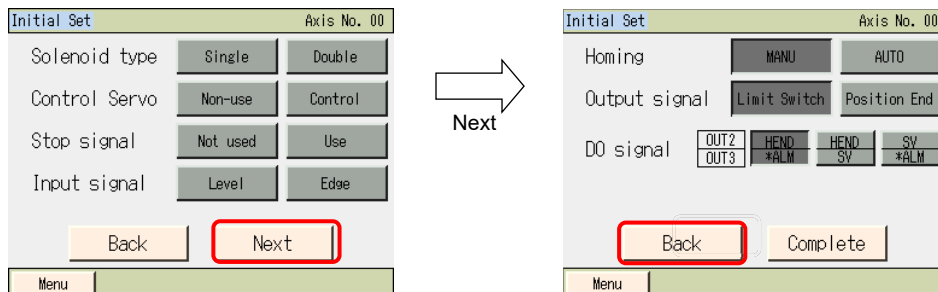

Operation pattern 3 (movement by 2 inputs among 3 points), operation pattern 4 (movement by 3 inputs among 3 points)

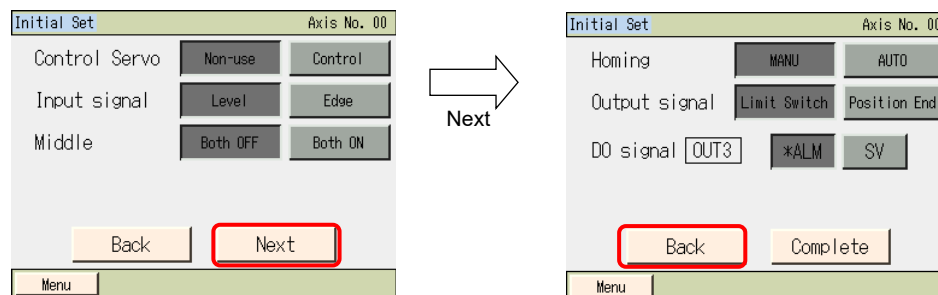

Operation pattern 5 (continuous back-and-forth operation)

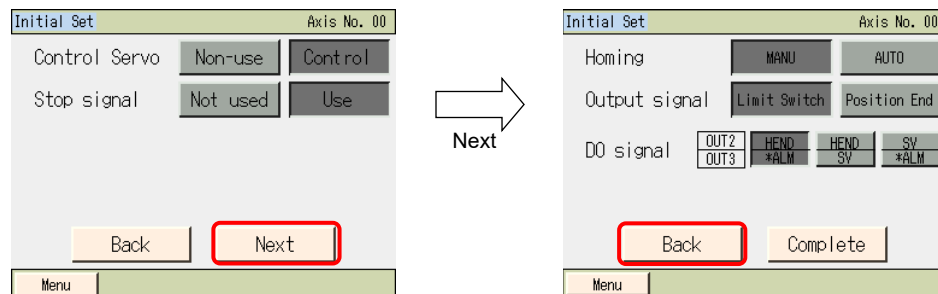

The items that can be set vary with each operation mode.

Touch [Back] to return to the operation pattern screen.

Setting item

Operation pattern	Operation mode	Intermediate position Movement method	Double solenoid type	Pause Signal *STP	Control Servo SON	OUT2, OUT3	OUT3	Home return	DO signal
	Single solenoid/ double solenoid	Both OFF/ Both ON	Level/ Edge	Not used/ Use	Non-use/ Control	HEND,*ALM/ SV,*ALM/ HEND,SV	*ALM/ SV	MANU/ AUTO	Limit switch LS/ Positioning PE
PIO pattern 0 Standard movement between 2 points	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 1 Change travel speed	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 2 Position data change	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 3 Movement by 2 inputs among 3 points		<input type="radio"/>			<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PIO pattern 4 Movement by 3 inputs among 3 points			<input type="radio"/>		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PIO pattern 5 Continuous back-and-forth operation				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>

For details on each setting item, refer to the instruction manual for your “ASEP/PSEP/DSEP controller Instruction Manual”, “MSEP controller Instruction Manual”.

Operation pattern Equivalent air cylinder circuits are shown for your reference.

Operation pattern	Description	Motorized cylinder connection method	Air cylinder circuit (reference)
PIO pattern 0 Single solenoid type (Standard movement between 2 points)	The actuator can be moved between two points using the same control you normally use with an air cylinder. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 0 Double solenoid type (Standard movement between 2 points)			
PIO pattern 1 Single solenoid type (Movement between 2 points) (Change travel speed)	The actuator can be moved between two points using the same control you normally use with an air cylinder. The speed can be changed during movement. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 1 Double solenoid type (Movement between 2 points) (Change travel speed)			

(Note) The air cylinder circuits are drawn with signal symbols corresponding to those used by ASEP/PSEP/DSEP/MSEP controllers.
For details on signal symbols, refer to your "ASEP/PSEP/DSEP Instruction Manual", "MSEP controller Instruction Manual".

Operation pattern Equivalent air cylinder circuits are shown for your reference.

Operation pattern	Description	Motorized cylinder connection method	Air cylinder circuit (reference)
PIO pattern 2 Single solenoid type (Movement between two points) (Position data change)	The actuator can be moved between two points using the same control you normally use with an air cylinder. You can switch between positioning operation and push-motion operation during operation. The target position (forward end, backward end) can be set.		
PIO pattern 2 Double solenoid type (Movement between two points) (Position data change)	The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 3 Single solenoid type (Movement by 2 inputs among 3 points)	The actuator can be moved among three points using the same control you normally use with an air cylinder. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 4 Double solenoid type (Movement by 3 inputs among 3 points)	The actuator can be moved among three points using the same control you normally use with an air cylinder. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 5 (Continuous back-and-forth operation)	The actuator moves back and forth between the two points of forward end and backward end. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		

(Note) The air cylinder circuits are drawn with signal symbols corresponding to those used by ASEP/PSEP/DSEP/MSEP controllers.
For details on signal symbols, refer to your "ASEP/PSEP/DSEP Instruction Manual", "MSEP controller Instruction Manual".

[1] Types of I/O setting (setting of operation parameters, etc.)

[Operation mode]

Select either the single-solenoid operation mode or double-solenoid operation mode.

[Intermediate move method]

Select whether to move to the intermediate position with both ST0 and ST1 turned ON, or OFF, when operation pattern 3 is set.

[Double solenoid type]

Select either Level or Edge as the condition for turning the double solenoids ON when the double-solenoid type operation mode and operation pattern 4 are set.

[Pause signal *STP]

Select whether to use or not use the pause signal *STP (input to IN2) when the single-solenoid type operation mode and operation pattern 5 are set.

[Servo control SON]

Select whether to use or not use the servo control (IN3 input signal SON (servo ON/OFF control)).

[Output signal selection, operation pattern 0, 1, 2, 5]

When operation pattern 0, 1, 2 or 5 is set, set the OUT2 and OUT3 output signals if you have selected to use the servo control.

Select from the three patterns shown in the table.

	Selection 1	Selection 2	Selection 3
OUT2	HEND (home return complete signal)	SV (servo ON output signal)	HEND (home return complete signal)
OUT3	*ALM (alarm output signal)	*ALM (alarm output signal)	SV (servo ON output signal)

[Output signal selection operation pattern 3, 4]

When operation pattern 3 or 4 is set, set the OUT3 output signal if you have selected to use the servo control.

* Select either ALM (alarm status signal) or SV (servo ON status signal).

[Home return operation]

Select a home return method.


- AUTO: Home return starts when the power is turned on.
- MANU: Home return starts when the first ST0 signal is input following the power on.

[Output signal]

Select the output signal to turn ON when the actuator moves and positioning is completed. Select either Limit Switch (LS) or Position End (PE).


[2] Basic operation

The setting method is explained using an example of operation pattern 0.

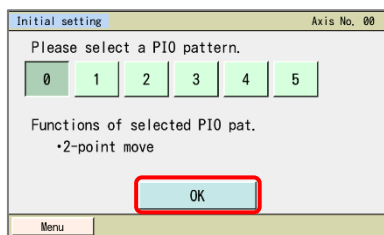

Touch [0] and touch [OK].


Touch [Menu] to return to the initial setting menu screen.

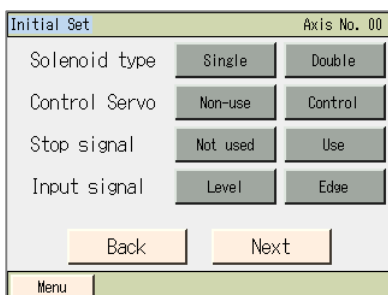

Select and touch either [Single] or [Double].

Touch [Menu] to return to the initial setting menu screen.


Hereafter, set one by one the items denoted by a O in the table of setting items in 4.11. When all items on this screen have been set, touch [Next].

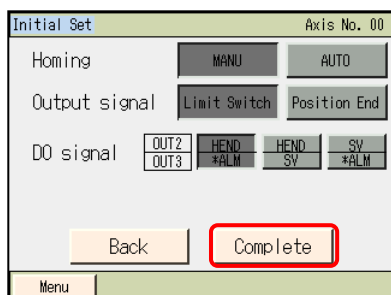

When the setting is complete, touch [Complete].


Touch [Back] to return to the previous screen.

Touch [Menu] to return to the initial setting menu screen. All settings you have made under the selected operation pattern become invalid.

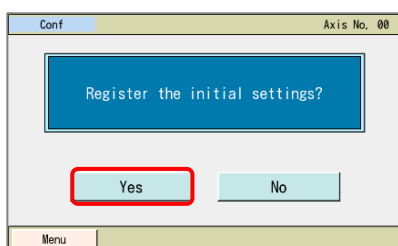

Touch [Yes].

Touch [No] to return to the operation pattern selection screen. All settings you have made under the selected operation pattern become invalid.

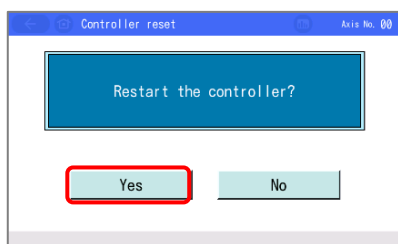


Touch [Yes].

The controller is restarted.

The controller operates according to the operation pattern settings you have made.

The display returns to the SEP menu screen.





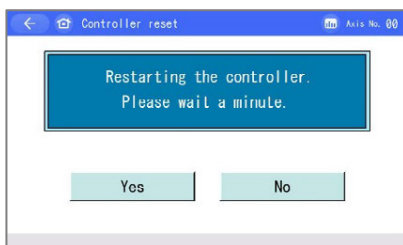









Touch [No], and the controller will not operate according to the operation pattern settings you have made until restarted.





- [3] Examples of I/O setting operations
Respective operations are explained by giving specific examples.

Example of operation mode 0 (standard movement between 2 points) Set as follows:

Operation mode	Single solenoid
Use of pause command (*STP)	Not used
Control Servo	Control
OUT2, OUT3 output signals	OUT2 HEND, OUT3 *ALM
Home	AUTO (start home return upon power on)
DO signal	LS0 (backward end position detection), LS1 (forward end position detection)

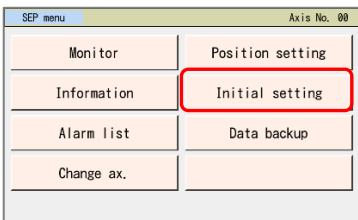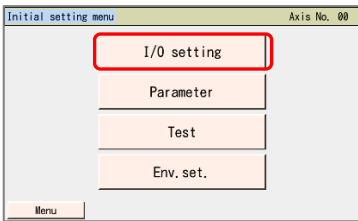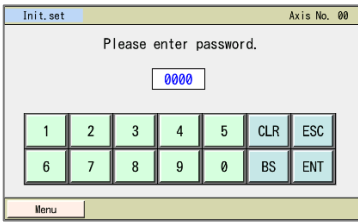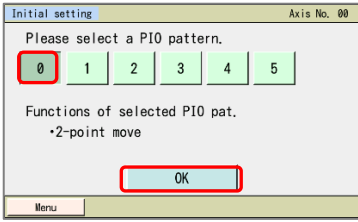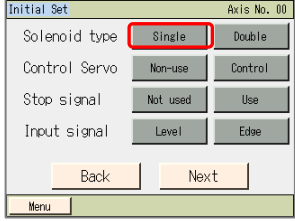
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Initial setting].		
2	Touch [I/O setting].		Touch [Menu] to return to the SEP menu screen.
3	If the system password is other than "0000," the password input screen appears. Input a system password and touch [ENT].		The default system password is "5119". For how to change the system password, refer to 4.12, "Parameters [Change System Password]."
4	Touch [0] and touch [OK]. Operation pattern 0 is selected.		Touch [Menu] to return to the initial setting menu screen.
5	Touch [Single]. The single-solenoid operation mode is selected.		Touch [Menu] to return to the initial setting menu screen.

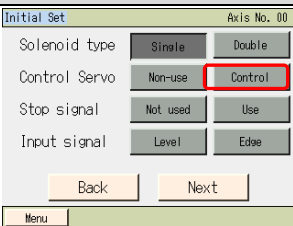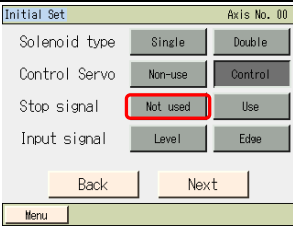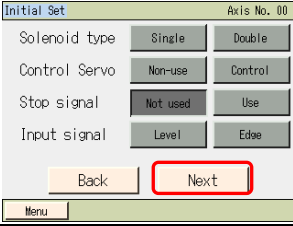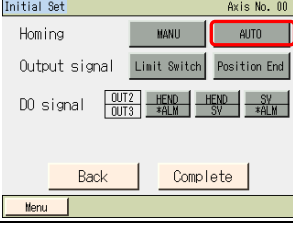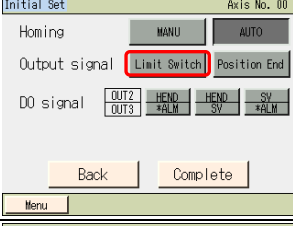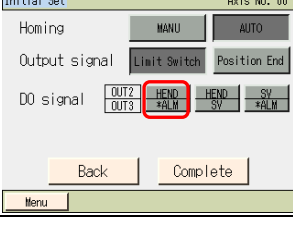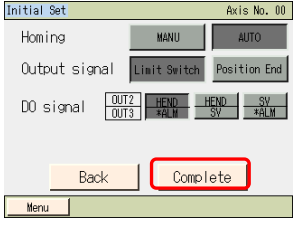No.	Operation	Screen	Remarks
6	Touch [Control]. Servo control is selected.		Touch [Menu] to return to the initial setting menu screen.
7	Touch [Not used]. Non-use of pause command (*STP) is selected.		Touch [Menu] to return to the initial setting menu screen.
8	Touch [Next].		
9	Touch [AUTO]. AUTO home return is selected.		Touch [Menu] to return to the initial setting menu screen.
10	Touch [LimitSwitch]. LS0 (backward end position detection) and LS1 (forward end position detection) are selected as the output signals.		Touch [Menu] to return to the initial setting menu screen.
11	Touch [HEND*ALM]. HEND and *ALM are selected as the OUT2 and OUT3 outputs.		Touch [Menu] to return to the initial setting menu screen.
12	Touch [Complete].		Touch [Back] to return to the previous screen. Touch [Menu] to return to the initial setting menu screen.

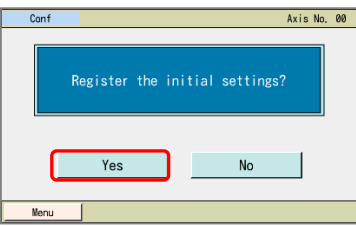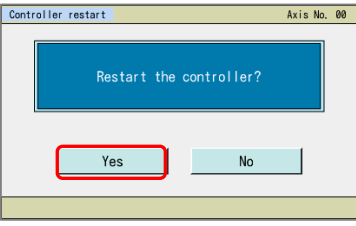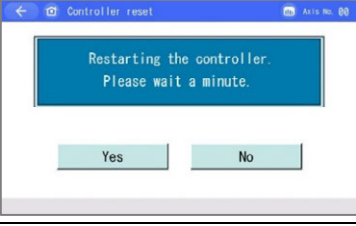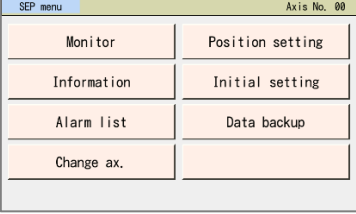
No.	Operation	Screen	Remarks
13	Touch [Yes].		Touch [NO] to return to the operation pattern selection screen. All settings you have made under the selected operation pattern become invalid.
14	Touch [Yes].		The controller does not operate according to the operation pattern settings you have made until restarted.
15			
16			After the controller has restarted, the display switches to the SEP menu screen.

4.12 Parameters (Parameter Editing, Axis Number Setting, Parameter Initialization to Factory Default Settings, System Password)

Parameters and axis number are set. You can change the system password or reset the parameters to their factory default settings.

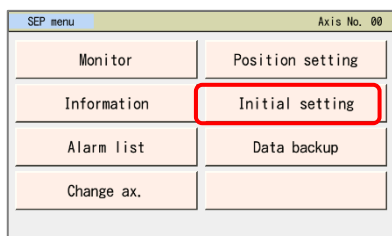


Touch [Initial setting] on the SEP menu screen.

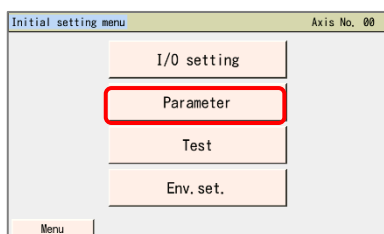


Touch [Parameter].

If the system password is other than "0000," the password input screen appears.

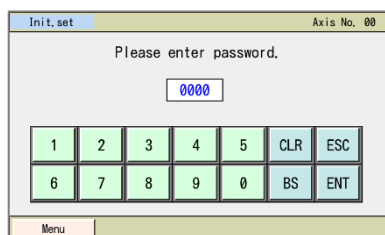

Enter a system password and then touch [ENT].

The default system password is "5119".
For how to change the system password, refer to 4.12, "Parameters [Change System Password]."

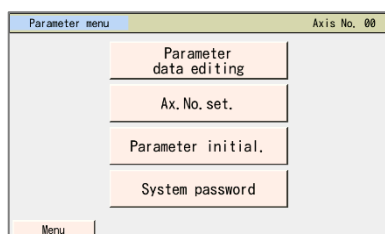

Select and touch [Parameter data editing], [Ax. No. Set.], [Parameter initial.] or [System password].

The screen corresponding to the selected menu item appears.

- **Edit Parameter:** You can set 36 types of parameters.

Parameter edit		Axis No. 00
1. Positioning band	00.00 mm	
2. Jog velocity	100.00 mm/sec	
3. Servo gain selection	11	
4. Torque filter constant	0	
5. Velocity loop proportional gain	137	
6. Velocity loop integral gain	2.732	
7. Push velocity	5.00 mm/sec	
8. Pushing stop recognition time	255 msec	

Menu

- **Axis No. Set:** Set the axis number.

Axis No. setting		Axis No. 00
•Axis No.		0

Execute

Menu

- **Init Parameter:** You can reset the parameters to their factory settings (initialize the parameters).

Initial parameter		Axis No. 00
Initialize to factory setting parameter?		
<input type="button" value="Yes"/> <input type="button" value="No"/>		

Menu

- **Change System Password:** You can change the password for I/O setting and parameter editing.

System password change	
New password : 5119	
Change	

Menu

[1] Types of parameter editing

For details on each parameter, refer to the instruction manual for your ASEP/PSEP/DSEP controller or MSEP controller.

No.1 (Default positioning band)

Set the positioning band.

No.2 (Jog speed)

Set the speed of jog operation.

No.3 (Servo gain number)

Set the servo gain number that determines the response of position control loops in servo control.

No.4 (Torque filter constant)

Set the torque filter time constant that determines the filter time constant for torque commands in servo control.

No.5 (Speed loop proportional gain)

Set the speed loop proportional gain that determines the response of speed control loops in servo control.

No.6 (Speed loop integral gain)

Set the speed loop integral gain that determines the response of speed control loops in servo control.

No.7 (Push speed)

Set the speed of push-motion operation.

No.8 (Push recognition time)

Set the push recognition time to recognize completion of operation after the work part was contacted in push-motion operation.

No.9 (Pushing fails current)

Set whether to use the push current or stop current as the current limiting value when the work part was missed in push-motion operation.

For ASEP/DSEP/MSEP (for servo motor), if the stop current is selected when the work part was missed in push-motion operation, the torque limit at the travel current limiting value is set.

No.10 (Auto servo OFF delay time)

Set the time until the servo turns off automatically when the ecology function is enabled.

No.11 (Stop mode) Displayed for PSEP, MSEP (for pulse motor) controllers

Set whether to implement servo stop based on the full servo control method or complete stop without servo control when the actuator stops.

(Note) *When this parameter is changed, the new setting will not be reflected until the position data is written to the controller again.*

No.12 (Current limiting value while stopped after positioning) Displayed for PSEP, MSEP (for pulse motor) controller

Set the current limiting value to be applied while the actuator is stopped after positioning.

No.13 (Current limiting value during home return)

Set the current limiting value to be applied during home return operation.

No.14 (Position execution wait time during continuous operation)

Set the stop time after the current movement is completed until the next movement is performed when operation pattern 5 (continuous operation) is set.

No.15 (Soft limit)

Set the positive soft limit.

No.16 (Home return offset)

Set the offset for home return.

No.17 (Home return direction)

Set whether to perform home return in the motor direction or front side direction.

The home return direction cannot be changed for some actuators, such as rod-type actuators.

No.18 (Simple Absolute board) Displayed for absolute specification controllers

Set whether to enable or disable this function when the controller is of absolute specification.

No.19 (Battery maintenance) Displayed for absolute specification controllers

Set how long the data will be maintained by the absolute battery when the controller is of absolute specification.

No.20 (Position edit password)

Set the password for editing position data.

No.21 (Zone boundary 1 + side)

Set + side of the area in which the zone signal (ZONE 1) is turned ON.

No.22 (Zone boundary 1 - side)

Set - side of the area in which the zone signal (ZONE 1) is turned ON.

No.23 (Zone boundary 2 + side)

Set + side of the area in which the zone signal (ZONE 2) is turned ON.

No.24 (Zone boundary 2 - side)

Set - side of the area in which the zone signal (ZONE 2) is turned ON.

No.25 (PIO inching distance)

Set an inching distance for the inching entry command from PLC.

No.26 (Target value for total number of movements)

If the total number of movement exceeds the setting of this parameter, an alarm is generated to inform.

No.27 (Target value for total travelled distance)

If the total travelled distance exceeds the setting of this parameter, an alarm is generated to inform.

No.28 (High output setting)

Set whether to use the high output function. However, the actuator complying with high power^(Note 1) has to be connected.

(Note 1) Actuator complying with high power: RCP 4 and RCP 5 series (except for high thrust types)

No.29 (BU Speed Loop Proportional Gain)

When setting the high output setting parameter valid, this parameter is effective for the speed loop proportional gain.

No.30 (BU Speed Loop Integral Gain)

When setting the high output setting parameter valid, this parameter is effective for the speed loop integral gain.

No.31 (Overload Level Ratio)

If it exceeds the rated current ratio set, the overload alarm (message level) is turned ON.

No.32 (Minor Failure Alarm Output Selection)

With setting 0, if the rated current ratio exceeds the value set in the overload level ratio parameter, ALM is output.

With setting 1, ALM is output by even message level alarms, such as the maintenance information error, in addition to the result of the overload level ratio.

No.33 (Enabled/disabled axis selection)

If you want to operate fewer axes than you bought, by setting this parameter disabled, the axis is considered as disabled and the alarm does not occur.

You can connect and operate only specific axes when starting up, or set them for expansion in future.

No.34 (Initial movement direction of excitation phase signal detection operation)

When the servo is first turned ON after power-on, the excitation detection is performed ^(Note 1).

Define the detection direction at this time.

Usually, this parameter does not need to be changed. However, when it gets in touch with the mechanical end or any interfering object at the time of starting up, set the direction in which the motor is easy to move.

(Note 1) In the simple absolute specification, the excitation detection is performed at the time of completing home return.

No.35 (Excitation phase signal detection time)

When the servo is first turned ON after power-on, the excitation detection is performed ^(Note 2).

Define the detection time at this time.

Usually, this parameter does not need to be changed. However, when the excitation detection error or any malfunction occurs, it may be effective to change the setting of this parameter.

If you want to change this parameter, contact to us.

(Note 2) In the simple absolute specification, the excitation detection is performed at the time of completing home return.

No.36 (Excitation detection type)

When the servo is first turned ON after power-on, the excitation detection is performed ^(Note 3).

The new method makes this operation smooth and makes it possible to reduce noise. (In this company's comparison)

(Note 3) In the simple absolute specification, the excitation detection is performed at the time of completing home return.

[2] Basic operation Set parameters.

[Parameter]

Parameter edit		Axis No. 00
1. Positioning band	50.00 mm	
2. Jog velocity	100.00 mm/sec	
3. Servo gain selection	11	
4. Torque filter constant	0	
5. Velocity loop proportional gain	137	
6. Velocity loop integral gain	2.732	
7. Push velocity	5.00 mm/sec	
8. Pushing stop recognition time	255 msec	
<div> <div>↑</div> <div>No. sel.</div> <div>↓</div> </div>		
Menu		

Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Three screens are available, including one showing the default positioning band and others used to edit position data and password.

Touch [Menu] to return to the parameter menu screen.

An example of setting a soft limit is explained.

Touch [↑] and [↓] on the displayed screen until the soft limit setting screen appears.


Parameter edit		Axis No. 00
9. Pushing fails current	Push current Stop current	
10. Auto servo OFF delay time	5 sec	
11. Stop mode	Stop Servo Complete stop	
12. Default positioning current limit	35 %	
13. Default homing current limit	70 %	
14. Waiting time for cont. operation	0.010 sec	
15. Soft limit	100.00 mm	
16. Homing offset	2.00 mm	
<div> <div>↑</div> <div>No. sel.</div> <div>↓</div> </div>		
Menu		

Touch the current value.

When the numeric keypad appears, enter a desired value and then touch [ENT].


Parameter edit		Axis No. 00
9. Pushing fails current	Push current Stop current	
10. Auto servo OFF delay time	1 sec	
11. Stop mode	Stop Servo Complete stop	
12. Default positioning current limit	35 %	
13. Default homing current limit	70 %	
14. Waiting time for cont. operation	0.010 sec	
15. Soft limit	100.00 mm	
16. Homing offset	2.00 mm	
<div> <div>↑</div> <div>No. sel.</div> <div>↓</div> </div>		
Menu		


Change parameters and touch [Menu] to return to the controller restart screen.

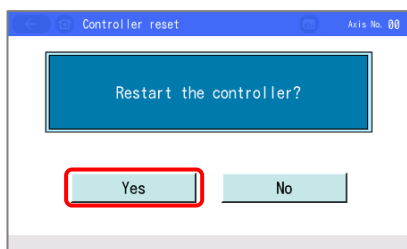


Touch [Yes].
The controller is restarted.
The controller operates according to the operation pattern settings you have made.
The display returns to the initial setting screen.

Touch [No], and the controller will not operate according to the operation pattern parameters you have set until restarted.

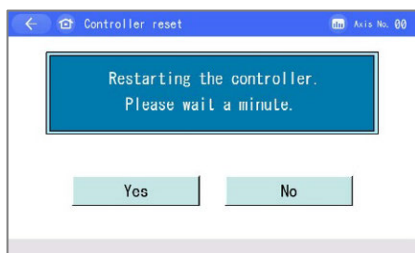

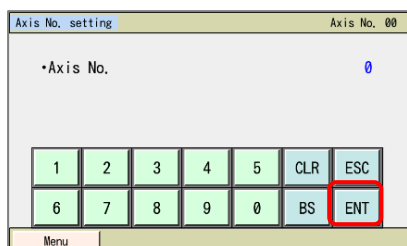


When the numeric keypad appears, enter a desired value and then touch [ENT].
You can set a value between 0 and 15.

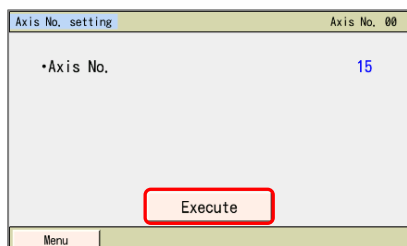

Touch [Execute].
In this example, 15 is set.


[Init Parameter]

The parameters are reset to their factory default settings.

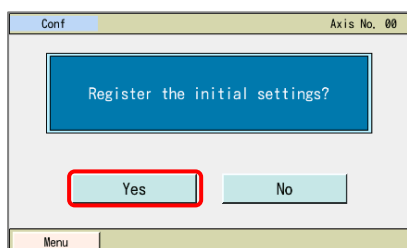

Touch [Yes].


Touch [No] to return to the parameter menu screen without resetting the parameters to their factory default settings.

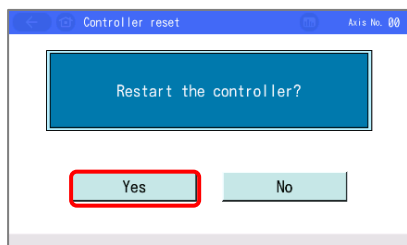


Touch [Yes].

The controller is restarted.
The controller operates according to the factory-set parameters.
The display returns to the initial setting screen.

Touch [No], and the controller will not operate according to the factory-set parameters until restarted.

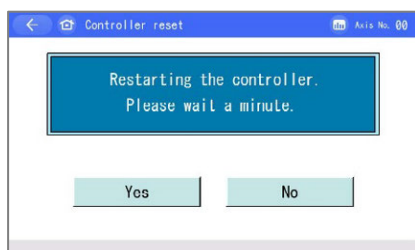


[Change System Password] Change the system password.

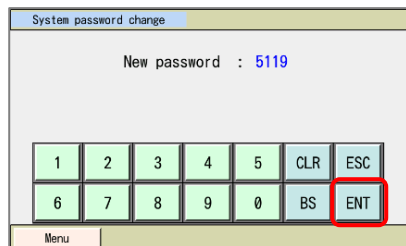


Enter the new system password to change to.
If you do not set the system password, enter 0000.


Touch [ENT].

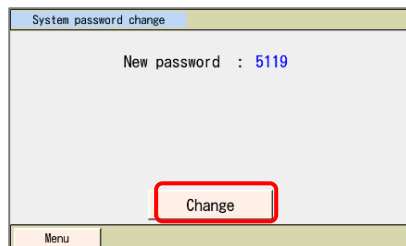

Touch [Change].

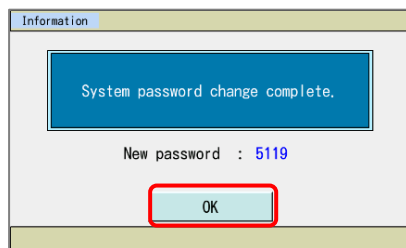


The system password changes.
Touch [OK] to return to the parameter menu screen.

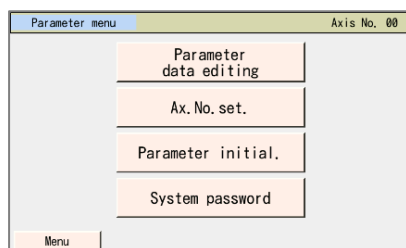


4.13 Test (I/O Tests, Operation Tests for Axis Movement)

You can perform I/O tests and operation tests for axis movement.

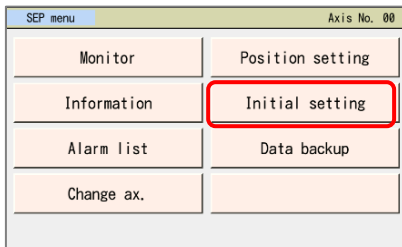


Touch [Initial setting] on the SEP menu screen.

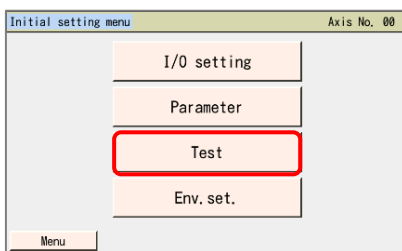


Touch [Test].

Touch [Menu] to return to the SEP menu screen.

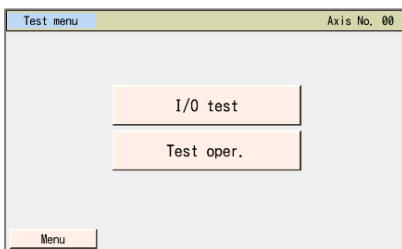

Select and touch either [I/O Test] or [TestPlay].

- I/O Test: PIO input signals can be monitored.
Also, the output signals can be forcibly turned ON or OFF by touching OUT0, OUT1, OUT2 and OUT3.

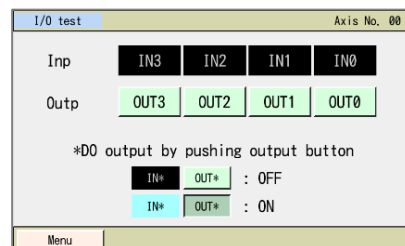

- Pos Test: Operation tests for axis movement can be performed.
The screen corresponding to the selected operation pattern appears.

Operation pattern 0
(standard movement between 2 points)

Test operation		Axis No. 00
Cur. pos.	0.02 mm	
Vel.	0.00 mm/s	
Cur. ratio	75.42 %	
Velocity override	10 %	
Stop		
Backward		Forward
Menu		

Operation pattern 1 (change travel speed)

Test operation		Axis No. 00
Cur. pos.	0.01 mm	
Vel.	0.00 mm/s	
Cur. ratio	75.42 %	
Velocity override	10 %	
Stop		
Backward		Forward Change velocity
Menu		

Operation pattern 2 (change position data)

Test operation		Axis No. 00
Cur. pos.	0.01 mm	
Vel.	0.00 mm/s	
Cur. ratio	75.42 %	
Velocity override	10 %	
Stop		
Backward		Forward Position change
Menu		

Operation pattern 3
(movement by 2 inputs among 3 points)

Test operation		Axis No. 00
Cur. pos.	0.01 mm	
Vel.	0.00 mm/s	
Cur. ratio	75.42 %	
Velocity override	10 %	
Stop		
Backward		Forward Middle position
Menu		

Operation pattern 4
(movement by 3 inputs among 3 points)

Test operation		Axis No. 00
Cur. pos.	0.01 mm	
Vel.	0.00 mm/s	
Cur. ratio	75.42 %	
Velocity override	10 %	
Stop		
Backward		Forward Middle position
Menu		


Operation pattern 5
(continuous back-and-forth operation)

Test operation		Axis No. 00
Cur. pos.	0.01 mm	
Vel.	0.00 mm/s	
Cur. ratio	75.42 %	
Velocity override	10 %	
Reciprocating move	0	
Start Reset Stop		
Menu		

Operation pattern 6
(positioner)

Position move		Axis No. 00
Position No.	1	SV OFF
Current position	0.00 mm	Homeing
Target position	100.00 mm	
Velocity override	100 %	
<div>↑ Change vel ↓</div> <div>Move Cont. move Stop</div>		
Menu		

[1] Basic operation [I/O test]

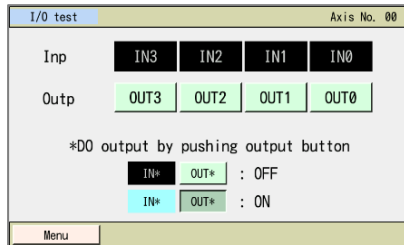


ON/OFF of input signals can be monitored.

The output signals OUT0 to OUT3 can be forcibly output by touching each signal.

Touch [Menu] to return to the test menu screen.

[Pos Test]

The operating method is explained using an example of operation pattern 0.

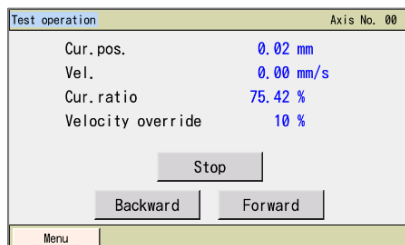

The current axis position is indicated.


The axis speed is indicated.

The electric rated current ratio/current value of the axis is indicated by a percentage of the rating.

Touch [Menu] to return to the test menu screen.

- Current Rate/Current : You can switch the display between the rated current ratio (%) and current value (mA) every time you touch [Current Rate] or [Current].
- Vel Override : You can change the moving speed of the actuator to 10%, 50% or 100% of the speed set in the position data every time you touch [Vel Override].
- Backward : Touching [Backward] moves the actuator backward.
- Forward : Touching [Forward] moves the actuator forward.
- Stop : Touching [Stop] stops the actuator.

The settings of operation pattern 5 (continuous back-and-forth operation) vary partially from other operation patterns.

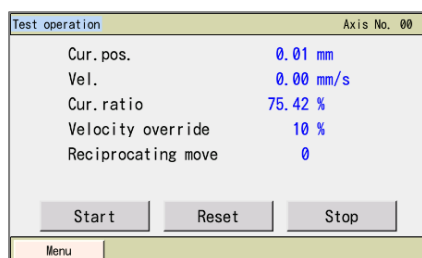


- ← The current axis position is indicated.
- ← The axis speed is indicated.
- ← The electric rated current ratio/current value of the axis is indicated by a percentage of the rating.
- ← The back-and-forth operation times of the axis is indicated.

- **Current Rate/Current** : You can switch the display between the rated current ratio (%) and current value (mA) every time you touch [Current Rate] or [Current].
- **Vel Override** : You can change the moving speed of the actuator to 10%, 50% or 100% of the speed set in the position data every time you touch [Vel Override].
- **Start** : Continuous operation stops once the operation test screen appears. Touching [Start] causes the actuator to move back and forth continuously at the speed set by the override parameter.
- **Stop** : Touching [Stop] stops the actuator.
- **Reset** : Touching [Reset] resets the back-and-forth counter to 0.


Continuous operation resumes once the operation test screen closes.

4.14 Environment Setting

You can set the language, touch operation sound, auto monitor function, sleeping time, data input warning, display and time.

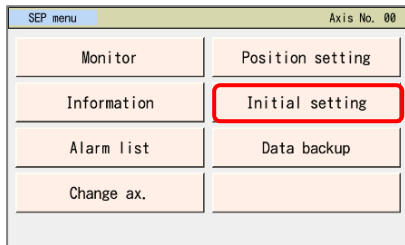


Touch [Initial setting] on the SEP menu screen.

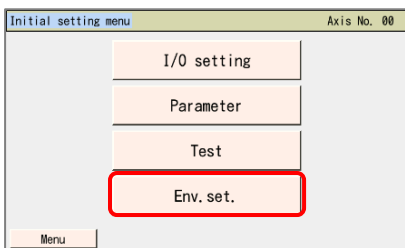

Touch [Env.set.].


Touch [Menu] to return to the SEP menu screen.

The environment setting screen appears.

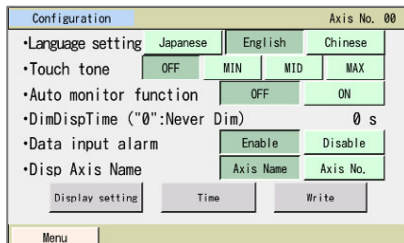

[1] Basic operation

- Language: Select a language to display.
Display for Japanese/English/Chinese languages setting change

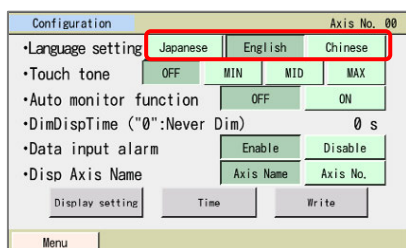


Touch a desired language ([English] etc.).

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- Sound: Set whether to output or not output a touch tone.

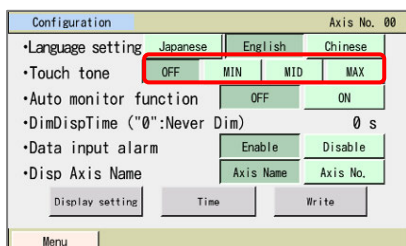


Touch [OFF]. A touch tone is not output.
Touch [MAX], [MID] or [MIN]. A touch tone is output.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- Auto Monitor: You can have the monitor screen appear first after the touch panel teaching pendant is connected.

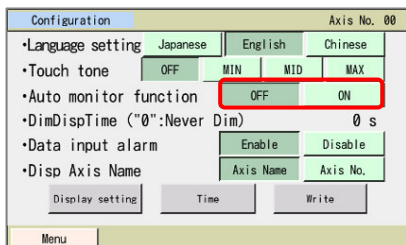


Touch [ON] to enable the auto monitor function.
Touch [OFF] to disable the auto monitor function.

Select either ON or OFF, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- Dim Display Time: Set the lights-out time when not being operated.
If "0 sec" is set, the display will remain lit at all times.

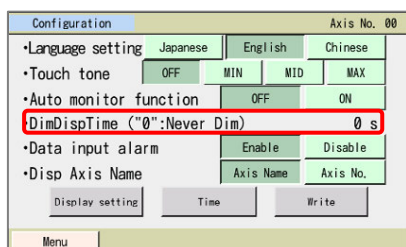


Touch [Dim Display Time ("0": Never Dim) 0 sec].

Enter the light off time.
A desired value between 0 and 255 sec can be set.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- **Data Input Warning:** The warning can be output when a value less than the minimum speed and a value exceeding the rated acceleration/deceleration speed are entered in the position data. Note that the value is entered even if the warning occurs. Always use within the specification of the actuator.

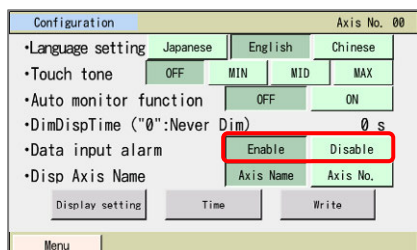


Touch [Effect] to give the warning.
Touch [Non Effect] not to give the warning.

Select either Effect or Non Effect, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.


[Display]

Adjustment of contrast and brightness of the screen, position tuning for touch panel and LCD screen check can be performed.

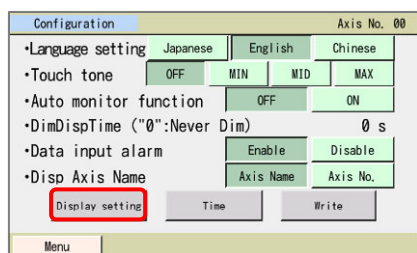

Touch [Display setting].

Display menu Window is displayed.

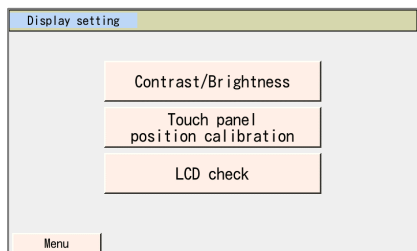


Select Display Setting menu.


Touch [Menu] and the display returns to EnvironmetSet screen.

•Change the Contrast/Brightness

You can adjust contrast (shading of liquid crystal) and brightness (of liquid crystal).

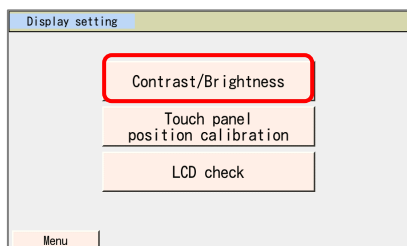

Touch [Contrast/Brightness].

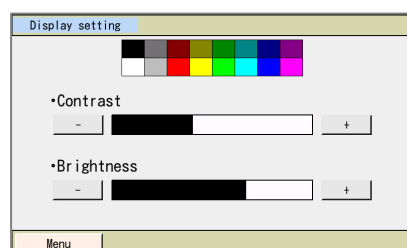

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.


Brightness adjustment

Touch [-] and [+] under Brightness to adjust the brightness of the screen.


Touch [Menu] to save the setting status and the display returns to Display menu screen.

•Touch calibration

A calibration for the position detection of the touch panel is performed.

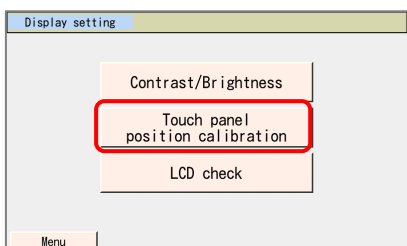

Touch [Touch panel position calibration].

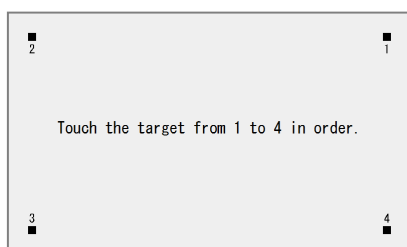


Touch [■] in the order of 1, 2, 3 and 4.

The display returns to Display menu screen.


•LCD check

LCD display can be checked in the order of Color Pattern, White Only and Black Only.

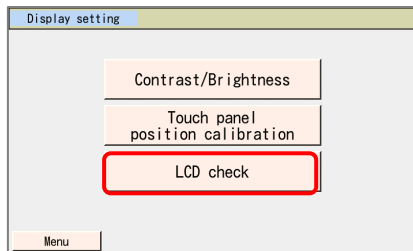

Touch [LCD check].

Color Pattern is displayed.

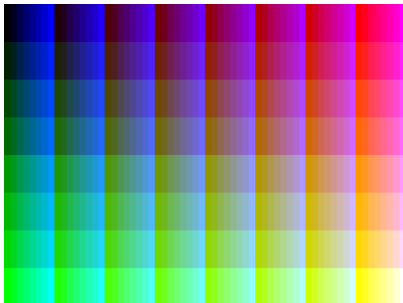


Touch any point on the screen.

White Only is displayed.



Touch any point on the screen.

Black Only is displayed.




Touch any point on the screen.
The display returns to Display menu screen.


[Time setting]

Time setting can be performed for TB-02 or controller with a calendar function.


1) Time setting for TB-02

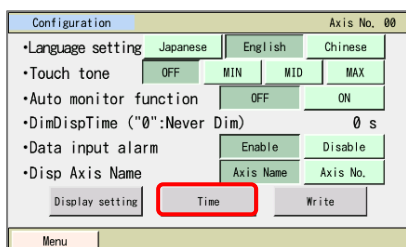


Touch [Time].

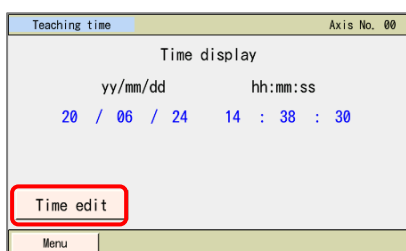


The time of teaching TB-02 is displayed.
Touch [Time Edit].

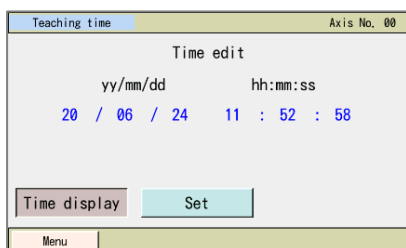


Touch the value of year, month, day, hour, minute or second that is required to be changed.

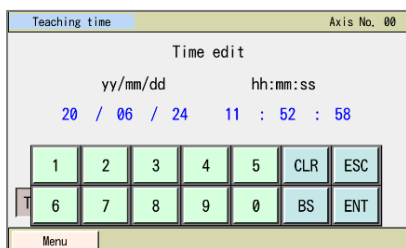

Numeric keys are displayed.
Input a value and touch [ENT].

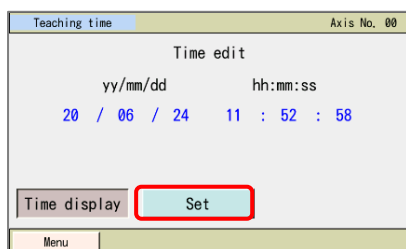


Touch [Set].

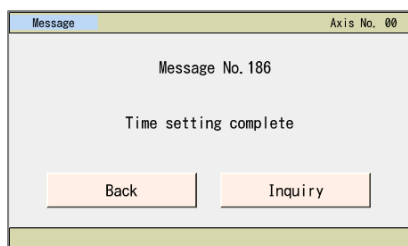


The time of the TB-02 is changed.
Touching [Back] can go back to the controller time setting screen.
Touching [Inquiry] displays the inquiry screen.


2) Time setting for controller with a calendar function

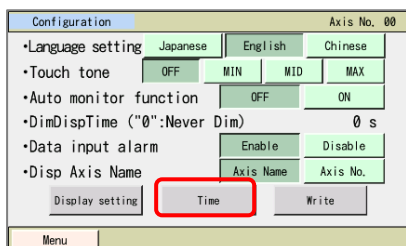


Touch [Time].

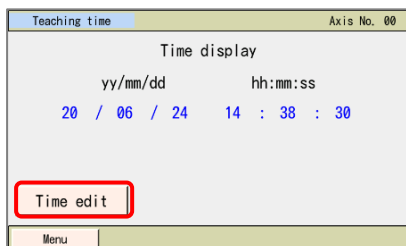


The time of teaching is displayed.
Touch [Time Edit].

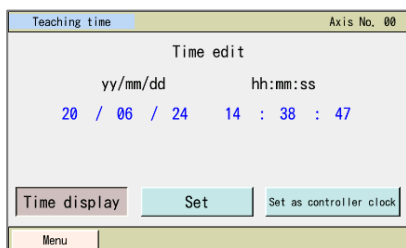


When setting the time of teaching to the controller, the time does not need to be changed.
Touch any one of year, month, day, hour, minute and second to change the time.

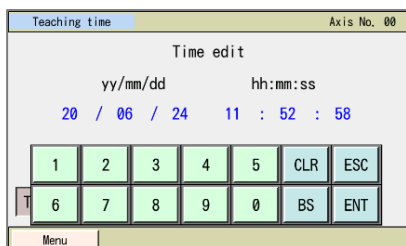

Numeric keys are displayed.
Input a value and touch [ENT].

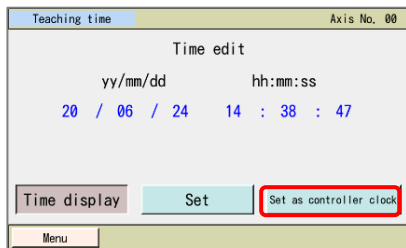

Touch [Set as controller clock].

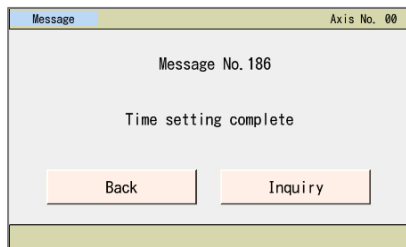

The time of the controller is changed.
Touch [Back] to return to the teaching time setting screen.
Touch [Inquiry] to display the inquiry screen.

4.15 Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

It is not applicable to the backup data storable in the RC PC software.

(Note) Extensions of the Stored Data

- *The file extensions of the data stored to the Secure Digital card are the same as those dealt in RC PC software, and are compatible. The position data for the ASEP controllers is ptas and parameters are pras. The position data for the PSEP controllers is ptps and parameters are prps.*

Refer to [the details of the file extensions in the RC PC Software Instruction Manual]

- *The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.*

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore.


If the folder does not exist, it is automatically created.

- *Position Data : \TB_CON\Position\File Name*
- *Parameter : \TB_CON\Parameter\File Name*
- *Alarm List : \TB_CON\Alarmlist\File Name*

(Note) Files with Chinese names are not supported.


4.15.1 Data Backup of the Controller

The data in the controller is transferred to the Secure Digital memory card for backup.

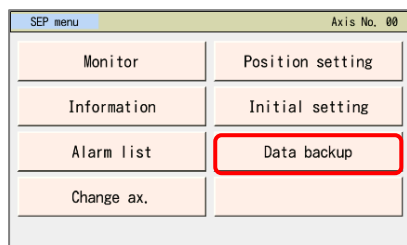

Touch [Data backup] on the SEP Menu screen.


A screen for data transfer appears.

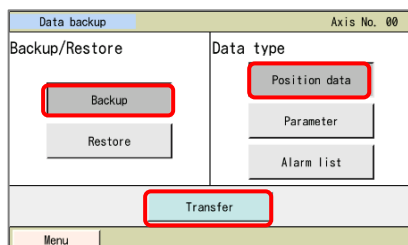

Touch [Backup].


Select the data type for the backup such as [Position Data] and touch it.

Touch [Transfer].

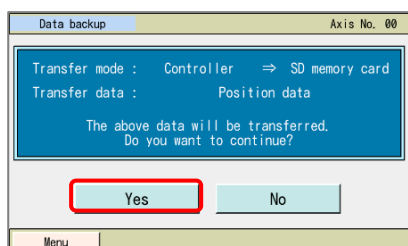


Touch [Yes].

If [No] is touched, the screen goes back to the data backup screen.

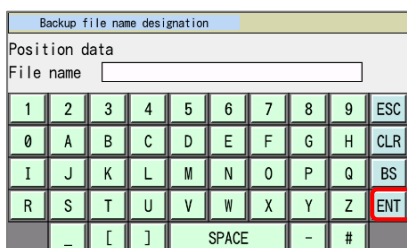


Numeric keys show up. Input a file name.

The file name is to be typed with 32 characters at maximum in letters and numbers.

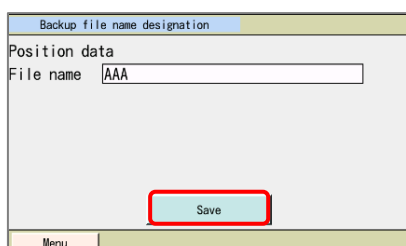


Touch [Save].

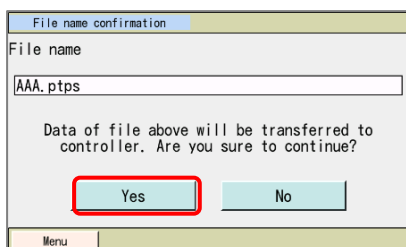

The screen below appears if the same name is not found.

Touch [Yes].


If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

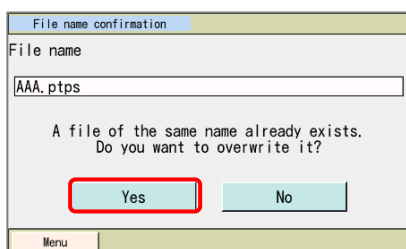


The screen below appears if the same name is found.

Touch [Yes].

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

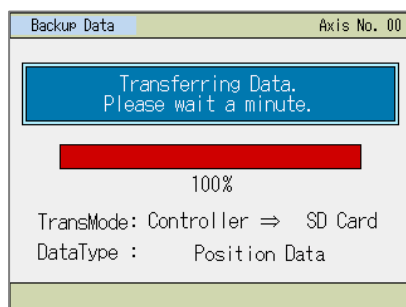

Data transfer screen will be shown.

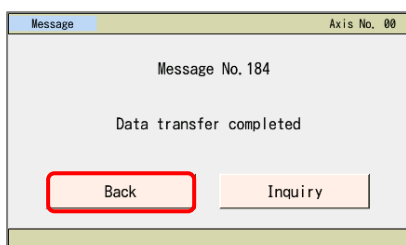


A message to tell the data transfer is complete pops up and the backup process is finished.

Touching [Back] can go back to the Backup Data screen.


4.15.2 Restore to Controller

Data in the Secure Digital card is transferred to the controller.

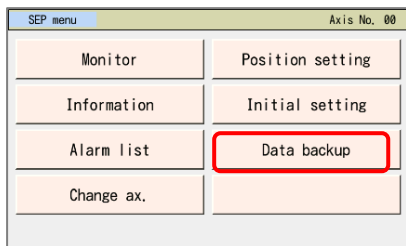

Touch [Data backup] on the SEP Menu screen.


A window for data transfer appears.

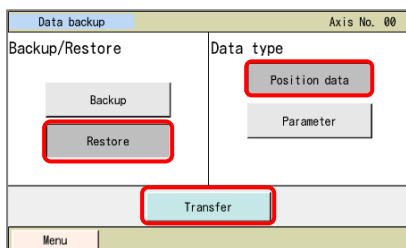

Touch [Restore].


Select the data type to transfer to the controller, such as [Position Data], and touch it.

Touch [Transfer].

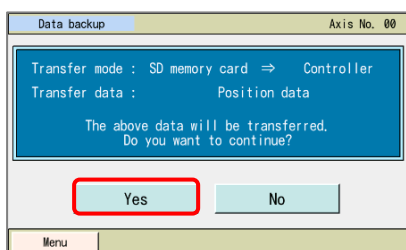


Touch [Yes].

If [No] is touched, the screen goes back to the data backup screen.

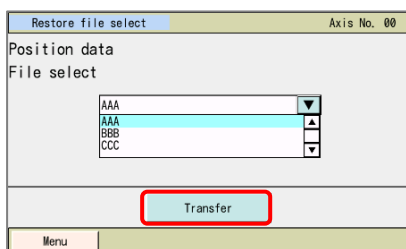


Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.

Touch [Transfer].

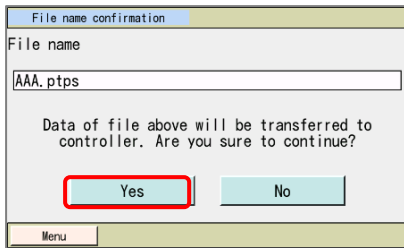


Touch [Yes].

If [No] is touched, the screen goes back to the previous one for the restore file select.

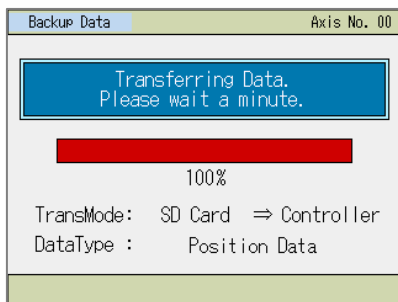

Data transfer screen will be shown.

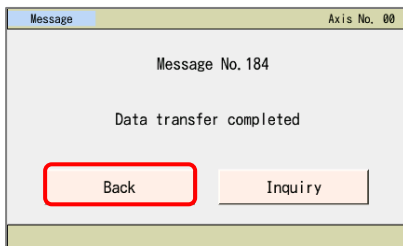

A message to tell the data transfer is complete pops up and the data transfer process to the controller is finished.

Touching [Back] can go back to the Backup Data screen.


5. Operation of MEC Related Controllers

MEC related controllers: PMEC, AMEC and ERC3 (MEC mode)

5.1 Transition of Operating States


The language can be changed by following the steps below.


For the operation after the language change, please refer to the instruction manual written in each language

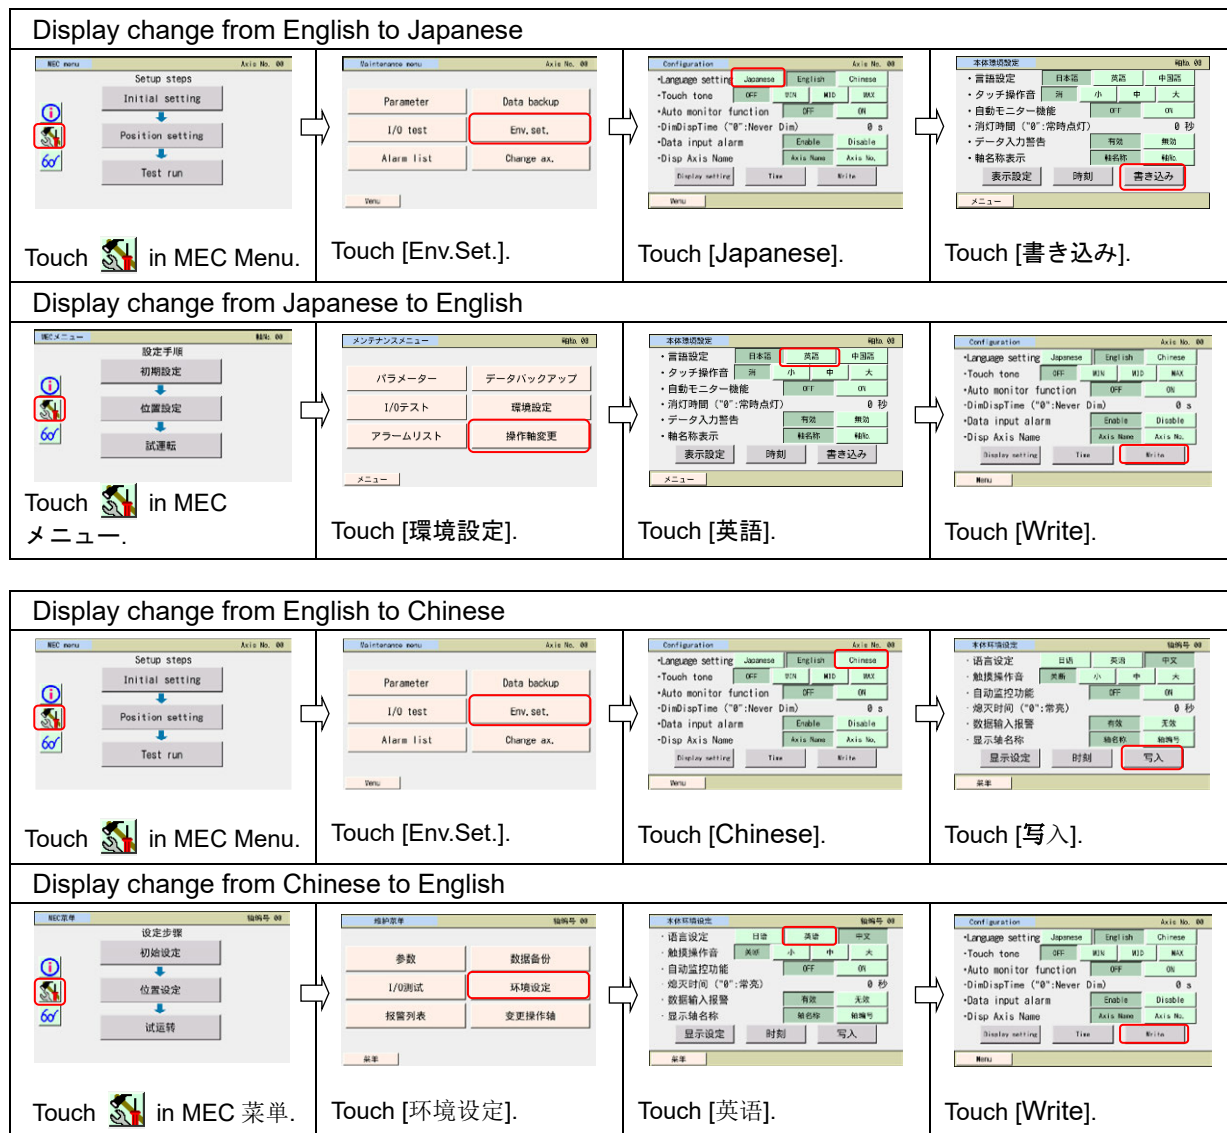

5.2 Operating Menu


Transition of operating states when the touch panel teaching pendant TB-02 is connected to a MEC related controller is shown.

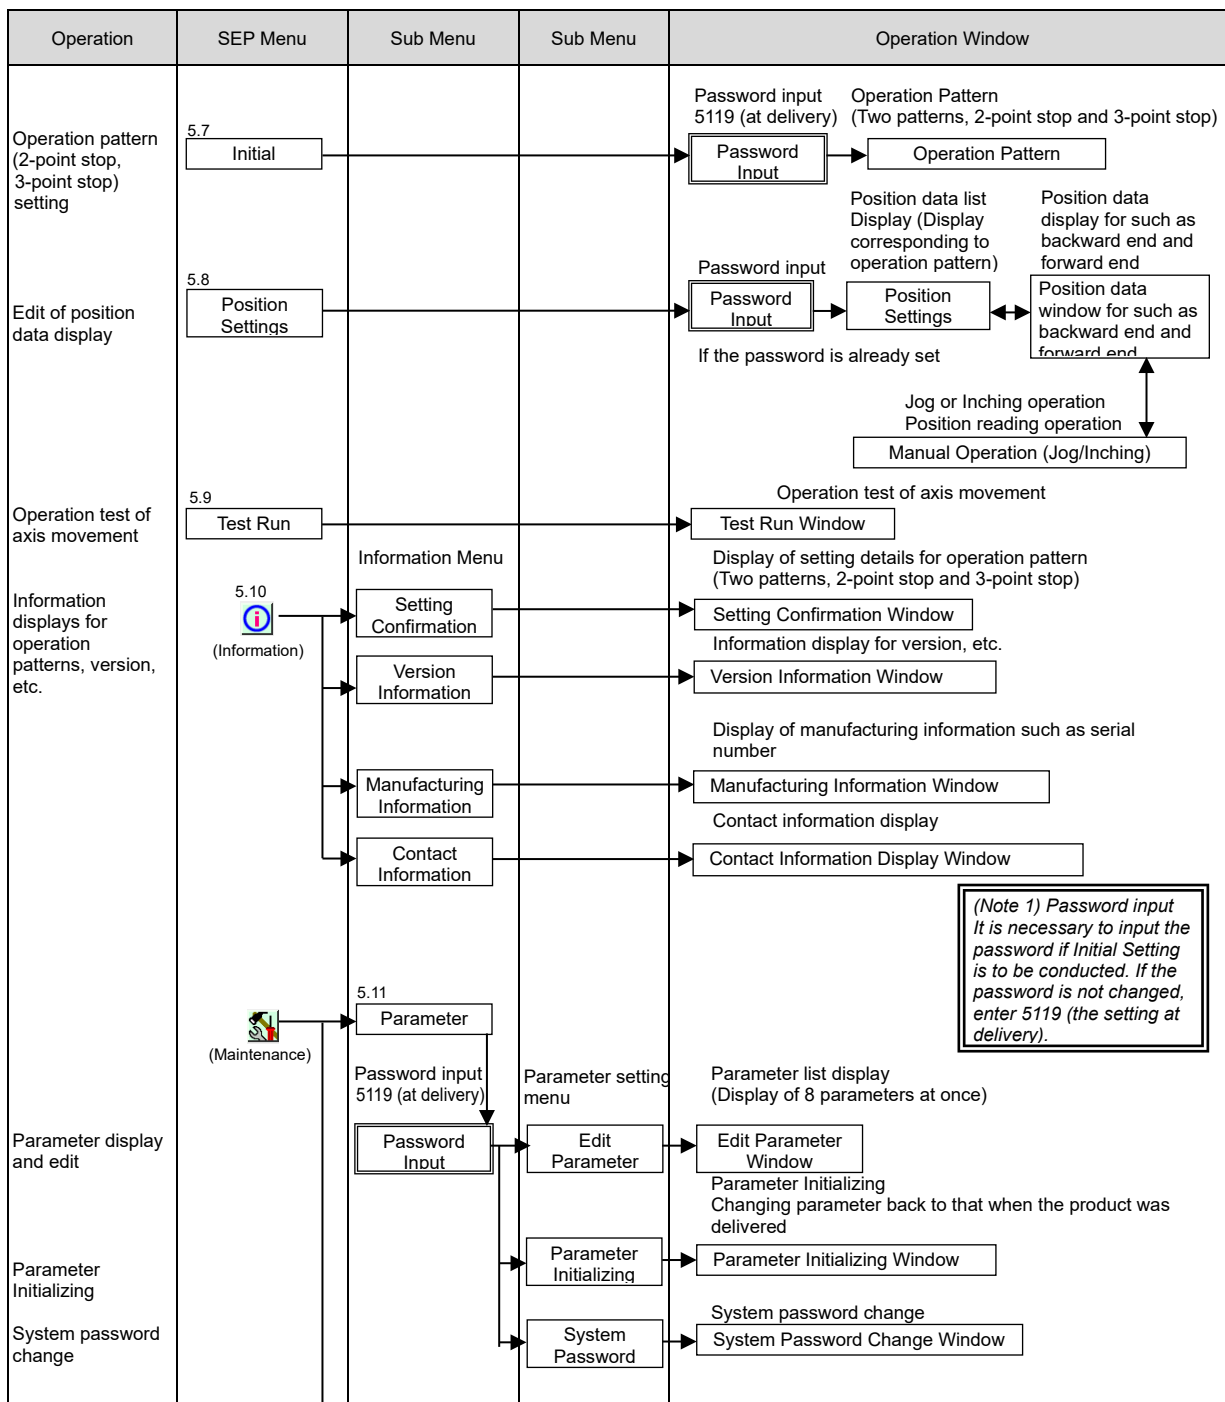

Operation	SEP Menu	Sub Menu	Sub Menu	Operation Window
Display of PIO signal input and output, Compulsory output of output signal		5.12 I/O Test		I/O Test Window
Alarm content detailed display		5.13 Alarm List		Alarm List Window
Data transfer between memory and controller		5.14 Data Backup		Data Backup Window
Environment of Language Setting, Touch Sound Setting, etc.		5.15 Global		Global Window
Display of conditions of input and output I/O, velocity,		5.5 Change ax.		Select Axis screen
	5.16  (Monitor)			Monitor Window
				<p>Display of PIO signal input and output and compulsory output of output signal</p> <p>Alarm detailed display (Display of 8 alarm at once)</p> <p>Data transfer between memory and controller</p> <p>Language setting, touch operation sound, sleeping time, automatic monitor function, data input warning</p> <p>Display settings (contrast and brightness changes)</p>

5.3 Initial Screen

When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen of the touch panel teaching pendant, after which version information is displayed.

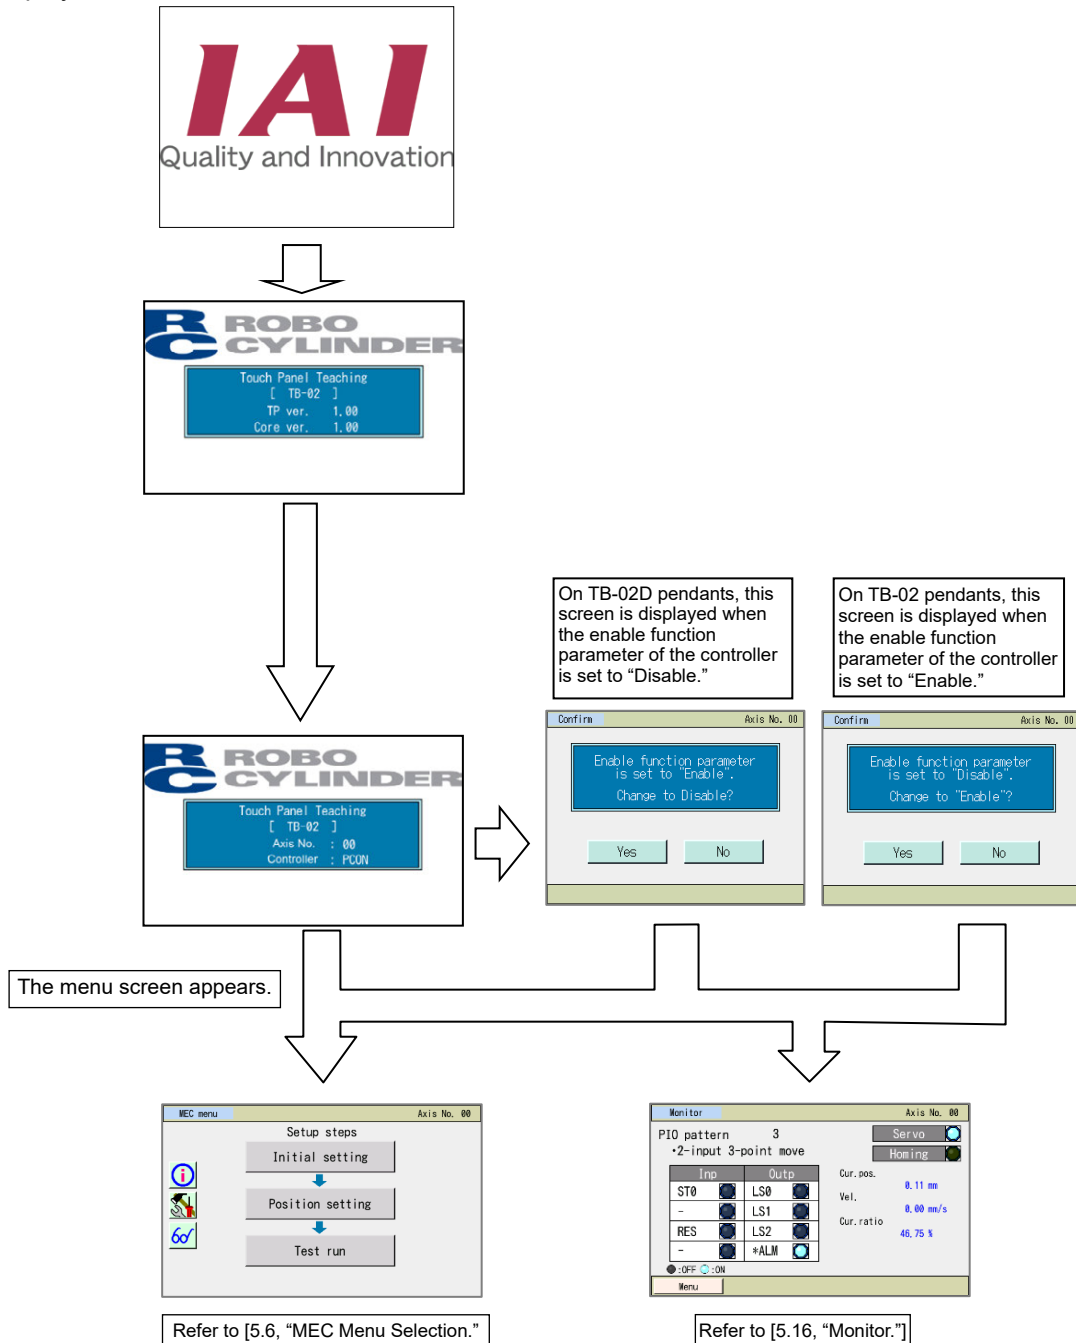


* The same items can be set on the automatic monitor setting screen accessible from the environment setting screen of the controller.

5.4 Initial Setting

When the power is turned on for the first time after the delivery of the controller, the initial setting screen will appear.

- Select [Yes], and the display will change to the initial setting screen where you can set the operation pattern.
- Select [No], and the factory set operation pattern, specifically the 2-point stopping operation mode, will remain effective.


The display will switch to the position setting screen.

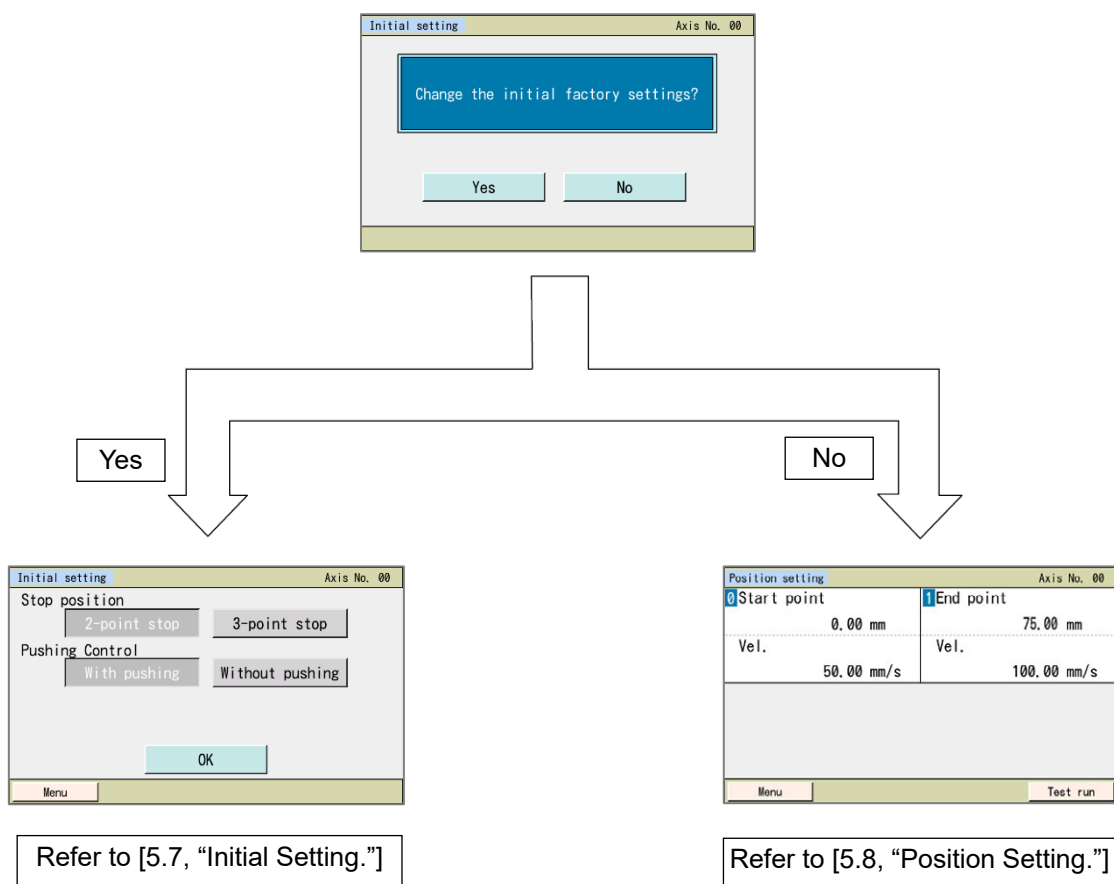


Factory settings

- Operation pattern:
Stopping at 2 points


5.5 Operation Axis Change

The axis select window is displayed when several units of controllers are connected to the communication line. Also, it can be displayed by touching  (Maintenance) → [Change ax.] in the menu screen.


It is not necessary to select the axis when only one unit of controller is connected.

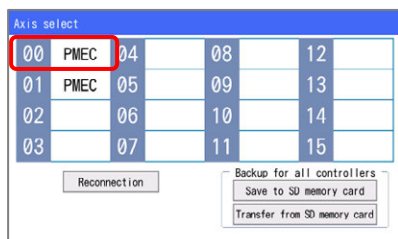

Select the axis to connect the touch panel teaching pendant and touch it.

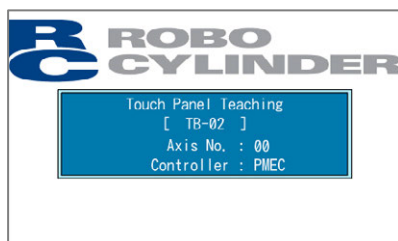


Connection to the selected axis controller gets started.

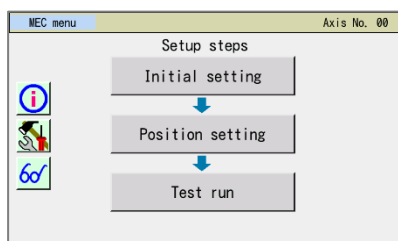

Once the connection to the controller is established, MEC menu screen opens.

5.6 MEC Menu Selection

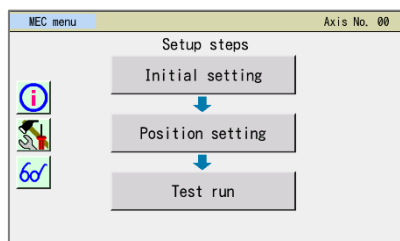


MEC menu




The MEC menu has six items. Select and touch one of them.

The screen changes to the one corresponding to the menu item you have touched.

Menu list

- Initial Set Set the operation pattern (stopping at 2 points or 3 points). Refer to [5.7, "Initial Setting."]
- Pos. Edit Set the position, push force, push band, etc. The axis can be operated manually. Refer to [5.8, "Position Setting."]
- TestPlay Conduct axis movement operation tests. Refer to [5.9, "Trial operation."]
- Information  The operation pattern, version and other information are displayed. Refer to [5.10, "Information."]
- Maintenance  Touching  switches the display to the maintenance menu screen, which is the next selection screen.

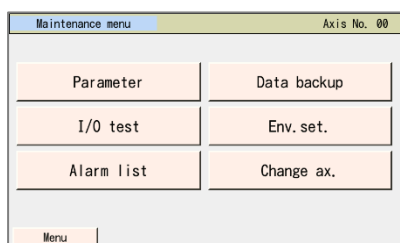

The maintenance screen shows six buttons, so select and touch a desired button.

The display will change to the menu screen corresponding to the button you have touched.


Touch [Menu] to return to the previous MEC menu screen.

Maintenance menu list

- Parameter Set the default positioning band and other parameters. Refer to [5.11, "Maintenance – Parameters."]
- I/O Test Conduct I/O Tests. Refer to [5.12, "Maintenance – I/O Tests."]
- Alarm List Detail internal information of alarms are displayed. Refer to [5.13, "Maintenance – Alarm List."]
- Backup Data Transfer data between the touch panel teaching pendant and controller. Refer to [5.14, "Maintenance – Data Backup."]
- EnvironmentSet Set the touch sound and other environment specifications. Refer to [5.15, "Maintenance-Environment Setting."]
- Change ax. Select the controller of which the axis is operated with the touch panel teaching pendant [5.5 Operation Axis Change]


5.7 Initial Setting

Select whether to stop at 2 points or 3 points.

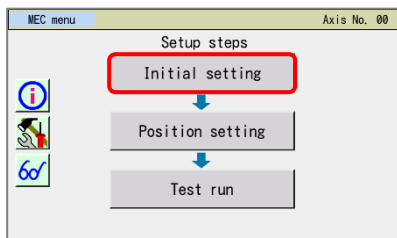

Touch [Initial Setting] on the MEC menu screen.

The password entry screen appears if the system password is other than "0000."

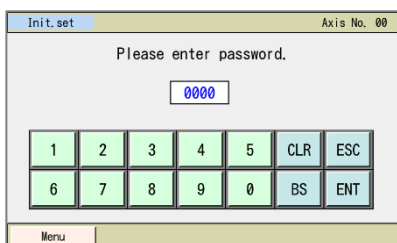


Enter the password and touch [ENT].

The default system password is "5119".
For how to change the system password, refer to 5.11, "Maintenance – Parameters [Change System Password]."

If the valid password has been entered, the display switches to the initial setting screen.

Stopping at 2 points

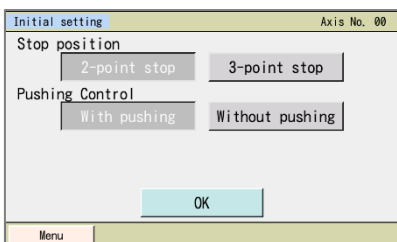



Select and touch either [Two Point] or [Three Point]. To perform positioning operation, select and touch [Pushing None]. To perform push-motion operation, select and touch [Pushing].
To stop at 3 points, select [Both OFF] or [Both ON] as the position specification method.

(Note) Take note that if push-motion operation is performed and therefore [Pushing None] is selected, the completion signal will not be output.

** If [Pushing None] is selected, LS0 and LS1 (LS2) will be used as output signals. If [Pushing] is selected, PE0 and PE1 (PE2) will be used as output signals.*


Stopping at 3 points

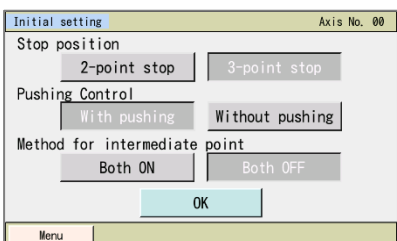

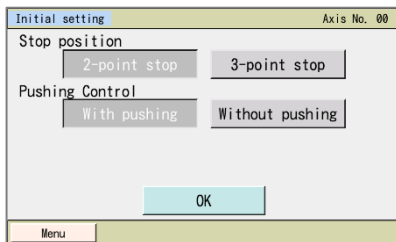

Touch [OK].

Touch [Menu] to return to the MEC menu screen.
All initial settings you have made will be discarded.

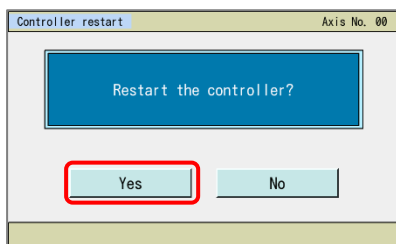


Touch [Yes].

The controller will restart.

After the restart, the controller will operate according to the initial settings you have made.
Return to the MEC menu screen.

If you touch [No], the initial settings you have made will not be reflected until the controller is restarted.

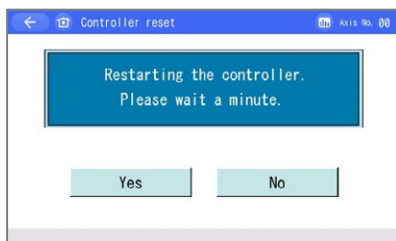

Operation Pattern

PMEC and AMEC and ERC3 (MEC mode) controllers offer two operation patterns. The table below gives an overview of the Operation specification of each pattern. [For the setting methods, refer to the sections on initial setting and stop position setting.]







Operation pattern		Description	Air cylinder circuit (Reference)	How to connect motorized cylinder
Stopping at 2 points (2-point positioning)	Movement by 1 input between 2 points [Single-solenoid mode]	You can move the actuator between 2 points using the same control you would normally use with an air cylinder. You can set the positions of the end point and start point. You can specify the moving speed and acceleration/deceleration. You can also specify push-motion Operation. The actuator moves to the end point when the ST0 turns ON, and returns to the start point when the signal turns OFF.		
	Movement by 2 input between 2 points [Double-solenoid mode]	You can move the actuator between 2 points using the same control you would normally use with an air cylinder. You can set the positions of the end point and start point. You can set the position of an intermediate point and perform positioning to the intermediate point. You can specify the moving speed and acceleration/deceleration. You can also specify push-motion operation. The actuator moves to the end point when the ST1 turns ON, and moves to the start point when the ST0 turns ON.		
Stopping at 3 points (3-point positioning)	Movement by 2 input between 2 points [Double-solenoid mode]	[Intermediate movement mode, both ON] When both the ST0 and ST1 are turned ON, the actuator will position to and stop at an intermediate point. When both the ST0 and ST1 are turned OFF, the actuator will stop in the middle of movement.		
	Movement by 3 input between 3 points [3-point positioning]	[Intermediate movement mode, both OFF] When both the ST0 and ST1 are turned OFF, the actuator will position to and stop at an intermediate point. When both the ST0 and ST1 are turned ON, the actuator will stop in the middle of movement.		


(Note) The air cylinder circuits are drawn with symbols of signals corresponding to those used by PMEC, AMEC and ERC3 (MEC mode) controllers. For details on signals, refer to the "PMEC, AMEC and ERC3 (MEC mode) instruction manual."

[1] Example of initial setting operation

The operation is explained using specific examples.


Example of stopping at 2 points Set as follows.

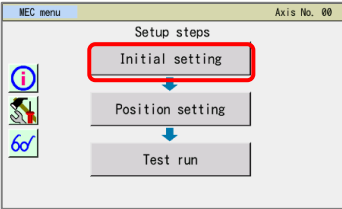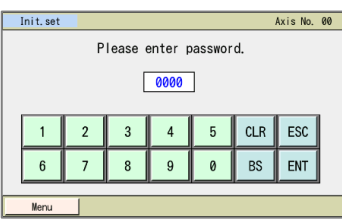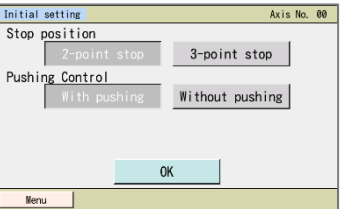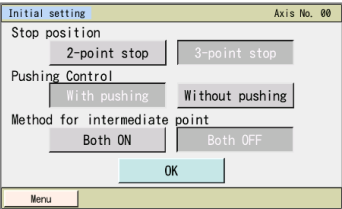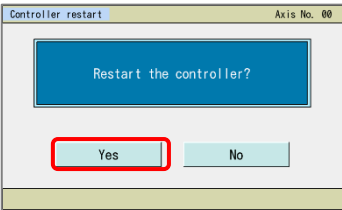No.	Operation	Screen	Remarks
1	Touch [Initial setting] on the MEC menu screen.		
2	If the system password is not "0000," the password entry screen appears. Enter the system password, and then touch [ENT].		The default system password is "5119". For how to change the system password, refer to 5.11, "Maintenance – Parameters [Change System Password]."
3	<ul style="list-style-type: none"> Touch and select either [Two Point] or [Three Point] based on the number of positioning points. To perform positioning operation select [Pushing None]. To perform push-motion operation select [Pushing]. In the case of positioning to the intermediate position in the 3-point stop pattern, select [Both OFF] or [Both ON] for the ST0 and ST1 input signals, and then touch [OK]. 	<p>Stopping at 2 points</p>  <p>Stopping at 3 points</p> 	<p>Touch [Menu] to return to the first MEC menu screen.</p> <p>(Reference) Factory setting Stop position: [Two Point] Push function: [Pushing None] Intermediate point specification method: [Both ON]</p>
4	Touch [Yes].		To make the specified items effective, you must restart the controller. The settings you have made will not be reflected until the controller is restarted. Touch [No] to return to the previous screen.
5			

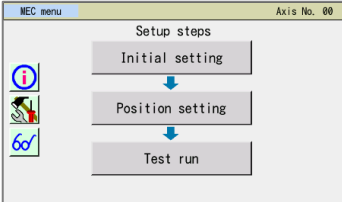No.	Operation	Screen	Remarks
6			Once the controller has restarted, the MEC menu screen appears.


5.8 Position Setting (Position Data Setting and Manual Axis operation (Jogging, Inching))

The position, push force, push band and other position data are set. You can move the actuator by jogging or inching.

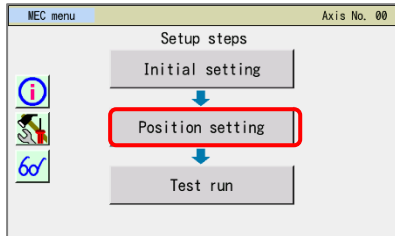

Touch [Position setting] on the MEC menu screen.


The password entry screen appears if the position data edit password is other than "0000."

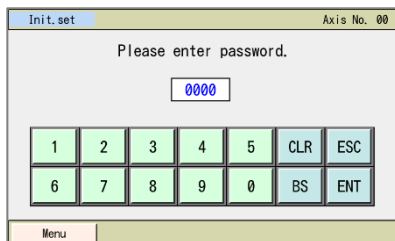

Enter the password and then touch [ENT].

A position data edit password can be set in the "position data edit password" field of the parameter edit screen.

If the valid password has been entered, the display switches to the position setting list screen. The displayed items vary depending on the operation pattern.

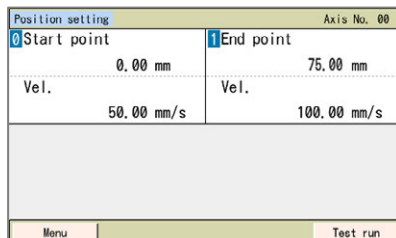

The screen shown to the left is an example of stopping at 2 points.
The set value of each position is shown.
Touch the position you want to set.
Touch [Menu] to return to the MEC menu screen.

Number of positions to be set

Operation pattern	Movement	Number of positions to be set
Stopping at 2 points	Move between 2 points	2
Stopping at 3 points	Move among 3 points	3


Touch the position you want to set, and the target position/speed setting screen of the touched position will appear.
Set the position, speed, push power, push band, accelerate and decelerate.

Touch [Menu] to return to the MEC menu screen.

You can select jog operation from this setting screen.

[1] Position data

Set the position data used to operate the actuator.

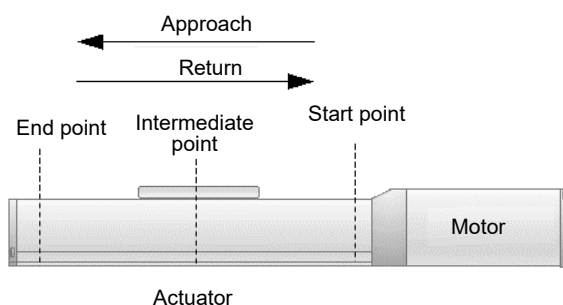

* In the figure, the home is located on the motor side.

Position data

Position data	[1] Position [mm]	[2] Speed [mm/s]	[3] Accelerate [G]	[4] Decelerate [G]	[5] PushPowre [%]	[6] PushBand [mm]	[7] Ecology
[1] End point	200.00	50.00	0.1	0.1	70	1.00	Enabled
[0] Start point	0.00	50.00	0.1	0.1	0	0	Enabled
[2] Intermediate point	100.00	50.00	0.1	0.1	0	0	Enabled

1) Position [mm] ... Set the position to move the actuator to.

The positions must satisfy the following relationships: Start point < Intermediate point < End point

Operation pattern	Move	Positions to be set		
		End point	Start point	Intermediate point
Stopping at 2 points	Move between 2 points	○	○	
Stopping at 3 points	Move among 3 points	○	○	○

2) Speed [mm/s] ... Set the speed of the actuator.


3) Accelerate [G] ... Set the acceleration of the actuator.

The input range permits entry of values greater than what is specified in the catalog.

Refer to the catalog or instruction manual of your actuator.

- 4) Decelerate [G] ··· Set the deceleration (G) at which the actuator stops.

(Reference) Acceleration is explained. The same concept applies to deceleration.
 1 G = 9800 mm/s²: Acceleration at which the actuator can accelerate to up to 9800 mm/s per second
 0.3 G: Acceleration at which the actuator can accelerate to up to 9800 mm/s × 0.3 = 2940 mm/s

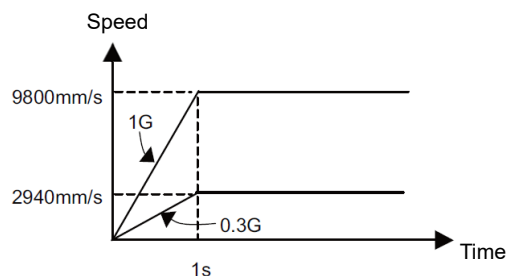

Caution: Setting the acceleration/deceleration

- (1) Make sure the acceleration/deceleration you set does not exceed the rated acceleration/deceleration stated in the catalog or the instruction manual of the actuator. If the rated acceleration/deceleration is exceeded, the life of the actuator may drop significantly.
- (2) If the actuator or work part receives impact or vibrates, lower the acceleration/deceleration. If the actuator is used continuously in such condition, the life of the actuator will drop significantly.
- (3) If the transferable weight is significantly smaller than the rated payload capacity, accelerations/decelerations greater than the rating may be set. You can shorten the tact time this way, so contact IAI if you are interested. When contacting IAI, let us know the weight, shape and installation method of the work part as well as installation condition of the actuator (horizontal/vertical).

- 5) Push power [%] ··· Set the push torque (current-limiting value) to be used in push-motion operation as a percent (%) value.

Increasing the current-limiting value increases the push force.

If "0" is set, positioning operation is performed.

For the relationship of push force and current-limiting value, refer to the catalog or the instruction manual."

- 6) Push band [mm] ··· Set the travel during push-motion operation.


When push-motion operation is performed, the actuator moves at the speed and rated torque set as part of positioning information, just like normal positioning, until the remaining travel enters the range set here. Once the remaining travel enters this range, the actuator moves to the position set in [1] while pushing the load.

The speed of push-motion operation is set in parameter No. 7. Do not use any setting that causes this speed to be exceeded.


If the setting in [2] is less than the push speed, the actuator pushes the work part at the set speed.

How the actuator operates as it pushes the work part toward the end point, start point and intermediate point is illustrated below.

[Pushing toward the end point or intermediate point]

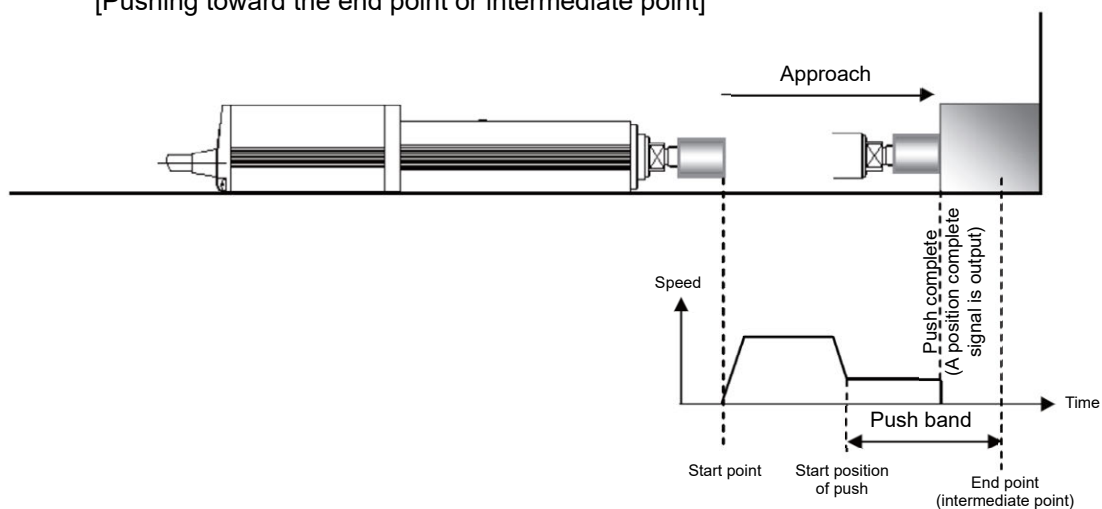

[Pushing toward the start point or intermediate point = Pulling]

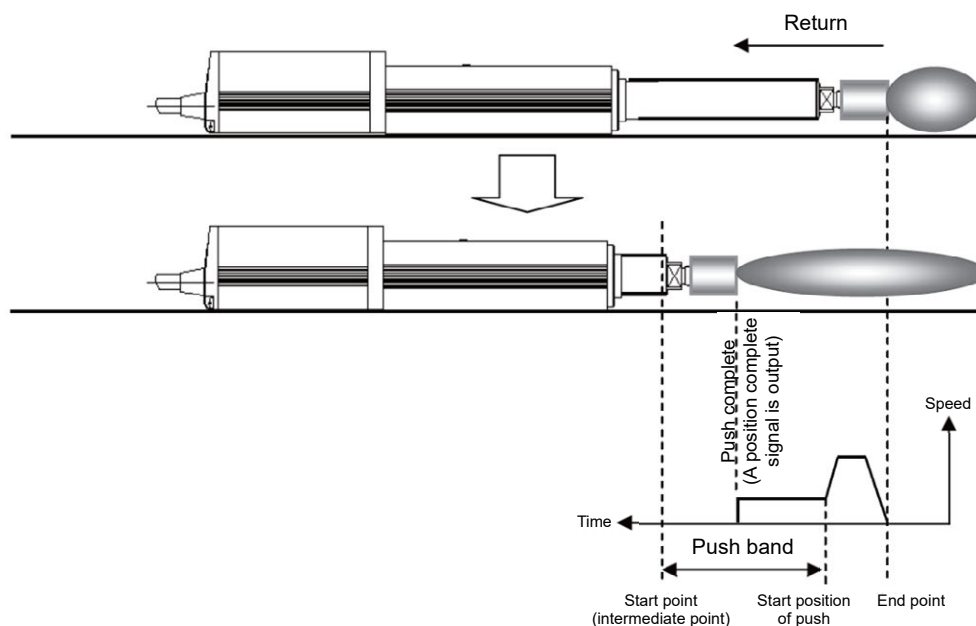


7) Ecology

... When Ecology is enabled, you can have the motor power (servo) turned off automatically upon elapse of a specified period to save power after completion of positioning. Set the applicable period beforehand using a parameter.

Parameter No.	Parameter name	Initial value	Setting range
10	Auto servo OFF delay time [sec]	1	0 to 9999

[Auto motor power (Auto servo) OFF]

The motor power (servo) will turn off automatically upon elapse of a specified period after completion of positioning. When the next positioning command is issued, the motor power (servo) turns on automatically and positioning is performed. Since no holding current flows while the motor is at standstill, power consumption can be reduced.

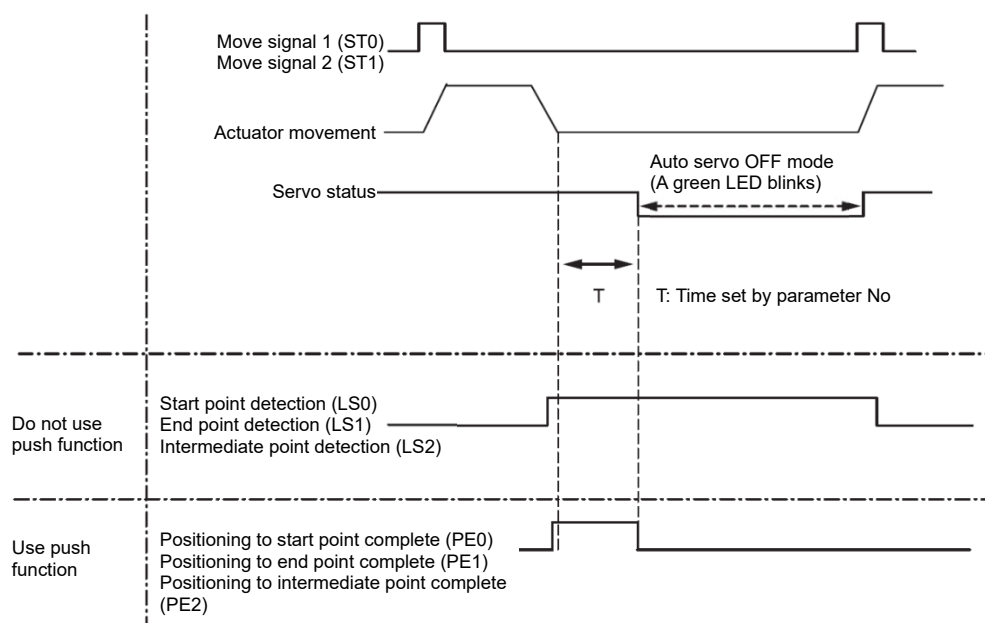

[Statuses of position detection output signals when the push function is not used]

Even when the motor power (servo) is turned off, as long as the actuator is positioned within the positioning band (parameter No. 1) the start point detection signal (LS0), end point detection signal (LS1) or intermediate point detection signal (LS2) will turn ON according to the applicable position, just like when a sensor is used. Accordingly, the position detection signal that has turned ON will remain ON after completion of positioning unless the actuator moves.

[Status of position complete signals when the push function is used]

In push-motion operation, the motor power (servo) does not turn off automatically while the actuator is pushing the work part.

If the actuator has missed the work part, the motor power (servo) turns off automatically. Once the motor power (servo) turns off, a position complete status is lost. Accordingly, the push complete signal 0 (PE0), push complete signal 1 (PE1) and push complete signal 2 (PE2) will all turn OFF regardless of the stop position.

Caution: No holding torque is applied in the auto servo OFF mode. Since the actuator will move in this condition if an external force is applied, pay due attention to contact and safety when setting any operation involving auto motor power (servo) OFF.

[2] Basic operation

Touch the value field of each setting item such as position.

When the numeric keypad is displayed, enter a desired value and then touch [ENT].

Touch either of Start, End or Int and the screen changes to the corresponding setting window for [Fwd], [Back] or [Int].

(Note) The positions must satisfy the following relationships: Home \leq Start position \leq Midway position \leq End position

Touching [Jog] switches to jog operation.

[Manual axis operation (jogging/inching)]

You can load position data via manual axis operation (jogging/inching).

Operation on the manual axis operation (jogging/inching) screen

-
-

While any of these buttons is touched, the axis jogs in the direction of the arrow. The axis moves at 1 mm/s in the low-speed mode, 10 mm/s in the medium-speed mode, or 50 mm/s in the high-speed mode.

Select one of the speed.

While any of these buttons is touched, the axis inches in the direction of the arrow. Select 0.01 mm, 0.1 mm or 1.0 mm as the inching distance.

- [Servo ON]

Touching [Servo ON] when the motor power (servo) is turned off turns on the motor power (servo) and the ○ lamp will become lit. Touching [Servo OFF] when the motor power (servo) is turned on turns off the motor power (servo) and the ○ lamp will become unlit.

- [HOME]

Touching [HOME] before the home return is completed causes the axis to return home and the ○ lamp will become lit.

Position loading operation

Touch [Teach]. The confirmation screen appears.







You can change the position number by touching [↑]/[↓].








Touching [Yes] loads the current position.








The screenshot shows a software interface titled 'Conf' with a sub-header 'Axis No. 00'. It contains three data fields: 'Position No.' with the value '0', 'Target position' with '0.00 mm', and 'Current position' with '30.00 mm'. To the right of these fields are two vertically stacked buttons with upward and downward arrows. Below the data fields is a large blue rectangular button labeled 'Teach pos. ?'. At the bottom of the screen are two light blue buttons labeled 'Yes' and 'No'.





[3] Example of position setting operation
The operation is explained using specific examples.


- 1) Setting the position, speed, acceleration and deceleration
An example of stopping at 2 points is explained.
Positions are set to operate the actuator back and forth between 10.0 mm and 100.0 mm.
End position: 100.0 mm, Start position: 10.0 mm

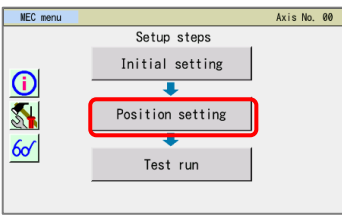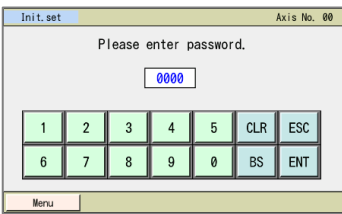
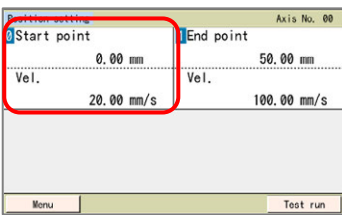
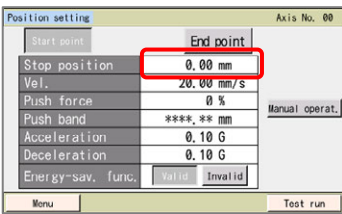
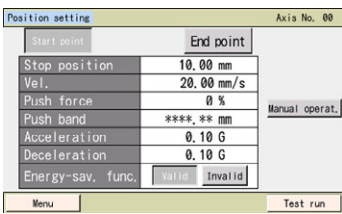
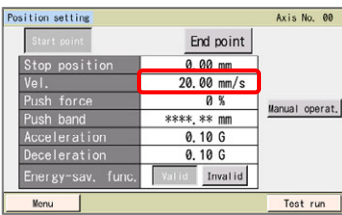

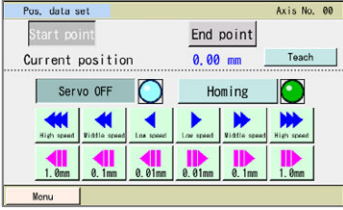


No.	Operation	Screen	Remarks
1	Touch [Position setting] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [start point].		Touch [Menu] to return to the MEC menu screen.
4	Touch the value field of position. When the numeric keypad is displayed, touch [1], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
5	"10.00" appears next to "Position."		Touch [Menu] to return to the position setting screen.
6	Touch the value field of velocity. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.

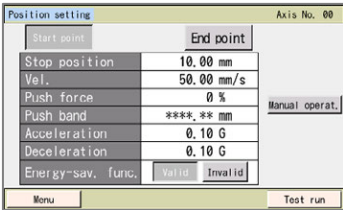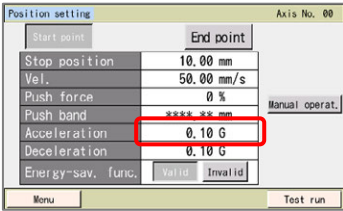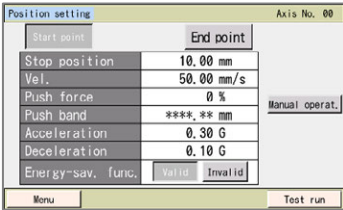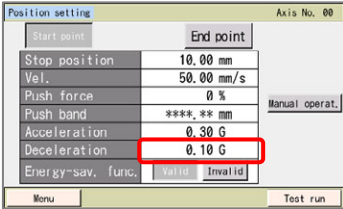
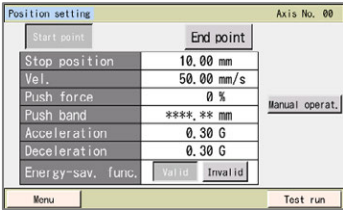
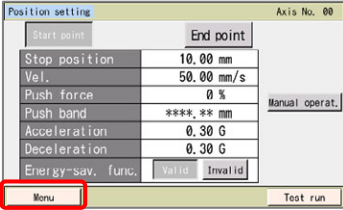
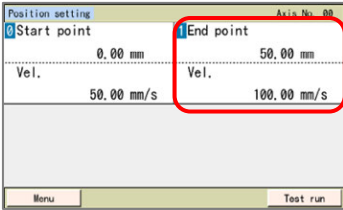
No.	Operation	Screen	Remarks
7	"50.00" is shown in the speed field.		Touch [Menu] to return to the position setting screen.
8	Touch the value field of acceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
9	"0.30" is shown in the acceleration field.		Touch [Menu] to return to the position setting screen.
10	Touch the value field of deceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
11	"0.30" is shown in the deceleration field.		Touch [Menu] to return to the position setting screen.
12	Touch [Menu].		
13	Set the position relating to the end point, acceleration, and deceleration. Touch [End point].		Touch [Menu] to return to the MEC menu screen.

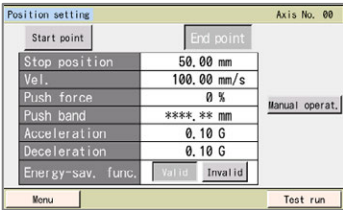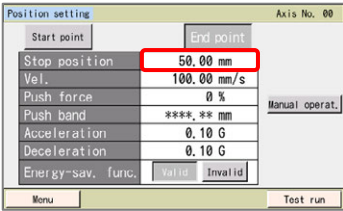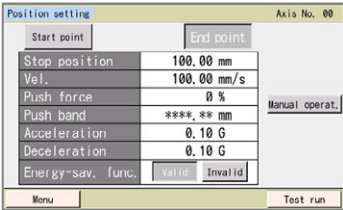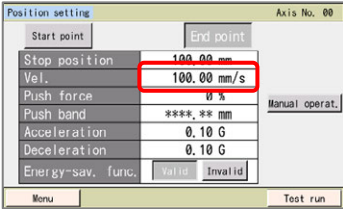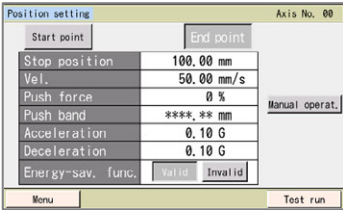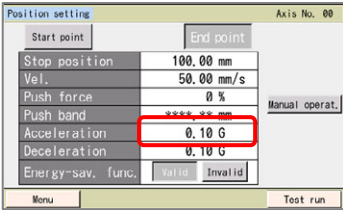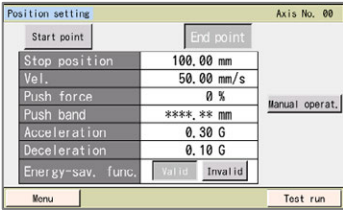No.	Operation	Screen	Remarks
14	The display switches to the end point screen. Set the position relating to the end point, acceleration, and deceleration.		Touch [Menu] to return to the position setting screen.
15	Touch the value field of position. When the numeric keypad is displayed, touch [1], [0], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
16	"100.00" is shown in the position field.		Touch [Menu] to return to the position setting screen.
17	Touch the value field of velocity. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
18	"50.00" is shown in the speed field.		Touch [Menu] to return to the position setting screen.
19	Touch the value field of acceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
20	"0.30" is shown in the acceleration field.		Touch [Menu] to return to the position setting screen.



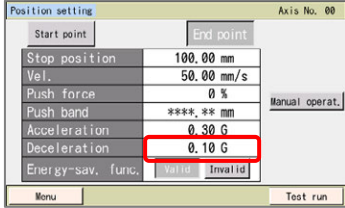
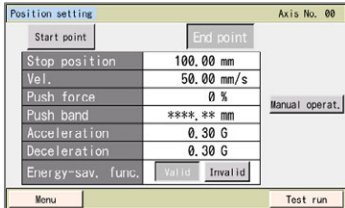
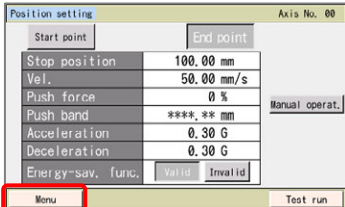
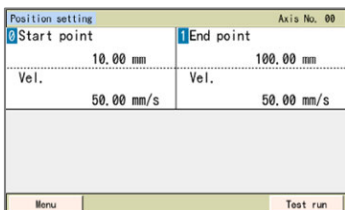
No.	Operation	Screen	Remarks
21	Touch the value field of deceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen.
22	"0.30" is shown in the deceleration field.		Touch [Menu] to return to the position setting screen.
23	Touch [Menu].		Touch [Menu] to return to the position setting screen.
24			Touch [Menu] to return to the MEC menu screen.




- 2) Manual axis operation (jogging/inching) (Using , jog/inch the actuator to the target position, and then loading the achieved position (current position) as the end point or start point)
An example of stopping at 2 points is explained.
How to load the current position of 80.0 mm as the start point is explained.

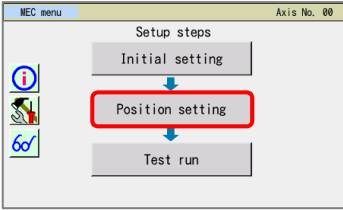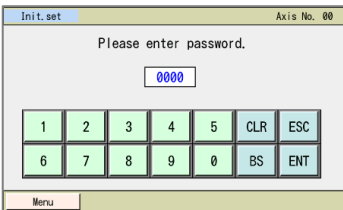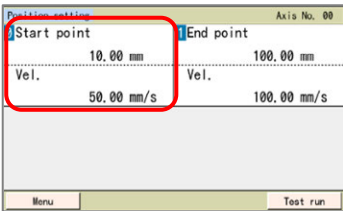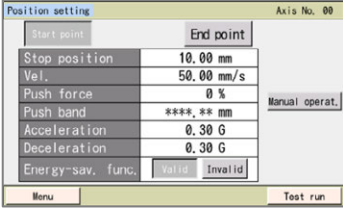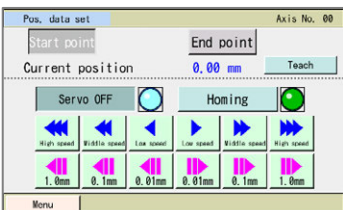No.	Operation	Screen	Remarks
1	Touch [Position setting] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit password" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Start point].		Touch [Menu] to return to the MEC menu screen.
4	Touch [Manual operat.].		Touch [Menu] to return to the position setting screen.
5	If the motor power (servo) is currently OFF, touch [Servo ON] to turn ON the motor power (servo).		* If home return is not yet complete, perform home return first.
6	Use  to move the slider or rod to the target position of 80.0 mm.		<ul style="list-style-type: none"> • Jogging Touch any of , and the axis will move and continue moving. • Inching Touch any of , and the axis will move by the distance corresponding to the button you have touched.



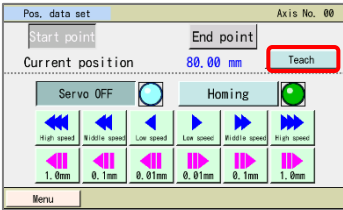
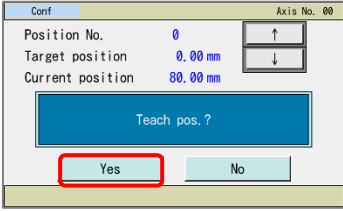
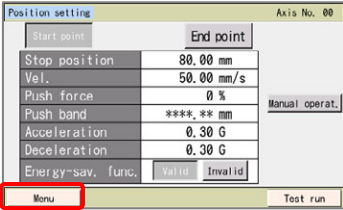
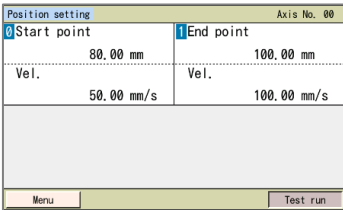
No.	Operation	Screen	Remarks
7	Touch [Teach].		
8	Touch [Yes].		
9	<p>"80.00" is shown in the Stop position field. This confirms that the position data has been loaded.</p> <p>Touch [Menu].</p>		Touch [Menu] to return to the position setting screen.
10	Return to the position setting screen.		Touch [Menu] to return to the MEC menu screen.




- 3) Direct teaching (Moving the slider by hand to the target position, and then loading the achieved position (current position) as the end point or start point)
An example of stopping at 2 points is explained.
How to load the current position of 50.00 mm as the start point is explained.

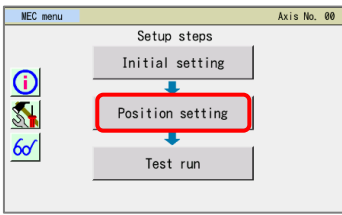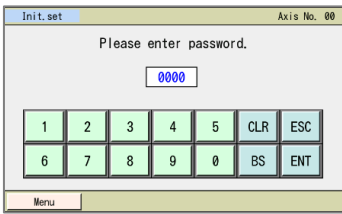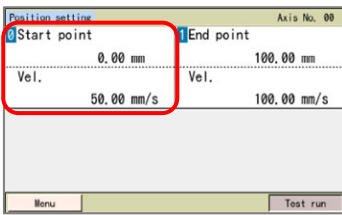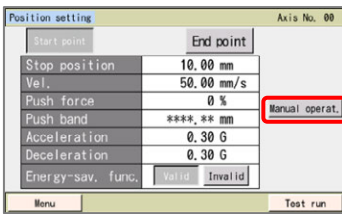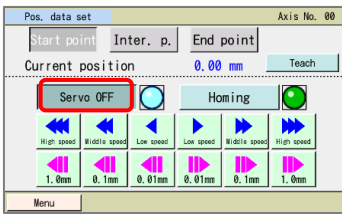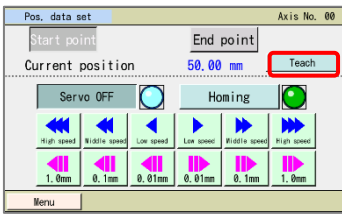No.	Operation	Screen	Remarks
1	Touch [Position setting] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit password" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Start point].		Touch [Menu] to return to the MEC menu screen.
4	Touch [Manual operat.].		Touch [Menu] to return to the position setting screen.
5	If the motor power (servo) is currently ON, touch [Servo ON] to turn OFF the motor power (servo).		* If home return is not yet complete, perform home return first.
6	Move the slider or rod by hand to the target position of 50.00 mm. Touch [Teach].		

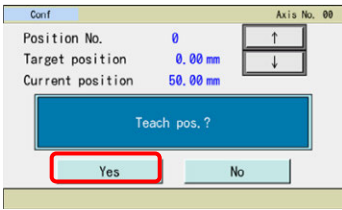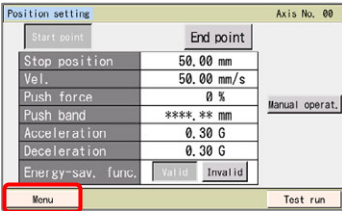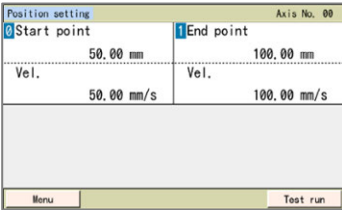
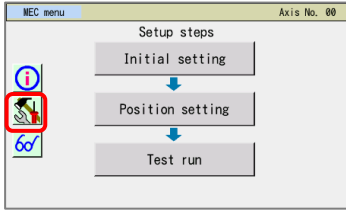
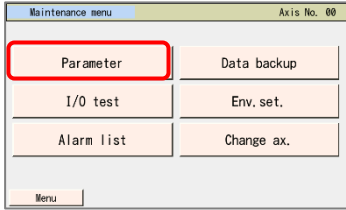
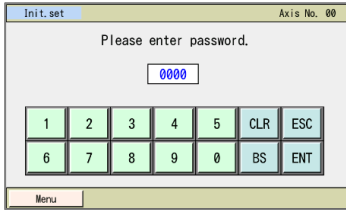
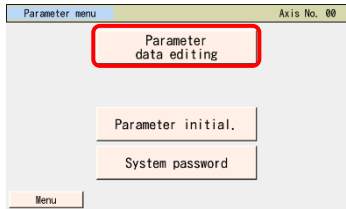
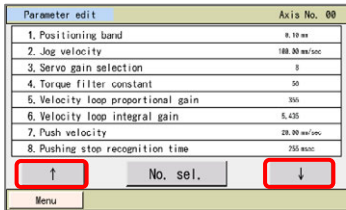
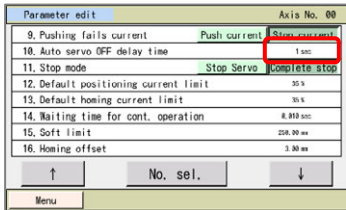
No.	Operation	Screen	Remarks
7	Touch [Yes].		
8	<p>"50.00" is shown in the Stop position field. This confirms that the position data has been loaded.</p> <p>Touch [Menu].</p>		
9	Return to the position setting screen.		Touch [Menu] to return to the position setting screen.





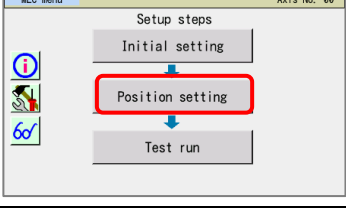
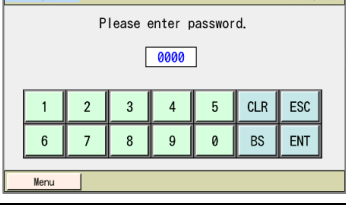
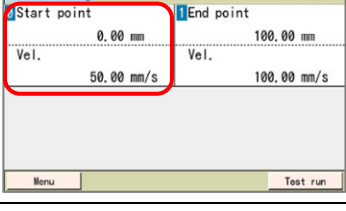
- 4) Setting for push-motion operation (push force, push band)
 An example of stopping at 2 points is explained.
 In this example, push-motion operation is performed at the start point.
 Push force: 50%, Push band: 5.0 mm


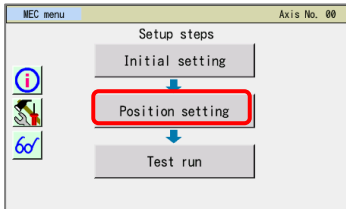
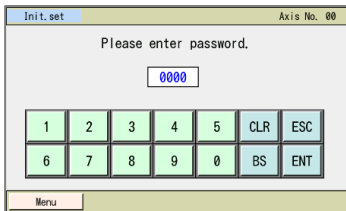
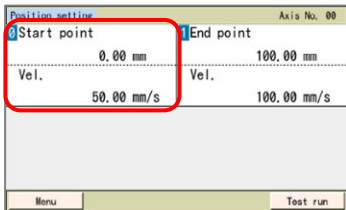
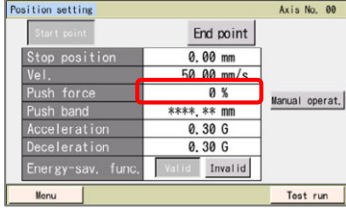
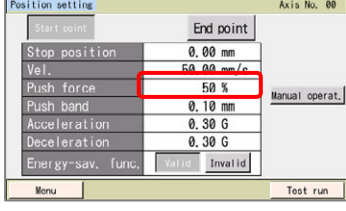
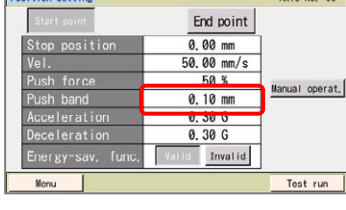
No.	Operation	Screen	Remarks
1	Touch [Position setting] on the MEC menu screen.		
2	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit password" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Start point].		Touch [Menu] to return to the MEC menu screen.
4	Touch the value field of [PushPower]. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen.
5	"50.00" is shown in the push power field.		Touch [Menu] to return to the position setting screen.
6	Touch the value field of [PushBand]. When the numeric keypad is displayed, touch [5] and then [ENT].		Touch [Menu] to return to the position setting screen.

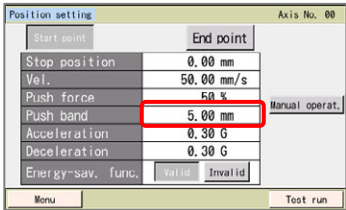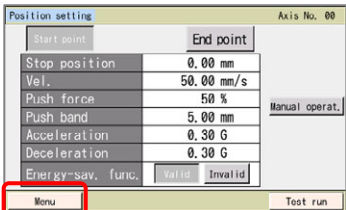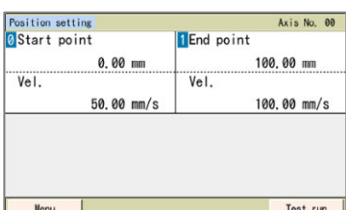No.	Operation	Screen	Remarks
7	"5.00" is shown in the push band field.		Touch [Menu] to return to the position setting screen.
8	Touch [Menu].		Touch [Menu] to return to the position setting screen.
9			Touch [Menu] to return to the MEC menu screen.

- 5) Setting the energy-saving function (auto motor power (auto servo) OFF function)
 An example of stopping at 2 points is explained.
 How to automatically turn off the servo in 5.0 seconds after stopping is explained.


No.	Operation	Screen	Remarks
1	Touch  on the MEC menu screen.		
2	Set the auto motor power (auto servo) OFF delay time. Touch [Parameter].		
3	If the system password is other than "0000," the password input screen appears. Input a system password and touch [ENT].		The default system password is "5119". For how to change the system password, refer to 5.11, "Maintenance – Parameters [Change System Password]."
4	Touch [Parameter data editing].		
5	Touch [↑]/[↓] to navigate through the screens until the auto servo OFF delay time setting screen appears.		
6	Touch the value field of auto servo OFF delay time. When the numeric keypad is displayed, touch [5] and then [ENT].		

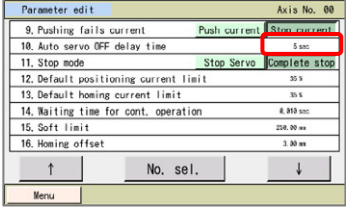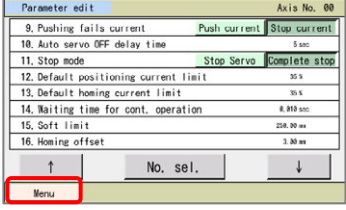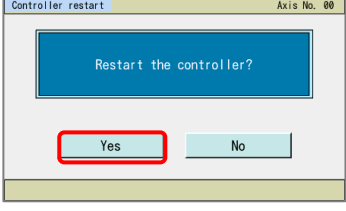No.	Operation	Screen	Remarks
7	"5" is shown.		
8	Touch [Menu].		
9	Touch [Yes].		If you touch [No], the settings you have made will not be reflected until the controller is restarted.
10			
11	The controller is restarted and the MEC menu screen appears. Touch [Position setting].		
12	If the position data edit password is not "0000," the password entry screen appears. Enter the position data edit password and touch [ENT].		A position data edit password can be set in the "position data edit password" field of the parameter edit screen.
13	Set the energy-saving function at the start point. Touch [Start point].		Touch [Menu] to return to the MEC menu screen.

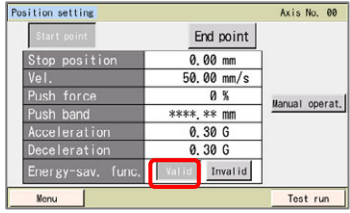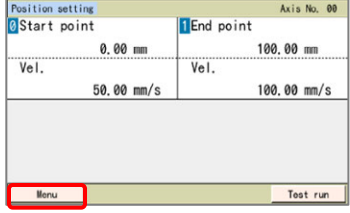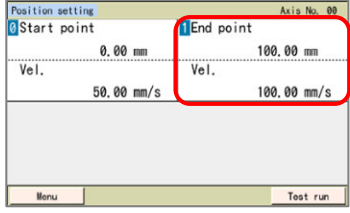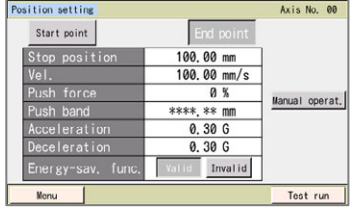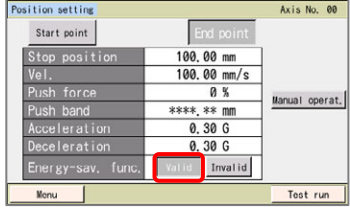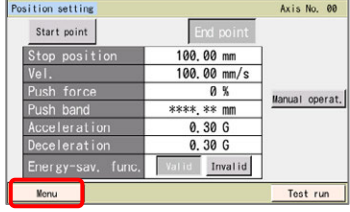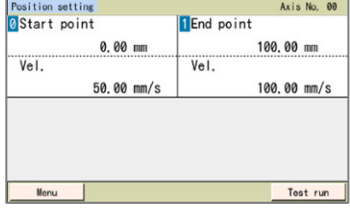No.	Operation	Screen	Remarks
14	Touch [Valid].		Touch [Menu] to return to the position setting screen.
15	Touch [Menu].		Touch [Menu] to return to the MEC menu screen.
16	Set the energy-saving function at the end point. Touch [End point].		Touch [Menu] to return to the MEC menu screen.
17	The display switches to the end point screen. Set the energy-saving function relating to the end point.		Touch [Menu] to return to the position setting screen.
18	Touch [Valid].		Touch [Menu] to return to the position setting screen.
19	Touch [Menu].		Touch [Menu] to return to the position setting screen.
20			Touch [Menu] to return to the MEC menu screen.

5.9 Trial Operation



You can perform I/O tests and axis movement operation tests.

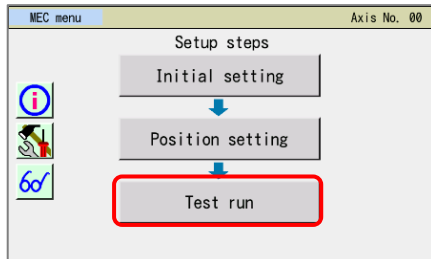


Touch [Test run] on the MEC menu screen.

- Operation test: You can perform operation tests of axis movement.
A screen corresponding to the operation pattern you have selected appears.
The display can be switched between the normal mode and reversed-home mode.
If your actuator is of the reversed-home specification, you can switch to the reversed-home mode to align the display with the actual actuator.



Stopping at 2 points

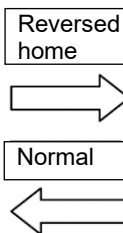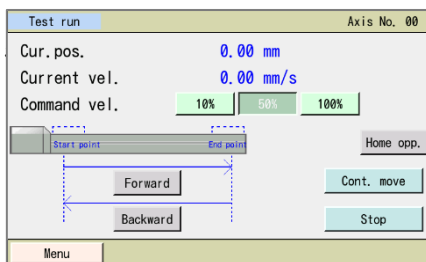


Stopping at 2 points (Reversed home)

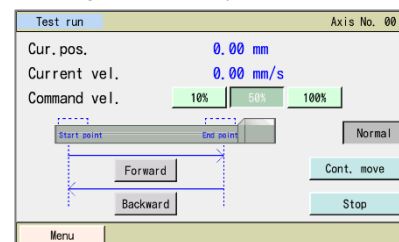


Stopping at 3 points

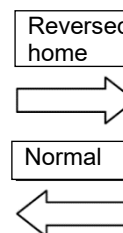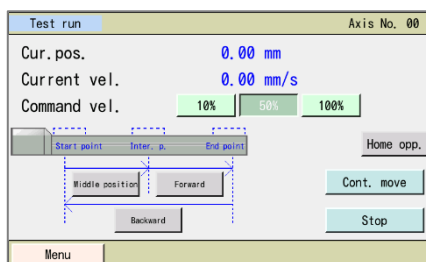

Stopping at 3 points (Reversed home)

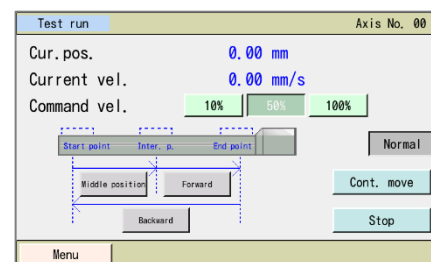

The operating direction is shown by using an example of stopping at 2 points.

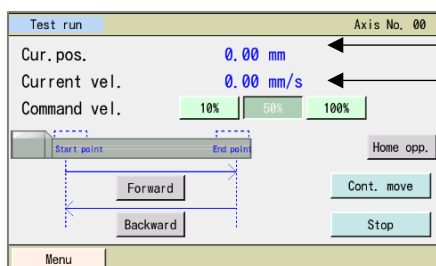


The current position of the axis is shown.


The speed of the axis is shown.

- **Instruction Vel:** Select [10%], [50%] or [100%] as the speed for trial operation. If the speed set on the position setting screen is 600 mm/s, for example, the trial Operation speed will become 600 mm/s if [100%] is selected, 300 mm/s if [50%] is selected, or 60 mm/s if [10%] is selected.
- **Forward:** Touching [Forward] causes the actuator to move toward the end point.
- **Backward:** Touching [Backward] causes the actuator to move toward the start point.
- **Continuous:** Touching [Continuous] causes the actuator to move continuously until [Stop] is touched.
If the actuator is set to stop at 2 points, it will move between the start point and end point repeatedly.
If the actuator is set to stop at 3 points, it will move in the sequence of intermediate point → end point → start point repeatedly.
- **Stop:** Touching [Stop] causes the actuator to stop.
- **Opp, Normal:** Touching [Opp] or [Normal] toggles the display mode between normal and reversed-home.


5.10 Information

The operation pattern, version and other information are shown.

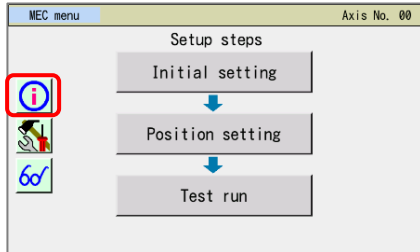

Touch  on the MEC menu screen.

The information selection screen appears.

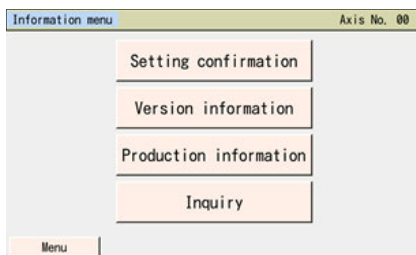


Touch the screen you want to display.
Touch [Menu] to return to the MEC menu screen.


[Setting check]

You can check the operation pattern, operation mode and other information currently set.

(Stopping at 2 points)

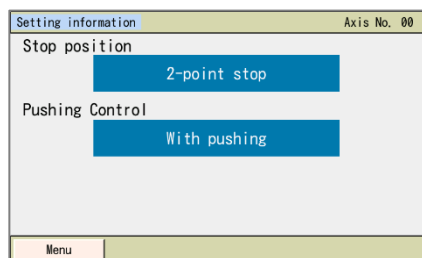

(Stopping at 3 points)

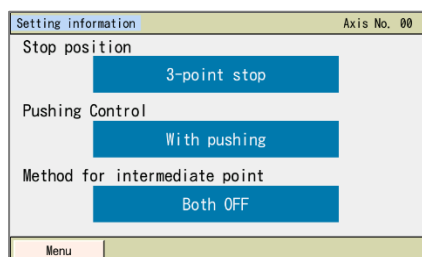

[Version/manufacturing information]

You can check the version information, etc.

Version information		Axis No. 00
Series / Type	PMEC-IP	
Controller version	AE210002	
Controller core version	AE840001	
TP version	Ver. 2.81	
TP core version	Ver. 1.00	
MEC panel version	AS00FFFA	
MEC panel board core ver.	AS000000	

Menu Edit Axis Name Teaching update

[Manufacturing information]

You can check the serial numbers and other manufacturing information.

Production information		Axis No. 00
Controller S/N	000059312	
Controller PCB revision	M.REV: 0	
	F.REV: 0	
Actuator S/N	*	

Menu


[Contact]


You can check the contact information of IAI.


Inquiry
IAI customer support center
"EIGHT"
0800-888-0088
24-hour-support!
(Weekends and holidays: 8:00AM to 5:00PM)
http://www.iai-robot.co.jp/

5.11 Maintenance – Parameters

Set the parameters and axis number. You can change the system password and reset all parameters to their factory defaults.

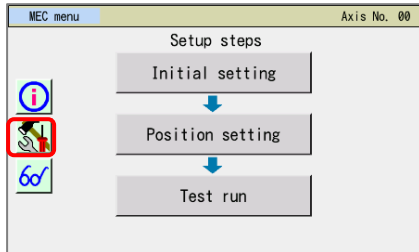


Touch  on the MEC menu screen.

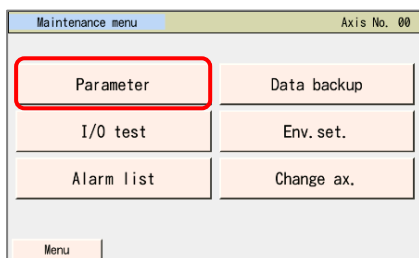

Touch [Parameter].
Touch [Menu] to return to the MEC menu screen.


The password entry screen appears if the system password is other than “0000.”

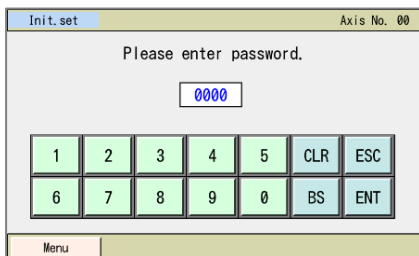

Enter the password and then touch [ENT].

The default system password is “5119”.
For how to change the system password, refer to 5.11, “Maintenance – Parameters [Change System Password].”

A desired password can be set using the “system password” parameter accessible from the maintenance menu.

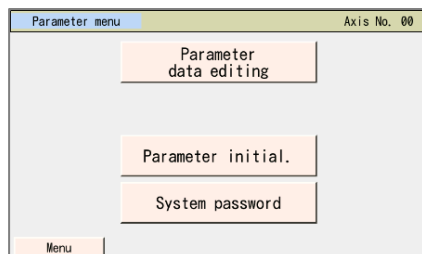

Select and touch [Parameter data editing], [Parameter initial] or [System password].

A screen corresponding to the menu you have selected appears.

- **Parameter edit** : You can set 24 parameters.

Parameter edit		Axis No. 00
1. Positioning band	6.10 mm	
2. Jog velocity	100.00 mm/sec	
3. Servo gain selection	8	
4. Torque filter constant	56	
5. Velocity loop proportional gain	355	
6. Velocity loop integral gain	5.439	
7. Push velocity	20.00 mm/sec	
8. Pushing stop recognition time	255 msec	
<input type="button" value="↑"/> <input type="button" value="No. sel."/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

- **Parameter initialization** : You can reset all parameters to their factory defaults (initialize the parameters).

Initial setting		Axis No. 00
<div style="border: 1px solid black; padding: 10px; background-color: #0070C0; color: white; margin: 10px auto; width: 80%;"> Change the initial factory settings? </div>		
<input type="button" value="Yes"/> <input type="button" value="No"/>		

- **System password change** : You can change the parameter edit password, etc.

System password change															
New password : 5119															
<table border="1" style="width: 100%; text-align: center;"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>CLR</td><td>ESC</td> </tr> <tr> <td>6</td><td>7</td><td>8</td><td>9</td><td>0</td><td>BS</td><td>ENT</td> </tr> </table>	1	2	3	4	5	CLR	ESC	6	7	8	9	0	BS	ENT	
1	2	3	4	5	CLR	ESC									
6	7	8	9	0	BS	ENT									
<input type="button" value="Menu"/>															

[1] Types of parameter editing

For details on each parameter, refer to the instruction manual for your P MEC/AMEC controller and ERC3 (MEC mode).

No.1 (Positioning band)

Set the positioning band.

No.2 (Jog speed)

Set the speed of jog operation.

No.3 (Servo gain number)

Set the servo gain number that determines the response of position control loops in servo control.

No.4 (Torque filter constant)

Set the torque filter time constant that determines the filter time constant for torque commands in servo control.

No.5 (Speed loop proportional gain)

Set the speed loop proportional gain that determines the response of speed control loops in servo control.

No.6 (Speed loop integral gain)

Set the speed loop integral gain that determines the response of speed control loops in servo control.

No.7 (Push speed)

Set the speed of push-motion operation.

No.8 (Push recognition time)

Set the push recognition time to recognize completion of operation after the work part was contacted in push-motion operation.

No.9 (Pushing fails current)

Set whether to use the push current or stop current as the current limiting value when the work part was missed in push-motion operation.

For AMEC, if the stop current is selected when the work part was missed in push-motion operation, the torque limit at the travel current limiting value is set.

No.10 (Auto servo OFF delay time)

Set the time until the auto motor power (auto servo) turns off automatically when the ecology function is enabled.

No.11 (Stop mode) Displayed for P MEC, ERC3 (MEC mode) controllers

Set whether to implement servo stop based on the full servo control method or complete stop without full servo control when the actuator stops.

(Note) When this parameter is changed, the new setting will not be reflected until the position data is written to the controller again.

No.12 (Current limiting value while stopped after positioning) Displayed for P MEC, ERC3 (MEC mode) controller

Set the current limiting value to be applied while the actuator is stopped after positioning.

No.13 (Current limiting value during home return)

Set the current limiting value to be applied during home return operation.

No.14 (Position execution wait time during continuous operation)

This parameter is not used with PMEC, AMEC and ERC3 (MEC mode) controllers.

No.15 (Soft limit)

Set the positive soft limit.

No.16 (Home return offset)

Set the offset for home return.

No.17 (Home return direction)

Set whether to perform home return in the motor direction or front side direction.

The home return direction cannot be changed for some actuators, such as rod-type actuators.

No.18 (Position edit password)

Set the password for editing position data.

No.46 (PIO Inching distance) Displayed for ERC3

Set the inching distance for when conducting the inching operation in Quick Teach.

No.147 (Target value for total number of movements) Displayed for ERC3

Set the threshold for total number of movements.

The total number of the actuator operation is counted in the maintenance function of ERC3.

An alarm is generated when the total operation distance exceeds the value set to threshold for total number of movements.

No.148 (Target value for total travelled distance) Displayed for ERC3

Set the threshold for total travelled distance.

The total travelled distance of the actuator operation is counted in the maintenance function of ERC3.

An alarm is generated when the total operation distance exceeds the value set to threshold for total travelled distance.

No.152 (High Output Setting) Displayed for ERC3

Set whether to use the high output function. Enabling: Set to use the high output function.

No.153 (BU Speed Loop Proportional Gain) Displayed for ERC3

When the high output setting is activated, this parameter setting becomes effective for the speed loop proportional gain.

No.154 (BU Speed Loop Integral Gain) Displayed for ERC3

When the high output setting is activated, this parameter setting becomes effective for the speed loop integral gain.

- [2] Basic operation
Set parameters.

[Parameter]

Parameter edit	Axis No. 00
1. Positioning band	0.10 mm
2. Jog velocity	100.00 mm/sec
3. Servo gain selection	8
4. Torque filter constant	50
5. Velocity loop proportional gain	355
6. Velocity loop integral gain	5.435
7. Push velocity	20.00 mm/sec
8. Pushing stop recognition time	255 msec
↑	No. sel.
↓	
Menu	

Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Three screens are available, including one showing the default positioning band and others used to edit position data and password.

Touch [Menu] to return to the parameter menu screen.

An example of setting a soft limit is explained.

Touch [↑] and [↓] on the displayed screen until the soft limit setting screen appears.

Parameter edit		Axis No. 00
9. Pushing fails current	Push current	Stop current
10. Auto servo OFF delay time	1 sec	
11. Stop mode	Stop Servo	Complete stop
12. Default positioning current limit	35 %	
13. Default homing current limit	35 %	
14. Waiting time for cont. operation	8.818 sec	
15. Soft limit	250.00 mm	
16. Homing offset	3.00 mm	

↑ No. sel. ↓

Menu

Touch the current value.

When the numeric keypad appears, enter a desired value and then touch [ENT].

Parameter edit		Axis No. 00
9. Pushing fails current	Push current	Stop current
10. Auto servo OFF delay time	1 sec	
11. Stop mode	Stop Servo	Complete stop
12. Default positioning current limit	35 %	
13. Default homing current limit	35 %	
14. Waiting time for cont. operation	8.818 sec	
15. Soft limit	250.00 mm	
16. Homing offset	3.00 mm	

↑ No. sel. ↓

Menu

Change parameters and touch [Menu] to return to the controller restart screen.

Controller restart

Axis No. 00

Restart the controller?

Yes No

Touch [Yes].

The controller is restarted.

The controller operates according to the operation pattern settings you have made.

The display returns to the initial setting screen.

Touch [No], and the controller will not operate according to the operation pattern parameters you have set until restarted.

← Controller reset


Axis No. 00

Restarting the controller.
Please wait a minute.

Yes No


[Init Parameter]

The parameters are reset to their factory default settings.

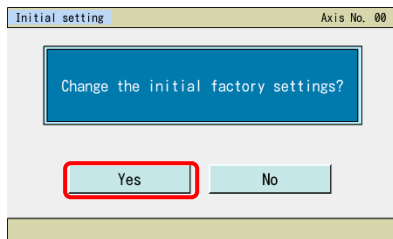

Touch [Yes].


Touch [No] to return to the parameter menu screen without resetting the parameters to their factory default settings.

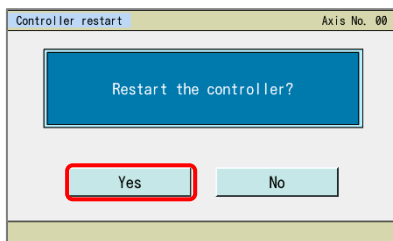

Touch [Yes].

The controller is restarted.
The controller operates according to the factory-set parameters.
The display returns to the initial setting screen.

Touch [No], and the controller will not operate according to the factory-set parameters until restarted.

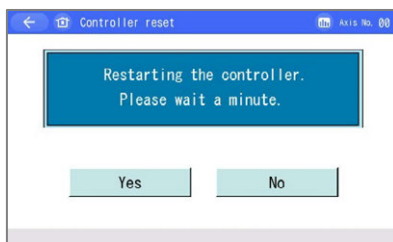

[Change System Password] Change the system password.

System password change

New password : 0000

1	2	3	4	5	CLR	ESC
6	7	8	9	0	BS	ENT

Menu

Enter the new system password to change to.
If you do not set the system password, enter 0000.

Touch [ENT].

System password change

New password : 5119

Change

Menu

Touch [Change].

Information

System password change complete.

New password : 5119

OK

The system password changes.

Touch [OK] to return to the parameter menu screen.

Parameter menu

Axis No. 00

Parameter data editing


Parameter initial.


System password


Menu

5.12 Maintenance – I/O Tests


You can monitor PIO input signals.
Output signals can be forcibly turned ON or OFF.

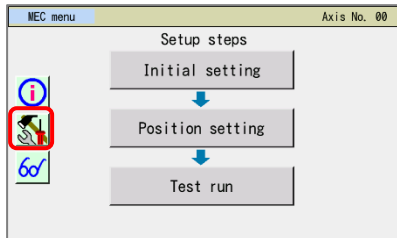

Touch  on the MEC menu screen.

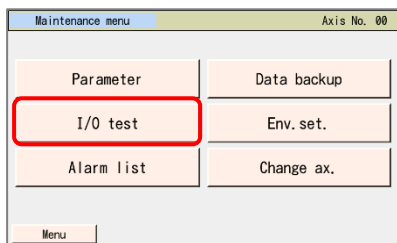

Touch [I/O test].
Touch [Menu] to return to the MEC menu screen.

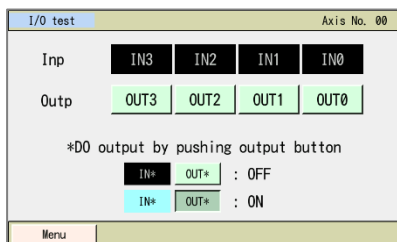


You can monitor the ON/OFF statuses of input signals.


Output signals OUT0 to OUT3 can be forcibly output by touching each signal button.


Touch [Menu] to return to the maintenance menu screen.

5.13 Maintenance – Alarm List

A list of alarms that have generated after the controller power was turned on is displayed. Refer to [9, “Error Display” for the details of alarms.]

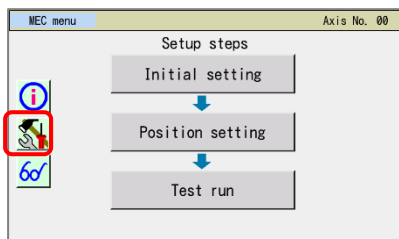

Touch  on the MEC menu screen.

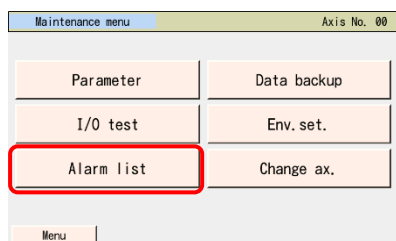

Touch [Alarm list].

Touch [Menu] to return to the MEC menu screen.

The alarm list of the controller is displayed.

Controller without the calendar function

Controller alarm list					
Axis No. 00					
No	Code	Message	Address	Detail	Time of occurrence
00	FFF	PowerUP No Error	****	****	-----
01	0E9	A disconnect	****	****	0:24:07
02	0E8	A,B disconnect	****	****	0:00:04
03	FFF	PowerUP No Error	****	****	-----
04			****	****	
05			****	****	
06			****	****	
07			****	****	

↓

Clear

Menu

Touch [↓] to display the list of the next screen.

Controller alarm list					
Axis No. 00					
No	Code	Message	Address	Detail	Time of occurrence
08			****	****	0:00:00
09			****	****	0:00:00
10			****	****	0:00:00
11			****	****	0:00:00
12			****	****	0:00:00
13			****	****	0:00:00
14			****	****	0:00:00
15			****	****	0:00:00

↑

Clear

Menu

Touch [↑] to display the list of the previous screen.

Touch [Clear], and the details of all alarms will be cleared.

(Note) *PowerUP No Error indicates that the controller power was turned on. It does not indicate an error.
The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.*

Controller with the calendar function

Controller Alarm List				Axis No. 00
No	Alarm Code	Address	Time(yy/mm/dd hh:mm:ss)	
		Detail Code	Message	
00	FFF	****	11/08/03 18:32:13	
		****	PowerUP No Error	
01	0E8	****	11/08/03 17:21:22	
		****	A,B disconnect	
02	FFF	****	11/08/03 17:15:12	
		****	PowerUP No Error	
03	0E8	****	11/08/03 17:14:17	
		****	A,B disconnect	
<div> <div>↑</div> <div>↓</div> <div>Clear</div> </div>				
Menu				

Touching [↑] displays the list of the previous screen.

Touching [↓] displays the list of the next screen.

Touching [Clear] clears all alarms.

(Note) "PowerUP No Error" indicates that the controller power was turned on. The occurrence time corresponds to the time each alarm occurred.

5.14 Maintenance, Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

It is not applicable to the backup data storable in the MEC PC software.

Please note that MEC PC Software cannot deal with individual position data and parameters.

(Note) Extensions of the Stored Data

- *The file extensions for AMEC Controllers to be stored in the Secure Digital card are ptam for the position data and pram for the parameters. The position data extension for PMEC controllers is ptpm and the parameters extension is prpm.*
- *The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.*

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file selection at the initial setting or when restoring.


If the folder does not exist, it is automatically created.


- *Position Data : \TB_CON\Position\File Name*
- *Parameter : \TB_CON\Parameter\File Name*
- *Alarm List : \TB_CON\Alarmlist\File Name*


(Note) Files with Chinese names are not supported.

5.14.1 Data Backup of the Controller

The data in the controller is transferred to the Secure Digital memory card for backup.

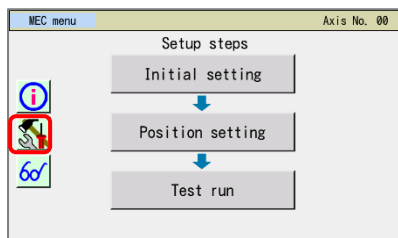


Touch  on the MEC Menu screen.

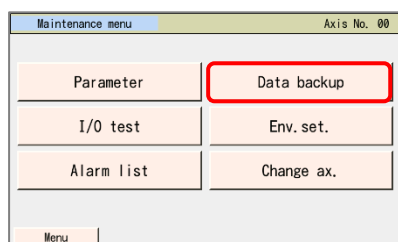

Touch [Data backup].

Touch [Menu] to return to the MEC menu screen.


A screen for data transfer appears.

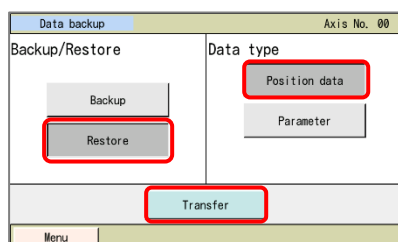

Touch [Restore].


Select the data type for the backup such as [Position data] and touch it.

Touch [Transfer].

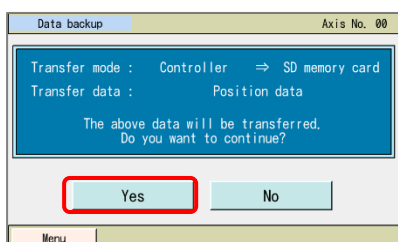

Touch [Yes].


If [No] is touched, the screen goes back to the data backup screen.

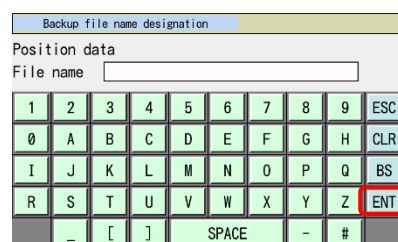


Numeric keys show up. Input a file name.

The file name is to be typed with 32 characters at maximum in letters and numbers.

Input a name and touch [ENT].

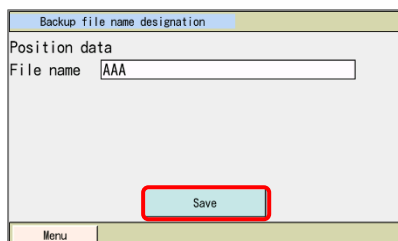


Touch [Save].

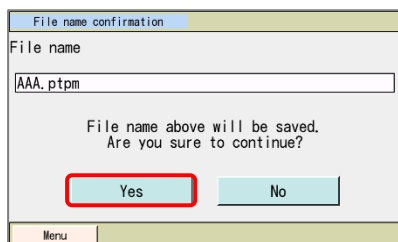

The screen below appears if the same name is not found.

Touch [Yes].


If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

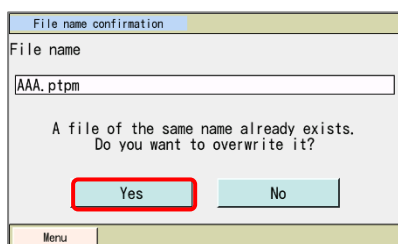


The screen below appears if the same name is found.

Touch [Yes].

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

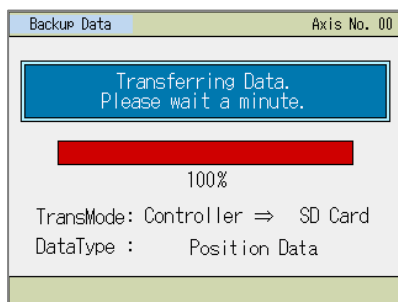

Data transfer screen will be shown.

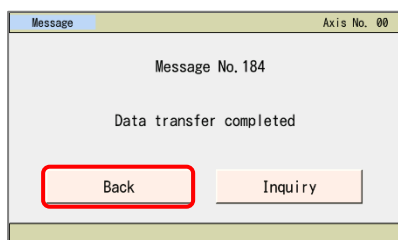



A message to tell the data transfer is complete pops up and the backup process is finished.


Touching [Back] can go back to the Backup Data screen.

5.14.2 Restore to Controller

Data in the Secure Digital card is transferred to the controller.

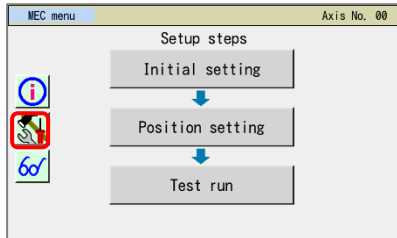


Touch  on the MEC menu screen.

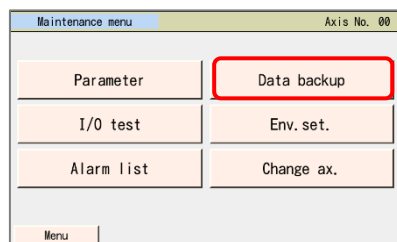

Touch [Data backup]

Touch [Menu] to return to the MEC menu screen.


A screen for data transfer appears.

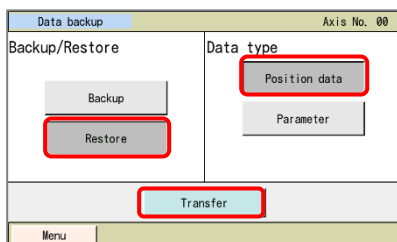

Touch [Restore].


Select the data type to transfer to the controller, such as [Position data], and touch it.

Touch [Transfer].

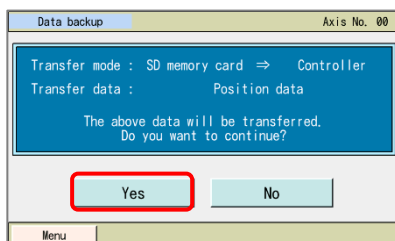


Touch [Yes].

If [No] is touched, the screen goes back to the data backup screen.

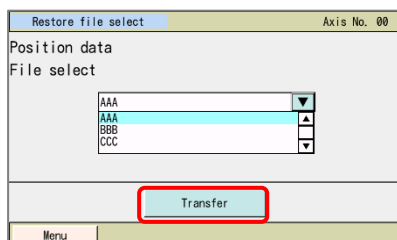


Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.

Touch [Transfer].

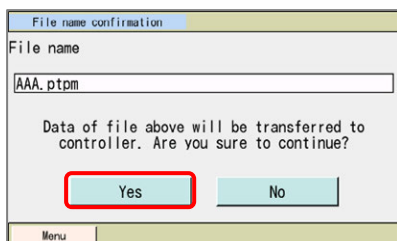


Touch [Yes].

If [No] is touched, the screen goes back to the previous one for the restore file selection.

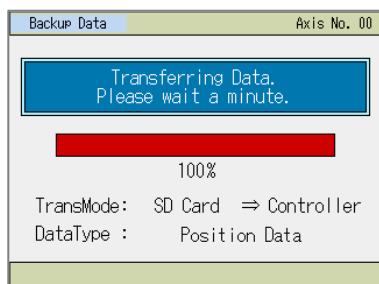

Data transfer screen will be shown.

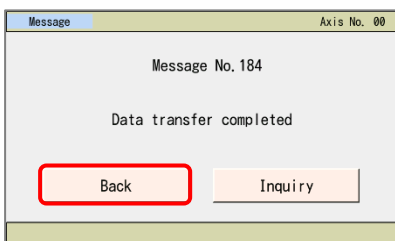



A message to tell the data transfer is complete pops up and the data transfer process to the controller is finished.


Touching [Back] can go back to the Backup Data screen.

5.15 Maintenance – Environment Setting

You can set the language, touch operation sound, auto monitor function, dim display time, data input warning, display and time.

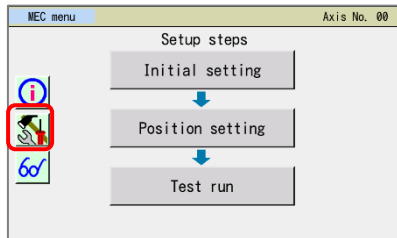


Touch  on the MEC menu screen.

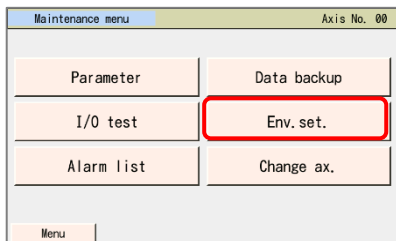

Touch [Env.set.].


Touch [Menu] to return to the MEC menu screen.

The environment setting screen appears.

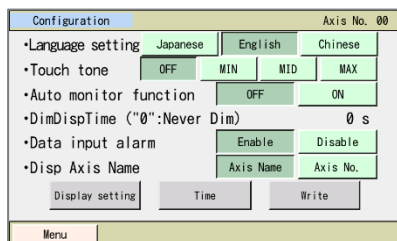

[1] Basic operation

- Language: Select a language to display.
Display for Japanese/English/Chinese languages setting change

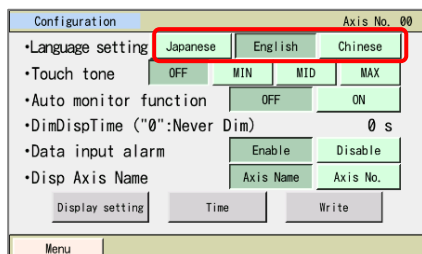


Touch a desired language ([English] etc.).

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- Sound: Set whether to output or not output a touch tone.

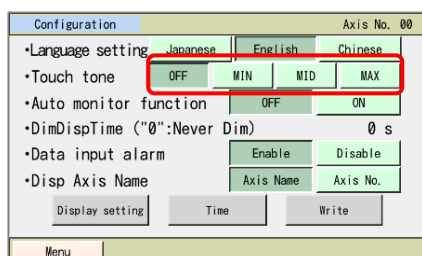


Touch [OFF]. A touch tone is not output.
Touch [MAX], [MID] or [MIN]. A touch tone is output.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- Auto Monitor: You can have the monitor screen appear first after the touch panel teaching pendant is connected.

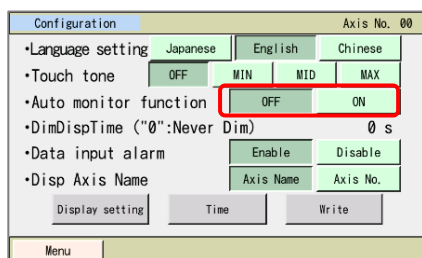


Touch [ON] to enable the auto monitor function.
Touch [OFF] to disable the auto monitor function.

Select either ON or OFF, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- Dim Display Time: You can set a desired dim display time when not being operated.
If "0 sec" is set, the display will remain lit at all times.

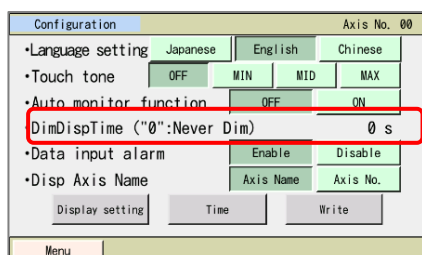


Touch [Dim Display Time ("0": Never Dim) 0 sec].
Enter the light off time.
A desired value between 0 and 255 sec can be set.

Touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.

- **Data Entry Alarm:** The alarm can be output when a value less than the minimum speed and a value exceeding the rated acceleration/deceleration speed are entered in the position data. Note that the value is entered even if the alarm occurs. Always use within the specification of the actuator.

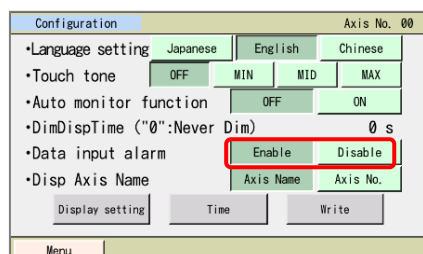


Touch [Effect] to give the warning.
Touch [Non Effect] not to give the warning.

Select either Effect or Non Effect, and then touch [Write].

(Note) If writing is not conducted, the setting will go back to those before making a change when moving to another screen.


[Display]

Adjustment of contrast and brightness of the screen, position tuning for touch panel and LCD screen check can be performed.

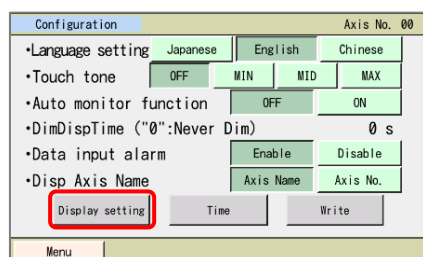

Touch [Display setting].

Display menu Window is displayed.

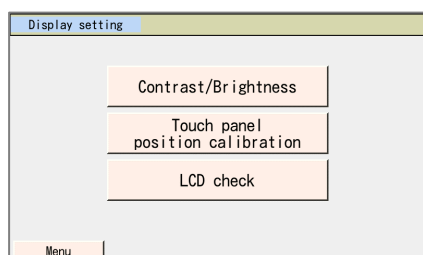


Select Display Setting menu.


Touch [Menu] and the display returns to EnvironmetSet screen.

•Change the Contrast/Brightness

You can adjust contrast (shading of liquid crystal) and brightness (of liquid crystal).

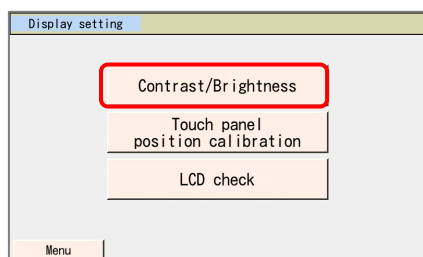

Touch [Contrast/Brightness].

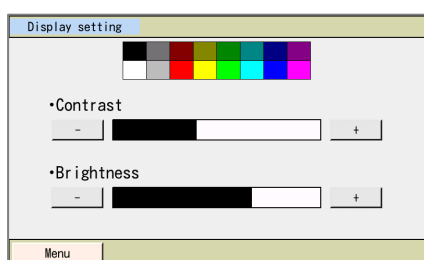

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.


Brightness adjustment

Touch [-] and [+] under Brightness to adjust the brightness of the screen.


Touch [Menu] to save the setting status and return to Display menu screen.

•Touch calibration

A calibration for the position detection of the touch panel is performed.

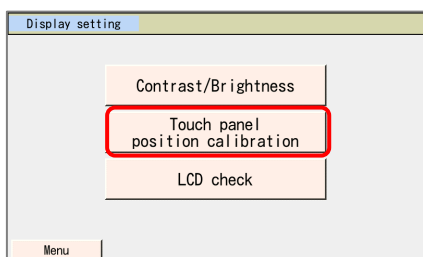

Touch [Touch panel position calibration].

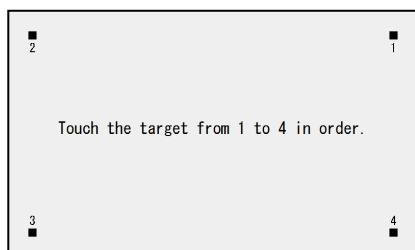


Touch [■] in the order of 1, 2, 3 and 4.

The display returns to Display menu screen.


•LCD check

LCD display can be checked in the order of Color Pattern, White Only and Black Only.

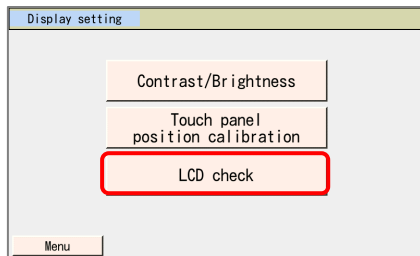

Touch [LCD check].

Color Pattern is displayed.

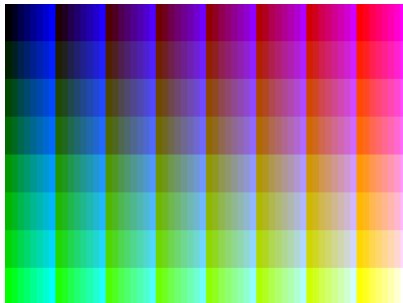


Touch any point on the screen.

White Only is displayed.



Touch any point on the screen.


Black Only is displayed.




Touch any point on the screen.
The display returns to Display menu screen.

[Time Setting]


Time setting can be performed for TB-02.

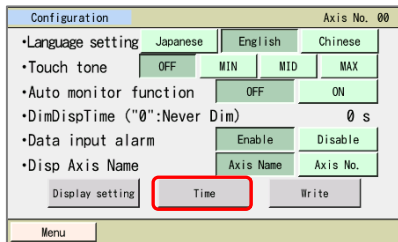


Touch [Time].

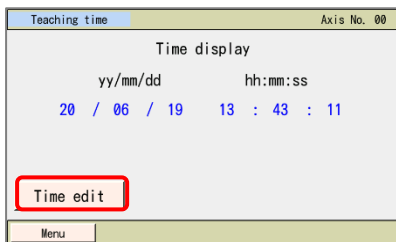


Touch [Time Edit].

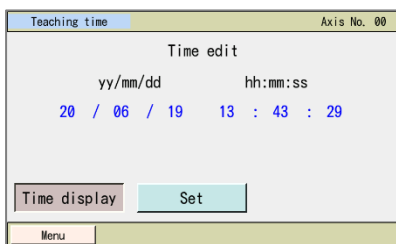


Touch the value of year, month, day, hour, minute or second that is required to be changed.

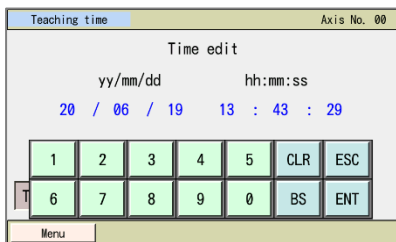

Numeric keys are displayed.
Input a value and touch [ENT].

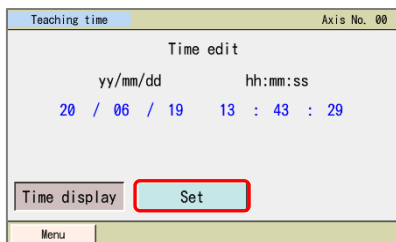


Touch [Set].

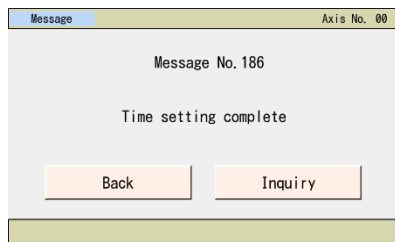

The time of the TB-02 is changed.
Touching [Back] can go back to the controller time setting screen.
Touching [Inquiry] displays the inquiry screen.

5.16 Monitor

The current position, speed, electrical current, system status and I/O statuses of the controller are displayed.

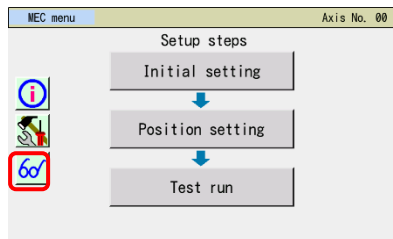


Touch  on the MEC menu screen.

The operation pattern is shown.

The I/O statuses of the axis are shown.

The displayed signals vary depending on the operation pattern.

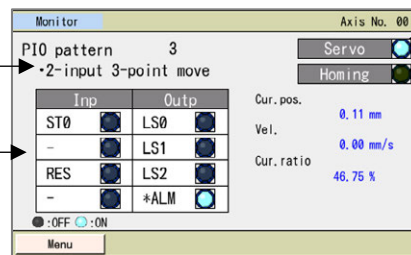

The servo status is shown.

The home return status is shown.

The axis position is shown.

The axis speed is shown.

The electrical current of the axis is shown.

Display can be switched over between rated current ratio (%) and current (mA) each time touching Current Ratio/Current.

Touch [Menu] to return to the MEC menu screen.

6. Operation of ELECYLINDER and ROBO PUMP


6.1 Displayed Language Change

The language can be changed by following the steps below.

For the operations after the language change, please refer to the instruction manual written in each language.

- Display change from English to Japanese


(1) Touch [Menu2] in Menu1.

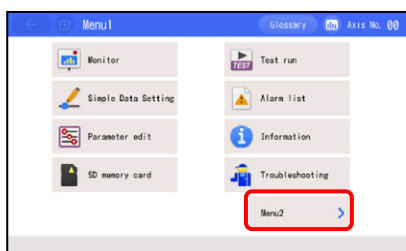


(2) Touch [Env. Set.] in Menu2.



(3) Touch [Japanese].

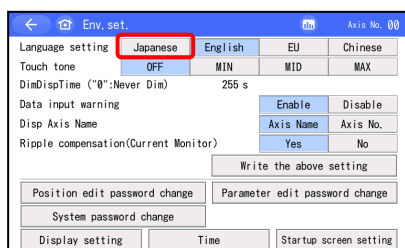


(4) Touch [上記設定を書き込み].

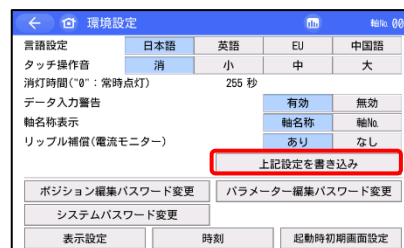

(Note) Skipping to another window without touching [上記設定を書き込み] will allow language to go back to that before changed.

- Display change from Japanese to English


(1) Touch [メニュー2] in メニュー1.

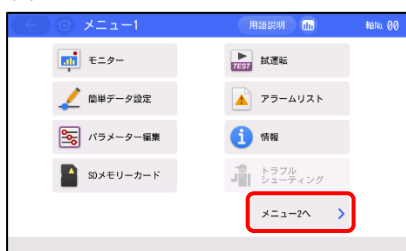


(2) Touch [環境設定] in メニュー2.



(3) Touch [英語].

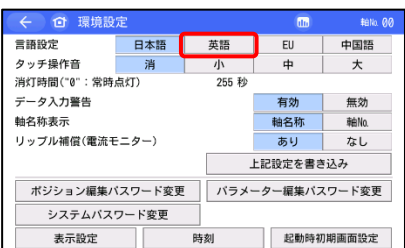


(4) Touch [Write the above setting].

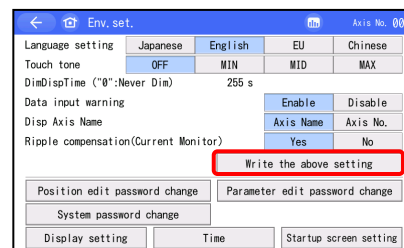


(Note) Skipping to another window without touching [Write the above setting] will allow language to go back to that before changed.

• Display change from English to Chinese


(1) Touch [Menu2] in Menu1.

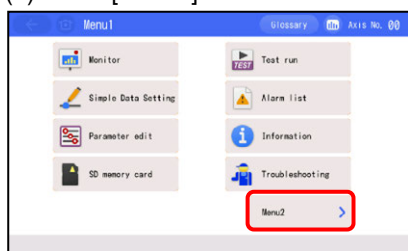


(2) Touch [Env. Set.] in Menu2.

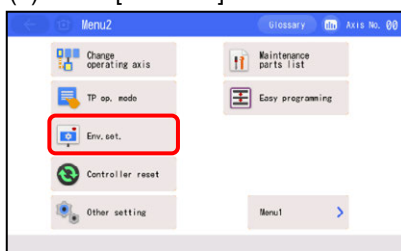

(3) Touch [Chinese].

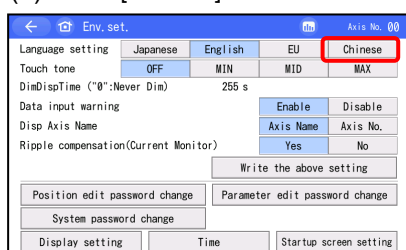

(4) Touch [写入上述设定].

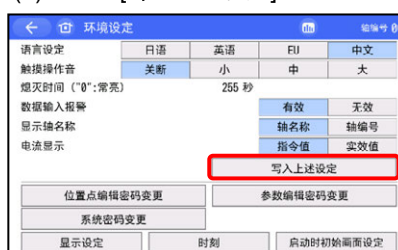

(Note) Skipping to another window without touching [写入上述设定] will allow language to go back to that before changed.

• Display change from Chinese to English

(1) Touch [菜单 2] in 菜单 1.




(2) Touch [环境设定] in 菜单 2.



(3) Touch [英语].




(4) Touch [Write the above setting].

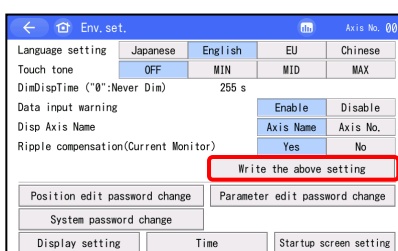

(Note) Skipping to another window without touching [Write the above setting] will allow language to go back to that before changed.

6.2 Operating Menu

Operating menu when the touch panel teaching pendant TB-02 is connected to ELECYLINDER or ROBO PUMP is shown.

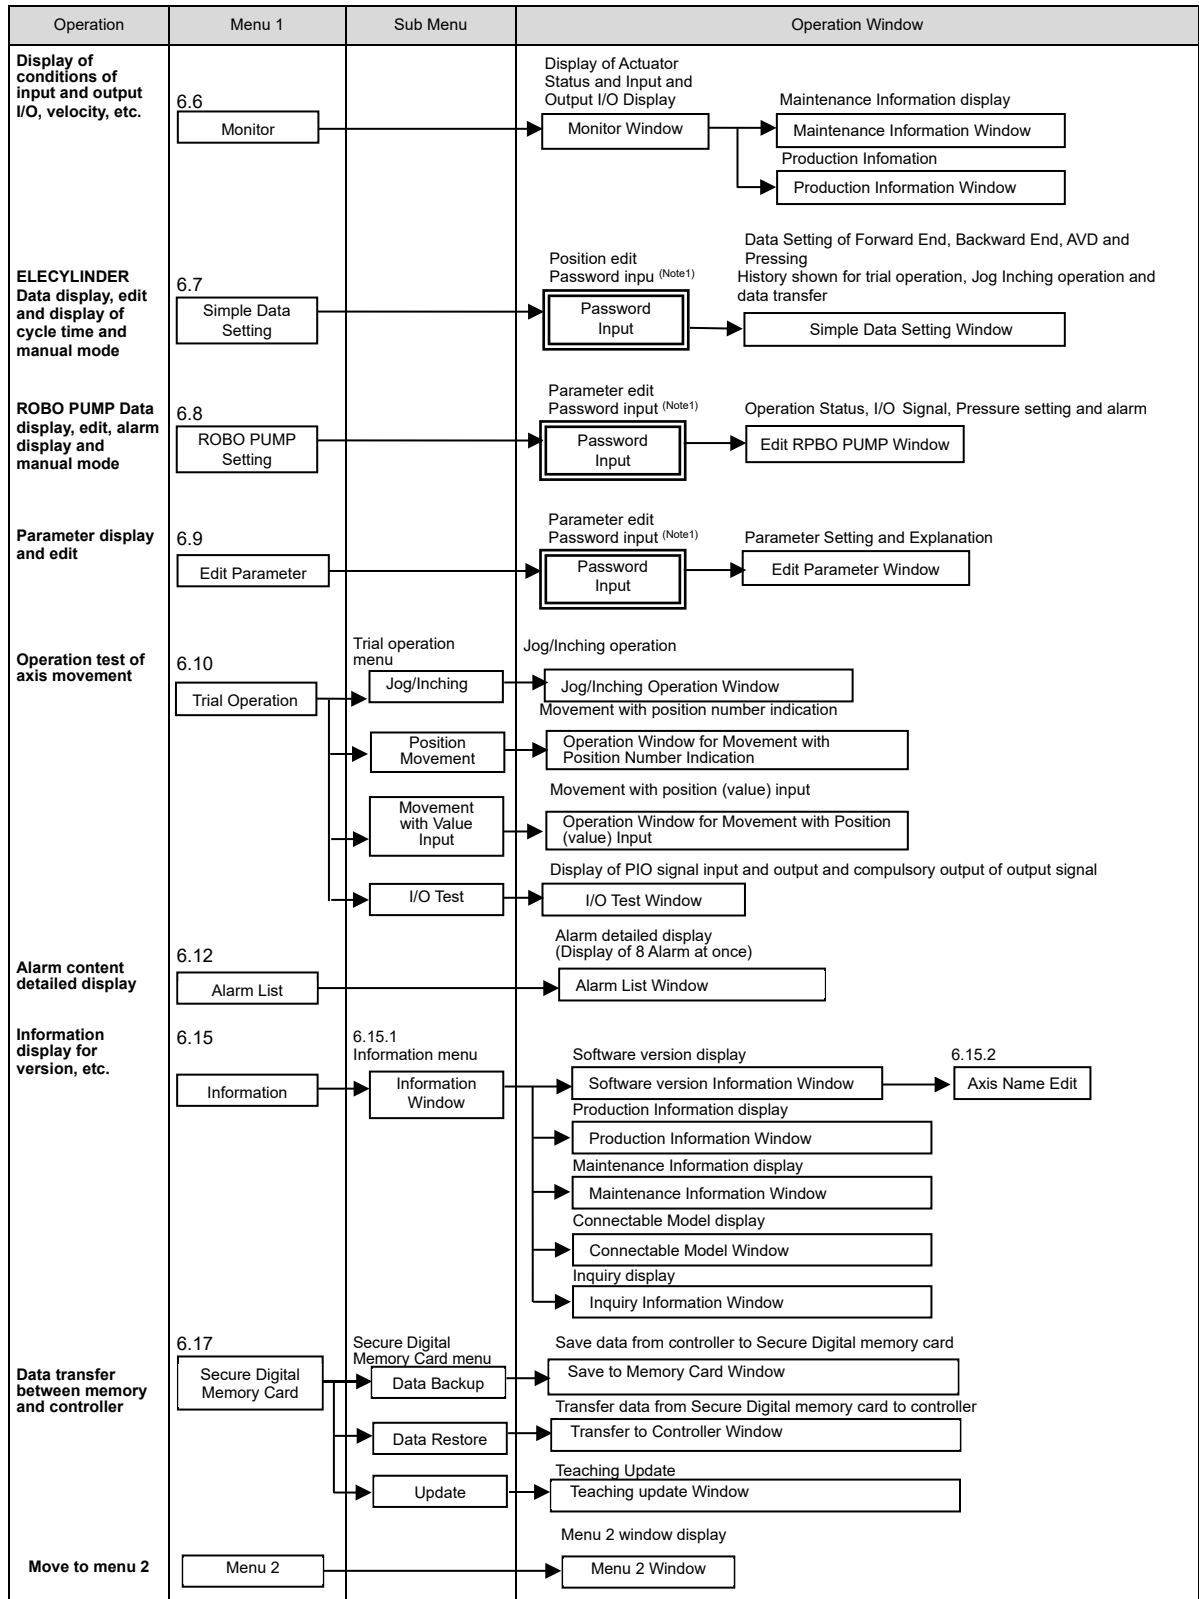

(Note 1) Password input in case the password has been changed from the initial setting (0000), it is necessary to input the password.


Operation	Menu 2	Sub Menu	Operation Window
Select/change connected axis controller	6.4 Change operating axis		Select/change of connected axis controller Select Axis screen
Controller reboot	6.13 Controller eboot		Controller reboot Controller Reboot
Select TP operation mode (Monitor 1/2, Teach 1/2)	6.11 TP Operation Mode		TP operation mode select TP Operation Mode Window
Operation for such as setting of axis number and parameter initializing	6.14 Other Settings	Parameter Initializing Axis Number Setting Operation Sound Tuning	Parameter initializing Parameter Initializing Window Controller axis number setting Axis Number Setting Window Operation Sound Tuning Window
Environment of language setting, touch sound setting, etc.	6.16 Global		Language setting, touch operation sound, sleeping time, data input warning, axis name display, ripple compensation Global Window System password change System Password Change Window Parameter edit password change Parameter Edit Password Change Window Position editing password change Position Editing Password Change Window Display settings (contrast and brightness changes) Display Setting Window Time setting Time Setting Window Startup initial window setting and guide display select Startup Initial Window Setting Window
Display of maintenance part list	6.18 Maintenance Part List		Maintenance part list display Maintenance Part List Window
Setting and execution of easy program	6.19 Easy Programming		Execution of operation, stop setting, continuous operation and repeated operation Easy Programmig Window
Move to menu 1	Menu 1		Menu 1 window display Menu 1 Window

6.3 Initial Screen


When the power is turned on, the IAI logo is displayed and then the version information is displayed.



IAI logo will be displayed in the screen for a few seconds.

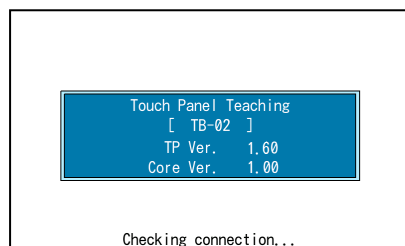


Versions of the teaching and core will be displayed.

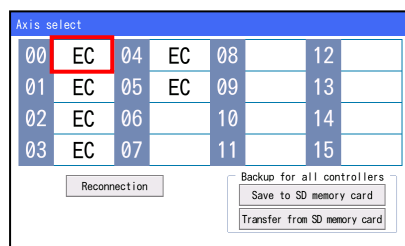

[Displayed only in multiple-unit connection]

If multiple units are connected, the axis selection screen appears.

Select an axis to be operated with the touch panel teaching pendant. Refer to [6.4 Change Operating Axis].

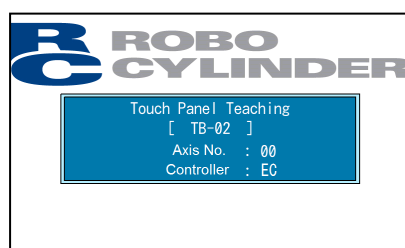


The number of axis to be operated and the type of controller will be displayed.
EC: ELECYLINDER
RP: ROBO PUMP



The Menu 1 screen appears.


6.4 Change Operating Axis

If multiple controllers are connected to the communication line, the axis selection screen appears. It also can be shown by touching [Change operating axis] in the Menu 2 screen or Change axis operation Button on the top left of Menu 2 screen Refer to [6.5 Menu Selection].

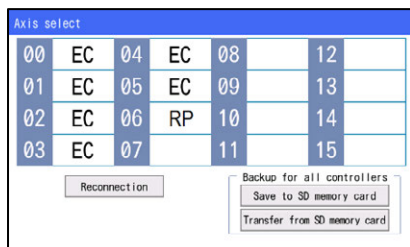

Select the axis to be operated in the touch panel teaching pendant and touch it.

EC: ELECYLINDER
RP: ROBO PUMP

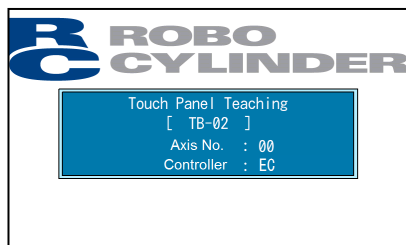


The connection with the controller of the selected ELECYLINDER and ROBO PUMP will be started.




When connection with the controller is established, the Menu 1 screen appears.

6.5 Menu Selection

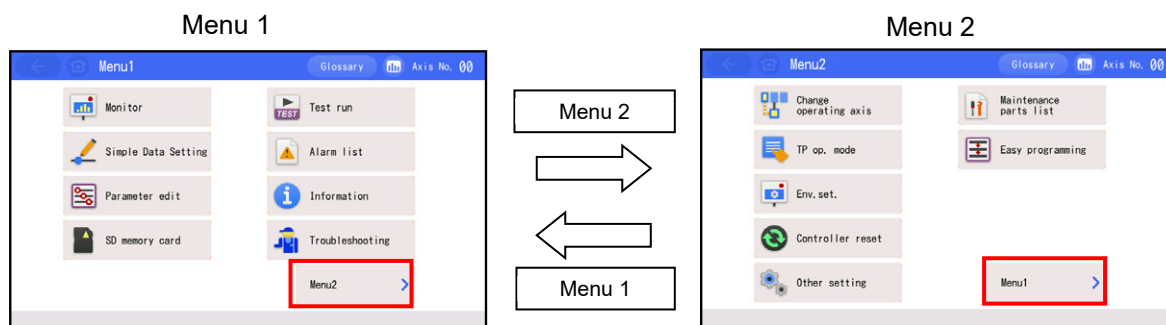

Two menu selection screens, Menu 1 and Menu 2, are available.
 Touching [Menu2] on the Menu 1 screen changes the display to the Menu 2 screen.
 Touching [Menu1] on the Menu 2 screen changes the display to the Menu 1 screen.

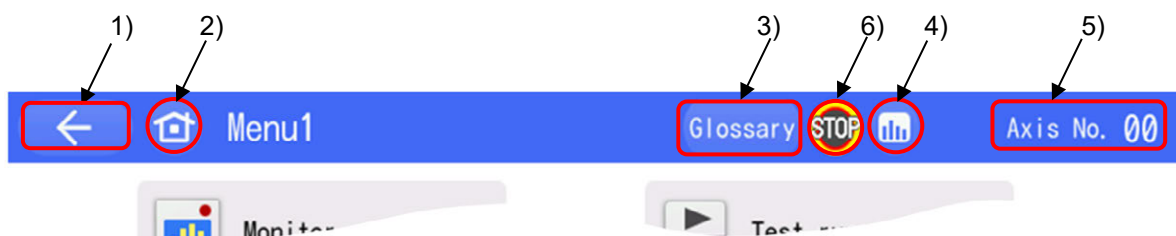

- | | | | |
|----|--|------------------------------|---|
| 1) | | Return Button | : Returns to Previous Screen |
| 2) | | Home Button | : Returns to Menu 1 Screen |
| 3) | | Glossary Button | : Shows the Explanation Screen for Special Terms |
| 4) | | Monitor Button | : Opens the Monitor Screen |
| 5) | | Change operating axis Button | : Shows Select Axis Screen.
(It should not function in a simple data setting screen) |

6) Stop Status Icons An icon should blink in the following status.



The "STOP" icon should be displayed in a stop status.
 Press and hold the icon and the "202: Stop" message should be displayed.



The "ENG" icon should be displayed in an emergency stop status.
 Press and hold the icon and the "202: Emergency stop" message should be displayed.



The "MP" icon should be displayed in a motor voltage drop status.
 Press and hold the icon and the "203: Motor Voltage Drop" message should be displayed.



The "ENB" icon should be displayed in a disable status.
 Press and hold the icon and the "226: Enable Circuit Open" message should be displayed.


[Menu 1]

- Monitor Displays the actuator status, I/O signal status, maintenance information and manufacturing information. Refer to [6.6 Monitor]
- Simple Data Setting Conduct settings of position, velocity acceleration/deceleration to operate the actuator.
Refer to [6.7 Simple Data Setting (Position Editing)]
- ROBO PUMP Setting Setting of suction, release and monitoring display of ROBO PUMP should be established.
Refer to [6.8 ROBO PUMP Setting]
- Parameter edit Conduct settings such as to adjust operation range or home position, or to change the direction of home-return operation.
Refer to [6.9 Parameter Edit]
- SD memory card Perform readout of position data and parameters, file saving and storage of the alarm list. Teaching update also can be conducted in this menu. Refer to [6.17 Data Backup]
- Test run Conduct manual operation with JOG, Inching and number indication and also make a trial run of I/O. Refer to [6.10 Test Run]
- Alarm list Shows a list of alarms and the time when they occurred.
Refer to [6.12 Alarm List]
- Information Shows the software version, manufacturing information, maintenance information and models available for connection.
Refer to [6.15 Information Display]
- Troubleshooting Shows the contents of an alarm and the countermeasure when an alarm has been generated.

[Menu 2]

- Change operating axis Select an axis to operate when multiple units of controllers are connected to the communication line.
Refer to [6.4 Change Operating Axis]
- TP op. mode Switch over between forbidden and permitted for PIO operation and between invalid and valid for the safety velocity.
Refer to [6.11 TP Operation Mode]
- Env. set. Conduct settings for display language, touch sound, turn-off time, data input warning, axis name display, ripple compensation, password, display, clock and initial window setting at startup. Refer to [6.16 Environment Setting]
- Controller reset Restart the controller. Refer to [6.13 Controller Reset]
- Other setting Conduct parameter initialization, axis number change and operation sound tuning.
Refer to [6.14 Other Setting]
- Maintenance parts list Displays information of maintenance parts.
Refer to [6.18 Maintenance Parts List]
- Easy programming It is a window that enables setting of movement between positions, timer and repeated operation by indicating number, and to have continuous operation manually at the ELECYLINDER.
Refer to [6.19 Easy Programming]

[When Alarm Occurred]

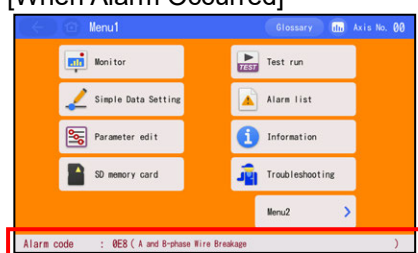


While an alarm is generated, the alarm group (Alarm code for ROBO PUMP) and the alarm name should be displayed at the bottom of the window, and the background should turn into orange (Red for some alarms).

Touch the gray part at the bottom of the window that the alarm information is displayed, and the screen switches to the display window of alarm details.


6.6 Monitor

The I/O statuses, current position and other information of the controller connected are displayed.

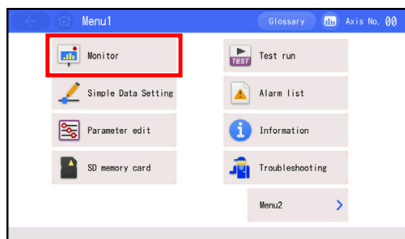

Touch [Monitor] on the Menu 1 screen.


If the TP operation mode is not Monitor Mode 1 or 2, the following message screen appears.

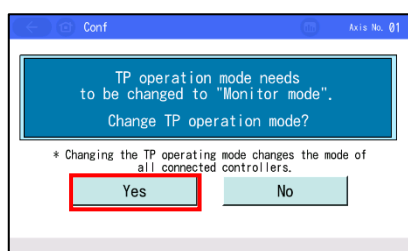

Touch [Yes] to change to Monitor Mode 1 or 2.
If not, touch [No].


(Note) The safety speed does not change.
If the current mode is Teaching Mode 1, it changes to Monitor Mode 1.
If the current mode is Teaching Mode 2, it changes to Monitor Mode 2.

Note: For the multiple-axis controllers, TP Operation Mode of all the controllers should change.

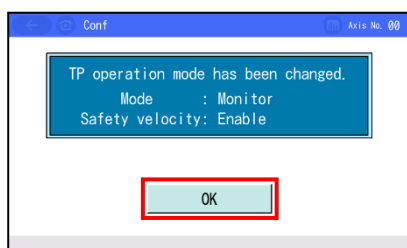


Touch [OK].

The monitor screen of ELECYLINDER or ROBO PUMP appears.

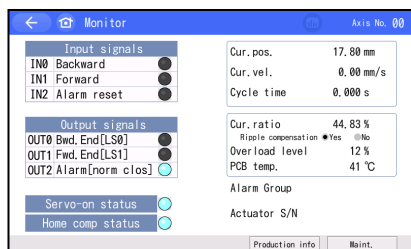


The monitor screen of ELECYLINDER
Refer to [6.6.1 Monitor Screen (ELECYLINDER)]

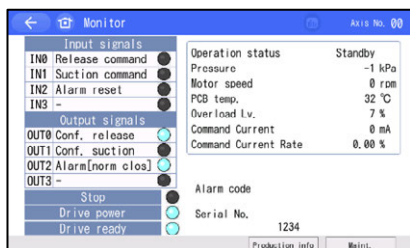


The monitor screen of ROBO PUMP
Refer to [6.6.1 Monitor Screen (ROBO PUMP)]

6.6.1 Monitor Screen (ELECYLINDER)

(Applicable for Ripple Compensation)

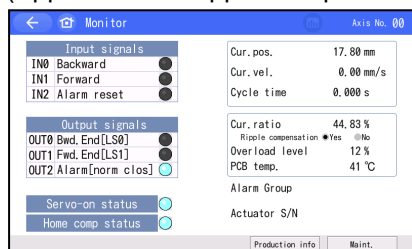

(Not Applicable for Ripple Compensation)

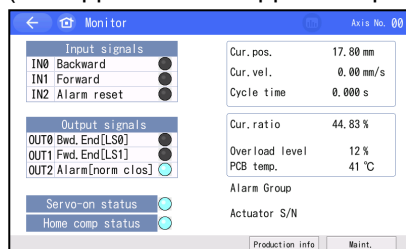

Touch [Production info] and the production information screen will be displayed.

Refer to [6.15 Environment Setting]

Touch [Maint.] and the maintenance information screen will be displayed.

Refer to [6.6.3.1 Maintenance Information Screen]

[Displayed Items]

- Input signals
The status of each input signal is shown. ON is lit. OFF is unlit.
*An input signal that a signal is not assigned (with a display of “-”) should not illuminate even if it is turned on.
- Output signals
The status of each output signal is shown. ON is lit. OFF is unlit.
- Cur. pos.
The current position is shown.
- Cur. vel.
The current speed is shown.
- Cycle time
The cycle time calculated from the velocity and acceleration / deceleration set for the way forth and the way back is shown.
- Cur. ratio
The value of electrical current is shown as a percentage of the rated current.
- Ripple compensation (Note 1)
It can be chosen with the radio button whether to display the current/current ratio with ripple compensation or without ripple compensation.
 - Yes : Shown in command current (Note 2)
 - No : Shown in output current (Note 3)
- Overload level
The overload level is shown in the rate that the motor raising temperature assumed to generate the overload alarm set as 100%.
- PCB temp.
Temperature of the control PC board in the actuator is shown.
- Alarm Group
The applicable alarm group is shown.
- Actuator S/N
Shows the manufacturing number of the actuator.


Note 1 Versions Applicable for Ripple Compensation

Tool/Actuator	Applicable Versions
Teaching Pendant TB-02	V2.40 and later
ELECYLINDER	V0006 and later

- In versions other than those listed above, the selections of ripple compensation should not be displayed.
- For those models with no selections, calculations should be performed in command current (Note 2).


Note 2 The command current should compensate for the amount of current ripple considering transistor switching.

Note 3 In ELECYLINDER, output current close to the effective value should be figured out by calculation as it will not acquire the output current.

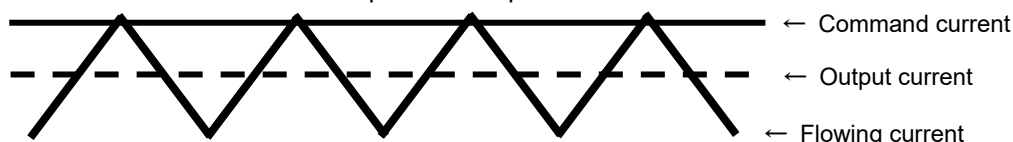


6.6.2 Monitor Screen (ROBO PUMP)

(PIO Pattern 0 or 1)

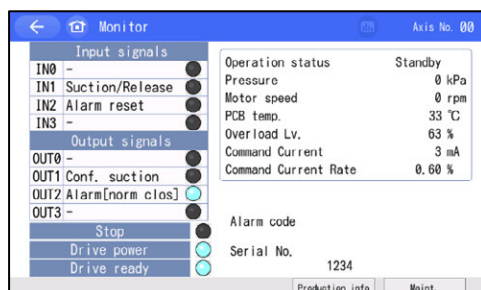

(PIO pattern 2)

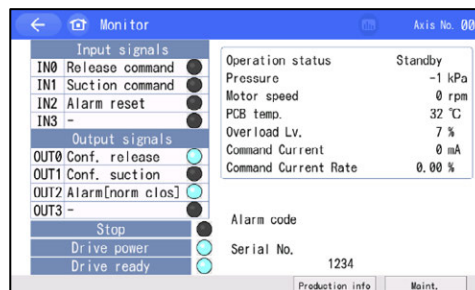

Touch [Production info] and the production information screen will be displayed.

Refer to [6.15 Environment Setting]

Touch [Maint.] and the maintenance information screen will be displayed.

Refer to [6.6.3.2 Maintenance Information Screen]

[Displayed Items]

- Input signals
The status of each input signal is shown. ON is lit. OFF is unlit.
- Output signals
The status of each output signal is shown. ON is lit. OFF is unlit.
- Stop
The status of Emergency stop is shown. ON is lit. OFF is unlit.
- Drive power
The status of Drive power is shown. ON is lit. OFF is unlit.
- Drive ready
The status of Servo on is shown. ON is lit. OFF is unlit.
- Operation status
The operation status of the ROBO POMP is shown.
- Pressure
The pressure of the vacuum pump should be displayed.
- Motor speed
The revolution count of the motor should be displayed.
- PCB temp
Temperature of the control PC board in the ROBO PUMP is shown.
- Over load Lv.
The overload level is shown in the rate that the motor raising temperature assumed to generate the overload alarm set as 100%.
- Command Current
The Command Current is shown.
- Command Current Rate
The value of electrical current is shown as a percentage of the rated command current.
- Alarm code
The applicable alarm code is shown.
- Serial No.
Shows the manufacturing number of the ROBO PUMP.

6.6.3 Maintenance Information Screen

6.6.3.1 Maintenance Information Screen (ELECYLINDER)

(1) Total travel count and total travel distance

A warning should get output when the total travel count or total travel distance has exceeded each setting.


Touch [m ⇌ km] and the display of unit for the total travel distance (current value) can be switched between m and km.
(Rotary type excluded)

(Display in m for distance)

Maintenance information		Axis No. 00
Total travel count	123,456	Edit
Total travel count threshold	1,000,000	Edit
Total travel distance	750,643 m	Edit
Total travel distance threshold	1,250,000 m	Edit
Overload warning level	70 %	Edit
Actuator replacem.		

(Display in km for distance)

Maintenance information		Axis No. 00
Total travel count	123,456	Edit
Total travel count threshold	1,000,000	Edit
Total travel distance	750 km	Edit
Total travel distance threshold	1,250,000 m	Edit
Overload warning level	70 %	Edit
Actuator replacem.		

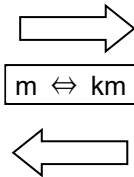

[Contents of Display]

- Total travel count The cumulative total number of actuator movements is shown.
- Total travel distance The cumulative total distance travelled by the actuator is shown.
(Rotary type: travel count for round trip between 0 and 180deg (To be figured out from total drive distance))

[Items of Setting]

- Total travel count threshold Set the total travel count to output a warning.
- Total travel distance threshold Set the total travel distance to output a warning.
(Rotary type: setting of travel count for round trip between 0 and 180deg)


Maintenance information		Axis No. 00
Total travel count	123,456	Edit
Total travel count threshold	1,000,000	Edit
Total travel distance	750,643 m	Edit
Total travel distance threshold	1,250,000 m	Edit
Overload warning level	70 %	Edit
Actuator replacem.		

Touch [Edit] on the right of Total travel count threshold to change the setting for the total travel count threshold.

Maintenance information		Axis No. 00
Total travel count	123,456	Edit
Total travel count threshold	1,000,000	Edit
Total travel distance	750,643 m	Edit
Total travel distance threshold	1,250,000 m	Edit
Overload warning level	70 %	Edit
Actuator replacem.		


Touch [Edit] on the right of Total travel distance threshold to change the setting for the total travel distance threshold.

When Total Travel Count has Exceeded Total Travel Count Threshold

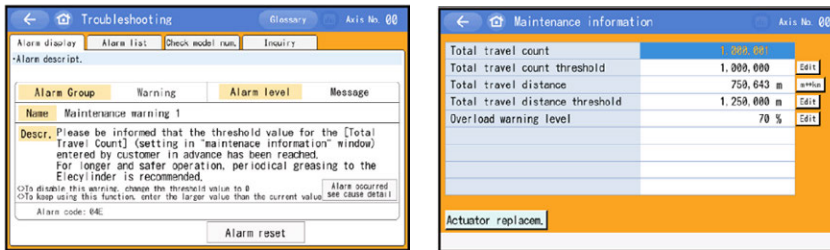


You will be notified in Maintenance warning 1 window.
The number in total travel count blinks in maintenance information window.

When Total Travel Distance has Exceeded Total Travel Distance Threshold

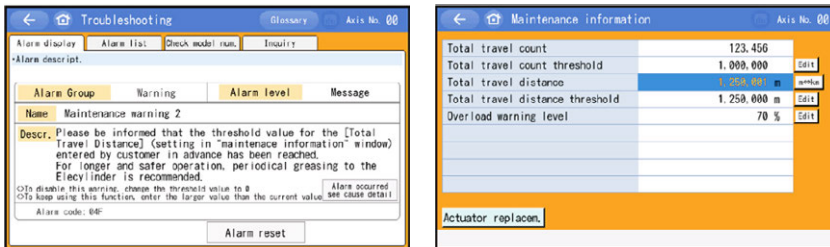


You will be notified in Maintenance warning 2 window.
The number in total travel distance blinks in maintenance information window.

[Resetting Total travel count and Total travel distance]

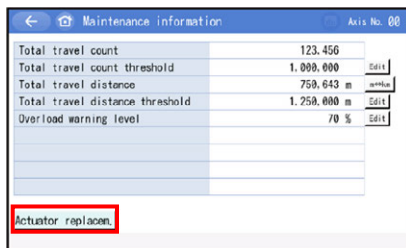

Touch [Actuator replacem.] to display the password entry screen.

Input "5119" and touch [ENT].

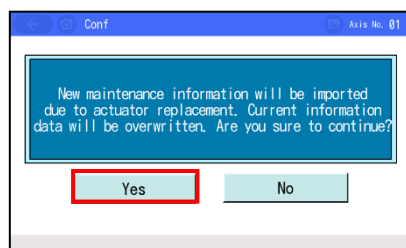

The actuator replacement confirmation screen appears.

Touch [Yes].

The Total travel count and Total travel distance are reset to 0.


● / ● flash in turn



LED lamps on ELECYLINDER flash red and green in turn in all of Maintenance Warning 1, 2 and 3.

(2) Over Load Warning

With the motor rising temperature estimated to generate an overload alarm set as 100%, an overload warning can get output when the temperature has exceeded the rate of the motor temperature set in this window.

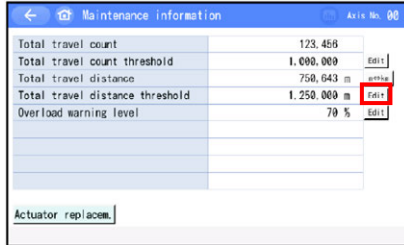


Touch [Edit] on the right of Over load warning level to change the setting for the over load warning level.

[Items of Setting]

- Over load warning level

Set the level to generate the over load warning alarm. Set to 100, and a warning should be generated.

When Over load Level has Exceeded Setting Rate

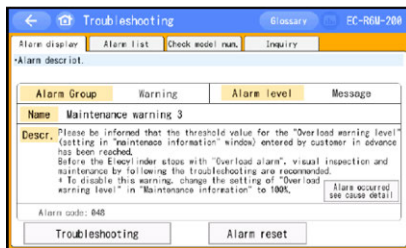

You will be notified as an overload warning in Maintenance warning 3 window.

LED lamps on ELECYLINDER flash red and green in turn.

6.6.3.2 Maintenance Information Screen (ROBO PUMP)

(1) Total number of suction and Total motor rotation time

A warning should get output when the total number of suction or total motor rotation time has exceeded each setting.

Maintenance information		Axis No. 00
Total number of suction	33	
Total number of suction threshold	0	Edit
Total motor rotation time	0:00:00 d:h:m	
Total motor rotation time threshold	1:23:50 d:h:m	Edit
Overload warning level	100 %	Edit

[Contents of Display]

- Total number of suction The cumulative of suction count for ROBO PUMP should be displayed.
- Total motor rotation time The cumulative of motor revolution time for ROBO PUMP should be displayed.

[Items of Setting]

- Total number of suction threshold Set the Total number of suction threshold to output a warning.
- Total motor rotation time threshold Set the Total motor rotation time to output a warning.

Maintenance information		Axis No. 00
Total number of suction	33	
Total number of suction threshold	0	Edit
Total motor rotation time	0:00:00 d:h:m	
Total motor rotation time threshold	1:23:50 d:h:m	Edit
Overload warning level	100 %	Edit

Touch [Edit] on the right of Total number of suction threshold to change the setting for the Total number of suction threshold.

Troubleshooting		Axis No. 00
Alarm display	Alarm list	Check model num.
Alarm description		Inquiry
Alarm code	E4E	Alarm level
Name		Exceeded Suction Count Threshold
Descr.		Please be informed that the threshold value for the 'Suction Count' (setting in Maintenance information screen) entered by customer in advance has been reached. Consider replacing the ROBO PUMP.
Detail code: ****	Addr: ****	Time(h:m:s) 0:07:47
How to deal		Alarm reset

When the total count of suction has exceeded the setting for the total count of suction, a notification should be made by displaying "E4E Exceeded Suction Count Threshold".

Maintenance information		Axis No. 00
Total number of suction	33	
Total number of suction threshold	0	Edit
Total motor rotation time	0:00:00 d:h:m	
Total motor rotation time threshold	1:23:50 d:h:m	Edit
Overload warning level	100 %	Edit

Touch [Edit] on the right of Total motor rotation time threshold to change the setting for the Total motor rotation time threshold.

Troubleshooting		Axis No. 00
Alarm display	Alarm list	Check model num.
Alarm description		Inquiry
Alarm code	E4F	Alarm level
Name		Exceeded Total Motor Rotation Time Threshold
Descr.		Please be informed that the threshold value for the 'Total Motor Rotation Time' (setting in Maintenance information screen) entered by customer in advance has been reached. Consider replacing the ROBO PUMP.
Detail code: ****	Addr: ****	Time(h:m:s) 0:10:40
How to deal		Alarm reset

When the total motor rotation time has exceeded the setting for the total motor rotation time, a notification should be made by displaying "E4F Exceeded Total Motor Rotation Time Threshold".

(2) Over Load Warning

With the motor rising temperature estimated to generate an overload alarm set as 100%, an overload warning can get output when the temperature has exceeded the rate of the motor temperature set in this window.

Maintenance Information		Axis No. 00
Total number of suction	33	
Total number of suction threshold	0	[Edit]
Total motor rotation time	0:00:00 d:h:m	
Total motor rotation time threshold	1:23:50 d:h:m	[Edit]
Overload warning level	100 %	[Edit]

Touch [Edit] on the right of Over load warning level to change the setting for the over load warning level.

[Items of Setting]

- Over load warning level

Set the level to generate the over load warning alarm. Set to 100, and a warning should be generated.

Troubleshooting		Axis No. 00
Alarm display Alarm list Check model num Inquiry		
Alarm code: E48 Alarm level: Message		
Name: Driver Overload Warning		
<p>Descr: The current overload level has exceeded the pre-set warning level set on Maintenance screen. Use this as reference for regular maintenance and evaluation of the product life. This alarm does not indicate any trouble nor problems.</p> <p>Touch "How to deal" and check the following for more information.</p>		
Detail code: **** Adrs: **** Time:yy/mm/dd hh:mm:ss) 24/08/21 14:49:43		
How to deal		

When the Over load warning level has exceeded the setting for the Over load warning level threshold, a notification should be made by displaying "E48 Driver Over load Warning".

[When Touching [Edit] While in Suction of ROBO PUMP]


Troubleshooting		Axis No. 00
Alarm display Alarm list Check model num Inquiry		
Alarm code: 224 Alarm level: Message		
Name: Operation status of data editing prohibited		
<p>Descr: This is the operation state in which data editing is prohibited. Perform the release operation to set the operation status to "Standby", and then edit the data.</p>		
Adrs: Time:yy/mm/dd hh:mm:ss)		
How to deal		

When [Edit] in any of the following is touched while in suction of ROBO PUMP, "224 Operation status of data editing prohibited" should be displayed.

- [Edit] at the Right of Total number of suction threshold
- [Edit] at the Right of Total motor rotation time threshold
- [Edit] at the Right of Over load warning level


6.7 Simple Data Setting (ELECYLINDER)

Setting and editing of data related to operation such as forward end, backward end, velocity (V), acceleration (A), deceleration (D) and pressing setting can be performed. Also, JOG operation can be performed.

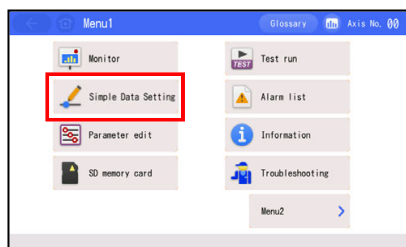

Touch [Simple Data Setting] on the Menu 1 screen.

If a position edit password is other than "0000," the password entry screen appears.

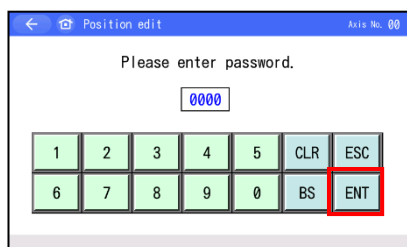

Enter the position edit password.
Touch [ENT].


The default position edit password is "0000".
For how to change the position edit password, refer to 6.16, "Environment Setting [Change Pos Edit Password]".

The simple data setting screen appears.

■ Unit Change


[Unit Change] switches the unit between % and mm/s for velocity, % and G for acceleration / deceleration and % and N for pressing force (Rotary type excluded).

Rod type: Simple data setting screen for pressing operation (2-position setting)

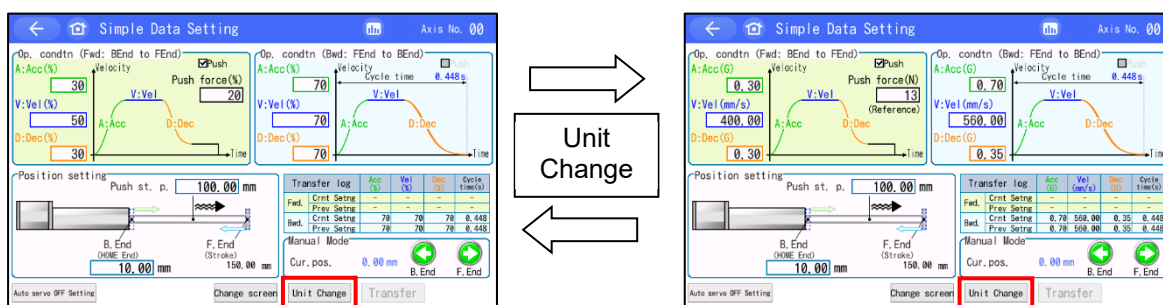


[Unit Change] switches the unit between % and deg/s for velocity, % and G for acceleration / deceleration and % and N•m for pressing force (Rotary type).


Rotary type: Simple data setting screen for pressing operation (2-position setting)

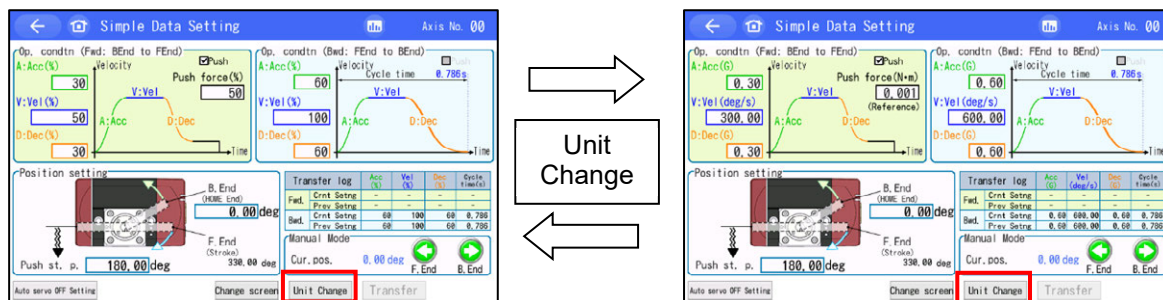

Wire Cylinder: Simple data setting screen for positioning operation (3-position setting)

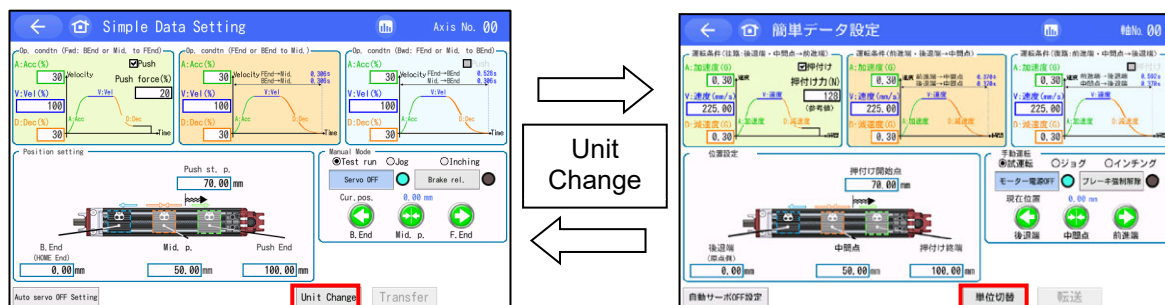

3-finger gripper type: Simple data setting screen for pressing operation (2-position setting)

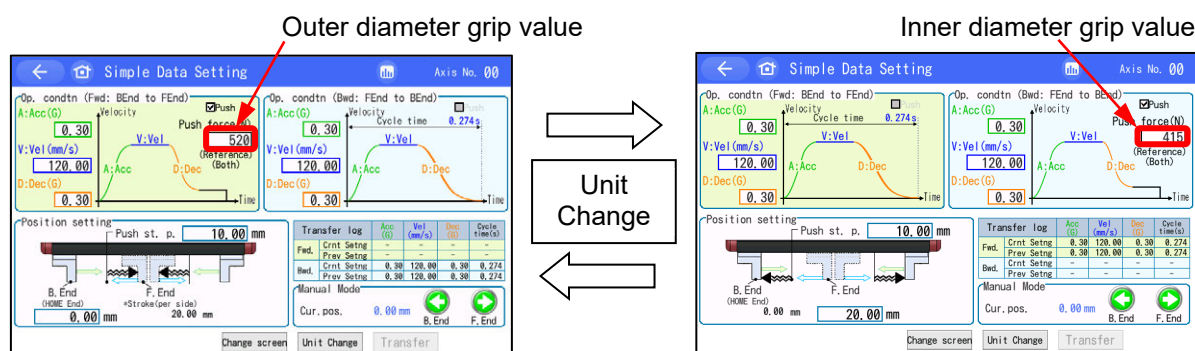

Caution: The 3-finger gripper is different in the grip force for outer diameter grip and inner diameter grip.

In a versions earlier than V5.00, when the display unit for the three-finger gripper (EC-GRTR14) is in [N], it should show the grip force for outer grip even if it is inner grip.




Therefore, when using the 3-finger gripper (EC-GRTR14) in versions earlier than V5.00 with gripping at the inner diameter, use the displayed unit in [%], not in [N], for grip force (pressing force).

- To set up the grip force for the inner diameter grip, refer to the graph shown in [Relation Between Grip Force and Current Limit] in 3-finger gripper Instruction Manual (ME3829) to set it up in [%].

6.7.1 Positioning Operation

Shown below is the content of setting for the position data for the positioning operation (2-position setting). (Rotary and Wire Cylinder excluded)

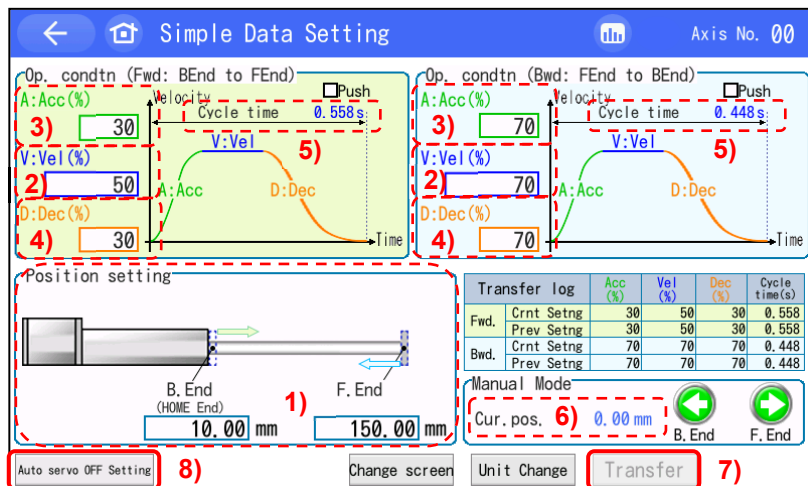


- 1) Position setting [mm] : Input the positions of the backward end and forward end. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.
- 2) Vel [% or mm/s] : Set the velocity of operation.
Set a number from 0% to 100%.
Also, the unit can be switched to mm/s by pressing [Unit Change].
Input can be made down to the two decimal places for mm/s.
Note 1 Figure out the minimum velocity by using the formula below.

$$\text{Min. Velocity [mm/s [deg/s]]} = \text{Lead Length [mm]} / 800 / 0.001 [\text{s}]$$
(Number of 200V servo motor type encoder pulse: 16384)
- 3) Acc [% or G] : Set the acceleration at start.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 4) Dec [% or G] : Set the deceleration at stop.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 5) Cycle time [s] : The cycle time calculated from the velocity and acceleration / deceleration set is shown.
- 6) Cur. pos. [mm] : Displays the current position.
- 7) [Transfer] button : Once the data setting is complete, touch [Transfer] to transfer the data to the controller.
- 8) [Auto servo OFF Setting] : Setting the Auto servo OFF delay time.
Refer to [6.7.5 Auto servo OFF]

Caution: If moving to another window without transferring data, all the data settings will go back to those before.
Also, without transferring, operation by the manual operation switch will not be available.


Shown below is the content of setting for the position data for the positioning operation (2-position setting). (Rotary)

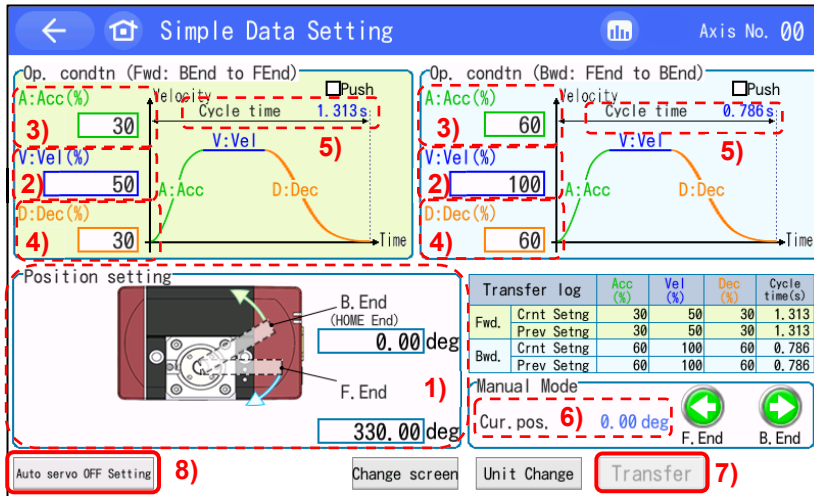

- 1) Position setting [mm] : Input the positions of the backward end and forward end. Positioning coordinate value. Enter is as the distance from the home position. The unit is mm and input can be made down to two decimal places.
- 2) Vel [% or mm/s] : Set the velocity of operation. Set a number from 0% to 100%. Also, the unit can be switched to deg/s by pressing [Unit Change]. Input can be made down to the two decimal places for deg/s.
Note 1 Figure out the minimum velocity by using the formula below.
Min. Velocity [20 deg/s]
- 3) Acc [% or G] : Set the acceleration at start. Set a number from 0% to 100%. Also, the unit can be switched to G by pressing [Unit Change]. Input can be made down to the two decimal places for G.
- 4) Dec [% or G] : Set the deceleration at stop. Set a number from 0% to 100%. Also, the unit can be switched to G by pressing [Unit Change]. Input can be made down to the two decimal places for G.
- 5) Cycle time [s] : The cycle time calculated from the velocity and acceleration / deceleration set is shown.
- 6) Cur. pos. [mm] : Displays the current position.
- 7) [Transfer] button : Once the data setting is complete, touch [Transfer] to transfer the data to the controller.
- 8) [Auto servo OFF Setting] : Setting the Auto servo OFF delay time. Refer to [6.7.5 Auto servo OFF]

Caution: If moving to another window without transferring data, all the data settings will go back to those before. Also, without transferring, operation by the manual operation switch will not be available.

Shown below is the content of setting for the position data for the positioning operation (2-position setting). (Wire Cylinder)

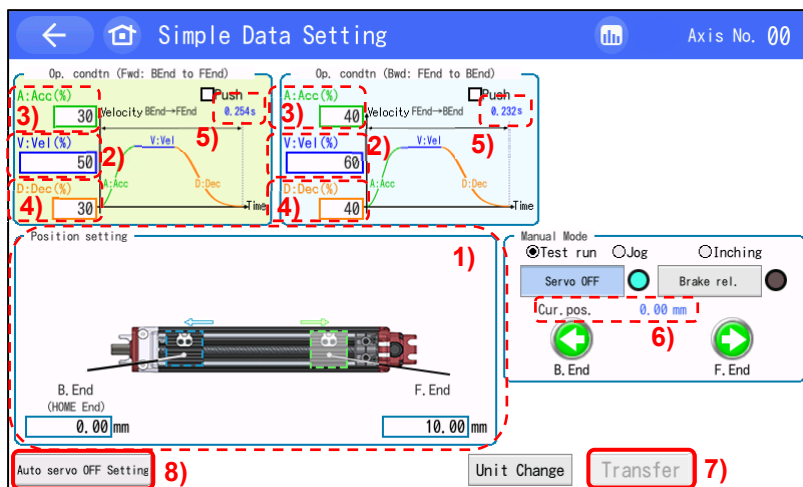


- 1) Position setting [mm] : Input the positions of the backward end and forward end. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.
- 2) Vel [% or mm/s] : Set the velocity of operation.
Set a number from 0% to 100%.
Also, the unit can be switched to mm/s by pressing [Unit Change].
Input can be made down to the two decimal places for deg/s.
Note 1 Figure out the minimum velocity by using the formula below.
$$\text{Min. Velocity [mm/s [deg/s]]} = \text{Lead Length [mm]} / 800 / 0.001 \text{ [s]}$$

(Number of 200V servo motor type encoder pulse: 16384)
- 3) Acc [% or G] : Set the acceleration at start.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 4) Dec [% or G] : Set the deceleration at stop.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 5) Cycle time [s] : The cycle time calculated from the velocity and acceleration / deceleration set is shown.
- 6) Cur. pos. [mm] : Displays the current position.
- 7) [Transfer] button : Once the data setting is complete, touch [Transfer] to transfer the data to the controller.
- 8) Auto servo OFF Setting : Setting the Auto servo OFF delay time.
[Refer to 6.7.5 Auto servo OFF]

Caution: If moving to another window without transferring data, all the data settings will go back to those before.
Also, without transferring, operation by the manual operation switch will not be available.

(Reference) Acceleration is explained. The same concept applies to deceleration.
 1G = 9,800mm/s²: Acceleration at which the actuator can increase its speed up to 9,800mm/s per second.
 0.3G : Acceleration at which the actuator can increase its speed up to 2,940mm/s (9,800mm/s × 0.3) per second.

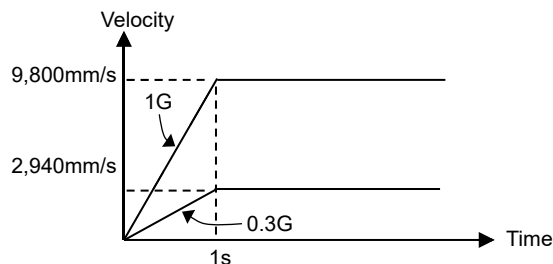

Caution: If the actuator or work part receives impact or generates vibration, lower the acceleration/deceleration. If the system is used continuously with the actuator or work part receiving impact or generating vibration, the life of the actuator may be significantly reduced.

9)

Transfer log		Acc (%)	Vel (%)	Dec (%)	Cycle time(s)
Fwd.	Crnt Setng	30	65	30	0.535
	Prev Setng	30	60	30	0.572
Bwd.	Crnt Setng	30	85	30	0.510
	Prev Setng	30	75	30	0.536

Manual Mode

Cur. pos. 0.00 mm

Unit Change

Transfer 7)

B. End 10) F. End

9) Transfer log

Once the data of the velocity and acceleration/deceleration for the way forth and the way back is transferred by pressing [Transfer], the old setting parameters will be shown in the previous setting area and the new parameters in the current setting area, and the cycle time calculated from these parameters will be displayed.


However, it cannot be checked for the wire cylinder.

10) Manual Mode

Touch [B.End] or [F.End] in the manual operation area, and the actuator can be moved forward or backward. (JOG Operation)


Operation is available when [B.End] and [F.End] are activated in green. If they are not activated in green, the setting values are not transferred. Transfer the parameters to the controller by pressing [Transfer], first.

Shown below is the content of setting for the position data for the positioning operation (3-position setting). (Rotary and Wire Cylinder excluded)

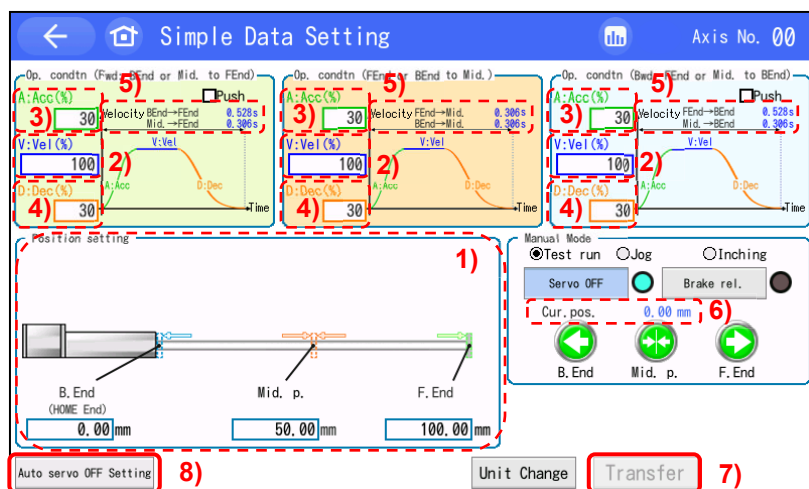


- | | |
|-----------------------------|--|
| 1) Position setting [mm] | : Input the positions of the backward end and forward end. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places. |
| 2) Vel [% or mm/s] | : Set the velocity of operation.
Set a number from 0% to 100%.
Also, the unit can be switched to mm/s by pressing [Unit Change].
Input can be made down to the two decimal places for mm/s.
<i>Note 1 Figure out the minimum velocity by using the formula below.</i>
$\text{Min. Velocity [mm/s [deg/s]]} = \text{Lead Length [mm]} / 800 / 0.001 \text{ [s]}$
(Number of 200V servo motor type encoder pulse: 16384) |
| 3) Acc [% or G] | : Set the acceleration at start.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G. |
| 4) Dec [% or G] | : Set the deceleration at stop.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G. |
| 5) Cycle time [s] | : The cycle time calculated from the velocity and acceleration / deceleration set is shown. |
| 6) Cur. pos. [mm] | : Displays the current position. |
| 7) [Transfer] button | : Once the data setting is complete, touch [Transfer] to transfer the data to the controller. |
| 8) [Auto servo OFF Setting] | : Setting the Auto servo OFF delay time.
Refer to [6.7.5 Auto servo OFF] |

Shown below is the content of setting for the position data for the positioning operation (3-position setting). (Rotary)

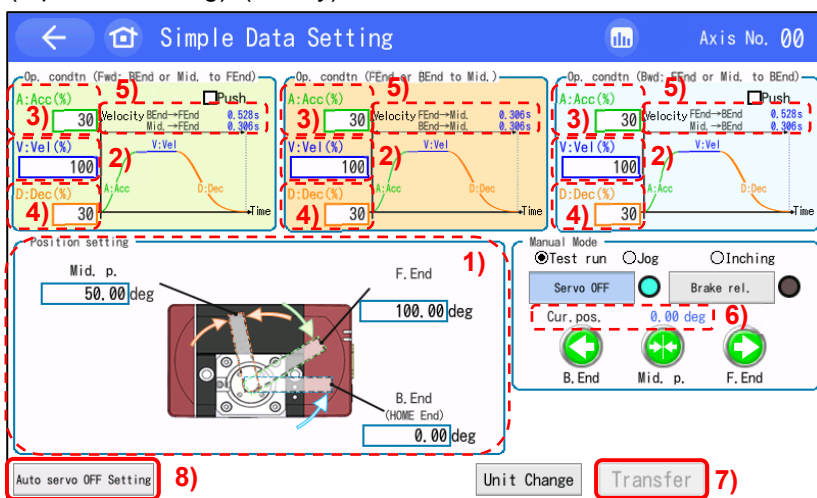

- 1) Position setting [mm] : Input the positions of the backward end and forward end. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.
- 2) Vel [% or mm/s] : Set the velocity of operation.
Set a number from 0% to 100%.
Also, the unit can be switched to deg/s by pressing [Unit Change].
Input can be made down to the two decimal places for deg/s.
Note 1 Figure out the minimum velocity by using the formula below.
Min. Velocity [20 deg/s]
- 3) Acc [% or G] : Set the acceleration at start.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 4) Dec [% or G] : Set the deceleration at stop.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 5) Cycle time [s] : The cycle time calculated from the velocity and acceleration / deceleration set is shown.
- 6) Cur. pos. [mm] : Displays the current position.
- 7) [Transfer] button : Once the data setting is complete, touch [Transfer] to transfer the data to the controller.
- 8) [Auto servo OFF Setting] : Setting the Auto servo OFF delay time.
Refer to [6.7.5 Auto servo OFF]

Shown below is the content of setting for the position data for the positioning operation (3-position setting). (Wire Cylinder)

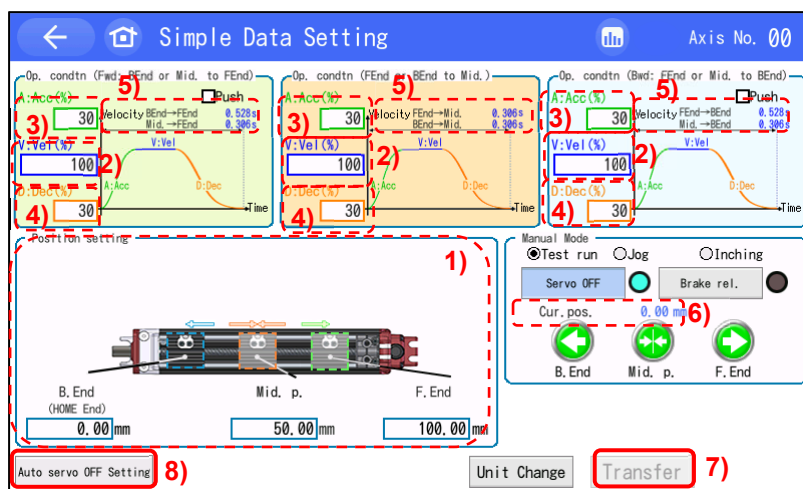

- 1) Position setting [mm] : Input the positions of the backward end, forward end and middle point.
Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.
- 2) Vel [% or mm/s] : Set the velocity of operation.
Set a number from 0% to 100%.
Also, the unit can be switched to mm/s by pressing [Unit Change].
Input can be made down to the two decimal places for deg/s.
Note 1 Figure out the minimum velocity by using the formula below.
$$\text{Min. Velocity [mm/s [deg/s]]} = \text{Lead Length [mm]} / 800 / 0.001 \text{ [s]}$$


(Number of 200V servo motor type encoder pulse: 16384)
- 3) Acc [% or G] : Set the acceleration at start.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 4) Dec [% or G] : Set the deceleration at stop.
Set a number from 0% to 100%.
Also, the unit can be switched to G by pressing [Unit Change].
Input can be made down to the two decimal places for G.
- 5) Cycle time [s] : The cycle time calculated from the velocity and acceleration / deceleration set is shown.
- 6) Cur. pos. [mm] : Displays the current position.
- 7) [Transfer] button : Once the data setting is complete, touch [Transfer] to transfer the data to the controller.
- 8) [Auto servo OFF Setting] : Setting the Auto servo OFF delay time.
Refer to [6.7.5 Auto servo OFF]

6.7.2 Pressing Operation


Shown below is the content of setting for the position data for the pressing operation (2-position setting). (Rotary and Wire Cylinder excluded)

Put a check mark ☒ in the check box ☐Push and the screen goes to the setting window for the pressing operation.

(The belt driven types (EC-B6 and B7) are not available for pressing operation.)

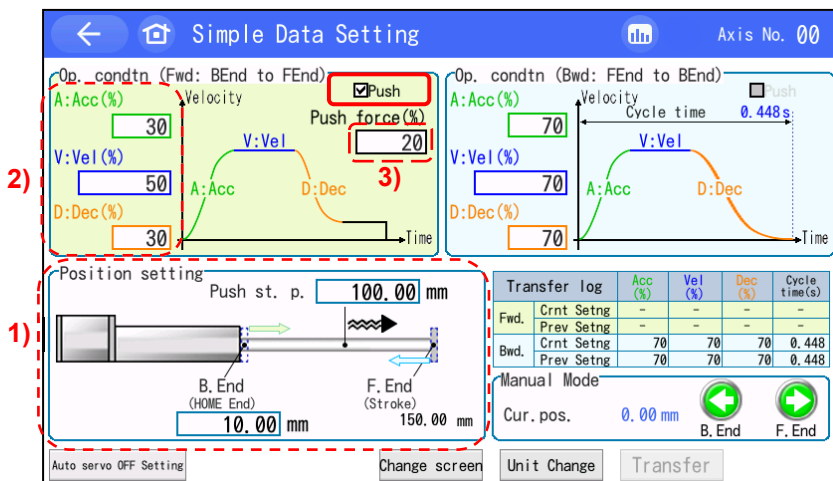

Pressing operation of Fwd (BEnd to FEnd)

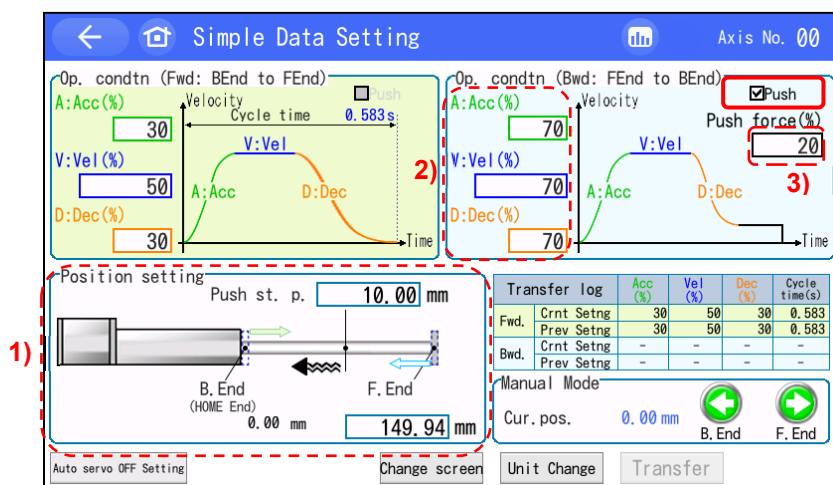


Pressing operation of Bwd (FEnd to BEnd)

- 1) Position setting [mm] : Setting can be made for the start position of movement (backward end or forward end) and the start position of pressing operation. Positioning coordinate value. Enter is as the distance from the home position. The unit is mm and input can be made down to two decimal places.
- 2) Vel and Acc/Dec : Setting can be made for the velocity, acceleration and deceleration for movement from the start position of the movement (backward end or forward end) to the start position of pressing operation. The way to conduct settings is the same as that for positioning operation.
- 3) Push force [%] : Set a pressing torque (limit current value) in %. The unit can be switched to N by pressing [Unit Change]. The pressing velocity should be 20mm/s. If the velocity is set to 20mm/s or less, pressing operation will be performed in the setting velocity.


Transfer log : The transfer log will not be displayed in pressing operation. The transfer operation and manual operation is the same as the positioning operation. Refer to [6.7.1 Positoning Operation]

Shown below is the content of setting for the position data for the pressing operation (2-position setting). (Rotary)

Put a check mark ☒ in the check box ☐Push and the screen goes to the setting window for the pressing operation.

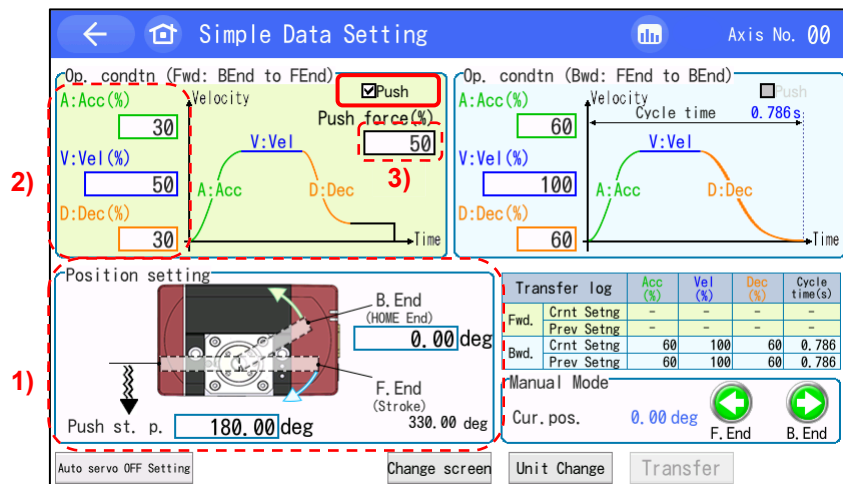

Pressing operation of Fwd (BEnd to FEnd)

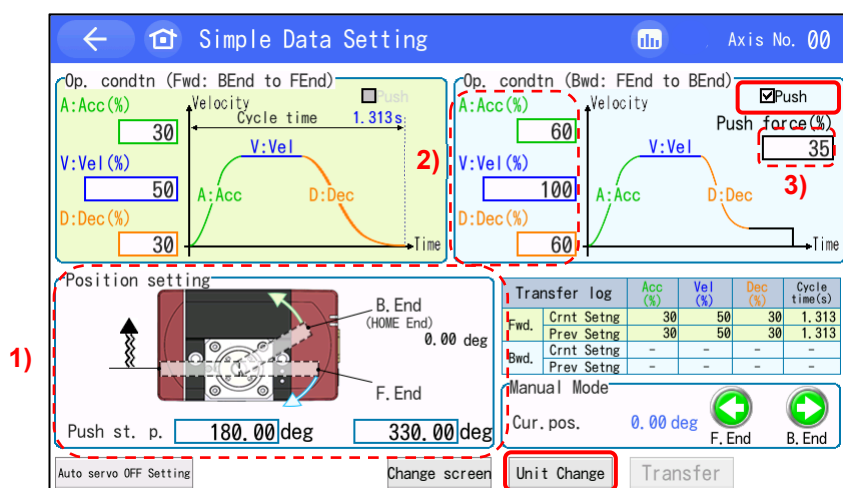


Pressing operation of Bwd (FEnd to BEnd)


- 1) Position setting [mm] : Setting can be made for the start position of movement (backward end or forward end) and the start position of pressing operation. Positioning coordinate value. Enter is as the distance from the home position. The unit is mm and input can be made down to two decimal places.
 - 2) Vel and Acc/Dec : Setting can be made for the velocity, acceleration and deceleration for movement from the start position of the movement (backward end or forward end) to the start position of pressing operation. The way to conduct settings is the same as that for positioning operation.
 - 3) Push force [%] : Set a pressing torque (limit current value) in %. The unit can be switched to N·m by pressing [Unit Change]. The pressing velocity should be 20deg/s. If the velocity is set to 20deg/s or less, pressing operation will be performed in the setting velocity.
- Transfer log : The transfer log will not be displayed in pressing operation. The transfer operation and manual operation is the same as the positioning operation. Refer to [6.7.1 Positioning Operation]

Shown below is the content of setting for the position data for the pressing operation (2-position setting). (Wire Cylinder)

Put a check mark ☒ in the check box ☐Push and the screen goes to the setting window for the pressing operation.

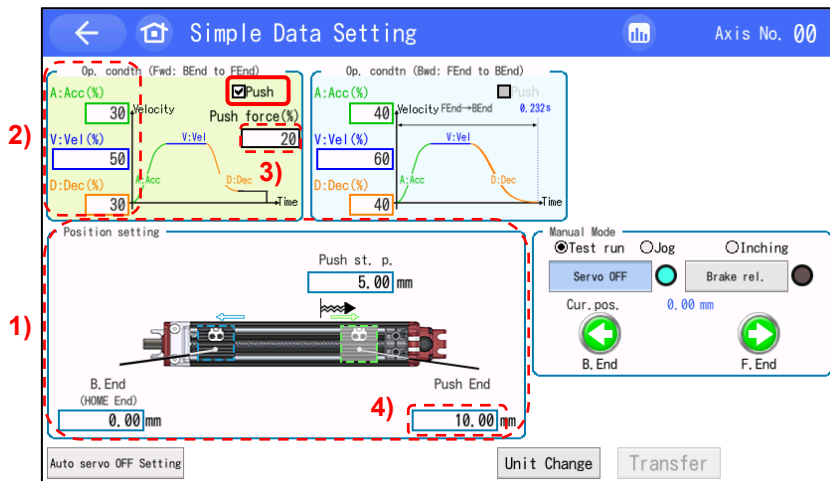

Pressing operation of Fwd (BEnd to FEnd)

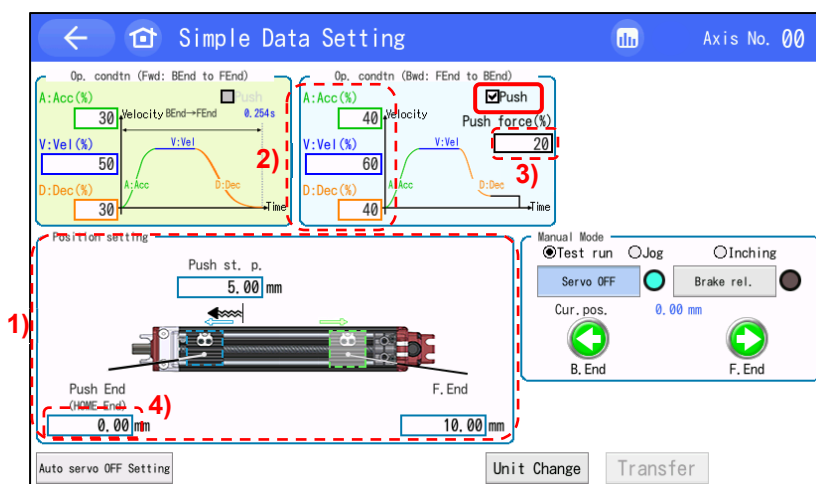


Pressing operation of Bwd (FEnd to BEnd)

- 1) Position setting [mm] : Setting can be made for the start position of movement (backward end or forward end) and the start position of pressing operation. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.
- 2) Vel and Acc/Dec : Setting can be made for the velocity, acceleration and deceleration for movement from the start position of the movement (backward end or forward end) to the start position of pressing operation.
The way to conduct settings is the same as that for positioning operation.
- 3) Push force [%] : Set a pressing torque (limit current value) in %.
The unit can be switched to N by pressing [Unit Change].
The pressing velocity should be 20mm/s.
If the velocity is set to 20mm/s or less, pressing operation will be performed in the setting velocity.
- 4) Push End [mm] : Set up the position to detect the pressing operation is missed. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.


Shown below is the content of setting for the position data for the pressing operation (3-position setting). (Rotary and Wire Cylinder excluded)

Put a check mark ✓ in the check box ☐Push and the screen goes to the setting window for the pressing operation.

(The belt driven types (EC-B6 and B7) are not available for pressing operation.)

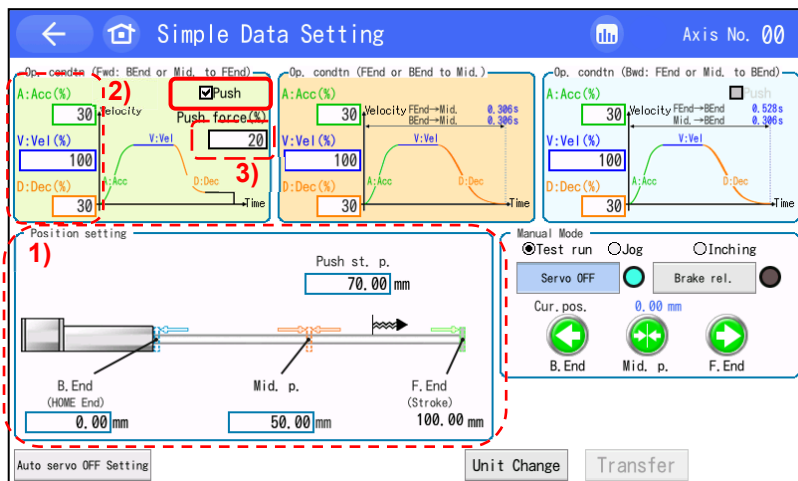

Pressing operation of Fwd (BEnd to FEnd)

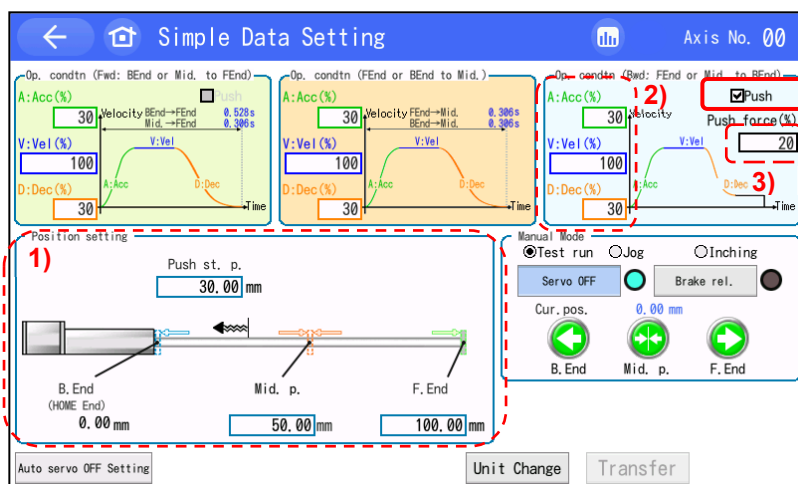


Pressing operation of Bwd (FEnd to BEnd)


- 1) Position setting [mm] : Setting can be made for the start position of movement (backward end or forward end) and the start position of pressing operation. Positioning coordinate value. Enter is as the distance from the home position. The unit is mm and input can be made down to two decimal places.
 - 2) Vel and Acc/Dec : Setting can be made for the velocity, acceleration and deceleration for movement from the start position of the movement (backward end or forward end) to the start position of pressing operation. The way to conduct settings is the same as that for positioning operation.
 - 3) Push force [%] : Set a pressing torque (limit current value) in %. The unit can be switched to N by pressing [Unit Change]. The pressing velocity should be 20mm/s. If the velocity is set to 20mm/s or less, pressing operation will be performed in the setting velocity.
- Transfer log : The transfer log will not be displayed in pressing operation. The transfer operation and manual operation is the same as the positioning operation. Refer to [6.7.1 Positioning Operation]

Shown below is the content of setting for the position data for the pressing operation (3-position setting). (Rotary)

Put a check mark ✓ in the check box ☐Push and the screen goes to the setting window for the pressing operation.

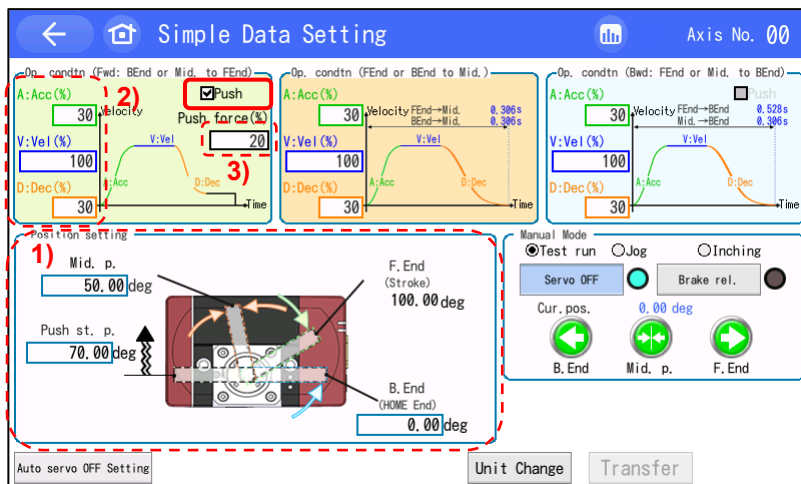

Pressing operation of Fwd (BEnd to FEnd)

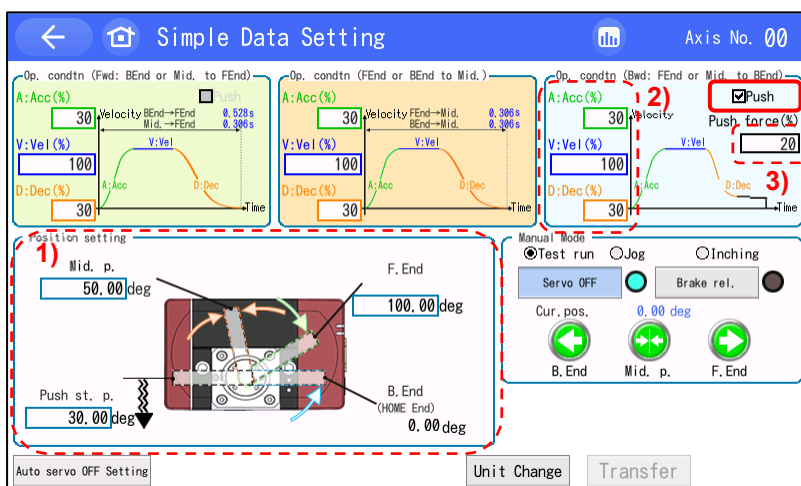


Pressing operation of Bwd (FEnd to BEnd)


- 1) Position setting [mm] : Setting can be made for the start position of movement (backward end or forward end) and the start position of pressing operation. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.
 - 2) Vel and Acc/Dec : Setting can be made for the velocity, acceleration and deceleration for movement from the start position of the movement (backward end or forward end) to the start position of pressing operation.
The way to conduct settings is the same as that for positioning operation.
 - 3) Push force [%] : Set a pressing torque (limit current value) in %.
The unit can be switched to N•m by pressing [Unit Change].
The pressing velocity should be 20deg/s.
If the velocity is set to 20deg/s or less, pressing operation will be performed in the setting velocity.
- Transfer log : The transfer log will not be displayed in pressing operation.
The transfer operation and manual operation is the same as the positioning operation. Refer to [6.7.1 Positioning Operation]

Shown below is the content of setting for the position data for the pressing operation (3-position setting). (Wire Cylinder)

Put a check mark ✓ in the check box ☐Push and the screen goes to the setting window for the pressing operation.

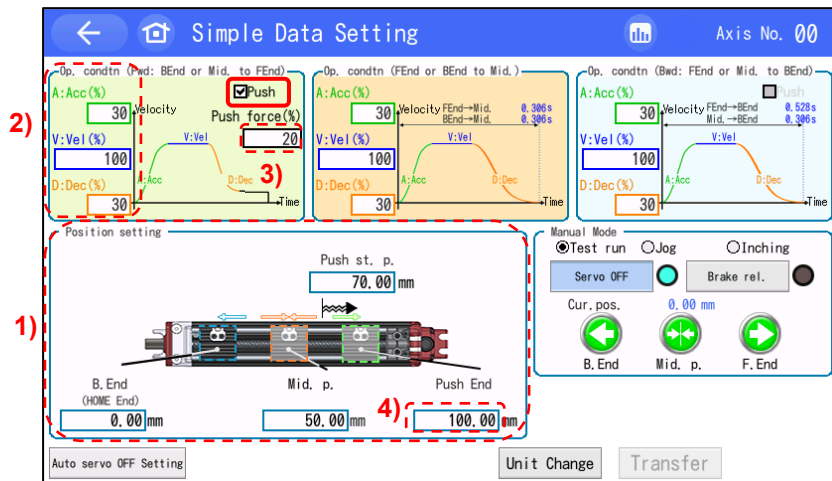


Pressing operation of Fwd (BEnd to FEnd)

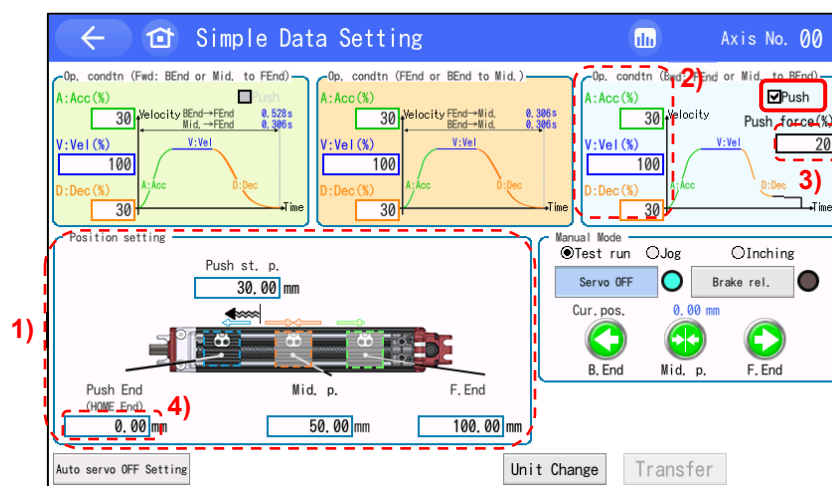

Pressing operation of Bwd (FEnd to BEnd)

- 1) Position setting [mm] : Setting can be made for the start position of movement (backward end or forward end) and the start position of pressing operation and middle point. Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.
- 2) Vel and Acc/Dec : Setting can be made for the velocity, acceleration and deceleration for movement from the start position of the movement (backward end or forward end) to the start position of pressing operation.
The way to conduct settings is the same as that for positioning operation.
- 3) Push force [%] : Set a pressing torque (limit current value) in %.
The unit can be switched to N by pressing [Unit Change].
The pressing velocity should be 20mm/s.
If the velocity is set to 20mm/s or less, pressing operation will be performed in the setting velocity.
- 4) Push End [mm] : Set up the position to detect the pressing operation is missed.
Positioning coordinate value. Enter is as the distance from the home position.
The unit is mm and input can be made down to two decimal places.

6.7.3 Manual Mode

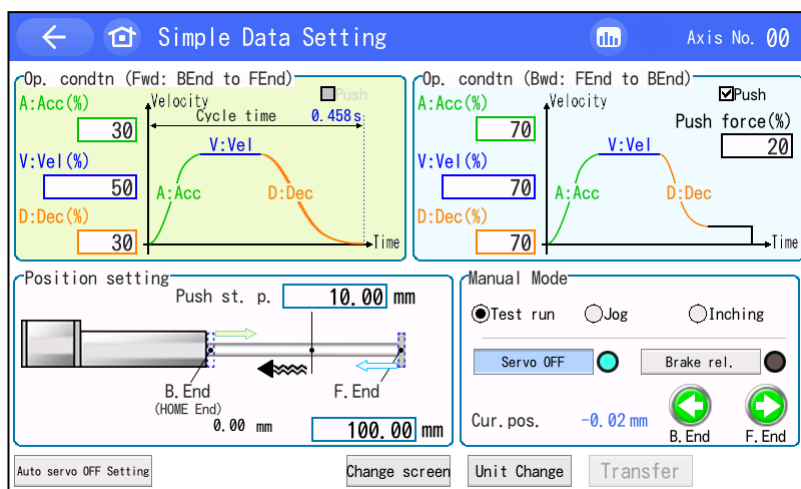


Once the simple data setup window is shown, the manual operation box should show up in the right bottom of the screen.

Selection can be made with ☐ (radio buttons) from Trial Run, Jog and Inching.

(1) Test Run


Select Test run in radio buttons (☐).

2-position setting

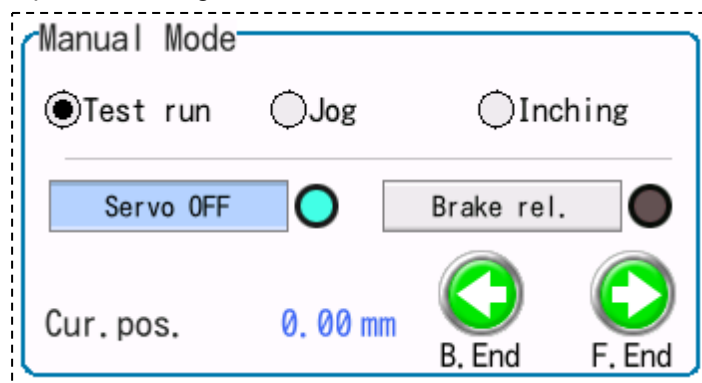

Set values not transferred

3-position setting

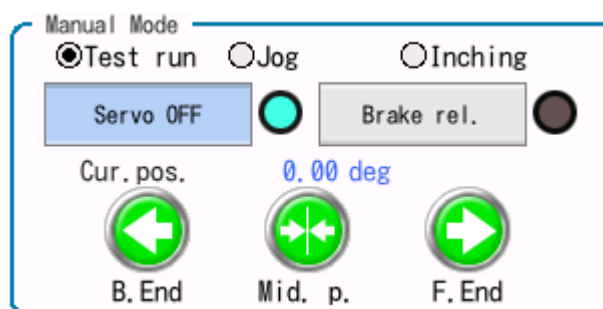

It should be switched over between power on and off by touching [Servo OFF].
It should be switched over between brake compulsory release on and off by touching [Brake rel.].

An actuator should move to the backward end if you touch [B. End].
Make operation using velocity and acceleration/deceleration in the operation conditions (Way back: from F. End to B. End).


An actuator should move to the forward end if you touch [F. End].
Make operation using velocity and acceleration/deceleration in the operation conditions (Way forward: from B. End to F. End).

An actuator should move to the forward end if you touch [Mid. P].
Make operation using velocity and acceleration/deceleration in the operation conditions (From F. End / B. End to Mid. P).

Both forward and backward operations should activate while the button is touched and held.
Release the button and the operation should stop.
[B. End] and [F. End], [Mid. P] are ready for operation when they are shown in green. If they are not green, the set values are not transferred. Transfer the set value data to a controller in advance by pressing [Transfer] button.

(2) JOG

Select JOG in radio buttons (○).

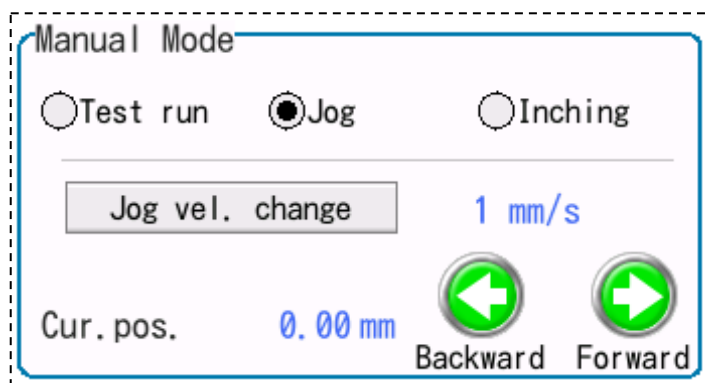

An actuator keeps moving backward while touching [Backward].
Regardless of the backward end setting, the actuator should move backwards till the home position.


An actuator keeps moving forward while touching [Forward].
Regardless of the forward end setting, the actuator should move forwards till the stroke end.

Touch [Jog vel. change] and the velocity to move backward/forward should change in the order below.

1 mm/s (deg/s) → 10 mm/s (deg/s) → 30 mm/s (deg/s) → 50 mm/s (deg/s) → 100 mm/s (deg/s)

(3) Inching

Select Inching in radio buttons (○).

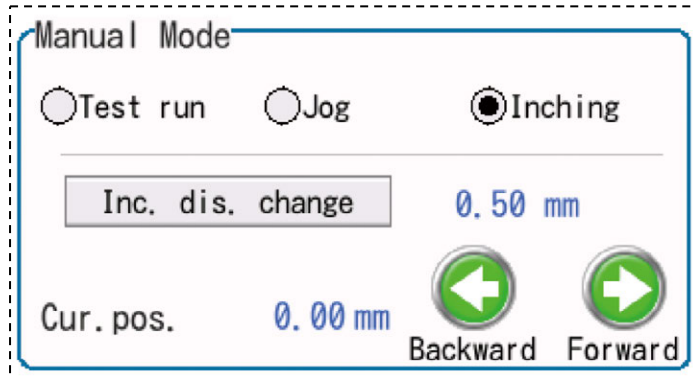

Touch [Backward] and an actuator should move backward in a certain distance. Regardless of the backward end setting, the actuator should move backwards till the home position.


Touch [Forward] and an actuator should move forward in a certain distance. Regardless of the forward end setting, the actuator should move forwards till the stroke end.

Touch [Inc. dis. change] and the distance to move in one touch should change in the order below.

0.01 mm (deg) → 0.10 mm (deg) → 0.50 mm (deg) → 1.00 mm (deg) → 5.00 mm (deg)




(4) Transfer log display (Not displayed in Wire Cylinder or 3-position setting)

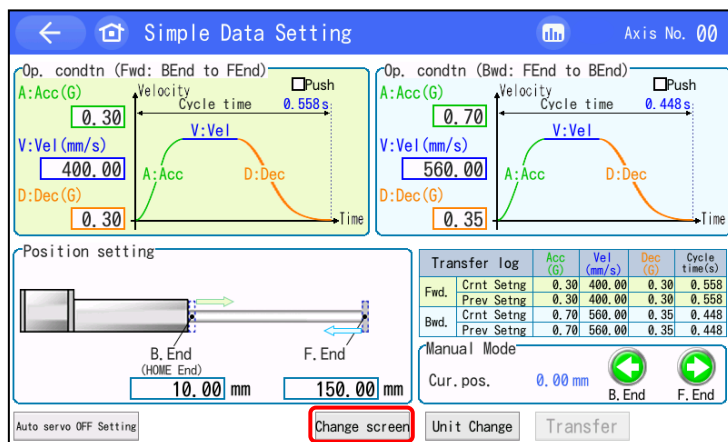

Touch [Change screen] and the screen should be switched over between the manual operation display and data transfer history display.

Switchover is available in any condition of Test run, Jog and Inching.

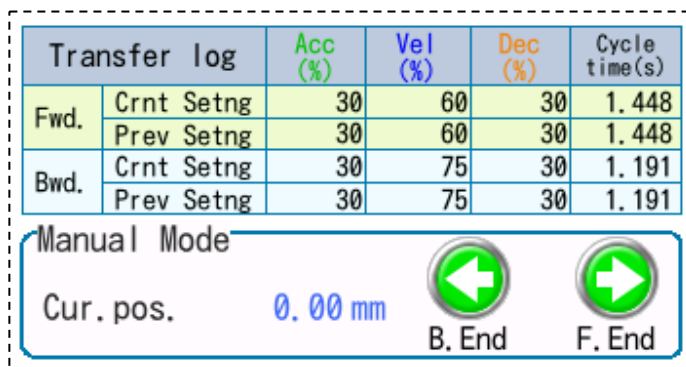


In the data transfer history display, the manual operation buttons work as [B. End] and [F. End] buttons for Test Run.


Once you switch the screen back to the manual operation display, the setting should go back to the test run.

6.7.4 Mounting Orientation Setting / Payload Setting

By setting "Payload (kg/kg-m²)" and "Mounting Orientation" on the way back and forth in advance, the acceleration and deceleration you can choose can be determined.

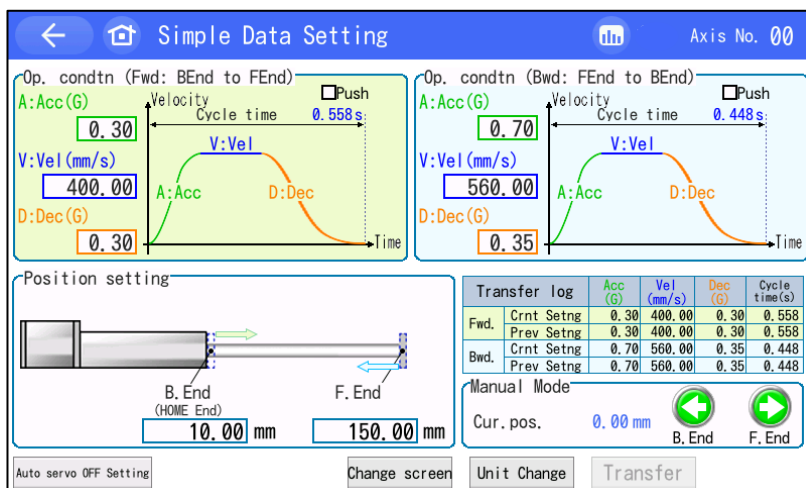


Touch either acceleration, velocity or deceleration.

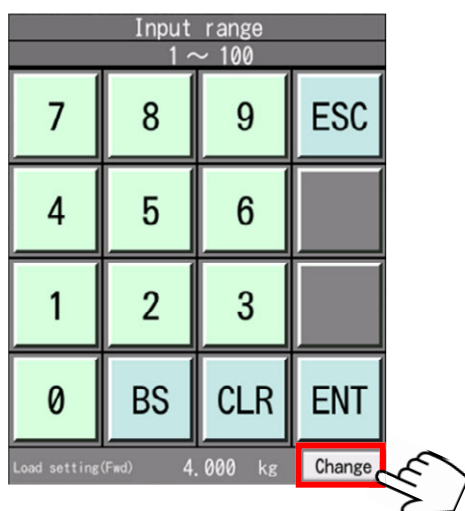


The numeric key pad should open.
Touch [Change] on the right bottom.

The models not applicable for the payload setting (refer to next page) should not have [Change] displayed.

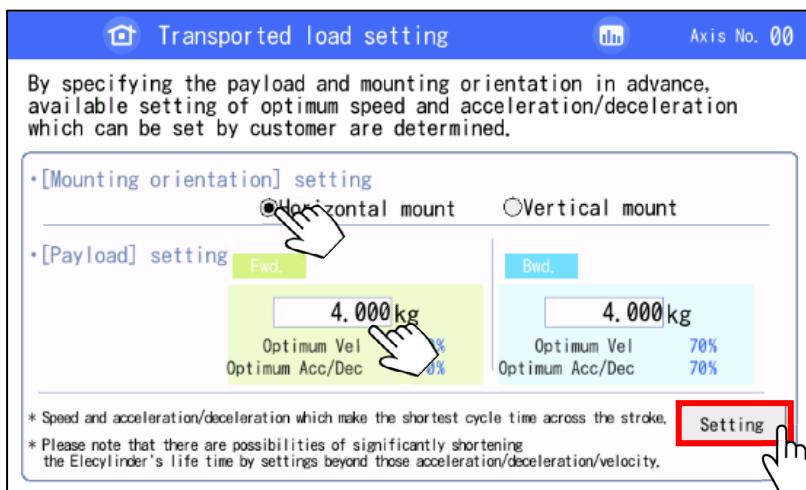

Select "Mounting orientation", input "Payload" and then touch [Setting].

The unit is "kg-m²" for rotary type

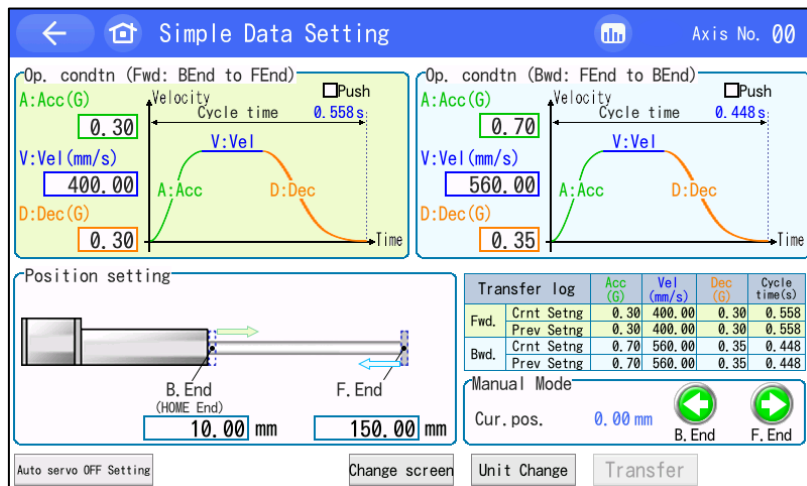

Touch an operational condition to be set or adjusted.



Input a value in the numeric keys and touch [ENT].

Transfer log		Acc (%)	Vel (%)	Dec (%)	Cycle time(s)
Fwd.	Crnt Setng	10	80	10	0.683
	Prev Setng	20	100	20	0.514
Bwd.	Crnt Setng	10	80	10	0.683
	Prev Setng	20	100	20	0.514

Manual Mode			
Cur. pos.	1.53 mm	← B. End	→ F. End
Unit Change		Transfer	

Touch [Transfer].

The values should get written to the controller, [Backward End] and [Forward End] should turn into green and "Transferred History" should be updated.


Payload Setting Not Applicable Model

- Ultra Mini ELECYLINDER : EC-SL3□/GDS3L/GDB3□/T3□
- Gripper Type : EC-GRB□/GRBP□(W)/GRC□/GRST□/GRTR□
- Stopper Cylinder ECO Type : EC-ST15M
- Wire Cylinder : EC-WER1/WEGR2


6.7.5 Auto servo OFF

When the automatic servo-off is set, the servo should turn off when the automatic servo off latency has passed after the operation completed.

The automatic servo-off latency can be set to each of back and forth ways.

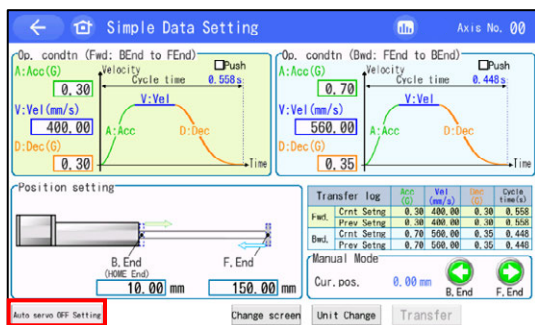


Touch [Auto servo OFF Setting] and the automatic servo-off setup window should appear.

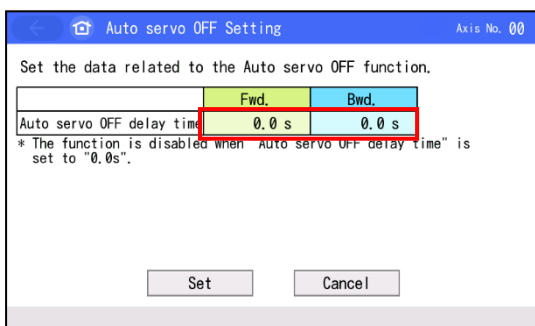


Set the automatic servo-off latency to back and forth ways.


* Set it to "0.0s", and the feature should be inactivated.

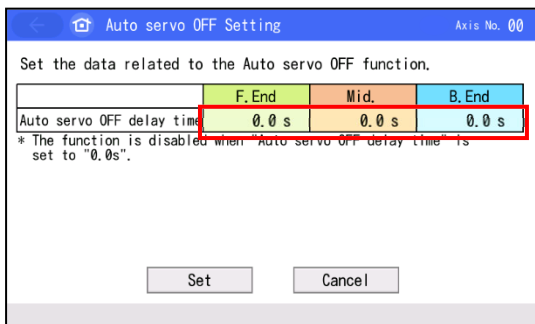

In the 3-position setting, setup for the middle position comes available.

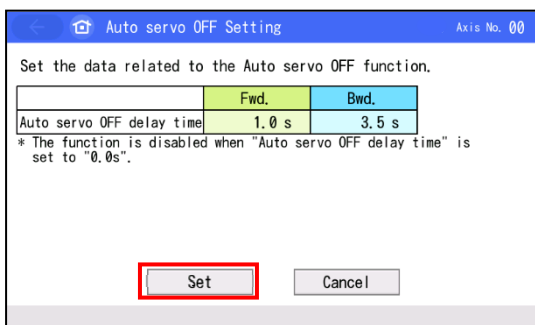

Touch [Set up] after input.

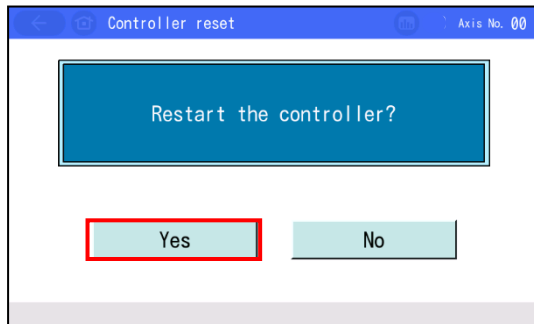

Touch [Yes].

Reboot the controller and the automatic servo-off setup is complete.


The applicable version of ELECYLINDER

Models	Version
24V system ELECYLINDER	V000D or later
200V system ELECYLINDER	V0005 or later
Ultra Mini ELECYLINDER	V0002 or later

6.8 ROBO PUMP Setting


When ROBO PUMP is connected and ROBO PUMP is selected in the Select Axis screen, the [ROBO PUMP Settings] button should be shown in the Menu 1 screen. Touch it and the screen should shift to the ROBO PUMP Setting screen.

In the ROBO PUMP setting screen, settings for suction of ROBO PUMP, release, display of status monitor, pressure setting and detail settings are available.

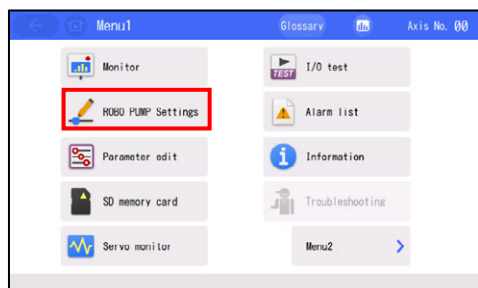

Touch [ROBO PUMP settings] on the Menu 1 screen.

If the TP operation mode is not Monitor Mode 1 or 2, the following message screen appears.

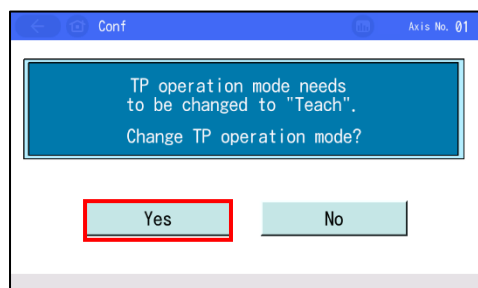

Touch [Yes] to change to Teach Mode 1 or 2.

If not, touch [No].


(Note) The safety speed does not change.

ROBO PUMP Settings screen appears.

The contents of pressure setting may differ depending on the PIO patterns and enable or disable of the Energy-saving mode.

	If the PIO pattern is 0 or 1	If the PIO pattern is 2
Energy-saving mode Disabled		
Energy-saving mode Enabled		

6.8.1 Operation Status

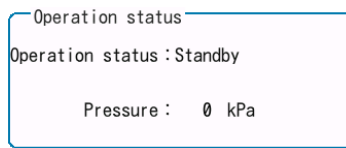

Shown below is the displayed Items.


[Displayed Items]

- Operation status : The operation status of the ROBO POMP is shown.
- Pressure [kPa] : Pressure at the vacuum pump part should be displayed.

6.8.2 I/O Signal

Shown below is the displayed Items.


If the PIO pattern is 0 or 1.

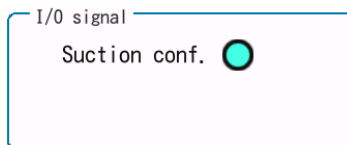

[Displayed Items]

- Suction conf. : It should turn on when suction is complete.
: It should be off when suction is not complete.

If the PIO pattern is 2.

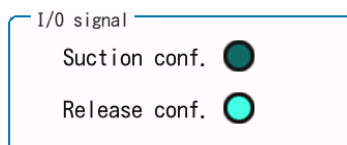


[Displayed Items]


- Suction conf. : It should turn on when suction is complete.
- Release conf. : It should turn on when release is complete.

6.8.3 Pressure setting

If the PIO pattern is 0 or 1.

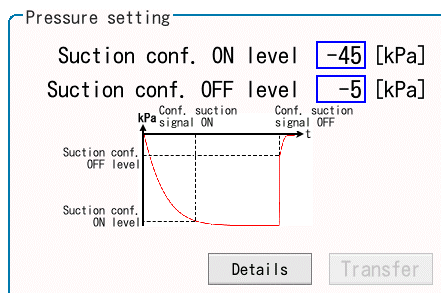

If the PIO pattern is 2.

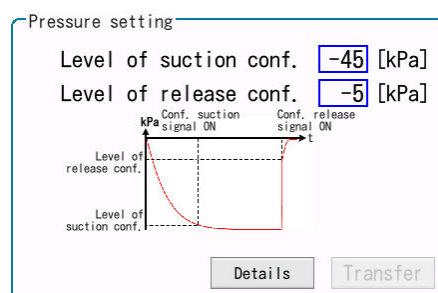

The display details, process when each button is touched are as shown below.

[Display Details When PIO Pattern is 0 or 1]

- Suction conf. ON level [kPa] : The upper limit of pressure to terminate suction should be set up. The unit is [kPa] and integers in negative can also be input. Settings cannot be changed during suction or release in the monitoring mode.
- Suction conf. OFF level [kPa] : The upper limit of pressure to terminate release should be set up. The unit is [kPa] and integers in negative can also be input. Settings cannot be changed during suction or release in the monitoring mode.
- Pressure setting graph : The relation between the suction confirmation ON and OFF levels and the pressure should be shown.

[Display Details When PIO Pattern is 2]


- Level of suction conf. [kPa] : The upper limit of pressure to terminate suction should be set up. The unit is [kPa] and integers in negative can also be input. Settings cannot be changed during suction or release in the monitoring mode.
- Level of release conf. [kPa] : The upper limit of pressure to terminate release should be set up. The unit is [kPa] and integers in negative can also be input. Settings cannot be changed during suction or release in the monitoring mode.
- Pressure setting graph : The relation between the suction confirmation and release confirmation levels and the pressure should be shown.

[Button]

- [Details] button : ROBO PUMP Details screen should be displayed
Refer to [6.8.8.1 ROBO PUMP Advanced Settings 1 screen (Energy-saving mode), 6.8.8.2 ROBO PUMP Advanced Settings 2 screen (Level setting)].
- [Transfer] button : The changed setting should be sent to ROBO PUMP.

* The [Transfer] button should be inactivated when there is no change to the settings in the monitoring mode and teaching mode or during operation of suction or release.


6.8.4 Alarm

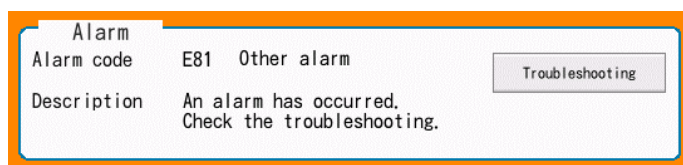

The display details, process when each button is touched are as shown below.

- Alarm code : An occurred alarm code should be displayed.
"None" should be shown when there is no alarm occurred.
- Content : An occurred alarm code should be displayed.
- [Troubleshooting] button : The screen moves to the troubleshooting window.

6.8.5 Manual Mode

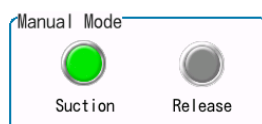


The process when each button is touched is as follows.

- [Suction] button : Touch it and the suction operation should start.
When it is in standby and data is not yet sent, it should be valid.
- [Release] button : Touch it and the release operation should start.
When PIO Pattern = 0 or 2, it should be valid during release or in standby.
When PIO Pattern = 1, it should be valid only during suction.

* The [Suction] and [Release] buttons should be inactivated in the monitoring mode and when there is changed data before transferred.

6.8.6 Release Warning Confirmation Screen

When it is attempted to move to the Menu 1 window or Select Axis window during suction, the release warning confirmation window should open.

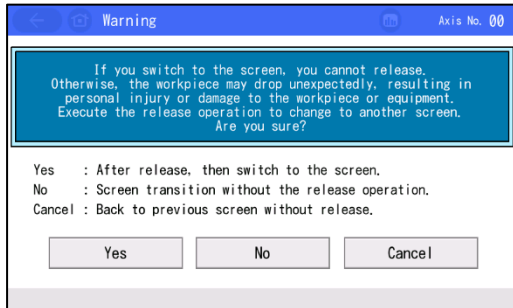


The process when each button is touched is as follows.

- [Yes] button : The screen should go to the Menu 1 window or Select Axis screen after the release process is completed.
- [No] button : The release process should not be performed before the screen goes to the Menu 1 screen or Select Axis screen.
- [Cancel] button : The release process should not be performed, and the screen should go back to the ROBO PUMP Settings (ROBO PUMP Advanced Settings) screen.

6.8.7 Deleting Data in Edit Confirmation Screen

When data has been edited, but the [Transfer] was not touched and attempted to go to the Menu 1 screen or Select Axis screen, the Deleting Data in Edit Confirmation screen should come out.

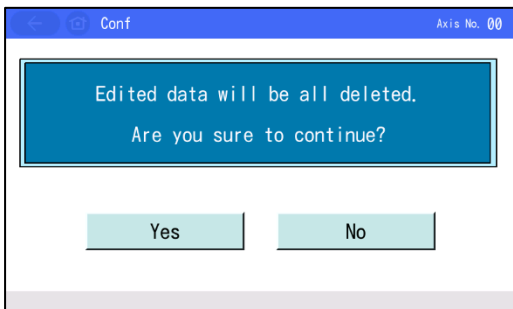


The process when each button is touched is as follows.

- [Yes] button : The data should be deleted and the screen goes to the Menu 1 screen or Select Axis screen.
- [No] button : The data should not be deleted, and the screen goes back to the ROBO PUMP Settings (ROBO PUMP Advanced Settings) screen.


6.8.8 ROBO PUMP Advanced Settings screen

By touching the [Details] in the ROBO PUMP Settings screen, the screen goes to ROBO PUMP Advanced Settings Screen 1.

In ROBO PUMP Advanced Settings Screen 1, the Energy-saving mode enable/disable can be switched over.

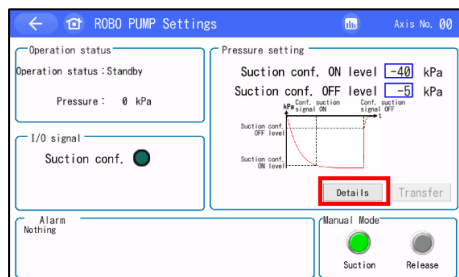


Touch [Details] on the ROBO PUMP Settings screen.

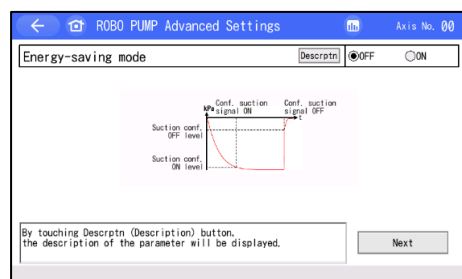


The ROBO PUMP Advanced Settings screen will be displayed.

6.8.8.1 ROBO PUMP Advanced Settings 1 screen (Energy-saving mode)

Energy-saving mode: Disabled

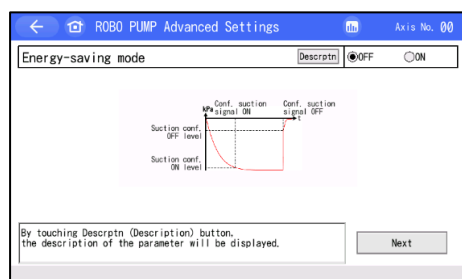

Energy-saving mode: Enabled

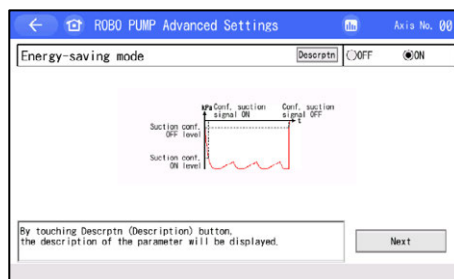

The display, setting details and process when each button is touched are as shown below.

- [Descrptn] button : Touch it and an explanation of the Energy-saving mode should be shown at the bottom of the window.
- [OFF], [ON] radio button : Setting for disable and enable of the Energy-saving mode can be conducted.
Touch ○ (radio button) at the item that you would like to set up or text string.
○ (radio button) of the selected item should turn into black.
- Pressure setting graph : It should display the relation between the suction confirmation ON/OFF level and pressure when the PIO pattern is 0 or 1, and relation between suction confirmation and release confirmation levels and pressure when the PIO pattern is 2.
- Energy-saving mode : Touch the [Descrptn], and an explanation of the Energy-saving mode should be shown.
- [Next] button : ROBO PUMP Advanced Settings screen 2 (Level setting) should be displayed.


6.8.8.2 ROBO PUMP Advanced Settings 2 screen (Level setting)

By touching the [Next] in ROBO PUMP Advanced Settings Screen 1, the screen goes to ROBO PUMP Advanced Settings Screen 2.

In ROBO PUMP Advanced Settings Screen 2, setting of suction confirmation ON level, suction confirmation OFF, suction confirmation and release confirmation level can be conducted.

The suction confirmation ON level, suction confirmation OFF, suction confirmation and release confirmation level are to be determined by the setting of the PIO patterns.

Also, when the Energy-saving mode is enabled, the setting of the suction stop level can be established.

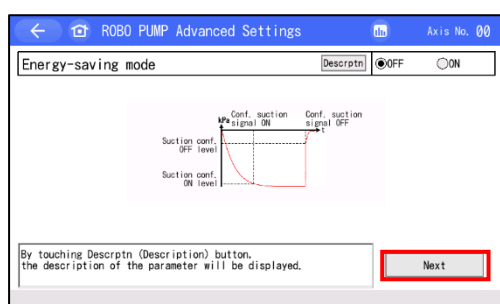


Touch [Next] on the ROBO PUMP Settings screen 1.

The ROBO PUMP Settings screen 2 will be displayed.


The display details, process when each button is touched are as shown below.

[Display Details When PIO Pattern is 0 or 1]

Energy-saving mode: Disabled

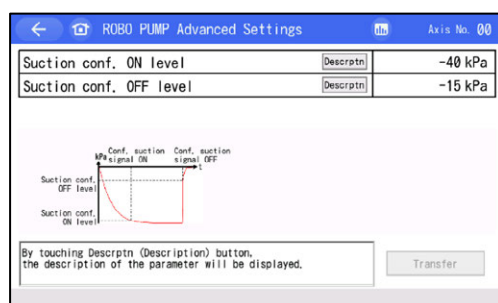


Energy-saving mode: Enabled

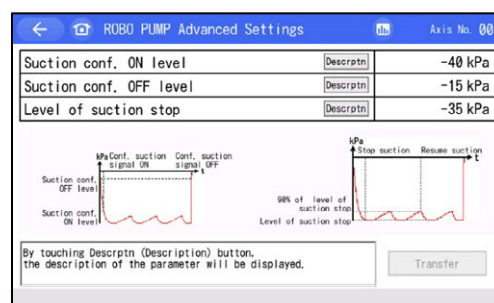


- Suction conf. ON level : The pressure to turn the suction confirmation signal ON is set up. A negative integer can be input. The suction confirmation signal should turn ON when the pressure gets below the set value.
- Suction conf.OFF level : The pressure to turn the suction confirmation signal OFF is set up. A negative integer can be input. The suction confirmation signal should turn OFF when the pressure gets above the set value.
- Level of suction stop : Pressure to stop suction operation when the Energy-saving mode is activated should be set. A negative integer can be input. Once the pressure reaches the value set in this parameter, the suction action stops, and the suction action resumes when the pressure goes above 90% of the set value.

[Display Details When PIO Pattern is 2]

Energy-saving mode: Disabled

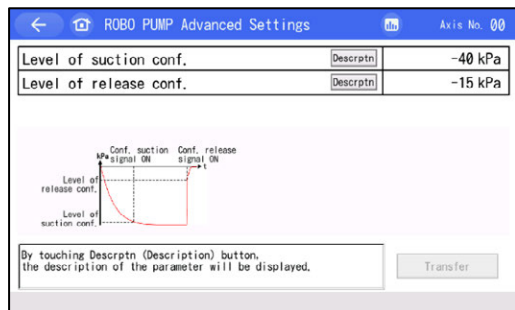

Energy-saving mode: Enabled

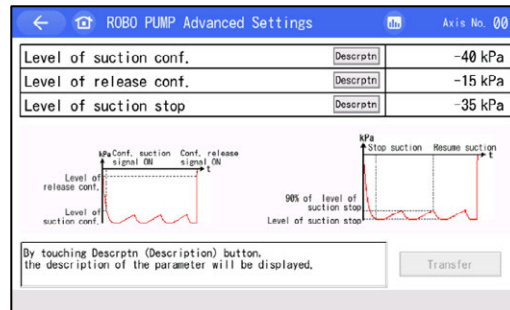


- Level of suction conf. : The pressure to turn the suction confirmation signal ON is set up. A negative integer can be input. The suction confirmation signal should turn ON when the pressure gets below the set value.
- Level of release conf. : The pressure to turn the release confirmation signal ON is set up. A negative integer can be input. The release confirmation signal should turn ON when the pressure gets above the set value. The release confirmation signal should turn ON when the pressure gets above the set value. It should turn OFF when the suction signal turns on.
- Level of suction stop : Pressure to stop suction operation when the Energy-saving mode is activated should be set. A negative integer can be input. Once the pressure reaches the value set in this parameter, the suction action stops, and the suction action resumes when the pressure goes above 90% of the set value.

ROBO PUMP advanced setting screen 2 process when each button is touched are as shown below.

- [Descrptn] button : Touch the Descrptn button, and an explanation of the level setting should be shown at the bottom of the screen.
 - Parameter : Touch the [Descrptn], and an explanation of the parameter should be shown.
 - [Transfer] button : The changed setting should be sent to ROBO PUMP.
- * The [Transfer] button should be inactivated when there is no change to the settings in the monitoring mode and teaching mode or during operation of suction or release.


6.9 Parameter Edit

Parameters are displayed and edited.
Conduct it while an actuator or ROBO PUMP is not in operation.

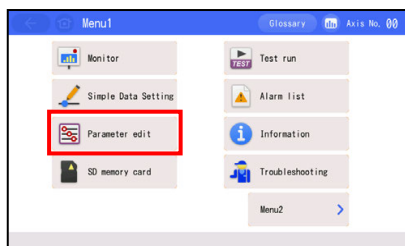

Touch [Parameter edit] on the Menu 1 screen.

If a system password is not “0000,” the password entry screen appears.

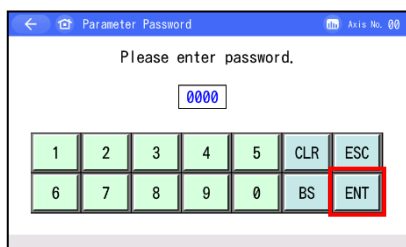

Input the parameter edit password.
Touch [ENT].

The parameter edit password at delivery is set to “0000”.
For how to change the parameter edit password, refer to [6.16 Environment Setting [Parameter Edit Password Change]].

A parameter table is displayed.

Parameter		Axis No. 00
1. Operation Range Adjustment	Descriptn	200.00 mm
2. AutoSwitch“LS” Signl Dectn Rng Adjst	Descriptn	0.10 mm
3. HOME Direction Change	Descriptn	<input type="radio"/> Opposite <input checked="" type="radio"/> Default
4. HOME Position Adjustment	Descriptn	3.00 mm
5. Smooth accel/decel Setting	Descriptn	<input checked="" type="radio"/> Invalid <input type="radio"/> Valid
6. Current control setting while stop	Descriptn	<input checked="" type="radio"/> Invalid <input type="radio"/> Valid
7. Reserve		
8. Reserve		


By touching Descriptn (Description) button, the description of the parameter will be displayed.

The displayed items may differ depending on models.

(1) Basic operation

There are two types of input, one is to input a setting value and the other is to touch ☐ (radio button) to select.

Item to input a setting value

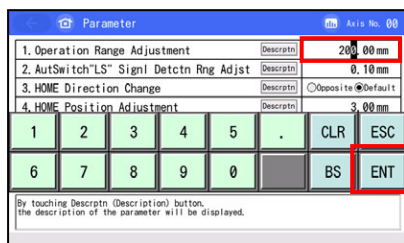


Touch the item that you would like to make a setting, and the setting parameter starts flashing and numeric keys will show up.

Touch numbers on the numeric keys to input and touch [ENT].

When the process needs to be cancelled after the numeric keys appear, touch [ESC].


Item to touch ☐ (radio button) to select

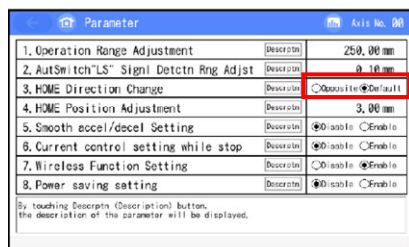


Touch ☐ (radio button) of the item or the text itself that you would like to select.


A black dot will be marked in ☐ (radio button) that you selected.

Descriptions

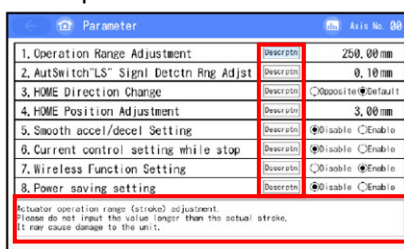


Touch [Descrptn] button and the descriptions of the setting items will be shown in the bottom of the screen.

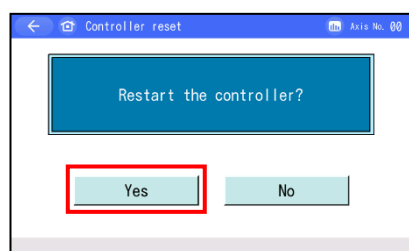

Touch Home Button  once all the settings are completed. A confirmation window asking "Restart the controller?" will come up. Touch [Yes] if you have made a change.

Touch [No] to return to the parameter screen without restarting the controller or reflecting the parameter you have set. To reflect the parameter you have set, you must restart the controller.


Caution: If the controller is not restarted, the parameter that has been rewritten does not translate to the intended action.
The parameter will become effective once the controller is restarted or power is reconnected.

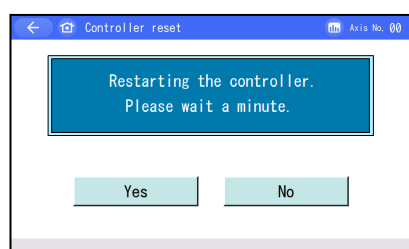

The controller is restarted, after which the parameter you have set will be reflected.

6.10 Test Run


You can perform jog/inching operation, move to a position or continuously to multiple positions registered in the position table, or move to a position by specifying the position directly. As it comes to the feature of only the I/O test for ROBO PUMP, the button should get to [I/O Test].

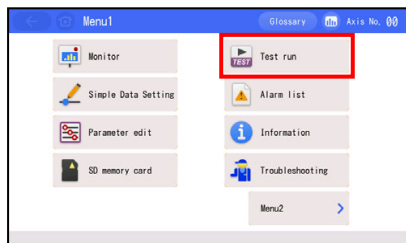

Touch [Test run] on the Menu 1 screen.

For ROBO PUMP, touch the [I/O test] and the screen shifts to the I/O test window. Refer to [6.10.4 I/O Test]

The test run menu screen appears.

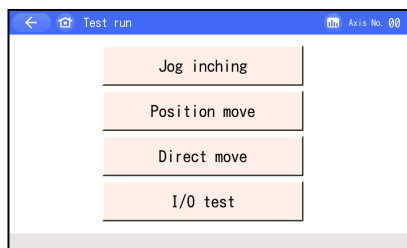

Touch either one of [Jog inching], [Position move], [Direct move] or [I/O test].

- (1) Jog inching
Perform jog/inching operation.

Refer to [6.10.1 Jog Inching Operation] for details about how to operate.

- (2) Position move
Movement to the forward end or backward end or continuous movement should be performed.
 - Move
Movement should be made from the current position to either of the forward end or the backward end which has been indicated. (One time of movement only)
 - Continuous
Movement should be made repeatedly between the forward end and the backward end.

Refer to [6.10.2 Position Movement Operation] for details about how to operate.

- (3) Direct move
Input the target position and the speed on the numeric keys to perform movement.

Refer to [6.10.3 Direct Movement Operation] for details about how to operate.

- (4) I/O test
Monitoring of the input and output signals and compulsory output of the output signal can be conducted.

Refer to [6.10.4 I/O Test] for details about how to operate.

6.10.1 Jog Inching Operation

You can perform jog operation and inching operation..



Jog/Inching Screen



When Alarm Generated

[Operation on the Jog inching screen]


- Jog vel. / Inching : Select either of 1, 10, 30, 50 or 100mm/s of JOG speed or 0.01, 0.10, 0.50, 1.00, 5.00mm of inching distance, and JOG operation with the selected speed or inching operation with the selected distance can be conducted. The circle (radio button) on the selected one will be marked with a black dot.
- [Servo] : It shows the status of the servo whether it is ON or OFF for the axis. When the servo is ON, display of ○ is activated and it is inactivated when the servo is OFF.
- [Homing] : Touch [Homing] and the home-return operation should get executed after a confirmation window for execution is displayed. ○ display should get illuminated when the home-return operation is completed and ○ display should turn off when the home-return operation is incomplete.
- [Brake rel.] : For an actuator equipped with a brake, touch [Brake rel.] and the brake gets compulsorily released and the circle turns on. Touch [Brake rel.] again and the brake works and the circle turns off.
- [Alarm reset] : After removing a cause of an error, touch [Alarm reset] to cancel the alarm.
- [BACK (-)], [FWD (+)]: When JOG operation is selected, while touching them, the axis moves in the set speed. When inching operation is selected, every time touching them, the axis moves for the set distance. [BACK (-)] performs JOG operation in negative direction. [FWD (+)] performs JOG operation in positive direction.

In inching operation, touch and hold them for two seconds, and JOG operation will be performed in 1mm/sec. The speed increases in every 1 second afterwards.


Caution: An axis could drop if the brake compulsory release is performed while the servo is off when the axis is installed in the vertical orientation.

6.10.2 Position Movement Operation


Move to a position or continuously to multiple positions registered in the position table.
The items to be displayed should differ depending on valid/invalid of the safety velocity.
Refere to [6.11 TP Operation Mode]

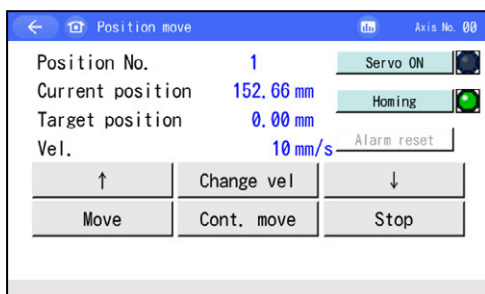


When Safety Velocity is Valid

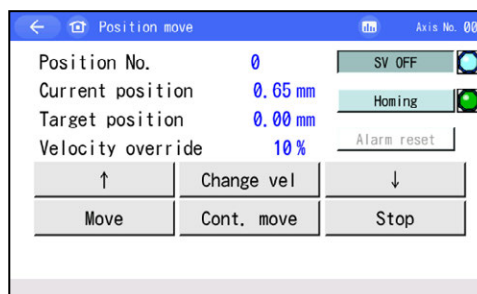

When Safety Velocity is Invalid

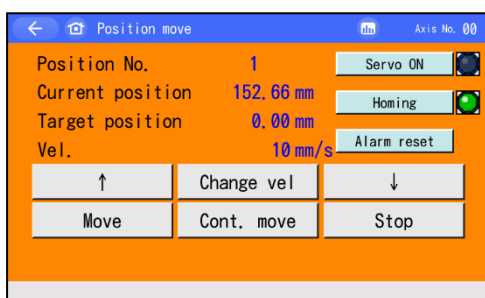

When Alarm Generated
with Safety Velocity Activated

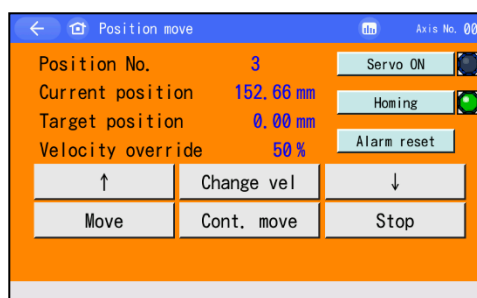

When Alarm Generated
with Safety Velocity Inactivated




[Operation on the position movement screen]

- Position No. : "1" should be shown when the forward end is selected and "0" when the backward end is selected.
- Current position : Displays the current position.
- Target position : Displays the target position set in the selected position number.

When Safety Velocity is Valid;

- Vel. : The set velocity (mm/s) should be displayed.

When Safety Velocity is Invalid;

- Velocity override : Displays the selected speed override (%).
- [Servo ON] : It shows the status of the servo whether it is ON or OFF for the axis. When the servo is ON, display of  is activated and it is inactivated when the servo is OFF.
- [Homing] : Touch [Homing] and the home-return operation should get executed after a confirmation window for execution is displayed.  display should get illuminated when the home-return operation is completed and  display should turn off when the home-return operation is incomplete.
- [Alarm reset] : After removing a cause of an error, touch [Alarm reset] to cancel the alarm.

- [↑], [↓] : Touch [↑] or [↓] to select a position number (1: forward end, 0: backward end) for the movement target.
- [Change vel] : When Safety Velocity is Valid
Speed can be changed in order of 1mm/s, 10mm/s, 30mm/s, 50mm/s and 100mm/s every time touching [Change vel].

: When Safety Velocity is Invalid
Speed override can be changed in order of 10%, 50% and 100% every time touching [Change vel].
- [Move] : Touching [Move] moves the axis to the target position.
- [Cont. move] : Touch [Cont. Move] and the axis performs continuous operation between the forward end and backward end till touching [Stop].
- [Stop] : Touching [Stop] stops the axis.




6.10.3 Direct Movement Operation

A position is specified directly to move the axis.



Direct Movement Screen When Alarm Generated

[Operation on the direct movement screen]

- **Current position** : Displays the current position.
- **Target position** : Touching "Target position" displays the numeric keypad. Enter a desired target position and then touch [ENT].
- **Vel.** : Touching "Vel." displays the numeric keypad. Enter a desired speed and then touch [ENT].
- **[Servo ON]** : It shows the status of the servo whether it is ON or OFF for the axis. When the servo is ON, display of  is activated and it is inactivated when the servo is off.
- **[Homing]** : Touch [Homing] and the home-return operation should get executed after a confirmation window for execution is displayed.  display should get illuminated when the home-return operation is completed and  display should turn off when the home-return operation is incomplete.
- **[Alarm reset]** : After removing a cause of an error, touch [Alarm reset] to cancel the alarm.
- **[Move]** : Touching [Move] moves the axis to the target position you have set.
- **[Stop]** : Touching [Stop] stops the axis.


6.10.4 I/O Test

PIO input signal and the output signal can be monitored.


You can also touch OUT00 to OUT03 to forcibly turn ON/OFF the corresponding output signals.

Output signal ON/OFF should not be available in any status other than release of ROBO PUMP.

[Operation on the I/O test screen]

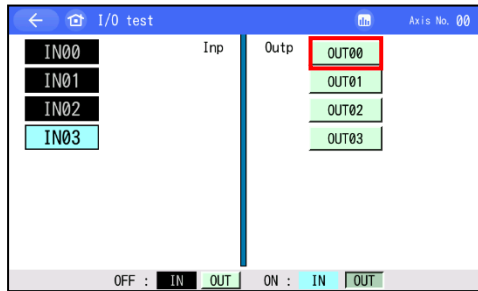

If it is necessary to turn on OUT00 which is currently off, touch [OUT00].

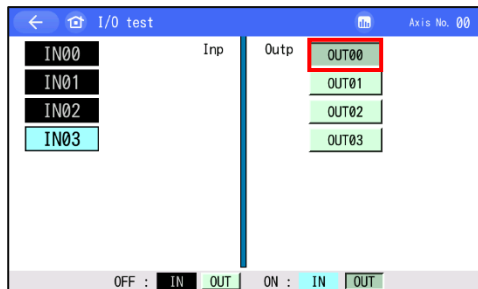


OUT00 turns on.

Touch [OUT00] again and it turns off.


6.11 TP Operation Mode

An operation mode is set if the manual (MANU) mode is selected.

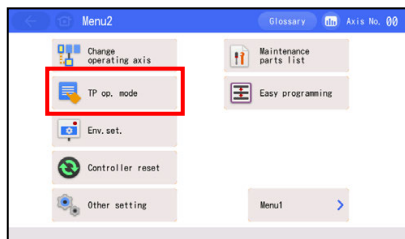

Touch [TP op. mode] on the Menu 2 screen.

The TP operation mode screen appears.

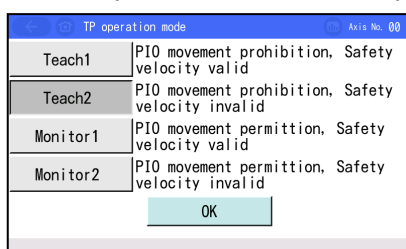


Select and touch [Teach1] or other desired mode.

Select a manual operation mode from the menu containing the following four items:

- Teach1 (PIO movement prohibition / Safety velocity valid)
 PIO movement prohibition : Writing of contents and parameters in the simple data setting screen to the controller and command to the actuator operation system are available.
 Safety velocity valid : The maximum velocity should be the safety velocity (100m/s) regardless of the velocity indication in the simple data setting screen.
- Teach2 (PIO movement prohibition / Safety velocity invalid)
 PIO movement prohibition : Writing of contents and parameters in the simple data setting screen to the controller and command to the actuator operation system are available.
 Safety velocity invalid : Operation in the velocity set in the simple data setting screen (higher than the safety velocity) becomes available.
- Monitor1 (PIO movement permission / Safety velocity valid)
 PIO movement permission : Only monitoring is permitted. Writing of contents and parameters in the simple data setting screen to the controller or command to the actuator operation system are not available. Operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 Safety velocity valid : The maximum velocity should be the safety velocity (100m/s) regardless of the velocity command from the PLC.
- Monitor2 (PIO movement permission / Safety velocity invalid)
 PIO movement permission : Only monitoring is permitted. Writing of contents and parameters in the simple data setting screen to the controller or command to the actuator operation system are not available. Operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 Safety velocity invalid : You can move the actuator at the velocity (higher than the safety velocity) according to the command from the PLC.

6.12 Alarm List

A list of alarms that may generate after the controller power is turned on is shown.

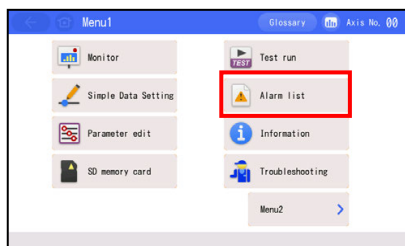


Touch [Alarm list] on the Menu 1 screen.

Alarm list will be displayed.


- ELECYLINDER display items
- ROBOPUMP display items

:No., Group, Name, Address, Code, Time (hh:mm:ss)
:No., Code, Name, Address, Detail, Time (hh:mm:ss)

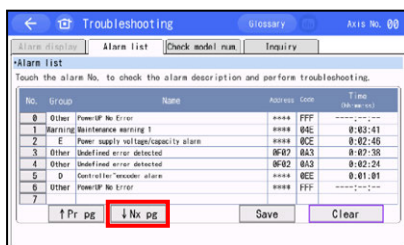

A list of 8 items of the latest alarms and warnings should be displayed.


Touch [↓ Nx pg] and a list of the next 8 items should be shown.

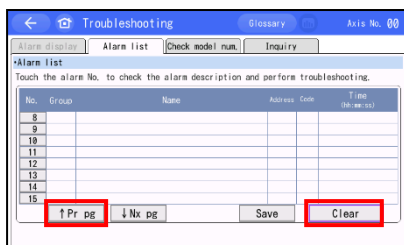

Touch [↑ Pr pg] and a list of the previous 8 items should be shown.

Touching [Clear] clears all alarm details.

The time of occurrence of each alarm is indicated by an elapsed time from this "FFF PowerUP No Error".

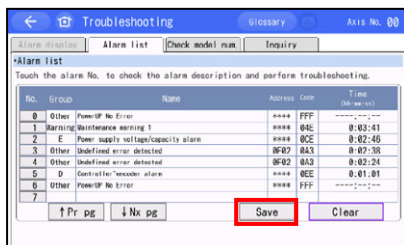


Touch [Save] and the screen goes to the screen to save to a Secure Digital memory card.

Refer to [6.17 Data Backup] for how to operate to save data to a Secure Digital memory card.


6.13 Controller Reset

The controller is restarted.

6.13.1 ELECYLINDER Reset

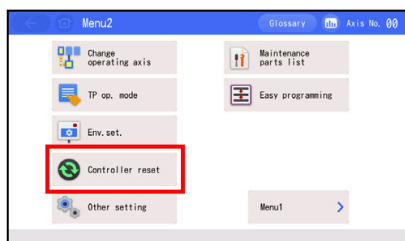


Touch [Controller reset] on the Menu 2 screen.

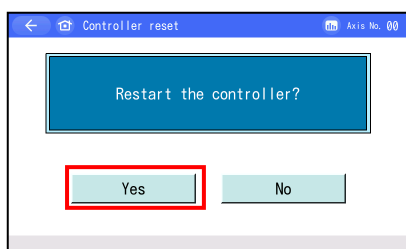

Touch [Yes].


Touch [No] to return to the Menu 2 screen without restarting the controller.

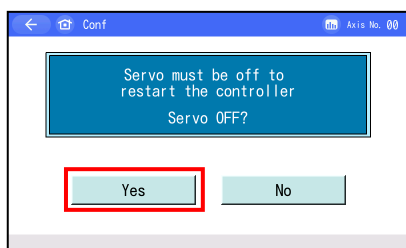

This window appears if the servo is ON.

Touch [Yes].

Touch [No] to return to the Menu 2 screen without restarting the controller.

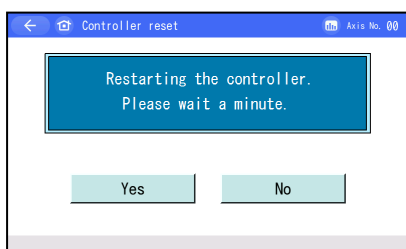


The controller is restarted.




Returns to Menu 1 screen.

6.13.2 ROBO PUMP Reset

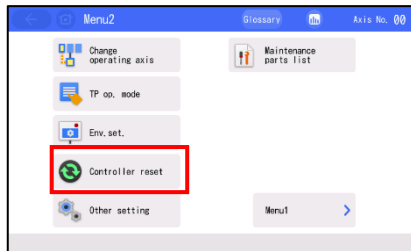


Touch [Controller reset] on the Menu 2 screen.

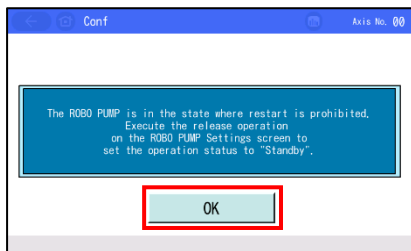

Touch it while in suction, and the window to show reboot prohibited should be displayed.


Touch [OK] to return to the Menu 2 screen to have it desorbed, and touch [Controller Reboot again].

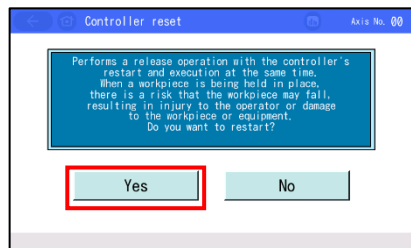

In order to have a release operation at the same time as execution of reboot, a message to pull attention should be displayed.

Confirm that there is no problem in rebooting, and touch [Yes].

Touch [No] to return to the Menu 2 screen without restarting the controller.

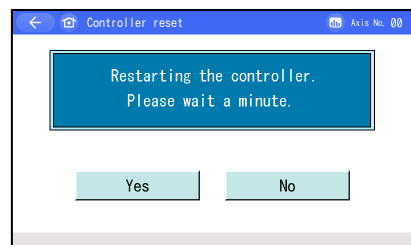


The controller is restarted.



Returns to Menu 1 screen.


6.14 Other Setting

Parameter initialization, axis number change and operation sound tuning should be conducted.

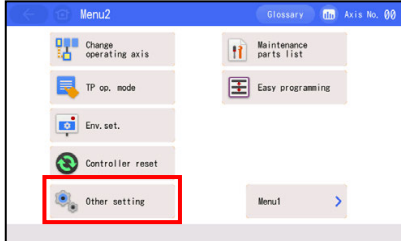

Touch [Other setting] in Menu 2 screen.

For ROBO PUMP, have it conducted while it is desorbed.

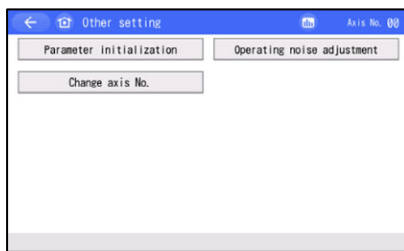

Other setting screen opens.

Select one from [Parameter initialization], [Change axis No.] and [Operating noise adjustment] that you would like to carry on and touch the button.


There is no feature to adjust the operational sounds for ROBO PUMP.

6.14.1 Parameter Initialization


The parameters are reset to their factory default settings (initialized).

Caution: Once the parameters are initialized (to their factory default settings), all parameters the user has set will return to the values set at the factory. Exercise caution.


Touch [Parameter initialization] in Other setting screen to display Parameter initialization screen.

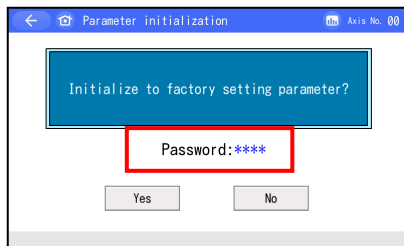

Touching [Password] displays the numerical keypad. Input "5119" and touch [ENT].

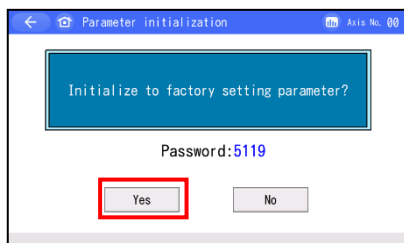

Touch [Yes], and the confirmation screen for controller reboot appears.

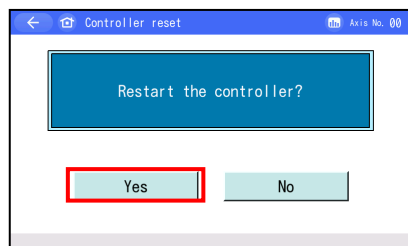


Touch [Yes].

Touch [No], and the controller will not be rebooted and the screen returns to the previous.


Caution: If the controller is not restarted, the parameters that have been rewritten to their factory settings do not translate to the factory-set operations. The factory settings will become effective once the controller is restarted or power is reconnected.

6.14.2 Axis Number Change


Touch [Change axis No.] in Other setting window to display Axis No. setting screen.

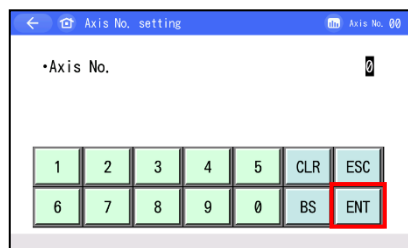

You can set a value between 0 and 15.
Set a desired axis number and then touch [ENT].

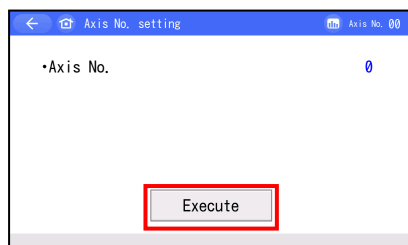

Touch [Execute].

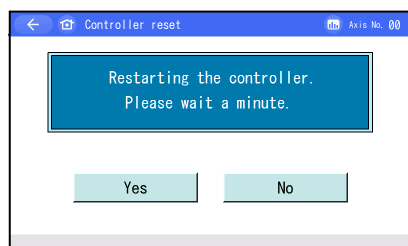

Returns to Menu 1 screen.


6.14.3 Operating Noise Adjustment (Applicable models only)

The operation noise can be tuned.

By having it tuned, possibility of an operation noise error could be reduced.

Touch the [Operating noise adjustment] in the Other Setting window to display the operating noise adjustment window.


- For models that support level setting

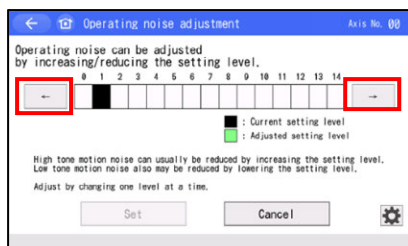

Touch [←] and [→] on the right and left of the levels to adjust the level one by one to perform tuning.


Once the tuning is finished, touch [Set].

- For models that support pattern setting

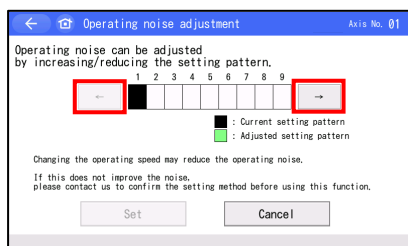


Touch [←] and [→] on the right and left of the pattern to adjust the pattern one by one to perform tuning.

Once the tuning is finished, touch [Set].

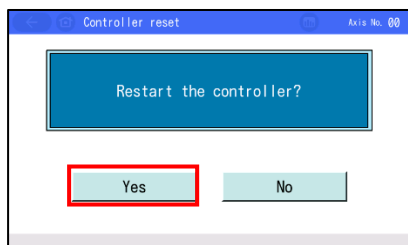

Touch [Yes].

Touch [No] and a restart of the controller would not be performed and the screen goes back to the previous window.

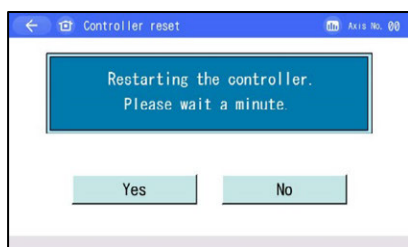


The controller should be restarted.


The screen goes back to Menu 1.

6.15 Information Display

Information such as the controller version, manufacturing information and maintenance information is displayed.

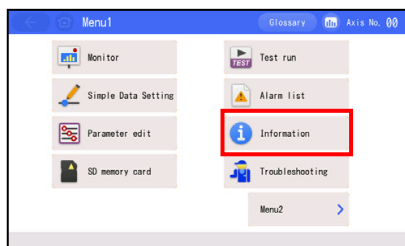

Touch [Information] on the Menu 1 screen.

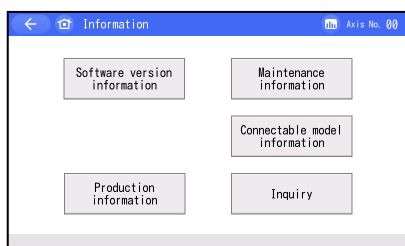

The information screen appears.


Touch a button of the feature that you would like to display such as [Software version information].

6.15.1 Display Screen for Each Type of Data

6.15.1.1 Software version information


Touch [Software version information] in Information screen.

Software version information will be displayed.

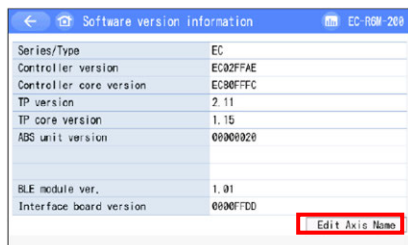

ELECYLINDER software version information screen.

Touch [Edit Axis Name] and the name of axes can be edited. Refer to [6.15.2 Axis Name Edit] for how to edit an axis name.

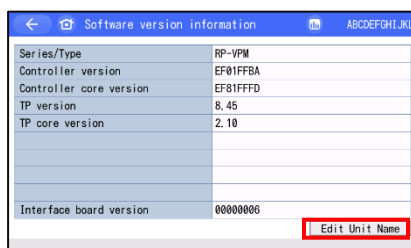


ROBOPUMP software version information screen.

Touch [Edit Unit Name] and the name of unit can be edited. Refer to [6.15.2 Axis Name Edit] for how to edit a unit name.

6.15.1.2 Production information


Touch [Production information] in Information screen.

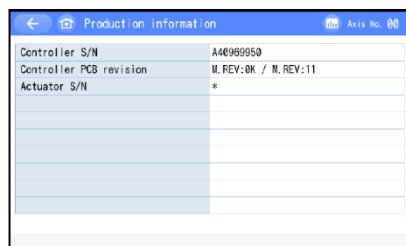

Production information screen appears.

6.15.1.3 Maintenance information

Touch [Maintenance information] in Information screen.

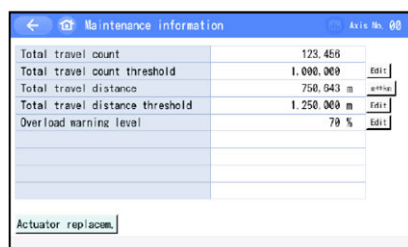


Maintenance information screen appears.

Refer to [6.6.3 Maintenance Information Screen] for how to operate displayed button.

6.15.1.4 Connectable model

Touch [Connectable model] in Information screen.

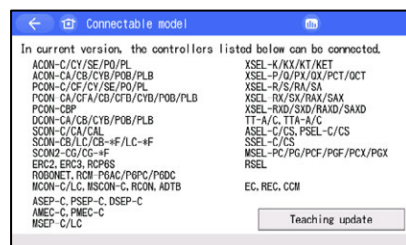


Connectable model screen appears.

Refer to [10.2 Teaching Update] for how to update teaching.

6.15.1.5 Inquiry

Touch [Inquiry] in Information screen.

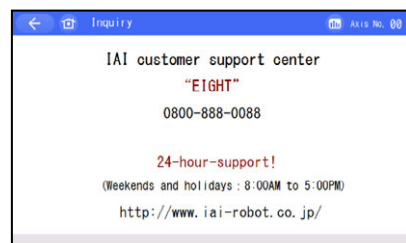


Inquiry screen appears.

6.15.2 Axis Name Edit


A name can be set on an axis of the ELECYLINDER and a unit of the ROBO PUMP. To show the name, select “Axis Name” at the axis name display section in the environment setting screen. Refer to [6.16 Environment Setting [Axis Name Display]]

The set name should be displayed on the right top of each window and the Select Axis screen. Even if “Axis Name” is selected in the environment setting screen, axis numbers should be displayed if the axis name is not set.

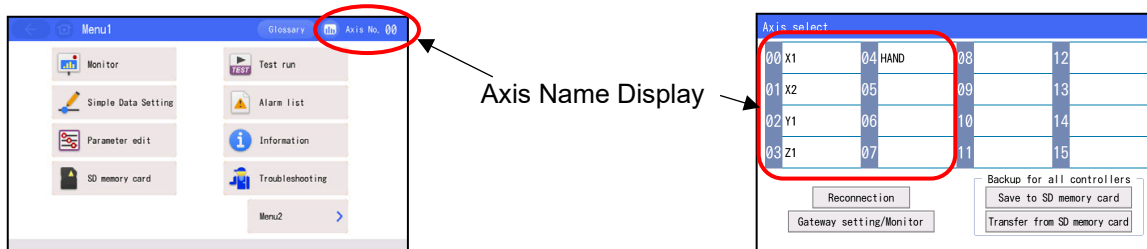


(Note) The available characters for setting in TB-02 are capitalized font English characters (from A to Z) and numbers (from 0 to 9).

[Axis Name Edit Operation]

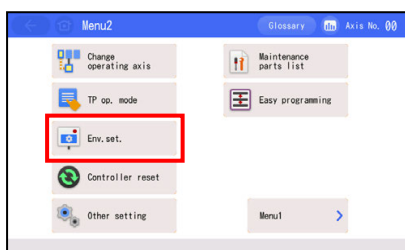


Touch [Env. set.] on the Menu 2 screen.

For ROBO PUMP, have it conducted while it is desorbed.

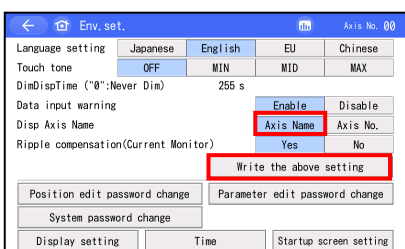


Set to “Axis Name” for the axis name display.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

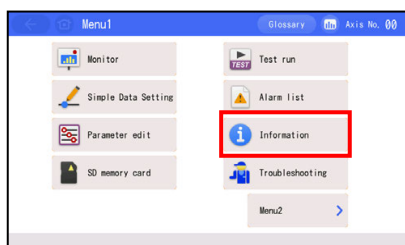


Touch [Information] on the Menu 1 screen.

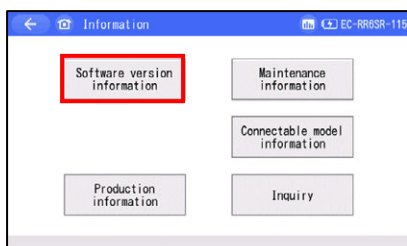

Information screen opens.


Touch [Software version information].

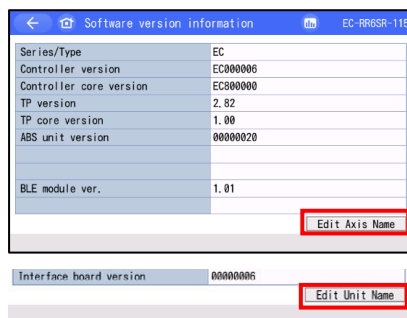

The Software version information screen will be displayed.


Touch [Edit Axis Name] in the case of ELECYLINDER.

Touch [Edit Unit Name] in the case of ROBO PUMP.

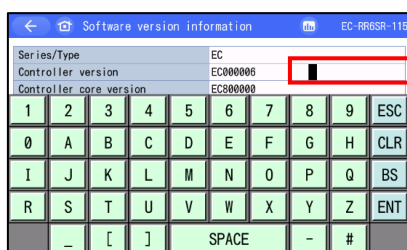

On the right of the Controller version display is the input area.


Character select buttons are shown in the half bottom of the screen.

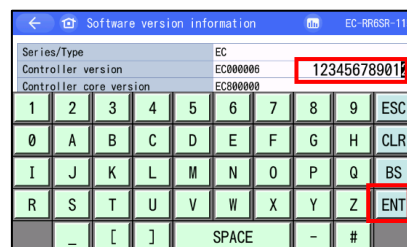

Input a name and touch [ENT].

The number of characters available for input is 12 in half-size font characters.

Touch [ENT] with nothing input, and it is defined as no setting. With no setting, an axis number will be shown.

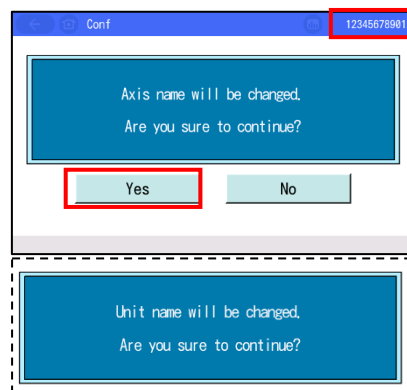

The change confirmation screen will appear, with the axis name input shown in the right top.

This status is still a temporary setting.


Touch [Yes] to confirm the setting.

Touch [No] and the condition goes back to before setting.


(Display of change confirmation window in ROBO PUMP)

6.16 Environment Setting

You can change the language setting, touch operation sound setting, dim display time setting, data input warning setting, axis name display setting, ripple compensation setting, position editing password change, parameter edit password change, system password change, display setting, time setting and Startup screen setting.

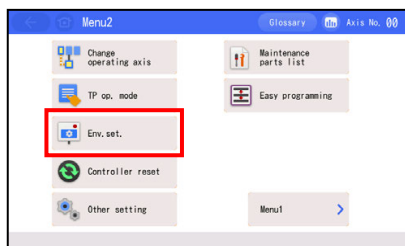


Touch [Env. set.] on the Menu 2 screen.

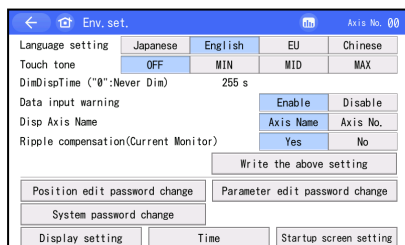

The environment setting screen appears.

[language setting]

Select a language to show from Japanese/English/EU/Chinese.

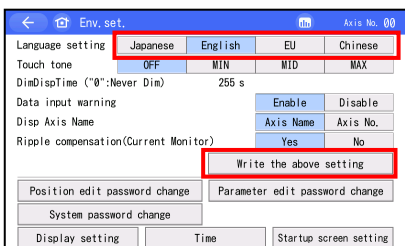


Touch a language (such as [Japanese]) to show.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

For the operation procedures in detail to change the language, refer to [6.1 Display Language Change].

[Touch tone]

You can select whether or not to output a touch tone.

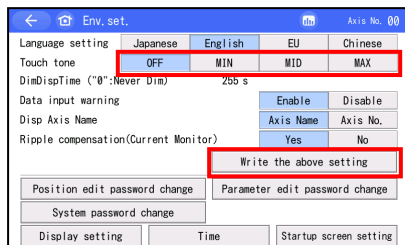


Touch [OFF]. A touch tone is not output.

Touch [MAX], [MID] or [MIN]. A touch tone is output.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

[DimDispTime]

Set the dim display time when not being operated.
Zero seconds mean the display is on all the time.

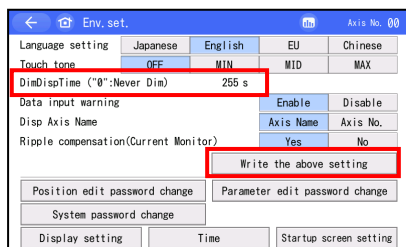

Touching [DimDispTime ("0": Never Dim) 0 sec] displays the numerical keypad.


Enter a desired time and touch [ENT].

You can set a value between 0 to 255 seconds.

Touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

[Data input warning]

The warning can be output when a value less than the minimum speed and a value exceeding the rated acceleration/deceleration speed are entered in the position data. Note that the value is entered even if the warning occurs. Always use within the specification of the actuator.

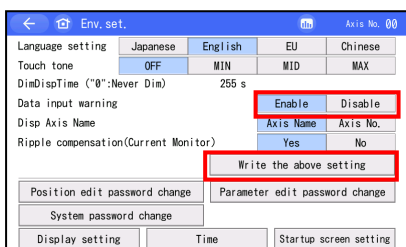


Touch [Enable] to give the warning.

Touch [Disable] not to give the warning.

Select either Enable or Disable, and then touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

[Axis Name Display]

Make a selection whether to show the name or number for axis display.

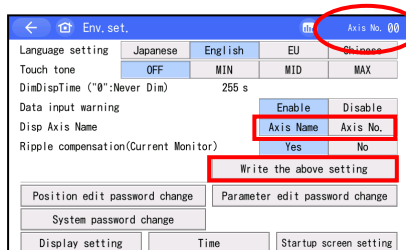

Axis Name Display

Touch [Axis Name] and the name will be shown.

Touch [Axis No.] and the number will be shown.


Select either Axis Name or Axis No, and touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

The axis name can be set in Software version information screen.

Refer to [6.15.2 Axis Name Edit]

[Ripple Compensation]

Setting should be established to select whether to have ripple compensation or not to have it in the monitor window as the initial setting.

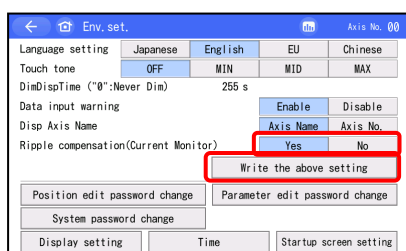


Touch [Yes] and the setting should be established with ripple compensation.

Touch [No] and the setting should be established without ripple compensation.


Select either yes or no and touch [Write the above setting]. The setting will not be changed when you move to another window without touching it.

[Change Pos Edit Password] Change the position edit password.

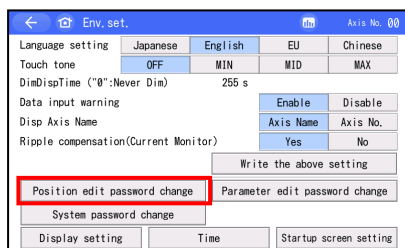


Touch [Position edit password change].

If the system password is not "0000", the password entry screen appears.

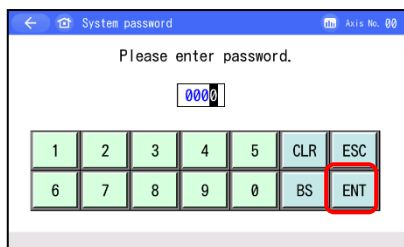


Input a system password.
Touch [ENT].

The default system password is "5119".
For how to change the system password, refer to
[Change System Password] as described later.

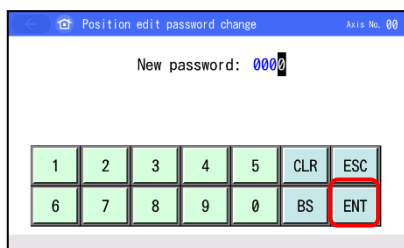


Enter the new position edit password to change to.
If the position edit password is not set, enter "0000".

Touch [ENT].

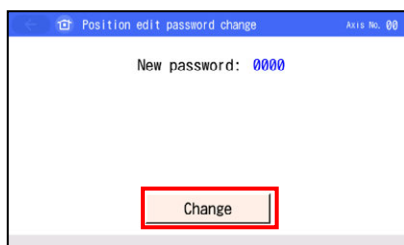


Touch [Change].

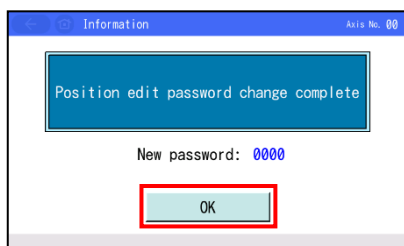

The new password after change will be displayed. Make
sure it shows the same as the password you have set.


Touch [OK].

[Change Parameter Edit Password] Change the parameter edit password.

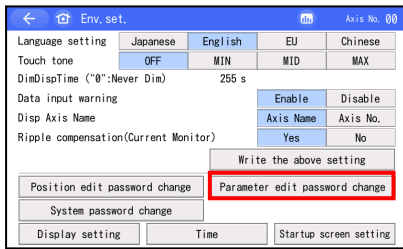


Touch [Parameter edit password change].

If the system password is not "0000", the password entry screen appears.

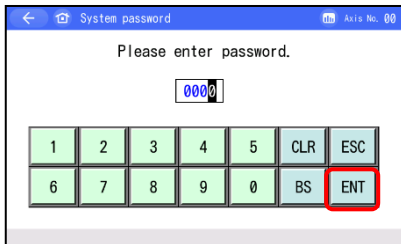


Input a system password.
Touch [ENT].

The default system password is "5119".
For how to change the system password, refer to
[Change System Password] in the next page.

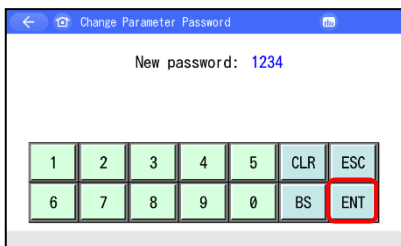


Enter the new parameter edit password to change to.
If the parameter edit password is not set, enter "0000".

Touch [ENT].

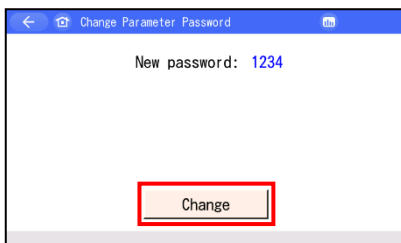


Touch [Change].

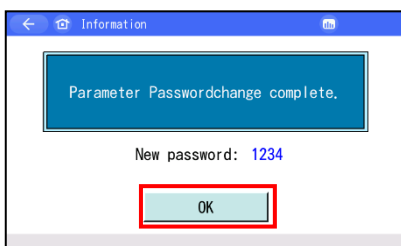

The new password after change will be displayed. Make
sure it shows the same as the password you have set.


Touch [OK].

[Change System Password] Change the system password.

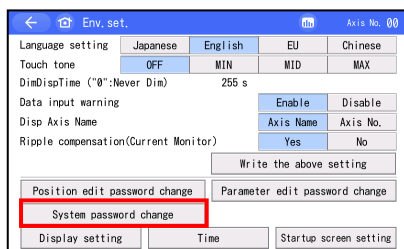

Touch [System password change].


If the system password is not "0000", the password entry screen appears.

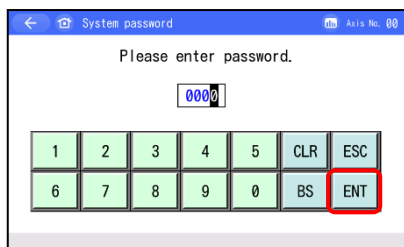

Input the system password that is currently set.


Touch [ENT].

The default system password is "5119".

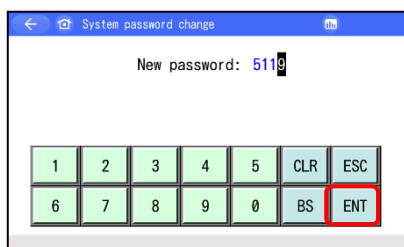


Enter the new system password to change to.
If you do not set the system password, enter 0000.

Touch [ENT].

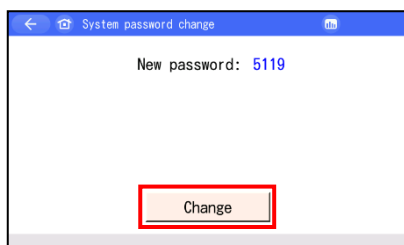

Touch [Change].

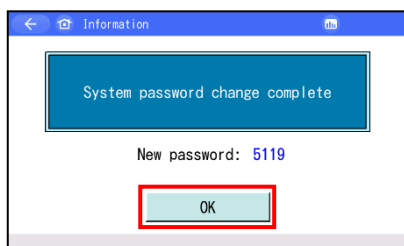


The new password after change will be displayed. Make sure it shows the same as the password you have set.

Touch [OK].


[Display setting]

Adjustment of contrast and brightness of the screen, position tuning for touch panel and LCD screen check can be performed.

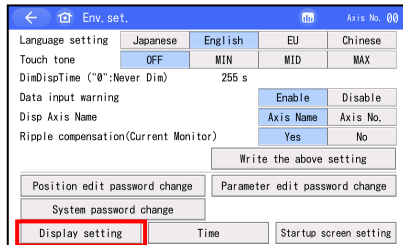

Touch [Display setting].


Display setting menu screen is displayed.

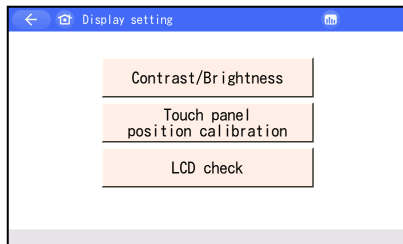


Select Display setting menu.

• Change the Contrast/Brightness

You can adjust contrast (shading of liquid crystal) and brightness (of liquid crystal).

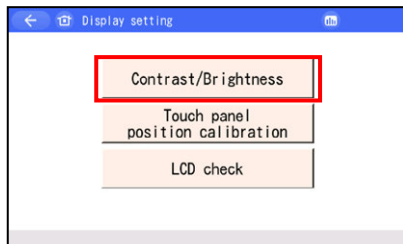

Touch [Contrast/Brightness].

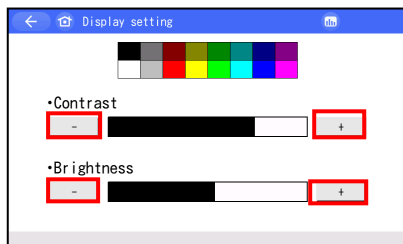

Contrast adjustment


Touch [-] and [+] under Contrast to adjust the contrast of the screen.

Brightness adjustment


Touch [-] and [+] under Brightness to adjust the brightness of the screen.

- Touch panel position calibration

A calibration for the position detection of the touch panel is performed.

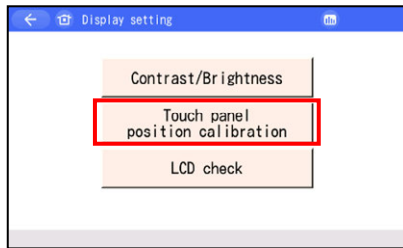

Touch [Touch panel position calibration].

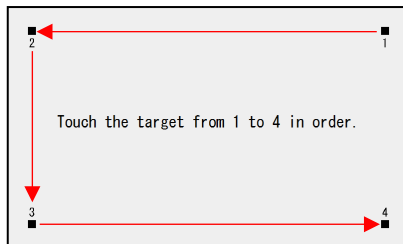


Touch [■] in the order of 1, 2, 3 and 4.

The display returns to Display setting menu screen.


- LCD Check

LCD display can be checked in the order of Color Pattern, White Only and Black Only.

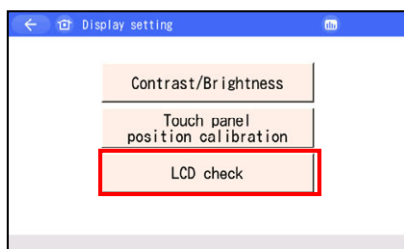

Touch [LCD check].

Color Pattern is displayed.

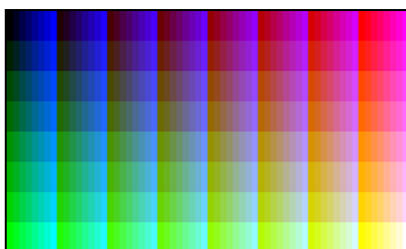


Touch any point on the screen.

White Only is displayed.



Touch any point on the screen.

Black Only is displayed.




Touch any point on the screen.


The display returns to Display setting menu screen.

[Time Setting]


You can set the time for TB-02.

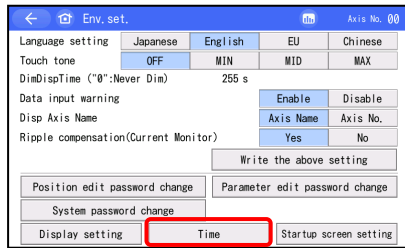


Touch [Time].

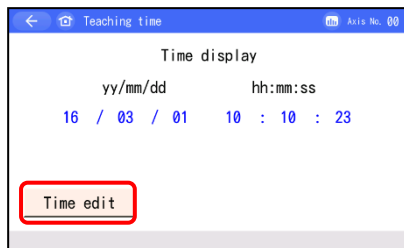


The time of TB-02 is displayed.
Touch [Time edit].

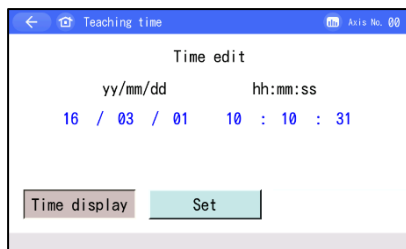

Touch the value of year, month, day, hour, minute or second that is required to be changed.

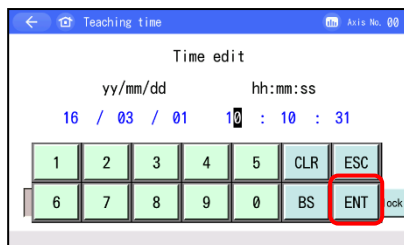

Numeric keys are displayed
Input a value and touch [ENT]

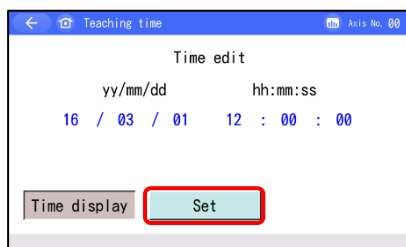


Touch [Set].



The clock setting complete window is shown and the clock in TB-02 gets changed.

[Startup screen setting]


Setting can be established for the window shown in the screen first after the power is turned on. Also, show/hide can be selected for the icons of Position edit guide, I/O control guide and Easy setting in Menu 1 screen.

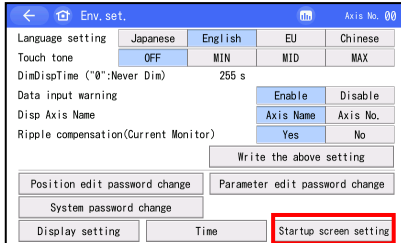


Touch [Startup screen setting].

1) Guide Icon Display Select

This button is not to be used for ELECYLINDER and ROBO PUMP.

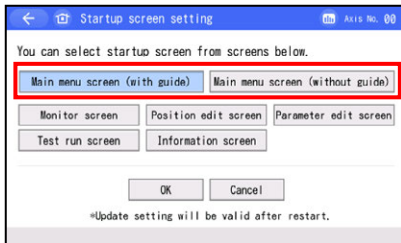

2) Initial Screen Select at Startup

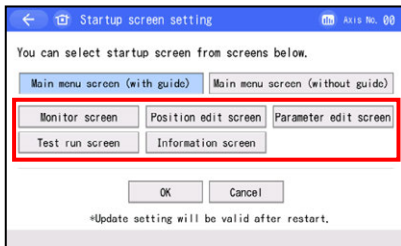

Select a screen from those below for the screen shown first after the power is turned on.

- [Monitor screen]
- [Position edit screen] (Note 1) (Note 2)
- [Parameter edit screen]
- [Test run screen] (Note 2)
- [Information screen]

Touch either one to select and touch [OK].

Note 1 Select [Position edit screen], and Simple Data Setting Screen should be displayed at the startup.

Note 2 The Menu 1 screen should be displayed at startup for ROBO PUMP.

6.17 Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and the controller.

(Note) Type of Stored Data

This includes the position data, parameters and alarm list.

There is no position data in ROBO PUMP.

It is not applicable to the backup data storable in the RC PC software.

(Note) Extensions of the Stored Data

- The file extensions of the data stored to the Secure Digital card are the same as those dealt in RC PC software, and are compatible. For instance, the position data for the ELECYLINDER is ptpc and the parameters are prpc.

Refer to the [details of the file extensions in the RC PC Software Instruction Manual]

- The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.

(Note) Directories of the Stored Data

The folders to store the backup data of the controller and the folder to read the data from when restoring the data to the controller are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore.

If the folder does not exist, it is automatically created.

- *Position Data* : \TB_CON\Position\File Name
- *Parameter* : \TB_CON\Parameter\File Name
- *Alarm List* : \TB_CON\Alarmlist\File Name


(Note) Files with Chinese names are not supported.




Caution: For a Secure Digital memory card, choose a SD/SDHC memory card with 1G to 32G. (Toshiba-made recommended) Also, Have FAT32 Format for the file system.

6.17.1 Data Backup of the Controller

The data in the controller is transferred to the Secure Digital memory card for backup.

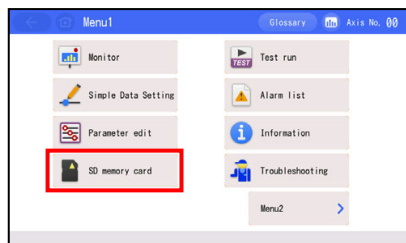


Touch [SD memory card] in Menu 1 screen.

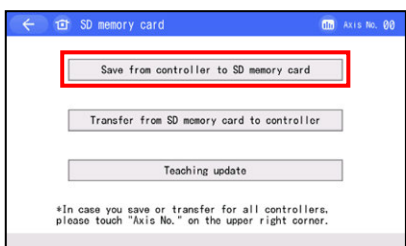

SD memory card screen opens.


Touch [Save from controller to SD memory card].

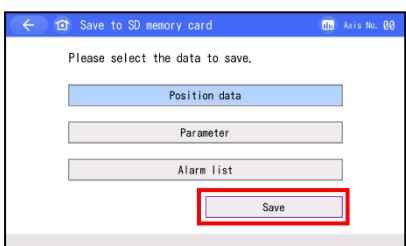

Select the data type for the backup such as [Position data] and touch it. (Multiple selection available)
The data type been selected will be shown in light blue.


There is no position data in ROBO PUMP.

Touch [Save].

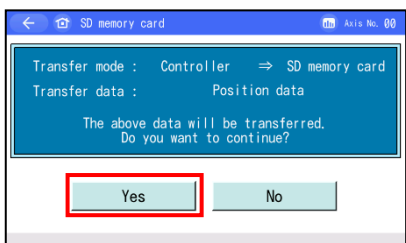


Touch [Yes].

Touch [No], and the screen returns to the previous screen.

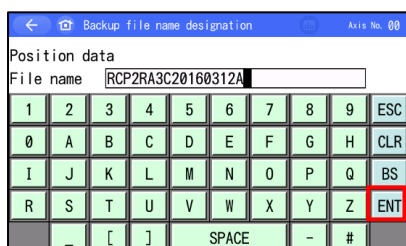


Numeric keys are displayed. Input a file name and touch [ENT].

The file name is to be typed with 32 characters at maximum in letters and numbers.

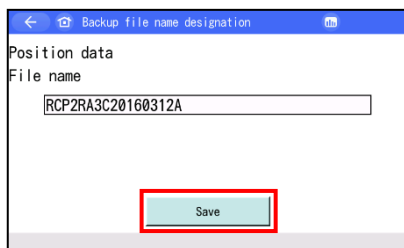


Touch [Save].

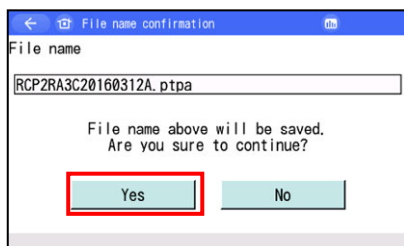

The screen below appears if the same name is not found.

Touch [Yes].


If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

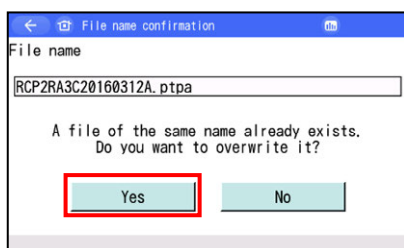


The screen below appears if the same name is found.

Touch [Yes] if overwriting data.

If [No] is touched, the screen goes back to the previous one to indicate the backup file name in which the numeric keys were shown.

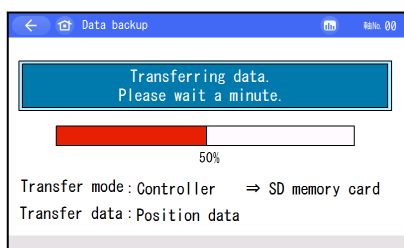

Data transfer screen will be shown.

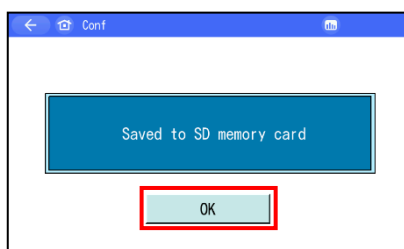


A message to tell the data transfer is complete pops up and the backup process is finished.

Touch [OK], and the screen returns to SD memory card screen.


6.17.2 Restore to Controller

Data in the Secure Digital Memory card is transferred to the controller.

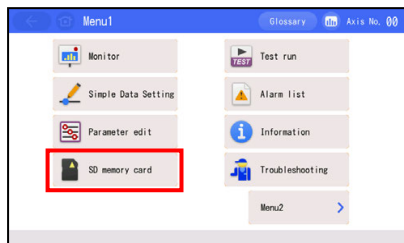


Touch [SD memory card] in Menu 1 screen.

For ROBO PUMP, have it conducted while it is desorbed.

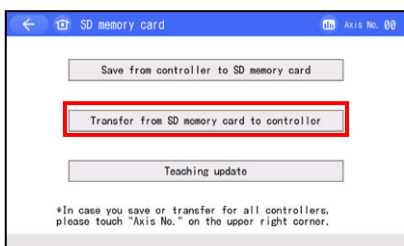

SD memory card screen opens.


Touch [Transfer from SD memory card to controller].

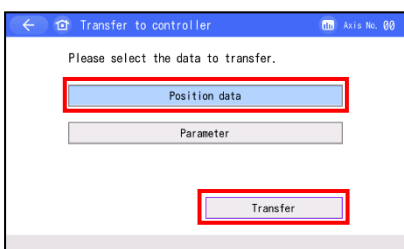

Select the data type to transfer to the controller, such as [Position data], and touch it. (Multiple selection available)
The data type been selected will be shown in light blue.


There is no position data in ROBO PUMP.

Touch [Transfer].

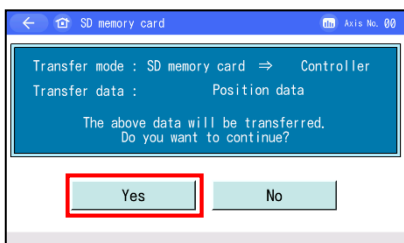


Touch [Yes].


If [No] is touched, the screen goes back to the data backup screen.

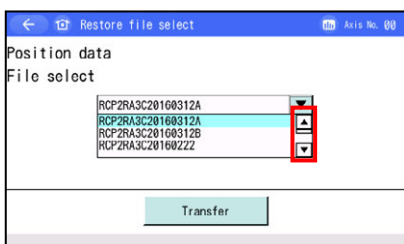

Touch ▲ and ▼ to select a file to transfer to the controller from the list of the backed up file names.

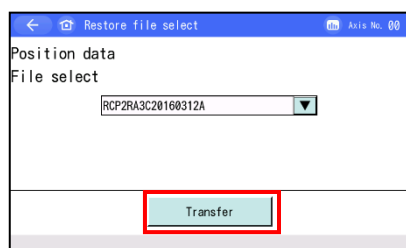


Touch [Transfer].

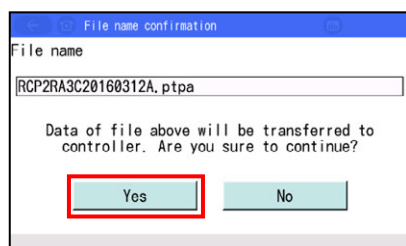


Touch [Yes].

If [No] is touched, the screen goes back to the previous one for the restore file select.

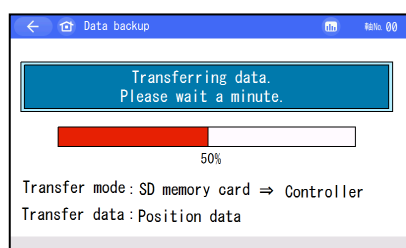


Data transfer screen will be shown.

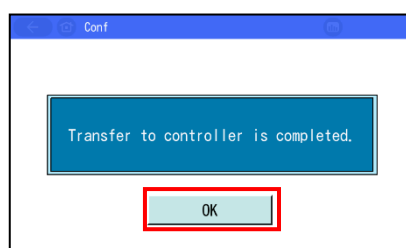

A message to tell the data transfer is complete pops up and the data transfer process to the controller is finished.


Touch [OK].

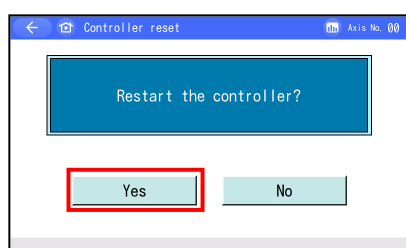

In the case of the ELECYLINDER.

If the position data is transferred, the reboot window should not be shown. The reboot window should be displayed only when the parameter data is transferred.

Touch [Yes] to reboot the system when it is displayed.

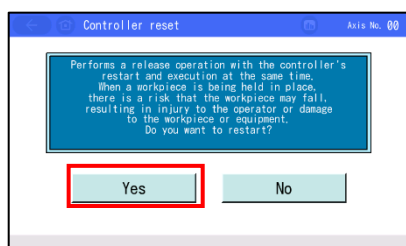


In the case of the ROBO PUMP

In order to have a release operation at the same time as execution of reboot, a message to pull attention should be displayed.


Confirm that there is no problem in rebooting, and touch [Yes].

6.18 Maintenance Parts List

Information of maintenance components is displayed.

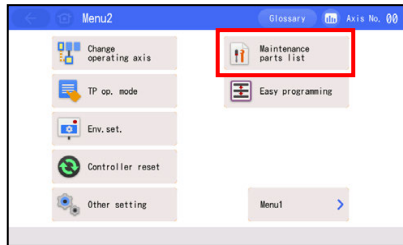

Touch [Maintenance parts list] in Menu 2 screen.

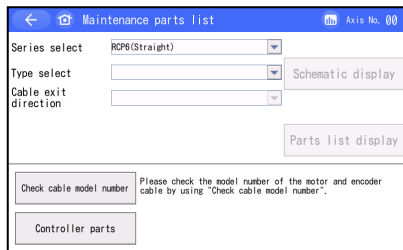

Maintenance parts list screen opens.

6.19 Easy Programming

It is a feature not applicable for ROBO PUMP.


In the easy programming, pause duration can be set between sets of operations and continuous operation can be performed by indicating the number of repeating times.

[How to Establish Setting]


Set the position number (0: backward end, 1: forward end) of the destination to the easy programming input part (step). In order to have a pause between operations, use prepared five timers T1 to T5. Timer can be set in 0.1 second unit from 0 to 99.9sec. When it is required to repeat operation, input R (repeat indication symbol) at the end.

The number of steps available to indicate is 10 at maximum including R.

If there is a space, the step after that is not valid. The easy programming stops. Steps after R are also invalid.

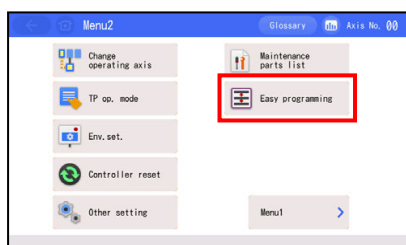


Touch [Easy programming] in Menu 2 screen.

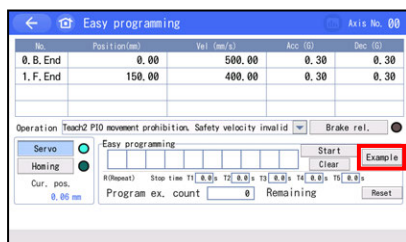

Easy programming screen opens.


Touch [Example] and examples for how to construct a program are displayed.

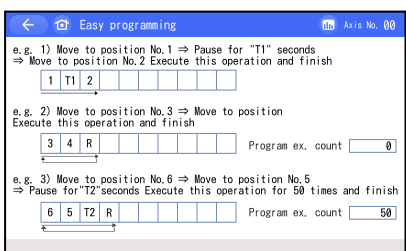


Touch [←] to return to the previous screen.

Take this as a reference when constructing an Easy programming.


[Driving Easy Programming]

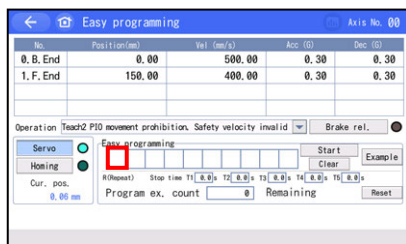


Touch the first (on the most left) step of the easy programming.

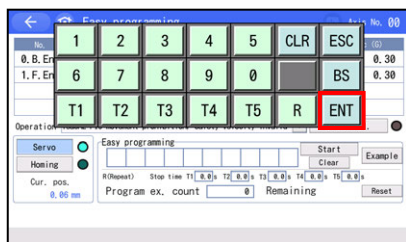


Input a position number or a timer (T1 to T5) and touch [ENT].

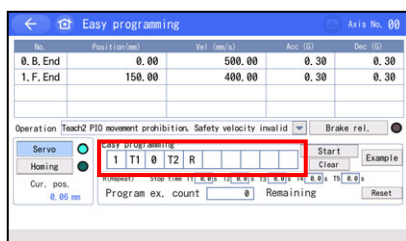


Set the next step and after in the same manner.
Set R at the end when it is required to repeat the operation.

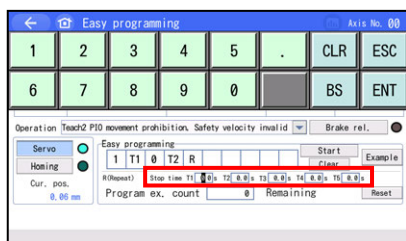


Touch a timer to use (T1 to T5) when it is required to have time for pause.

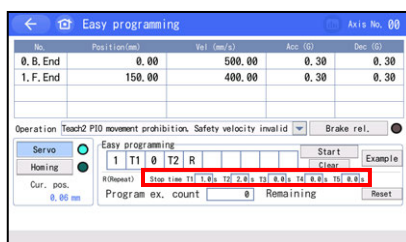

Set the time for pause.

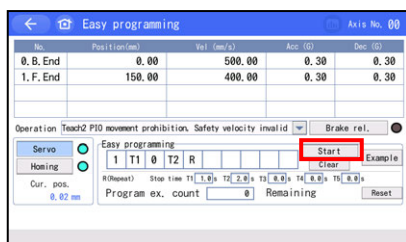


Have the servo ON and the home-return conducted, and then touch [Start] to start the operation.

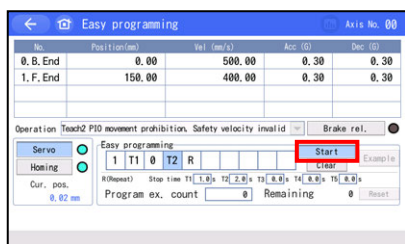


During the operation, the [Start] and the step number in execution turn to blue.


To stop operation, touch the [Start] again.

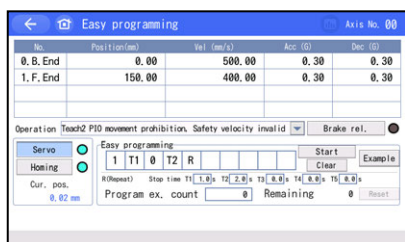


Operation stops.

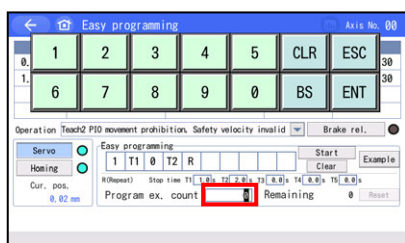

Touch the number to execute the program when it is required to set number of repeating.

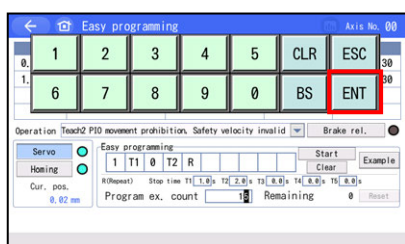


Set the number to repeat and touch [ENT].

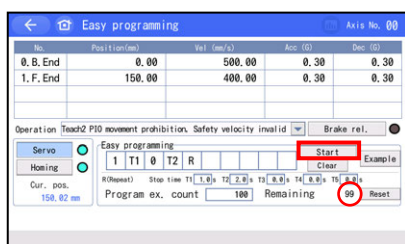


Touch [Start] to start operation.


The number of remaining for repeating is displayed, and counts down as 100 → 99 → 98 →

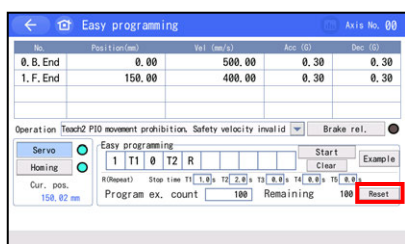

Touch [Reset] and the remained times go back to the number of program execution times.

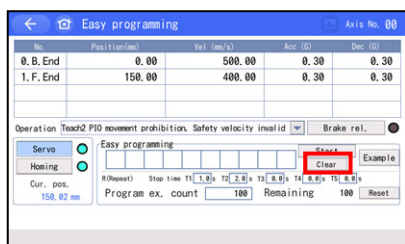

Touch [Clear], and the set easy program will be all deleted.

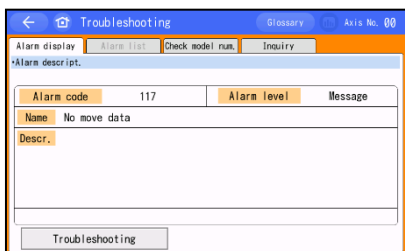

Caution: When there is an alarm issued due to such a reason as making a mistake in position number indication, go back to Easy programming screen with [←] button. In case of moving from Menu 2 screen to Easy programming screen, the set easy program will be deleted.

(Note) An Easy programming cannot be saved.

7. Gateway Parameter Setting Tool

Gateway Parameter setting can be performed when this touch panel teaching pendant TB-02 is connected to a supported model.

Refer to “Applicable Models for Gateway Parameter Setting Tool” in this instruction manual for the models to support.


Each window in the gateway parameter setting tool should differ depending on the type of controller to be used, field network, structure of axes, operation mode and settings in each parameter. Therefore, explanation in this section is prepared using some representative windows.

7.1 Starting up Gateway Parameter Setting Tool


Gateway parameter setting tool should be started in the procedures described below.



IAI logo is displayed for approximately 1 second when the power is turned on.

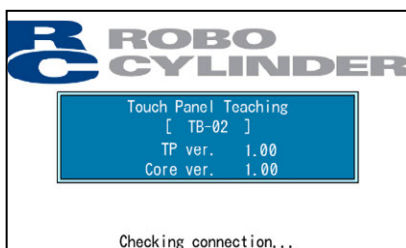


Version information is displayed.

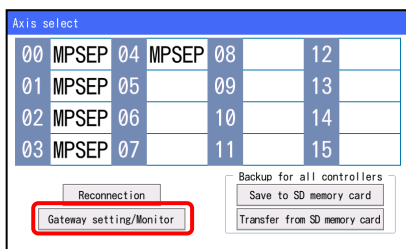

Axis select window is displayed when several units are connected.


[Gateway setting / Monitor] button is shown in the right bottom of the screen for the supported models.

Touch [Gateway setting / Monitor].

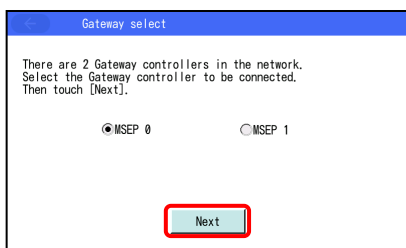

When there are two or more gateway controllers in the same network, the gateway select window opens.

Select the controller to be connected and touch [Next].

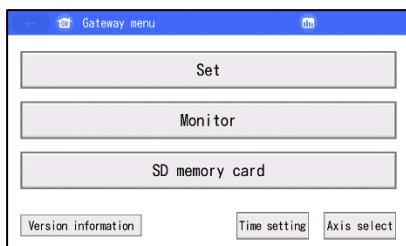


Gateway menu window is displayed.

(Note) The display language cannot be changed in the gateway parameter setting tool. Switch the display language in the environment setting of CON/SEP/MEC Controller, and then start up the gateway parameter setting tool.

7.2 Gateway Menu Select

Gateway Menu Window

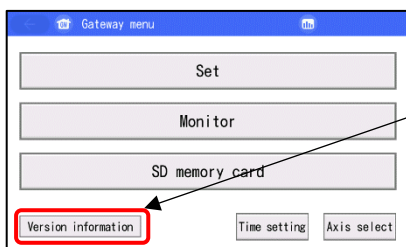


Version information for followings is displayed.

- Gateway firmware version
- Module version
- Teaching pendant version

There are five types of menu in the gateway menu. Select one of them and touch it. The screen goes to the touched menu.


- **Set** : Network setting is conducted. Refer to [7.3 Network Setting]
- **Monitor** : Data monitor, diagnosis information and alarm list are displayed. Refer to [7.4 Monitor Menu]
- **SD memory card** : Backup / restore of the gateway setting data is conducted. Refer to [7.5 Secure Digital Memory Card]
- **Time setting** : Clock setting on the controller is conducted. Refer to [7.6 Clock Setting]
- **Axis select** : Selection is made for axis to be operated with the touch panel teaching pendant
Refer to [3.4 Operation Axis Change] (for CON system controllers)
Refer to [4.5 Operation Axis Change] (for SEP system controllers)

Axis Select Screen

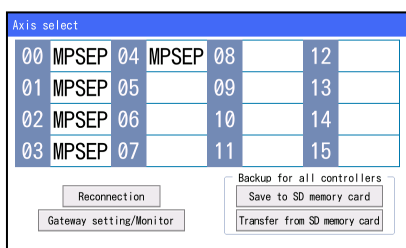

- | | | | |
|---|--|--------------------------|---|
| ① | | Return Button | : Return to the previous screen. |
| ② | | Gateway Button | : Return to the gateway menu screen. |
| ③ | | Special Parameter Button | : Setting is conducted for special parameters
Refer to [7.3.2 Special Parameter Setting] |
| ④ | | Monitor Button | : Displays the monitor screen.
Refer to [7.4 Monitor Menu] |

7.3 Network Setting

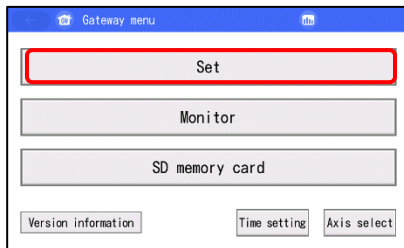


Touch [Set] button in the gateway menu screen to show the network setting screen.

7.3.1 Network Setting

Network setting is conducted. Refer to the instruction manual for each controller for the detail of settings.

■ For models except for MSEP-C, MCON-C/CG, RCP6S Gateway, REC and SSCNET III/H, MECHATROLINK-III and EtherCAT Motion of RCON

[Step 1] Network Setting Screen

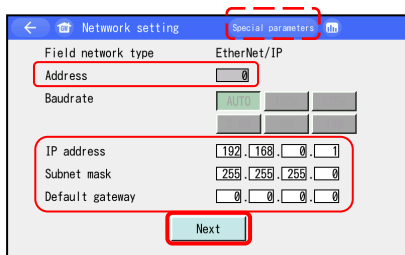

Establish the settings or display for the address (station number) (Note 1), IP address (Note 2), Subnet mask (Note 2), Default teway (Note 2) and MAC Address (Note 3).

Touch [Next] when setting is finished.


(Note 1) Set for those except for EtherNet/IP and PROFINET IO

(Note 2) Set for EtherNet/IP

(Note 3) Set for EtherNet/IP, PROFINET IO and CC-Link IE Field

Touch [Special parameters] when setting up the special parameters.
Refer to [7.3.2 Setup of Special Parameters]

[Step 2] Basic Setting Screen (only for RCON)

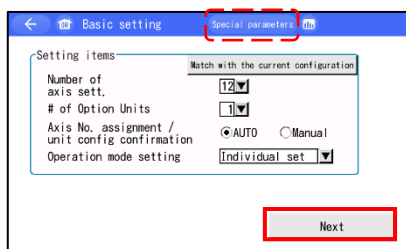

Settings for Number of axis sett., # of Option Units, Axis No. assignment / unit config confirmation and operation mode setting should be established.

Touch [Match with the current configuration], and the setting of such as number of axes should be adjusted to what can be operated following the current hardware construction.

Touch [Next] when setting is finished.

If "Auto" is selected in the axis number assignment / unit construction setting and also an option other than individual setting is selected in the operation mode setting, the procedure will move on to [Step 4] Transfer Confirmation Screen.

Touch [Special parameters] when setting up the special parameters.
Refer to [7.3.2 Setup of Special Parameters]

[Step3] Setting of Number of Axes and Operation Mode

(1) Each Axis Setting Screenshot for MSEP-C and MCON-C/CG

Each axis setting

Number of axis sett. 8

Special parameters

Axis	Simple	Posit1	Full	Posit2	Positioner 3	SEP 10
0						
1						
2						
3						
4						
5						
6						
7						

IN : 16 byte
OUT : 16 byte

Transfer to Gateway

Setting example

Set the operation mode and number of axes.

If required to set the special parameters, touch [Special parameters]. Refer to [7.3.2 Special Parameter Setting]

Touch [Transfer to Gateway] when setting is finished.

Example of each axis setting Screen

Example of each axis setting

Number of axis sett. 8

Axis	Simple	Posit1	Full	Posit2	Positioner 3	SEP 10
0	Valid axis					
1	Valid axis					
2						
3						
4	Valid axis					
5	Reserved axis					
6						
7						

Setting for 2 axes at a time.
When you clear the settings, set the 2

Transfer to Gateway

Touch [Example for Setting] in the each axis setting screen, and an example for each axis setting should appear. Refer to it for setting.

Touch [←] to return.

(2) Each Axis Setting Screen for RCP6S

Each axis setting

Number of axis sett. 8

Special parameters

Axis	Simple	Posit1	Full	Posit2	Positioner 5	Positioner 3
0						
1						
2						
3						
4						
5						
6						
7						

Max Number of axis 8

Number of DR no. (IN) 14 byte
Number of DR no. (OUT) 14 byte

Transfer to Gateway

Set the operation mode and number of axes.

If required to set the special parameters, touch [Special parameters]. Refer to [7.3.2 Special Parameter Setting]

Touch [Transfer to Gateway] when setting is finished.

(3-1) Axis Number Assignment / Unit Construction Setting Screen in RCON

Axis numbers alloc.

Unit No.	0	1	2	3	4	5	6	7
Unit type	PC	PC	PC	AC	CC	Reserve	Reserve	Reserve
Number of axes	2	2	1	2	2	1	1	1
AxisNo. (Dir. 0)	00	04	05	01	07	09	10	11
AxisNo. (Dir. 1)	03	05	06	02	08			

Unit No.	8	9	10	11	12	13	14	15
Unit type	Reserve	Reserve	Reserve	Reserve				
Number of axes	1	1	1	1				
AxisNo. (Dir. 0)	12	13	14	15				
AxisNo. (Dir. 1)								

Over View

Next

If you select "Manual" in the axis number assignment / unit construction setting, settings of the axis number assignments and unit construction can be adjusted.

Touch [Next] when setting is finished.

(3-2) Operation Mode Setting Screen in RCON

Operation mode setting

Axis	Simple	Posit1	Full	Posit2	Positioner 3	Positioner 5
Axis00	Simple					
Axis01	Simple					
Axis02	Posit1					
Axis03	Posit1					
Axis04	Posit1					
Axis05	Posit2					
Axis06	Posit2					
Axis07	Posit2					
Axis08	Positioner 3					
Axis09	Positioner 3					
Axis10	Positioner 3					
Axis11	Positioner 5					
Axis12	Positioner 5					
Axis13	Positioner 5					
Axis14	Full					
Axis15	Full					


Stat.: Ver. 2 Remote device station
Extended cycle: 8 times
Number of axes: 24 axes

Transfer to Gateway

If you select "Individual Setting" in the operation mode setting, operation mode for each axis can be selected.


Touch [Transfer to Gateway] when setting is finished.

[Step 4] Transfer Confirmation Screen

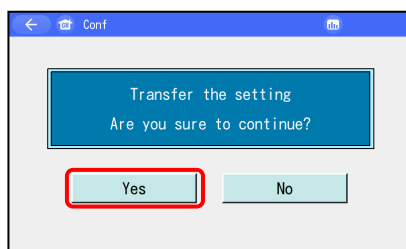


Touch [Yes].

Touch [No] and the screen goes back to [Step 3].

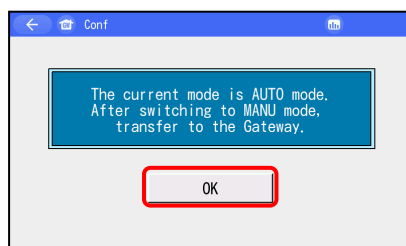


Confirmation window is shown when the operation mode switch on the controller is set to AUTO.

Touch [OK] and the screen goes back to [Step 3].

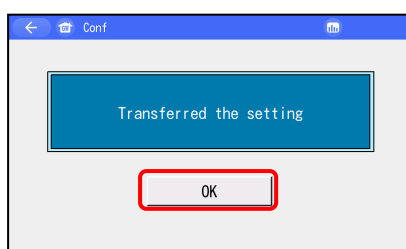

A message window to tell transfer is complete is shown when the transfer is completed in normal condition.

Touch [OK].

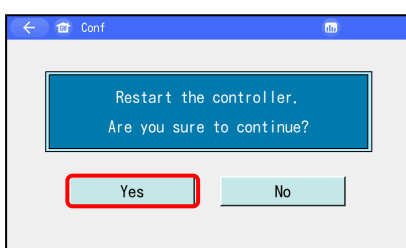


Reboot the controller after transfer is completed to activate the setting.

Touch [OK].

Reboot is cancelled if touching [No]. The transferred setting will not be activated in that case.

[Step 5] Corresponding PIO pattern Screen (only for MSEP-C and MCON-C/CG)

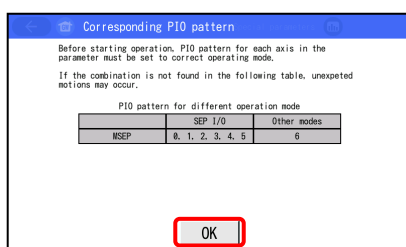

For MSEP-C and MCON-C/CG, the window for the applicable PIO patterns is displayed.

Set the PIO pattern of the controller following the displayed contents. It is not necessary to set the PIO pattern for RCP6S and RCON.

Touch [OK] to return to the gateway menu screen.

■ For SSCNET III/H, MECHATROLINK-III and EtherCAT Motion of RCON

[Step 1] Network setting Screen

Setting of the address (Note 1) and data size (Note 2) should be established.

Touch [Next] when setting is finished.

(Note 1) To be set up for MECHATROLINK-III and SSCNET III/H

(Note 2) To be set up for MECHATROLINK-III

Touch [Special parameters] when setting up the special parameters.
Refer to [7.3.2 Setup of Special Parameters]

[Step 2] Basic setting Screen

Axis quantity setting and Axis No. assignment / unit config confirmation should be established.

Touch [Match with the current configuration] and operation can be performed with the setting of the number of axes following the setting of the hardware configuration.

When "Manual" is selected in the Axis No. assignment / unit config confirmation, touch [Next].

When "Automatic" is selected in the Axis No. assignment / unit config confirmation, touch [Transfer to Gateway].

Touch [Special parameters] when setting up the special parameters.
Refer to [7.3.2 Setup of Special Parameters]

[Step3] Axes number alloc. Screen

Unit No.	0	1	2	3
Unit type	00	01	02	03
Number of axes	2	2		
AxisNo. (Drv.0)	00	02		
AxisNo. (Drv.1)	01	03		


Set up the number of axes and axis numbers.

Touch [Transfer to Gateway] to complete the setup.

7.3.2 Special Parameter Setting


Establish the settings for the special parameters if necessary.

Touch [Special parameters] button on the top of either the network setting screen, basic setting screen or Each axis setting screen to show the special parameter screen.

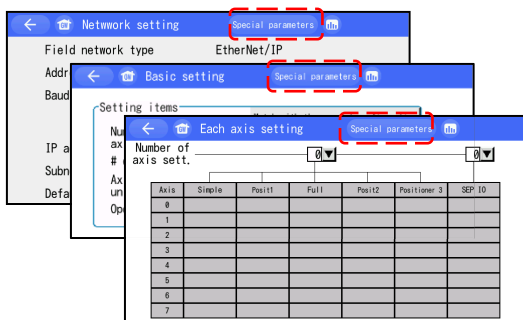

(1) Special Parameters for MSEP-C and MCON-C/CG


GW Parameter

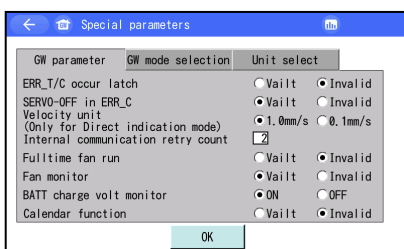

[Setting Items]

- Condition latch after the servo is turned off when ERR_T occurred (Vailt/Invalid)
- Servo-off when ERR_C occurred (Vailt/Invalid)
- Velocity unit (in Direct Numerical Mode only)
- Communication Retry Number Setting
- Fan always-on operation (Vailt/Invalid)
- Fan revolution monitoring (Vailt/Invalid)
- Absolute battery charge voltage monitoring (ON/OFF)
- Calendar feature (Vailt/Invalid)


GW Mode Select

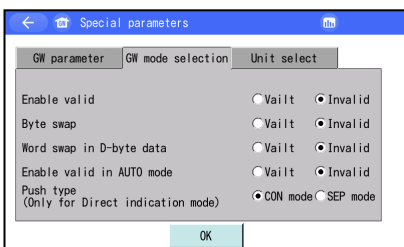

[Setting Items]

- Enable valid (Vailt/Invalid)
- Byte swap (Vailt/Invalid)
- Double byte data word swap (Vailt/Invalid)
- Enable valid at AUTO (Vailt/Invalid)
- Pressing system in Direct Numerical Mode (CON mode/SEP mode)

Unit Select

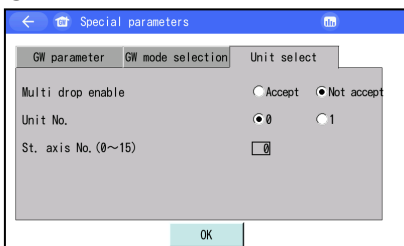

[Setting Items]

- Multidrop Permission (Accept/Not accept)
- Unit Number (0/1)
- Top Axis Number (0 to 15)

Refer to the instruction manual for each control for detail of each setting item.

(2) Special Parameters for RCP6S

GW Parameter

[Setting Items]

- Condition latch after the servo is turned off when ERR_T occurred (Vailt/Invalid)
- Servo-off when ERR_C occurred (Vailt/Invalid)
- Velocity unit (in Direct Numerical Mode only)
- Communication Retry Number Setting
- Fan always-on operation (Vailt/Invalid)
- Fan revolution monitoring (Vailt/Invalid)
- Absolute battery charge voltage monitoring (ON/OFF)
- Calendar feature (Vailt/Invalid)

- Enable valid (SV-OFF/Shutdown)
- MON Signal (Vailt/Invalid)

Pages are to be switched over with ▲ and ▼ buttons.

GW Mode Select

[Setting Items]

- Enable valid (Vailt/Invalid)
- Byte swap (Vailt/Invalid)
- Double byte data word swap (Vailt/Invalid)
- Enable valid at AUTO (Vailt/Invalid)

Refer to the instruction manual for each control for detail of each setting item.

(3) Special parameters for RCON (except for SSCNET III/H, MECHATROLINK-III and EtherCAT Motion)

Gateway parameter

Special parameters

GW parameter GW mode selection Option Unit

ERR_C occur latch ☐ Valid ☒ Invalid

SERVO-OFF in ERR_C ☐ Valid ☒ Invalid

Velocity unit (Only for Direct indication mode) ☐ Internal ☒ External

Internal communication retry count

MON signal ☐ Valid ☒ Invalid

Calendar function ☐ Valid ☒ Invalid

OK

[Setting Items]

- ERC-C occur latch (Valid/Invalid)
- Servo-off in ERR_C (Valid/Invalid)
- Velocity unit (in Direct Numerical Mode only)
- Communication Retry Number Setting
- MON signal (Valid/Invalid)
- Calendar function (Valid/Invalid)

Special parameters

GW parameter GW mode selection Option Unit

Number of power supply units connected

Power supply unit monitor type

Power supply unit connection retry times

Waiting time for init. internal process comm. [ms]

OK

- Number of power supply units connected (Not used/1/2/3/4/5)
- Power supply unit monitor type (Output voltage / Auxiliary winding wire voltage / Output current / Peak hold current / Load factor / Fan rotating speed / PCB temperature)
- Power supply unit connection retry times
- Waiting time for init. internal process comm. [ms]

Pages are to be switched over with and buttons.

GW Mode Select

Special parameters

GW parameter GW mode selection

Enable validity ☐ Valid ☒ Invalid

Byte swap ☐ Valid ☒ Invalid

Word swap in Double word data ☐ Valid ☒ Invalid

Driver shutdown release delay time [ms]

OK

[Setting Items]

- Enable valid (Valid/Invalid)
- Byte swap (Valid/Invalid)
- Double byte data word swap (Valid/Invalid)
- Driver shutdown release delay time [ms]

Option unit

Special parameters

GW parameter GW mode selection Option Unit

RCON-EC JOG switch ☒ Valid ☐ Invalid

OK

[Setting Items]

- RCON-EC JOG switch (Valid/Invalid)

Refer to the instruction manual for each control for detail of each setting item.

(4) Special parameters for SSCNET III/H, MECHATROLINK-III and EtherCAT Motion of RCON

GW parameter

[Setting Items]

- Internal communication retry count
- Calendar function (Valid/Invalid)

- Waiting time for init. internal process comn. [ms]

Pages are to be switched over with ▲ and ▼ buttons.

GW Mode Select

[Setting Items]


- Enable validity (valid/Invalid)
- Byte swap (Valid/Invalid)
- Word swap in Double word data (Valid/Invalid)
- Driver shutdown release delay time [ms]

Refer to the instruction manual for each control for detail of each setting item.

7.4 Monitor Menu

Touch Monitor button in the gateway menu window to show the monitor screen.

Monitor Screen

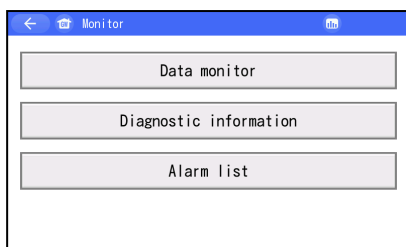


There are three types of menu in the monitor screen. Select one of them and touch it. The screen goes to the touched menu.

- Data monitor : Received data and sent data are displayed. Refer to [7.4.1 Data Monitor]
- Diagnosis information : Number of communication error occurrence and number of emergency stop detection are displayed. Refer to [7.4.2 Diagnosis Information]
- Alarm list : The alarm list is displayed. Refer to [7.4.3 Alarm List]

7.4.1 Data Monitor


Touch [Monitor] in the gateway menu screen → [Data monitor] to show the data monitor screen.

Data monitor Screen

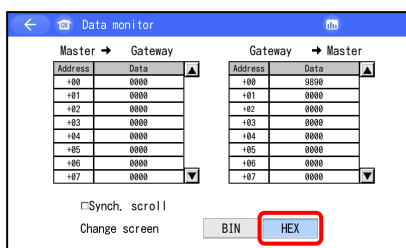


The data that the gateway unit has received from the host (master) and the data sent back to the host (master) are displayed.


Data is shown in hexadecimal numbers when [HEX] is on.

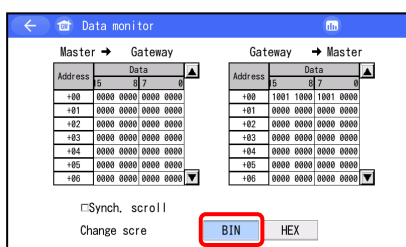

The data switches to binary number display if touching [BIN].

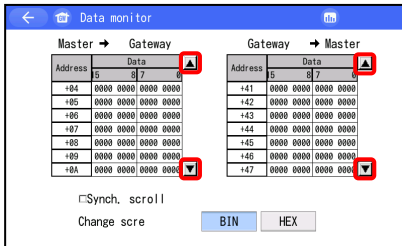

Touch the scroll keys and to change the displayed address.

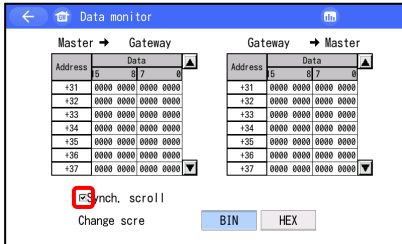


Check on Synch. scroll and the sent and received data can be scrolled together.

7.4.2 Diagnosis Information


Touch [Monitor] in the gateway menu screen → [Diagnosis information] to show the diagnosis information screen.

Diagnosis Information Screen

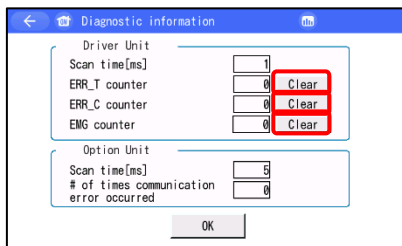

Information of scan time, number of occurrence times of communication error (ERR_T and ERR_C) and number of detection times for emergency stop (EMG) is displayed.

Touch [Clear] on each counter, and the value goes back to 0.

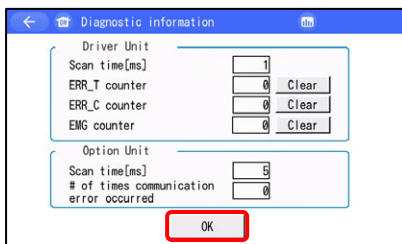

Touch [OK], and the screen returns to Monitor screen.

7.4.3 Alarm List

Touch [Monitor] in the gateway menu screen → [Alarm list] to show the alarm list screen.

Alarm list Screen

No.	Code	Name	Address	Detail	Time (yy/mm/dd hh:mm:ss)
0	898	Driver Board Mount Error	-----	0003	16/02/18 23:04:26
1	FFF	PowerUP No Error	-----	-----	16/02/18 22:59:51
2	898	Driver Board Mount Error	-----	0003	16/02/09 19:44:16
3	FFF	PowerUP No Error	-----	-----	16/02/09 19:44:16
4	898	Driver Board Mount Error	-----	0003	16/02/09 19:43:34
5	898	Driver Board Mount Error	-----	0003	16/02/09 19:43:09
6	898	Driver Board Mount Error	-----	0003	16/02/09 19:32:55
7	898	Driver Board Mount Error	-----	0003	16/02/09 19:25:58

Previous page **Update** All clear Next page ↓

Show the alarm list of the gateway.

Touch [Update] and the alarm list can be read out again.

No.	Code	Name	Address	Detail	Time (yy/mm/dd hh:mm:ss)
0	898	Driver Board Mount Error	-----	0003	16/02/18 23:04:26
1	FFF	PowerUP No Error	-----	-----	16/02/18 22:59:51
2	898	Driver Board Mount Error	-----	0003	16/02/09 19:44:16
3	FFF	PowerUP No Error	-----	-----	16/02/09 19:44:16
4	898	Driver Board Mount Error	-----	0003	16/02/09 19:43:34
5	898	Driver Board Mount Error	-----	0003	16/02/09 19:43:09
6	898	Driver Board Mount Error	-----	0003	16/02/09 19:32:55
7	898	Driver Board Mount Error	-----	0003	16/02/09 19:25:58

Previous page **Update** All clear **Next page ↓**

Touch [Next page], and the list in the next screen is shown.

Touch [Previous page], and the list in the previous screen is shown.

No.	Code	Name	Address	Detail	Time (yy/mm/dd hh:mm:ss)
8	FFF	PowerUP No Error	-----	-----	16/02/09 19:25:58
9	898	Driver Board Mount Error	-----	0003	16/02/09 19:25:09
10	898	Slave Axis Communication Error (ERR-1)	-----	-----	16/02/09 19:24:07
11	898	Driver Board Mount Error	-----	0003	16/02/09 19:24:03
12	FFF	PowerUP No Error	-----	-----	16/02/09 19:24:03
13	898	Driver Board Mount Error	-----	0003	16/02/09 19:22:52
14	FFF	PowerUP No Error	-----	-----	16/02/09 19:22:52
15	898	Driver Board Mount Error	-----	0003	16/01/08 20:16:19

Previous page **Update** **All clear** Next page ↓

Touch [All clear], and the confirmation screen for alarm list all delete is shown.

Clear all controller alarm lists?

Yes No

Touch [Yes], and all in the alarm list will be deleted.

Touch [No], and the delete will be cancelled.

No.	Code	Name	Address	Detail	Time (yy/mm/dd hh:mm:ss)
0					/ / : :
1					/ / : :
2					/ / : :
3					/ / : :
4					/ / : :
5					/ / : :
6					/ / : :
7					/ / : :


Previous page **Update** **All clear** Next page ↓

The alarm list is shown again.

7.5 Secure Digital Memory Card

Touch [SD memory card] button in the gateway menu screen to show the Secure Digital memory card window.

Secure Digital Memory Card Screen

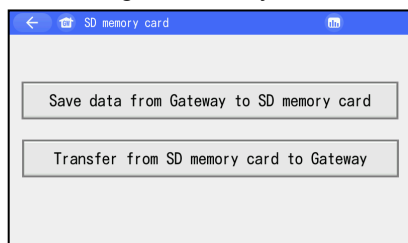


There are two types of menu in the Secure Digital memory card screen. Select one of them and touch it. The screen goes to the touched menu.

- Save from Gateway to Secure Digital Memory Card : Refer to [7.5.1]
- Transfer from Secure Digital Memory Card to Gateway : Refer to [7.5.2]

7.5.1 Save from Gateway to Secure Digital Memory Card

Secure Digital Memory Card Screen

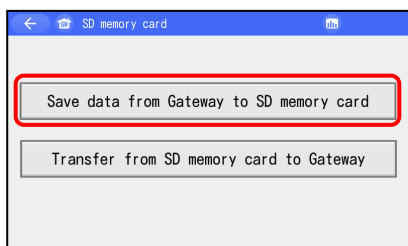


Touch [Save data from Gateway to SD memory card].




File name indication screen opens.

Input a file name and touch the [ENT].

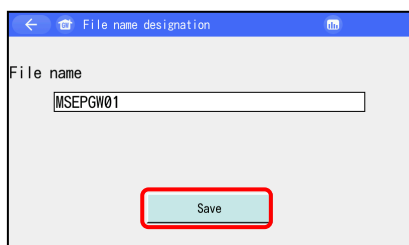


Touch [Save].

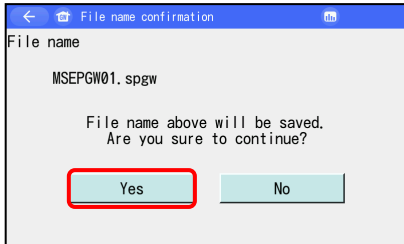

When the same file name does not exist in the Secure Digital memory card, confirmation screen for saving is shown.

Touch [Yes] and the data will be saved.


Touch [No] and the data will not be saved, and the screen goes back to the SD memory card screen.

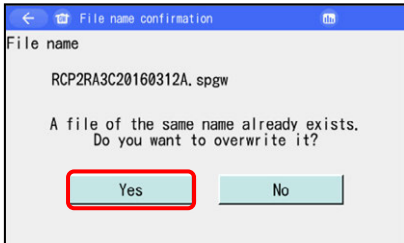

When the same file name exists in the Secure Digital memory card, confirmation window for overwriting is shown.


Touch [Yes] and the data will be overwritten.

Touch [No] and the data will not be overwritten, and the screen goes back to the SD memory card screen.

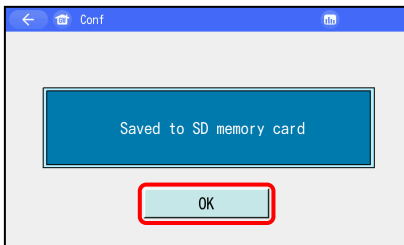


If touching [Yes], a message window to notify the data saving (overwriting) is completed is displayed.

Touch [OK].

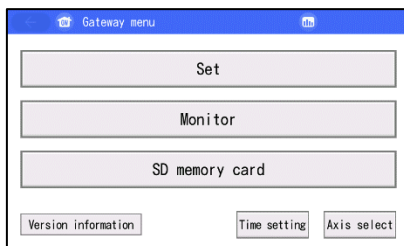


The screen goes back to the gateway menu screen.

7.5.2 Transfer from Secure Digital Memory Card to Gateway

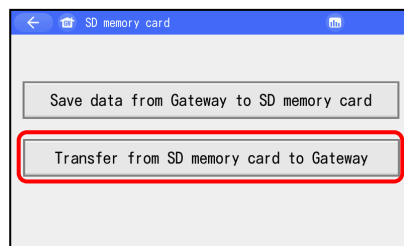


Touch [Transfer from SD memory card to Gateway].

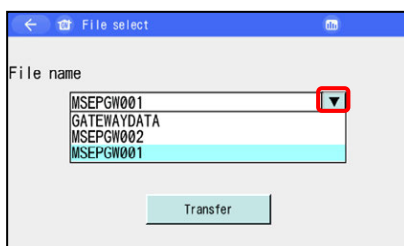


The File select screen opens.

Touch ▼ to select a file to transfer.

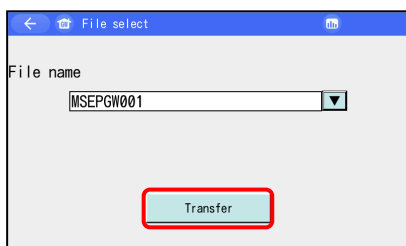


Touch [Transfer].

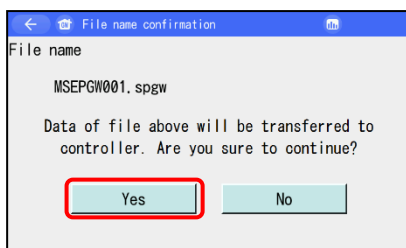

Confirm the file name and touch [Yes].


Touch [No] and the screen goes back to the SD memory card screen.

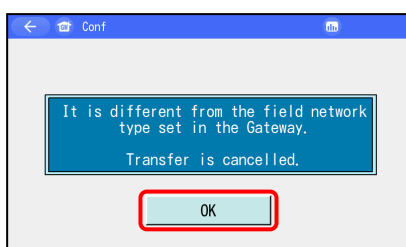

If the network type of the selected file is different, confirmation screen opens.


Touch [OK] to cancel the transfer.

The screen goes back to the gateway menu screen after cancellation.

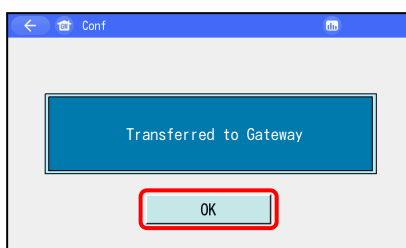

If the transfer is completed in normal condition, a message screen to notify that the transfer is completed will be shown.


Touch [OK].

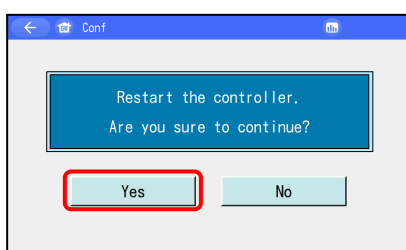

After transportation, reboot the controller to activate the settings.

Touch [Yes].

Touch [No] and the controller will not be rebooted. In this case the transferred change will not become activated.

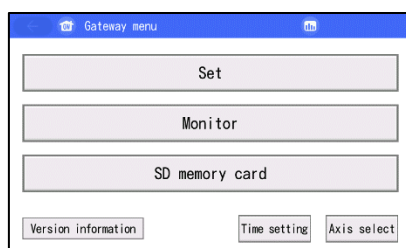


The screen goes back to the gateway menu screen.

7.6 Clock Setting

Establish the setting for the clock on the controller.
Selection can be made from an option to transfer the time data from this touch panel teaching pendant and another one to set the time manually.

Touch [Time setting] button in the gateway menu window to show the clock setting screen.

Time setting Screen

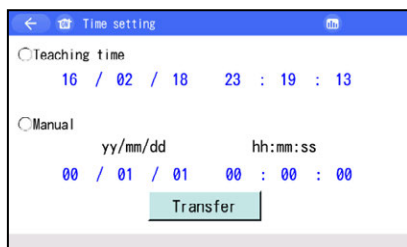


(1) Transfer the clock information in this touch panel teaching pendant



Select the radio button in the teaching clock.

Touch [Transfer] to transfer the clock data.

(2) Set the time manually and transfer

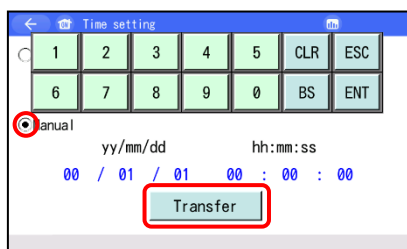

Select the radio button on Manual.

Input yy/mm/dd hh:mm:ss.
(Input numbers to each item. Touch [ENT] to confirm it.)

Touch [Transfer] to transfer the clock data.

8. Operation of Actuator Drive Power Supply Unit

8.1 Guideline

The actuator drive power supply unit (hereinafter called ADTB) is to be connected to TB-02 and not to use any controller installed separately, it enables a trial run of an actuator with a teaching pendant itself.


8.1.1 Applicable Actuators

There are EC Type (ADTB-EC) that capable of operation of ELECYLINDER only and PEC Type (ADTB-PEC) that is capable of operation of ELECYLINDER and pulse motor mounted ROBOCYLINDER.

EC Type..... Trial run of ELECYLINDER (24V pulse motor type) is capable.


PEC Type..... Trial run of ROBOCYLINDER (pulse motor type: RCP2 Series and later) and ELECYLINDER (24V pulse motor type).

When having a trial run of ELECYLINDER, as an actuator is operated by the controller built in ELECYLINDER, ADTB is to be used only for power supply to ELECYLINDER.

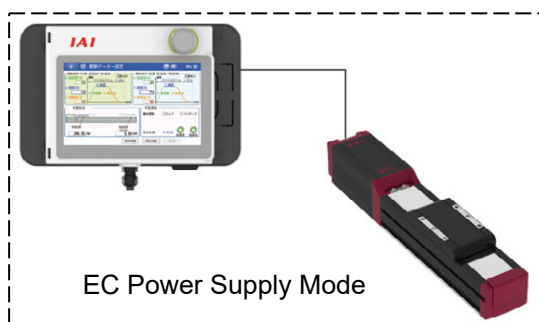

Supply power to ELECYLINDER and ELECYLINDER can operate in normal condition.

When having a trial run on ROBOCYLINDER, ADTB can be a simple controller. Operation such as jog operation in low velocity without using parameters and operation with parameters applicable for a position controller installed separately read from a Secure Digital card to ADTB is capable.

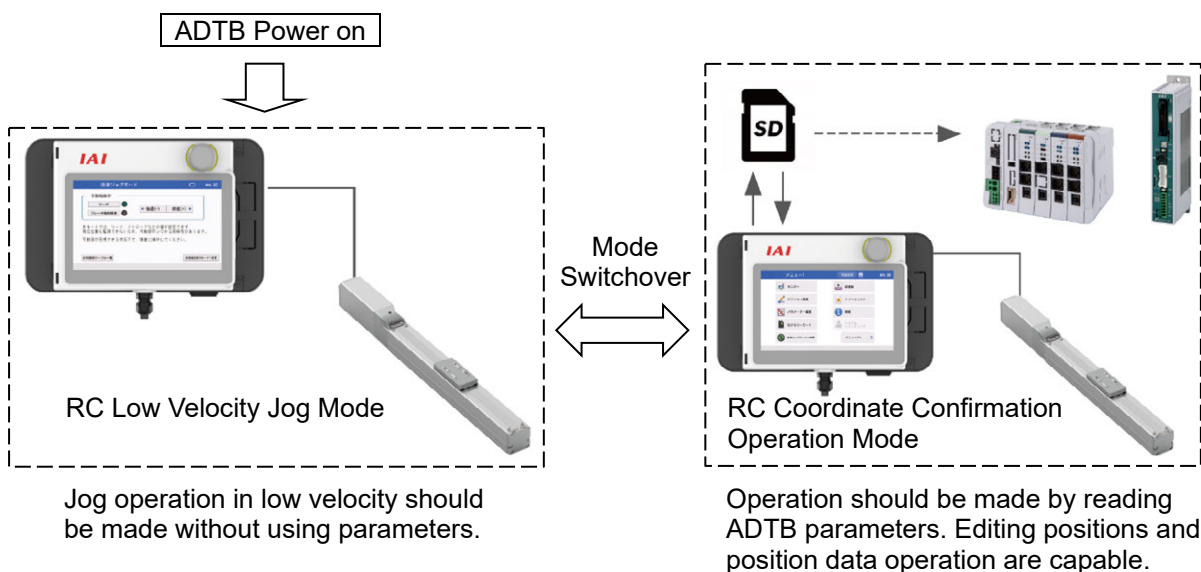

8.1.2 Operation

The way to operate ELECYLINDER is the same as that for normal ELECYLINDER. Refer to [Chapter 6 Operation of ELECYLINDER and ROBO PUMP].

For how to operate ROBOCYLINDER, should be explained in this chapter and Chapter 3.

8.1.3 Initial Screen

After the power gets turned on, the IAI logo and version information should be shown and then it gets to the low-speed jog mode screen.


Power on




Confirm that the stop switch is not pressed and turn the power on to ADTB.




IAI logo should be displayed in a few seconds.

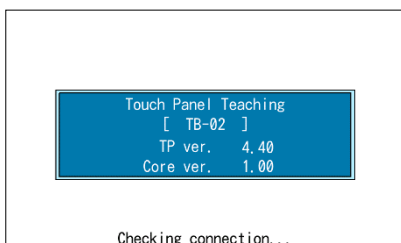

The version of the touch panel teaching pendant should be displayed.

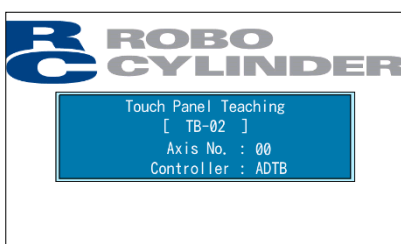


The axis number (00) and the controller type (ADTB) should be displayed.

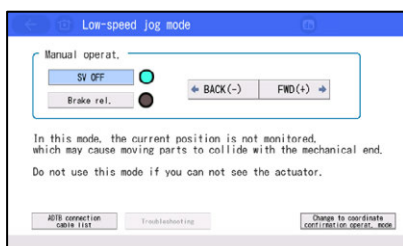


The low-speed jog mode screen should open.

■ When Power is Turned on While Stop Switch is Pressed

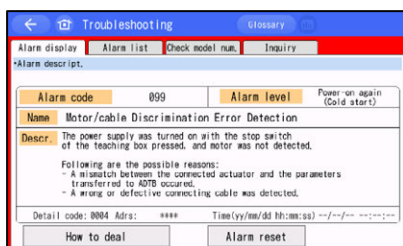


If the power is turned on while the stop switch is being pressed, as the motor cannot be defined, the low-speed jog mode screen would not be displayed and the window for Alarm Code 099 should be displayed.

Touch [How to deal].

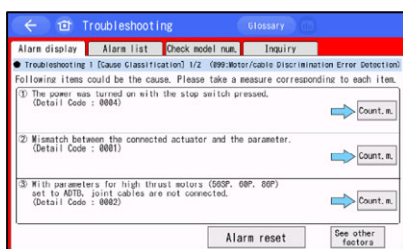

The Troubleshooting 1 screen should be displayed.

Touch [Countermeasure] on the right side of (1) The power was turned on with the stop switch pressed.

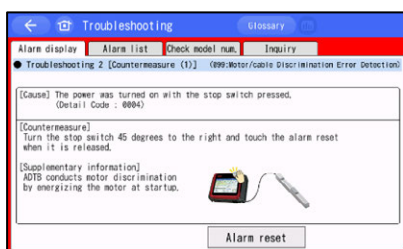


The Troubleshooting 2 screen should be displayed.

Following the instruction in the screen, turn the stop switch to the right for 45 degrees to release the locking feature on the stop switch and touch [Alarm reset].



A confirmation screen to reboot ADTB should show up.

Touch [Yes] to execute.

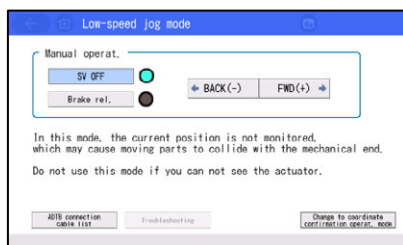

The Low-speed jog mode screen should be displayed.

8.1.4 Specifications, Dimensions, Name of Each Part, etc.

Refer to [1.9 Actuator Driving Power Supply Unit for Teaching Pendant].

8.1.5 Connection


Refer to [2.4 Connection of Actuator Drive Power Supply Unit].

8.2 Low Velocity Jog Mode

Operation should be made in low velocity (300rpm) without using parameters. (The velocity cannot be changed.)

Only jog operation is available and home-return operation or position data movement is not available.

8.2.1 Low-speed jog mode screen

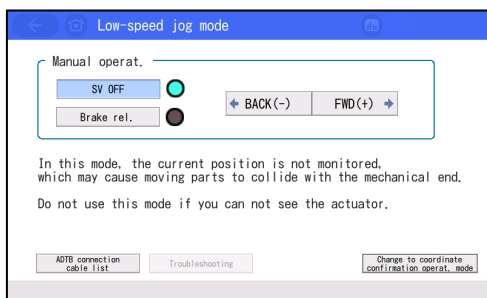

[Operation on the low-speed jog mode screen]

- [Servo ON] :Touching [SV ON] while the servo is OFF turns on the axis servo and O becomes lit.
[Servo OFF] :Touching [SV OFF] while the servo is ON turns off the axis servo and O becomes unlit.
 - [Brake rel.] :For an actuator equipped with a brake, touch [Brake rel.] and the brake gets compulsorily released and the circle turns on.
Touch [Brake rel.] again and the brake works and the circle turns off.
 - [BACK(-)], [FWD(+)] :The axis moves in 300rpm while touching it.
[BACK(-)] performs JOG operation in negative direction.
[FWD(+)] performs JOG operation in positive direction.
- * The operation velocity of an actuator should be the lead of actuator \times 5 [mm/s].
(300rpm: 300 rounds in 1 minute = 5 rounds in 1 seconds)

[ADTB connection cable list]

Touch it and the cable connected to RCP actuator should be displayed.
[8.2.2 ADTB Connection Cable List Screen]

[Change to coordinate confirmation operat. mode]

Touch it and it is switched to the coordinate confirmation operation mode.
[8.2.3 Transfer to Coordinate Confirmation Operation Mode]

[Troubleshooting]

It should be displayed when an alarm is generated. Touch it and the troubleshooting screen should appear. Refer to [Chapter 9 Error Display]




Caution: In the low velocity jog mode, the coordinate of an actuator should not be monitored and back and forth operation should be made. Therefore, operation should be made in a constant velocity until the stroke end. Stop the actuator before it hits the stroke end. Operation till the stroke end may shorten the product life or cause malfunction.




Caution: An axis could drop if the brake compulsory release is performed while the servo is off when the axis is installed in the vertical orientation.

8.2.2 ADTB Connection Cable List Screen

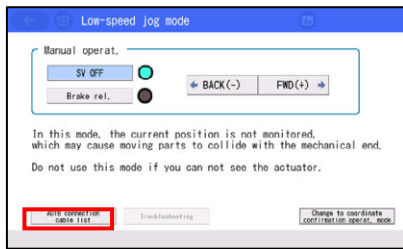


Touch [ADTB connection cable list] in the low-speed jog mode screen.

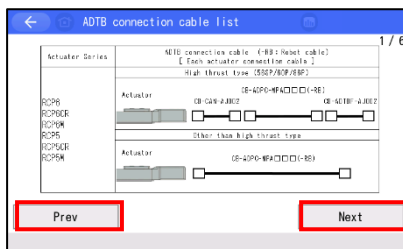


The ADTB connection cable list screen (1/6) should be displayed.

Touch [Next] and the next screens (→ 2/6 → ... → 6/6 → 6/1 → ...) should be displayed in order.

Touch [Prev] and the previous screens (→ 6/6 → ... → 1/6 → 6/6 → ...) should be displayed in order.

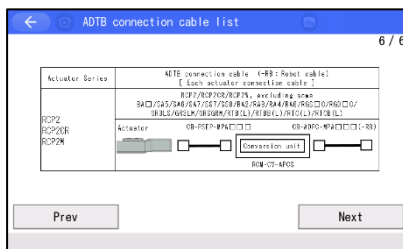

Touch [←] and it returns to the low-speed jog mode screen.

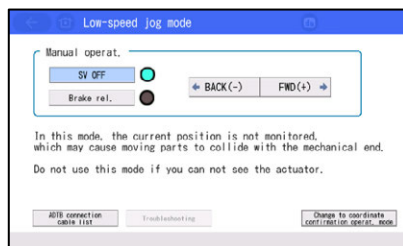

The low-speed jog mode screen should be displayed.


8.2.3 Transfer to Coordinate Confirmation Operation Mode

[About Parameter File for ADTB]


The parameter file for ADTB is necessary in order to switch over to the coordinate confirmation operation mode.

A parameter file for ADTB cannot be created by a user.

If a parameter file is required, confirm the model code of an actuator and the serial number described on the model code nameplate sticker attached on the side of the main unit, and request to a sales person in charge.

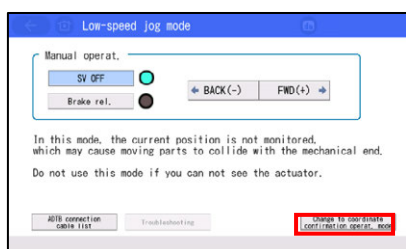


Touch [Change to coordinate confirmation operat. mode] in the low-speed jog mode screen.

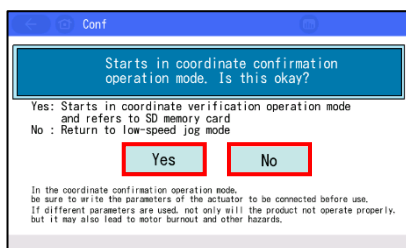


A confirmation screen for coordinate confirmation operation mode switchover should appear.

Touch [Yes] to switch over to the coordinate confirmation operation mode. Touch [No] and it returns to the low-speed jog mode screen.

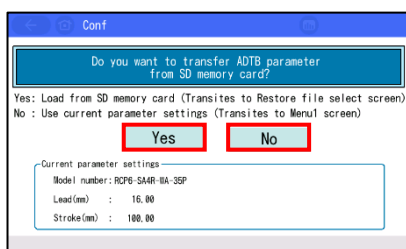


A confirmation screen for transferring a parameter for ADTB from a Secure Digital memory card should be displayed.

Touch [Yes] and it moves to a screen to select a file to transfer. Touch [No] and the parameter would not be transferred and the current parameter settings should be used. It moves to the Menu 1 screen.

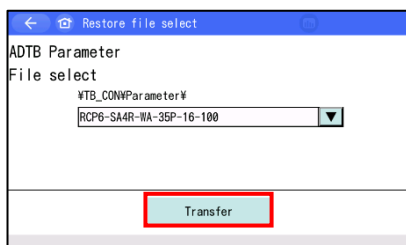

The restore file selection screen should be displayed. Select a file to be transferred in the pulldown menu.


(A parameter file stored in \TB_CON\Parameter folder in a Secure Digital card will become available to select.)

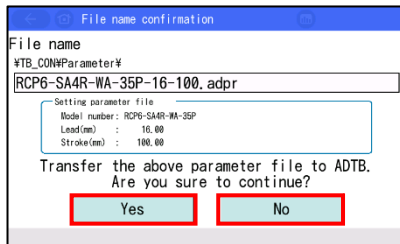

The file name confirmation screen should be displayed.

The information regarding model code, lead and stroke in the selected file should be displayed. Check if there is any problem.

Touch [Yes] and parameters should be transferred to ADTB. Touch [No] and it should return to the restore file select screen.

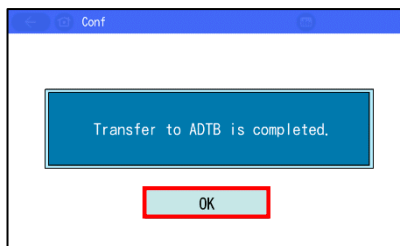


The transfer complete screen should appear.

Touch [OK].



A confirmation screen for rebooting should come up.

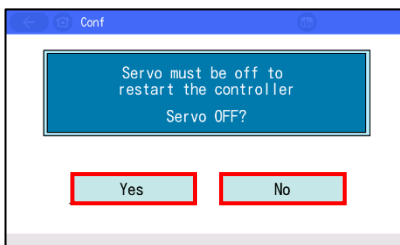

If the servo is on, a confirmation screen to turn the servo off should be displayed.

Touch [Yes] and the servo should be turned off and reboot. Touch [No] and it returns to the restore file select screen.



After rebooting, Menu 1 should be displayed.

Operation according to the parameter should be available.

As the operation should basically be that of the CON system controller, refer to [Chapter 3 Operation for CON System Controller].


* There some features not available for operation.

8.3 Coordinate Confirmation Operation Mode

Operation should be made with parameters for ADTB read in.
Editing positions and position data operation are capable.

For how to switch over to the coordinate confirmation operation mode, refer to [8.2.2 Transfer to Coordinate Confirmation Operation Mode].

8.3.1 Coordinate Confirmation Operation Mode screen

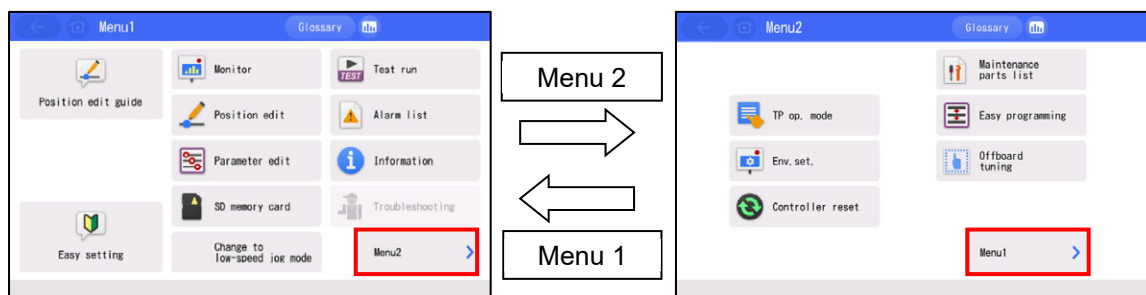

As well as the position controller, the following features should be available to execute.
(Features not available for execution should not be displayed, such as dedicated functions for the pulse press actuator, are hidden.)

[Menu 1]

- Position edit guide Refer to [3.6 Position Edit GuidePosition Edit Guide]
- Easy setting Refer to [3.8 Easy Program Setting]
- Monitor Refer to [3.9 Monitor] * There is no feature of I/O monitoring.
- Position edit Refer to [3.10 Position Editing]
- Parameter edit Refer to [3.11 Parameter Editing]
- SD memory card Refer to [8.3.2 ADTB Data Backup]
- Test run Refer to [3.12 Test Run]
- Alarm list Refer to [3.14 Alarm List]
- Information Refer to [3.17 Information Display] *There is no feature of axis name edit.
- Troubleshooting Shows the contents of an alarm and the countermeasure when an alarm has been generated.

[Menu 2]

- TP op. mode Refer to [3.13 TP Operation Mode]
- Env. set. Refer to [3.18 Environment Setting]
- Controller reset Refer to [3.15 Controller Reset]
- Maintenance parts list Refer to [3.21 Maintenance Parts List]
- Easy programming Refer to [3.22 Easy Programming]
- Offboard tuning Refer to [3.24 Offboard Tuning]

8.3.2 ADTB Data Backup

Data is transferred between the Secure Digital memory card in the touch panel teaching pendant and ADTB.

(1) Type of Stored Data

It is available to save position data, parameters and alarm list.

(2) Compatibility of Saved Data

- The position data saves files in four types of extensions in one saving operation. The extensions of files and readable controllers are as shown below.

File Extension	Controller
.ptpb	PCON-CB/CFB/CGB/CGFB
.ptpbp	PCON-CBP/CGPB
.ptpcl	PCON-CYB
.ptc2	RCON-PC/PCF

- A parameter file can not be read in a controller.
- The alarm list can only have the backup. It cannot be restored. Data is in a CSV file.

(3) Directories of the Stored Data

The folders to store the backup data of ADTB and the folder to read the data from when restoring the data to ADTB are as listed below. The directories to store the files cannot be changed. The files existing in other directories other than the specified folders cannot be listed up in the file name list in the file select at the initial setting or restore. If the folder does not exist, it is automatically created.

- Position Data : \TB_CON\Position\File Name
- Parameter : \TB_CON\Parameter\File Name
- Alarm List : \TB_CON\Alarmlist\File Name

(4) Destination to save parameter data for coordinate confirmation operation mode

The parameter file for ADTB to read out when switching over to the coordinate confirmation operation mode should be stored in the following folder.

- Parameter for ADTB : \TB_CON\Parameter\File Name


- (Note)
- Data in a file name with 33 letters of half-size font characters or more should not be shown in the data list at restore.
 - Files with Chinese names are not supported.




Caution: For a Secure Digital memory card, choose a SD/SDHC memory card with 1G to 32G. (Toshiba-made recommended) Also, Have FAT32 Format for the file system.

8.3.2.1 ADTB Data Backup

ADTB data is transferred to the Secure Digital memory card for backup.

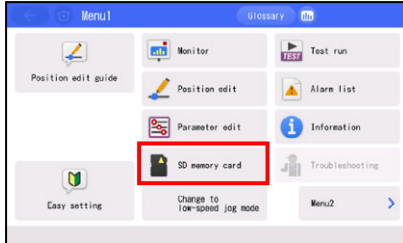


Touch [SD memory card] in Menu 1 screen.

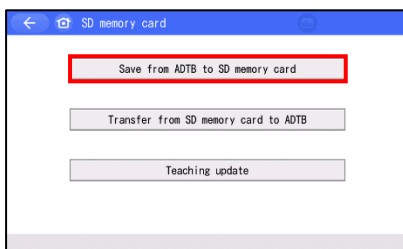

SD memory card screen opens.


Touch [Save from ADTB to SD memory card].

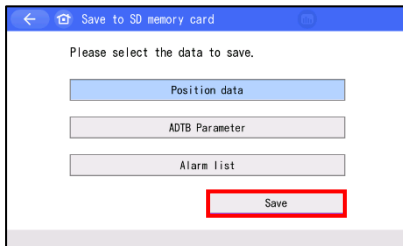

Save to SD memory card screen opens.

Select the data type for the backup such as [Position data] and touch it. (Multiple selection available)


Touch [Save].

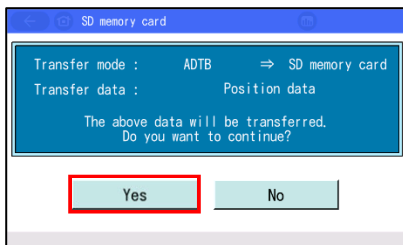

A confirmation screen for data to back up should be displayed.

If there is no problem in the selection, touch [Yes].


Touch [No], and the screen returns to the previous screen.

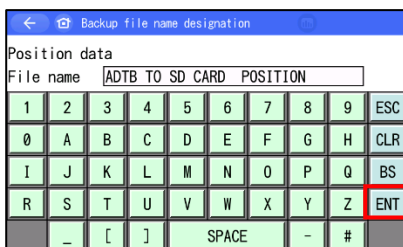

A screen to input a backup file name should be displayed.

Input a file name with a keyboard and touch [ENT].


* The file name should be alphanumeric or symbols and the number of characters should be 32 or less.

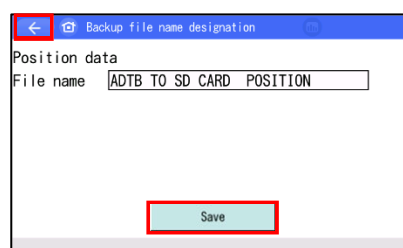

Backup file name designation screen opens.

If there is no problem in the file name that was input, touch [Save].


Touch [←] for redoing.

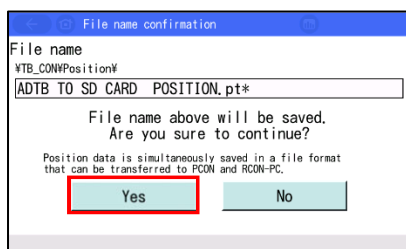

The screen below appears if the same name is not found.

If there is no problem in the file name, touch [Yes].


Touch [No] and it returns to a screen to indicate the backup file name with a keyboard.

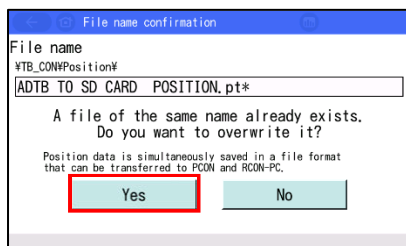

The screen below appears if the same name is found.

Touch [Yes] if there is no problem to overwrite.

Touch [No] and it returns to a screen to indicate the backup file name with a keyboard.

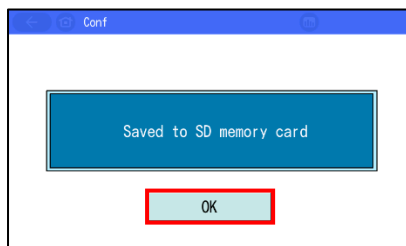


After a screen for data transfer is shown, a message screen for the data transfer complete should be displayed.

The backup process is finished.


Touch [OK], and the screen returns to Secure Digital Memory Card screen.

8.3.2.2 Restore to ADTB

Data in the Secure Digital Memory card is transferred to ADTB.

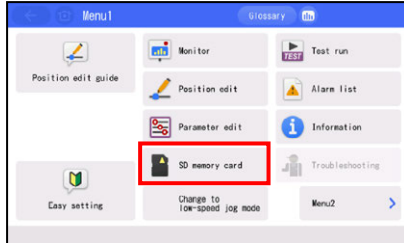


Touch [SD memory card] in Menu 1 screen.

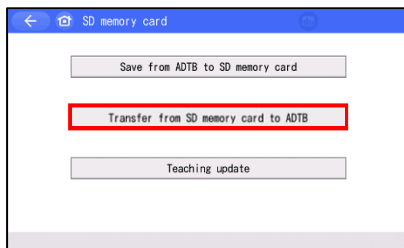

SD memory card screen opens.


Touch [Transfer from SD memory card to ADTB].

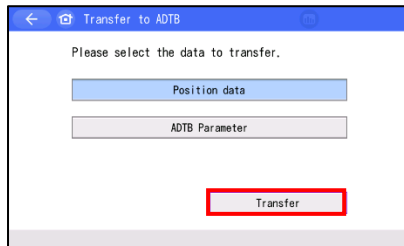

Transfer to ADTB screen opens.

Select the data type to transfer to ADTB, such as [Position data], and touch it. (Multiple selection available)


Touch [Transfer].

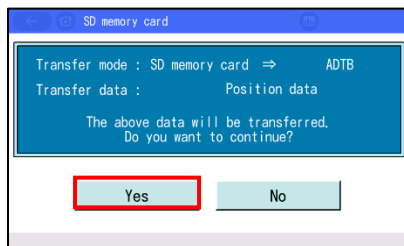

A confirmation screen for data to be transferred should be shown.

If there is no problem in the selection, touch [Yes].


If [No] is touched, the screen goes back to the data backup screen.

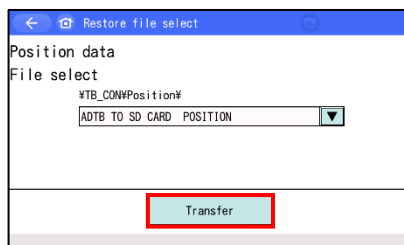

Restore file select screen opens.

Touch ▼ to select a file to transfer to ADTB from the list of the backed up file names.


Touch [Transfer].

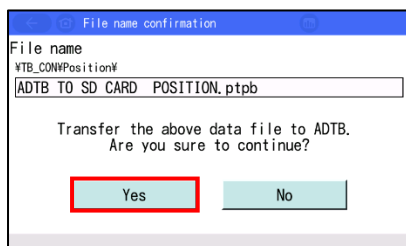

A confirmation screen for the file name to transfer should appear when the position data is to be transferred.

Touch [Yes] if there is no problem in the selected file.


If [No] is touched, the screen goes back to the previous one for the restore file select.

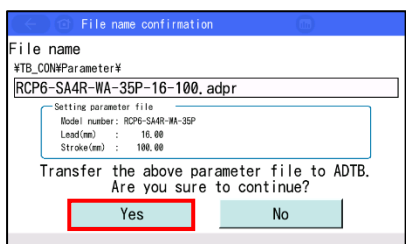

A confirmation screen for the file name to transfer and the parameter setting should appear when the parameter data is to be transferred.


Touch [Yes] if there is no problem in the selected file.

Touch [No] and it should return to the select restore file screen.

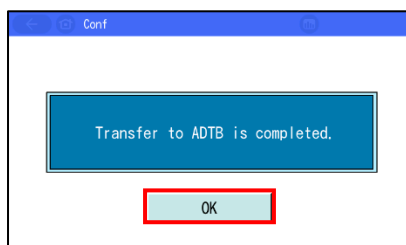

After a screen for data transfer is shown, a message screen for the data transfer complete should be displayed.

The data transfer to ADTB has completed. Touch [OK].

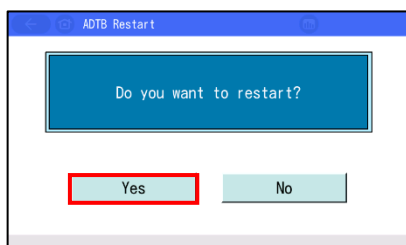


The screen should return to the one for ADTB transfer when the position data is to be transferred.

The screen for ADTB reboot should be displayed when the parameter data is to be transferred.

Touch [Yes] to execute reboot.

Touch [No] and the screen goes back to that for ADTB transfer.

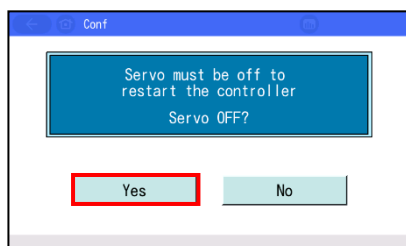

If the servo is on, a confirmation screen to turn the servo off should be displayed.


Touch [Yes] to turn the servo off.

Reboot the power.




Return to Menu 1 after rebooting.

8.3.3 Transfer to Low Velocity Jog Mode

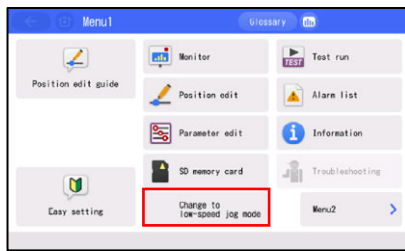


Touch [Change to low-speed jog mode] in Menu 1 screen.

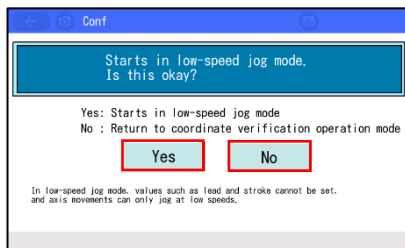

A confirmation screen for low velocity jog mode switchover should be displayed.

[Yes] Should be switched over to the low velocity jog mode.

[No] Return to Menu 1.

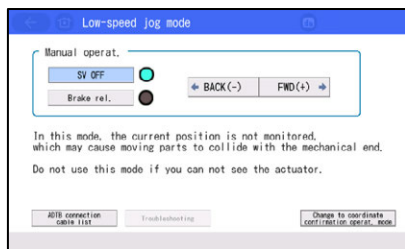


Low-speed jog mode screen opens.

9. Error Display


9.1 Occurrence of Alarm

If an alarm occurs, the alarm screen appears.

Controller of the CON System

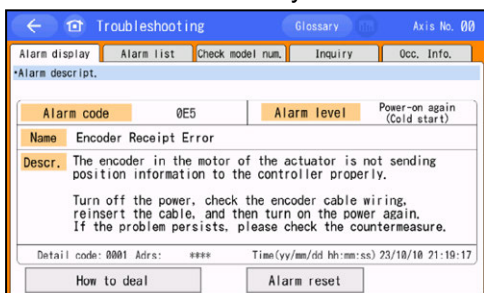

Controller of the SEP System /
MEC System System

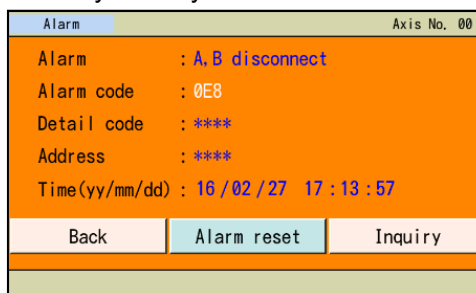

9.1.1 Alarms Detected by Controller

Alarms of codes 000 to 0FF are those detected by the controller. These alarms include major alarms relating to the servo control system, power system, etc. For details on these alarms, refer to the instruction manual for your controller.

If an alarm occurs, remove the cause of each alarm and then perform the following operation.

- To reset operation -cancellation level alarms, touch [Alarm reset] on the alarm screen.
- To reset cold-start level alarms, reconnect the control power.

9.1.2 Messages which Occur when Operating the Touch Panel Teaching Pendant

Codes from 100 to 3FF are messages which occur when operating the touch panel teaching pendant.

- 100 to 1FF: Message level (entry errors, guide messages)
- 200 to 2FF: Operation cancellation level (errors having a disadvantage for operation)
- 300 to 3FF: Cold-start level (which requires re-power-on or reconnection)

The following table shows the list and countermeasures.

Code	Message	Contents, occurring cases, and countermeasures
112	Input data error	An inadequate value was entered in the parameter setting. Retype a proper value with reference to the actuator specification and the parameter list.
s113	Data too small	The input value is smaller than the setting range. Retype a proper value with reference to the actuator specification and the parameter list.
114	Data too large	The input value is bigger than the setting range. Retype a proper value with reference to the actuator specification and the parameter list.
115	Not yet Homed	The operation of acquiring the current position was performed under the uncompleted home return in the teaching (display) mode. In first, execute the home return.

Code	Message	Contents, occurring cases, and countermeasures
117	No position data	The target position is not set to the selected position number. In first, enter a target position.
11E	Unmatched pairedata	Inadequate values were entered in the magnitude relation of the data in a pair. Example: The case in which soft limit+ and limit- are the same on the parameter. Retype a proper value
11F	Value too small	The minimum settable travel to the target position depends on the lead length of the driving system and the resolution of the encoder. If the input target position is smaller than this minimum travel, this message is displayed. Example: If the lead length is 20 mm for the actuators of RCP2 series, since the resolution of the encoder is 800 pulses, the minimum travel is 0.025 mm/pulse (= 20 ÷ 800). In this case, if 0.02 mm is entered in the target position, this alarm occurs.
121	Search value error	The final arrival position exceeds the soft limit due to the push-motion operation. Set a value within the soft limits.
122	Duplicate link	An axis number was allocated despite that more than one axis were connected. Always allocate the axis number only when one axis is connected.
123	Password error	The input value of the system password, position editing password, or position data edit password does not match the setting value. Retype the correct password.
131	Unrecognizable Large Category Code Detected	The software of this teaching tool is not applicable for the connected controller. Updating this teaching tool is necessary. Refer to [10.2 Teaching Update]
132	Detect Undefined Controller	An unsupported controller was recognized. Example: When connected ACON-CA applied from Ver 2.10 in Ver 2.00 Follow the process in [10.2 Teaching Update] to update the software in an applicable version or later. Refer to [Support Models] for the applicable versions.

Code	Message	Contents, occurring cases, and countermeasures
133	Prohibit changing Axis No.	The axis number was changed by the teaching pendant connected to the controller by which the axis number is set with the rotary switch on the front panel. The teaching pendant cannot change the axis number. Change the number by the rotary switch on the front panel.
134	Controller Unsupport Function	The function number to which the controller does not correspond in the user adjustment mode was allocated. Example: If the adjustment number 6 "Load cell calibration execution" is performed to the model which does not support the load cell function.
150	Write-in Prohibited	Writing was attempted to a domain prohibited for write-in. Consult with IAI if the phenomenon would not be improved even with reconnection.
160	SDcard open error	A file in the SDcard could not open. Data backup was attempted without a SDcard inserted. Insert a SDcard.
161	SDcard write error	SDcard cannot be written. Check that the condition is not as follows. <ul style="list-style-type: none"> Free space of the SDcard is insufficient. SD card write-protect switch is engaged. File is set to the write prohibit property in overwriting. An unsupported SDcard is inserted.
162	SDcard read error	A SDcard was not inserted when data restore (transfer) was attempted. Have restore conducted with a SDcard inserted.
164	SDcard file format error	Restore (transfer) of the saved data could not be performed properly. The data saved in the SDcard may be damaged. Save data from the PC to the SDcard again, and try to transfer it. If an error occurs even with it, the original data in the PC should be damaged. Redo the work from backup of the data.
180	Axis No. Change Complete	Messages to confirm the operation (It is not to say any operation mistake or abnormal occurrence) Check the contents, and then press the "←" button on the top left of the screen to return to the original screen.
183	IO-function changed	
184	Data transfer completed	
185	LoadCell calibration completed	
186	Time setting completed	

Code	Message	Contents, occurring cases, and countermeasures
187	Brownout of RTC backup battery	Voltage of the battery inside the teaching pendant is reduced. (Note) <i>Settings for time, languages, and touch operation sound are initialized.</i> <i>The message is displayed only in Japanese (the default language).</i> <i>Consult us about replacing the battery.</i>
188	Input warning of below Min. Vel	The speed, which is less than the "minimum speed" that depends on the lead and encoder pulses, was entered in the "speed" of position data. The message is displayed, but entering data is possible. Retype a proper value after the confirmation of the specification, because the movement in less than the minimum speed may cause abnormal noise and vibration.
189	Input warning of over ratings ACC/DCL	An acceleration/deceleration speed, which exceeds the "rated acceleration/deceleration speed" of the actuator connected, was entered in the "acceleration/deceleration speed" of the position data. The message is displayed, but entering data is possible. Retype a proper value after the confirmation of the specification, because the movement in the excess high acceleration/deceleration speed may lead to actuator failures.
18A	Sending Loadcell Invalidation Command at Servo-off	It occurs when the loadcell is invalidated while the servo is on. Invalidate the loadcell after turning the servo off.
202	Stop	The system is stopped on the safety circuit at the equipment side or at the teaching pendant. 1) Turn the stop button on the teaching pendant clockwise and pull it towards you. 2) Set the circuit to have +24V that is output from STOP+ to input to STOP-.
203	MotorPower sag	For the controller of the "external cutout relay type," the motor driving power is not supplied from MPI terminals adequately. (Note) <i>Despite that the proper voltage is applied to MPI terminals, if this error occurs, the controller may be broken down.</i>
204	ABS-Battery Power sag	ABS battery brownout at power-on was detected. Replace the ABS battery.
205	STO/SS1-t	The safety requirement input signal has been input. Insert the dummy plug to the controller when unexpectedly output.

Code	Message	Contents, occurring cases, and countermeasures
206	DRV STOP	The driver stop signal has been input. Insert the dummy plug to the controller when unexpectedly output.
20A	Servo OFF while moving	1) Movement operation was performed with the servo OFF. 2) Since the servo ON signal (SON) from PLC was turned OFF during the movement operation, the servo was turned OFF and the movement operation became impossible. Turn the servo ON before the operation.
20C	Start ON while moving	The start signal (CSTR) from PLC was turned ON during the movement operation, so the movement command was duplicated. Check the output of the start signal (CSTR) from PLC.
20D	STP OFF while moving	The pause signal (*STP) from PLC was turned OFF during the movement operation, so the operation became impossible. Check the output of the pause signal (*STP) from PLC.
20E	Over soft-limit	It reached the soft limits. Check the settings of the soft limits, and use within the settings.
210	HOME ON while moving	The home return signal (HOME) from PLC was turned ON during the movement operation. Check the output of the home return signal (HOME) from PLC.
211	JOG ON while moving	The jogging movement signal (JOG) from PLC was turned ON during the movement operation. Check the output of the jogging movement signal (JOG) from PLC.

Code	Message	Contents, occurring cases, and countermeasures
212	Operational Command During Drive Cutoff	<p>1) The motor power voltage is at 16.8V or below. Check the supplied motor power voltage. Confirm that the cables for drive source are those with complied cable diameter. [Compatible wire diameter]</p> <ul style="list-style-type: none"> • Motor drive power supply: AWG20 to 8 (Copper Wire) • Control power: AWG22 or more (Copper Wire) <p>2) The stop switch at the right top of the front of this tool has been pressed. Turn the stop switch at the right top of the front of this tool to the right to release it.</p> <p>3) As the equipment is in emergency stop status, +24V cannot be supplied to STOP- in the system I/O connector. Supply +24V to STOP- in the system I/O connector.</p> <p>4) TB-02D (equipped with a dead man's switch) is connected. Make operation while gripping the dead man's switch. * Operation can be made by retaining middle position of the three positions.</p> <p>5) An alarm has been generated in the gateway for RCON or REC. Check the alarm code in the gateway unit and remove the cause.</p> <p>6) There is a communication error occurred in one of the actuators connected to RCON-EC. Unplug the cable connector while the controller power supply is off, confirm that there is no bent on the pins, and insert it again firmly till the end.</p>
213	Suction / Release commands prohibited	<p>Suction / Release command was issued while suction / Release commands are prohibited.</p> <ul style="list-style-type: none"> • In Suction Command Set the operation status to "Standby" before conducting it. • In Release Command Set the operation status to "Suctioning" before conducting it.
220	Write prohibit (AUTO)	<p>The position data or parameter was written during the AUTO mode. Write them after changing to the teaching mode.</p>
221	Write prohibit (MON)	<p>The position data or parameter was written during the monitor mode. Write them after changing to the teaching mode.</p>

Code	Message	Contents, occurring cases, and countermeasures
222	Move prohibit (AUTO)	The actuator movement was operated during the AUTO mode. Operate the movement after changing to the teaching mode.
223	Move prohibit (MON)	The actuator movement was operated during the monitor mode. Operate the movement after changing to the teaching mode.
224	Data Edit Prohibited Operation Status	It is the operation status that editing data is prohibited. Conduct release to set the operation status to "Standby" before editing.
225	Transmitted message-related error	There was an error while generating a sending message. (e.g.) The version of a teaching pendant is old Program error of a teaching pendant
226	Enable Circuit Open	1) The contact connected to ENB Line is open. Revise the circuit and wirings. 2) The dead man's switch at the back of the main unit is not at the middle position. Grip the dead man's switch till it gets to the middle position. 3) There is an alarm generated in the gateway of R-Unit. Release the alarm of the gateway.
301	Overrun error	Abnormality occurred on the serial communication with the controller 1) The controller connection cable may be open. Check the connection cable for wrong wiring or wire breakage. 2) The controller connection cable connector may be inserted improperly. Securely insert the connection cable connector. 3) Garbled data could occur due to the influence of noise. Review the wiring run, installation, etc. so that the noise does not influence them. 4) In the control of multiple units with the serial communication, the slave station number could be duplicated. Change the number so that the slave station number is not duplicated. If still having trouble, consult us.
302	Framing error	
303	Parity error	
304	SCI Recieve-Que overflow	
305	SCI Send-Que overflow	
306	Recieve-Buffer overflow	
308	Response time out	
30A	Packet Recieve-Que overflow	
30B	Packet Send-Que overflow	

Code	Message	Contents, occurring cases, and countermeasures
30C	Not connected	<p>The axis number of the controller cannot be recognized.</p> <ol style="list-style-type: none"> 1) The version of the teaching pendant is old and not applicable for the connected controller. Check the latest version in the IAI homepage and have the version updated following the procedures in "9.2 Teaching Update" if the version is old. 2) The controller may not be functioning properly. Check that the RDY lamp of the controller is lighted. If the lamp is not lighted, the controller is broken down. 3) The communication lines (SGA/SGB) of the provided cable could break. Replace to a spare teaching pendant or replace with a PC to see if the problem solves. 4) If a SIO converter is used, the link cable could not be connected, though the power, 24 V, is supplied to the converter. Supply the power after connecting the link cable between the converter and the controller. 5) The same number could be mistakenly set by the ADRS switches under the condition that multiple controllers are connected. Do not duplicate the settings of the ADRS switches. <p>If still having trouble, consult us.</p>
30D	Recieve exept response	<p>The abnormal response was returned from the controller. (This may be a temporary abnormality caused by noise, etc.) If the condition occurs frequently, check the cables, noise elimination measures taken on the power supply, etc.</p>
320	Both CON and SEP are detected	<p>CON-related and SEP-related controllers are on the same communication line. (e.g.) Axis number 0: PCON-CA, Axis number 1: if PSEP is linked</p>

10. Appendix

10.1 Screenshot

The capture of the displayed screen (screenshot) can be saved in the Secure Digital memory card.

When capturing a screenshot, press and hold on the right bottom of the screen for approximately two seconds while a Secure Digital memory card is inserted.

After making a “pip” sound, screenshot saving process starts. (The sound will not be made if the touch operation sound is set off.) The saved file name will be displayed on the screen for three seconds when the saving is complete.



File name : IMG_YYMMDDHHMMSS.bmp
e.g.) The file name when process has started at 12h:
34m: 56s in March 8, 2016
IMG_160308123456.bmp (751KB)



Have a Secure Digital
memory card inserted

Press and hold here

Domain to Save Data (cannot be changed)

The domain that the screenshot data is saved is the folder stated below in a Secure Digital memory card.

\\TB_CON\\ScreenShot\\FileName

[Caution]

1. The saving process takes approximately 10 seconds at the maximum.
2. During the saving process, the monitor display (such as the current position) on the screen does not get updated.
3. There are some windows that you cannot get screenshots.



Warning: As keys do not work on the screen during saving process, **emergency stop will not work by keys**. Do not attempt to use this feature when an actuator is operated (continuous movement, simple program, etc.) from the teaching.

10.2 Teaching Update

The software in TB-02 can be updated using a SD memory card.

Also, in case the menu window of TB-02 would not be displayed due to a failure in updating for reasons such as the power got shut during updating process, it is available to make a recovery by having a compulsory update.

(Note) This update should update the software of TB-02.

It should not update the softwares of ELECYLINDER or each controller.

This update should update all the softwares of TB-02 for ELECYLINDER (for wireless link and wired link)/ROBO PUMP/CON/SEP/MEC/SEL regardless of connection status.

Update takes approximately 35 minutes.

Normal Update

- ELECYLINDER : Perform "10.2.1 How to Update when ELECYLINDER and ROBO PUMP Connected"
- ROBO PUMP : Perform "10.2.1 How to Update when ELECYLINDER and ROBO PUMP Connected"
- CON System : Perform "10.2.2 How to Update when CON System Controller Connected"
- SEP System : Perform "10.2.3 How to Update when SEP System Controller Connected"
- MEC System : Perform "10.2.4 How to Update when MEC System Controller Connected"
- When Alarm Generated : Perform "10.2.5 How to Update when Alarm Code 30C Displayed"

Compulsory Update : Perform "10.2.6 How to Compulsorily Update (in Common for All Models)"


◆Preparation

Preparation 1 Prepare a Secure Digital memory card or a Secure Digital High-Capacity memory card with 1GB to 32GB formatted in FAT32 (hereafter described as a Secure Digital memory card).


Preparation 2 Access homepage <http://www.iai-robot.co.jp/download/tb-02/> and download the TB-02 update file TB02_\$\$\$_.zip and unzip it. (\$\$\$ should be replaced by the version number in three digits)

Preparation 3 Copy the unzipped update file TB02_\$\$\$_.pct to the root folder of the Secure Digital memory card. (\$\$\$ should be replaced by the version number in three digits)
(Note) Update cannot be conducted if there are two or more update files in the root folder.

Preparation 4 Take the SD memory card cover off, and insert a SD memory card while the power to TB-02 is off.

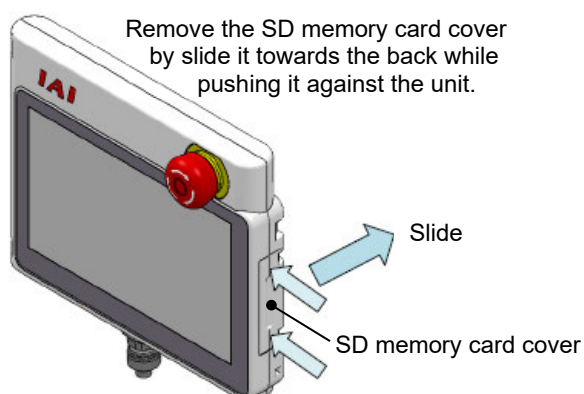

Face the electrode side of a Secure Digital memory card to the front and push it in until it makes a click sound.

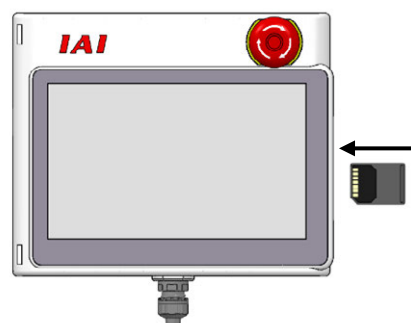


Preparation 5 Supply power to the controller to which TB-02 is connected and start up TB-02.

10.2.1 How to Update when ELECYLINDER and ROBO PUMP Connected


(Note) Refer to “10.2.5 No Connected Axis Error (Alarm Code 30C)” if Alarm Code 30 gets shown after the power is turned on.

[Step 1] Perform from **Preparation 1** to **Preparation 5** in “10.2 ◆Preparation”.

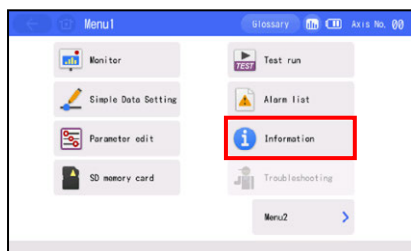


[Step 2]

Touch [Information] in Menu 1 window.

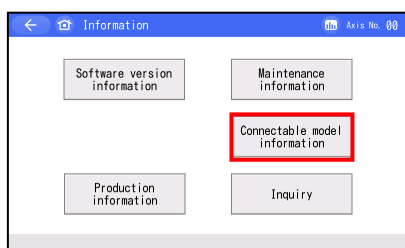


[Step 3]

Touch [Connectable model information].

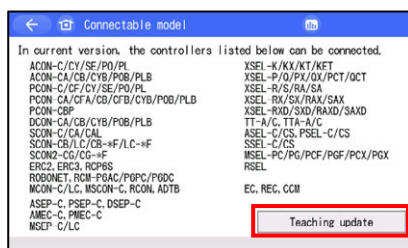


[Step 4]

Touch [Teaching update].

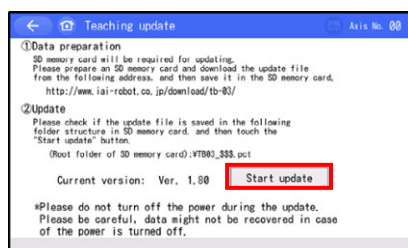

[Step 5]


Touch [Start update].

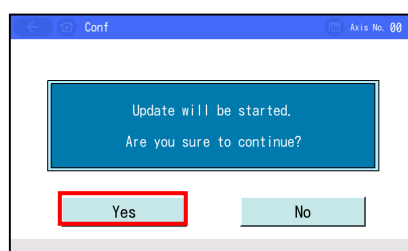

[Step 6]

The updating confirmation window shows up.

Touch [Yes].

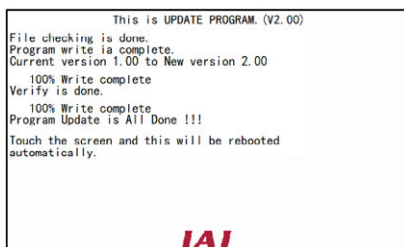

[Step 7]

Start updating.

Touch the screen after you confirm the following messages;

“Program Update is All Done!!!”

“Touch the screen and this will be rebooted automatically.”

* There may be a case that the black and white are in opposite depending on the version of the software.


TB-02 will start up in the new version.



Caution: Do not attempt to turn off the power to TB-02 while in updating.


It is also available to perform by touching [SD Memory Card] → [Teaching update] in Menu 1 window.

[Step 1] Perform from **Preparation 1** to **Preparation 5** in “10.2 ◆Preparation”.

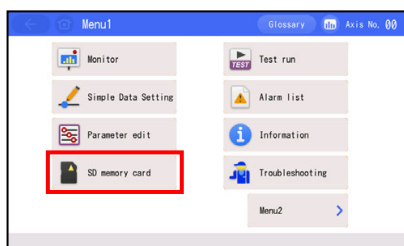

[Step 2]

Touch [SD memory card] in Menu 1 window.

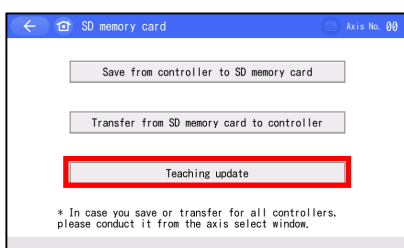

[Step 3]


Touch [Teaching update].

[Step 4] Perform procedures from [Step 5] and after in the previous page.

10.2.2 How to Update when CON System Controller Connected


(Note) Refer to “10.2.5 No Connected Axis Error (Alarm Code 30C)” if Alarm Code 30 gets shown after the power is turned on.

[Step 1] Perform from Preparation 1 to Preparation 5 in “10.2 ◆Preparation”.

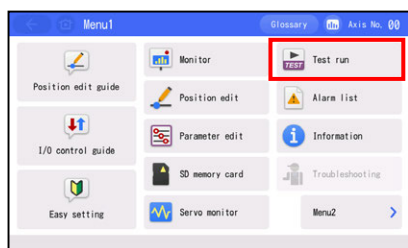


[Step 2]

Touch [Information] in Menu 1 window.

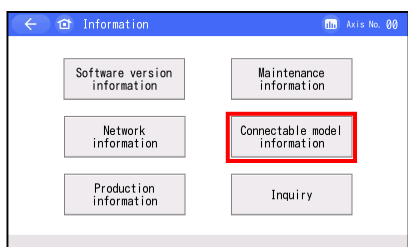


[Step 3]

Touch [Connectable model information].

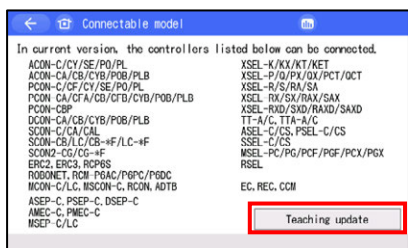


[Step 4]

Touch [Teaching update].

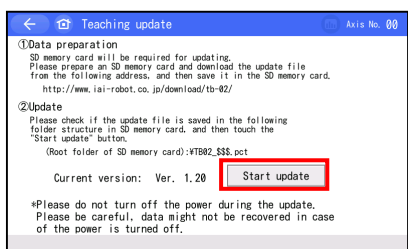

[Step 5]


Touch [Start update].

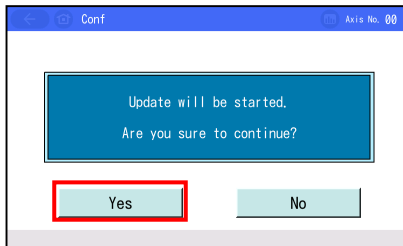

[Step 6]

The updating confirmation window shows up.

Touch [Yes].

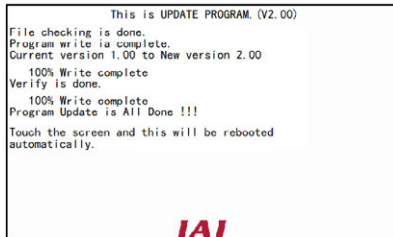

[Step 7]

Start updating.

Touch the screen after you confirm the following messages;
“Program Update is All Done!!!”

“Touch the screen and this will be rebooted automatically.”


* There may be a case that the black and white are in opposite depending on the version of the software.

TB-02 will start up in the new version.

Caution: Do not attempt to turn off the power to TB-02 while in updating.


It is also available to perform by touching [SD Memory Card] → [Teaching update] in Menu 1 window.

[Step 1] Perform from **Preparation 1** to **Preparation 5** in “10.2 ♦Preparation”.

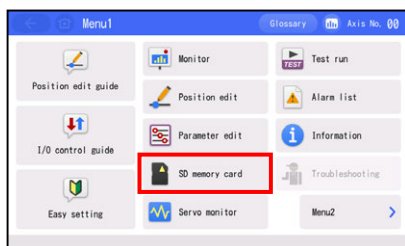

[Step 2]

Touch [SD memory card] in Menu 1 window.

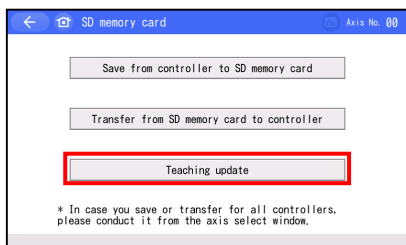


[Step 3] Touch [Teaching update]

[Step 4] Perform procedures from [Step 5] and after in the previous page.


10.2.3 How to Update when SEP System Controller Connected

[Step 1] Perform from **Preparation 1** to **Preparation 5** in “10.2 ◆Preparation”.

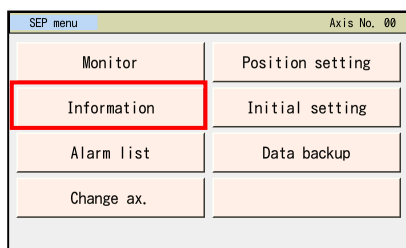


[Step 2]

Touch [Information] in SEP Menu window.

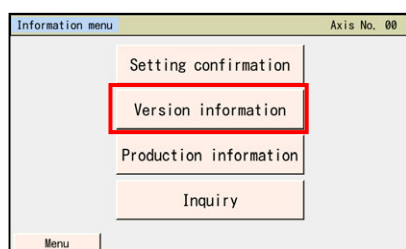


[Step 3]

Touch [Version information].

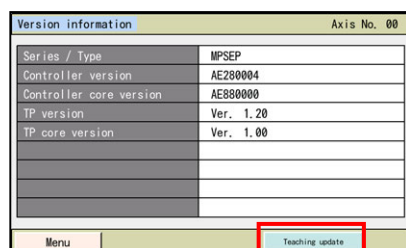

[Step 4]


Touch [Teaching update].

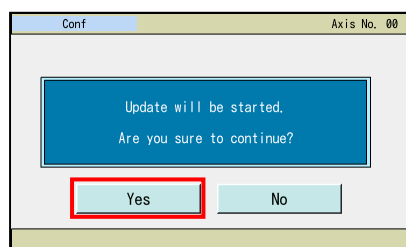

[Step 5]

The updating confirmation window shows up.

Touch [Yes].

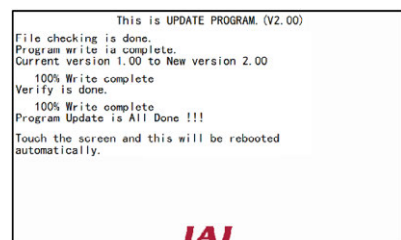

[Step 6]

Start updating.

Touch the screen after you confirm the following messages;
“Program Update is All Done!!!”

“Touch the screen and this will be rebooted automatically.”


* There may be a case that the black and white are in opposite depending on the version of the software.

TB-02 will start up in the new version.

Caution: Do not attempt to turn off the power to TB-02 while in updating.


10.2.4 How to Update when MEC System Controller Connected

[Step 1] Perform from **Preparation 1** to **Preparation 5** in “10.2 ◆Preparation”.

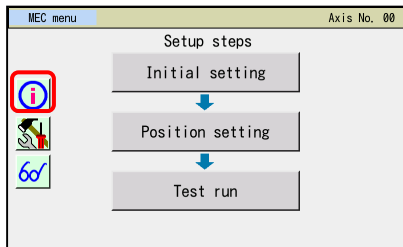


[Step 2]

Touch  in MEC Menu window.

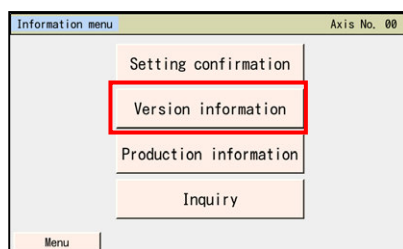


[Step 3]

Touch [Version information].

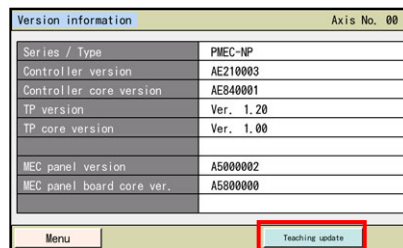

[Step 4]


ToucH [Teaching update].

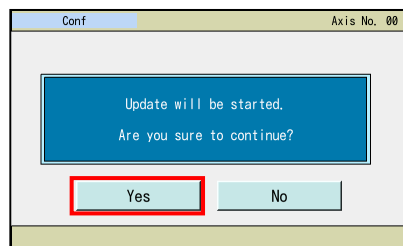

[Step 5]

The updating confirmation window shows up.

Touch [Yes].

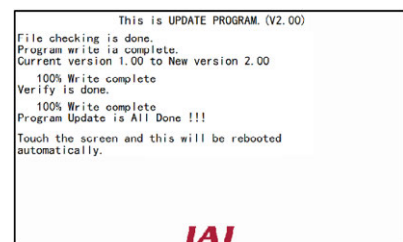

[Step 6]


Start updating.

Touch the screen after you confirm the following messages;
“Program Update is All Done!!!”

“Touch the screen and this will be rebooted automatically.”


* There may be a case that the black and white are in opposite depending on the version of the software.

TB-02 will start up in the new version.

 **Caution:** Do not attempt to turn off the power to TB-02 while in updating.


10.2.5 How to Update when Alarm Code 30C Displayed

[Step 1] Perform from **Preparation 1** to **Preparation 5** in “10.2 ◆Preparation”.

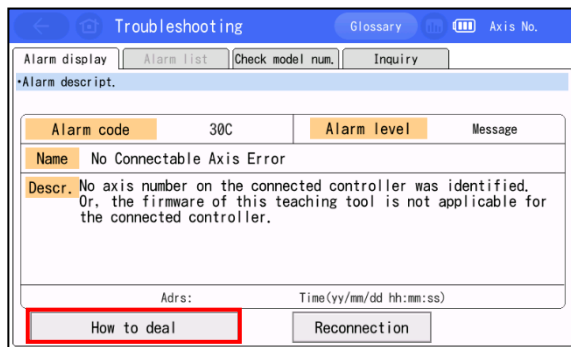


[Step 2]

While the alarm display window (Alarm: 30C) is being displayed, touch [How to deal].

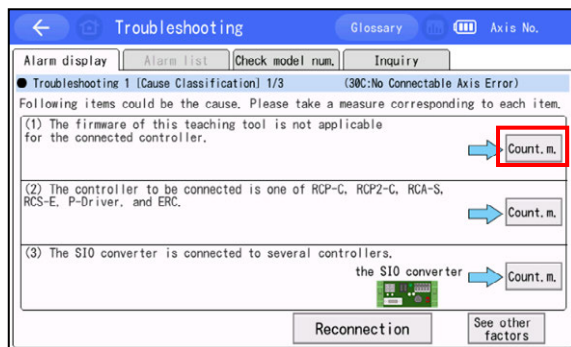


[Step 3]

Touch an applicable [Count.m].

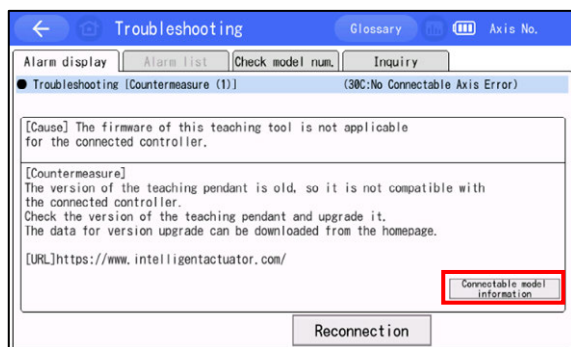


[Step 4]

Touch [Connectable model information].

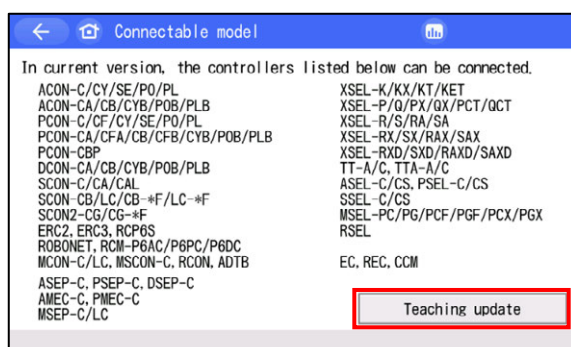


[Step 5]

Touch [Teaching update].

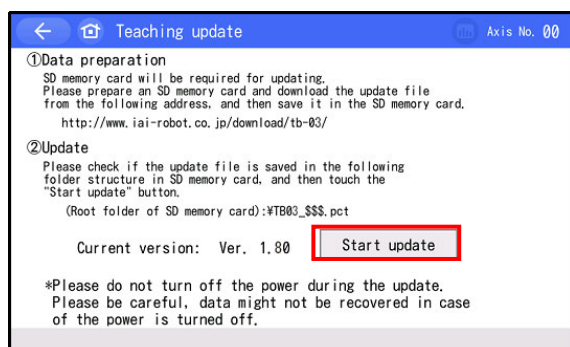

[Step 6]


Touch [Start update].

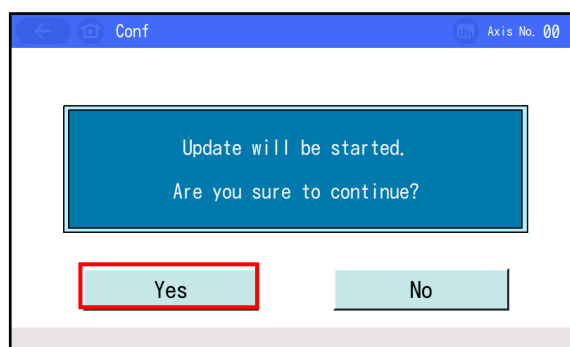

[Step 7]

The updating confirmation window shows up.

Touch [Yes].

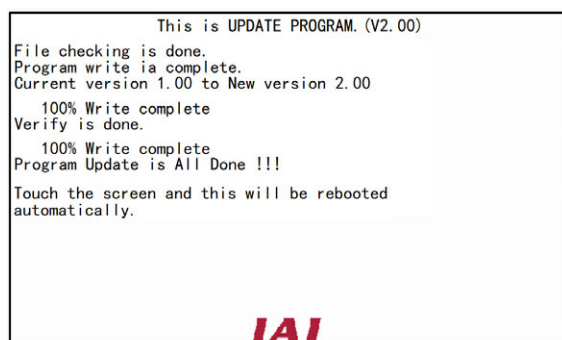

[Step 8]

Start updating.

Touch the screen after you confirm the following messages;
 "Program Update is All Done !!!"
 "Touch the screen and this will be rebooted automatically."
 * There may be a case that the black and white are in opposite depending on the version of the software.

TB-02 will start up in the new version.




Caution: Do not attempt to turn off the power to TB-02 while in updating.

10.2.6 How to and Compulsorily Update (in Common for All Models)

Follow the procedures below to update again in case the menu window of TB-02 would not be displayed due to a failure in updating for reasons such as the power got shut during updating process.


- [Step 1] Perform from **Preparation 1** to **Preparation 4** in “10.2 ◆Preparation”.
(Turning the power on in **Preparation 5** should be performed in [Step 3].)
- [Step 2] Slide the update setting switch on the SD memory card slot (hereafter described as SW1) upward (to the side opposite the SD memory card slot).
- [Step 3] Follow **Preparation 5** in “10.2 ◆Preparation” to turn on the power to TB-02.
Once the power gets supplied, updating process starts without any confirmation window.
- [Step 4] Once the update is complete, a window showing “Program Update is All Done !!!” appears.

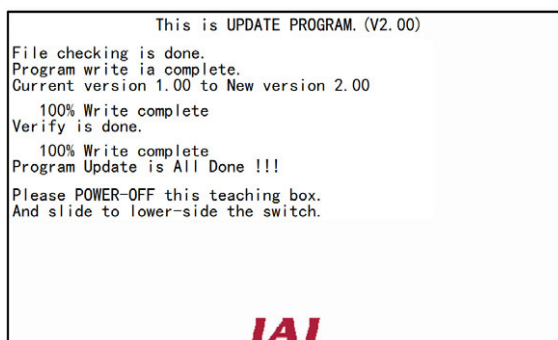

* There may be a case that the black and white are in opposite depending on the version of the software.

- [Step 5] Shut (turn off) the power slide SW1 downwards (towards the SD memory card), and then supply (turn on) the power again.

TB-02 will start up in the new version.

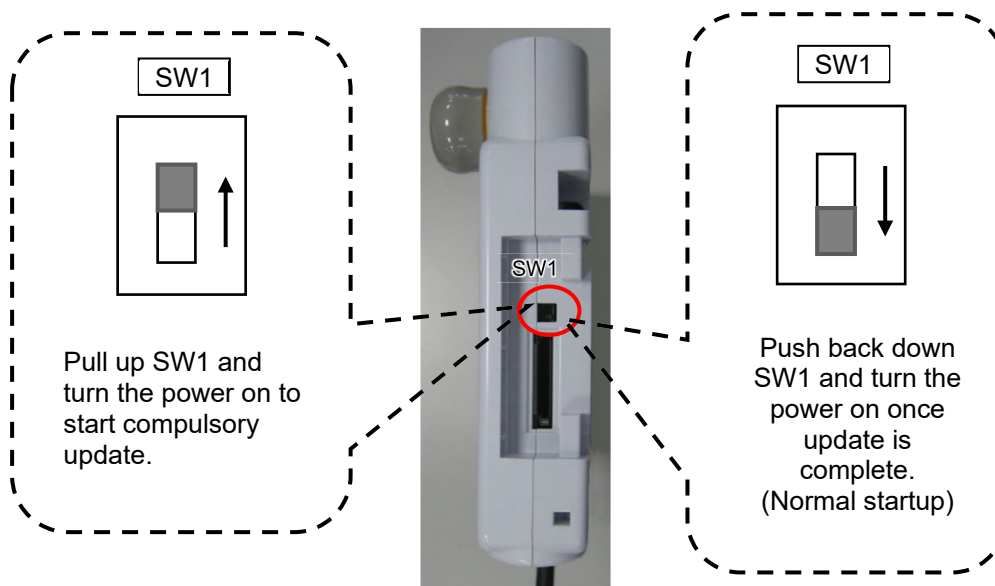

10.2.7 Troubleshooting

Condition	Considerable Cause	Check Items and Counteractions
[Teaching Update] or [Start Updating] is not active (grayed out) and cannot touch it.	<ol style="list-style-type: none"> 1. No memory card is inserted (or can be identified). 2. There is no update file found in the route folder of the memory card. 3. There are several update files found in the route folder of the memory card. 	<ol style="list-style-type: none"> 1. Make sure that a SD memory card with 1GB to 32GB capacity formatted in FAT32 is firmly inserted. 2.3. Check that there is one file existed in the route folder of the memory card named "TB02_\$\$\$.pct" (three digits of version number come in \$\$\$).
Display appears stating "Software is not installed." when the power gets turned on.	Software in normal condition is not written due to a reason such as failure in update.	<p>Perform compulsory update.</p> <p>Refer to [10.2.6 How to and Compulsorily Update]</p>
Display appears stating "File Format Error (Check sum Error)" at the start of update.	"TB02_\$\$\$.pct" saved in the memory card is either not an update file or destroyed.	Save the update file again and try updating again.
Display appears stating "SD Card Access NG !!!" at the start of update.	The memory card is inappropriate.	Try another memory card and update.
There is nothing shown on the screen after more than 1 minute passed after the update has started.	It is a phenomenon found in some memory cards.	<p>[Process for Recovery]</p> <ol style="list-style-type: none"> 1. Take out the memory card. 2. Turn the power off. 3. Conduct the compulsory update. <p>Refer to [9.2.6 How to and Compulsorily Update]</p>
Display appears stating "Update_Appl_WrteFROM NG !!!" during updating process.	The memory card was taken out during updating process.	Do not attempt to take out the memory card till updating is complete.
Display appears stating "SD Card Not Inserted !!!" at the start of compulsory update.	No memory card is inserted (or can be identified).	Make sure that a SD memory card with 1GB to 32GB capacity formatted in FAT32 is firmly inserted.
Display appears stating "File not found. !!!" at the start of compulsory update.	<ol style="list-style-type: none"> 1. There is no update file found in the route folder for the memory card. 2. There are several update files found in the route folder of the memory card. 	Check that there is one file existed in the route folder of the memory card named "TB02_\$\$\$.pct" (three digits of version number come in \$\$\$).

11. Warranty

11.1 Warranty Period

One of the following periods, whichever is shorter:

- 18 months after shipment from our company
- 12 months after delivery to the specified location

11.2 Scope of Warranty

Our products are covered by warranty when all of the following conditions are met. Faulty products covered by warranty will be replaced or repaired free of charge:

- (1) The breakdown or problem in question pertains to our product as delivered by us or our authorized dealer.
- (2) The breakdown or problem in question occurred during the warranty period.
- (3) The breakdown or problem in question occurred while the product was in use for an appropriate purpose under the conditions and environment of use specified in the Instruction Manual and catalog.
- (4) The breakdown or problem in question was caused by a specification defect or problem, or by a quality issue with our product.

Note that breakdowns due to any of the following reasons are excluded from the scope of warranty:

- Anything other than our product
- Modification or repair performed by a party other than us (unless we have approved such modification or repair)
- Anything that could not be easily predicted with the level of science and technology available at the time of shipment from our company
- A natural disaster, man-made disaster, incident or accident for which we are not liable
- Natural fading of paint or other symptoms of aging
- Wear, depletion or other expected result of use
- Operation noise, vibration or other subjective sensation not affecting function or maintenance

Note that the warranty only covers our product as delivered and that any secondary loss arising from a breakdown of our product is excluded from the scope of warranty.

11.3 Honoring the Warranty

As a rule, the product must be brought to us for repair under warranty.

11.4 Limited Liability

- (1) We shall assume no liability for any special damage, consequential loss or passive loss such as a loss of expected profit arising from or in connection with our product.
- (2) We shall not be liable for any program or control method created by the customer to operate our product or for the result of such program or control method.

11.5 Conditions of Conformance with Applicable Standards/Regulations, Etc., and Applications

- (1) If our product is combined with another product or any system, device, etc., used by the customer, the customer must first check the applicable standards, regulations and/or rules. The customer is also responsible for confirming that such combination with our product conforms to the applicable standards, etc. In such a case we will not be liable for the conformance of our product with the applicable standards, etc.
- (2) Our product is for general industrial use. It is not intended or designed for the applications specified below, which require a high level of safety. Accordingly, as a rule our product cannot be used in these applications. Contact us if you must use our product for any of these applications:
 - Medical equipment pertaining to maintenance or management of human life or health
 - A mechanism or mechanical equipment intended to move or transport people (such as a vehicle, railway facility or aviation facility)
 - Important safety parts of mechanical equipment (such as safety devices)
 - Equipment used to handle cultural assets, art or other irreplaceable items
- (3) Contact us at the earliest opportunity if our product is to be used in any condition or environment that differs from what is specified in the catalog or Instruction Manual.

11.6 Other Items Excluded from Warranty

The price of the product delivered to you does not include expenses associated with programming, the dispatch of engineers, etc. Accordingly, a separate fee will be charged in the following cases even during the warranty period:

- Guidance for installation/adjustment and witnessing of test operation
- Maintenance and inspection
- Technical guidance and education on operating/wiring methods, etc.
- Technical guidance and education on programming and other items related to programs

Change History

Revision Date	Description of Revision
March 2016	First Edition
May 2016	Second Edition Applicable for language switching feature 3.24 Offboard Tuning added 3.25 Servo Monitor added Terms to use integrated, correction made
June 2016	2B Edition • Supported models added • 1.8.1 How to Attach Grip Belt added • 6.5 Applied to Secure Digital memory card feature in Gateway Menu window • Detailed process to update teaching added
September 2016	Third Edition • Supported models added • 3.2 Operation Menu corrected • 3.9.1.5 Network Data Monitor Features added • 3.10.1 Position Data statements revised • 3.16.5 I/O Customizing Features added • 3.25 Automatic Scroll Features added • 3.26 Servo Press Dedicated Window added
April 2017	Fourth Edition • Applicable for ELECYLINDER • Applicable for EtherCAT Motion
April 2018	Fifth Edition • Applicable for RCON System • 2.1 to 2.3 Note added for cable minimum bending radius • 9.2 Time for teaching update revised
October 2018	Sixth Edition • Models added for ELECYLINDER supported • 2.2 Position controller / ELECYLINDER cable wiring diagram deleted • 6.6.2, 6.14 Figure for Maintenance Information Window swapped, description revised • 6.7.3 Manual Mode added • 6.8 Figure for Parameter Edit Window swapped • Correction made
February 2019	6B Edition • Models added for ELECYLINDER supported

Revision Date	Description of Revision
May 2019	<p>Seventh Edition</p> <ul style="list-style-type: none"> • Models added for ELECYLINDER supported • 3.9.1.1, 3.9.1.2, 3.18, 6.6.1, 6.15 Selection of with or without ripple compensation added to display of current/current ratio • 3.9.1.1, 3.9.1.2, 3.26.1.1, 3.26.1.2 STO/SS1-t condition displayed for STO/SS1-t type SCON • 6.7.3 Motor Power Off and Brake Compulsory Release buttons added in ELECYLINDER Simple Setting Window • 6.7.4 Description deleted for operation method (positioning operation)
July 2020	<p>Eight Edition</p> <ul style="list-style-type: none"> • Supported models added • 1.1.2 Instruction manuals related to this product stored in DVD added • 3.2 Operation Menu - "Other Settings" → "Encoder Cable Length Setting" added • 3.16.6 Encoder Cable Length Setting added • 3.17.1, 3.19.1, 3.25.4.1, 3.26.4.1 Change made to figure for teaching numeric key pad • Chapter 4 Update made to SEP system controllers operation teaching figures • Chapter 5 Update made to MEC system controllers operation teaching figures • 6.2 Operation Menu - "Other Settings" → "Operation Sound Tuning" added • 6.7 Rotary types added • 6.7.4 Loading Posture Setting / Payload Setting added • 6.13 Other Settings "Operation Sound Tuning" added • 6.13.3 Operation Sound Tuning added • 6.14.1 Change made to teaching figures • 6.16.1 Change made to teaching numeric key pad figures • 7 Change made to gateway menu window • 7.3.2 (3) Change made to figures for RCON special parameters Option units added • 7.4.2 Change made to diagnosis information teaching figures • 7.5.1 Change made to teaching figures • Correction made, terms integrated

Revision Date	Description of Revision
November 2020	<p>Ninth Edition</p> <ul style="list-style-type: none"> • Caution note added for supported models • 1.1.4 TB-02443355E added in how to read model code plate • 3.5 Change made to explanation of menu screen • 3.2, 4.2, 5.2, 6.2 Change made to [Change operating axis] in Menu 2 and names of operation screens • 3.10.3, 6.5 Change made to functional conditions of operation axis change button • 3.12.1, 3.12.2 Change made to button explanation sentences • 7.3 Applicable for Gateway Parameter Setting Tool RCON Motion • 30C of error display, Message of Contents, example of occurrence and countermeasure added • Correction made, change made to teaching window
April 2021	<p>Edition 9B</p> <ul style="list-style-type: none"> • Models added for ELECYLINDER supported • Change made to [Change vel] content in 6.9.2 Position Movement Operation • Terms integrated
May 2021	<p>Tenth Edition</p> <ul style="list-style-type: none"> • Supported models added • PCON-CBP/CGBP added • Correction made
April 2022	<p>Edition 10B</p> <ul style="list-style-type: none"> • Supported models added • 1.9.2 Correction made in how to read model code • 6.13.3 Comment added in Operation Noise Tuning
June 2022	<p>Edition 10C</p> <ul style="list-style-type: none"> • Image of window swapped • Supported models added, Correction made • 1.7 Description revised regarding built-in battery • 6.7.4 Descriptions added for Payload Setting Not Applicable Model • 6.13 Description revised regarding Other Setting
August 2022	<p>Edition 10D</p> <ul style="list-style-type: none"> • Supported models added

Revision Date	Description of Revision
July 2023	<p>Edition 10E</p> <ul style="list-style-type: none"> • Models change and added for ELECYLINDER supported • 1.1.2 [ELECYLINDER Electricity Section Instruction Manual] added • 1.5.2 [Caution] added • 6.7 Change made to Simple Data Setting content • 6.7.5 Auto servo OFF added • 7.3.1 [Step1] "MAC Address" to the network setting screen addde • 9.2 Description revised for Teaching Update <ul style="list-style-type: none"> 9.2.1, 9.2.5 to 9.2.7 added
November 2023	<p>Eleventh Edition</p> <ul style="list-style-type: none"> • SCON2 controller applied for functional safety unit • The table of supported models of ELECYLINDER is integrated with the description of SEL system • 1.9, 2.4 to 2.6, Chapter 8 <ul style="list-style-type: none"> PEC type to Actuator Drive Power Supply Unit added • 3.9.2 Brake equipment setting change feature added in maintenance data window • 3.12 Alarm rest feature added in trial run window • 3.16 Drive mode switchover feature added in other window • 3.27 Drive Recorder Feature added • 6.9 Alarm rest feature added in trial run window • From Chapter 8 onward, moved the chapter number forward • 10.1.2 Message Code 225 added • Correction made, terms integrated
March 2024	<p>Edition 11B</p> <ul style="list-style-type: none"> • 1.9.3 Revised the basic specifications of the actuator drive power supply unit. • 1.9.8 Accessories for ADTB-PEC added • 3.10.2 Collision Detection Feature added • Chapter 3 Insufficient information added, description content revised • Chapter 6 Insufficient information added, description content revised • Chapter 9 Information added in No. 202, 205 and 206 • Correction made, terms integrated
June 2024	<p>Edition 11C</p> <ul style="list-style-type: none"> • 1.1.2 Instruction Manual Related to This Product added • 6.7 Note added related to grip force of ELECYLINDER 3-finger gripper

Revision Date	Description of Revision
August 2024	<p>Twelveth Edition</p> <ul style="list-style-type: none"> • Applicable for ROBO PUMP Standard type (RP-VPM) • Supported models of ELECYLINDER added. • 3.5, 6.5 Stop status icon display on screen added • 9.1.2 Message No. 131,150,212,213,224,226 added. Deleted for Message No. 181.182, Contents changed for 160 to 186 • 10.2 Time for teaching update revised. • Correction made, explanation revised.
March 2025	<p>Edition 12B</p> <ul style="list-style-type: none"> • Became applicable for 3 position mode specification (option model code MF) of ELECYLINDER • 6.7 Caution contents added for ELECYLINDER three-fingered gripper • 6.7.4 GRBP□(W) and GRTR□ added to subject models not applicable for payload setting
April 2025	<p>Thirteenth Edition</p> <ul style="list-style-type: none"> • Applicable for Wire Cylinder • Supported models of ELECYLINDER added • 6.7 Simple Data Setting Window description revised for unit switchover • 6.7 Caution contents changed for ELECYLINDER 3-finger gripper • Correction made



IAI Corporation

Head Office: 1210 Ihara Shimizu-KU Shizuoka City Shizuoka 424-0114, Japan
TEL +81-54-364-5105 FAX +81-54-364-2589
website: www.iai-robot.co.jp/

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505
TEL +1-310-891-6015 FAX +1-310-891-0815
Chicago Office: 110 East State Parkway, Schaumburg, IL 60173
TEL +1-847-908-1400 FAX +1-847-908-1399
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066
TEL +1-678-354-9470 FAX +1-678-354-9471
website: www.intelligentactuator.com

Technical Support available in Europe

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany
TEL +49(0)6196-88950 FAX +49(0)6196-889524
website: www.iai-automation.com

Technical Support available in Great Britain



Duttons Way, Shadsworth Business Park, Blackburn, Lancashire, BB1 2QR, United Kingdom
TEL +44(0)1254-685900
website: www.lcautomation.com

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China
TEL +86-21-6448-4753 FAX +86-21-6448-3992
website: www.iai-robot.com

IAI Robot (Thailand) Co., Ltd.

825 PhairojKijja Tower 7th Floor, Debaratana RD., Bangna-Nuea, Bangna, Bangkok 10260, Thailand
TEL +66-2-361-4458 FAX +66-2-361-4456
website: www.iai-robot.co.th