


Serial Communication Modbus

Instruction Manual Eleventh Edition *ME0162-11A*

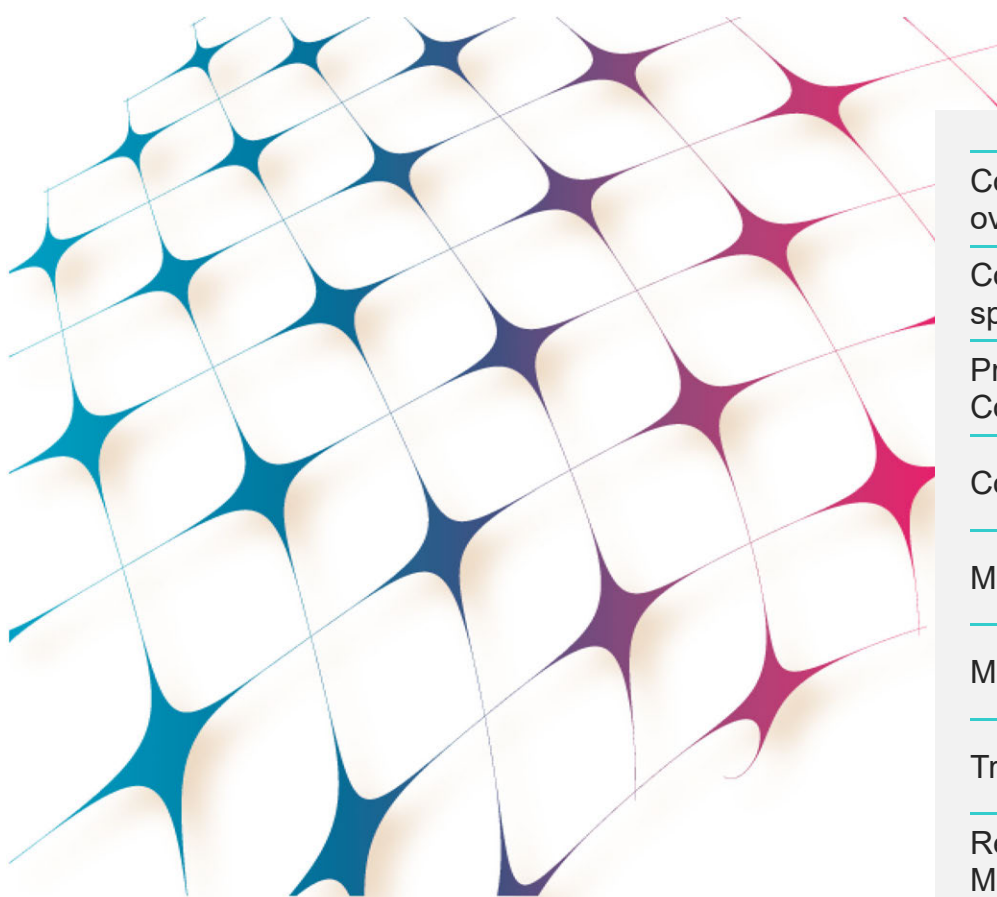

Communication overview	Chapter 1
Confirmation of specifications	Chapter 2
Preparation for Communication	Chapter 3
Communication	Chapter 4
ModbusRTU	Chapter 5
ModbusASCII	Chapter 6
Troubleshooting	Chapter 7
Reference Materials	Chapter 8

Please Read Before Use

Thank you for purchasing our product.

This instruction manual explains the handling methods, structure and maintenance of this product, providing the information you need in order to use the product safely.

Before using the product, be sure to read this manual and fully understand the contents explained herein to ensure safe use of the product.

Please download the user's manual from our website.

You can download it free of charge. User registration is required for the first time downloading.

URL : www.iai-robot.co.jp/data_dl/CAD_MANUAL/

When using the product, print out of the necessary portions of the relevant manual, or please display it on your computer, tablet terminal, etc. so that you can check it immediately.

After reading the instruction manual, keep it in a convenient place so that whoever is handling the product can refer to it quickly when necessary.

[Important]

- This instruction manual is an original document dedicated for this product.
- This product cannot be used in ways not shown in this instruction manual. IAI shall not be liable for any result whatsoever arising from the use of the product in any other way than what is noted in the manual.
- The information contained in this instruction manual is subject to change without notice for the purpose of product improvement.
- If any issues arise regarding the information contained in this instruction manual, contact our customer center or the nearest sales office.
- Use or reproduction of this instruction manual in full or in part without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the text are registered trademarks.

Construction of Instruction Manual for Each Controller Model and This Manual

Product name	Instruction manual name	Control number
Serial Communication (Modbus)	This document	ME0162
PC software IA-OS	PC software IA-OS First Step Guide	ME0391
For RC/EC PC software	RCM-101-MW/ RCM-101-USB Instruction Manual	ME0155
Touch Panel Teaching Pendant TB-01	TB-01/01D/01DR Applicable for Position Controller Instruction Manual	ME0324
Touch Panel Teaching Pendant TB-02	TB-02/02D Applicable for Position Controller and ELECYLINDER Instruction Manual	ME0355
Touch Panel Teaching Pendant TB-03	TB-03 Applicable for Position Controller and ELECYLINDER Wired link Instruction Manual	ME0376
ACON-CB/CGB, DCON-CB/CGB	ACON-CB/CGB、DCON-CB/CGB Controller Instruction Manual	ME0343
ACON-CYB/PLB/POB、DCON- CYB/PLB/POB	ACON-CYB/PLB/POB DCON-CYB/PLB/POB Controller Instruction Manual	ME0354
ACON-CA, DCON-CA	ACON-CA, DCON-CA Controller Instruction Manual	ME0326
ACON-C/CG	ACON-C/CG Controller Positioner Type Instruction Manual	ME0176
ACON-PL/PO	ACON-PL/PO Controller Pulse Train Type Instruction Manual	ME0166
ACON-SE	ACON-SE Controller Serial Communication Type Instruction Manual	ME0171
ACON-CY	ACON-CY Controller Electromagnetic Valve System Type Instruction Manual	ME0167
PCON- CB/CGB/CFB/CGFB/CBP/CGBP	PCON- CB/CGB/CFB/CGFB/CBP/CGBP Controller Instruction Manual	ME0342
PCON-CYB/PLB/POB	PCON-CYB/PLB/POB Controller Instruction Manual	ME0353
PCON-CA/CFA	PCON-CA/CFA Controller Instruction Manual	ME0289
PCON-C/CG/CF	PCON-C/CG/CF Controller Positioner Type Instruction Manual	ME0170

Product name	Instruction manual name	Control number
PCON-PL/PO	PCON-PL/PO Controller Pulse Train Type Instruction Manual	ME0164
PCON-SE	PCON-SE Controller Serial communication Type Instruction Manual	ME0163
PCON-CY	PCON-CY Controller Electromagnetic Valve System Type Instruction Manual	ME0161
SCON-CB/CGB	SCON-CB/CGB Controller Instruction Manual	ME0340
SCON-CB-F (Servo Pressing Type)	SCON-CB series Controller Servo Pressing Type Instruction Manual	ME0345
SCON-CA/CAL/CGAL	SCON-CA/CAL/CGAL Controller Instruction Manual	ME0243
SCON-C	SCON Controller Instruction Manual	ME0161
RCP6S series + PLC Connection Unit	This document	ME0162
RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC	RCP6S Fieldbus Communication Instruction Manual	ME0349
ERC3	ERC3 Controller Integrated actuator Instruction Manual	ME0297
ERC2 (PIO)	ERC2 Controller (PIO Only) Integrated actuator Instruction Manual	ME0158
ERC2 (SIO)	ERC3 Controller (SIO Only)) Integrated actuator Instruction Manual	ME0159
ROBONET-SIO	ROBONET Instruction Manual	ME0208

Table of Contents

Safety Guide	Intro-1
Precautions for Handling	Intro-8

Chapter 1 Communication Overview

1.1 Overview (Modbus)	1-1
-----------------------------	-----

Chapter 2 Confirmation of Specifications

2.1 Specifications of Serial Communication (Modbus)	2-1
2.1.1 Modbus Communication specifications	2-1
2.1.2 Communication Mode	2-2
2.1.3 Transmission mode	2-3

Chapter 3 Preparation for Communication

3.1 System configuration	3-1
3.1.1 In Case the Master (host) Uses RS-232C Interface	3-1
3.1.2 In Case the Master (host) Uses RS-485 Interface	3-2
3.2 Wiring method	3-3
3.2.1 In Case the Master (host) Uses RS-232C Interface wiring	3-3
3.2.2 In Case the Master (host) Uses RS-485 Interface wiring	3-5
3.3 Pin Assignment of Serial Communication Connector in PLC (Reference)	3-6
3.4 Various Setting before Starting Communication	3-7
3.5 Setting Axis Numbers	3-8
3.5.1 For Controller Equipped with Rotary Switch	3-8
3.5.2 For Controller Not Equipped with Rotary Switch	3-9
3.6 Setting Controller Communication Speed	3-11
3.6.1 Setting Wiring and Hardware for Each System	3-11
3.6.2 Setting Communication Speed	3-12

Chapter 4 Communication

4.1 Message Transmission Timing	4-1
4.2 Timeout and Retry	4-2
4.3 Internal Addresses and Data Structure of RC Controller	4-3
4.3.1 Structure of Modbus Registers	4-4
4.3.2 Details of Modbus Registers	4-5
4.3.3 Structure of Modbus Status Registers	4-30
4.3.4 Detail of Modbus Status Registers	4-31

Chapter 5 Modbus RTU

5.1 Message Frames (Query and Response)	5-1
5.2 List of RTU Mode Queries	5-5
5.3 Data and Status Reading (Function code 03)	5-9

5.3.1	Reading Consecutive Multiple Registers	5-9
5.3.2	Alarm Detail Description Reading (ALA0, ALC0, ALT0).....	5-13
5.3.3	Position Data Description Reading (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF).....	5-15
5.3.4	Total moving count Reading (TLMC).....	5-18
5.3.5	Total moving distance Reading (ODOM) (in 1m units)	5-20
5.3.6	Current Time Reading (TIMN)	5-22
5.3.7	Total FAN Driving Time Reading (TFAN)	5-26
5.3.8	Current Position Reading (PNOW)	5-28
5.3.9	Currently generated alarm code Reading (ALMC)	5-30
5.3.10	I/O Port Input Signal Status Reading (DIPM)	5-32
5.3.11	I/O Port Output Signal Status Reading (DOPM).....	5-37
5.3.12	Controller Status Signal Reading 1 (DSS1)	5-42
5.3.13	Controller Status Signal Reading 2 (DSS2)	5-44
5.3.14	Controller Status Signal Reading 3 (DSSE)	5-46
5.3.15	Controller Status Signal Reading 4 (STAT)	5-48
5.3.16	Current Speed Reading (VNOW).....	5-50
5.3.17	Current Ampere Reading (CNOW).....	5-52
5.3.18	Deviation Reading (DEVI)	5-54
5.3.19	Total Time after Power On Reading (STIM)	5-56
5.3.20	Special Input Port Input Signal Status Reading (SIPM)	5-58
5.3.21	Zone Output Signal Status Reading (ZONS).....	5-60
5.3.22	Positioning Completed Position Number Reading (POSS) Exected Program Number Register (Servo Press Type) (POSS).....	5-62
5.3.23	Controller Status Signal Reading 5 (SSSE)	5-64
5.3.24	Current Load Reading...SCON-CA/CB, PCON-CBP only	5-66
5.3.25	Overload Level Monitor Reading (OLLV)...SCON-CA/CAL/CB Only	5-68
5.3.26	Press Program Alarm Code Reading (ALMP)...Servo Press Type Only	5-70
5.3.27	Alarm Generated Press Program No. Reading (ALMP) ...Servo Press Type Only	5-72
5.3.28	Press Program Status Register Reading (PPST) ...Servo Press Type Only	5-74
5.3.29	Press Program Judgement Status Register Reading (PPJD) ...Servo Press Type Only	5-76
5.4	Operation Commands and Data Rewrite (Function code 05)	5-78
5.4.1	Writing to Coil	5-78
5.4.2	Safety Speed Enable/Disable Switching (SFTY)	5-79
5.4.3	Servo ON/OFF (SON)	5-81
5.4.4	Alarm Reset (ALRS)	5-83
5.4.5	Brake Forced Release (BKRL)	5-85
5.4.6	Pause (STP).....	5-87
5.4.7	Home Return (HOME)	5-89
5.4.8	Positioning Start Command (CSTR)	5-91
5.4.9	Jog/Inch Switching (JISL).....	5-93

5.4.10	Teaching Mode Command (MOD)	5-95
5.4.11	Position Data Load Command (TEAC)	5-97
5.4.12	Jog+ Command (JOG+)	5-99
5.4.13	Jog- Command (JOG-)	5-101
5.4.14	Start Positions 0 to 7 (ST0 to ST7) Movement Command (Limited to solenoid valve mode)	5-103
5.4.15	Load Cell Calibration Command (CLBR)	5-105
5.4.16	PIO/Modbus Switching Setting (PMSL)	5-108
5.4.17	Deceleration Stop (STOP)	5-110
5.4.18	Axis operation permission (ENMV) (Servo Press Type Only)	5-112
5.4.19	Program Home Position Movement (PHOM) (Servo Press Type Only)	5-114
5.4.20	Search Stop (SSTP) (Servo Press Type Only)	5-116
5.4.21	Program compulsoly finish (FPST) (Servo Press Type Only)	5-118
5.4.22	Program Start (PSTR) (Servo Press Type Only)	5-120
5.5	Direct Writing of Control Information (Function code 06)	5-122
5.5.1	Writing to Registers	5-122
5.6	Direct Writing of Positioning Data (Function code 10)	5-127
5.6.1	Numerical Value Movement Command	5-127
5.6.2	Writing Position Table Data	5-144

Chapter 6 Modbus ASCII

6.1	Message Frames (Query and Response)	6-1
6.2	ASCII Code Table	6-5
6.3	List of ASCII Mode Queries	6-6
6.4	Data and Status Reading (Function code 03)	6-10
6.4.1	Reading Consecutive Multiple Registers	6-10
6.4.2	Alarm Detail Description Reading (ALA0, ALC0, ALT0)	6-14
6.4.3	Position Data Description Reading (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF)	6-16
6.4.4	Total moving count Reading (TLMC)	6-19
6.4.5	Total moving distance Reading (ODOM) (in 1mm units)	6-21
6.4.6	Current Time Reading (TIMN)	6-23
6.4.7	Total FAN Driving Time Reading (TFAN)	6-27
6.4.8	Current Position Reading (PNOW)	6-29
6.4.9	Currently Generated Alarm Code Reading (ALMC)	6-31
6.4.10	I/O Port Input Signal Status Reading (DIPM)	6-33
6.4.11	I/O Port Output Signal Status Reading (DOPM)	6-38
6.4.12	Controller Status Signal Reading 1 (DSS1)	6-43
6.4.13	Controller Status Signal Reading 2 (DSS2)	6-45
6.4.14	Controller Status Signal Reading 3 (DSSE)	6-47
6.4.15	Controller Status Signal Reading 4 (STAT)	6-49
6.4.16	Current Speed Reading (VNOW)	6-51
6.4.17	Current Ampere Reading (CNOW)	6-53
6.4.18	Deviation Reading (DEVI)	6-55

6.4.19	Total Time after Power On Reading (STIM)	6-57
6.4.20	Special Input Port Input Signal Status Reading (SIPM)	6-59
6.4.21	Zone Output Signal Status Reading (ZONS)	6-61
6.4.22	Positioning Completed Position Number Reading (POSS) Exected Program Number Register (Servo Press Type) (POSS)	6-63
6.4.23	Controller Status Signal Reading 5 (SSSE)	6-65
6.4.24	Current Load Reading...SCON-CA/CB, PCON-CBP only	6-67
6.4.25	Overload Level Monitor Reading (OLLV)...SCON-CA/CAL/CB Only	6-69
6.4.26	Press Program Alarm Code Reading (ALMP)...Servo Press Type Only	6-71
6.4.27	Alarm Generated Press Program No. Reading (ALMP) ...Servo Press Type Only	6-73
6.4.28	Press Program Status Register Reading (PPST) ...Servo Press Type Only	6-75
6.4.29	Press Program Judgement Status Register Reading (PPJD) ...Servo Press Type Only	6-77
6.5	Operation Commands and Data Rewrite (Function code 05)	6-79
6.5.1	Writing to Coil	6-79
6.5.2	Safety Speed Enable/Disable Switching (SFTY)	6-80
6.5.3	Servo ON/OFF (SON)	6-82
6.5.4	Alarm Reset (ALRS)	6-84
6.5.5	Brake Forced Release (BKRL)	6-86
6.5.6	Pause (STP)	6-88
6.5.7	Home Return (HOME)	6-90
6.5.8	Positioning Start Command (CSTR)	6-92
6.5.9	Jog/Inch Switching (JISL)	6-94
6.5.10	Teaching Mode Command (MOD)	6-96
6.5.11	Position Data Load Command (TEAC)	6-98
6.5.12	Jog+ Command (JOG+)	6-100
6.5.13	Jog- Command (JOG-)	6-102
6.5.14	Start Positions 0 to 7 (ST0 to ST7) Movement Command (Limited to solenoid valve mode)	6-104
6.5.15	Load Cell Calibration Command (CLBR)	6-106
6.5.16	PIO/Modbus Switching Setting (PMSL)	6-109
6.5.17	Deceleration Stop (STOP)	6-111
6.5.18	Axis operation permission (ENMV) (Servo Press Type Only)	6-113
6.5.19	Program Home Position Movement (PHOM) (Servo Press Type Only)	6-115
6.5.20	Search Stop (SSTP) (Servo Press Type Only)	6-117
6.5.21	Program compulsoly finish (FPST) (Servo Press Type Only)	6-119
6.5.22	Program Start (PSTR) (Servo Press Type Only)	6-121
6.6	Direct Writing of Control Information (Function code 06)	6-123
6.6.1	Writing to Registers	6-123
6.7	Direct Writing of Positioning Data (Function code 10)	6-128
6.7.1	Numerical Value Movement Command	6-128
6.7.2	Writing Position Table Data	6-145

Chapter 7 Troubleshooting

7.1	Responses at Errors (Exception Responses)	7-1
7.2	Notes	7-4
7.3	Countermeasure When Communication Not Well Established	7-5

Chapter 8 Reference Materials

8.1	CRC Check Calculation	8-1
8.2	Configuration of Systems that Use both SIO and PIO	8-2
8.3	Regarding Option Units	8-4
8.3.1	SIO converter	8-4
8.3.2	Controller Link Cable	8-8
8.3.3	PLC Connection Unit (RCP6S only)	8-9
	Revision history	Post-1

Safety Guide

“Safety Guide” has been written to use the machine safely and so prevent personal injury or property damage beforehand. Make sure to read it before the operation of this product.

Safety Precautions for Our Products

The common safety precautions for the use of any of our robots in each operation.

No.	Operation Description	Description
1	Model Selection	<ul style="list-style-type: none"> • This product has not been planned and designed for the application where high level of safety is required, so the guarantee of the protection of human life is impossible. Accordingly, do not use it in any of the following applications. <ol style="list-style-type: none"> 1) Medical equipment used to maintain, control or otherwise affect human life or physical health. 2) Mechanisms and machinery designed for the purpose of moving or transporting people (For vehicle, railway facility or air navigation facility) 3) Important safety parts of machinery (Safety device, etc.) • Do not use the product outside the specifications. Failure to do so may considerably shorten the life of the product. • Do not use it in any of the following environments. <ol style="list-style-type: none"> 1) Location where there is any inflammable gas, inflammable object or explosive 2) Place with potential exposure to radiation 3) Location with the ambient temperature or relative humidity exceeding the specification range 4) Location where radiant heat is added from direct sunlight or other large heat source 5) Location where condensation occurs due to abrupt temperature changes 6) Location where there is any corrosive gas (sulfuric acid or hydrochloric acid) 7) Location exposed to significant amount of dust, salt or iron powder 8) Location subject to direct vibration or impact • For an actuator used in vertical orientation, select a model which is equipped with a brake. If selecting a model with no brake, the moving part may drop when the power is turned OFF and may cause an accident such as an injury or damage on the work piece.

No.	Operation Description	Description
2	Transportation	<ul style="list-style-type: none"> • When carrying a heavy object, do the work with two or more persons or utilize equipment such as crane. • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • When in transportation, consider well about the positions to hold, weight and weight balance and pay special attention to the carried object so it would not get hit or dropped. • Transport it using an appropriate transportation measure. The actuators available for transportation with a crane have eyebolts attached or there are tapped holes to attach bolts. Follow the instructions in the instruction manual for each model. • Do not step or sit on the package. • Do not put any heavy thing that can deform the package, on it. • When using a crane capable of 1t or more of weight, have an operator who has qualifications for crane operation and sling work. • When using a crane or equivalent equipments, make sure not to hang a load that weighs more than the equipment’s capability limit. • Use a hook that is suitable for the load. Consider the safety factor of the hook in such factors as shear strength. • Do not get on the load that is hung on a crane. • Do not leave a load hung up with a crane. • Do not stand under the load that is hung up with a crane.
3	Storage and Preservation	<ul style="list-style-type: none"> • The storage and preservation environment conforms to the installation environment. However, especially give consideration to the prevention of condensation. • Store the products with a consideration not to fall them over or drop due to an act of God such as earthquake.
4	Installation and Start	<p>(1) Installation of Robot Main Body and Controller, etc.</p> <ul style="list-style-type: none"> • Make sure to securely hold and fix the product (including the work part). A fall, drop or abnormal motion of the product may cause a damage or injury. Also, be equipped for a fall-over or drop due to an act of God such as earthquake. • Do not get on or put anything on the product. Failure to do so may cause an accidental fall, injury or damage to the product due to a drop of anything, malfunction of the product, performance degradation, or shortening of its life. • When using the product in any of the places specified below, provide a sufficient shield. <ol style="list-style-type: none"> 1) Location where electric noise is generated 2) Location where high electrical or magnetic field is present 3) Location with the mains or power lines passing nearby 4) Location where the product may come in contact with water, oil or chemical droplets

No.	Operation Description	Description
4	Installation and Start	<p>(2) Cable Wiring</p> <ul style="list-style-type: none"> • Use our company's genuine cables for connecting between the actuator and controller, and for the teaching tool. • Do not scratch on the cable. Do not bend it forcibly. Do not pull it. Do not coil it around. Do not insert it. Do not put any heavy thing on it. Failure to do so may cause a fire, electric shock or malfunction due to leakage or continuity error. • Perform the wiring for the product, after turning OFF the power to the unit, so that there is no wiring error. • When the direct current power (+24V) is connected, take the great care of the directions of positive and negative poles. If the connection direction is not correct, it might cause a fire, product breakdown or malfunction. • Connect the cable connector securely so that there is no disconnection or looseness. Failure to do so may cause a fire, electric shock or malfunction of the product. • Never cut and/or reconnect the cables supplied with the product for the purpose of extending or shortening the cable length. Failure to do so may cause the product to malfunction or cause fire. <p>(3) Grounding</p> <ul style="list-style-type: none"> • The grounding operation should be performed to prevent an electric shock or electrostatic charge, enhance the noise-resistance ability and control the unnecessary electromagnetic radiation. • For the ground terminal (PE) on the AC power cable of the controller and the grounding plate in the control panel, make sure for grounding work. For security grounding, it is necessary to select an appropriate wire thickness suitable for the load. Perform wiring that satisfies the specifications (electrical equipment standards and criteria). For detail, follow the description in [an instruction manual of each controller or controller built-in actuator]. • Conduct functional grounding on the FG terminal for a controller supplying 24V DC or a controller built-in type actuator. In order to minimize influence to mechanical operation given by electromagnetic interference (noise) to an electrical device or insulation failure, conduct grounding on a terminal or a conductor that is electrically stable. The reference impedance should be Type D (Former Class 3, ground resistance 100Ω or less).





No.	Operation Description	Description
4	Installation and Start	<p>(4) Safety Measures</p> <ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • When the product is under operation or in the ready mode, take the safety measures (such as the installation of safety and protection fence) so that nobody can enter the area within the robot’s movable range. When the robot under operation is touched, it may result in death or serious injury. • Make sure to install the emergency stop circuit so that the unit can be stopped immediately in an emergency during the unit operation. • Take the safety measure not to start up the unit only with the power turning ON. Failure to do so may start up the machine suddenly and cause an injury or damage to the product. • Take the safety measure not to start up the machine only with the emergency stop cancellation or recovery after the power failure. Failure to do so may result in an electric shock or injury due to unexpected power input. • When the installation or adjustment operation is to be performed, give clear warnings such as “Under Operation; Do not turn ON the power!” etc. Sudden power input may cause an electric shock or injury. • Take the measure so that the work part is not dropped in power failure or emergency stop. • Wear protection gloves, goggle or safety shoes, as necessary, to secure safety. • Do not insert a finger or object in the openings in the product. Failure to do so may cause an injury, electric shock, damage to the product or fire. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity.
5	Teaching	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • Perform the teaching operation from outside the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign “Under Operation” at the position easy to see. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>

No.	Operation Description	Description
6	Trial Operation	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • After the teaching or programming operation, perform the check operation one step by one step and then shift to the automatic operation. • When the check operation is to be performed inside the safety protection fence, perform the check operation using the previously specified work procedure like the teaching operation. • Make sure to perform the programmed operation check at the safety speed. Failure to do so may result in an accident due to unexpected motion caused by a program error, etc. • Do not touch the terminal block or any of the various setting switches in the power ON mode. Failure to do so may result in an electric shock or malfunction.
7	Automatic Operation	<ul style="list-style-type: none"> • Check before starting the automatic operation or rebooting after operation stop that there is nobody in the safety protection fence. • Before starting automatic operation, make sure that all peripheral equipment is in an automatic-operation-ready state and there is no alarm indication. • Make sure to operate automatic operation start from outside of the safety protection fence. • In the case that there is any abnormal heating, smoke, offensive smell, or abnormal noise in the product, immediately stop the machine and turn OFF the power switch. Failure to do so may result in a fire or damage to the product. • When a power failure occurs, turn OFF the power switch. Failure to do so may cause an injury or damage to the product, due to a sudden motion of the product in the recovery operation from the power failure.

No.	Operation Description	Description
8	Maintenance and Inspection	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the “leader” and who to be the “follower(s)” and communicate well with each other to ensure the safety of the workers. • Perform the work out of the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. • When the work is to be performed inside the safety protection fence, basically turn OFF the power switch. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign “Under Operation” at the position easy to see. • For the grease for the guide or ball screw, use appropriate grease according to the instruction manual for each model. • Do not perform the dielectric strength test. Failure to do so may result in a damage to the product. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. • The slider or rod may get misaligned OFF the stop position if the servo is turned OFF. Be careful not to get injured or damaged due to an unnecessary operation. • Pay attention not to lose the removed cover or screws, and make sure to put the product back to the original condition after maintenance and inspection works. <p>Use in incomplete condition may cause damage to the product or an injury.</p> <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>
9	Modification and Dismantle	<ul style="list-style-type: none"> • Do not modify, disassemble, assemble or use of maintenance parts not specified based at your own discretion.
10	Disposal	<ul style="list-style-type: none"> • When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste. • When removing the actuator for disposal, pay attention to drop of components when detaching screws. • Do not put the product in a fire when disposing of it. <p>The product may burst or generate toxic gases.</p>
11	Other	<ul style="list-style-type: none"> • Do not come close to the product or the harnesses if you are a person who requires a support of medical devices such as a pacemaker. Doing so may affect the performance of your medical device. • See Overseas Specifications Compliance Manual to check whether complies if necessary. • For the handling of actuators and controllers, follow the dedicated instruction manual of each unit to ensure the safety.

Alert Indication

The safety precautions are divided into “Danger”, “Warning”, “Caution” and “Notice” according to the warning level, as follows, and described in the instruction manual for each model.

Level	Degree of Danger and Damage	Symbol
Danger	This indicates an imminently hazardous situation which, if the product is not handled correctly, will result in death or serious injury.	 Danger
Warning	This indicates a potentially hazardous situation which, if the product is not handled correctly, could result in death or serious injury.	 Warning
Caution	This indicates a potentially hazardous situation which, if the product is not handled correctly, may result in minor injury or property damage.	 Caution
Notice	This indicates lower possibility for the injury, but should be kept to use this product properly.	 Notice

Precautions for Handling

The explanations provided in this manual are limited to procedures of serial communication. For other specifications, such as control, installation and connection, please refer to the instruction manual of each controller.

1. Make sure to follow the usage condition, environment and specifications ranges of the product.
Not doing so may cause a drop in performance or malfunction of the product.
2. If any address or function not defined in this specification is sent to an RC controller, the controller may not operate properly or it may implement unintended movements. Do not send any function or address not specified herein.
3. RC controllers are designed in such a way that once the controller detects a break (space) signal of 150ms or longer via its SIO port, it will automatically switch the baud rate to 9600bps.
On some PCs, the transmission line remains in the break (space) signal transmission mode while the communication port is closed. Exercise caution if one of these PCs is used as the host device, because the baud rate in your RC controller may have been changed to 9600 bps.
4. Set the baud rate and other parameters using IAI's PC software or other dedicated teaching tool.
5. If the controller is used in a place meeting any of the following conditions, provide sufficient shielding measures. If sufficient actions are not taken, the controller may malfunction:
 - 1) Where large current or high magnetic field generates
 - 2) Where arc discharge occurs due to welding, etc.
 - 3) Where noise generates due to electrostatic, etc.
 - 4) Where the controller may be exposed to radiation

6. When performing wiring tasks and inserting/extracting connectors in/from sockets, make sure that the power supplies of the host and each RC controller are turned OFF. Carrying out such tasks with the power supplies turned ON may result in electric shock and/or damage to parts.
7. In order to prevent malfunctions due to noise, wire the communication cables such that the communication cables are isolated from power lines and other control wiring.
8. In order to prevent malfunctions due to noise, make sure to take noise prevention measures on the electric equipment in the same power supply circuit or within the same device.

9. The alarm codes output to 0503_H and 9002_H in Modbus address include those in message level.

There are some types in the IAI controllers that do not issue the message level alarms. In case it is necessary to replace a controller that does not issue the message level alarms with one that issues, add the operation patterns at the issuance of a message level alarm in the system that requires changing the operation pattern for each alarm level. (Example: Replacing from PCON-C to PCON-CB)

For the details of the alarm levels to be issued, refer to [The troubleshooting in the instruction manual of each controller].

10. About Battery-less Absolute Type Stepping Motor Mounted Actuator

Note 1) and 2) should be applied to encoders with resolution of 800 pulses.

- 1) Position adjustment operation (Excitation detection) will be conducted only in the first servo-on after the power is turned on due. The maximum amount of movement in the position adjustment operation is $0.02 \times \text{lead length}$ [mm].
- 2) Home-return complete signal "HEND" and limit switch output signal "LS" are not output until the first servo-on after the power is turned on.
- 3) An error output will not be issued when the first servo-on is held outside the soft limit range. Soft limit monitoring starts after moved into the range.
- 4) Make sure to perform the home-return operation (absolute reset) when the motor unit is taken off the actuator for such a purpose as motor replacement work.

11. For Position Data editing of RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC, the teaching tool such as PC software needs to be connected to the teaching port on the RCP6S actuator.

Connecting to ports other than this teaching port cannot access without the connection to this teaching tool, and "0" will be read even the reading query is executed.

Serial Communication

Chapter 1

Communication Overview

1.1	Overview (Modbus).....	1-1
-----	------------------------	-----

1.1 Overview (Modbus)

The single-axis CON system controllers that control the IAI actuators (hereinafter called as a controller) are equipped with the start-stop synchronized serial interface complied with EIA RS485 as an interface to a host (upper level controller). In this way, it is possible to build an SIO link system that can connect and control up to 16 axes of slaves (RC controllers) ^(Note 1).

In addition to sending commands to each axis individually, it is also possible to broadcast the same command to all slaves at the same time.

Modbus Protocol is employed as the communication protocol, and it is possible to send commands from a host as well as read internal information.

Modbus Protocol is a communication protocol that was developed by Modicon Inc. (AEG Schneider Automation International S.A.S.) for PLC. The details of Modbus Protocol specifications are described in the protocol specifications manual (PI-MBUS-300 Rev. J). What is defined in Modbus Protocol is the communication protocol only. The physical layers of such as a communication device are not specified.

Since the specifications of Modbus Protocol are disclosed globally, software development can be carried out easily.

Note 1 Note that it is only possible to connect RC series devices on the same network; old RC series (protocol T) or other devices cannot be connected.

There are 2 types of serial transmission modes: ASCII mode (where 1-byte (8 bits) data is Converted to ASCII code (2 characters) and sent) and RTU mode (where 1-byte (8 bits) data is sent as is). RC controllers identify the transmission mode on a packet-by-packet basis, thus making it possible to receive in both modes ^(Note 2).

Set the ROBONET RS-485 to the SIO through mode. Refer to the [Separate ROBONET Operation Manual.]

Note 2 Make sure to use the same serial transmission mode for all devices on one network: it is not allowed to use both modes.

Operational controller

Table 1.1-1 Operational controller list

Series name	Type	Remarks
ERC2	-	Option: SE Select (serial communication type)
ERC3	-	V0002 or later
PCON	C/CG/CF/CY/PL/PO/SE/ CA/CFA/CB/CFB/CGB/CGFB//CBP/CGBP CYB/PLB/POB	
ACON	C/CG/CY/PL/PO/SE/ CA/CB/CGB/CYB/PLB/POB	
DCON	CA/CB/CGB/CYB/PLB/POB	
SCON	C/CA/CAL/CGAL/CB/CGB/ Servo Press Type	
ROBONET	RS-485	When RTU mode and SIO through mode
RCP6S	RCP6S、RCM-P6PC、RCM-P6AC、 RCM-P6DC	When using PLC connection unit (RTU Mode)
RCON	GW/GWG	RTU,/TCP

* For details of RCON, refer to [RCON Modbus Specification Manual (ME0413)].

**Caution**

- Abbreviation for Type for Controllers in This Manual

Some controller types may not be able to use some features and commands (queries) explained in this instruction manual. In case there is such restrictions, the type names that are applicable and those that are not applicable should be described.

As Safety Category (G) Type is the same as the standard type in the way of applicable and not applicable, abbreviation should be as described below.

Model	Abbreviation
C/CG	C
CAL/CGAL	CAL
CB/CGB	CB
CFA/CGFA	CFA
CFB/CGFB	CFB
CBP/CGBP	CBP
LC/LCG	LC

Serial Communication

Chapter 2

Confirmation of Specifications

2.1	Specifications of Serial Communication (Modbus)	2-1
2.1.1	Modbus Communication specifications	2-1
2.1.2	Communication Mode.....	2-2
2.1.3	Transmission mode.....	2-3

2.1 Specifications of Serial Communication (Modbus)

2.1.1 Modbus Communication specifications

Modbus Communication specifications are as described below.

Table 2.1-1 Modbus Communication specifications

Item	specifications
Interface	Conforming to EIA-485 (RS-485)
Communication method	Half-duplex communication
Maximum total extension distance	100m
Synchronization method	Start-stop synchronization
Connection pattern	1-to-N unbalanced bus connection ($1 \leq N \leq 16$)
Transmission mode	RTU/ASCII (auto-detect) ^(Note 1)
Baud rate (bps)	Selectable from the following speeds via parameter setting: 9600, 14400, 19200, 28800, 38400, 57600, 76800, 115200, 230400
Bit length	8 bits
Stop bit	1 bit
Parity	None

Note 1 ROBONET and RCP6S Series + PLC Connection Unit are not applicable for ASCII Mode.

(RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC)

2.1.2 Communication Mode

In the Modbus protocol, communication takes place in a single-master/multiple-slave configuration. In this communication, only the master (the PLC host in the example below) issues a query to a specified slave (the RC controller connected to axis C in the example below). When the specified slave receives this query, it executes the function specified in the query, and then returns a response message (one communication cycle is completed with this operation).

The query message format consists of the slave “address”, function code” defining the content of request, “data”, and “error check”.

The response message format consists of the function code confirming the content of request, data, and error check. Following figure shows the query message format and response message configuration. Communication Mode are as described below.

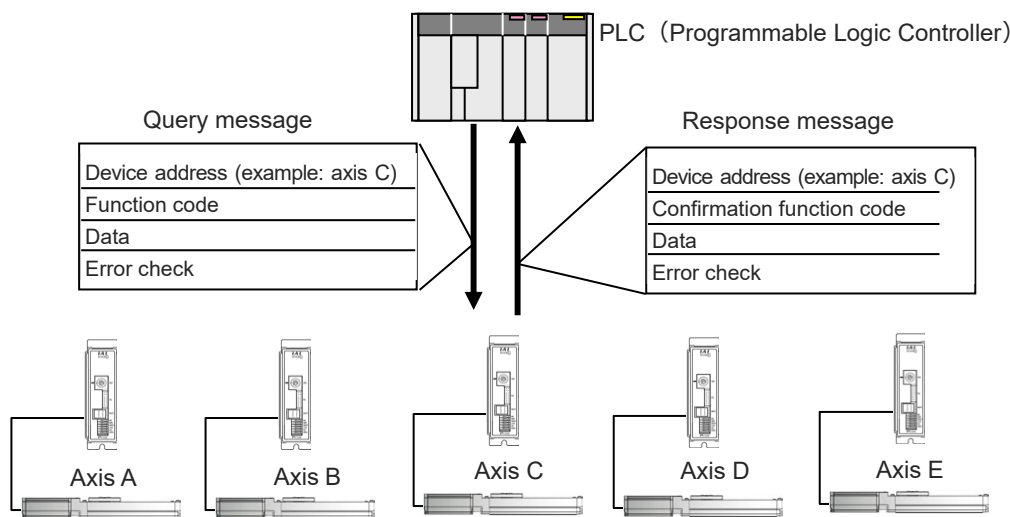


Fig. 2.1-1 Transmission Structure of Query and Response

2.1.3 Transmission mode

There are two types of modes, RTU (Remote Terminal Unit) Mode and ASCII (American Standard Code for Information Interchange) Mode, in the serial transmission modes. Either of them can be selected for communication. However, the mode has to be the same for all devices in one network.

In RTU Mode, 1 byte (8 bits) data is to be transmitted directly. In ASCII Mode, 1 byte (8 bits) data is to be transmitted with it converted into 2 characters of ASCII Code. Therefore, RTU Mode can be defined more efficient in transmission than ASCII Mode.

The check algorithm in the error check field differs in each serial transmission mode. RTU Mode adopts CRC (Cyclical Redundancy Check) System while ASCII Mode adopts LRC (Longitudinal Redundancy Check) System.

Refer to:

- RTU mode : [Chapter 5 Modbus/RTU]
- ASCII mode : [Chapter 6 Modbus/ASCII]

for details regarding commands in each transmission mode.

Serial Communication

Chapter 3

Preparation for Communication

3.1	System configuration	3-1
3.1.1	In Case the Master (host) Uses RS-232C Interface	3-1
3.1.2	In Case the Master (host) Uses RS-485 Interface	3-2
3.2	Wiring method	3-3
3.2.1	In Case the Master (host) Uses RS-232C Interface wiring	3-3
3.2.2	In Case the Master (host) Uses RS-485 Interface wiring	3-5
3.3	Pin Assignment of Serial Communication Connector in PLC (Reference)	3-6
3.4	Various Setting before Starting Communication	3-7
3.5	Setting Axis Numbers	3-8
3.5.1	For Controller Equipped with Rotary Switch	3-8
3.5.2	For Controller Not Equipped with Rotary Switch	3-9
3.6	Setting Controller Communication Speed	3-11
3.6.1	Setting Wiring and Hardware for Each System	3-11
3.6.2	Setting Communication Speed	3-12

3.1 System configuration

3.1.1 In Case the Master (host) Uses RS-232C Interface

Below shows an example of a system structure when an upper level (host) is RS-232C interface.

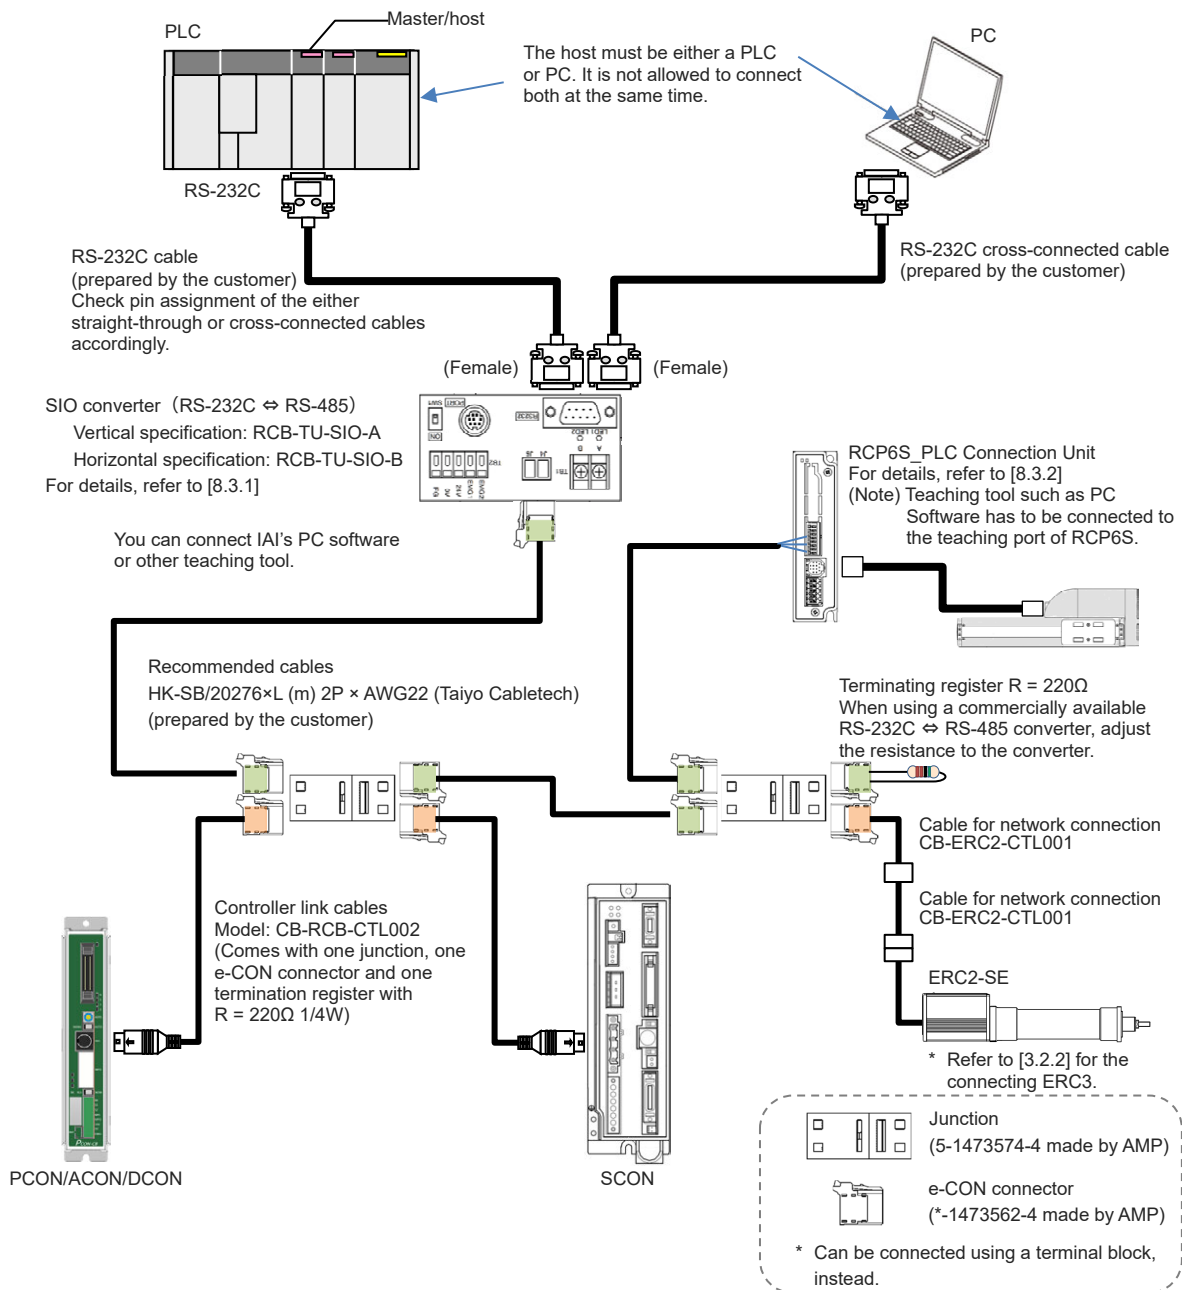


Fig. 3.1-1 Example System Configuration (Master: RS-232C Interface)

- * Make sure to use the common 0V line of the 24V power supply for each controller (other than SCON).
- * For ROBONET connection, refer to the [Separate ROBONET Operation Manual (ME0208)].

3.1.2 In Case the Master (host) Uses RS-485 Interface

Here shows how to layout cables when an upper level (host) is RS-485 interface.

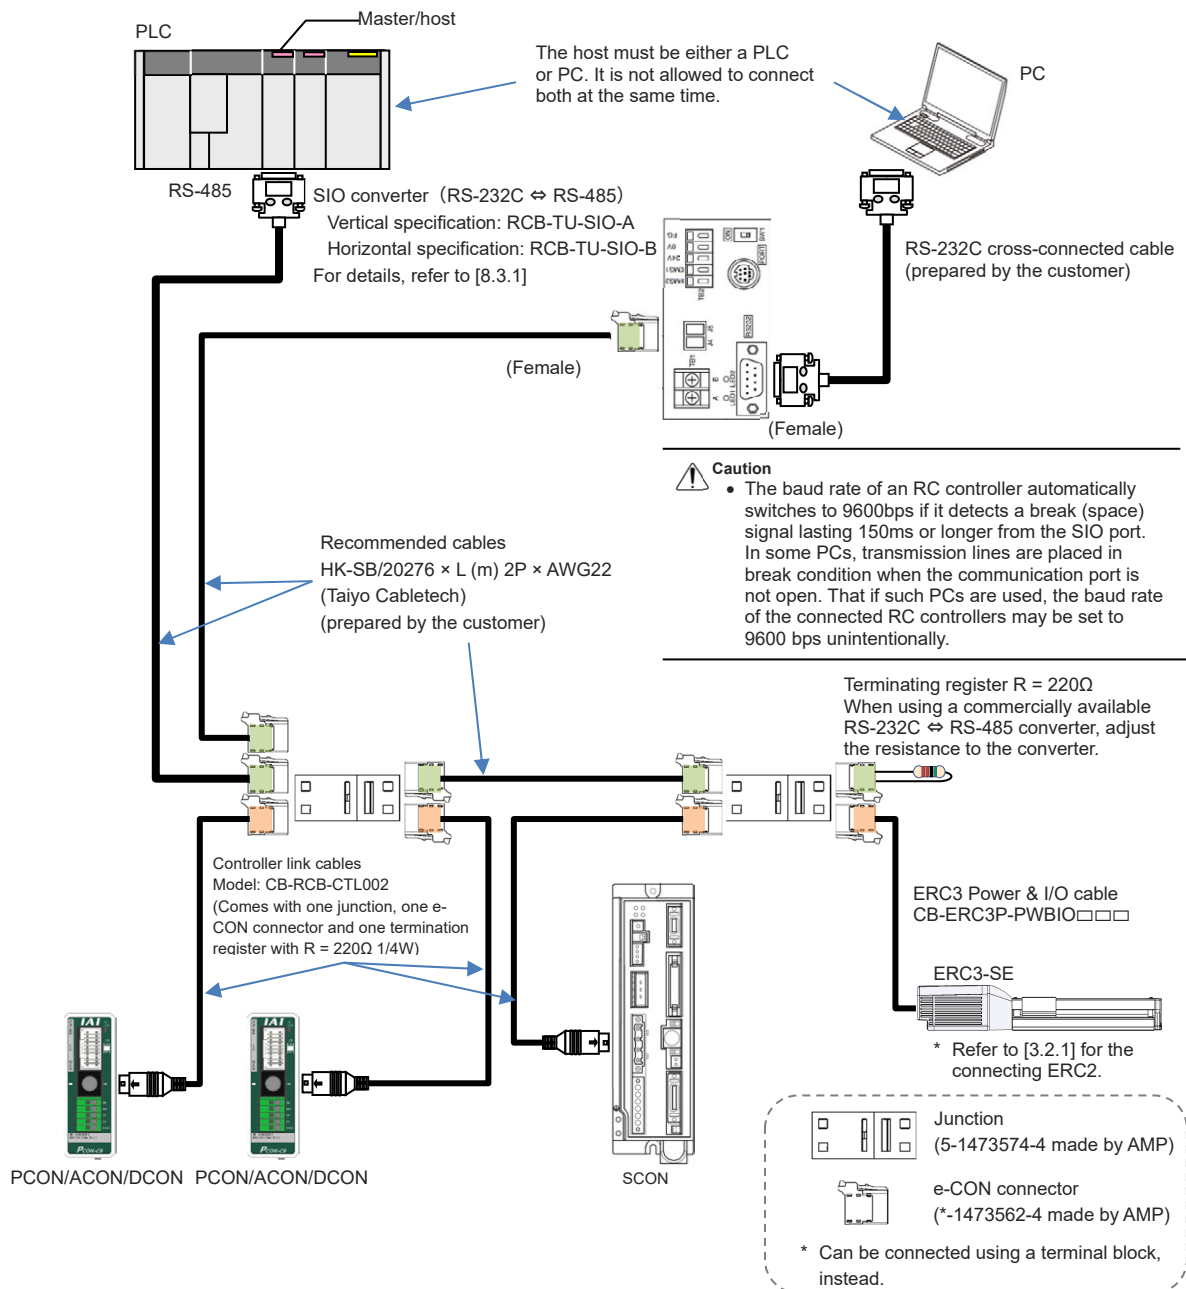


Fig. 3.1-2 Example System Configuration (Master: RS-485 Interface)

- * Make sure to use the common 0V line of the 24V power supply for each controller (other than SCON).
- * For ROBONET connection, refer to the [Separate ROBONET Instruction Manual (ME0208)].

3.2 Wiring method

3.2.1 In Case the Master (host) Uses RS-232C Interface wiring

Here shows how to layout cables when an upper level (host) is RS-232C interface.

[1] Example of Cable Layout between Host and SIO Converter

RS-232C cables (commercially available cables, etc.)
Make sure to check the signal names of the RS-232C connectors on the host side before connecting refer to [3.3 Communication Connector Pin Assignment of PLC and PC].

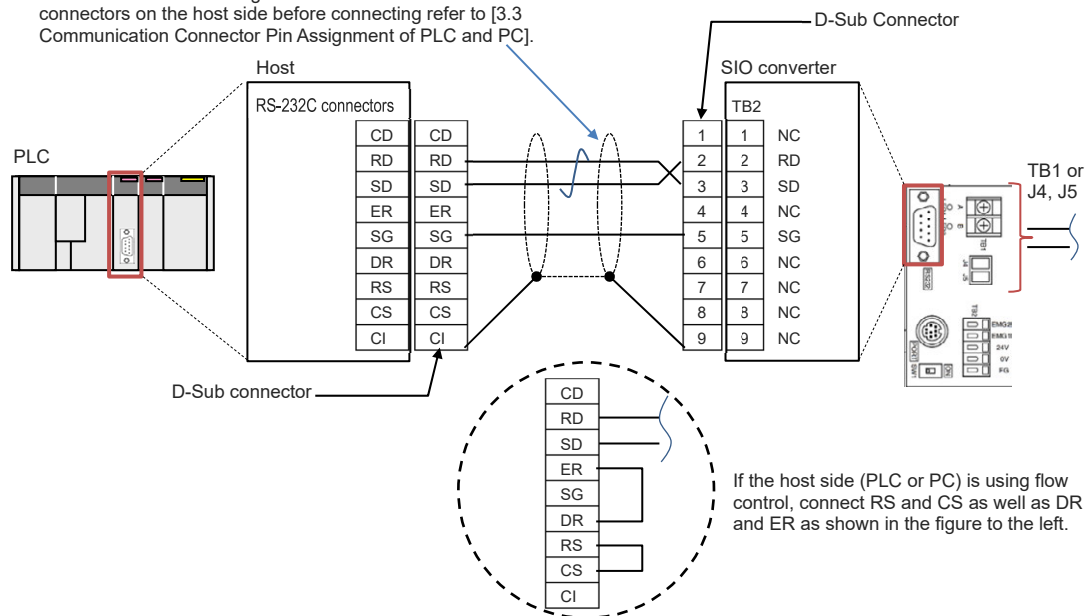


Fig. 3.2-1 Example of Cable Layout between Host and SIO Converter

[2] Example of Cable Layout between SIO Converter and 4-Way Junction

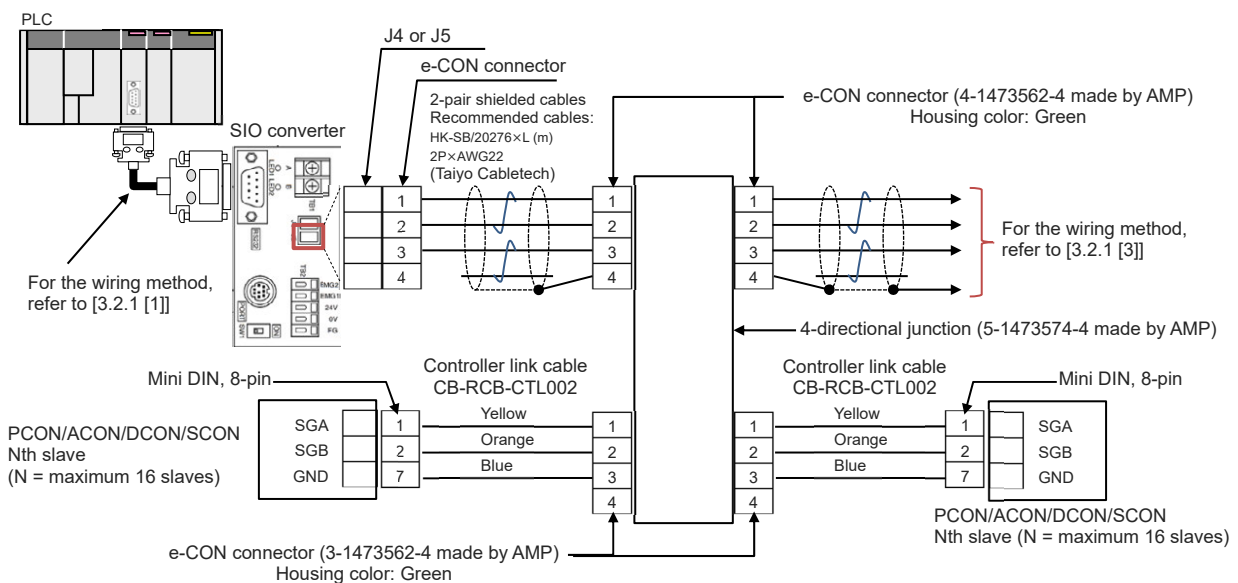


Fig. 3.2-2 Example of Cable Layout between SIO Converter and 4-Way Junction

[3] Example of Cable Layout between 4-Way Junction and Controller

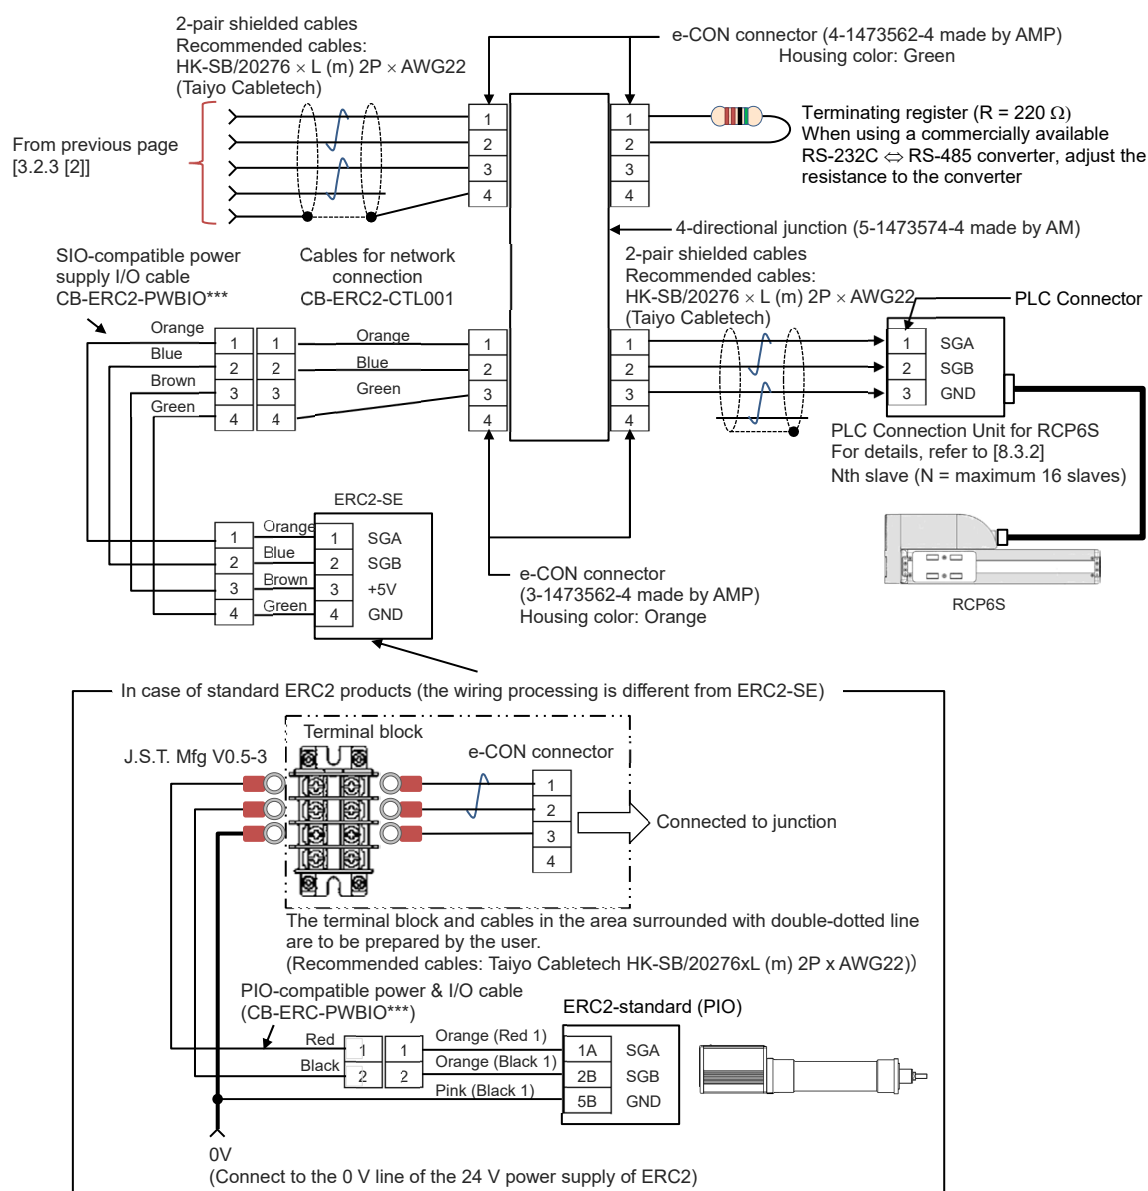


Fig. 3.2-3 Example of Cable Layout between 4-Way Junction and Controller

**Caution**

- Make sure to use the common 0V line of the 24V power supply for each controller (other than SCON).
- For ROBONET connection, refer to the [Separate ROBONET Instruction Manual (ME0208)].

3.2.2 In Case the Master (host) Uses RS-485 Interface wiring

Here shows how to layout cables when an upper level (host) is RS-485 interface.

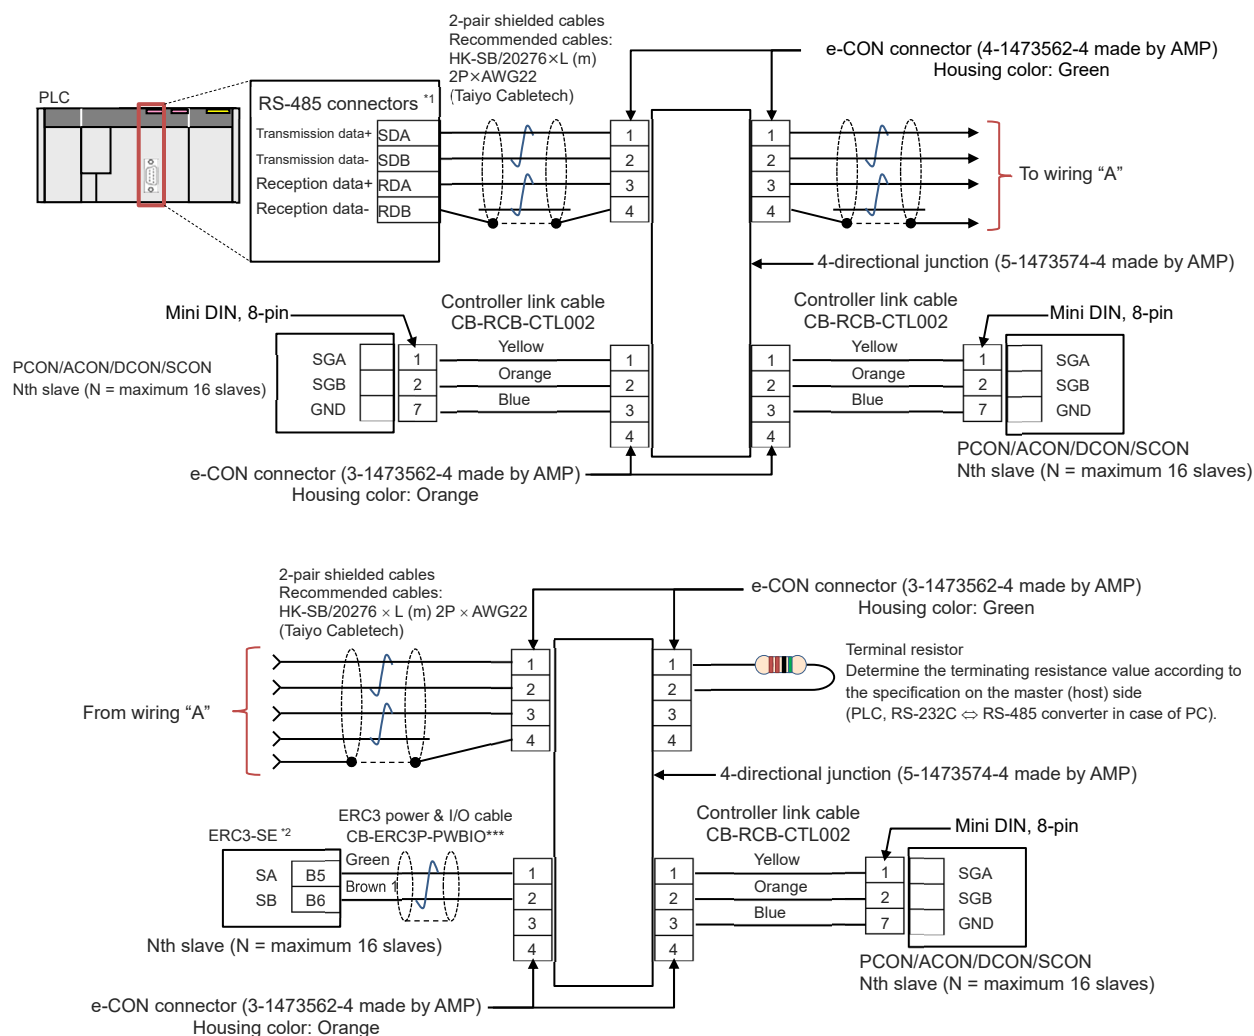


Fig. 3.2-4 Example of Cable Layout when an upper level (host) is RS-485 interface.

- *1 Please note that some PLCs are configured such that SDA is the negative terminal of the transmission data and SDB is the positive terminal (in this case, RDA is the negative terminal of the reception data and RDB is the positive terminal). Refer to [3.3 Pin Assignment of Serial Communication Connector in PLC (Reference)] for pin assignment on the PLC side.
- *2 Connection of ERC3-SE
- 1) A cable (CB-ERC3-PMB10) is required separately.
 - 2) MEC Mode Type cannot be connected.
 - 3) Connection cannot be established via PIO Converter.



Caution


- Make sure to use the common 0V line of the 24V power supply for each controller (other than SCON).
- For ROBONET connection, refer to the [Separate ROBONET Instruction Manual (ME0208)].

3.3 Pin Assignment of Serial Communication Connector in PLC (Reference)

Below shows the pin assignment of a communication connector for the serial communication unit of PLC provided by each company. Refer to [Instruction Manual for (Serial) Communication Unit of Each Company] for details of wiring.


[1] RS-232C Pin Assignment

In case of PLC made by Mitsubishi:
QJ71C24 RS-232C
D-sub 9-pin connector (male: cable side)

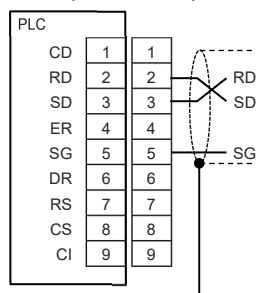


* One end of the shielded cable shall be connected to a connector housing or grounded.

In case of PLC made by Omron:
CJ1W-SCB or SCU RS-232C
D-sub 9-pin connector (male: cable side)

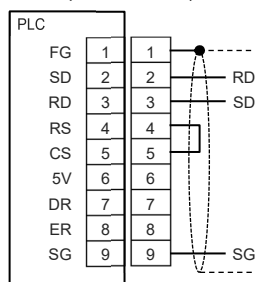


In case of RS-232C
D-sub 9-pin connector (female: cable side)

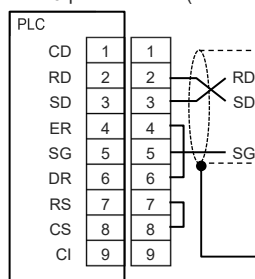

* To use flow control, connect RS and CS as well as DR and ER.

* One end of the shielded cable shall be connected to a connector housing or grounded.

In case of PLC made by Keyence:
KV-L20R RS-232C
D-sub 9-pin connector (female: cable side)

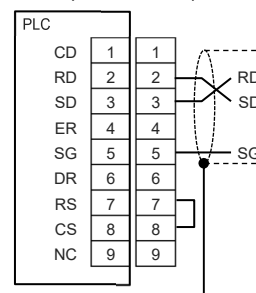


* One end of the shielded cable shall be connected to a connector housing or grounded.

Fig. 3.3-1 Pin Assignment for Serial Communication Unit in RS-232C

[2] RS-485 Pin Assignment


In case of PLC made by Mitsubishi:
QJ71C24 RS-485
Terminal block

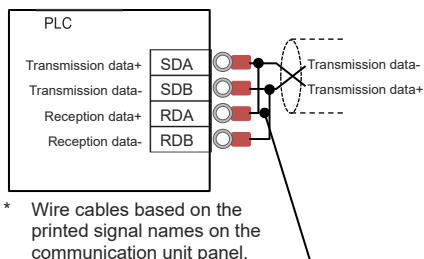


* Wire cables based on the printed signal names on the communication unit panel.

* One end of the shielded cable shall be connected to a connector housing or grounded.

In case of PLC made by Omron:
CJ1W-SCB or SCU RS-485
D-sub 9-pin connector (male: cable side)

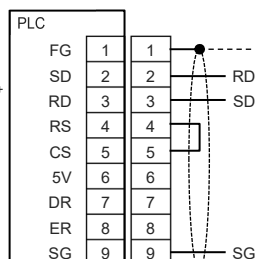

In case of PLC made by Keyence:
KV-L20R RS-485
Terminal block

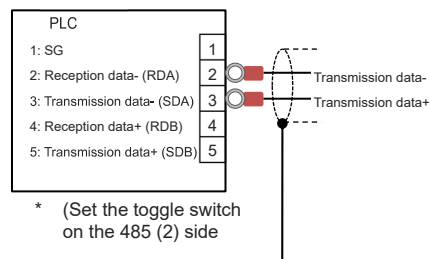

* (Set the toggle switch on the 485 (2) side)

* One end of the shielded cable shall be connected to a connector housing or grounded.

Fig. 3.3-2 Pin Assignment for Serial Communication Unit in RS-485

3.4 Various Setting before Starting Communication

Here shows the communication flow of communication.

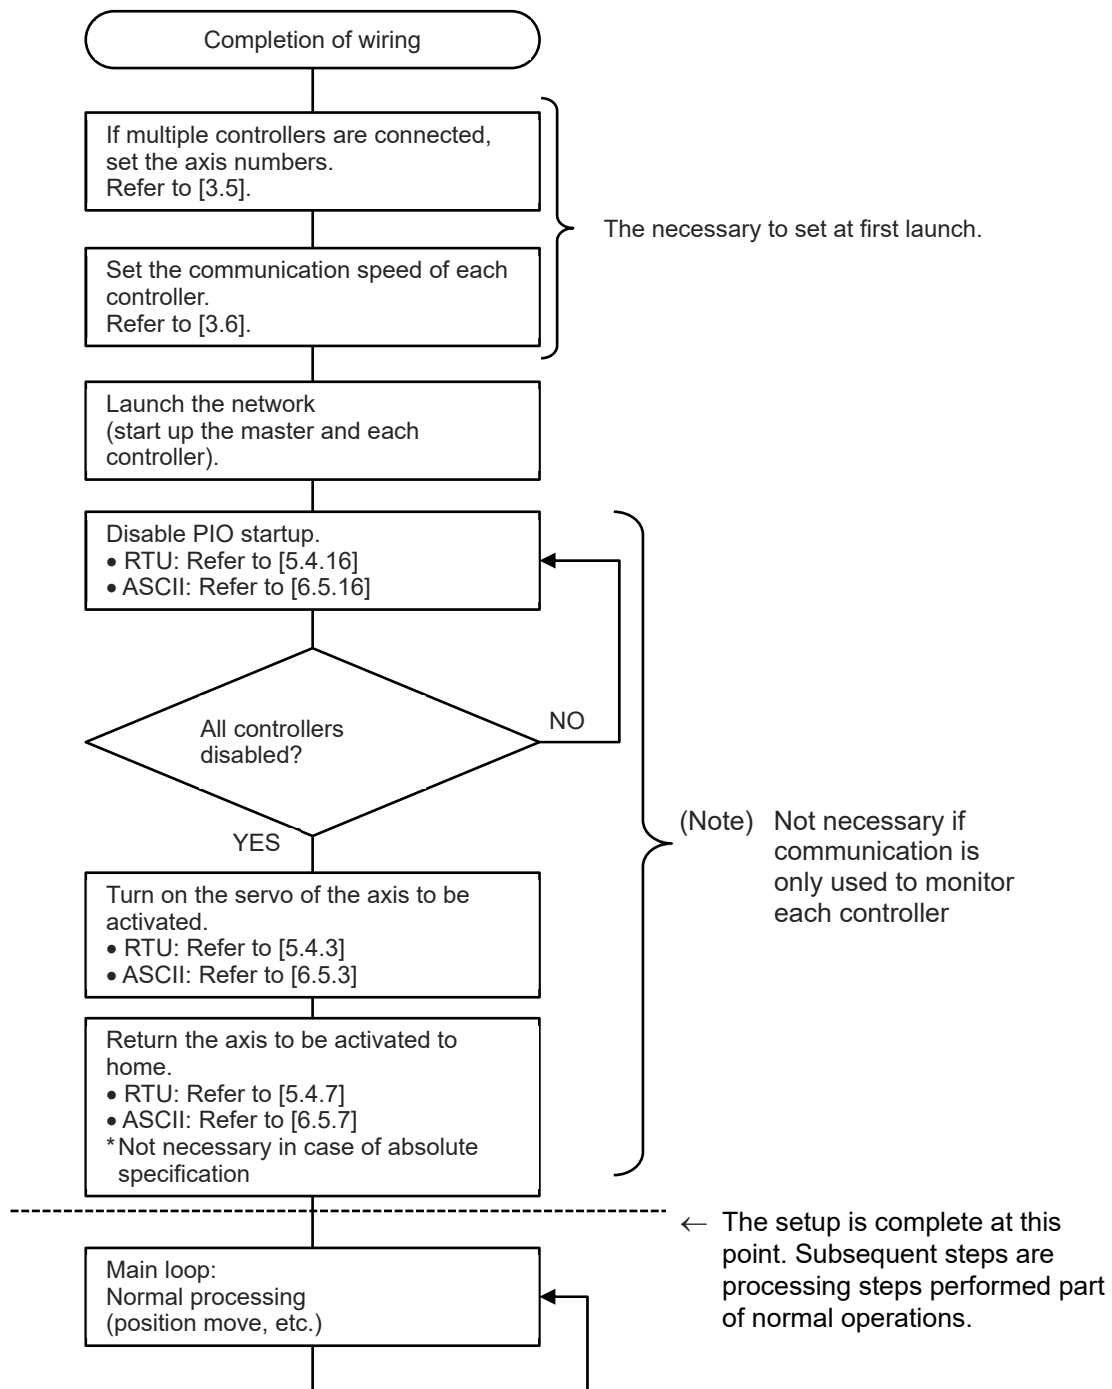


Fig. 3.4-1 Communication flow

3.5 Setting Axis Numbers

Set up the axis number for a controller (slave).

As it is different for different controllers how to set it up, check the method suitable for an applicable controller.

3.5.1 For Controller Equipped with Rotary Switch

Set an axis number for each RC controller on the SIO link using hexadecimal digits from 0 to F_H, which is the number for the 16th axis.

If the panel surface of an RC controller has an axis number setting switch (ADRS) (PCON-C/CG/CF/CA/CFA/CB/CBP/CFB/CGB/CGBP/CGFB/, ACON-C/CG/CA/CB/CGB, DCON-CA/CB/CGB, SCON-C/CA/CB/CGB, ROBONET), adjust the arrow to point to the axis number using a flat bladed screwdriver.

Note Pay attention to the controller axis numbers so they would not be duplicated with another controller or device.

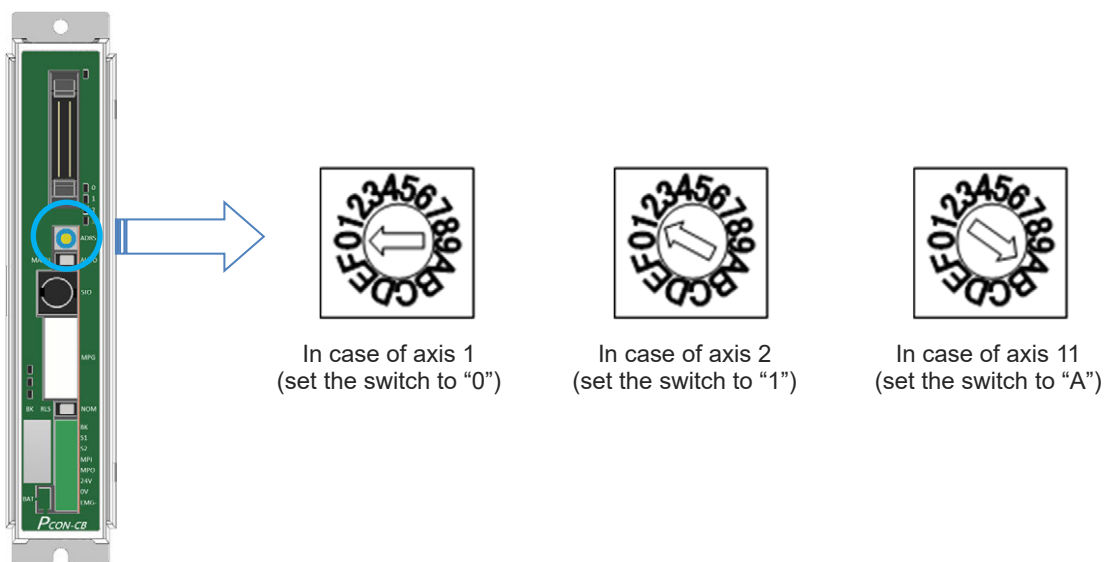


Fig. 3.5-1 Setup of Controller Equipped with Rotary Switch


3.5.2 For Controller Not Equipped with Rotary Switch

Any controller not equipped with the axis number setup switch described in [3.5.1 For Controller Equipped with Rotary Switch] is to be connected one by one to a teaching tool such as the PC teaching software to set up the axis number.

Here, introduces how to establish the setting in the PC teaching software IA-OS. For the setting from a teaching pendant, refer to [an instruction manual for each model (TB-03/02/01, CON-PTA, CON-PT, CON-T, RCM-E and RCM-T)].

◆ Procedure


1. Connect the communication cable for PC to the SIO connector of the controller for which an axis number is to be set.

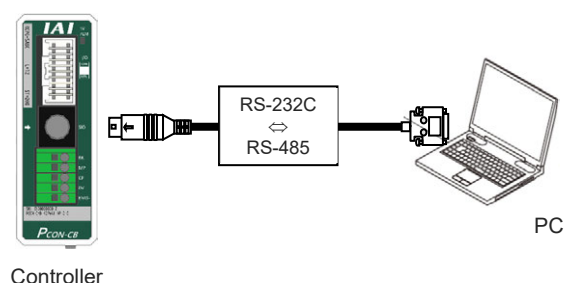

2. Startup IA-OS and click **Serial Communication (USB/TP Port)** in the communication system select window to start communication with a controller.


* A communication port is to be selected for communication after this.

Communication system select window

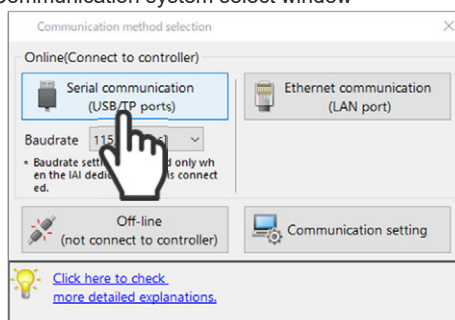


3. Once communication is established, select **Parameter** in the menu in the main window and click **Axis Number Setup** shown in the ribbon.

Main screen

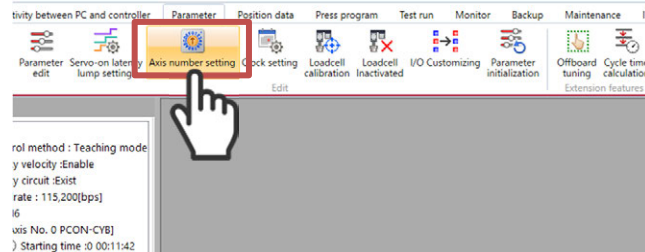

4. As the axis number setup window appears, select an "Axis Number" that is required to be selected from the pull-down menu, and click **OK**.

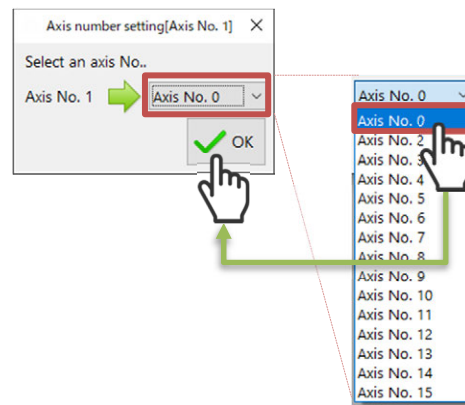

5. As a warning window appears, click **OK**.



3.6 Setting Controller Communication Speed

In order to perform communication, the communication speed of the host side and each RC controller must match.

Set the communication speed according to the procedure explained in [3.6.1] and [3.6.2].

For the settings on the host side, refer to the [instruction manual for your host equipment].

3.6.1 Setting Wiring and Hardware for Each System

[1] In case of using a PC as the master (host) controller

It is possible to make settings without changing the current connection. For those RC controllers that possess the operation mode setting switch, set the switch to MANU.

[2] In case a PLC is used as the master (host) controller connected via RS-232C

Connect a PC as master (host) controller instead of the PLC (refer to [Figure 3.1-1]).

At this point, disconnect the PLC from the SIO converter and connect the PC to the teaching port (Mini DIN8 pin connector) of the SIO converter refer to [3.1.1] using the cable supplied with the PC software.

For those RC controllers that possess the operation mode setting switch, set the switch to MANU.

[3] In case a PLC is used as the master (host) controller connected via RS-485

Connect a PC directly to each RC controller in the same way as for setting axis numbers.

For those RC controllers that possess the operation mode setting switch, set the switch to MANU.

[4] When a ROBONET is connected

To set up your ROBONET, connect the cable supplied with your PC software to the teaching port on the GateWayR unit. Set the MODE selector switch on the GateWayR unit to MANU.

Set an axis number for each RC controller on the SIO link using hexadecimal digits from 0 to F_H, which is the number for the 16th axis.

3.6.2 Setting Communication Speed


Set the communication speed using the following procedure. (Example of IA-OS)

Note On ROBONET controllers, the baud rate is set using the gateway parameter setting tool.


For details, refer to the [Separate ROBONET Instruction Manual (ME0208).]

1. While in communication, right-click an axis number in the controller to change parameters in the IA-OS status columns (“Axis No. 0 PCON-CB” in the example), and click **Edit Parameter**.


IA-OS status columns

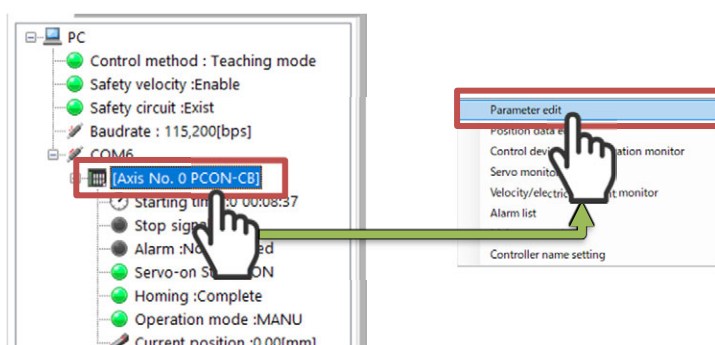

2. The user parameter edit window should get displayed. Click the column of the setting value for Parameter No. 16 “SIO Baud Rate Select [bps]” and select a baud rate that is required to set from the pull-down menu.

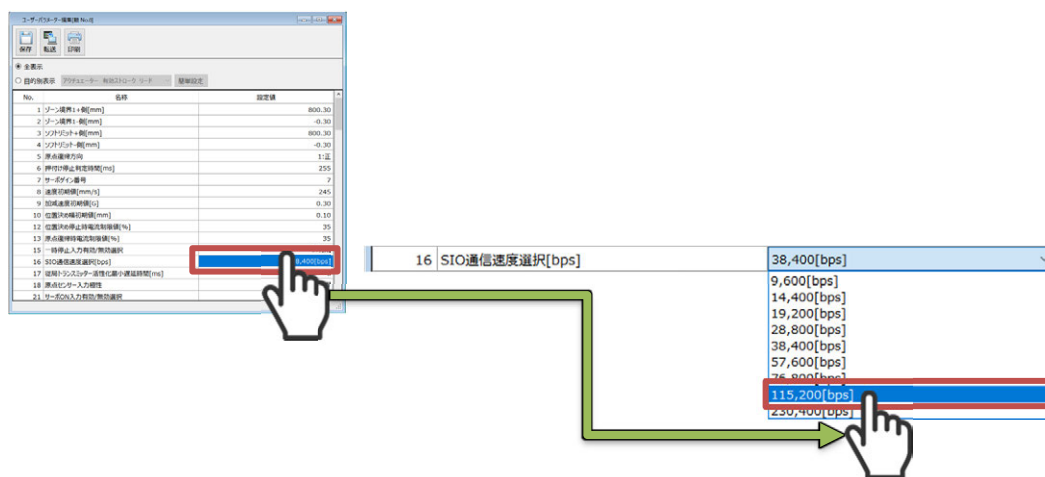


3. Once the baud rate is selected, click  on the top left of the user parameter edit window.

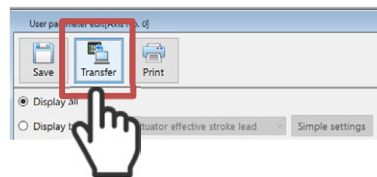


4. Proceed the operation for parameter transfer and reboot of controller in the process below.


1) Parameter Transfer




2) Parameter transfer complete

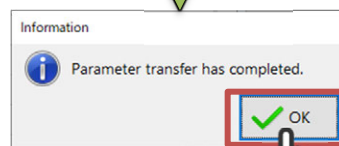

3) Checking execution of software reset

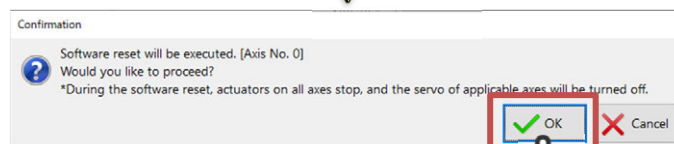

4) Software reset complete

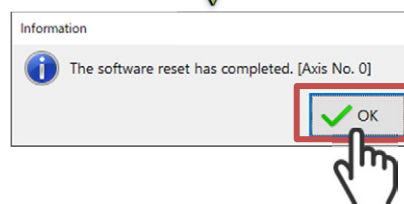

That is all for the parameter setting.

Serial Communication

Chapter 4

Communication

4.1	Message Transmission Timing	4-1
4.2	Timeout and Retry	4-2
4.3	Internal Addresses and Data Structure of RC Controller...	4-3
4.3.1	Structure of Modbus Registers	4-4
4.3.2	Details of Modbus Registers	4-5
4.3.3	Structure of Modbus Status Registers	4-30
4.3.4	Detail of Modbus Status Registers	4-31

4.1 Message Transmission Timing

The basic transmission control procedure consists of the master sending a query, and the RC controller that received the query sending a response, which are considered one unit.

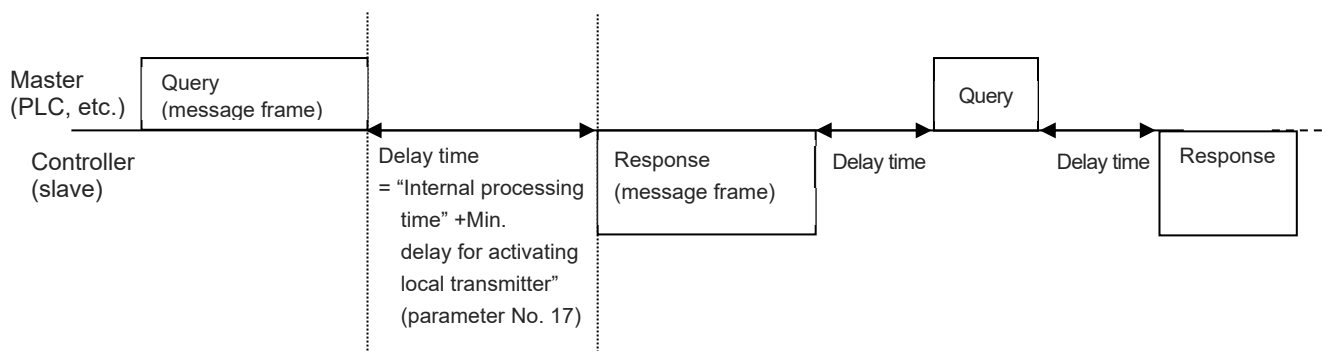


Fig. 4.1-1 Basic transmission procedure

The delay time after a query message is received until a response message is sent is calculated as the total sum of parameter No. 17 "Min. delay for activating local transmitter" (default value 5ms) and the internal processing time (refer to the table below).

After receiving a query message, the RC controller waits for the "min. delay for activating local transmitter". Once this delay time elapses, the controller will activate the transmitter and start sending a response message. The master must enable the receive function of its own station within the aforementioned delay time after sending a query message.

RC controller gets ready for the next query reception in 1ms after a response or a message has sent out.

Table. 4.1-1 Internal processing time

Item	Time [ms]
Read/write a register other than those in the low-speed memory area	max.1
Position data (1 position) Read	max.4
Position data (1 position) Write	max.15
Position data (1 position) Read/write	max.18
Position data (9 positions) Read	max.9
Position data (9 positions) Write	max.90
Position data (9 positions) Read/write	max.98

Note Processing duration may differ depending on the category to access and the controller type.

4.2 Timeout and Retry

After sending a query, the host waits for a response from the controller (except when the query that has been sent is a broadcast query).

If the elapsed time after sending a command until a response is received exceeds the timeout value [Tout], the host may send the command again to reestablish communication. If the number of retries exceeds three times, it means that an irremediable communication error has occurred.

The method for calculating the timeout value [Tout] is explained below.

1. Timeout value [Tout]

$$\text{Tout} = \text{To} + \alpha + (10 \times \text{Bprt} / \text{Kbr}) [\text{ms}]$$

To: Internal processing time* \times Safety factor 3

α : Min. delay for activating local transmitter [ms]

(default value of parameter No. 17 is 5ms)

Kbr: Baud rate [kbps]

Bprt: Response message bytes + 8

The process of the basic transmission control should be the transmission of that the queries from the master and the response from the received RC controller as defined as one unit.



Caution

- The internal processing time varies depending on the category of the register to be accessed. The processing time required for each action is listed in the table below.

Item	Time [ms]
Read/write a register other than those in the low-speed memory area	max.1
Position data (1 position) Read	max.4
Position data (1 position) Write	max.15
Position data (1 position) Read/write	max.18
Position data (9 positions) Read	max.9
Position data (9 positions) Write	max.90
Position data (9 positions) Read/write	max.98

2. Number of Retries [Nrt]

Nrt = 3

* Note that setting of the number of retries is mandatory

4.3 Internal Addresses and Data Structure of RC Controller

The memory area in your RC controller consists of the Modbus register area read/written in units of words and the Modbus status are written in units of bits (coils).

Table 4.3-1 Memory Domains and Applicable Function Code

Memory area	Access unit	Address range	Function	
			Code ^(Note)	Function
Modbus register Refer to [4.3.1] and [4.3.2]	Word	0500 to 9908 _H	03 _H	Read holding registers
			06 _H	Write holding registers
			10 _H	Write multiple holding registers at the same time
Modbus status Refer to [4.3.3] and [4.3.4]	Bit	0100 to 043F _H	05 _H	Write coils

Note Function codes explained in this manual.

4.3.1 Structure of Modbus Registers

The layout of the Modbus registers is shown below.

Table 4.3-2 Structure of Modbus Registers

0000 _H	(Reserved for system) *1
0500 _H ⋮ 0505 _H	Detailed information of the alarm detected lately
	(Reserved for system) *1
0D00 _H ⋮ 0D03 _H	I/O control information registers
	(Reserved for system) *1
1000 _H ⋮ 3FFF _H	Position table information "low-speed memory area" * SCON for servo-pressing and RCP6S ^(Note 1) series not applicable
	(Reserved for system) *1
8400 _H ⋮ 842E _H	Maintenance information * Refer to section for the maintenance information in the following page for the applicable models.
	(Reserved for system) *1
9000 _H ⋮ 9015 _H	Controller monitor information registers
	(Reserved for system) *1
9800 _H	Position command registers
	(Reserved for system) *1
9900 _H ⋮ 9908 _H	Numerical command registers
FFFF _H	(Reserved for system) *1

*1 Areas reserved for the system cannot be used for communication.

Note 1 RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC

4.3.2 Details of Modbus Registers

The layout of the Modbus Registers is shown below.

Address [HEX]	Area name	Description	Symbol	Reference	
				RTU	ASCII
0000 to 04FF	Reserved for system				
0500	Detailed information of the alarm detected lately	Alarm detail code	ALA0	5.3.2	6.4.2
0501		Alarm address	ALA0	5.3.2	6.4.2
0502		Always "0"	-		
0503		Alarm code	ALC0	5.3.2	6.4.2
0504		Alarm occurrence time	ALT0	5.3.2	6.4.2
0506 to 0CFF	Reserved for system				
0D00	I/O control information category	Device control register 1	DRG1	4.3.2 [5]	4.3.2 [5]
0D01		Device control register 2	DRG2	4.3.2 [6]	4.3.2 [6]
0D03		(Other types than Servo Press Type) Position number specification register (Servo Press Type) Program number specification register	POSR	4.3.2 [7]	4.3.2 [7]
0D04 to 0FFF	Reserved for system				
1000 to 3FFF (Note 2) * Detailed addresses can be calculated using the formula to the right. →	Position table information (low-speed memory area)	Offset [HEX]			
		+0000 _H	Target position	PCMD	5.3.3 6.4.3
		+0002 _H	Positioning band	INP	
		+0004 _H	Speed command	VCMD	
		+0006 _H	Individual zone boundary +	ZNMP	
		+0008 _H	Individual zone boundary -	ZNLP	
		+000A _H	Acceleration command	ACMD	
		+000B _H	Deceleration command	DCMD	
		+000C _H	Push-current limiting value	PPOW	
		+000D _H	Load current threshold	LPOW	
		+000E _H	Control flag specification	CTLF	
		* Address = 1000 _H + (16 × Position No.) + Offset			
4000 to 83FF	Reserved for system				
8400 to 8401	Maintenance information (models applicable to calendar function only)	Total moving count (Note 1)	TLMC	5.3.4	6.4.4
8402 to 8403		Total moving distance (Note 1)	ODOM	5.3.5	6.4.5
841E		Current time (SCON-CA/CAL/CB only)	TIMN	5.3.6	6.4.6
8420		Current time (PCON-CA/CFA/CB/CFB only)	TIMN	5.3.6	6.4.6
8422		Current time (ACON-CA/CB, DCON-CA/CB only)	TIMN	5.3.6	6.4.6
842A		Total FAN driving time (SCON-CAL, SCON-CB [400W or more] only)	TFAN	5.3.7	6.4.7
842E		Total FAN driving time (PCON-CFA/CFB only)	TFAN	5.3.7	6.4.7
8430 to 8FFF	Reserved for system				

Note 1 PCON-CA/CFA/CB/CFB/CBP/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB,

DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3, RCM-P6PC, RCM-P6AC, RCM-P6DC only

Note 2 SCON for servo-pressing, RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC not applicable

Address [HEX]	Area name	Description	Symbol	Reference	
				RTU	ASCII
9000 to 9001	Controller monitor information category	Current position register	PNOW	5.3.8	6.4.8
9002		Present alarm code register	ALMC	5.3.9	6.4.9
9003		Input port register	DIPM	5.3.10	6.4.10
9004		Output port register	DOPM	5.3.11	6.4.11
9005		Device status 1 register	DSS1	5.3.12	6.4.12
9006		Device status 2 register	DSS2	5.3.13	6.4.13
9007		Expansion device status register	DSSE	5.3.14	6.4.14
9008 to 9009		System status register	STAT	5.3.15	6.4.15
900A to 900B	Controller monitor information category	Current speed monitor register	VNOW	5.3.16	6.4.16
900C to 900D		Current ampere monitor register	CNOW	5.3.17	6.4.17
900E to 900F		Deviation monitor register	DEVI	5.3.18	6.4.18
9010 to 9011		System timer register	STIM	5.3.19	6.4.19
9012		Special input port register	SIPM	5.3.20	6.4.20
9013		Zone status register	ZONS	5.3.21	6.4.21
9014		(Other types than Servo Press Type) Positioning complete position No. register (Servo Press Type) Executed program No. register	POSS	5.3.22	6.4.22
9015		Expansion System status register	SSSE	5.3.23	6.4.23
9016 to 901D	Reserved for system				
901E to 9001F	Controller monitor information category	Current load (SCON-CA/CB, PCON-CBP only)	FBFC	5.3.24	6.4.24
9020 to 9021	Controller monitor information category (Servo Press Type only)	Overload level monitor	OLLV	5.3.25	6.4.25
9022		Press program alarm code	ALMP	5.3.26	6.4.26
9023		Press program alarm generated program No.	ALMP	5.3.27	6.4.27
9024		Press program status register	PPST	5.3.28	6.4.28
9025		Press program judgement status register	PPJD	5.3.29	6.4.29
9026 to 97FF	Reserved for system				
9800	Position command category	Position movement command register	POSR	4.3.2 [7]	4.3.2 [7]
9801 to 98FF	Reserved for system				
9900 to 9901	Numerical value command category	Target position coordinate specification register	PCMD	5.6	6.7
9902 to 9903		Positioning band specification register	INP		
9904 to 9905		Speed specification register	VCMD		
9906		Acceleration/deceleration speed specification register	ACMD		
9907		Push-current limiting value	PPOW		
9908		Control flag specification register	CTLF		
9909 to FFFF	Reserved for system				

[1] Data of alarm detail code (Address = 0500_H) (ALA0)

Bit	Symbol	Name	Function
15	-	Alarm detail code 32768	<p>It shows the alarm detail code numbers. It is output when an alarm is issued that possesses an alarm detail code. It shows "0_H" when either there is no alarm generated or an alarm is generated but it possesses no alarm detail code.</p> <p>Alarm detail codes are read out in binary codes. Alarm detail Check in the [Operation manual for the controller Troubleshooting section] for the content of an alarm detail code as well as an alarm code.</p>
14	-	Alarm detail code 16384	
13	-	Alarm detail code 8192	
12	-	Alarm detail code 4096	
11	-	Alarm detail code 2048	
10	-	Alarm detail code 1024	
9	-	Alarm detail code 512	
8	-	Alarm detail code 256	
7	-	Alarm detail code 128	
6	-	Alarm detail code 64	
5	-	Alarm detail code 32	
4	-	Alarm detail code 16	
3	-	Alarm detail code 8	
2	-	Alarm detail code 4	
1	-	Alarm detail code 2	
0	-	Alarm detail code 1	

[2] Data of alarm address (Address = 0501_H) (ALA0)

Bit	Symbol	Name	Function
15	—	Alarm address 32768	<p>It shows the alarm address. The stored virtual address is output when a value stored in the virtual domain is the cause of the generated alarm. It shows "FFFF_H" when either there is no alarm generated or an alarm is generated but the virtual domain is not the cause of it.</p> <p>Alarm address are read out in binary codes.</p>
14	—	Alarm address 16384	
13	—	Alarm address 8192	
12	—	Alarm address 4096	
11	—	Alarm address 2048	
10	—	Alarm address 1024	
9	—	Alarm address 512	
8	—	Alarm address 256	
7	—	Alarm address 128	
6	—	Alarm address 64	
5	—	Alarm address 32	
4	—	Alarm address 16	
3	—	Alarm address 8	
2	—	Alarm address 4	
1	—	Alarm address 2	
0	—	Alarm address 1	

[3] Data of alarm code (Address = 0503_H) (ALC0)

Bit	Symbol	Name	Function
15	—	Alarm code 32768	<p>It shows the alarm code numbers of each level (cold start, operation cancellation, message). It is output when an alarm is issued. When any alarm is not issued, it is "0_H".</p> <p>Alarm code are read out in binary codes. For the detail of an alarm code, refer to the [instruction manual of each controller].</p> <p>(Note) There some controllers that do not issue the message level alarms. For more details, refer to the [troubleshooting of instruction manual of each controller]</p> <p>Reference If changing from a controller that does not issue the message level alarms from one which does (Example PCON-C ⇒ PCON-CA), consider the operation patterns when the message level alarms are issued.</p>
14	—	Alarm code 16384	
13	—	Alarm code 8192	
12	—	Alarm code 4096	
11	—	Alarm code 2048	
10	—	Alarm code 1024	
9	—	Alarm code 512	
8	—	Alarm code 256	
7	—	Alarm code 128	
6	—	Alarm code 64	
5	—	Alarm code 32	
4	—	Alarm code 16	
3	—	Alarm code 8	
2	—	Alarm code 4	
1	—	Alarm code 2	
0	—	Alarm code 1	

Note Address = 0502_H always returns "0".

[4] Data of alarm occurrence time (Address = 0504_H) (ALT0)

Bit	Symbol	Name	Function
31	-	Alarm occurrence time 2147202832	It outputs the time of the alarm issuance. (1) For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance. (2) When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [s] since the power to the controller is turned on.
30	-	Alarm occurrence time 1073601416	
29	-	Alarm occurrence time 536800708	
28	-	Alarm occurrence time 268400354	How alarm issuance time is calculated in (1) The data of alarm issuance time shows the seconds passed from the origin time (00hr:00min:00sec 1January2000). Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below: S = Data of read alarm issuance time M = S/60 (decimal fraction to be rounded down) H = M/60 (decimal fraction to be rounded down) D = H/24 (decimal fraction to be rounded down) Y = D/365.25 (decimal fraction to be rounded down) L (Leap year) = Y/4 (decimal fraction to be rounded up)
27	-	Alarm occurrence time 134200177	
26	-	Alarm occurrence time 67108864	
25	-	Alarm occurrence time 33554432	Assuming the second of alarm issuance time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below: SA = Remainder of S/60 MA = Remainder of M/60 HA = Remainder of H/24 DA = D - (Y×365+L) Year and day can be figured out by subtracting the number of days in each month from DA. YA = Y+2000 (A.D.) Example) Assuming alarm issuance time data is 172C1B8B _H ; (1) Convert into decimal number: S = 172C1B8B _H ⇒388766603 (2) Calculate M, H, D, Y and L. M = 388766603/60 = 6479443 H = 6479443/60 = 107990 D = 107990/24 = 4499 Y = 4499/365.25 = 12 L = 12/4 = 3 (3) Figure out SA, MA, HA and DA. SA = Remainder of 388766603/60 = 23 MA = Remainder of 6479443/60 = 43 HA = Remainder of 107990/24 = 14 DA = 4499 - (12 × 365+3) = 116 (116 days has passed in this year and the time of alarm issuance is on the day 117.) Year and day = 117 – {31 (Jan) – 29 (Feb) – 31 (Mar)} = 26 (since the number becomes a negative if days in April is subtracted, the time of alarm issuance is on 26April) YA = 12+2000 = 2012 As figured out with the calculation above, the time of alarm issuance is 14:43:23 26 Apr 2012.
24	-	Alarm occurrence time 16777216	
23	-	Alarm occurrence time 8388608	
22	-	Alarm occurrence time 4194304	
21	-	Alarm occurrence time 2097152	
20	-	Alarm occurrence time 1048576	
19	-	Alarm occurrence time 524288	
18	-	Alarm occurrence time 262144	
17	-	Alarm occurrence time 131072	
16	-	Alarm occurrence time 65536	
15	-	Alarm occurrence time 32768	
14	-	Alarm occurrence time 16384	
13	-	Alarm occurrence time 8192	
12	-	Alarm occurrence time 4096	
11	-	Alarm occurrence time 2048	
10	-	Alarm occurrence time 1024	
9	-	Alarm occurrence time 512	
8	-	Alarm occurrence time 256	
7	-	Alarm occurrence time 128	
6	-	Alarm occurrence time 64	
5	-	Alarm occurrence time 32	
4	-	Alarm occurrence time 16	
3	-	Alarm occurrence time 8	
2	-	Alarm occurrence time 4	
1	-	Alarm occurrence time 2	
0	-	Alarm occurrence time 1	

[5] Data of device control register 1 (Address = 0D00_H) (DRG1)

Bit	Symbol	Name	Function
15	EMG	EMG operation specification	0: Emergency stop not actuated, 1: Emergency stop actuated Changing this bit to "1" will switch the controller to the emergency stop mode. Take note that the drive source will not be cut off. (The ALM LED on the controller will not illuminate.)
14	SFTY	Safety speed command	0: Disable safety speed, 1: Enable safety speed Changing this bit to "1" will limit the speeds of all movement commands to the speed specified by user parameter No. 35, "Safety speed."
13	-	Cannot be used	
12	SON	Servo ON command	0: Servo OFF, 1: Servo ON Changing this bit to 1 will turn the servo ON. However, the following conditions must be satisfied: <ul style="list-style-type: none"> • Device status register 1 [5.3.11 or 6.4.11] : The EMG status bit is "0". • Device status register 1 [5.3.11 or 6.4.11] : The major failure status is "0". • Device status register 2 [5.3.12 or 6.4.12] : The enable status bit is "1". • System status register [5.3.9 or 6.4.9] : The auto servo OFF status is "0".
11 to 9		Cannot be used	
8	ALRS	Alarm reset command	0: Normal, 1: Alarm will reset Present alarms will be reset upon detection of a rising edge for this bit (this bit: 0 → 1). Note, however, that if any of the causes for the alarm has not been removed, the same alarm will be generated again. If a rising edge is detected for this bit (this bit: 0 → 1) during a pause, the remaining travel will be canceled.
7	BKRL	Brake forced-release command	0: Normal, 1: Forcibly release brake You can forcibly release the brake by setting this bit to "1".
6	-	Cannot be used	
5	STP	Pause command	0: Normal, 1: Pause command All motor movement is inhibited while this bit is "1". If this bit turns "1" while the actuator is moving, the actuator will decelerate to a stop. When the bit is set to "0" again thereafter, the actuator will resume the remaining travel. If this bit is turned "1" while the actuator is performing a home return, the movement command is held until the actuator reverses upon contact. When the bit turns "0" thereafter, the actuator will complete the remaining home return operation automatically. However, make sure you perform a home return again after the actuator reverses upon contact.
4	HOME	Home return command	0: Normal, 1: Home return command Home return will start when a rising edge is detected for this bit (this bit: 0 → 1). Once the home return is completed, the HEND bit will become "1". You can input a home return command again even if the actuator has already completed a home return.
3	CSTR	Positioning start command	0: Normal, 1: Position start command When a rising edge is detected for this bit (this bit: 0 → 1), the actuator will move to the target position of the position number stored in the position number specification register (POSR:0D03 _H). If this bit remains "1", a position complete will not be output even when the actuator enters the positioning band (return to the normal status by writing "0" to this bit). If this command is executed before home return has been performed at least once after the power was turned on (the HEND bit is 0), the actuator will perform home return and then start moving to the target position. * Set the target position, speed, etc., in the position table of the controller beforehand.
2 to 0	-	Cannot be used	

[6] Data of device control register 2 (Address = 0D01_H) (DRG2)

Bit	Symbol	Name	Function
15	-	Cannot be used	
14	JISL	Jog/inch switching	0: Jog, 1: Inching When this bit is "0", the jog operation is selected. When this bit is "1", the inching operation is selected. If this bit turns "1" while the actuator is jogging, the actuator will accelerate to a stop. While the actuator is inching, turning this bit "0" will have no effect and the actuator will continue with the inching operation. The setting of this bit is not reflected in any jog/inching operation set from the teaching tool.
13	-	Cannot be used	
12	-	Cannot be used	
11	MOD	Teaching mode command	0: Normal operation mode, 1: Teaching mode Changing this bit to "1" will switch the controller to the teaching mode.
10	TEAC	Position data load command	0: Normal, 1: Position data load command The current position data will be written to the position number specified by the position number specification register if "1" is written to this bit while the 11th bit of the teach mode command is "1" (teaching mode). The current position data is loaded to the position data line specified by the position number specification register. If the position number under which the data is loaded is an empty position, meaning that no data is currently set, the data fields other than target position (such as positioning band, etc.) will be automatically populated by the default values of the respective parameters. Make sure that after this bit is set to "1", it will remain "1" for at least 20 ms.
9	JOG+	Jog+ command	0: Normal, 1: Jog+ command <ul style="list-style-type: none"> The actuator jogs in the direction opposite home as long as this bit is "1" if the 14th JISL bit is "0". The speed and acceleration/deceleration match the specifications in user parameter No. 26 "PIO jog speed" and rated acceleration/deceleration speed. If this bit is set to "0" or the 8th bit of the jog-command is changed to "1", the actuator will decelerate to a stop. If a positive edge (this bit: 0 → 1) is detected for the jog+ command while the 14th JISL bit is "0", the actuator inches in the direction opposite home. The speed, travel and acceleration/deceleration speed match the specifications in user defined parameter No. 26 "PIO jog speed", user parameter No. 48 "PIO inching distance" and rated jog acceleration/deceleration, respectively.
8	JOG-	Jog- command	0: Normal, 1: Jog- command <ul style="list-style-type: none"> The actuator jogs in the direction of home as long as this bit is "1" if the 14th JISL bit is "0". The speed and acceleration/deceleration speed match the specifications in user parameter No. 26 "PIO jog speed" and rated acceleration/deceleration speed. If this bit is set to "0" or the 9th bit of the jog-command is changed to "1", the actuator will decelerate to a stop. If a positive edge (this bit: 0 → 1) is detected for the jog+ command while the 14th JISL bit is "1", the actuator inches in the direction of home. The speed, travel and acceleration/deceleration speed match the specifications in user defined parameter No. 26 "PIO jog speed", user parameter No. 48 "PIO inching distance" and rated jog acceleration/deceleration, respectively.
7	ST7	Start position 7	The actuator moves to the position of the specified position number. These bits are only valid when solenoid valve mode is selected. The move is started if either of the ST0 to ST7 bits is set to "1" (this bit: 0 → 1). If a position other than the enabled start position is selected, the alarm (085: Position No. error at moving) is generated. You can select the signal input method as "Level" or "Edge" in user parameter No. 27, "Movement command type". If multiple positions are entered at the same time, the smallest number takes the priority.
6	ST6	Start position 6	
5	ST5	Start position 5	
4	ST4	Start position 4	
3	ST3	Start position 3	
2	ST2	Start position 2	
1	ST1	Start position 1	
0	ST0	Start position 0	

[7] Data of position number command registers (Address = 0D03_H) (POSR)

Position movement command register details (Address = 9800_H) (POSR)

Data of program number command registers (Address = 0D03_H) (POSR)

...For SCON Servo Press type

Bit	Symbol	Name	Function
15	-	Cannot be used	
14	-	Cannot be used	
13	-	Cannot be used	
12	-	Cannot be used	
11	-	Cannot be used	
10	-	Cannot be used	
9	PC512	Position command bit 512	<p>* Position command bit : For other types than Servo Press Type Program command bit: For Servo Press Type (Max: 63)</p> <p>These bits indicate position numbers to be moved using binary codes. Note that the maximum position number varies depending on the model and PIO pattern.</p> <p>[When address = 0D03_H is used] After specifying a position number, set the CSTR (start signal) of device control register 1 to "1", and the actuator will move to the specified position. Refer to [5.5.1] or [6.6.1.]</p> <p>[When address = 9800_H is used] This register is such that once a position number is specified, the actuator will move to the specified position. You need not set the CSTR (start signal).</p> <p>[For Servo Press Type] After indicating the press program number in this register, set PSTR (start signal) in the press program control register to "1", and the program gets executed. After indicating the press program number in this register, set PHOM (program home-return movement signal) in the press program control register to "1", and movement gets made to the program home position set in the indicated program number.</p>
8	PC256	Position command bit 256	
7	PC128	Position command bit 128	
6	PC64	Position command bit 64	
5	PC32	Position command bit 32 Program command bit 32	
4	PC16	Position command bit 16 Program command bit 16	
3	PC8	Position command bit 8 Program command bit 8	
2	PC4	Position command bit 4 Program command bit 4	
1	PC2	Position command bit 2 Program command bit 2	
0	PC1	Position command bit 1 Program command bit 1	

[8] Data of total moving count (Address = 8400_H) (TLMC)

Bit	Symbol	Name	Function
31	-	Total moving count 2147202832	<p>It shows the total moving count. Total moving count are read out in binary codes.</p> <p>* Corresponding Model:</p> <ul style="list-style-type: none"> • PCON-CA/CFA/CB/CFB/CBP/CYB/PLB/POB • ACON-CA/CB/CYB/PLB/POB • DCON-CA/CB/CYB/PLB/POB • SCON-CA/CAL/CB • ERC3 • RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC
30	-	Total moving count 1073601416	
29	-	Total moving count 536800708	
28	-	Total moving count 268400354	
27	-	Total moving count 134200177	
26	-	Total moving count 67108864	
25	-	Total moving count 33554432	
24	-	Total moving count 16777216	
23	-	Total moving count 8388608	
22	-	Total moving count 4194304	
21	-	Total moving count 2097152	
20	-	Total moving count 1048576	
19	-	Total moving count 524288	
18	-	Total moving count 262144	
17	-	Total moving count 131072	
16	-	Total moving count 65536	
15	-	Total moving count 32768	
14	-	Total moving count 16384	
13	-	Total moving count 8192	
12	-	Total moving count 4096	
11	-	Total moving count 2048	
10	-	Total moving count 1024	
9	-	Total moving count 512	
8	-	Total moving count 256	
7	-	Total moving count 128	
6	-	Total moving count 64	
5	-	Total moving count 32	
4	-	Total moving count 16	
3	-	Total moving count 8	
2	-	Total moving count 4	
1	-	Total moving count 2	
0	-	Total moving count 1	

[9] Data of total moving distance (Address = 8402_H) (ODOM)

Bit	Symbol	Name	Function
31	-	Total moving distance 2147202832	<p>It shows the total moving distance [m]. Total moving distance are read out in binary codes.</p> <p>* Corresponding Model:</p> <ul style="list-style-type: none"> • PCON-CA/CFA/CB/CFB/CBP/CYB/PLB/POB • ACON-CA/CB/CYB/PLB/POB • DCON-CA/CB/CYB/PLB/POB • SCON-CA/CAL/CB • ERC3 • RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC
30	-	Total moving distance 1073601416	
29	-	Total moving distance 536800708	
28	-	Total moving distance 268400354	
27	-	Total moving distance 134200177	
26	-	Total moving distance 67108864	
25	-	Total moving distance 33554432	
24	-	Total moving distance 16777216	
23	-	Total moving distance 8388608	
22	-	Total moving distance 4194304	
21	-	Total moving distance 2097152	
20	-	Total moving distance 1048576	
19	-	Total moving distance 524288	
18	-	Total moving distance 262144	
17	-	Total moving distance 131072	
16	-	Total moving distance 65536	
15	-	Total moving distance 32768	
14	-	Total moving distance 16384	
13	-	Total moving distance 8192	
12	-	Total moving distance 4096	
11	-	Total moving distance 2048	
10	-	Total moving distance 1024	
9	-	Total moving distance 512	
8	-	Total moving distance 256	
7	-	Total moving distance 128	
6	-	Total moving distance 64	
5	-	Total moving distance 32	
4	-	Total moving distance 16	
3	-	Total moving distance 8	
2	-	Total moving distance 4	
1	-	Total moving distance 2	
0	-	Total moving distance 1	

[10] Data of Current time (Address = 841E_H (SCON-CA/CAL/CB),
8420_H (PCON-CA/CFA/CB/CFB),
8422_H (ACON-CA/CB, DCON-CA/CB) (TIMN))

Bit	Symbol	Name	Function
31	-	Current time 2147202832	<p>It outputs the time of the Current time issuance.</p> <p>(1) For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance.</p> <p>(2) When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [s] since the power to the controller is turned on.</p> <p>● How Current time is calculated in 1)</p> <p>The data of Current time shows the seconds passed from the origin time (00hr:00min:00sec 1January2000). Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below:</p> <p>S = Data of read alarm issuance time M = S/60 (decimal fraction to be rounded down) H = M/60 (decimal fraction to be rounded down) D = H/24 (decimal fraction to be rounded down) Y = D/365.25 (decimal fraction to be rounded down) L (Leap year) = Y/4 (decimal fraction to be rounded up)</p> <p>Assuming the second of time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below:</p> <p>SA = Remainder of S/60 MA = Remainder of M/60 HA = Remainder of H/24 DA = D - (Y × 365 + L) Year and day can be figured out by subtracting the number of days in each month from DA. YA = Y + 2000 (A.D.)</p> <p>Example) Assuming Current time data is 2AD02DA8_H.</p> <p>1) Convert into decimal number: S = 2AD02DA8_H ⇒ 718286248</p> <p>2) Calculate M, H, D, Y and L. M = 718286248/60 = 11971437 H = 11971437/60 = 199523 D = 199523/24 = 8313 Y = 8313/365.25 = 22 L = 22/4 = 5</p> <p>3) Figure out SA, MA, HA and DA. SA = Remainder of 388766603/60 = 23 MA = Remainder of 6479443/60 = 43 HA = Remainder of 107990/24 = 14 DA = 8313 - (12 × 365 + 3) = 278 (116 days has passed in this year and the time of alarm issuance is on the day 117.)</p> <p>Year and day*1 = 278 - 31 - 28 - 31 - 30 - 31 - 30 - 31 - 31 - 30 = 5</p> <p>*1 Deduct days of each month from DA. In the example, it makes negative number if days for October (31 days) are deducted, therefore the timing to acquire current time should be October 5.</p> <p>YA = 22 + 2000 = 2022</p> <p>As figured out with the calculation above, the Current time is 11:57:28 05Oct.2022.</p>
30	-	Current time 1073601416	
29	-	Current time 536800708	
28	-	Current time 268400354	
27	-	Current time 134200177	
26	-	Current time 67108864	
25	-	Current time 33554432	
24	-	Current time 16777216	
23	-	Current time 8388608	
22	-	Current time 4194304	
21	-	Current time 2097152	
20	-	Current time 1048576	
19	-	Current time 524288	
18	-	Current time 262144	
17	-	Current time 131072	
16	-	Current time 65536	
15	-	Current time 32768	
14	-	Current time 16384	
13	-	Current time 8192	
12	-	Current time 4096	
11	-	Current time 2048	
10	-	Current time 1024	
9	-	Current time 512	
8	-	Current time 256	
7	-	Current time 128	
6	-	Current time 64	
5	-	Current time 32	
4	-	Current time 16	
3	-	Current time 8	
2	-	Current time 4	
1	-	Current time 2	
0	-	Current time 1	

[11] Data of total FAN driving time (Address = 842A_H (SCON-CAL, SCON-CB [400W or more]), 842E_H (PCON-CFA/CFB) (TFAN))

Bit	Symbol	Name	Function
31	—	Total FAN driving time 2147202832	<p>It shows the total FAN driving time [s]. Total FAN driving time are read out in binary codes.</p> <p>* Corresponding Model: • PCON-CFA/CFB/CGFB, • SCON-CAL/CGAL, SCON-CB/CGB [400W or more]</p>
30	—	Total FAN driving time 1073601416	
29	—	Total FAN driving time 536800708	
28	—	Total FAN driving time 268400354	
27	—	Total FAN driving time 134200177	
26	—	Total FAN driving time 67108864	
25	—	Total FAN driving time 33554432	
24	—	Total FAN driving time 16777216	
23	—	Total FAN driving time 8388608	
22	—	Total FAN driving time 4194304	
21	—	Total FAN driving time 2097152	
20	—	Total FAN driving time 1048576	
19	—	Total FAN driving time 524288	
18	—	Total FAN driving time 262144	
17	—	Total FAN driving time 131072	
16	—	Total FAN driving time 65536	
15	—	Total FAN driving time 32768	
14	—	Total FAN driving time 16384	
13	—	Total FAN driving time 8192	
12	—	Total FAN driving time 4096	
11	—	Total FAN driving time 2048	
10	—	Total FAN driving time 1024	
9	—	Total FAN driving time 512	
8	—	Total FAN driving time 256	
7	—	Total FAN driving time 128	
6	—	Total FAN driving time 64	
5	—	Total FAN driving time 32	
4	—	Total FAN driving time 16	
3	—	Total FAN driving time 8	
2	—	Total FAN driving time 4	
1	—	Total FAN driving time 2	
0	—	Total FAN driving time 1	

[12] Data of device status register 1 (Address = 9005_H) (DSS1)

Bit	Symbol	Name	Function
15	EMGS	EMG status	0: Emergency stop not actuated, 1: Emergency stop actuated This bit indicates whether or not the controller is currently in the emergency stop mode due to an emergency stop input, cutoff of the drive source, etc.
14	SFTY	Safety speed enabled status	0: Safety status disabled, 1: Safety status enabled Enable/disable the safety speed of the controller using the "safety speed command bit" of device control register 1.
13	PWR	Controller ready status	0: Controller busy, 1: Controller ready This bit indicates whether or not the controller can be controlled externally. Normally this bit does not become "busy".
12	SV	Servo ON status	0: Servo OFF, 1: Servo ON The servo ON status is indicated. After a servo ON command is issued, this bit will remain "0" until the servo ON delay time set by a parameter elapses. If the servo cannot be turned ON for some reason even after a servo ON command is received, this bit will remain "0". The RC controller does not accept any movement command while this bit is "0".
11	PSFL	Missed work part in push-motion operation	0: Normal, 1: Missed work part in push-motion operation This bit turns "1" when the actuator has moved to the end of the push band without contacting the work part (= the actuator has missed the work part) according to a push-motion operation command. Operation commands other than push-motion do not change this bit.
10	ALMH	Major failure status	0: Normal, 1: Major failure alarm present This bit will turn "1" if any alarm at the cold start level or operation cancellation level is generated. Alarms at the operation cancellation level can be reset by using an alarm reset command, but resetting alarms at the cold start level requires turning the power supply off and then on again.
9	ALML	Minor failure status	0: Normal, 1: Minor failure alarm present This bit will turn "1" when a message level alarm is generated.
8	ABER	Absolute error status	0: Normal, 1: Absolute error present This bit will turn "1" if an absolute error occurs in case the absolute specification is set.
7	BKRL	Brake forced-release status	0: Brake actuated, 1: Brake released This bit indicates the status of brake operation. Normally the bit remains "1" while the servo is ON. Even when the servo is OFF, changing the "brake forced-release command bit" in device control register 1 to "1" will change this bit to "1".
6	-	Cannot be used	
5	STP	Pause status	0: Normal, 1: Pause command active This bit remains 1 while a pause command is input. If the PIO/Modbus Switch Setting [5.4.16] or [6.5.16] is PIO enabled, paused PIO signals are monitored (For those RC controllers that possess the operation mode setting switch, set the switch to AUTO.). If Modbus is enabled, the Pause Commands [5.4.6] or [6.5.6] are monitored.
4	HEND	Home return completion status	0: Home return not yet complete, 1: Home return complete This bit will become "1" when home return is completed. In case the absolute specification is set, the bit is set to "1" from the startup if absolute reset has been completed. If a movement command is issued while this bit is "0", an alarm will generate.
3	PEND	Position complete status	0: Positioning not yet complete, 1: Position complete This bit turns "1" when the actuator has moved close enough the target position and entered the positioning band. It also turns "1" when the servo turns on after the actuator has started, because the controller recognizes that the actuator has completed a positioning to the current position. This bit will also become "1" during the push-motion operation as well as at the completion.
2	CEND	Load cell calibration complete	0: Calibration not yet complete, 1: Calibration complete This bit turns "1" when the load cell calibration command (CLBR) has been successfully executed.
1	CLBS	Load cell calibration status	0: Calibration not yet complete, 1: Calibration complete Regardless of whether or not a load cell calibration command has been issued, this bit is "1" as long as a calibration has completed in the past.
0	-	Cannot be used	

[13] Data of device status register 2 (Address = 9006_H) (DSS2)

Bit	Symbol	Name	Function
15	ENBS	Enable	0: Disable condition (Operation Stop, Servo OFF) 1: Enable condition (normal operation) It shows the condition of the enable switch when a teaching tool that is equipped with an enable switch (dead man's switch) is connected to a model that has the enable function equipped. (Note) It is fixed to "1" when in AUTO Mode or for a model without the enable function being equipped.
14	-	Cannot be used	
13	LOAD	Load output judgment status	0: Normal, 1: Load output judgment If a load current threshold or check range (individual zone boundaries) is set when a movement command is issued, this bit indicates whether or not the motor current has reached the threshold inside the check range. This bit maintains the current value until the next position command is received.
12	TRQS	Torque level status	0: Normal, 1: Torque level achieved This bit turns 1 when the current has reached a level corresponding to the specified push torque during a push-motion operation. Since this bit indicates a level, its status will change when the current level changes.
11	MODS	Teaching mode status	0: Normal operation mode, 1: Teaching mode This bit becomes "1" when the teaching mode is selected by the "teach mode command bit" of device control register 2.
10	TEAC	Position-data load command status	0: Normal, 1: Position data load complete Setting the "position-data load command bit" in device control register 2 to "1" will change this bit to "0". This bit will turn "1" once position data has been written to the EEPROM successfully.
9	JOG+	Jog+ status	0: Normal, 1: "Jog+" command active This bit becomes "1" while the "jog+ command bit" of device control register 2 is selected.
8	JOG-	Jog- status	0: Normal, 1: "Jog-" command active This bit becomes "1" while the "jog- command bit" of device control register 2 is selected.
7	PE7	Position complete 7	These bits output a position complete number as a binary value in solenoid valve mode. Each of these bits turns "1" when the actuator has completed a position movement and become close enough to the target position by entering the positioning band according to a position movement command (ST0 to ST7 in device control register 2). Although the bit turns "0" once the servo is turned OFF, when the servo is turned ON again the bit will turn "1" if the actuator is still within the positioning band of the specified command position data. Moreover, they will become "1" when push-motion is completed or missed in push-motion operation.
6	PE6	Position complete 6	
5	PE5	Position complete 5	
4	PE4	Position complete 4	
3	PE3	Position complete 3	
2	PE2	Position complete 2	
1	PE1	Position complete 1	
0	PE0	Position complete 0	

[14] Data of expansion device status register (Address = 9007_H) (DSSE)

Bit	Symbol	Name	Function
15	EMGP	Emergency stop status	0: Emergency stop input OFF, 1: Emergency stop input ON This bit indicates the status of the emergency stop input port.
14	MPUV	Motor voltage low status	0: Normal, 1: Motor drive source cut off This bit becomes "1" if there is no input from the motor drive power supply.
13	RMDS	Operation mode status	0: AUTO mode, 1: MANU mode This bit becomes "1" when the RC controller is in the MANU mode. However, for those with no operation mode setting switch equipped, it should always be set to MANU mode.
12	-	Cannot be used	-
11	GHMS	Home return status	0: Normal, 1: Home return This bit remains "1" for as long as home return is in progress. This bit will be "0" in other cases.
10	PUSH	Push-motion operation in progress	0: Normal, 1: Push-motion operation in progress This bit remains "1" while the actuator is performing a push-motion operation (excluding an approach operation). It will turn "0" under the following conditions: (1) The actuator has missed the push motion operation. (2) The actuator has paused. (3) The next movement command has been issued. (4) The servo has turned OFF.
9	PSNS	Excitation detection status	0: Excitation detection not yet complete, 1: Excitation detection complete PCON/ERC2, ERC3 Series controllers perform excitation detection at the first servo ON command received after the controller has started. This bit becomes "1" when excitation detection is completed. This bit remains "0" if the excitation detection has failed. Even after a successful detection, the bit will return to "0" when a software reset is performed. The models equipped with the high-resolution battery-less absolute encoder should be set at "1" all the time. This bit becomes "1" if pole sensing is performed with the first servo ON command after startup and the operation is completed in case of ACON series controllers. On SCON Series controllers, this bit is always "0".
8	PMSS	PIO/Modbus switching status	0: PIO commands enabled, 1: PIO command disabled The result of switching according to the PIO/Modbus switching setting explained in [5.4.16] or [6.5.16], or the current status, is indicated.
7	-	Cannot be used	-
6	-	Cannot be used	-
5	MOVE	Moving signal	0: Stopped, 1: Moving Moving (home-return operation and pressing operation included) should be "1". This bit remains "0" while the actuator is paused.
4	-	Cannot be used	-
3	-	Cannot be used	-
2	-	Cannot be used	-
1	-	Cannot be used	-
0	-	Cannot be used	-

[15] Data of system status registers (Address = 9008_H) (STAT)

Bit	Symbol	Name	Function
31	BATL	Absolute Battery Voltage Drop (for SCON only)	0: In normal condition, 1: Battery voltage drop It becomes "1" once the voltage of the absolute battery reaches below the alarm level. The operation of the axes can be held even if this bit is showing "1" as far as Critical Failure Status Bit in Device Status Register 1 is showing "0".
30 to 18	—	Cannot be used	—
17	ASOF	Auto servo OFF	0: Normal, 1: Auto servo OFF If "Auto servo OFF delay time" is set with a parameter of the RC controller, this bit becomes "1" when the servo is turned OFF automatically after the specified time has elapsed following the position complete.
16	AEEP	Nonvolatile memory being accessed	0: Normal, 1: Nonvolatile memory being accessed This bit turns "1" as soon as the nonvolatile memory in the RC controller is accessed to read or write the controller's parameter position table, etc. The bit becomes "0" when the access is completed or a timeout error occurs.
15 to 5	—	Cannot be used	—
4	RMDS	Operation mode status	0: AUTO mode, 1: MANU mode This bit becomes "1" when the RC controller is in the MANU mode. However, for those with no operation mode setting switch equipped, it should always be set to MANU mode.
3	HEND	Home return completion status	0: Home return not yet complete, 1: Home return completion This bit will become 1 when home return is completed. In case the absolute specification is set, the bit is set to "1" from the startup if absolute reset has been completed. If a movement command is issued while this bit is "0", an alarm will generate.
2	SV	Servo status	0: Servo OFF, 1: Servo ON The servo ON status is indicated. After a servo ON command is issued, this bit will remain "0" until the servo ON delay time set by a parameter elapses. If the servo cannot be turned ON for some reason even after a servo ON command is received, this bit will remain "0". The RC controller does not accept any movement command while this bit is "0".
1	SON	Servo command status	0: Servo OFF, 1: Servo ON This bit indicates the servo ON/OFF command status. This bit will turn "1" when the following conditions are met: <ul style="list-style-type: none"> • The EMG status bit in device status register 1 is "0". (Refer to [5.3.12] or [6.4.12]). • The major failure status bit in device status register 1 is "0". (Refer to [5.3.12] or [6.4.12]). • The enable status bit in device status register 2 is "1". (Refer to [5.3.13] or [6.4.13]). • The auto servo OFF status in the system status register is "0". (Refer to [5.3.15] or [6.4.15]).
0	MPOW	Drive source ON	0: Drive source cut off, 1: Normal This bit will turn "0" when the motor drive-source cutoff terminal is released.

[16] Data of special port monitor registers (Address = 9012_H) (SIPM)

Bit	Symbol	Name	Function
15	-	Cannot be used	-
14	NP	Command pulse NP signal status	This bit indicates the status of the command pulse NP signal.
13	-	Cannot be used	-
12	PP	Command pulse PP signal status	This bit indicates the status of the command pulse PP signal.
11	-	Cannot be used	-
10	-	Cannot be used	-
9	-	Cannot be used	-
8	MDSW	Mode switch status	0: AUTO mode, 1: MANU mode This bit becomes "1" when the RC controller is in the MANU mode. However, for those with no operation mode setting switch equipped, it should always be set to MANU mode.
7	-	Cannot be used	-
6	-	Cannot be used	-
5	-	Cannot be used	-
4	BLCT	Belt breakage sensor (SCON only)	0: Belt broken, 1: Normal
3	HMCK	Home-check sensor monitor	0: Sensor OFF, 1: Sensor ON On a model equipped with a home-check sensor function, this bit indicates the status of sensor input. It is always "0" on any other model.
2	OT	Overtravel sensor monitor	0: Sensor OFF, 1: Sensor ON This bit indicates the status of the overtravel sensor signal in the encoder connector. It is always "0" on a model not equipped with an overtravel sensor.
1	CREP	Creep sensor monitor	0: Sensor OFF, 1: Sensor ON This bit indicates the status of the creep sensor signal in the encoder connector. It is always "0" on a model not equipped with a creep sensor.
0	LS	Limit sensor monitor	0: Sensor OFF, 1: Sensor ON This bit indicates the status of the limit sensor signal in the encoder connector. It is always "0" on a model not equipped with a limit sensor.

[17] Data of zone status register (Address = 9013_H) (ZONS)

Bit	Symbol	Name	Function
15	-	Cannot be used	-
14	LS2	Limit sensor output monitor 2 (When in Electromagnetic Valve Mode 2, Single Solenoid Mode or Double Solenoid Mode for PCON, ACON, DCON and SCON)	0: Out of range, 1: In range The negative boundary of the positioning band is obtained by subtracting the positioning band size from target position No. 2 while the positive boundary of the positioning band is obtained by adding the positioning band size to target position No. 2. This bit will become "1" when the current position is within the band and "0" when it is outside the band. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF.
13	LS1	Limit sensor output monitor 1 (When in Electromagnetic Valve Mode 2, Single Solenoid Mode or Double Solenoid Mode for PCON, ACON, DCON and SCON)	0: Out of range, 1: In range The negative boundary of the positioning band is obtained by subtracting the positioning band size from target position No. 1 while the positive boundary of the positioning band is obtained by adding the positioning band size to target position No. 1. This bit will become "1" when the current position is within the band and "0" when it is outside the band. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF.
12	LS0	Limit sensor output monitor 0 (When in Electromagnetic Valve Mode 2, Single Solenoid Mode or Double Solenoid Mode for PCON, ACON, DCON and SCON)	0: Out of range, 1: In range The negative boundary of the positioning band is obtained by subtracting the positioning band size from target position No. 0 while the positive boundary of the positioning band is obtained by adding the positioning band size to target position No. 0. This bit will become "1" when the current position is within the band and "0" when it is outside the band. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF.
11	-	Cannot be used	-
10	-	Cannot be used	-
9	-	Cannot be used	-
8	ZP	Position zone output monitor	0: Out of range, 1: In range This bit remains "1" while the current position is within the zone range specified for each position and becomes "0" when it is outside the range. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF.
7	-	Cannot be used	-
6	-	Cannot be used	-
5	-	Cannot be used	-
4	-	Cannot be used	-
3	-	Cannot be used	-
2	-	Cannot be used	-
1	Z2	Zone output monitor 2	0: Out of range, 1: In range This bit remains "1" while the current position is within the range where the zone boundary 2 parameter is set and becomes "0" when it is outside the range. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF.
0	Z1	Zone output monitor 1	0: Out of range, 1: In range This bit remains "1" while the current position is within the range where the zone boundary 1 parameter is set and becomes "0" when it is outside the range. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF.

[18] Data of position number status register (Address = 9014_H) (POSS)Exected program number registers (Address = 9014_H) (POSR)

- For SCON Servo Press Type

Bit	Symbol	Name	Function
15	-	Cannot be used	-
14	-	Cannot be used	-
13	-	Cannot be used	-
12	-	Cannot be used	-
11	-	Cannot be used	-
10	-	Cannot be used	-
9	PM512	Position complete number status bit 512	<p>These bits indicate position numbers for which positioning has been completed (Valid in cases other than solenoid valve mode). The position complete is read as binary code. It becomes possible to read position complete numbers when the current position gets close to the target position (within the positioning band in either the positive or negative directions). "0" is read in other cases. Although all the bits will change to "0" once the servo turns OFF, the position complete becomes valid again if the current position is still inside the positioning band when the servo is turned ON subsequently. In push-motion, the position complete numbers can be read at both the completion and miss of push-motion.</p> <p>[For Servo Press Type] Shown below is the exected press program number. The value is maintained after press program is complete till the servo gets turned OFF or another movement command gets issued. Also, it shows "FFFF_H" during the program is stopped.</p>
8	PM256	Position complete number status bit 256	
7	PM128	Position complete number status bit 128	
6	PM64	Position complete number status bit 64	
5	PM32	Position complete number status bit 32 Exected program No. 32	
4	PM16	Position complete number status bit 16 Exected program No. 16	
3	PM8	Position complete number status bit 8 Exected program No. 8	
2	PM4	Position complete number status bit 4 Exected program No. 4	
1	PM2	Position complete number status bit 2 Exected program No. 2	
0	PM1	Position complete number status bit 1 Exected program No. 1	

[19] Data of expansion system status registers (Address = 9015_H) (SSSE)

Bit	Symbol	Name	Function
15	-	Cannot be used	
14	-	Cannot be used	
13	-	Cannot be used	
12	-	Cannot be used	
11	ALMC	Cold start level alarm	0: Normal, 1: Cold level start alarm in occurrence It becomes "1" when the cold start level alarm is being occurred. It is necessary to cancel the cause of the alarm issuance and reboot the power in order to resume the operation.
10	-	Cannot be used	
9	-	Cannot be used	
8	RTC	RTC (calendar) function use	0: RTC (calendar) function not in use 1: RTC (calendar) function use * Corresponding Model: ERC3, PCON-CA/CFA/CB/CFB/CBP, ACON-CA/CB, DCON-CA/CB, SCON-CA/CAL/CB
7	-	Cannot be used	
6	-	Cannot be used	
5	-	Cannot be used	
4	-	Cannot be used	
3	-	Cannot be used	
2	-	Cannot be used	
1	-	Cannot be used	
0	-	Cannot be used	

[20] Overload level monitors (Address = 9020_H) (OLLV)

Bit	Symbol	Name	Function
31	—	Overload level monitor 2147202832	<p>It shows the current load status [%]. The overload level monitor is read out in the binary code.</p> <p>* Corresponding Model:SCON-CA/CAL/CB/CGB</p>
30	—	Overload level monitor 1073601416	
29	—	Overload level monitor 536800708	
28	—	Overload level monitor 268400354	
27	—	Overload level monitor 134200177	
26	—	Overload level monitor 67108864	
25	—	Overload level monitor 33554432	
24	—	Overload level monitor 16777216	
23	—	Overload level monitor 8388608	
22	—	Overload level monitor 4194304	
21	—	Overload level monitor 2097152	
20	—	Overload level monitor 1048576	
19	—	Overload level monitor 524288	
18	—	Overload level monitor 262144	
17	—	Overload level monitor 131072	
16	—	Overload level monitor 65536	
15	—	Overload level monitor 32768	
14	—	Overload level monitor 16384	
13	—	Overload level monitor 8192	
12	—	Overload level monitor 4096	
11	—	Overload level monitor 2048	
10	—	Overload level monitor 1024	
9	—	Overload level monitor 512	
8	—	Overload level monitor 256	
7	—	Overload level monitor 128	
6	—	Overload level monitor 64	
5	—	Overload level monitor 32	
4	—	Overload level monitor 16	
3	—	Overload level monitor 8	
2	—	Overload level monitor 4	
1	—	Overload level monitor 2	
0	—	Overload level monitor 1	

[21] Press program alarm codes (Address = 9022_H) (ALMP)
 SCON Servo Press Type only

Bit	Symbol	Name	Function
15	—	Alarm code 32768	<p>It shows the alarm code numbers of press program. It gets output when an alarm is generated. It is "0_H" when there is no alarm generated. The alarm codes are read out in the binary code. For the details of the alarm codes, refer to the [instruction manual of each controller].</p>
14	—	Alarm code 16384	
13	—	Alarm code 8192	
12	—	Alarm code 4096	
11	—	Alarm code 2048	
10	—	Alarm code 1024	
9	—	Alarm code 512	
8	—	Alarm code 256	
7	—	Alarm code 128	
6	—	Alarm code 64	
5	—	Alarm code 32	
4	—	Alarm code 16	
3	—	Alarm code 8	
2	—	Alarm code 4	
1	—	Alarm code 2	
0	—	Alarm code 1	

[22] Alarm generated press program No. (Address = 9023_H) (ALMP)
 SCON Servo Press Type only

Bit	Symbol	Name	Function
15	—	Alarm generated press program No.32768	The press program number that an alarm is issued gets displayed. It gets output when an alarm is generated. It is "0 _H " when there is no alarm generated.
14	—	Alarm generated press program No.16384	
13	—	Alarm generated press program No.8192	
12	—	Alarm generated press program No.4096	
11	—	Alarm generated press program No.2048	
10	—	Alarm generated press program No.1024	
9	—	Alarm generated press program No.512	
8	—	Alarm generated press program No.256	
7	—	Alarm generated press program No.128	
6	—	Alarm generated press program No.64	
5	—	Alarm generated press program No.32	
4	—	Alarm generated press program No.16	
3	—	Alarm generated press program No.8	
2	—	Alarm generated press program No.4	
1	—	Alarm generated press program No.2	
0	—	Alarm generated press program No.1	

[23] Press program status registers (Address = 9024_H) (PPST)
SCON Servo Press Type only

Bit	Symbol	Name	Function
15	-	Cannot be used	
14	WAIT	Waiting	It turns to "1" during the waiting of the press program.
13	RTRN	While in returning operation	It turns to "1" during the returning of the press program.
12	DCMP	While in depression operation	It turns to "1" during the depression operation of the press program.
11	PSTP	Pressurize during the stop	It turns to "1" during the pressurize the stop of the press program.
10	PRSS	While in pressurizing operation	It turns to "1" during the pressurizing operation of the press program.
9	SERC	While in probing operation	It turns to "1" during the probing operation of the press program.
8	APRC	While in approaching operation	It turns to "1" during the approaching operation of the press program.
7	-	Cannot be used	
6	-	Cannot be used	
5	-	Cannot be used	
4	MPHM	Program home return during the movement	It turns to "1" during the program home-return movement, program depressurizing stage and return stage by the program home-return movement command, and during the program home position retract movement by the program alarm, and program home position retract movement by the program compulsory complete command.
3	PALM	Program alarm	It turns to "1" when the program alarm generated. The program alarm can be cancelled by the alarm reset as it is the movement cancellation level.
2	PCMP	Program finished in normal condition	It turns to "1" once it has transited to the standby period after a program is finished in the normal condition. It remains to "0" when the program is interrupted or finished in an error. Also, it remains to 0 when the program home-return movement completed. It is remained till the next program start command or movement command or servo OFF command gets issued even after a program is finished.
1	PRUN	While in executing program	It show the press program is in exection. It is "1" from the program start till the standby period finishes. It is not included during the program home-return movement. Program alarm gets issued when another program start command or axis movement command is executed while this bit is "1".
0	PORG	Program home position	It shows "1" when it is on the program home position coordinates of the indicated program number while a program is executed or during the program home-return movement. It is remained after program complete or program home-return movement complete till the next program start command, movement command or servo OFF command is issued.

[24] Press program judgements status registers (Address = 9025_H) (PPJD)
SCON Servo Press Type only

Bit	Symbol	Name	Function
15	-	Cannot be used	
14	-	Cannot be used	
13	-	Cannot be used	
12	-	Cannot be used	
11	-	Cannot be used	
10	-	Cannot be used	
9	-	Cannot be used	
8	-	Cannot be used	
7	-	Cannot be used	
6	-	Cannot be used	
5	LJNG	Load judgement NG	0: Load judgment not conducted, 1: Load judgement NG Load judgment is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to "1" when NG is detected in the load judgment during the judgment period. It shows "0" while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is OK.
4	LJOK	Load judgement OK	0: Load judgment not conducted, 1: Load judgement OK Load judgment is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to "1" when OK is detected in the load judgment during the judgment period. It shows "0" while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is NG.
3	PJNG	Position (distance) judgement NG	0: Position (distance) not conducted, 1: Position (distance) judgement NG Position (distance) judgement is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to "1" when NG is detected in the load judgment during the judgment period. It shows "0" while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is OK.
2	PJOK	Position (distance) judgement OK	0: Position (distance) not conducted, 1: Position (distance) judgement OK Position (distance) judgement is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to "1" when OK is detected in the load judgment during the judgment period. It shows "0" while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is NG.
1	JDNG	Total judgement NG	0: Total judgement not conducted, 1: Total judgement NG It turns to "1" when failure is detected in either of the position (distance) judgment or the load judgment at the end of the judgment period. It shows "0" while in a period out of the judgment period or when no NG is detected in both of the position (distance) judgment and the load judgment.
0	JDOK	Total judgement OK	0: Total judgement not conducted, 1: Total judgement OK It shows "1" when the load judgment is passed in both of the position (distance) judgment and the load judgment at the end of the judgment period, or either of them is judged passed and the other is inactivated. It shows "0" while in a period out of the judgment period or when no OK is detected in both of the position (distance) judgment and the load judgment.

4.3.3 Structure of Modbus Status Registers

The layout of the Modbus status registers is shown below.

0000 _H	(Reserved for system) ^(Note)		
0100 _H	Device status register 1 [DSS1]	0400 _H	Device control register 1 [DRG1]
010F _H		040F _H	
0110 _H	Device status register 2 [DSS2]	0410 _H	Device control register 2 [DRG2]
011F _H		041F _H	
0120 _H	Expansion device status register [DSSE]	0420 _H	Expansion device control register [DRGE]
012F _H		042F _H	
0130 _H	Position number status register Exected program number register (Servo press only) [POSS]	0430 _H	Position number command register Program number command register (Servo press only) [POSR]
013F _H		043F _H	
0140 _H	Zone status register [ZONS]	0490 _H	Press program control register [PPCT]
014F _H		049F _H	
0150 _H	Input port monitor register [DIPM]		
015F _H		FFFF _H	(Reserved for system) ^(Note)
0160 _H	Output port monitor register [DOPM]		
016F _H			
0170 _H	Special input port register [SIPM]		
017F _H			
0180 _H	Expansion system status register [SSSE]		
018F _H			
0190 _H	Press program status register [PPST]		
019F _H			
01A0 _H	Program judgement status register [PPJD]		
01AF _H			

Note Areas reserved for the system cannot be used for communication.

4.3.4 Detail of Modbus Status Registers

Address [HEX]	Area name	Description	Symbol	Reference	
				RTU	ASCII
0000 to 00FF	Reserved for system				
0100	Device status register 1 (DSS1)	EMG status	EMGS	5.3.12	6.4.12
0101		Safety speed enabled status	SFTY		
0102		Controller ready status	PWR		
0103		Servo ON status	SV		
0104		Missed work part in push-motion operation	PSFL		
0105		Major failure status	ALMH		
0106		Minor failure status	ALML		
0107		Absolute error status	ABER		
0108		Brake forced-release status	BKRL		
0109		Cannot be used			
010A		Pause status	STP		
010B		Home return status	HEND		
010C		Position complete status	PEND		
010D		Load cell calibration complete	CEND		
010E		Load cell calibration status	CLBS		
010F		Cannot be used			
0110	Device status register 2 (DSS2)	Cannot be used		5.3.13	6.4.13
0111		Cannot be used			
0112		Load output judgment status	LOAD		
0113		Torque level status	TRQS		
0114		Teaching mode status	MODS		
0115		Position-data load command status	TEAC		
0116		Jog+ status	JOG+		
0117		Jog- status	JOG-		
0118		Position complete 7	PE7		
0119		Position complete 6	PE6		
011A		Position complete 5	PE5		
011B		Position complete 4	PE4		
011C		Position complete 3	PE3		
011D		Position complete 2	PE2		
011E		Position complete 1	PE1		
011F		Position complete 0	PE0		
0120	Expansion device status register (DSSE)	Emergency stop status	EMGP	5.3.14	6.3.14
0121		Motor voltage low status	MPUV		
0122		Operation mode status	RMDS		
0123		Cannot be used			
0124		Home return status	GHMS		
0125		Push-motion operation in progress	PUSH		
0126		Excitation detection status	PSNS		
0127		PIO/Modbus switching status	PMSS		
0128		Cannot be used			
0129		Cannot be used			
012A		Moving signal	MOVE		
012B to 012F		Cannot be used			

Address [HEX]	Area name	Description	Symbol	Reference	
				RTU	ASCII
0130 to 0135	Position number status register, Exected program number register (Servo Press) (POSS)	Cannot be used		5.3.22	6.4.22
0136		Position complete number status bit 512	PM512		
0137		Position complete number status bit 256	PM256		
0138		Position complete number status bit 128	PM128		
0139		Position complete number status bit 64	PM64		
013A		Position complete number status bit 32	PM32		
013B		Exected program number status bit 32			
013B		Position complete number status bit 16	PM16		
013C		Exected program number status bit 16			
013C		Position complete number status bit 8	PM8		
013D		Exected program number status bit 8			
013D		Position complete number status bit 4	PM4		
013E		Exected program number status bit 4			
013E		Position complete number status bit 2	PM2		
013F		Exected program number status bit 2			
013F		Position complete number status bit 1	PM1		
013F		Exected program number status bit 1			
0140	Zone status register (ZONS)	Cannot be used		5.3.21	6.4.21
0141		Limit sensor output monitor 2	LS2		
0142		Limit sensor output monitor 1	LS1		
0143		Limit sensor output monitor 0	LS0		
0144 to 0146		Cannot be used			
0147		Position zone output monitor	ZP		
0148 to 014D		Cannot be used			
014E		Zone output monitor 2	Z2		
014F		Zone output monitor 1	Z1		
0150 to 015F	Input port monitor register (DIPM)	PIO connector pin numbers 20A (IN15) to PIO connector pin numbers 5A (IN0)		5.3.10	6.4.10
0160 to 016F	Output port monitor register (DOPM)	PIO connector pin numbers 16B (OUT15) to PIO connector pin numbers 1B (OUT0)		5.3.11	6.4.11
0170	Special input port monitor register (SIPM)	Cannot be used		5.3.20	6.4.20
0171		Command pulse NP signal status	NP		
0172		Cannot be used			
0173		Command pulse PP signal status	PP		
0174 to 0176		Cannot be used			
0177		Mode switch status	MDSW		
0178 to 017A		Cannot be used			
017B		Belt breakage sensor monitor	BLCT		
017C		Home-check sensor monitor	HMCK		
017D		Overtravel sensor	OT		
017E		Creep sensor	CREP		
017F		Limit sensor	LS		
0180 to 0183	Expansion system status register (SSSE)	Cannot be used		5.3.23	6.4.23
0184		Cold start level alarm	ALMC		
0185 to 0186		Cannot be used			
0187		RTC in use (ERC3, ACON-CA/CB, DCON-CA/CB, PCON-CA/CFA/CB/CFB only)	RTC		
0188 to 018F		Cannot be used			

4.3 Internal Addresses and Data Structure of RC Controller

Address [HEX]	Area name	Description	Symbol	Reference	
				RTU	ASCII
0190	Press program status register (Servo Press) (PPST)	Cannot be used		5.3.28	6.4.28
0191		Waiting	WAIT		
0192		While in returning operation	RTRN		
0193		While in depression operation	DCMP		
0194		Pressurize during the stop	PSTP		
0195		While in pressurizing operation	PRSS		
0196		While in probing operation	SERC		
0197		While in approaching the operation	APRC		
0198 to 019A		Cannot be used			
019B		Program home return during the movement	MPHM		
019C		Program alarm	PALM		
019D		Program finished in normal condition	PCMP		
019E		While in executing program	PRUN		
019F		Program home position	PORG		
01A0 to 01A9	Press program judgement status register (Servo Press) (PPJD)	Cannot be used		5.3.29	6.4.29
01AA		Load judgement NG	LJNG		
01AB		Load judgement OK	LJOK		
01AC		Position (distance) judgement NG	PJNG		
01AD		Position (distance) judgement OK	PJOK		
01AE		Total judgement NG	JDNG		
01AF		Total judgement OK	JDOK		
01B0 to 03FF	Reserved for system				
0420 to 0425	Expansion device control register (DRGE)	Cannot be used		5.4	6.5
0426		Load cell calibration command	CLBR		
0427		PIO/Modbus switching specification	PMSL		
0428 to 042B		Cannot be used			
042C		Deceleration stop	STOP		
042D to 042F		Cannot be used			
0430 to 0435	Position number specification register Program number specification register (Servo Press) (POSR)	Cannot be used		4.3.2 [7]	4.3.2 [7]
0436		Position command bit 512	PC512		
0437		Position command bit 256	PC256		
0438		Position command bit 128	PC128		
0439		Position command bit 64	PC64		
043A		Position command bit 32	PC32		
043B		Program number command bit 32			
043B		Position command bit 16	PC16		
043C		Program number command bit 16			
043C		Position command bit 8	PC8		
043D		Program number command bit 8			
043D		Position command bit 4	PC4		
043E		Program number command bit 4			
043E		Position command bit 2	PC2		
043F		Program number command bit 2			
043F		Position command bit 1	PC1		
043F		Program number command bit 1			
0440 to 048F	Reserved for system				
0490 to 049A	Press program control register (PPCT)	Cannot be used		5.4	6.5
049B		Axis operation permission	ENMV		
049C		Program home return movement	PHOM		
049D		Search stop	SSTP		
049E		Program compulsoly finish	FPST		
049F		Program start	PSTR		
04A0 to FFFF	Reserved for system				

Serial Communication

Chapter 5

Modbus RTU

5.1	Message Frames (Query and Response)	5-1
5.2	List of RTU Mode Queries	5-5
5.3	Data and Status Reading (Function code 03)	5-9
5.3.1	Reading Consecutive Multiple Registers	5-9
5.3.2	Alarm Detail Description Reading (ALA0, ALC0, ALT0)	5-13
5.3.3	Position Data Description Reading (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF)	5-15
5.3.4	Total moving count Reading (TLMC)	5-18
5.3.5	Total moving distance Reading (ODOM) (in 1m units)	5-20
5.3.6	Current Time Reading (TIMN)	5-22
5.3.7	Total FAN Driving Time Reading (TFAN)	5-26
5.3.8	Current Position Reading (PNOW)	5-28
5.3.9	Currently generated alarm code Reading (ALMC)	5-30
5.3.10	I/O Port Input Signal Status Reading (DIPM)	5-32
5.3.11	I/O Port Output Signal Status Reading (DOPM)	5-37
5.3.12	Controller Status Signal Reading 1 (DSS1)	5-42
5.3.13	Controller Status Signal Reading 2 (DSS2)	5-44

5.3.14	Controller Status Signal Reading 3 (DSSE).....	5-46
5.3.15	Controller Status Signal Reading 4 (STAT).....	5-48
5.3.16	Current Speed Reading (VNOW)	5-50
5.3.17	Current Ampere Reading (CNOW)	5-52
5.3.18	Deviation Reading (DEVI)	5-54
5.3.19	Total Time after Power On Reading (STIM)	5-56
5.3.20	Special Input Port Input Signal Status Reading (SIPM).....	5-58
5.3.21	Zone Output Signal Status Reading (ZONS)	5-60
5.3.22	Positioning Completed Position Number Reading (POSS) Exected Program Number Register (Servo Press Type) (POSS) ..	5-62
5.3.23	Controller Status Signal Reading 5 (SSSE).....	5-64
5.3.24	Current Load Reading...SCON-CA/CB, PCON-CBP only	5-66
5.3.25	Overload Level Monitor Reading (OLLV) ...SCON-CA/CAL/CB Only	5-68
5.3.26	Press Program Alarm Code Reading (ALMP) ...Servo Press Type Only	5-70
5.3.27	Alarm Generated Press Program No. Reading (ALMP) ...Servo Press Type Only	5-72
5.3.28	Press Program Status Register Reading (PPST) ...Servo Press Type Only	5-74
5.3.29	Press Program Judgement Status Register Reading (PPJD) ...Servo Press Type Only	5-76
5.4	Operation Commands and Data Rewrite (Function code 05).....	5-78
5.4.1	Writing to Coil	5-78
5.4.2	Safety Speed Enable/Disable Switching (SFTY)	5-79
5.4.3	Servo ON/OFF (SON)	5-81
5.4.4	Alarm Reset (ALRS).....	5-83
5.4.5	Brake Forced Release (BKRL)	5-85
5.4.6	Pause (STP).....	5-87
5.4.7	Home Return (HOME)	5-89
5.4.8	Positioning Start Command (CSTR)	5-91
5.4.9	Jog/Inch Switching (JISL)	5-93
5.4.10	Teaching Mode Command (MOD).....	5-95
5.4.11	Position Data Load Command (TEAC).....	5-97
5.4.12	Jog+ Command (JOG+).....	5-99
5.4.13	Jog- Command (JOG-)	5-101

5.4.14	Start Positions 0 to 7 (ST0 to ST7) Movement Command (Limited to solenoid valve mode).....	5-103
5.4.15	Load Cell Calibration Command (CLBR)	5-105
5.4.16	PIO/Modbus Switching Setting (PMSL)	5-108
5.4.17	Deceleration Stop (STOP)	5-110
5.4.18	Axis operation permission (ENMV) (Servo Press Type Only)	5-112
5.4.19	Program Home Position Movement (PHOM) (Servo Press Type Only)	5-114
5.4.20	Search Stop (SSTP) (Servo Press Type Only)	5-116
5.4.21	Program compulsory finish (FPST) (Servo Press Type Only)	5-118
5.4.22	Program Start (PSTR) (Servo Press Type Only).....	5-120
5.5	Direct Writing of Control Information (Function code 06) ..	5-122
5.5.1	Writing to Registers	5-122
5.6	Direct Writing of Positioning Data (Function code 10)	5-127
5.6.1	Numerical Value Movement Command	5-127
5.6.2	Writing Position Table Data	5-144

5.1 Message Frames (Query and Response)

The message frame of the serial communication in Modbus protocol should be as stated in the table below.

Start	Address	Function code	Data	CRC Check	End
Silent interval	1 byte	1 byte	n byte	2 byte	Silent interval

[1] Start

This field contains a silent interval (non communication time) of 3.5 characters or longer.

* 1 character = 10 bits

(Example) In case of 9600bps,

$$(10 \times 3.5) (10 \times 3.5) \text{ bits} \times 1/9600 \text{ bps} = 3.65\text{ms}$$

Note If the response timeout error occurs, change parameter No. 45, "Silent interval multiplier" or parameter No. 17, "Min. delay for activating local transmitter" using the IAI teaching tool as required.

[2] Address

This field specifies the addresses of connected RC controllers (01_H to 10_H).

Address = axis number + 1



Caution

- The address is not equal to the corresponding axis number: be careful when making settings.

[3] Function

The table below summarizes the function codes and functions that can be used with RC controllers.

Code [Hex]	Name	Function
01 _H	Read Coil Status	Read coils/DOs.
02 _H	Read Input Status	Read input statuses/DIs.
03 _H	Read Holding Registers	Read holding registers.
04 _H	Read Input Registers	Read input registers.
05 _H	Force Single Coil	Write one coil/DO.
06 _H	Preset Single Register	Write holding register.
07 _H	Read Exception Status	Read exception statuses.
0F _H	Force Multiple Coils	Write multiple coils/DOs at once.
10 _H	Preset Multiple Registers	Write multiple holding registers at once.
11 _H	Report Slave ID	Query a slave's ID.
17 _H	Read / Write Registers	Read/write registers.

Note This manual explains about mark function codes.

Reference

- The ROBONET gateway supports three types of function codes (03_H, 06_H and 10_H). Refer to the [Separate ROBONET Instruction manual (ME0208)]
-

[4] Data

Use this field to add data specified by a function code. It is also allowed to omit data if data addition is not specified by a function code.

[5] CRC check

In the RTU mode, an error check field confirming to the CRC method is automatically ^(Note) included in order to check contents of all messages. Moreover, checking is carried out regardless of the parity check method of individual characters in messages.

The CRC check consists of 16-bit binary values. The CRC value is calculated by the sender that appends the CRC field to a message. The recipient recalculates the CRC value again while receiving the message, and compares the calculation result against the actual value received in the CRC field. If the two values do not match, an error will generate.

(Note) When using a PC or a PLC not supporting Modbus are used as the host, it is necessary to create a function for calculating CRC.
Programs written in C language are included in [8.1 CRC Check Calculation].

Generation polynomial equation: $x^{16} + x^{15} + x^2 + 1$ (CRC-16 method)

Reference

- CRC calculation is automatically carried out with the FINS command supporting Modbus RTU communication of the PLC CJ1 series made by Omron.

[6] End

This field contains a silent interval (non communication time) of 3.5 characters or longer.

(Note) If the response timeout error occurs, change parameter No. 45, “Silent interval multiplier” or parameter No. 17, “Min. delay for activating local transmitter” using the IAI’s teaching tools as required.

[7] Broadcast

It is possible to send a query containing same data to all connected axes by specifying the address 00_H. In this case, no response is returned from an RC controller.

Note, however, that the function codes etc. that can be used with this function are limited; care should be taken when using the function. Please check the function codes that can be used in [5.2 List of RTU Mode Queries].

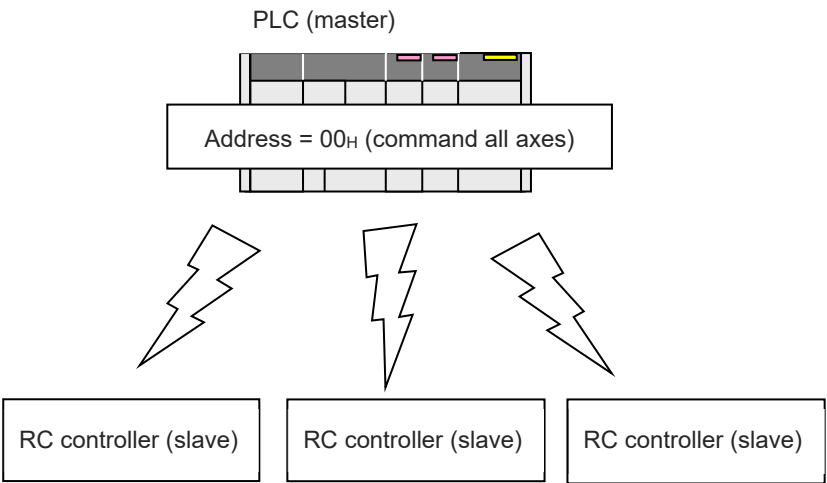


Fig. 5.1



Caution

- The sizes of send/receive buffers are set to 256 bytes for an RC controller, respectively. Make sure to keep the messages small enough such that messages sent from the host side do not exceed the receive buffer and data requests do not exceed send buffer.
-

5.2 List of RTU Mode Queries

FC: Function code

PIO: Parallel I/O (input/output of an I/O connector)

* The circle marks in the Combination use with PIO and Broadcast columns indicate queries that can be combined with PIO and in broadcast communication, respectively.

FC	Function	Symbol	Function Summary	Combination with PIO	Broad-cast	Reference
03	Multiple FC03 register reading	None	This function can be used to successively read multiple registers that use function 03.	○		5.3.1
03	Alarm detail description reading	ALA0 ALC0 ALT0	This bit reads the alarm codes, alarm addresses, detail codes and alarm occurrence time (passed time) that lately occurred.	○		5.3.2
03	Position data ^(Note 1) reading	Refer to right	This bit reads the indicated number in the position data. (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF)	○		5.3.3
03	Total moving count reading	TLMC	This bit reads the Total moving count.	○		5.3.4
03	Total moving distance reading	ODOM	This bit reads the Total moving distance in units of 1 m.	○		5.3.5
03	Current time reading	TIMN	This bit reads the current time. (PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB only)	○		5.3.6
03	Total FAN driving time reading	TFAN	This bit reads the Total FAN driving time. (PCON-CFA/CFB, SCON-CAL and SCON-CB (400W or more) only)	○		5.3.7
03	Current position reading	PNOW	This function reads the current actuator position in units of 0.01 mm.	○		5.3.8
03	Currently generated alarm code	ALMC	This function reads alarm codes that are presently detected.	○		5.3.9
03	I/O port input status reading	DIPM	This function reads the ON/OFF statuses of PIO input ports.	○		5.3.10
03	I/O port output status reading	DOPM	This function reads the ON/OFF statuses of PIO output ports.	○		5.3.11
03	Controller status signal reading 1 (device status 1) (Operation preparation status)	DSS1	This function reads the following 14 statuses: (1) Emergency stop (2) Safety speed enabled/disabled (3) Controller ready (4) Servo ON/OFF (5) Missed work part in push-motion operation (6) Major failure (7) Minor failure (8) Absolute error (9) Brake (10) Pause (11) Home return completion (12) Position complete (13) Load cell calibration complete (14) Load cell calibration status	○		5.3.12

Note 1 Once RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC read this address, they return "0_H" to all the addresses.

FC	Function	Symbol	Function Summary	Combination with PIO	Broad-cast	Reference
03	Controller status signal reading 2 (device status 2) (Operation preparation 1 status)	DSS2	This function reads the following 15 statuses: (1) Enable (2) Load output judgment (check-range load current threshold) (3) Torque level (load current threshold) (4) Teaching mode (normal/teaching) (5) Position data load (normal/complete) (6) Jog+ (normal/command active) (7) Jog- (normal/command active) (8) Position complete 7 to 0	○		5.3.13
03	Controller status signal reading 3 (extended device status) (Operation preparation 2 status)	DSSE	This function reads the following 9 statuses: (1) Emergency stop (emergency stop input port) (2) Motor voltage low (3) Operation mode (AUTO/MANU) (4) Home return (5) Push-motion operation in progress (6) Excitation detection (7) PIO/Modbus switching (8) Position-data write completion status (9) Moving	○		5.3.14
03	Controller status signal reading 4 (System status) (Controller status)	STAT	This function reads the following 7 statuses: (1) Automatic servo OFF (2) Nonvolatile memory being accessed (3) Operation mode (AUTO/MANU) (4) Home return completion (5) Servo ON/OFF (6) Servo command (7) Drive source ON (normal/cut off)	○		5.3.15
03	Current speed reading	VNOW	This function reads the current actuator speed in units of 0.01mm/s.	○		5.3.16
03	Current ampere reading	CNOW	This function reads the motor-torque current command value of the actuator in 1mA.	○		5.3.17
03	Deviation reading	DEVI	This function reads the deviation over a 1-ms period in pulses.	○		5.3.18
03	Total power on time reading	STIM	This function reads the deviation over a 1ms period in pulses.	○		5.3.19
03	Special input port input signal status reading (Sensor input status)	SIPM	This function reads the following 8 statuses: (1) Command pulse NP (2) Command pulse PP (3) Mode switch (4) Belt breakage sensor (5) Home check sensor (6) Overtravel sensor (7) Creep sensor (8) Limit sensor	○		5.3.20
03	Zone output signal reading	ZONS	This function reads the following 6 statuses: (1) LS2 (PIO pattern solenoid valve mode (3-point type)) (2) LS1 (PIO pattern solenoid valve mode (3-point type)) (3) LS0 (PIO pattern solenoid valve mode (3-point type)) (4) Position zone (5) Zone 2 (6) Zone 1	○		5.3.21
03	Positioning completed position number reading	POSS	This function reads the following next statuses: Complete position number bit 256 to 1	○		5.3.22
	Exected program number register reading		Exected program number bit 32 to 1			

5.2 List of RTU Mode Queries

FC	Function	Symbol	Function Summary	Combination with PIO	Broad-cast	Reference
03	Controller status signal reading 5	SSSE	This function reads the following 2 statuses: (1) Cold start level alarm occurred/not occurred (2) RTC (calendar) function used/not used (ERC3, PCON-CA/CFA/CB/CFB, ACON-CA/CB and DCON-CA/CB only)	○		5.3.23
03	Current load reading	FBFC	The current measurement on the load cell is read in units of 0.01N.	○		5.3.24
03	Press program status register reading	PPST	This function reads the following 12 statuses: (1) Waiting (2) While in returning operation (3) While in depression operation (4) Pressurize during the stop (5) While in pressurizing operation (6) While in probing operation (7) While in approaching the operation (8) Program home return during the movement (9) Program alarm (10) Program finished in normal condition (11) While in executing program (12) Program home position	○		5.3.28
03	Press program judgement status register	PPJD	This function reads the following 6 statuses: (1) Load judgement NG (2) Load judgement OK (3) Position (distance) judgement NG (4) Position (distance) judgement OK (5) Total judgement NG (6) Total judgement OK	○		5.3.29
05	Safety speed enable/disable switching	SFTY	This function issues a command to enable/disable the safety speed.		○	5.4.2
05	Servo ON/OFF	SON	This function issues a command to turn the servo ON/OFF.		○	5.4.3
05	Alarm reset	ALRS	This function issues a command to reset alarms/cancel the remaining travel.		○	5.4.4
05	Brake forced release	BKRL	This function issues a command to forcibly release the brake.		○	5.4.5
05	Pause	STP	This function issues a pause command.		○	5.4.6
05	Home return	HOME	This function issues a home return operation command.		○	5.4.7
05	Positioning start command	CSTR	This signal starts a position number specified movement.		○	5.4.8
05	Jog/inch switching	JISL	This function switches between the jogging mode and the inching mode		○	5.4.9
05	Teaching mode command	MOD	This function switches between the normal mode and the teaching mode		○	5.4.10
05	Position data load command	TEAC	This function issues a current position load command in the teaching mode.		○	5.4.11
05	Jog+ command	JOG+	This function issues a jogging/inching command in the direction opposite home.		○	5.4.12
05	Jog- command	JOG-	This function issues a jogging/inching command in the direction of home.		○	5.4.13
05	Start positions 0 to 7 (ST0 to ST7) movement command	ST0 to ST7	This function specifies position numbers effective only in the solenoid valve mode. The actuator can be operated with this command alone.		○	5.4.14
05	Load cell calibration command	CLBR	Calibrate the load cell.		○	5.4.15

FC	Function	Symbol	Function Summary	Combination with PIO	Broadcast	Reference
05	PIO/Modbus switching setting	PMSL	This function issues a command to enable/disable PIO external command signals.		○	5.4.16
05	Deceleration stop	STOP	This function can decelerate the actuator to a stop.		○	5.4.17
05	Axis operation permission	ENMV	Setting can be made whether to permit the operation of the connected axes.		○	5.4.18
05	Program home return movement	PHOM	Movement is made to the program home position set in each press program.		○	5.4.19
05	Search stop	SSTP	It can be stopped after search operation is complete.		○	5.4.20
05	Program compulsoly finish	FPST	It compulsoly finishes the press program.		○	5.4.21
05	Program executed	PSTR	Press program execute it.		○	5.4.22
06	Direct writing of control information write	-	Change (write) the content of the controller's register.		○	5.5
10	Numerical value movement command	None	This function can be used to send the "target position", "positioning band", "speed", "acceleration/deceleration", "push", and "control setting" in a single message to operate the actuator. Normal movement, relative movement and push-motion operation are supported.		○	5.6.1
10	Writing position data table <small>(Note 1)</small>	None	This function can be used to change all data of the specified position number for the specified axis.		○	5.6.2
Indeterminable	Exception response	None	This response will be returned when the message contains invalid data.			5.4.2

Note 1 In RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC, writing in this address is not available. They should return an exception response.

For exception response, refer to [7.1 Responses at Errors (Exception Responses)].

5.3 Data and Status Reading (Function code 03)

5.3.1 Reading Consecutive Multiple Registers

[1] Function

These registers read the contents of registers in a slave. This function is not supported in broadcast communication.

[2] Start address list

With RC controllers, the sizes of send/receive buffers are set to 256 bytes, respectively.

Accordingly, a maximum of 125 registers' worth of data consisting of 251 bytes (one register uses two bytes), except 5 bytes (slave address + function code + number of data bytes + error check) of the above 256 bytes, can be queried in the RTU mode. In other words, all of the data listed below can be queried in a single communication.

It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

Address [H]	Symbol	Name	Sign	Register size	Byte
0500	ALA0	Alarm detail code		1	2
0501	ALA0	Alarm address		1	2
0502	-	Always "0"	-	1	2
0503	ALC0	Alarm code		1	2
0504, 0505	ALT0	Alarm occurrence time		2	4
(Note) Assignment is made in order from small position numbers.	PCMD	Target position	○	2	4
	INP	Positioning band	○	2	4
	VCMD	Speed command		2	4
	ZNMP	Individual zone boundary +	○	2	4
	ZNLP	Individual zone boundary -	○	2	4
	ACMD	Acceleration command		1	2
	DCMD	Deceleration command		1	2
	PPOW	Push-current limiting value		1	2
	LPOW	Load current threshold		1	2
	CTLF	Control flag specification		1	2
8400, 8401	TLMC	Total moving count ^(Note1)		2	4
8402, 8403	ODOM	Total moving distance ^(Note1)		2	4
841E, 841F	TIMN	Current time (SCON-CA/CAL/CB only)		2	4
8420, 8421	TIMN	Current time (PCON-CA/CFA/CB/CFB only)		2	4
8422, 8423	TIMN	Current time (ACON-CA/CB, DCON-CA/C Bonly)		2	4
842A, 842B	TFAN	Total FAN driving time (SCON-CAL, SCON-CB (400W or more) only)		2	4
842E, 842F	TFAN	Total FAN driving time (PCON-CFA/CFB only)		2	4

Address [H]	Symbol	Name	Sign	Register size	Byte
9000, 9001	PNOW	Current position monitor	○	2	4
9002	ALMC	Currently generated alarm code query		1	2
9003	DIPM	Input port query		1	2
9004	DOPM	Output port monitor query		1	2
9005	DSS1	Device status query 1		1	2
9006	DSS2	Device status query 2		1	2
9007	DSSE	Expansion device status query		1	2
9008, 9009	STAT	System status query		2	4
900A, 900B	VNOW	Current speed monitor	○	2	4
900C, 900D	CNOW	Current ampere monitor	○	2	4
900E, 900F	DEVI	Deviation monitor	○	2	4
9010, 9011	STIM	System timer query		2	4
9012	SIPM	Special input port query		1	2
9013	ZONS	Zone status query		1	2
9014	POSS	Positioning complete position No. status query		1	2
9015	SSSE	Exected program No. register (Servo Press)		1	2
901E	FBFC	Expansion system status register	○	2	4
9020	OLLV	Current load data monitor		1	2
9022	ALMP	Overload level monitor		1	2
9023	ALMP	Press program alarm code		1	2
9024	PPST	Alarm generated press program No.		1	2
9025	PPJD	Pres program status register		1	2

Note 1 PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3, RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC only

[3] Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register (1 address) = 2 bytes = 16-bit data

Field	Number of data items (number of bytes)	RTU mode 8-bit data	Remarks
Start	-	None	Silent interval
Slave address [H]	1	Arbitrary	Axis No. + 1 (01 _H to 10 _H)
Function code [H]	1	03	Register reading code
Start address [H]	2	Arbitrary	Refer to [5.3.1 [2] Start address list].
Number of registers [H]	2	Arbitrary	Refer to [5.3.1 [2] Start address list].
Error check [H]	2	CRC (16 bits)	
End	-	None	Silent interval
Total number of bytes	8	-	

[4] Response format

A response message contains 16 bits of data per register.

Field	Number of data items (number of bytes)	RTU mode 8-bit data	Remarks
Start	-	None	Silent interval
Slave address [H]	1	Arbitrary	Axis No. + 1 (01 _H to 10 _H)
Function code [H]	1	03	Register reading code
Number of data bytes [H]	1	-	Total number of bytes of registers specified in the query
Data 1 [H]	Number of bytes of register specified in the query	-	
Data 2 [H]	Number of bytes of register specified in the query	-	
Data 3 [H]	Number of bytes of register specified in the query	-	
Data 4 [H]	Number of bytes of register specified in the query	-	
:	:	-	
:	:	-	
Error check [H]	2	CRC (16 bits)	
End	-	None	Silent interval
Total number of bytes	Up to 256	-	

[5] Query sample

A sample query that queries addresses 9000_H to 9009_H of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 00 00 0A E8 CD

Field	RTU mode 8-bit data	Remarks
Start	-	Silent interval
Slave address [H]	01	
Function code [H]	03	
Start address [H]	90 00	
Number of registers [H]	00 0A	10 registers
Error check [H]	E8 CD	In accordance with CRC calculation
End	-	Silent interval

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 14 00 00 00 00 00 00 00 00 00 00 6E 00 60 18 80 00 23 C7 00 00 00 19 18 A6

Field	RTU mode 8-bit data	Remarks
Start	-	Silent interval
Slave address [H]	01	
Function code [H]	03	
Number of data bytes [H]	14	14 _H → 20 bytes = 10 registers
Data 1 [H]	00 00 00 00	Current position monitor
Data 2 [H]	00 00	Present alarm code query
Data 3 [H]	00 00	Input port query
Data 4 [H]	6E 00	Output port query
Data 5 [H]	60 18	Device status 1 query
Data 6 [H]	80 00	Device status 2 query
Data 7 [H]	23 C7	Expansion device status query
Data 8 [H]	00 00 00 19	System status query
Error check [H]	18 A6	In accordance with CRC calculation
End	-	Silent interval

Note If the response example is simply an example and will vary depending on various conditions.

5.3.2 Alarm Detail Description Reading (ALA0, ALC0, ALT0)

[1] Function

This bit reads the alarm codes, alarm detail codes and alarm occurrence time that lately occurred. When any alarm is not issued, it is "0H".

For details, refer to [4.3.2 [1] to [3]].

[2] Query format

Field	Number of data items (number of bytes)	RTU mode 8-bit data	Remarks
Start	-	None	Silent interval
Slave address [H]	1	Arbitrary	Axis No. + 1 (01 _H to 10 _H)
Function code [H]	1	03	Register reading code
Start address [H]	2	Arbitrary	Alarm detail code
Number of registers [H]	2	Arbitrary	Reading addresses 0500 _H to 0505 _H
Error check [H]	2	CRC (16 bits)	
End	-	None	Silent interval
Total number of bytes	8	-	

[3] Response format

A response message contains 16 bits of data per register.

Field	Number of data items (number of bytes)	RTU mode 8-bit data	Remarks
Start	-	None	Silent interval
Slave address [H]	1	Arbitrary	Axis No. + 1 (01 _H to 10 _H)
Function code [H]	1	03	Register reading code
Number of data bytes [H]	1	0C	Reading 6 registers = 12 bytes
Data 1 [H]	2	Alarm detail code	Alarm detail code (0500 _H) [Hex]
Data 2 [H]	2	Alarm address	Alarm address (0501 _H) [Hex]
Data 3 [H]	4	Alarm code	Alarm code [Hex]
Data 4 [H]	4	Alarm occurrence time (Note1)	Alarm occurrence time [Hex]
Error check [H]	2	CRC (16 bits)	
End	-	None	Silent interval
Total number of bytes	Up to 256	-	

Note 1 The contents of display should differ between the models equipped with RTC (calendar feature) and those not equipped with it.

(1) When parameter is "Enable" in RTC equipped with RTC: Displays alarm occurrence time

(2) When parameter is "Disable" in RTC equipped with RTC: Displays time [ms] passed after the power is turned on

(3) For models not equipped with RTC: Displays time [ms] passed after the power is turned on

Here shows an example to read content of the alarm (Address 0500_H to 0505_H) occurred last in controller on Axis No. 0.

- 01 03 05 00 00 06 C5 04

The response to the query is as follows.

- ```
01 03 0C 00 00 FF FF 00 00 00 E8 2A D1 D0 7B C6 A2
```

Alarm detail code: 0000<sub>H</sub> ···· No detail code

Alarm address: FFFF<sub>H</sub> ..... Disable (no detail code)

Alarm code: 00E8<sub>H</sub> = 0E8 (Encoder AB phase break error) (Note 1)

Alarm occurrence time: 2AD1D07B<sub>H</sub> (conversion) ⇒ 2022/10/06 17:44:42

(Refer to [4.3.2 [4]] for how to convert the alarm occurred time)

Note If the response example is simply an example and will vary depending on various conditions.

Note 1 For the detail of an alarm code, refer to the [instruction manual of the each controller].

### 5.3.3 Position Data Description Reading (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF)

#### [1] Function

This reads the value set in the indicated position number.

#### [2] Start address list

The buffer size of sending and receiving of RC Controller is 256 bytes for each.

Accordingly, a maximum of 125 registers' worth of data consisting of 251 bytes (one register uses two bytes), except 5 bytes (slave address + function code + number of data bytes + error check) of the above 256 bytes, can be queried in the RTU mode. In other words, all of the data listed below can be queried in a single communication.

It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

| Address [H]  | Top Address of Each Position Number [H]               | Offset from Top Address [H] | Symbol | Registers name              | sign | Register size | Byte | Unit                           |
|--------------|-------------------------------------------------------|-----------------------------|--------|-----------------------------|------|---------------|------|--------------------------------|
| 1000 to 3FFF | Top Address = 1000 <sub>H</sub> + (16 × position No.) | +0                          | PCMD   | Target position             | ○    | 2             | 4    | 0.01mm                         |
|              |                                                       | +2                          | INP    | Positioning band            | ○    | 2             | 4    | 0.01mm                         |
|              |                                                       | +4                          | VCMD   | Speed command               |      | 2             | 4    | 0.01mm/s                       |
|              |                                                       | +6                          | ZNMP   | Individual zone boundary +  | ○    | 2             | 4    | 0.01mm                         |
|              |                                                       | +8                          | ZNLP   | Individual zone boundary -  | ○    | 2             | 4    | 0.01mm                         |
|              |                                                       | +A                          | ACMD   | Acceleration command        |      | 1             | 2    | 0.01G                          |
|              |                                                       | +B                          | DCMD   | Deceleration command        |      | 1             | 2    | 0.01G                          |
|              |                                                       | +C                          | PPOW   | Push-current limiting value |      | 1             | 2    | %<br>(100% = FF <sub>H</sub> ) |
|              |                                                       | +D                          | LPOW   | Load current threshold      |      | 1             | 2    | %<br>(100% = FF <sub>H</sub> ) |
|              |                                                       | +E                          | CTLF   | Control flag specification  |      | 1             | 2    |                                |

In a query input, each address is calculated using the formula below:

$$1000_H + (16 \times \text{Position number})_H + \text{Address (Offset)}_H$$

Example: Change the speed command register for position No. 200

$$\begin{aligned}
 1000_H + (16 \times 200_D)_H + 4_H &= 1000_H + (3200_D)_H + 4_H \\
 &= 1000_H + C80_H + 4_H \\
 &= 1C84_H
 \end{aligned}$$

Therefore, for Position No. 200, "1C84<sub>H</sub>" should be the input value in the query start address.

**Note** The maximum position number varies depending on the controller model and the PIO pattern currently specified.

**Note** RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC returns 0H in all the addresses once it reads this address.

## [3] Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register (1 address) = 2 bytes = 16-bit data

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | Arbitrary              | Refer to [5.3.3 [2] Start address list]            |
| Number of registers [H] | 2                                         | Arbitrary              |                                                    |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

## [4] Response format

| Field                    | Number of data items<br>(number of bytes)          | RTU mode<br>8-bit data | Remarks                                                   |
|--------------------------|----------------------------------------------------|------------------------|-----------------------------------------------------------|
| Start                    | -                                                  | None                   | Silent interval                                           |
| Slave address [H]        | 1                                                  | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )        |
| Function code [H]        | 1                                                  | 03                     | Register reading code                                     |
| Number of data bytes [H] | 1                                                  | -                      | Total number of bytes of registers specified in the query |
| Data 1 [H]               | Number of bytes of register specified in the query | -                      |                                                           |
| Data 2 [H]               | Number of bytes of register specified in the query | -                      |                                                           |
| Data 3 [H]               | Number of bytes of register specified in the query | -                      |                                                           |
| Data 4 [H]               | Number of bytes of register specified in the query | -                      |                                                           |
| :                        | :                                                  | -                      |                                                           |
| :                        | :                                                  | -                      |                                                           |
| Error check [H]          | 2                                                  | CRC (16 bits)          |                                                           |
| End                      | -                                                  | None                   | Silent interval                                           |
| Total number of bytes    | Up to 256                                          | -                      |                                                           |

## [5] Query sample

Shown below is an example for a use referring to the “target position”, “positioning band” and “speed command” in Position No. 1 (Address 1010<sub>H</sub> to 1015<sub>H</sub>) on Axis No. 0 controller.

- Query (silent intervals are inserted before and after the query)

01 03 10 10 00 06 C0 CD

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 10 10                  |                                    |
| Number of registers [H] | 00 06                  | 6 registers                        |
| Error check [H]         | C0 CD                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 0C 00 00 27 10 00 00 00 0A 00 01 EC 30 6B 15

| Field                    | RTU mode<br>8-bit data | Remarks                                  |
|--------------------------|------------------------|------------------------------------------|
| Start                    | -                      | Silent interval                          |
| Slave address [H]        | 01                     |                                          |
| Function code [H]        | 03                     |                                          |
| Number of data bytes [H] | 0C                     | 0C <sub>H</sub> → 12 bytes = 6 registers |
| Data 1 [H]               | 00 00 27 10            | Target position query                    |
| Data 2 [H]               | 00 00 00 0A            | Positioning band query                   |
| Data 3 [H]               | 00 01 EC 30            | Speed command query                      |
| Error check [H]          | C6 A2                  | In accordance with CRC calculation       |
| End                      | -                      | Silent interval                          |

Target position “2710<sub>H</sub>” → Convert into decimal number → 10000<sub>D</sub> × [Unit 0.01mm] = 100.00mm

Positioning band “A<sub>H</sub>” → Convert into decimal number → 10<sub>D</sub> × [Unit 0.01mm] = 0.10mm

Speed command “1EC30<sub>H</sub>” → Convert into decimal number → 126000<sub>D</sub> × [Unit 0.01mm] = 1260.00mm

Note If the response example is simply an example and will vary depending on various conditions.



### 5.3.4 Total moving count Reading (TLMC)

#### [1] Function

This bit reads the total moving count. For details, refer to [4.3.2 [8]].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                  |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                          |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]       | 1                                         | 03                     | Register reading code                                    |
| Start address [H]       | 2                                         | 84 00                  | Total moving count                                       |
| Number of registers [H] | 2                                         | 00 02                  | Reading addresses 8400 <sub>H</sub> to 8401 <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                          |
| End                     | -                                         | None                   | Silent interval                                          |
| Total number of bytes   | 8                                         | -                      |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                               |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                       |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]        | 1                                         | 03                     | Register reading code                                 |
| Number of data bytes [H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                         |
| Data 1 [H]               | 2                                         | Total moving<br>count  | Total moving count [Hex] (most significant<br>digit)  |
| Data 2 [H]               | 2                                         | Total moving<br>count  | Total moving count [Hex] (least significant<br>digit) |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                       |
| End                      | -                                         | None                   | Silent interval                                       |
| Total number of bytes    | 9                                         | -                      |                                                       |

## [4] Query sample

Here shows an example to read the total moving count (Address 8400<sub>H</sub> to 8401<sub>H</sub>) of an actuator connected to the controller on Axis No. 0.

- Query (silent intervals are inserted before and after the query)

01 03 84 00 00 02 EC FB

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 84 00                  | Total moving count                 |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | C0 CD                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 19 3E 10 3A 58

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data 1 [H]               | 00 19                  |                                         |
| Data 2 [H]               | 3E 10                  |                                         |
| Error check [H]          | 3A 58                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

The total moving count is "193E10<sub>H</sub>" → Convert into decimal number → 1654288 times

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.5 Total moving distance Reading (ODOM) (in 1m units)

#### [1] Function

The total moving distance (Address 8402<sub>H</sub> to 8403<sub>H</sub>) of an actuator connected to the controller on Axis No. 0 is to be read in the unit of 1m.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                  |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start                   |                                           | None                   | Silent interval                                          |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]       | 1                                         | 03                     | Register reading code                                    |
| Start address [H]       | 2                                         | 84 02                  | Total moving distance                                    |
| Number of registers [H] | 2                                         | 00 02                  | Reading addresses 8402 <sub>H</sub> to 8403 <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                          |
| End                     |                                           | None                   | Silent interval                                          |
| Total number of bytes   | 8                                         | -                      |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                               |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start                    |                                           | None                   | Silent interval                                       |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]        | 1                                         | 03                     | Register reading code                                 |
| Number of data bytes [H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                         |
| Data 1 [H]               | 2                                         | Total moving distance  | Total moving distance [Hex] (most significant digit)  |
| Data 2 [H]               | 2                                         | Total moving distance  | Total moving distance [Hex] (least significant digit) |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                       |
| End                      |                                           | None                   | Silent interval                                       |
| Total number of bytes    | 9                                         | -                      |                                                       |

## [4] Query sample

Here shows an example to read the total moving distance (Address 8402<sub>H</sub> to 8403<sub>H</sub>) of an actuator connected to the controller on Axis No. 0.

- Query (silent intervals are inserted before and after the query)

01 03 84 02 00 02 4D 3B

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 84 02                  |                                    |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | 4D 3B                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 02 89 8C 3D C6

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data 1 [H]               | 00 02                  |                                         |
| Data 2 [H]               | 89 8C                  |                                         |
| Error check [H]          | 3D C6                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

The Total moving distance is "2898C<sub>H</sub>" → Convert into decimal number → 166284m

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.6 Current Time Reading (TIMN)

#### [1] Function

This bit reads the current time.

\* This function is dedicated for PCON-CA/CFA/CB/CFB/CBP, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB (including servo pressing type) only.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                              |
|-------------------------|-------------------------------------------|------------------------|--------------------------------------------------------------------------------------|
| Start                   |                                           | None                   | Silent interval                                                                      |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )                                   |
| Function code [H]       | 1                                         | 03                     | Register reading code                                                                |
| Start address [H]       | 2                                         | Refer to remarks       | 841E: SCON-CA/CAL/CB<br>8420: PCON-CA/CFA/CB/CFB/CBP<br>8422: ACON-CA/CB, DCON-CA/CB |
| Number of registers [H] | 2                                         | 00 02                  | Reading 2 registers form start address                                               |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                                                      |
| End                     |                                           | None                   | Silent interval                                                                      |
| Total number of bytes   | 8                                         | -                      |                                                                                      |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    |                                           | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                      |
| Data [H]                 | 4                                         | Current time           | Refer to [5.3.6 [4]] for conversion at time.       |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      |                                           | None                   | Silent interval                                    |
| Total number of bytes    | 9                                         | -                      |                                                    |

### [4] Conversion of Read Data into Time

The read data output the current time by the setting on the controller.

- (1) For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance.
- (2) When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [s] since the power to the controller is turned on.

#### (1) How current time is calculated

The data of current time shows the seconds passed from the origin time (00hr:00min:00sec 1January2000).

Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below:

- 1) Passed second S should be converted into a decimal number.

- 2) M, H, D, Y and L should be figured out based on S.

$M = S/60$  (decimal fraction to be rounded down)

$H = M/60$  (decimal fraction to be rounded down)

$D = H/24$  (decimal fraction to be rounded down)

$Y = D/365.25$  (decimal fraction to be rounded down)

$L$  (Leap year) =  $Y/4$  (decimal fraction to be rounded up)

- 3) SA, MA, HA and DA should be figured out.

Assuming the second of time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below:

$SA = \text{Remainder of } S/60$

$MA = \text{Remainder of } M/60$

$HA = \text{Remainder of } H/24$

$DA = D - (Y \times 365 + L)$

\* Year and day can be figured out by subtracting the number of days in each month from DA.

$YA = Y + 2000$  (A.D.)

Example of Calculation: When current time data is output as 2AD2F1CE<sub>H</sub>

- 1) Convert into decimal number:

$$S = 2AD2F1CE_H \Rightarrow 718467534$$

- 2) Calculate M, H, D, Y and L.

$$M = 718467534/60 = 11974458 \text{ (decimal fraction to be rounded down)}$$

$$H = 11974458/60 = 199574 \text{ (decimal fraction to be rounded down)}$$

$$D = 199574/24 = 8315 \text{ (decimal fraction to be rounded down)}$$

$$Y = 8315/365.25 = 22 \text{ (decimal fraction to be rounded down)}$$

$$L = 22/4 = 6 \text{ (decimal fraction to be rounded up)}$$

- 3) SA, MA, HA and DA should be figured out.

$$SA = \text{Remainder of } 718467534/60 = 54$$

$$MA = \text{Remainder of } 11974458/60 = 18$$

$$HA = \text{Remainder of } 199574/24 = 14$$

$$DA = 8315 - (2 \times 365 + 6)$$

$$= 279 \text{ (279 days has passed in 2022 year and the time of alarm issuance is on the day 280.)}$$

$$\text{Year and day} = 280 - \{31 \text{ (Jan)} - 29 \text{ (Feb)} - 31 \text{ (Mar)} - 30 \text{ (Apr)} - 31 \text{ (May)}$$

$$- 30 \text{ (Jun)} - 31 \text{ (Jul)} - 31 \text{ (Aug)} - 30 \text{ (Sep)}\}$$

$$= 7 \text{ (As the number reduced for October would make a negative number, the read out date should be October 7)}$$

$$YA = 22 + 2000 = 2022$$

As figured out with the calculation above, the current time is 14:18:54 7 Oct2022.

- (2) How to Calculate Current time

Example of Calculation: When current time data is output as E1B8B<sub>H</sub>

$$SA = \text{Remainder of } 924555/60 = 15$$

$$MA = \text{Remainder of } 15409/60 = 49$$

Convert into decimal number: E1B8B<sub>H</sub>  $\Rightarrow$  924555

Therefore, it means 924555s (15min. 49sec. 256h) has passed since the power was turned on.

## [5] Query sample

A sample query that reads the current Time of PCON-CB (Addresses 8420<sub>H</sub> to 8421<sub>H</sub>) with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 84 20 00 02 ED 31

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 84 20                  |                                    |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | ED 31                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 2A D2 F1 CE 96 16

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 2A D2 F1 CE            | Current time                            |
| Error check [H]          | 96 16                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

Current time is 14:18:54 October 7, 2022

Note If the response example is simply an example and will vary depending on various conditions.



### 5.3.7 Total FAN Driving Time Reading (TFAN)

#### [1] Function

This bit reads the Total FAN driving time (in 1s units)

\* This function is dedicated for PCON- CFA/ CFB, SCON-CAL, SCON-CB (400W or more) only.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                        |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------------|
| Start                   |                                           | None                   | Silent interval                                                |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )             |
| Function code [H]       | 1                                         | 03                     | Register reading code                                          |
| Start address [H]       | 2                                         | Refer to remarks       | 842: SCON-CAL,<br>SCON-CB (400W or more)<br>842E: PCON-CFA/CFB |
| Number of registers [H] | 2                                         | 00 02                  | Reading 2 registers form start address                         |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                                |
| End                     |                                           | None                   | Silent interval                                                |
| Total number of bytes   | 8                                         | -                      |                                                                |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data    | Remarks                                                   |
|--------------------------|-------------------------------------------|---------------------------|-----------------------------------------------------------|
| Start                    |                                           | None                      | Silent interval                                           |
| Slave address [H]        | 1                                         | Arbitrary                 | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )        |
| Function code [H]        | 1                                         | 03                        | Register reading code                                     |
| Number of data bytes [H] | 1                                         | 04                        | 4 bytes = Reading 2 registers                             |
| Data 1 [H]               | 2                                         | Total FAN driving<br>time | Total FAN driving time [Hex] (most<br>significant digit)  |
| Data 2 [H]               | 2                                         | Total FAN driving<br>time | Total FAN driving time [Hex] (least<br>significant digit) |
| Error check [H]          | 2                                         | CRC (16 bits)             |                                                           |
| End                      |                                           | None                      | Silent interval                                           |
| Total number of bytes    | 9                                         | -                         |                                                           |

## [4] Query sample

A sample query that reads the Total FAN driving time (Address 842E<sub>H</sub> to 842F<sub>H</sub>) of a PCON-CFB with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 84 2E 00 02 8C F2

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 84 2E                  |                                    |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | 8C F2                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 02 AF BB 2F

| Field                    | RTU mode<br>8-bit data | Remarks                                                |
|--------------------------|------------------------|--------------------------------------------------------|
| Start                    | -                      | Silent interval                                        |
| Slave address [H]        | 01                     |                                                        |
| Function code [H]        | 03                     |                                                        |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers                |
| Data 1 [H]               | 00 00                  | Total FAN driving time [Hex] (most significant digit)  |
| Data 2 [H]               | 02 AF                  | Total FAN driving time [Hex] (least significant digit) |
| Error check [H]          | BB 2F                  | In accordance with CRC calculation                     |
| End                      | -                      | Silent interval                                        |

Total FAN driving time is "000002AF<sub>H</sub>" → Convert into decimal number → 687s

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.8 Current Position Reading (PNOW)

#### [1] Function

This bit reads the current position in units of 0.01mm. The sign is effective.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 00                  | Current position monitor                           |
| Number of registers [H] | 2                                         | 00 02                  | Reading 2 registers form start address             |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data                     | Remarks                                                  |
|--------------------------|-------------------------------------------|--------------------------------------------|----------------------------------------------------------|
| Start                    | -                                         | None                                       | Silent interval                                          |
| Slave address [H]        | 1                                         | Arbitrary                                  | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]        | 1                                         | 03                                         | Register reading code                                    |
| Number of data bytes [H] | 1                                         | 04                                         | 4 bytes = Reading 2 registers                            |
| Data 1 [H]               | 2                                         | In accordance<br>with the current<br>value | Current position data [Hex] (most<br>significant digit)  |
| Data 2 [H]               | 2                                         | In accordance<br>with the current<br>value | Current position data [Hex] (least<br>significant digit) |
| Error check [H]          | 2                                         | CRC (16 bits)                              |                                                          |
| End                      | -                                         | None                                       | Silent interval                                          |
| Total number of bytes    | 9                                         | -                                          |                                                          |

## [4] Query sample

A sample query that reads the current position (Address 9000<sub>H</sub> to 9001<sub>H</sub>) in a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 00 00 02 E9 0B

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 00                  |                                    |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | E9 0B                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 0B FE 7C 83

| Field                    | RTU mode<br>8-bit data | Remarks                                                  |
|--------------------------|------------------------|----------------------------------------------------------|
| Start                    | -                      | Silent interval                                          |
| Slave address [H]        | 01                     |                                                          |
| Function code [H]        | 03                     |                                                          |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers                  |
| Data 1 [H]               | 00 00                  | Current position data [Hex]<br>(most significant digit)  |
| Data 2 [H]               | 0B FE                  | Current position data [Hex]<br>(least significant digit) |
| Error check [H]          | 7C 83                  | In accordance with CRC calculation                       |
| End                      | -                      | Silent interval                                          |

Example 1) The current position is "00000BFE<sub>H</sub>" → Convert into decimal number → 3070 (× 0.01mm)  
→ Therefore, the current position is 30.7mm.

Example 2) When the current position reading (negative position) is "FFFFFFF5<sub>H</sub>" → FFFFFFFF<sub>H</sub> - FFFFFFFF5<sub>H</sub> + 1 (make sure to add 1) Convert into decimal number → 11 (× 0.01mm)  
→ Therefore, the current position is -0.11mm.

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.9 Currently generated alarm code Reading (ALMC)

#### [1] Function

This query reads the code indicating the normal status or alarm status (cold start level, operation cancellation level and message level) of the controller.

In the normal status, "00H" is stored.

For details on alarm codes, refer to the [Instruction manual of each controller].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 02                  | Currently generated alarm code                     |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9002 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    |                                           | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Alarm code             | Alarm code [Hex]                                   |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      |                                           | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

Note 1 The contents of display should differ between the models equipped with RTC (calendar feature) and those not equipped with it.

(1) When parameter is "Enable" in RTC equipped with RTC: Displays alarm occurrence time

(2) When parameter is "Disable" in RTC equipped with RTC: Displays time [ms] passed after the power is turned on

(3) For models not equipped with RTC: Displays time [ms] passed after the power is turned on

## [4] Query sample

A sample query that reads the alarm code (Address 9002<sub>H</sub>) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 02 00 01 08 CA

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 02                  | Currently generated alarm code     |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 08 CA                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 D9 79 DE

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 00 D9                  | Alarm code                             |
| Error check [H]          | 79 DE                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Alarm code: 00D9<sub>H</sub> = 0D9 (Software stroke limit over error) (Note 1)

Note If the response example is simply an example and will vary depending on various conditions.

Note 1 For details on alarm codes, refer to the [Instruction manual of each controller].

### 5.3.10 I/O Port Input Signal Status Reading (DIPM)

#### [1] Function

This query reads the port input value of the RC controller regardless of the PIO pattern.  
The status of the port to which a signal is currently input as recognized by the RC controller is read.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 03                  | Input port monitor register                        |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9003 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    |                                           | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Port input value       | Port input value [Hex]                             |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      |                                           | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the input port (Address 9003<sub>H</sub>) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 03 00 01 59 0A

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 03                  | Input port monitor register        |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 59 0A                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 90 00 D4 44

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 90 00                  | Input port signal status               |
| Error check [H]          | D4 44                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

The input port data area is 9000<sub>H</sub> → Convert into binary number: 1001000000000000<sub>b</sub>

|      |      |      |      |      |      |     |     |     |     |     |     |     |     |     |     |
|------|------|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 1    | 0    | 0    | 1    | 0    | 0    | 0   | 0   | 0   | 0   | 0   | 0   | 0   | 0   | 0   | 0   |
| IN15 | IN14 | IN13 | IN12 | IN11 | IN10 | IN9 | IN8 | IN7 | IN6 | IN5 | IN4 | IN3 | IN2 | IN1 | IN0 |

Note If the response example is simply an example and will vary depending on various conditions.



## [5] Port assignment

For details, refer to the [instruction manual of each RC controller].

- Write the port assignment of PIO patterns to each RC controller.
- 0 indicates that response data is always "0".

|      | PCON-C/CF/CA/CFA/CB/CFB |               |       |       |      |      | Other than PCON-C/CF |      |
|------|-------------------------|---------------|-------|-------|------|------|----------------------|------|
|      | PIO pattern             |               |       |       |      |      | (Pulse Train Mode)   |      |
| Port | 0                       | 1             | 2     | 3     | 4    | 5    | 6                    | 7    |
| IN0  | PC1                     | PC1           | PC1   | PC1   | ST0  | ST0  | SON                  | SON  |
| IN1  | PC2                     | PC2           | PC2   | PC2   | ST1  | ST1  | RES                  | RES  |
| IN2  | PC4                     | PC4           | PC4   | PC4   | ST2  | ST2  | HOME                 | HOME |
| IN3  | PC8                     | PC8           | PC8   | PC8   | ST3  | 0    | TL                   | TL   |
| IN4  | PC16                    | PC16          | PC16  | PC16  | ST4  | 0    | CSTP                 | CSTP |
| IN5  | PC32                    | PC32          | PC32  | PC32  | ST5  | 0    | DCLR                 | DCLR |
| IN6  | 0                       | MODE          | PC64  | PC64  | ST6  | 0    | BKRL                 | BKRL |
| IN7  | 0                       | JISL          | PC128 | PC128 | 0    | 0    | RMOD                 | RMOD |
| IN8  | 0                       | JOG+          | 0     | PC256 | 0    | 0    | 0                    | RSTR |
| IN9  | BKRL                    | JOG-          | BKRL  | BKRL  | BKRL | BKRL | 0                    | 0    |
| IN10 | RMOD                    | RMOD          | RMOD  | RMOD  | RMOD | RMOD | 0                    | 0    |
| IN11 | HOME                    | HOME          | HOME  | HOME  | HOME | 0    | 0                    | 0    |
| IN12 | *STP                    | *STP          | *STP  | *STP  | *STP | 0    | 0                    | 0    |
| IN13 | CSTR                    | CSTR/<br>PWRT | CSTR  | CSTR  | 0    | 0    | 0                    | 0    |
| IN14 | RES                     | RES           | RES   | RES   | RES  | RES  | 0                    | 0    |
| IN15 | SON                     | SON           | SON   | SON   | SON  | SON  | 0                    | 0    |

|                   | PCON-CYB    |     |     |      |      |                            | PCON-PLB/POB                                     |      |      | PCON-PL/PO                                       |      |              |
|-------------------|-------------|-----|-----|------|------|----------------------------|--------------------------------------------------|------|------|--------------------------------------------------|------|--------------|
|                   | PIO pattern |     |     |      |      |                            | PIO pattern                                      |      |      | PIO pattern                                      |      |              |
| Port              | 0           | 1   | 2   | 3    | 4    | 5                          | 6                                                | 0    | 1    | 2                                                | 0    | 1            |
| IN0               | PC1         | ST0 | ST0 | ST0  | ST0  | A Selected Number (Note 1) | Control by Serial Communication Command (Note 2) | SON  | SON  | Control by Serial Communication Command (Note 2) | SON  | SON          |
| IN1               | PC2         | ST1 | ST1 | 0    | ST1  |                            |                                                  | RES  | RES  |                                                  | TL   | TL           |
| IN2               | PC4         | ST2 | ST2 | 0    | ASTR |                            |                                                  | HOME | HOME |                                                  | HOME | HOME         |
| IN3               | PC8         | ST3 | 0   | 0    | 0    |                            |                                                  | TL   | TL   |                                                  | RES  | RES/<br>DCLR |
| IN4               | HOME        | ST4 | SON | SON  | SON  |                            |                                                  | CSTP | CSTP |                                                  | 0    | 0            |
| IN5               | *STR        | ST5 | 0   | *STR | *STR |                            |                                                  | DCLR | DCLR |                                                  | 0    | 0            |
| IN6               | CSTR        | ST6 | 0   | 0    | 0    |                            |                                                  | BKRL | BKRL |                                                  | 0    | 0            |
| IN7               | RES         | RES | RES | RES  | RES  |                            |                                                  | 0    | RSTR |                                                  | 0    | 0            |
| IN8<br>to<br>IN15 | 0           | 0   | 0   | 0    | 0    | 0                          | 0                                                | 0    | 0    | 0                                                | 0    |              |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.

For details, refer to the [PCON-CYB/PLB/POB instruction manual (ME0353)].

(Note 2) PLB/POB is complied with the serial communication mode in the firmware version PCON (v0005) or later.

Even though the I/O port input signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

|      | ACON-C/CA/CB, DCON-C/CA/CB |               |       |       |      |      | Other than ACON-C/CF |      |
|------|----------------------------|---------------|-------|-------|------|------|----------------------|------|
|      | PIO pattern                |               |       |       |      |      | (Pulse Train Mode)   |      |
| Port | 0                          | 1             | 2     | 3     | 4    | 5    | 6                    | 7    |
| IN0  | PC1                        | PC1           | PC1   | PC1   | ST0  | ST0  | SON                  | SON  |
| IN1  | PC2                        | PC2           | PC2   | PC2   | ST1  | ST1  | RES                  | RES  |
| IN2  | PC4                        | PC4           | PC4   | PC4   | ST2  | ST2  | HOME                 | HOME |
| IN3  | PC8                        | PC8           | PC8   | PC8   | ST3  | 0    | TL                   | TL   |
| IN4  | PC16                       | PC16          | PC16  | PC16  | ST4  | 0    | CSTP                 | CSTP |
| IN5  | PC32                       | PC32          | PC32  | PC32  | ST5  | 0    | DCLR                 | DCLR |
| IN6  | 0                          | MODE          | PC64  | PC64  | ST6  | 0    | BKRL                 | BKRL |
| IN7  | 0                          | JISL          | PC128 | PC128 | 0    | 0    | RMOD                 | RMOD |
| IN8  | 0                          | JOG+          | 0     | PC256 | 0    | 0    | 0                    | RSTR |
| IN9  | BKRL                       | JOG-          | BKRL  | BKRL  | BKRL | BKRL | 0                    | 0    |
| IN10 | RMOD                       | RMOD          | RMOD  | RMOD  | RMOD | RMOD | 0                    | 0    |
| IN11 | HOME                       | HOME          | HOME  | HOME  | HOME | 0    | 0                    | 0    |
| IN12 | *STP                       | *STP          | *STP  | *STP  | *STP | 0    | 0                    | 0    |
| IN13 | CSTR                       | CSTR/<br>PWRT | CSTR  | CSTR  | 0    | 0    | 0                    | 0    |
| IN14 | RES                        | RES           | RES   | RES   | RES  | RES  | 0                    | 0    |
| IN15 | SON                        | SON           | SON   | SON   | SON  | SON  | 0                    | 0    |

|                   | ACON-CYB, DCON-CYB |     |     |      |      |                            | ACON, DCON-PLB/POB                               |      |      | ACON-PL/PO                                       |      |              |
|-------------------|--------------------|-----|-----|------|------|----------------------------|--------------------------------------------------|------|------|--------------------------------------------------|------|--------------|
|                   | PIO pattern        |     |     |      |      |                            | PIO pattern                                      |      |      | PIO pattern                                      |      |              |
| Port              | 0                  | 1   | 2   | 3    | 4    | 5                          | 6                                                | 0    | 1    | 2                                                | 0    | 1            |
| IN0               | PC1                | ST0 | ST0 | ST0  | ST0  | A Selected Number (Note 1) | Control by Serial Communication Command (Note 2) | SON  | SON  | Control by Serial Communication Command (Note 2) | SON  | SON          |
| IN1               | PC2                | ST1 | ST1 | 0    | ST1  |                            |                                                  | RES  | RES  |                                                  | TL   | TL           |
| IN2               | PC4                | ST2 | ST2 | 0    | ASTR |                            |                                                  | HOME | HOME |                                                  | HOME | HOME         |
| IN3               | PC8                | ST3 | 0   | 0    | 0    |                            |                                                  | TL   | TL   |                                                  | RES  | RES/<br>DCLR |
| IN4               | HOME               | ST4 | SON | SON  | SON  |                            |                                                  | CSTP | CSTP |                                                  | 0    | 0            |
| IN5               | *STR               | ST5 | 0   | *STR | *STR |                            |                                                  | DCLR | DCLR |                                                  | 0    | 0            |
| IN6               | CSTR               | ST6 | 0   | 0    | 0    |                            |                                                  | BKRL | BKRL |                                                  | 0    | 0            |
| IN7               | RES                | RES | RES | RES  | RES  |                            |                                                  | 0    | RSTR |                                                  | 0    | 0            |
| IN8<br>to<br>IN15 | 0                  | 0   | 0   | 0    | 0    | 0                          |                                                  | 0    | 0    |                                                  | 0    | 0            |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.  
For details, refer to the [ACON-CYB/PLB/POB and DCON-CYB/PLB/POB instruction manual (ME0354)].

(Note 2) PLB/POB is complied with the serial communication mode in the firmware version ACON (v0002) and DCON (v0001) or later.

Even though the I/O port input signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

|      | SCON-C/CA/CAL/CB |               |       |       |      |      | SCON-CA/CB |      | SCON-C/CA/CB       |            |
|------|------------------|---------------|-------|-------|------|------|------------|------|--------------------|------------|
|      | PIO pattern      |               |       |       |      |      |            |      | (Pulse Train Mode) |            |
| Port | 0                | 1             | 2     | 3     | 4    | 5    | 6          | 7    | 0                  | 1( Note 1) |
| IN0  | PC1              | PC1           | PC1   | PC1   | ST0  | ST0  | PC1        | ST0  | SON                | SON        |
| IN1  | PC2              | PC2           | PC2   | PC2   | ST1  | ST1  | PC2        | ST1  | RES                | RES        |
| IN2  | PC4              | PC4           | PC4   | PC4   | ST2  | ST2  | PC4        | ST2  | HOME               | HOME       |
| IN3  | PC8              | PC8           | PC8   | PC8   | ST3  | 0    | PC8        | ST3  | TL                 | TL         |
| IN4  | PC16             | PC16          | PC16  | PC16  | ST4  | 0    | PC16       | ST4  | CSTP               | CSTP       |
| IN5  | PC32             | PC32          | PC32  | PC32  | ST5  | 0    | 0          | 0    | DCLR               | DCLR       |
| IN6  | 0                | MODE          | PC64  | PC64  | ST6  | 0    | 0          | 0    | BKRL               | BKRL       |
| IN7  | 0                | JISL          | PC128 | PC128 | 0    | 0    | 0          | 0    | RMOD               | RMOD       |
| IN8  | 0                | JOG+          | 0     | PC256 | 0    | 0    | CLBR       | CLBR | 0                  | RSTR       |
| IN9  | BKRL             | JOG-          | BKRL  | BKRL  | BKRL | BKRL | BKRL       | BKRL | 0                  | 0          |
| IN10 | RMOD             | RMOD          | RMOD  | RMOD  | RMOD | RMOD | RMOD       | RMOD | 0                  | 0          |
| IN11 | HOME             | HOME          | HOME  | HOME  | HOME | 0    | HOME       | HOME | 0                  | 0          |
| IN12 | *STP             | *STP          | *STP  | *STP  | *STP | 0    | *STP       | *STP | 0                  | 0          |
| IN13 | CSTR             | CSTR/<br>PWRT | CSTR  | CSTR  | 0    | 0    | CSTR       | 0    | 0                  | 0          |
| IN14 | RES              | RES           | RES   | RES   | RES  | RES  | RES        | RES  | 0                  | 0          |
| IN15 | SON              | SON           | SON   | SON   | SON  | SON  | SON        | SON  | 0                  | 0          |

(Note 1) This mode is not equipped in SCON-C/CA.

|      | SCON-CB     | ERC2 (PIO Type) |      |      |      | ERC3 (PIO Type) |      |      |
|------|-------------|-----------------|------|------|------|-----------------|------|------|
|      | Servo press | PIO pattern     |      |      |      | PIO pattern     |      |      |
| Port | -           | 0               | 1    | 2    | 3    | 0               | 1    | 2    |
| IN0  | PC1         | PC1             | ST0  | PC1  | PC1  | PC1             | ST0  | PC1  |
| IN1  | PC2         | PC2             | ST1  | PC2  | PC2  | PC2             | ST1  | PC2  |
| IN2  | PC4         | PC4             | ST2  | PC4  | PC4  | PC4             | ST2  | PC4  |
| IN3  | PC8         | HOME            | 0    | PC8  | PC8  | HOME            | 0    | PC8  |
| IN4  | PC16        | CSTR            | RES  | CSTR | CSTR | CSTR            | RES  | CSTR |
| IN5  | PC32        | *STP            | *STP | *STP | *STP | *STP            | *STP | *STP |
| IN6  | PSTR        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN7  | RHOM        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN8  | ENMV        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN9  | FPST        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN10 | CLBR        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN11 | BKRL        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN12 | RMOD        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN13 | HOME        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN14 | RES         | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN15 | SON         | 0               | 0    | 0    | 0    | 0               | 0    | 0    |

### 5.3.11 I/O Port Output Signal Status Reading (DOPM)

#### [1] Function

This query reads the port output value of the RC controller regardless of the PIO pattern.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 9004                   | Output port monitor register                       |
| Number of registers [H] | 2                                         | 0001                   | Reading addresses 9004 <sub>H</sub>                |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    |                                           | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Port output value      | Port output value [Hex]                            |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      |                                           | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

A sample query that output port (Address 9004<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 04 00 01 E8 CB

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 04                  | Output port monitor register       |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | E8 CB                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 7E 80 98 44

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 7E 80                  | Output port signal status              |
| Error check [H]          | 98 44                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

The input port data area is 7E80<sub>H</sub> → Convert into binary number: 0111111010000000<sub>b</sub>

|       |       |       |       |       |       |      |      |      |      |      |      |      |      |      |      |
|-------|-------|-------|-------|-------|-------|------|------|------|------|------|------|------|------|------|------|
| 0     | 1     | 1     | 1     | 1     | 1     | 1    | 0    | 1    | 0    | 0    | 0    | 0    | 0    | 0    | 0    |
| OUT15 | OUT14 | OUT13 | OUT12 | OUT11 | OUT10 | OUT9 | OUT8 | OUT7 | OUT6 | OUT5 | OUT4 | OUT3 | OUT2 | OUT1 | OUT0 |

Note If the response example is simply an example and will vary depending on various conditions.

## [5] Port assignment

For details, refer to the [instruction manual for each RC controller].

- Write the port assignment of PIO patterns to each RC controller.
- 0 indicates that response data is always "0".

| Port              | PCON-C/CF/CA/CFA/CB/CFB |                 |                         |                         |                         |                 | Other than PCON-C/CF |       |
|-------------------|-------------------------|-----------------|-------------------------|-------------------------|-------------------------|-----------------|----------------------|-------|
|                   | PIO pattern             |                 |                         |                         |                         |                 | (Pulse Train Mode)   |       |
|                   | 0                       | 1               | 2                       | 3                       | 4                       | 5               | 6                    | 7     |
| OUT0              | PM1                     | PM1             | PM1                     | PM1                     | PE0                     | LS0             | PWR                  | PWR   |
| OUT1              | PM2                     | PM2             | PM2                     | PM2                     | PE1                     | LS1             | SV                   | SV    |
| OUT2              | PM4                     | PM4             | PM4                     | PM4                     | PE2                     | LS2             | INP                  | INP   |
| OUT3              | PM8                     | PM8             | PM8                     | PM8                     | PE3                     | 0               | HEND                 | HEND  |
| OUT4              | PM16                    | PM16            | PM16                    | PM16                    | PE4                     | 0               | TLR                  | TLR   |
| OUT5              | PM32                    | PM32            | PM32                    | PM32                    | PE5                     | 0               | *ALM                 | *ALM  |
| OUT6              | MOVE                    | MOVE            | PM64                    | PM64                    | PE6                     | 0               | *EMGS                | *EMGS |
| OUT7              | ZONE1                   | MODES           | PM128                   | PM128                   | ZONE1                   | ZONE1           | RMDS                 | RMDS  |
| OUT8              | PZONE/<br>ZONE2         | PZONE/<br>ZONE1 | PZONE/<br>ZONE1         | PM256                   | PZONE/<br>ZONE2         | PZONE/<br>ZONE2 | ALM1                 | ALM1  |
| OUT9              | RMDS                    | RMDS            | RMDS                    | RMDS                    | RMDS                    | RMDS            | ALM2                 | ALM2  |
| OUT10             | HEND                    | HEND            | HEND                    | HEND                    | HEND                    | HEND            | ALM4                 | ALM4  |
| OUT11             | PEND                    | PEND/<br>WEND   | PEND                    | PEND                    | PEND                    | 0               | ALM8                 | ALM8  |
| OUT12             | SV                      | SV              | SV                      | SV                      | SV                      | SV              | *ALML                | *ALML |
| OUT13             | *EMGS                   | *EMGS           | *EMGS                   | *EMGS                   | *EMGS                   | *EMGS           | 0                    | REND  |
| OUT14             | *ALM                    | *ALM            | *ALM                    | *ALM                    | *ALM                    | *ALM            | ZONE1                | ZONE1 |
| OUT15<br>(Note 1) | LOAD/<br>TRQS/<br>*ALML | *ALML           | LOAD/<br>TRQS/<br>*ALML | LOAD/<br>TRQS/<br>*ALML | LOAD/<br>TRQS/<br>*ALML | *ALML           | ZONE2                | ZONE2 |

(Note 1) Signals available for output may differ depending on models.

For details, refer to the [Instruction manual of each controller].

| Port                | PCON-CYB        |      |                 |                 |                 |                                                                                | PCON-PLB/POB |           |                                                  | PCON-PL/PO  |             |
|---------------------|-----------------|------|-----------------|-----------------|-----------------|--------------------------------------------------------------------------------|--------------|-----------|--------------------------------------------------|-------------|-------------|
|                     | PIO pattern     |      |                 |                 |                 |                                                                                | PIO pattern  |           |                                                  | PIO pattern |             |
|                     | 0               | 1    | 2               | 3               | 4               | 5                                                                              | 0            | 1         | 2                                                | 0           | 1           |
| OUT0                | PM1             | PE0  | LS0             | LS0/<br>PE0     | LS0/<br>PE0     | A Selected Number (Note 2)<br>Control by Serial Communication Command (Note 3) | PWR          | PWR       | Control by Serial Communication Command (Note 3) | SV          | SV          |
| OUT1                | PM2             | PE1  | LS1             | LS1/<br>PE1     | LS1/<br>PE1     |                                                                                | SV           | SV        |                                                  | INP         | INP/<br>TLR |
| OUT2                | PM4             | PE2  | LS2             | PSFL            | PSFL            |                                                                                | INP          | INP       |                                                  | HEND        | HEND        |
| OUT3                | PM8             | PE3  | HEND            | HEND            | HEND            |                                                                                | HEND         | HEND      |                                                  | *ALM        | *ALM        |
| OUT4                | HEND            | PE4  | SV              | SV              | SV              |                                                                                | TLR          | TLR       |                                                  | 0           | 0           |
| OUT5                | PZONE/<br>ZONE1 | PE5  | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 |                                                                                | ZONE<br>1    | ZONE<br>1 |                                                  | 0           | 0           |
| OUT6                | PEND            | PE6  | *ALML           | *ALML           | *ALML           |                                                                                | *ALML        | REND      |                                                  | 0           | 0           |
| OUT7                | *ALM            | *ALM | *ALM            | *ALM            | *ALM            |                                                                                | *ALM         | *ALM      |                                                  | 0           | 0           |
| OUT8<br>to<br>OUT15 | 0               | 0    | 0               | 0               | 0               | 0                                                                              | 0            | 0         | Control by Serial Communication Command (Note 3) | 0           | 0           |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

For details, refer to [PCON-CYB/PLB/POB instruction manual (ME0353)].

(Note 3) PLB/POB is complied with the serial communication mode in the firmware version PCON (v0005) or later.

Even though the I/O port output signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

| Port              | ACON-C/CA/CB, DCON-C/CA/CB |                 |                 |                 |                 |                 | Other than ACON-C/CF |       |
|-------------------|----------------------------|-----------------|-----------------|-----------------|-----------------|-----------------|----------------------|-------|
|                   | PIO pattern                |                 |                 |                 |                 |                 | (Pulse Train Mode)   |       |
|                   | 0                          | 1               | 2               | 3               | 4               | 5               | 6                    | 7     |
| OUT0              | PM1                        | PM1             | PM1             | PM1             | PE0             | LS0             | PWR                  | PWR   |
| OUT1              | PM2                        | PM2             | PM2             | PM2             | PE1             | LS1             | SV                   | SV    |
| OUT2              | PM4                        | PM4             | PM4             | PM4             | PE2             | LS2             | INP                  | INP   |
| OUT3              | PM8                        | PM8             | PM8             | PM8             | PE3             | 0               | HEND                 | HEND  |
| OUT4              | PM16                       | PM16            | PM16            | PM16            | PE4             | 0               | TLR                  | TLR   |
| OUT5              | PM32                       | PM32            | PM32            | PM32            | PE5             | 0               | *ALM                 | *ALM  |
| OUT6              | MOVE                       | MOVE            | PM64            | PM64            | PE6             | 0               | *EMGS                | *EMGS |
| OUT7              | ZONE1                      | MODES           | PM128           | PM128           | ZONE1           | ZONE1           | RMDS                 | RMDS  |
| OUT8              | PZONE/<br>ZONE2            | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PM256           | PZONE/<br>ZONE2 | PZONE/<br>ZONE2 | ALM1                 | ALM1  |
| OUT9              | RMDS                       | RMDS            | RMDS            | RMDS            | RMDS            | RMDS            | ALM2                 | ALM2  |
| OUT10             | HEND                       | HEND            | HEND            | HEND            | HEND            | HEND            | ALM4                 | ALM4  |
| OUT11             | PEND                       | PEND/<br>WEND   | PEND            | PEND            | PEND            | 0               | ALM8                 | ALM8  |
| OUT12             | SV                         | SV              | SV              | SV              | SV              | SV              | *ALML                | *ALML |
| OUT13             | *EMGS                      | *EMGS           | *EMGS           | *EMGS           | *EMGS           | *EMGS           | 0                    | REND  |
| OUT14             | *ALM                       | *ALM            | *ALM            | *ALM            | *ALM            | *ALM            | ZONE1                | ZONE1 |
| OUT15<br>(Note 1) | *BALM<br>/*ALML            | *BALM<br>/*ALML | *BALM<br>/*ALML | *BALM<br>/*ALML | *BALM<br>/*ALML | *BALM<br>/*ALML | ZONE2                | ZONE2 |

(Note 1) The available output should differ depending on models.

For details, refer to the [Instruction manual of each controller].

|                     | ACON-CYB、DCON-CYB |      |                 |                 |                 |                            |                                                  | ACON、DCON-PLB/POB |           |                                                  | ACON-PL/PO  |             |
|---------------------|-------------------|------|-----------------|-----------------|-----------------|----------------------------|--------------------------------------------------|-------------------|-----------|--------------------------------------------------|-------------|-------------|
|                     | PIO pattern       |      |                 |                 |                 |                            |                                                  | PIO pattern       |           |                                                  | PIO pattern |             |
| Port                | 0                 | 1    | 2               | 3               | 4               | 5                          | 6                                                | 0                 | 1         | 2                                                | 0           | 1           |
| OUT0                | PM1               | PE0  | LS0             | LS0/<br>PE0     | LS0/<br>PE0     | A Selected Number (Note 2) | Control by Serial Communication Command (Note 3) | PWR               | PWR       | Control by Serial Communication Command (Note 3) | SV          | SV          |
| OUT1                | PM2               | PE1  | LS1             | LS1/<br>PE1     | LS1/<br>PE1     |                            |                                                  | SV                | SV        |                                                  | INP         | INP/<br>TLR |
| OUT2                | PM4               | PE2  | LS2             | PSFL            | PSFL            |                            |                                                  | INP               | INP       |                                                  | HEND        | HEND        |
| OUT3                | PM8               | PE3  | HEND            | HEND            | HEND            |                            |                                                  | HEND              | HEND      |                                                  | *ALM        | *ALM        |
| OUT4                | HEND              | PE4  | SV              | SV              | SV              |                            |                                                  | TLR               | TLR       |                                                  | 0           | 0           |
| OUT5                | PZONE/<br>ZONE1   | PE5  | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 |                            |                                                  | ZONE<br>1         | ZONE<br>1 |                                                  | 0           | 0           |
| OUT6                | PEND              | PE6  | *ALML           | *ALML           | *ALML           |                            |                                                  | *ALML             | REND      |                                                  | 0           | 0           |
| OUT7                | *ALM              | *ALM | *ALM            | *ALM            | *ALM            |                            |                                                  | *ALM              | *ALM      |                                                  | 0           | 0           |
| OUT8<br>to<br>OUT15 | 0                 | 0    | 0               | 0               | 0               | 0                          |                                                  | 0                 | 0         |                                                  | 0           | 0           |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

For details, refer to [ACON-CYB/PLB/POB and DCON-CYB/PLB/POB instruction manual (ME0353)].

(Note 3) PLB/POB is complied with the serial communication mode in the firmware version ACON (v0002) and DCON (v0001) or later.

Even though the I/O port output signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

### 5.3 Data and Status Reading (Function code 03)

|       | SCON-C/CA/CAL/CB |                 |                 |       |                 |                 | SCON-CA/CB      |                 | SCON-C/CA/CB                        |                       |
|-------|------------------|-----------------|-----------------|-------|-----------------|-----------------|-----------------|-----------------|-------------------------------------|-----------------------|
|       | PIO pattern      |                 |                 |       |                 |                 |                 |                 | (Pulse Train Mode)                  |                       |
| Port  | 0                | 1               | 2               | 3     | 4               | 5               | 6               | 7               | 0                                   | 1 <sup>(Note 1)</sup> |
| OUT0  | PM1              | PM1             | PM1             | PM1   | PE0             | LS0             | PM1             | PE0             | PWR                                 | PWR                   |
| OUT1  | PM2              | PM2             | PM2             | PM2   | PE1             | LS1             | PM2             | PE1             | SV                                  | SV                    |
| OUT2  | PM4              | PM4             | PM4             | PM4   | PE2             | LS2             | PM4             | PE2             | INP                                 | INP                   |
| OUT3  | PM8              | PM8             | PM8             | PM8   | PE3             | 0               | PM8             | PE3             | HEND                                | HEND                  |
| OUT4  | PM16             | PM16            | PM16            | PM16  | PE4             | 0               | PM16            | PE4             | TLR                                 | TLR                   |
| OUT5  | PM32             | PM32            | PM32            | PM32  | PE5             | 0               | TRQS            | TRQS            | *ALM                                | *ALM                  |
| OUT6  | MOVE             | MOVE            | PM64            | PM64  | PE6             | 0               | LOAD            | LOAD            | *EMGS                               | *EMGS                 |
| OUT7  | ZONE1            | MODES           | PM128           | PM128 | ZONE1           | ZONE1           | CEND            | CEND            | RMDS                                | RMDS                  |
| OUT8  | PZONE/<br>ZONE2  | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PM256 | PZONE/<br>ZONE2 | PZONE/<br>ZONE2 | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | ALM1                                | ALM1                  |
| OUT9  | RMDS             | RMDS            | RMDS            |       | RMDS            | RMDS            | RMDS            | RMDS            | ALM2                                | ALM2                  |
| OUT10 | HEND             | HEND            | HEND            | HEND  | HEND            | HEND            | HEND            | HEND            | ALM4                                | ALM4                  |
| OUT11 | PEND             | PEND/<br>WEND   | PEND            | PEND  | PEND            | 0               | PEND            | PEND            | ALM8                                | ALM8                  |
| OUT12 | SV               | SV              | SV              | SV    | SV              | SV              | SV              | SV              | *OVLW/<br>*ALML <sup>(Note 2)</sup> | *OVLW/<br>*ALML       |
| OUT13 | *EMGS            | *EMGS           | *EMGS           | *EMGS | *EMGS           | *EMGS           | *EMGS           | *EMGS           | 0                                   | REND                  |
| OUT14 | *ALM             | *ALM            | *ALM            | *ALM  | *ALM            | *ALM            | *ALM            | *ALM            | ZONE1                               | ZONE1                 |
| OUT15 | *BALM            | *BALM           | *BALM           | *BALM | *BALM           | *BALM           | *BALM           | *BALM           | ZONE2                               | ZONE2                 |

(Note 1) This mode is not equipped in SCON-C/CA.

(Note 2) SCON-C is not equipped with \*OVLW and \*ALML outputs.

|       | SCON-CB                 | ERC2 (PIO Type) |      |      |      | ERC3 (PIO Type) |      |                 |
|-------|-------------------------|-----------------|------|------|------|-----------------|------|-----------------|
|       | Servo press             | PIO pattern     |      |      |      | PIO pattern     |      |                 |
| Port  | -                       | 0               | 1    | 2    | 3    | 0               | 1    | 2               |
| OUT0  | PCMP                    | PEND            | PE0  | PEND | PEND | PEND            | PE0  | PEND            |
| OUT1  | PRUN                    | HEND            | PE1  | HEND | HEND | HEND            | PE1  | HEND            |
| OUT2  | PORG                    | ZONE            | PE2  | ZONE | ZONE | ZONE 1          | PE2  | PZONE/<br>ZONE1 |
| OUT3  | APRC                    | *ALM            | *ALM | *ALM | *ALM | *ALM            | *ALM | *ALM            |
| OUT4  | SERC                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT5  | PRSS                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT6  | PSTP                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT7  | MPHM                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT8  | JDOK                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT9  | JDNG                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT10 | CEND                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT11 | RMDS                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT12 | HEND                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT13 | SV                      | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT14 | *ALM                    | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT15 | *ALML <sup>(Note)</sup> | 0               | 0    | 0    | 0    | 0               | 0    | 0               |



### 5.3.12 Controller Status Signal Reading 1 (DSS1)

#### [1] Function

This bit reads the internal status of the controller.

For status details, refer to [4.3.2 [12] Data of device status register 1].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 05                  | Device status register 1                           |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9005 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    |                                           | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Status 1               | Status 1 [Hex]                                     |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      |                                           | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the device status (Address 9005<sub>H</sub>) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 05 00 01 B9 0B

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 05                  | Device status register 1           |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | B9 0B                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 30 98 AD EE

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 30 98                  | Device status register 1               |
| Error check [H]          | AD EE                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of device status register 1:

3098<sub>H</sub> → Convert into binary number: 0011000010011000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| EMGS   | SFTY   | PWR    | SV     | PSFL   | ALMH   | ALML  | ABER  | BKRL  | -     | STP   | HEND  | PEND  | CEND  | CLBS  | -     |
| 0      | 0      | 1      | 1      | 0      | 0      | 0     | 0     | 1     | 0     | 0     | 1     | 1     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.13 Controller Status Signal Reading 2 (DSS2)

#### [1] Function

This bit reads the internal status of the controller.

For status details, refer to [4.3.2 [13] Data of device status register 2].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 06                  | Device status register 2                           |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9006 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Status 2               | Status 2 [Hex]                                     |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the device status (Address 9006<sub>H</sub>) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 06 00 01 49 0B

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 06                  | Device status register 2           |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 49 0B                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 80 00 D9 84

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 80 00                  | Device status register 2               |
| Error check [H]          | D9 84                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of device status register 2:

8000<sub>H</sub> → Convert into binary number: 1000000000000000<sub>b</sub>

| Bit15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| ENBS  | -      | LOAD   | TRQS   | MODS   | TEAC   | JOG+  | JOG-  | PE7   | PE6   | PE5   | PE4   | PE3   | PE2   | PE1   | PE0   |
| 1     | 0      | 0      | 0      | 0      | 0      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.14 Controller Status Signal Reading 3 (DSSE)

#### [1] Function

This bit reads internal status (expansion device) of the controller.

For status details, refer to [4.3.2 [14] Data of expansion device status register].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 9007                   | Expansion device status register                   |
| Number of registers [H] | 2                                         | 0001                   | Reading address 9007 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Expansion status       | Expansion status [Hex]                             |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the expansion device status (Address 9007<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 07 00 01 18 CB

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 07                  | Expansion device status register   |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 18 CB                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 33 C2 2D 25

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 33 C2                  | Expansion device status register       |
| Error check [H]          | 2D 25                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of expansion device status register 2:

33C2<sub>H</sub> → Convert into binary number: 0011001111000010<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| EMGP   | MPUV   | RMDS   | -      | GHMS   | PUSH   | PSNS  | PMSS  | -     | -     | MOVE  | -     | -     | -     | -     | -     |
| 0      | 0      | 1      | 1      | 0      | 0      | 1     | 1     | 1     | 1     | 0     | 0     | 0     | 0     | 1     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.15 Controller Status Signal Reading 4 (STAT)

#### [1] Function

This bit reads the internal operation status of the controller.

For status details, refer to [4.3.2 [15] Data of system status registers].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                  |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                          |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]       | 1                                         | 03                     | Register reading code                                    |
| Start address [H]       | 2                                         | 90 08                  | System status register                                   |
| Number of registers [H] | 2                                         | 00 02                  | Reading addresses 9008 <sub>H</sub> to 9009 <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                          |
| End                     | -                                         | None                   | Silent interval                                          |
| Total number of bytes   | 8                                         | -                      |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                      |
| Data [H]                 | 4                                         | System status          | System status [Hex]                                |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 9                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the system status (Address 9008<sub>H</sub> to 9009<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 08 00 02 68 C9

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 08                  | System status register             |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | 68 C9                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 88 80 19 DA 13

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 00 88 80 19            | System status register                  |
| Error check [H]          | DA 25                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

Contents of system status register:

0088 8019<sub>H</sub> → Convert into binary number: 0000000010001000 1000000000011001<sub>b</sub>

| Bit 31 | Bit 30 | Bit 29 | Bit 28 | Bit 27 | Bit 26 | Bit 25 | Bit 24 | Bit 23 | Bit 22 | Bit 21 | Bit 20 | Bit 19 | Bit 18 | Bit 17 | Bit 16 |
|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| BATL   | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | ASOF   | AEEP   |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 1      | 0      | 0      | 0      | 1      | 0      | 0      | 0      |
| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9  | Bit 8  | Bit 7  | Bit 6  | Bit 5  | Bit 4  | Bit 3  | Bit 2  | Bit 1  | Bit 0  |
| -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | RMDS   | HEND   | SV     | SON    | MPOW   |
| 1      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 1      | 1      | 0      | 0      | 1      |

Note If the response example is simply an example and will vary depending on various conditions.



### 5.3.16 Current Speed Reading (VNOW)

#### [1] Function

The monitored data of actual motor speed is read. The speed may be positive or negative depending on the moving direction of the actuator.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                  |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                          |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]       | 1                                         | 03                     | Register reading code                                    |
| Start address [H]       | 2                                         | 90 0A                  | Current speed monitor                                    |
| Number of registers [H] | 2                                         | 00 02                  | Reading addresses 900A <sub>H</sub> to 900B <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                          |
| End                     | -                                         | None                   | Silent interval                                          |
| Total number of bytes   | 8                                         | -                      |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                       | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-----------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                       | -                                         | None                   | Silent interval                                    |
| Slave address [H]           | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]           | 1                                         | 03                     | Register reading code                              |
| Number of data bytes<br>[H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                      |
| Data [H]                    | 4                                         | Current speed          | Current speed [Hex]<br>The unit is 0.01 mm/s.      |
| Error check [H]             | 2                                         | CRC (16 bits)          |                                                    |
| End                         | -                                         | None                   | Silent interval                                    |
| Total number of bytes       | 9                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the current speed monitor (from address 900A<sub>H</sub> to 900B<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 0A 00 02 C9 09

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 0A                  | Current speed monitor              |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | C9 09                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 07 C8 F9 95

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 00 00 07 C8            | Current speed monitor                   |
| Error check [H]          | F9 95                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

Example 1 The current speed is "000007C8<sub>H</sub>" → Convert into decimal number → 1992 (× 0.01mm/s)

Therefore, the current speed monitor is 19.92mm/s

Example 2 When the current speed reading is "FFFFF070<sub>H</sub>" (moving in the direction opposite to the example above)

FFFFFFFF<sub>H</sub> - FFFFF070<sub>H</sub> + 1 (make sure to add 1) = F90<sub>H</sub>

Convert into decimal number → 3984 (× 0.01mm/s)

Therefore, the current speed is 39.84mm/s

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.17 Current Ampere Reading (CNOW)

#### [1] Function

This bit reads the monitor data of the motor current (torque current command value).

The unit is [mA].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                  |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                          |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]       | 1                                         | 03                     | Register reading code                                    |
| Start address [H]       | 2                                         | 90 0C                  | Current ampere monitor                                   |
| Number of registers [H] | 2                                         | 00 02                  | Reading addresses 900C <sub>H</sub> to 900D <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                          |
| End                     | -                                         | None                   | Silent interval                                          |
| Total number of bytes   | 8                                         | -                      |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data   | Remarks                                            |
|--------------------------|-------------------------------------------|--------------------------|----------------------------------------------------|
| Start                    | -                                         | None                     | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary                | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                       | Register reading code                              |
| Number of data bytes [H] | 1                                         | 04                       | 4 bytes = Reading 2 registers                      |
| Data [H]                 | 4                                         | Motor current<br>monitor | Motor current monitor [Hex]<br>The unit is [mA]    |
| Error check [H]          | 2                                         | CRC (16 bits)            |                                                    |
| End                      | -                                         | None                     | Silent interval                                    |
| Total number of bytes    | 9                                         | -                        |                                                    |

## [4] Query sample

A sample query that read the current ampere monitor (Address 900C<sub>H</sub> to 900D<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 0C 00 02 29 08

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 0C                  | Current ampere monitor             |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | C9 09                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 02 0D 3A 96

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 00 00 02 0D            | Motor current monitor                   |
| Error check [H]          | 3A 96                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

The monitor value is "0000020D<sub>H</sub>" → Convert into decimal number → 525

Therefore, the current ampere monitor value is 525mA.

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.18 Deviation Reading (DEVI)

#### [1] Function

This bit reads the deviation over a 1ms period between the position command value and the feedback value (actual position).

The unit is [pulse].

The number of pulses per one motor revolution in mechanical angle varies depending on the encoder used.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                  |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                          |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]       | 1                                         | 03                     | Register reading code                                    |
| Start address [H]       | 2                                         | 90 0E                  | Deviation monitor                                        |
| Number of registers [H] | 2                                         | 00 02                  | Reading addresses 900E <sub>H</sub> to 900F <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                          |
| End                     | -                                         | None                   | Silent interval                                          |
| Total number of bytes   | 8                                         | -                      |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                      |
| Data [H]                 | 4                                         | Deviation monitor      | Deviation monitor [Hex]<br>The unit is [pulse]     |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 9                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the deviation monitor (Address 900E<sub>H</sub> to 900F<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 0E 00 02 88 C8

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 0E                  | Deviation monitor                  |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | 88 C8                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 00 03 BA 32

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 00 00 00 03            | Deviation monitor                       |
| Error check [H]          | 3A 96                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

The monitor value is "00000003<sub>H</sub>" → Convert into decimal number → 3

Therefore, the deviation monitor value is 3 pulse

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.19 Total Time after Power On Reading (STIM)

#### [1] Function

This bit reads the total time since the controller power was turned on. The unit is [ms].

The timer value is not cleared by software reset.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                  |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                          |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )       |
| Function code [H]       | 1                                         | 03                     | Register reading code                                    |
| Start address [H]       | 2                                         | 90 10                  | System timer                                             |
| Number of registers [H] | 2                                         | 00 02                  | Reading addresses 9010 <sub>H</sub> to 9011 <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                          |
| End                     | -                                         | None                   | Silent interval                                          |
| Total number of bytes   | 8                                         | -                      |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                      |
| Data [H]                 | 4                                         | System timer           | System timer [Hex]<br>The unit is [ms]             |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 9                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the system timer value (Address 9010<sub>H</sub> to 9011<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 10 00 02 E8 CE

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 10                  | System timer                       |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | 8E CE                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 F0 27 61 20 18

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 00 F0 27 61            | System timer                            |
| Error check [H]          | 20 18                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

The system timer is "00F02761<sub>H</sub>" → Convert into decimal number → 15738721ms

The total time since the controller power was turned on is 15738.721s.

Note If the response example is simply an example and will vary depending on various conditions.



### 5.3.20 Special Input Port Input Signal Status Reading (SIPM)

#### [1] Function

This bit reads the status of input ports other than the normal input port.

For status details, refer to [4.3.2 [16] Data of special input port monitor registers].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 12                  | Special input port monitor                         |
| Number of registers [H] | 2                                         | 00 01                  | Reading addresses 9012 <sub>H</sub>                |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data        | Remarks                                            |
|--------------------------|-------------------------------------------|-------------------------------|----------------------------------------------------|
| Start                    | -                                         | None                          | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary                     | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                            | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                            | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Special input port<br>monitor | Refer to the list in [4.3.2 [16]]                  |
| Error check [H]          | 2                                         | CRC (16 bits)                 |                                                    |
| End                      | -                                         | None                          | Silent interval                                    |
| Total number of bytes    | 7                                         | -                             |                                                    |

## [4] Query sample

A sample query that reads the special input port (Address 9012<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 12 00 01 09 0F

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 12                  | Special input port                 |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 09 0F                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 03 00 B8 B4

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 03 00                  | Special input port monitor             |
| Error check [H]          | B8 B4                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of special input port monitor:

0300<sub>H</sub> → Convert into binary number: 0000001100000000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | NP     | -      | PP     | -      | -      | -     | MDSW  | -     | -     | -     | BLCT  | HMCK  | OT    | CREP  | LS    |
| 0      | 0      | 0      | 0      | 0      | 0      | 1     | 1     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.21 Zone Output Signal Status Reading (ZONS)

#### [1] Function

This bit reads the status of zone.

For status details, refer to [4.3.2 [17] Data of zone status registers].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 13                  | Zone status query                                  |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9013 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Zone status            | Refer to [4.3.2 [17]]                              |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the zone status register (Address 9013<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 13 00 01 58 CF

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 13                  | Zone status query                  |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 58 CF                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 03 F8 45

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 00 03                  | Zone status                            |
| Error check [H]          | F8 45                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of zone status register:

0003<sub>H</sub> → Convert into binary number: 0000000000000011<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | LS2    | LS1    | LS0    | -      | -      | -     | ZP    | -     | -     | -     | -     | -     | -     | Z2    | Z1    |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 1     | 1     |

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.22 Positioning Completed Position Number Reading (POSS) Exected Program Number Register (Servo Press Type) (POSS)

#### [1] Function

This bit reads the position complete number or exected program number.

For status details, refer to [4.3.2 [18] Data of position number status register].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 14                  | Position number<br>/ Exected program number status |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9014 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data                                | Remarks                                            |
|--------------------------|-------------------------------------------|-------------------------------------------------------|----------------------------------------------------|
| Start                    | -                                         | None                                                  | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary                                             | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                                                    | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                                                    | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Position number<br>/ Exected program<br>number status | Refer to the list in [4.3.2 [18]]                  |
| Error check [H]          | 2                                         | CRC (16 bits)                                         |                                                    |
| End                      | -                                         | None                                                  | Silent interval                                    |
| Total number of bytes    | 7                                         | -                                                     |                                                    |

## [4] Query sample

A sample query that reads the position complete (Address 9014<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 14 00 01 E9 0E

| Field                   | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|------------------------|----------------------------------------------------|
| Start                   | -                      | Silent interval                                    |
| Slave address [H]       | 01                     |                                                    |
| Function code [H]       | 03                     |                                                    |
| Start address [H]       | 90 14                  | Position number<br>/ Exected program number status |
| Number of registers [H] | 00 01                  | 1 register                                         |
| Error check [H]         | E9 0F                  | In accordance with CRC calculation                 |
| End                     | -                      | Silent interval                                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 03 B8 44

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 00 03                  | Completed position Number              |
| Error check [H]          | B8 44                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of Data of position number status register:

0003<sub>H</sub> → Convert into binary number: 0000000000000011<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | -      | -      | -      | -      | -      | PM512 | PM256 | PM128 | PM64  | PM32  | PM16  | PM8   | PM4   | PM2   | PM1   |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 1     | 1     |

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.23 Controller Status Signal Reading 5 (SSSE)

#### [1] Function

This query reads the internal operation status of the controller.

For status details, refer to [4.3.2 [19] Data of expansion system status register].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 15                  | Expansion system status register                   |
| Number of registers [H] | 2                                         | 00 01                  | Reading addresses 9015 <sub>H</sub>                |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data     | Remarks                                            |
|--------------------------|-------------------------------------------|----------------------------|----------------------------------------------------|
| Start                    | -                                         | None                       | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary                  | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                         | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                         | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Expansion system<br>status | Refer to the list in [4.3.2 [19]]                  |
| Error check [H]          | 2                                         | CRC (16 bits)              |                                                    |
| End                      | -                                         | None                       | Silent interval                                    |
| Total number of bytes    | 7                                         | -                          |                                                    |

## [4] Query sample

A sample query that reads the expansion system status register (Address 9015<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 15 00 01 B8 CE

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 15                  | Expansion system status register   |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | B8 CE                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 01 00 B9 D4

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 01 00                  | Expansion system status                |
| Error check [H]          | B9 D4                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of expansion system status register:

0100<sub>H</sub> → Convert into binary number: 0000000100000000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | -      | -      | -      | ALMC   | -      | -     | RTC   | -     | -     | -     | -     | -     | -     | -     | -     |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 1     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.



### 5.3.24 Current Load Reading...SCON-CA/CB, PCON-CBP only

#### [1] Function

The monitored data of load cell measurement (push force) is read.

The unit is 0.01N.

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                |
|-------------------------|-------------------------------------------|------------------------|--------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                        |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )     |
| Function code [H]       | 1                                         | 03                     | Register reading code                                  |
| Start address [H]       | 2                                         | 90 1E                  | Load monitor                                           |
| Number of registers [H] | 2                                         | 00 02                  | Reading address 901E <sub>H</sub> to 901F <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                        |
| End                     | -                                         | None                   | Silent interval                                        |
| Total number of bytes   | 8                                         | -                      |                                                        |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data   | Remarks                                            |
|--------------------------|-------------------------------------------|--------------------------|----------------------------------------------------|
| Start                    | -                                         | None                     | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary                | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                       | Register reading code                              |
| Number of data bytes [H] | 1                                         | 04                       | 4 bytes = Reading 2 registers                      |
| Data [H]                 | 4                                         | Load cell<br>measurement | Current push force [N]<br>Unit: 0.01N              |
| Error check [H]          | 2                                         | CRC (16 bits)            |                                                    |
| End                      | -                                         | None                     | Silent interval                                    |
| Total number of bytes    | 9                                         |                          |                                                    |

## [4] Query sample

A sample query that reads the load cell current measurement (Address 901E<sub>H</sub> to 901F<sub>H</sub>) on the load cell connected to controller axis 0.

- Query (silent intervals are inserted before and after the query)

01 03 90 0A 00 02 89 0D

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 1E                  | Load monitor                       |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | 89 0D                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 03 E4 FA 88

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 00 00 03 E4            | Current push force [N]                  |
| Error check [H]          | B9 D4                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

Example 1) The current measurement on the load cell is

000003E4<sub>H</sub> → Convert into decimal number → 996 (× 0.01N) → 9.96N

The current push force is 9.96N

Example 2) If the current measurement reading on the load cell is "FFFFFF35<sub>H</sub>" (tensile state <sup>(Note 1)</sup>),

FFFFFFF<sub>H</sub> - FFFFFFF35<sub>H</sub> + 1 <sup>(\*)</sup> → Convert into decimal number → 203 (× 0.01N) → 2.03

Therefore, the current tensile force <sup>(Note 1)</sup> is 2.03N.

Note 1 The pulling operation is applicable only for the pulse pressing.

\*1 As it is a complement of 2, make sure to add "1".

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.25 Overload Level Monitor Reading (OLLV)...SCON-CA/CAL/CB Only

#### [1] Function

Current load level to the motor is read in ratio.

The unit is 1%.

For status details, refer to [4.3.2 [20] Overload level monitors].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                |
|-------------------------|-------------------------------------------|------------------------|--------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                        |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )     |
| Function code [H]       | 1                                         | 03                     | Register reading code                                  |
| Start address [H]       | 2                                         | 90 20                  | Overload level monitor                                 |
| Number of registers [H] | 2                                         | 00 02                  | Reading address 9020 <sub>H</sub> to 9021 <sub>H</sub> |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                        |
| End                     | -                                         | None                   | Silent interval                                        |
| Total number of bytes   | 8                                         | -                      |                                                        |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 04                     | 4 bytes = Reading 2 registers                      |
| Data [H]                 | 4                                         | Overload level         | Unit: 1%                                           |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 9                                         | -                      |                                                    |

## [4] Query sample

A sample query that reads the overload level (Address 9020<sub>H</sub> to 9021<sub>H</sub>) on the actuator connected to controller axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 20 00 02 E8 C1

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 20                  | Load monitor                       |
| Number of registers [H] | 00 02                  | 2 registers                        |
| Error check [H]         | E8 C1                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 00 46 7B C1

| Field                    | RTU mode<br>8-bit data | Remarks                                 |
|--------------------------|------------------------|-----------------------------------------|
| Start                    | -                      | Silent interval                         |
| Slave address [H]        | 01                     |                                         |
| Function code [H]        | 03                     |                                         |
| Number of data bytes [H] | 04                     | 04 <sub>H</sub> → 4 bytes = 2 registers |
| Data [H]                 | 00 00 00 46            | Current Overload Level [%]              |
| Error check [H]          | 7B C1                  | In accordance with CRC calculation      |
| End                      | -                      | Silent interval                         |

Example 1) The current overload level is

0000046<sub>H</sub> → Convert into decimal number → 70

The current overload level is 70%.

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.26 Press Program Alarm Code Reading (ALMP)...Servo Press Type Only

#### [1] Function

Codes to show the program condition or alarm status are read.

“00H” is output in the normal condition.

For alarm code details, refer to the [instruction manual of servo press type controller].

Also, for the register details, refer to [4.3.2 [21] Press program alarm codes].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 22                  | Press program alarm codes                          |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9022 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Alarm code             | Alarm code [HEX]                                   |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

Here shows an example to read an alarm code (Address 9022<sub>H</sub>) of a pressing program occurred in the controller on Axis No. 0.

- Query (silent intervals are inserted before and after the query)

01 03 90 22 00 01 09 00

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 22                  | Press program alarm codes          |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 09 00                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 03 FB 45

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 00 03                  | Current generated alarm code           |
| Error check [H]          | FB 45                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Current generated alarm code is 0003<sub>H</sub>

0003<sub>H</sub> → It is the Press program alarm codes 03 "Program startup at axis operation".

Check in [Troubleshooting pages in Servo-Pressing Feature Instruction Manual (ME0345) for SCON-CB Controller] for the details of the pressing program alarm codes.

**Note** If the response example is simply an example and will vary depending on various conditions.

### 5.3.27 Alarm Generated Press Program No. Reading (ALMP)...Servo Press Type Only

#### [1] Function

The press program number that an alarm is issued is read.

00H is output in the normal condition.

For the register details, refer to [4.3.2 [22] Alarm generated press program No.].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 9023                   | Alarm generated program No.                        |
| Number of registers [H] | 2                                         | 0001                   | Reading address 9023 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                    | -                                         | None                   | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                     | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                     | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Program No.            | Alarm generated program No. [HEX]                  |
| Error check [H]          | 2                                         | CRC (16 bits)          |                                                    |
| End                      | -                                         | None                   | Silent interval                                    |
| Total number of bytes    | 7                                         | -                      |                                                    |

## [4] Query sample

Here shows an example to read the pressing program number occurred in the pressing program alarm (Address 9023<sub>H</sub>) in the controller on Axis No. 0.

- Query (silent intervals are inserted before and after the query)

01 03 90 23 00 01 58 C0

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 23                  | Alarm generated program No.        |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | 58 C0                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 05 78 47

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 00 05                  | Alarm generated program No.            |
| Error check [H]          | 78 47                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

The pressing program number occurred in the pressing program alarm is 0005<sub>H</sub> → No. 5

Note If the response example is simply an example and will vary depending on various conditions.



### 5.3.28 Press Program Status Register Reading (PPST)...Servo Press Type Only

#### [1] Function

Internal operation condition in the press program is read.

For the register details, refer to [4.3.2 [23] Press program status registers].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 24                  | Press program status register                      |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9024 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data           | Remarks                                            |
|--------------------------|-------------------------------------------|----------------------------------|----------------------------------------------------|
| Start                    | -                                         | None                             | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary                        | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                               | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                               | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Press program<br>status register | Press program status [HEX]                         |
| Error check [H]          | 2                                         | CRC (16 bits)                    |                                                    |
| End                      | -                                         | None                             | Silent interval                                    |
| Total number of bytes    | 7                                         | -                                |                                                    |

## [4] Query sample

A sample query that reads the press program status (Address 9024<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 24 00 01 E9 01

| Field                   | RTU mode<br>8-bit data | Remarks                            |
|-------------------------|------------------------|------------------------------------|
| Start                   | -                      | Silent interval                    |
| Slave address [H]       | 01                     |                                    |
| Function code [H]       | 03                     |                                    |
| Start address [H]       | 90 24                  | Press program status register      |
| Number of registers [H] | 00 01                  | 1 register                         |
| Error check [H]         | E9 01                  | In accordance with CRC calculation |
| End                     | -                      | Silent interval                    |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 01 02 38 15

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 01 02                  | Press program status                   |
| Error check [H]          | FB 45                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of press program status:

0102<sub>H</sub> → Convert into binary number: 0000000100000010<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | WAIT   | RTRN   | DCMP   | PSTP   | PRSS   | SERC  | APRC  | -     | -     | -     | MPHM  | PALM  | PCMP  | PRUN  | PORG  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 1     | 0     | 0     | 0     | 0     | 0     | 0     | 1     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 5.3.29 Press Program Judgement Status Register Reading (PPJD)...Servo Press Type Only

#### [1] Function

Judgement condition in the press program is read.

For the register details, refer to [4.3.2 [24] Press program judgement status register].

#### [2] Query format

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                                         | 03                     | Register reading code                              |
| Start address [H]       | 2                                         | 90 25                  | Press program judgement status register            |
| Number of registers [H] | 2                                         | 00 01                  | Reading address 9025 <sub>H</sub>                  |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                    |
| End                     | -                                         | None                   | Silent interval                                    |
| Total number of bytes   | 8                                         | -                      |                                                    |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data         | Remarks                                            |
|--------------------------|-------------------------------------------|--------------------------------|----------------------------------------------------|
| Start                    | -                                         | None                           | Silent interval                                    |
| Slave address [H]        | 1                                         | Arbitrary                      | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                                         | 03                             | Register reading code                              |
| Number of data bytes [H] | 1                                         | 02                             | 2 bytes = Reading 1 register                       |
| Data [H]                 | 2                                         | Press program judgement status | Press program judgement status [HEX]               |
| Error check [H]          | 2                                         | CRC (16 bits)                  |                                                    |
| End                      | -                                         | None                           | Silent interval                                    |
| Total number of bytes    | 7                                         | -                              |                                                    |

## [4] Query sample

A sample query that reads the press program judgement status (Address 9025<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 25 00 01 B8 C1

| Field                   | RTU mode<br>8-bit data | Remarks                                 |
|-------------------------|------------------------|-----------------------------------------|
| Start                   | -                      | Silent interval                         |
| Slave address [H]       | 01                     |                                         |
| Function code [H]       | 03                     |                                         |
| Start address [H]       | 90 25                  | Press program judgement status register |
| Number of registers [H] | 00 01                  | 1 register                              |
| Error check [H]         | B8 C1                  | In accordance with CRC calculation      |
| End                     | -                      | Silent interval                         |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 01 05 79 D7

| Field                    | RTU mode<br>8-bit data | Remarks                                |
|--------------------------|------------------------|----------------------------------------|
| Start                    | -                      | Silent interval                        |
| Slave address [H]        | 01                     |                                        |
| Function code [H]        | 03                     |                                        |
| Number of data bytes [H] | 02                     | 02 <sub>H</sub> → 2 bytes = 1 register |
| Data [H]                 | 01 05                  | Press program judgement status         |
| Error check [H]          | 79 D7                  | In accordance with CRC calculation     |
| End                      | -                      | Silent interval                        |

Contents of press program judgement status:

0105<sub>H</sub> → Convert into binary number: 0000000100000101<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | -      | -      | -      | -      | -      | -     | -     | -     | -     | LJNG  | LJOK  | PJNG  | PJOK  | JDNG  | JDOK  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 1     | 0     | 0     | 0     | 0     | 1     | 0     | 1     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

## 5.4 Operation Commands and Data Rewrite (Function code 05)

### 5.4.1 Writing to Coil

#### [1] Function

Change (write) the status of DO (Discrete Output) of a slave to either ON or OFF.

In case of broadcast transmission, the coils at the specified address of all slaves are rewritten.

#### [2] Start address list

| Address [H] | Symbol | Function                               |
|-------------|--------|----------------------------------------|
| 0401        | SFTY   | Safety speed command                   |
| 0403        | SON    | Servo ON command                       |
| 0407        | ALRS   | Alarm reset command                    |
| 0408        | BKRL   | Brake forced-release command           |
| 040A        | STP    | Pause command                          |
| 040B        | HOME   | Home return command                    |
| 040C        | CSTR   | Positioning start command              |
| 0411        | JISL   | Jog/inch switching                     |
| 0414        | MOD    | Teaching mode command                  |
| 0415        | TEAC   | Position data load command             |
| 0416        | JOG+   | Jog+ command                           |
| 0417        | JOG-   | Jog- command                           |
| 0418        | ST7    | Start position 7 (solenoid valve mode) |
| 0419        | ST6    | Start position 6 (solenoid valve mode) |
| 041A        | ST5    | Start position 5 (solenoid valve mode) |
| 041B        | ST4    | Start position 4 (solenoid valve mode) |
| 041C        | ST3    | Start position 3 (solenoid valve mode) |
| 041D        | ST2    | Start position 2 (solenoid valve mode) |
| 041E        | ST1    | Start position 1 (solenoid valve mode) |
| 041F        | ST0    | Start position 0 (solenoid valve mode) |
| 0426        | CLBR   | Load cell calibration command          |
| 0427        | PMSL   | PIO/Modbus switching specification     |
| 042C        | STOP   | Deceleration stop                      |
| 049B        | ENMV   | Axis operation permission              |
| 049C        | PHOM   | Program home return movement           |
| 049D        | SSTP   | Search stop                            |
| 049E        | FPST   | Program compulsoly finish              |
| 049F        | PSTR   | Program start                          |

### 5.4.2 Safety Speed Enable/Disable Switching (SFTY)

#### [1] Function

This query “enables/disables” the speed specified by user parameter No. 35, “Safety speed.”  
Enabling the safety speed in the MANU mode will limit the speeds of all movement commands.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 01                  | Safety speed command                                                                              |
| Changed data [H]      | 2                                         | Arbitrary              | Safety speed enabled: FF00 <sub>H</sub><br>Safety speed disabled: 0000 <sub>H</sub>               |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.  
If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) A sample query that “enables” the safety speed of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

Safety speed enabled: 01 05 04 01 FF 00 DC CA

| Field             | RTU mode<br>8-bit data | Remarks                                 |
|-------------------|------------------------|-----------------------------------------|
| Start             | -                      | Silent interval                         |
| Slave address [H] | 01                     |                                         |
| Function code [H] | 05                     |                                         |
| Start address [H] | 04 01                  | Safety speed command                    |
| Changed data [H]  | FF 00                  | Safety speed enabled: FF00 <sub>H</sub> |
| Error check [H]   | B8 CE                  | In accordance with CRC calculation      |
| End               | -                      | Silent interval                         |

(2) A sample query that “disables” the safety speed of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

Safety speed disabled: 01 05 04 01 00 00 9D 3A

| Field             | RTU mode<br>8-bit data | Remarks                                  |
|-------------------|------------------------|------------------------------------------|
| Start             | -                      | Silent interval                          |
| Slave address [H] | 01                     |                                          |
| Function code [H] | 05                     |                                          |
| Start address [H] | 04 01                  | Safety speed command                     |
| Changed data [H]  | 00 00                  | Safety speed disabled: 0000 <sub>H</sub> |
| Error check [H]   | 9D 3A                  | In accordance with CRC calculation       |
| End               | -                      | Silent interval                          |

If the change is successful, the response message will be the same as the query.

### 5.4.3 Servo ON/OFF (SON)

#### [1] Function

Control ON/OFF of the servo.

When “Servo ON” is specified by the new data, the servo will turn ON after elapse of the manufacturer parameter “Servo ON delay time”(\*1). However, the following conditions must be satisfied:

#### [Condition]

- The EMG status bit (bit 15) in device status register 1 (9005<sub>H</sub>) is “0”.
- The major failure status bit (bit 10) in device status register 1 (9005<sub>H</sub>) is “0”.
- The enable status bit (bit 15) in device status register 2 (9006<sub>H</sub>) is “1”.
- The auto servo OFF status bit (bit 17) in the system status register (9008<sub>H</sub> to 9009<sub>H</sub>) is “0”.

\*1 “Servo-On Latency” is a parameter for the manufacturer's adjustment.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 03                  | Servo ON/OFF command                                                                              |
| Changed data [H]      | 2                                         | Arbitrary              | Servo ON: FF00 <sub>H</sub><br>Servo OFF: 0000 <sub>H</sub>                                       |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

\* If a teaching tool is taken off after the servo is turned off on the teaching tool before having a communication with the host, servo-on/off with communication to the host will not be available.

In order to recover the condition, either the power on the controller should be rebooted or the connection to SIO Port is to be disconnected while the servo is turned on.

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.



## [4] Query sample

(1) A sample query that turns on the “servo ON” of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 03 FF 00 7D 0A

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 03                  | Servo ON/OFF command               |
| Changed data [H]  | FF 00                  | Servo ON                           |
| Error check [H]   | 7D 0A                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

(2) A sample query that turns on the “servo OFF” of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 03 00 00 3C FA

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 03                  | Servo ON/OFF command               |
| Changed data [H]  | 00 00                  | Servo OFF                          |
| Error check [H]   | 3C FA                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

If the change is successful, the response message will be the same as the query.

### 5.4.4 Alarm Reset (ALRS)

#### [1] Function

When the alarm reset edge is turned on (the data is first set to FF00<sub>H</sub> and then changed to 0000<sub>H</sub>), alarms will be reset.

If any alarm cause has not been removed, the same alarm will be generated again. If the alarm reset edge is turned on while the actuator is paused, the remaining travel will be cancelled.

When alarms are reset, make sure to write changed data of 0000<sub>H</sub> to restore the normal status.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 07                  | Alarm reset command                                                                               |
| Changed data [H]      | 2                                         | Arbitrary              | Alarm reset command ON: FF00 <sub>H</sub><br>Alarm reset command OFF: 0000 <sub>H</sub>           |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that resets the alarms of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 07 FF 00 3C CB (Execute alarm reset)

Second time: 01 05 04 07 00 00 7D 3B (Restore normal status)

| Field             | RTU mode<br>8-bit data                  | Remarks                                                                      |
|-------------------|-----------------------------------------|------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                              |
| Slave address [H] | 01                                      | Axis No.1                                                                    |
| Function code [H] | 05                                      |                                                                              |
| Start address [H] | 04 07                                   | Alarm reset command                                                          |
| Changed data [H]  | First time: FF 00<br>Swcond time: 00 00 | Write 0000 <sub>H</sub> after resetting alarms to restore the normal status. |
| Error check [H]   | First time: 3C CB<br>Swcond time: 7D 3B | In accordance with CRC calculation                                           |
| End               | -                                       | Silent interval                                                              |

If the change is successful, the response message will be the same as the query.

### 5.4.5 Brake Forced Release (BKRL)

#### [1] Function

Brake control is linked to servo ON/OFF. The brake can be forcefully released even when the servo is ON.



#### Caution

- Once it gets unnecessary for brake compulsory release, make sure to have 0000<sub>H</sub> written with the changed data and set it back to the normal condition. The brake would not work while the servo is off if the brake compulsory release is kept on. If it is a condition that the unit is installed vertically, a workpiece would drop and may cause a risk of injury or workpiece being damaged.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 0408                   | Break forced release command                                                                      |
| Changed data [H]      | 2                                         | Arbitrary              | Break forced release ON: FF00 <sub>H</sub><br>Break forced release OFF: 0000 <sub>H</sub>         |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that brake forced release of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 08 FF 00 0C C8 (Execute break forced release)

Second time: 01 05 04 08 00 00 4D 38 (Restore normal status)

| Field             | RTU mode<br>8-bit data | Remarks                                                                                                                                               |
|-------------------|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Start             | -                      | Silent interval                                                                                                                                       |
| Slave address [H] | 01                     |                                                                                                                                                       |
| Function code [H] | 05                     |                                                                                                                                                       |
| Start address [H] | 04 08                  | Break forced release command                                                                                                                          |
| Changed data [H]  | FF 00                  | First time: FF00<br>Second time: 0000<br>(After the brake compulsory release,<br>write 0000 <sub>H</sub> and set it back to the normal<br>condition.) |
| Error check [H]   | 0C C8                  | First time: 0CC8<br>(In accordance with CRC calculation)<br>Second time: 4D38<br>(In accordance with CRC calculation)                                 |
| End               | -                      | Silent interval                                                                                                                                       |

If the change is successful, the response message will be the same as the query.

### 5.4.6 Pause (STP)

#### [1] Function

If the pause command is transmitted during movement, the actuator decelerates and stops. If the status is set back to normal again, the actuator resumes moving for the remaining distance. As long as the pause command is being transmitted, all motor movement is inhibited. If the alarm reset command bit is set while the actuator is paused, the remaining travel will be cancelled.

If this bit is set during home return, the movement command will be held if the actuator has not yet reversed after contacting the mechanical end. If the actuator has already reversed after contacting the mechanical end, home return will be repeated from the beginning.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 040A                   | Pause command                                                                                     |
| Changed data [H]      | 2                                         | Arbitrary              | Pause command ON: FF00 <sub>H</sub><br>Pause command OFF: 0000 <sub>H</sub>                       |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that pauses a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 0A FF 00 AD 08 (Pause command)

01 05 04 0A 00 00 EC F8 (Pause release)

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 0A                  | Pause command                      |
| Changed data [H]  | FF 00                  | Pause command ON                   |
| Error check [H]   | AD 08                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

If the change is successful, the response message will be the same as the query.

### 5.4.7 Home Return (HOME)

#### [1] Function

Home return operation will start if a rising edge in the home return command signal is detected (the data is first set to 0000<sub>H</sub> and then changed to FF00<sub>H</sub>). Upon home return completion, the HEND bit will become “1”. This command can be input as many times as desired even after home return completion.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 040B                   | Home return command                                                                               |
| Changed data [H]      | 2                                         | Arbitrary              | Home return command ON: FF00 <sub>H</sub><br>Home return command OFF: 0000 <sub>H</sub>           |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

\* The servo must be ON before a home return command is issued.

If a teaching pendant is connected before the control establishes communication with the host, the servo is turned OFF, and then the teaching pendant is removed, the servo cannot be turned ON/OFF via commands received from omit the host.

In this case, restore the RC controller power, or make sure the SIO port connection is removed while the servo is ON.

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.



## [4] Query sample

A query example that executes home return operation of a controller of axis No. 0 is shown here.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 0B 00 00 BD 38 (Set normal status)

Second time: 01 05 04 0B FF 00 FC C8 (Execute home return)

| Field             | RTU mode<br>8-bit data                  | Remarks                                                                            |
|-------------------|-----------------------------------------|------------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                                    |
| Slave address [H] | 01                                      |                                                                                    |
| Function code [H] | 05                                      |                                                                                    |
| Start address [H] | 04 0A                                   | Home return                                                                        |
| Changed data [H]  | First time: 00 00<br>Second time: FF 00 | First time: 0000<br>Second time: FF00<br>* Send data twice to set the rising edge. |
| Error check [H]   | First time: BD 38<br>Second time: FC C8 | In accordance with CRC calculation                                                 |
| End               | -                                       | Silent interval                                                                    |

If the change is successful, the response message will be the same as the query.

### 5.4.8 Positioning Start Command (CSTR)

#### [1] Function

If the rising edge of the positioning start command is detected (the data is first set to 0000<sub>H</sub> and then changed to FF00<sub>H</sub>), the actuator will move to the position specified by the position number stored in the position number command register (POSR:0D03<sub>H</sub>). If nothing is done after the position start command (FF00<sub>H</sub> is read and no new data is written), a position complete will not be output even when the actuator enters the positioning band. Have 0000<sub>H</sub> written with the changed data, and turn the home-return command "off".

If this command is executed when home return has never been performed after the power was turned on (when the HEND bit is "0"), the actuator will perform home return and then start moving to the target position.

\* The target position, speed and all other operation parameters must be set in the position table (nonvolatile memory) of the controller in advance.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                             |
|-----------------------|-------------------------------------------|------------------------|-----------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                     |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified   |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                          |
| Start address [H]     | 2                                         | 040C                   | Positioning start command                                                                           |
| Changed data [H]      | 2                                         | Arbitrary              | Positioning start command ON: FF00 <sub>H</sub><br>Positioning start command OFF: 0000 <sub>H</sub> |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                     |
| End                   | -                                         | None                   | Silent interval                                                                                     |
| Total number of bytes | 8                                         | -                      |                                                                                                     |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that moves the actuator of a controller of axis No. 0 to the position specified by the position number stored in the position number command register (POSR: 0D03<sub>H</sub>) is shown below.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 0C FF 00 4D 09 (Move to the specified position)

Second time: 01 05 04 0C 00 00 0C F9 (Positioning start command OFF)

| Field             | RTU mode<br>8-bit data                  | Remarks                                                                                                                   |
|-------------------|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                                                                           |
| Slave address [H] | 01                                      |                                                                                                                           |
| Function code [H] | 05                                      |                                                                                                                           |
| Start address [H] | 04 0C                                   | Positioning start command                                                                                                 |
| Changed data [H]  | First time: FF 00<br>Second time: 00 00 | First time: FF00<br>Second time: 0000<br>* Once actuator operation has started,<br>turn the position start command "off". |
| Error check [H]   | First time: 40 09<br>Second time: 0CF9  | In accordance with CRC calculation                                                                                        |
| End               | -                                       | Silent interval                                                                                                           |

If the change is successful, the response message will be the same as the query.

### 5.4.9 Jog/Inch Switching (JISL)

#### [1] Function

This bit switches between jogging and inching. When the changed data is 0000<sub>H</sub>, the jog operation should be performed by operating JOG+ (Start address: 0416<sub>H</sub>) / JOG- (Start address: 0417<sub>H</sub>). When it is FF00<sub>H</sub>, the inching operation should be performed by operating JOG+ (Start address: 0416<sub>H</sub>) / JOG- (Start address: 0417<sub>H</sub>).

If this bit switches while the actuator is jogging, the actuator will decelerate to a stop.

If this bit switches while the actuator is inching, the inching movement will continue.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 0411                   | Jog/Inch Switching                                                                                |
| Changed data [H]      | 2                                         | Arbitrary              | Inching operation: FF00 <sub>H</sub><br>Jogging operation: 0000 <sub>H</sub>                      |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) A sample query that switches the operation of a controller of axis No. 0 to inching is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 11 FF 00 DD 0F

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 11                  | Jog/Inch Switching                 |
| Changed data [H]  | FF 00                  | Switch the inching operation       |
| Error check [H]   | 9C FF                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

(2) A sample query that switches the operation of a controller of axis No. 0 to jog is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 11 00 00 9C FF

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 11                  | Jog/Inch Switching                 |
| Changed data [H]  | 00 00                  | Switch the Jog operation           |
| Error check [H]   | DD 0F                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

If the change is successful, the response message will be the same as the query.

### 5.4.10 Teaching Mode Command (MOD)

#### [1] Function

This bit switches between the positioning mode and teaching mode.

It should be transmitted to the teaching mode once the changed data get into FF00<sub>H</sub> and should be transmitted to the positioning mode if into 0000<sub>H</sub>. However, it has to be under the following conditions.

[Condition]

- The CSTR bit (bit 3) in details of device controller register 1 (0D00<sub>H</sub>) is "0".
- The CSTR bit (bit 10) in details of device controller register 2 (0D01<sub>H</sub>) is "0".
- JOG+/JOG- bits (bit 8, 9) in details of device controller register 2 (0D01<sub>H</sub>) are both "0".
- ST# bits (bit 0 to 7) in details of device controller register 2 (0D01<sub>H</sub>) are all "0".
- Actuators are stopped (even Push operation is not being conducted)

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 14                  | Switch between the positioning mode<br>and the teaching mode.                                     |
| Changed data [H]      | 2                                         | Arbitrary              | Teaching mode: FF00 <sub>H</sub><br>Positioning mode: 0000 <sub>H</sub>                           |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) A sample query that switches the operation mode of a controller of axis No. 0 to teaching mode is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 14 FF 00 CD 0E

| Field             | RTU mode<br>8-bit data | Remarks                                                    |
|-------------------|------------------------|------------------------------------------------------------|
| Start             | -                      | Silent interval                                            |
| Slave address [H] | 01                     |                                                            |
| Function code [H] | 05                     |                                                            |
| Start address [H] | 04 14                  | Switch between the positioning mode and the teaching mode. |
| Changed data [H]  | FF 00                  | Switch the teaching mode                                   |
| Error check [H]   | CD 0E                  | In accordance with CRC calculation                         |
| End               | -                      | Silent interval                                            |

(2) A sample query that switches the operation mode of a controller of axis No. 0 to positioning mode is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 14 00 00 8C FE

| Field             | RTU mode<br>8-bit data | Remarks                                                    |
|-------------------|------------------------|------------------------------------------------------------|
| Start             | -                      | Silent interval                                            |
| Slave address [H] | 01                     |                                                            |
| Function code [H] | 05                     |                                                            |
| Start address [H] | 04 14                  | Switch between the positioning mode and the teaching mode. |
| Changed data [H]  | 00 00                  | Switch the positioning mode                                |
| Error check [H]   | 8C FE                  | In accordance with CRC calculation                         |
| End               | -                      | Silent interval                                            |

If the change is successful, the response message will be the same as the query.

### 5.4.11 Position Data Load Command (TEAC)

#### [1] Function

The current position is acquired by writing this command (write FF00<sub>H</sub>) when the teaching mode command (refer to [5.4.10]) is FF00<sub>H</sub> (teaching command).

The current position data will be written in the position number specified by the position number command register (Start address: 9800<sub>H</sub>) when the aforementioned condition was detected.

If other position data fields are empty, the default parameter values will be written at the same time in the empty fields other than the target position (positioning band INP, speed VCMD, acceleration/deceleration speed ACMD, and control flag CTLF).

After sending this command (write FF00<sub>H</sub>), keep the status as is for 20ms or longer.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 15                  | Position data load command                                                                        |
| Changed data [H]      | 2                                         | Arbitrary              | Position data load command<br>ON: FF00 <sub>H</sub><br>OFF: 0000 <sub>H</sub>                     |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.



## [4] Query sample

A sample query that acquires the current position when a controller of axis No. 0 is in the teaching mode is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 15 FF 00 9C CE

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 15                  | Position data load command         |
| Changed data [H]  | FF 00                  | Position data load ON              |
| Error check [H]   | 9C CE                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

If the change is successful, the response message will be the same as the query.



### Caution

- Alarm Code: 093 “Home-Return Incomplete PWRT Signal Detected” should be generated when this command (FF00<sub>H</sub> Writing) is detected continuously for 20ms or more while in the status of the home-return incomplete.

### 5.4.12 Jog+ Command (JOG+)

#### [1] Function

The actuator performs either jog or inching operation.

- If the jog+ command (changed data FF00<sub>H</sub>) is sent when the jog/inch switching command (refer to [5.4.9]) is set to 0000<sub>H</sub> (set to jog), the actuator will jog in the direction opposite home. The speed and acceleration/deceleration speed conform to the “PIO jog speed” set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.  
If the jog+ command (changed data 0000<sub>H</sub>) is sent or the jog- command (refer to [5.4.13], changed data FF00<sub>H</sub>) is sent while the actuator is moving jog, the actuator will decelerate to a stop.
- If the jog+ command rising edge is set (the data is first set to 0000<sub>H</sub> and changed to FF00<sub>H</sub>) while the jog/inch switching command (refer to [5.4.9]) is FF00<sub>H</sub> (set to inching), the actuator will inch in the direction opposite home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 “PIO jogging speed”, user parameter No. 48 “PIO inching distance”, and rated acceleration/deceleration speed, respectively.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 16                  | Jog+ command                                                                                      |
| Changed data [H]      | 2                                         | Arbitrary              | Jog+ command: FF00 <sub>H</sub><br>Command OFF: 0000 <sub>H</sub>                                 |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) Axis No. 0 should be operated in jog in the positive direction (opposite home position).

- Query (silent intervals are inserted before and after the query)

01 05 04 16 FF 00 6C CE

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 16                  | Jog+ command                       |
| Changed data [H]  | FF 00                  | Jog+ command ON                    |
| Error check [H]   | 6C CE                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

(2) Axis No. 0 should be operated in inching in the positive direction (opposite home position).

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 16 FF 00 6C CE (Perform inching movement)

Second time: 01 05 04 16 00 00 2D 3E (Command OFF)

| Field             | RTU mode<br>8-bit data                  | Remarks                            |
|-------------------|-----------------------------------------|------------------------------------|
| Start             | -                                       | Silent interval                    |
| Slave address [H] | 01                                      |                                    |
| Function code [H] | 05                                      |                                    |
| Start address [H] | 04 16                                   | Jog+ command                       |
| Changed data [H]  | FF 00                                   | Jog+ command ON                    |
| Error check [H]   | First time: 6C CE<br>Second time: 2D 3E | In accordance with CRC calculation |
| End               | -                                       | Silent interval                    |

If the change is successful, the response message will be the same as the query.

### 5.4.13 Jog- Command (JOG-)

#### [1] Function

The actuator performs either jog or inching operation.

- If the jog- command (changed data FF00<sub>H</sub>) is sent when the jog/inch switching command (refer to [5.4.9]) is set to 0000<sub>H</sub> (set to jog), the actuator will jog in the direction of home. The speed and acceleration/deceleration speed conform to the “PIO jog speed” set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.  
If the jog- command (changed data 0000<sub>H</sub>) is sent or the jog+ command (refer to [5.4.12], changed data FF00<sub>H</sub>) is sent while the actuator is moving, the actuator will decelerate to a stop.
- If the jog- command rising edge is set (the data is first set to 0000<sub>H</sub> and changed to FF00<sub>H</sub>) while the jog/inch switching command (refer to [5.4.9]) is FF00<sub>H</sub> (set to inching), the actuator will inch in the direction opposite home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 “PIO jogging speed”, user parameter No. 48 “PIO inching distance”, and rated acceleration/deceleration speed, respectively.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 17                  | Jog- command                                                                                      |
| Changed data [H]      | 2                                         | Arbitrary              | Jog- command: FF00 <sub>H</sub><br>Command OFF: 0000 <sub>H</sub>                                 |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) Axis No. 0 should be operated in jog in the positive direction (opposite home position).

- Query (silent intervals are inserted before and after the query)

01 05 04 17 FF 00 3D 0E

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 17                  | Jog- command                       |
| Changed data [H]  | FF 00                  | Jog- command ON                    |
| Error check [H]   | 3D 0E                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

(2) Axis No. 0 should be operated in inching in the positive direction (opposite home position).

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 17 FF 00 3D 0E (Perform inching movement)

Second time: 01 05 04 17 00 00 7C FE (Command OFF)

| Field             | RTU mode<br>8-bit data                  | Remarks                            |
|-------------------|-----------------------------------------|------------------------------------|
| Start             | -                                       | Silent interval                    |
| Slave address [H] | 01                                      |                                    |
| Function code [H] | 05                                      |                                    |
| Start address [H] | 04 17                                   | Jog- command                       |
| Changed data [H]  | FF 00                                   | Jog- command ON                    |
| Error check [H]   | First time: 3D 0E<br>Second time: 7C FE | In accordance with CRC calculation |
| End               | -                                       | Silent interval                    |

If the change is successful, the response message will be the same as the query.

#### 5.4.14 Start Positions 0 to 7 (ST0 to ST7) Movement Command (Limited to solenoid valve mode)

##### [1] Function

The actuator moves to the specified position number position.

The movement command for start position 0 to 7 is effective only when solenoid valve mode is selected.

The movement command is sent by enabling either one of ST0 to ST7 in [5.4.14 [5] Start address] (write new value FF00<sub>H</sub> when 0000<sub>H</sub> is set).

If a position other than the valid start positions is selected, Alarm code: 085 "Moving position number error" will be generated.

Either level operation or edge operation can be selected using user parameter No. 27, "Movement command type."

##### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 0418 to 041F           | Refer to [5.4.14 [5] Start address]                                                               |
| Changed data [H]      | 2                                         | Arbitrary              | *1 Operation command ON:FF00 <sub>H</sub><br>Operation command OFF:0000 <sub>H</sub>              |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

\*1 If user parameter No. 27, "Movement command type" is set to "level operation," the actuator decelerates to a stop by overwriting FF00<sub>H</sub> with 0000<sub>H</sub>.

##### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that moves a controller of axis No. 0 to start position 2 is shown below.  
An example of start position setting.

| No. | Position [mm] | Speed [mm/s] | Acceleration [G] | Deceleration [G] |
|-----|---------------|--------------|------------------|------------------|
| 0   | 0.00          | 533.00       | 0.30             | 0.30             |
| 1   | 25.00         | 533.00       | 0.30             | 0.30             |
| 2   | 50.00         | 533.00       | 0.30             | 0.30             |

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 1D 00 00 5C FC (Write 0000<sub>H</sub> to set the edge)

Second time: 01 05 04 1D FF 00 1D 0C (Movement command)

| Field             | RTU mode 8-bit data                     | Remarks                                                                                               |
|-------------------|-----------------------------------------|-------------------------------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                                                       |
| Slave address [H] | 01                                      |                                                                                                       |
| Function code [H] | 05                                      |                                                                                                       |
| Start address [H] | 04 1D                                   | Specified start position                                                                              |
| Changed data [H]  | First time: 00 00<br>Second time: FF 00 | The movement command is capable to write in FF00 <sub>H</sub> in the condition of 0000 <sub>H</sub> . |
| Error check [H]   | First time: 5C FC<br>Second time: 1D 0C | In accordance with CRC calculation                                                                    |
| End               | -                                       | Silent interval                                                                                       |

If the change is successful, the response message will be the same as the query.

## [5] Start address

| Address | Symbol | Name             | Function           |
|---------|--------|------------------|--------------------|
| 0418    | ST7    | Start Position 7 | Move to position 7 |
| 0419    | ST6    | Start Position 6 | Move to position 6 |
| 041A    | ST5    | Start Position 5 | Move to position 5 |
| 041B    | ST4    | Start Position 4 | Move to position 4 |
| 041C    | ST3    | Start Position 3 | Move to position 3 |
| 041D    | ST2    | Start Position 2 | Move to position 2 |
| 041E    | ST1    | Start Position 1 | Move to position 1 |
| 041F    | ST0    | Start Position 0 | Move to position 0 |

### 5.4.15 Load Cell Calibration Command (CLBR)

#### [1] Function (SCON-CA/CB Servo press connection type only)

The dedicated load cell is calibrated.

The factory setting of your load cell is that the ON status corresponds to a no-load state. If you want to define the reference state as a condition where a work part (load) is installed, calibrate the load cell.

Also calibrate the load cell in other situations as necessary (readjustment, inspection, etc.).

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 26                  | Load cell calibration command                                                                     |
| Changed data [H]      | 2                                         | Arbitrary              | Calibration command: FF00 <sub>H</sub><br>Normal operation: 0000 <sub>H</sub>                     |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.


If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.



## [4] Calibration procedure

- 1) Stop the actuator operation. (The load cell cannot be calibrated while the actuator is performing any axis operation or push-motion operation or being paused, in which case 0E1: load cell calibration error alarm generates.)
- 2) Turn this signal ON and keep it ON for at least 20ms.
- 3) When the calibration is complete, the calibration complete signal (CEND of device status register 1 explained in 4.3.2 (12)) turns ON. After confirming that the CEND has turned ON, turn OFF the CLBR.

If the calibration is not completed in the normal condition, Alarm Code: 0E1 "Loadcell Calibration Error" should occur.

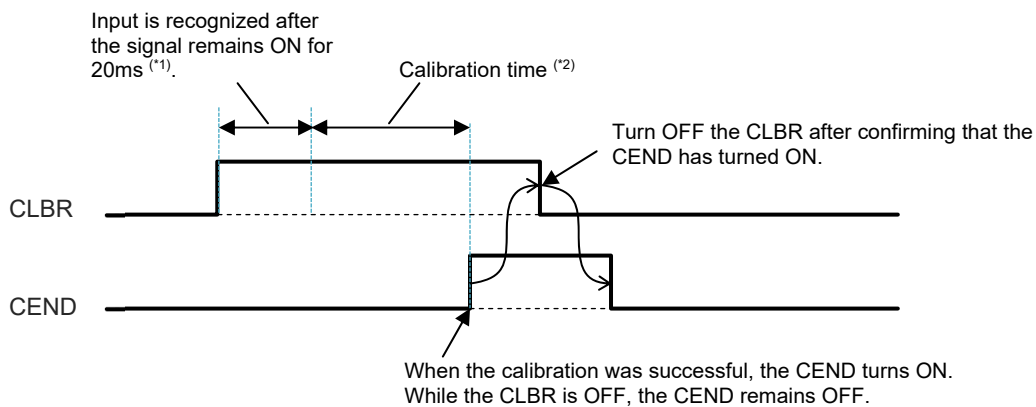

\*1 If the CLBR is turned OFF during this period, calibration will not be performed because the signal is not yet recognized as having been input.

\*2 If the CLBR is turned OFF during this period, an alarm will generate.

**Caution**

- Normal operation commands are not accepted while the CLBR is ON. Turn the command off after the calibration is completed.

## [5] Query sample

Calibrate the dedicated load cell connected to controller axis 0.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 26 FF 00 6C C1

Second time: 01 05 04 26 00 00 2D 31

| Field             | RTU mode<br>8-bit data                  | Remarks                                                                           |
|-------------------|-----------------------------------------|-----------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                                   |
| Slave address [H] | 01                                      |                                                                                   |
| Function code [H] | 05                                      |                                                                                   |
| Start address [H] | 04 26                                   | Load cell calibration command                                                     |
| Changed data [H]  | First time: FF 00<br>Second time: 00 00 | Load cell calibration command ON: FF00<br>Load cell calibration command OFF: 0000 |
| Error check [H]   | First time: 6C C1<br>Second time: 2D 31 | In accordance with CRC calculation                                                |
| End               | -                                       | Silent interval                                                                   |

If the change is successful, the response message will be the same as the query.

### 5.4.16 PIO/Modbus Switching Setting (PMSL)

#### [1] Function

PIO external command signals can be enabled or disabled.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 27                  | PIO/Modbus switching setting                                                                      |
| Changed data [H]      | 2                                         | Arbitrary              | *1 Enable Modbus commands: FF00 <sub>H</sub><br>Disable Modbus commands: 0000 <sub>H</sub>        |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

- \*1
- Enable Modbus commands (ON) (disable PIO command): FF00<sub>H</sub>  
(Operation via PIO signals is not possible).
  - Disable Modbus commands (OFF) (enable PIO command): 0000<sub>H</sub>  
(Operation via external PIO signals is possible).

### Complement

- If the Modbus command is enabled, the PIO status at change is maintained.  
If the Modbus command is switched to disabled, the operation status changes according to the current PIO status. Note that even if the status of signals that operate via edge detection has been changed, edge detection is ignored.

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that enables the Modbus command of the operation of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 27 FF 00 3D 01

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 27                  | PIO/Modbus switching setting       |
| Changed data [H]  | FF 00                  | Enable Modus commands              |
| Error check [H]   | 3D 01                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

If the change is successful, the response message will be the same as the query.



### Caution

- In the models equipped with operation model setting switch, it should be set to “PIO Command Valid” when it is set to AUTO mode, and “PIO Command Invalid” when set to MANU mode.
- On a non-PIO model, the default setting is “Disable PIO commands.”
- If IAI’s tool (teaching pendant or PC software) is connected, “Teaching modes 1, 2” and “Monitor modes 1, 2” are available as tool modes. The correspondence between these modes and PIO enable/disable specifications are as follows:
  - “Monitor modes 1, 2” → “Enable PIO commands”
  - “Teaching modes 1, 2” → “Disable PIO commands”

### 5.4.17 Deceleration Stop (STOP)

#### [1] Function

The actuator will start decelerating to a stop when the deceleration stop command edge (write FF00<sub>H</sub>) is turned on.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                                                   |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                                           |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified                         |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                                                |
| Start address [H]     | 2                                         | 04 2C                  | Deceleration stop setting                                                                                                 |
| Changed data [H]      | 2                                         | Arbitrary              | Deceleration stop command: FF00 <sub>H</sub><br>* The controller automatically resets<br>the value to 0000 <sub>H</sub> . |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                                           |
| End                   | -                                         | None                   | Silent interval                                                                                                           |
| Total number of bytes | 8                                         | -                      |                                                                                                                           |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that decelerates to a stop of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 05 04 2C FF 00 4C C3

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 2C                  | Deceleration stop setting          |
| Changed data [H]  | FF 00                  | Deceleration stop command ON       |
| Error check [H]   | 4C C3                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

If the change is successful, the response message will be the same as the query.

### 5.4.18 Axis operation permission (ENMV) (Servo Press Type Only)

#### [1] Function

The setting can be switched on permission activated/inactivated.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                                            |
|-----------------------|-------------------------------------------|------------------------|--------------------------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                                    |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified                  |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                                         |
| Start address [H]     | 2                                         | 04 9B                  | Axis operation permission setting                                                                                  |
| Changed data [H]      | 2                                         | Arbitrary              | Axis operation permission activated: FF00 <sub>H</sub><br>Axis operation permission inactivated: 0000 <sub>H</sub> |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                                    |
| End                   | -                                         | None                   | Silent interval                                                                                                    |
| Total number of bytes | 8                                         | -                      |                                                                                                                    |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

Movement of the actuator connected to Axis No. 0 gets activated.

- Query (silent intervals are inserted before and after the query)

01 05 04 9B FF 00 FC E5

| Field             | RTU mode<br>8-bit data | Remarks                            |
|-------------------|------------------------|------------------------------------|
| Start             | -                      | Silent interval                    |
| Slave address [H] | 01                     |                                    |
| Function code [H] | 05                     |                                    |
| Start address [H] | 04 9B                  | Axis operation permission setting  |
| Changed data [H]  | FF 00                  | Axis operation permission ON       |
| Error check [H]   | FC E5                  | In accordance with CRC calculation |
| End               | -                      | Silent interval                    |

If the change is successful, the response message will be the same as the query.



### 5.4.19 Program Home Position Movement (PHOM) (Servo Press Type Only)

#### [1] Function

Raise the program home-return edge (write FF00<sub>H</sub> under the condition of change data being 0000<sub>H</sub>), and the movement will be made to the program home position set in each press program.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                                                                 |
|-----------------------|-------------------------------------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                                                         |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified                                       |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                                                              |
| Start address [H]     | 2                                         | 04 9C                  | Program home position movement setting                                                                                                  |
| Changed data [H]      | 2                                         | Arbitrary              | Program home position movement execution<br>ON: FF00 <sub>H</sub><br>Program home position movement execution<br>OFF: 0000 <sub>H</sub> |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                                                         |
| End                   | -                                         | None                   | Silent interval                                                                                                                         |
| Total number of bytes | 8                                         | -                      |                                                                                                                                         |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

Movement of the actuator connected to Axis No. 0 gets activated.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 9C 00 00 0C D4 (Write the 0000<sub>H</sub> twice to raise the edge)

Second time: 01 05 04 9C FF 00 4D 24 (Home position movement)

| Field             | RTU mode<br>8-bit data                  | Remarks                                                                                                    |
|-------------------|-----------------------------------------|------------------------------------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                                                            |
| Slave address [H] | 01                                      |                                                                                                            |
| Function code [H] | 05                                      |                                                                                                            |
| Start address [H] | 04 9C                                   | Program home position movement setting                                                                     |
| Changed data [H]  | First time: 00 00<br>Second time: FF 00 | First time: 0000 <sub>H</sub><br>Second time: FF00 <sub>H</sub><br>(Send the data twice to raise the edge) |
| Error check [H]   | First time: 0C D4<br>Second time: 4D 24 | In accordance with CRC calculation                                                                         |
| End               | -                                       | Silent interval                                                                                            |

If the change is successful, the response message will be the same as the query.

### 5.4.20 Search Stop (SSTP) (Servo Press Type Only)

#### [1] Function

Setting can be switched whether to finish the press program or not after search operation is completed.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                                    |
|-----------------------|-------------------------------------------|------------------------|------------------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                            |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified          |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                                 |
| Start address [H]     | 2                                         | 04 9D                  | Search operation stop setting                                                                              |
| Changed data [H]      | 2                                         | Arbitrary              | Stopped after search operation: FF00 <sub>H</sub><br>Not stopped after search operation: 0000 <sub>H</sub> |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                            |
| End                   | -                                         | None                   | Silent interval                                                                                            |
| Total number of bytes | 8                                         | -                      |                                                                                                            |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

After search of the actuator connected to Axis No. 0, press program will be stopped.

- Query (silent intervals are inserted before and after the query)

01 05 04 9D FF 00 1C E4

| Field             | RTU mode<br>8-bit data | Remarks                                         |
|-------------------|------------------------|-------------------------------------------------|
| Start             | -                      | Silent interval                                 |
| Slave address [H] | 01                     |                                                 |
| Function code [H] | 05                     |                                                 |
| Start address [H] | 04 9D                  | Search operation stop setting                   |
| Changed data [H]  | FF 00                  | Stop pressing program after searching operation |
| Error check [H]   | 1C E4                  | In accordance with CRC calculation              |
| End               | -                      | Silent interval                                 |

If the change is successful, the response message will be the same as the query.

### 5.4.21 Program Compulsory Finish (FPST) (Servo Press Type Only)

#### [1] Function

Raise the press program compulsory complete edge (write FF00<sub>H</sub> under the condition of change data being 0000<sub>H</sub>), and the press program will be compulsorily finished. While the change data retains FF00<sub>H</sub>, the start command of the press program cannot be received.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                             |
|-----------------------|-------------------------------------------|------------------------|-----------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                     |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified   |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                          |
| Start address [H]     | 2                                         | 04 9E                  | Program compulsory finish setting                                                                   |
| Changed data [H]      | 2                                         | Arbitrary              | Program compulsory finish ON: FF00 <sub>H</sub><br>Program compulsory finish OFF: 0000 <sub>H</sub> |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                     |
| End                   | -                                         | None                   | Silent interval                                                                                     |
| Total number of bytes | 8                                         | -                      |                                                                                                     |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

Press program of the actuator connected to Axis No. 0 will be compulsorily finished.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 9E 00 00 AD 14 (Write the 0000<sub>H</sub> twice to raise the edge)

Second time: 01 05 04 9E FF 00 EC E4 (Compulsoly finish)

| Field             | RTU mode<br>8-bit data                  | Remarks                                |
|-------------------|-----------------------------------------|----------------------------------------|
| Start             | -                                       | Silent interval                        |
| Slave address [H] | 01                                      |                                        |
| Function code [H] | 05                                      |                                        |
| Start address [H] | 04 9E                                   | Program compulsoly finish              |
| Changed data [H]  | First time: 00 00<br>Second time: FF 00 | Send the data twice to raise the edge. |
| Error check [H]   | First time: AD 14<br>Second time: EC E4 | In accordance with CRC calculation     |
| End               | -                                       | Silent interval                        |

If the change is successful, the response message will be the same as the query.

### 5.4.22 Program Start (PSTR) (Servo Press Type Only)

#### [1] Function

Raise the program start edge (write FF00<sub>H</sub> under the condition of change data being 0000<sub>H</sub>), and the press program in the program number set in POSR Register will be executed.

#### [2] Query format

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 05                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | 04 9F                  | Press program Start setting                                                                       |
| Changed data [H]      | 2                                         | Arbitrary              | Press program Start ON: FF00 <sub>H</sub><br>Press program Start OFF: 0000 <sub>H</sub>           |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

Press program of the actuator connected to Axis No. 0 will be executed.

- Query (silent intervals are inserted before and after the query)

First time: 01 05 04 9F 00 00 FC D4 (Write the 0000<sub>H</sub> twice to raise the edge)

Second time: 01 05 04 9F FF 00 BD 24 (Press program executed)

| Field             | RTU mode<br>8-bit data                  | Remarks                                                                                                    |
|-------------------|-----------------------------------------|------------------------------------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                                                            |
| Slave address [H] | 01                                      |                                                                                                            |
| Function code [H] | 05                                      |                                                                                                            |
| Start address [H] | 04 9F                                   | Press program Start setting                                                                                |
| Changed data [H]  | First time: 00 00<br>Second time: FF 00 | First time: 0000 <sub>H</sub><br>Second time: FF00 <sub>H</sub><br>(Send the data twice to raise the edge) |
| Error check [H]   | First time: FC D4<br>Second time: BD 24 | In accordance with CRC calculation                                                                         |
| End               | -                                       | Silent interval                                                                                            |

If the change is successful, the response message will be the same as the query.



## 5.5 Direct Writing of Control Information (Function code 06)

### 5.5.1 Writing to Registers

#### [1] Function

These queries change (write) data in registers of a slave.

In case of broadcast, data of registers of the same address of all slaves is changed.

For the details of each register, refer to

- [4.3.2 [5] Details of device controller register 1]
- [4.3.2 [6] Details of device controller register 2]
- [4.3.2 [7] details of the position number command register and position movement specification register and program number command register (Servo Press) type]

#### [2] Start address list

| Address | Symbol | Name                                                                 | Byte |
|---------|--------|----------------------------------------------------------------------|------|
| 0D00    | DRG1   | Device control register 1                                            | 2    |
| 0D01    | DRG2   | Device control register 2                                            | 2    |
| 0D03    | POSR   | Position number command register/<br>Program number command register | 2    |
| 9800    | POSR   | Position movement command register                                   | 2    |

The registers above are control command registers. The bits of these registers are assigned to input ports by PIO patterns when "PIO/Modbus Switch Status (PMSS) (refer to [4.3.2 [14]])" is set to disable Modbus commands (enable PIO commands). These registers can be rewritten when the Modbus commands are enabled (PIO commands are disabled).

## [3] Query format

Specify the address and data of the register whose data is to be changed in the query message.  
Data to be changed shall be specified as 16-bit data in the changed data area of the query.

| Field                 | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                           |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| Start                 | -                                         | None                   | Silent interval                                                                                   |
| Slave address [H]     | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 1                                         | 06                     | Write to a single coil DO.                                                                        |
| Start address [H]     | 2                                         | Arbitrary              | Refer to [5.5.1 [2] Start address list]                                                           |
| Changed data [H]      | 2                                         | Arbitrary              | Refer to List of changed data<br>[4.3.2 [5]] to [4.3.2 [7]]                                       |
| Error check [H]       | 2                                         | CRC (16 bits)          |                                                                                                   |
| End                   | -                                         | None                   | Silent interval                                                                                   |
| Total number of bytes | 8                                         | -                      |                                                                                                   |

## [4] Response

If the change is successful, the response message will be the same as the query.  
If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [5] Query sample

Examples of different operations are shown in (1) to (3) below.

(1) A sample query that turns the servo ON a controller of axis No. 0 on and then executes home return operation is performed.

- Query (silent intervals are inserted before and after the query)
  - First time: 01 06 0D 00 10 00 86 A6 (Servo ON)
  - Second time: 01 06 0D 00 10 10 87 6A (Home return + Servo maintains on)

| Field             | RTU mode<br>8-bit data                  | Remarks                                                                                                                                                                                |
|-------------------|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Start             | -                                       | Silent interval                                                                                                                                                                        |
| Slave address [H] | 01                                      | Axis No.0 + 1                                                                                                                                                                          |
| Function code [H] | 06                                      |                                                                                                                                                                                        |
| Start address [H] | 0D 00                                   | Device control register 1                                                                                                                                                              |
| Changed data [H]  | First time: 10 00<br>Second time: 10 10 | First time: Device control register 1 (SON) is ON<br>Second time: Device control register 1 (SON+HOME) is ON<br>(Keep the servo ON bit "1" in cases other than when the servo is OFF). |
| Error check       | First time: 86 A6<br>Second time: 87 6A | CRC checksum calculation result                                                                                                                                                        |
| End               | -                                       | Silent interval                                                                                                                                                                        |

\*1 Home return is not performed even if 1010<sub>H</sub> is sent to change the data while the servo is OFF  
(Refer to [Timing Chart at Startup described in each RC Controller Instruction Manual])

\*2 To keep the previous status, send the previous status even if there is no change. As in the example above, keep the servo ON bit as "1" at home return as well.

If the change is successful, the response message will be the same as the query.

(2) Move to position No. 1 using the position movement specification register (Address 9800<sub>H</sub>).

Have the operation in (1) to complete the home-return operation before having this operation.

- Query (silent intervals are inserted before and after the query)

01 06 98 00 00 01 67 6A

| Field             | RTU mode<br>8-bit data | Remarks                                  |
|-------------------|------------------------|------------------------------------------|
| Start             | -                      | Silent interval                          |
| Slave address [H] | 01                     | Axis No.0 + 1                            |
| Function code [H] | 06                     |                                          |
| Start address [H] | 98 00                  | Position movement specification register |
| Changed data [H]  | 00 01                  | Specify position No. 1 (*1)              |
| Error check       | 67 6A                  | CRC checksum calculation result          |
| End               | -                      | Silent interval                          |

\*1 As soon as a position number is written to this register, the actuator starts moving.

The CSTR (start signal) is not required.

If the change is successful, the response message will be the same as the query.

(3) Move to position No. 1 using the position number command register (Address 0D03<sub>H</sub>).

Have the operation in (1) to complete the home-return operation before having this operation.

- Query (silent intervals are inserted before and after the query)
  - First time: 01 06 0D 03 00 01 BAA6 (Specify position No. 1)
  - Second time: 01 06 0D 00 10 00 86 A6 (Turn OFF the CSTR (start signal))
  - Third time: 01 06 0D 00 10 08 87 60 (Turn ON the CSTR (start signal))

| Field             | RTU mode<br>8-bit data                                       | Remarks                                                                                                                                            |
|-------------------|--------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Start             | -                                                            | Silent interval                                                                                                                                    |
| Slave address [H] | 01                                                           | Axis No.0 + 1                                                                                                                                      |
| Function code [H] | 06                                                           |                                                                                                                                                    |
| Start address [H] | First time: 0D 03<br>Second time: 0D 00<br>Third time: 0D 00 | First time: Specify position No.<br>Second time: Device control register 1<br>Third time:: Device control register 1                               |
| Changed data [H]  | First time: 00 01<br>Second time: 10 00<br>Third time: 10 08 | First time: Specify position No. 1<br>Second time: Device control register 1 (SON) is ON<br>Third time: Device control register 1 (SON+CSTR) is ON |
| Error check       | First time: BAA6<br>Second time: 86 A6<br>Third time: 87 60  | CRC checksum calculation result                                                                                                                    |
| End               | -                                                            | Silent interval                                                                                                                                    |

\* To keep the previous status, send the previous status even if there is no change.

As in the example above, keep the SON (servo ON) bit as "1" at other than servo OFF.

If the change is successful, the response message will be the same as the query.

## 5.6 Direct Writing of Positioning Data (Function code 10)

### 5.6.1 Numerical Value Movement Command

#### [1] Function

Specify the target position in PTP positioning operation using absolute coordinates. It is possible to command the actuator to move via numerical values by writing directly to the group of registers at addresses from 9900<sub>H</sub> to 9908<sub>H</sub> (can be set in one message).

Values of all registers, other than the control flag specification register (Address: 9908<sub>H</sub>), will become effective once the values are sent. If there is no need to change the target position, positioning band, speed, acceleration/deceleration, push-current limiting value and control specification, therefore, each subsequent numerical movement command can be issued simply by writing a desired register that can effect an actual movement command based on changing of the applicable register alone (refer to [[2] Start address list]).

#### [2] Start address list

This group of registers is used to move the actuator by specifying the target position coordinates, positioning band, speed acceleration/deceleration, push-operation current limit control specification flags and so on as numerical values.

Data of start addresses in the list (8 registers in total) can be changed with one transmission.

| Address [H] | Symbol | Name                                               | Sign | Able to effect an actual movement command by changing the applicable register alone | Register size | Byte size | Unit     |
|-------------|--------|----------------------------------------------------|------|-------------------------------------------------------------------------------------|---------------|-----------|----------|
| 9900        | PCMD   | Target position specification register             | ○    | ○                                                                                   | 2             | 4         | 0.01mm   |
| 9902        | INP    | Positioning band specification register            |      | ×                                                                                   | 2             | 4         | 0.01mm   |
| 9904        | VCMD   | Speed specification register                       |      | ○                                                                                   | 2             | 4         | 0.01mm/s |
| 9906        | ACMD   | Acceleration/deceleration specification register   |      | ○                                                                                   | 1             | 2         | 0.01G    |
| 9907        | PPOW   | Push-current limiting value specification register |      | ○                                                                                   | 1             | 2         | %        |
| 9908        | CTLF   | Control flag specification register                |      | ×<br>Initialization after each movement                                             | 1             | 2         | -        |

## [3] Query format

1 register = 2 bytes = 16-bit data

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data                                 | Remarks                                                                                         |
|-------------------------|-------------------------------------------|--------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Start                   | -                                         | None                                                   | Silent interval                                                                                 |
| Slave address [H]       | 1                                         | Arbitrary                                              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> if broadcast is specified |
| Function code [H]       | 1                                         | 10                                                     | Numerical value specification                                                                   |
| Start address [H]       | 2                                         | Arbitrary                                              | Refer to [5.6.1 [2] Start address list]                                                         |
| Number of registers [H] | 2                                         | Arbitrary                                              | Refer to [5.6.1 [2] Start address list]                                                         |
| Number of bytes [H]     | 1                                         | In accordance<br>with the number<br>of registers above | Input a number doubled to the register<br>count indicated above                                 |
| Changed data 1 [H]      | 2                                         | -                                                      | Refer to [5.6.1 [2] Start address list]                                                         |
| Changed data 2 [H]      | 2                                         | -                                                      | Refer to [5.6.1 [2] Start address list]                                                         |
| Changed data 3 [H]      | 2                                         | -                                                      | Refer to [5.6.1 [2] Start address list]                                                         |
| :                       | :                                         | -                                                      | :                                                                                               |
| Error check [H]         | 2                                         | CRC (16 bits)                                          |                                                                                                 |
| End                     | -                                         | -                                                      | Silent interval                                                                                 |
| Total number of bytes   | Up to 256                                 | -                                                      |                                                                                                 |

## [4] Response format

When normally changed, the response message responds with a copy of the query message excluding the number of bytes and changed data.

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                         |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------------------------------------------|
| Start                   | -                                         | None                   | Silent interval                                                                                 |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> if broadcast is specified |
| Function code [H]       | 1                                         | 10                     | Numerical value specification                                                                   |
| Start address [H]       | 2                                         | Arbitrary              | Refer to [5.6.1 [2] Start address list]                                                         |
| Number of registers [H] | 2                                         | Arbitrary              | Refer to [5.6.1 [2] Start address list]                                                         |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                                                                 |
| End                     | -                                         | -                      | Silent interval                                                                                 |
| Total number of bytes   | 8                                         | -                      |                                                                                                 |

## [5] Detailed explanation of registers

## ■ Target position specification register (PCMD)

This register specifies the target position in PTP positioning operation using absolute coordinates. The value of this register is set in units of 0.01 mm in a range of –999999 to 999999 (FFF0BDC1<sub>H</sub> <sup>(Note 1)</sup> to 000F423F<sub>H</sub>). When the absolute coordinate is indicated, operation starts with 0.2mm in front <sup>(Note 2)</sup> of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900<sub>H</sub>) is rewritten. In other words, a numerical movement command can be issued simply by writing a target position in this register.

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

## ■ Positioning band register (INP)

This register is used in two different ways depending on the type of operation. The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete. The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01mm in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>). Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later. Changing this register alone will not start actuator movement.

**Caution**

- It is necessary that the positioning band is at or more than the value figured out with the formulas below.
  - For Servo motor: Actuator Lead Length ÷ Encoder Pulse
  - For Pulse Motor: Actuator Lead Length ÷ Encoder Pulse × 3

Apply the servo motor formula for RCP6 Actuator

## ■ Speed specification register (VCMD)

This register specifies the moving speed. The value of this register is set in units of 0.01mm/s in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this lower word of this register is rewritten. In other words, the speed can be changed while the actuator is moving, simply by rewriting this register.



### ■ Acceleration/deceleration specification register (ACMD)

This register specifies the acceleration or deceleration. The value of this register is set in units of 0.01G in a range of 1 to 300 (0001<sub>H</sub> to 012C<sub>H</sub>). If the specified value exceeds the maximum acceleration or deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this register is rewritten. In other words, the acceleration/deceleration can be changed while the actuator is moving, simply by rewriting this register.

### ■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name            | Pushable range [%] | Settable range (input value) [H] |
|--------------------------------|--------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 (Note 1)  | 33 to B2                         |
| RCS2-RA13R                     | 20 to 200          | 33 to 1FE                        |

Note 1 The setting ranges may vary depending on the actuator.

For details, refer to the [IAI catalog] or [instruction manual of actuator].

The actuator will start moving when this register is rewritten. In other words, the current limiting value can be changed during push-motion operation simply by rewriting this register.

Sample push-motion current setting

- When setting the current to 20%


$$255 (100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}} \text{ (convert into hexadecimal number)}$$

### ■ Control Flag Specification Register (CTLF)

Set the method of operation.

If push-motion operation or incremental operation (pitch feed) is selected, set this register every time a movement command is issued. (This is because the register will be overwritten with the default value every time the actuator moves.)

CTLF bit structure



The details of each signal are described in the next page.

- Bit 1 (PUSH) = 0: Normal operation (default)  
1: Push-motion operation
- Bit 2 (DIR) = 0: The direction of push-motion operation after completion of approach is defined as the forward direction (default).  
1: The direction of push-motion operation after completion of approach is defined as the reverse direction.

This bit is used to calculate the direction of final stop position from PCMD (PCMD) (. If this bit is set incorrectly, therefore, the target position will deviate from the specified position by a distance corresponding to  $(2 \times INP)$  as shown in the figure below.

If bit 1 is set to "0", the setting of this bit is invalid.

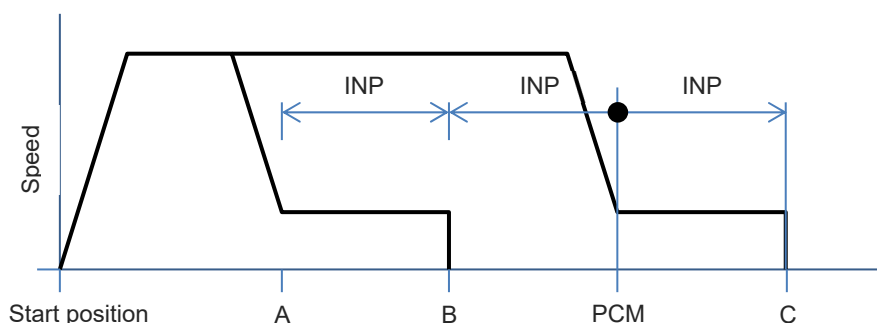


Fig. 5.6-1 Operating Direction in Push-motion Operation

- Bit 3 (INC) = 0: Normal operation (default)  
1: Incremental operation (pitch feed)

Setting this bit to "1" will enable the actuator to operate relative to the current position. In this operation, the actuator behaves differently between normal operation and push-motion operation (CTLF bit 1). While the travel is calculated with respect to the target position (PCMD) in normal operation, it is calculated relative to the current position in push-motion operation (when bit 1 = 1).

Here, since relative coordinate calculation involves adding up pulses in [mm], followed by conversion, unlike a calculation method involving addition after pulse conversion, "repeated relative movements will not cause position deviation as a result of cumulative errors corresponding to fraction pulses that are not divisible with certain lead settings".

- Bit 4 (GSL0), 5 (GSL1) = Refer to the table below

(ACON-CA/CB/CYB, SCON-CA/CAL/CB/ Servo Press Type and RCM-P6AC only)

**Do not attempt to change the number from “0” for those other than the models above.**

**Doing so may cause an error in operation.**

| GSL1 | GSL0 | Function                         |
|------|------|----------------------------------|
| 0    | 0    | Select parameter set 0 (default) |
| 0    | 1    | Select parameter set 1           |
| 1    | 0    | Select parameter set 2           |
| 1    | 1    | Select parameter set 3           |

You can register a maximum of four servo gain parameter sets consisting of six parameters and move the actuator to each position by selecting a different parameter set every time.

For details, refer to the [Instruction manual of each controller].

- Bit 6 (MOD0), 7 (MOD1) = Refer to the table below

(ACON-C/CY/SE/CA/CB/CYB, DCON-CA/CB/CYB, PCON-CA/CFA/CB/CFB/CYB, SCON-C/CA/CAL/CB, ERC3, RACON and RCM-P6AC only, and SCON Servo Press Type is not applicable)

| MOD1 | MOD0 | Function                    |
|------|------|-----------------------------|
| 0    | 0    | Trapezoid pattern (default) |
| 0    | 1    | S-motion                    |
| 1    | 0    | Primary delay filter        |
| 1    | 1    | Cannot be used.             |

These signals are used to select the acceleration/deceleration pattern characteristics. Set one of the patterns before issuing an actuator movement command.

For details, refer to the [Instruction manual of each controller].

- Bit 12 (NTC0), 13 (NTC1) = Refer to the table below

(ACON-CA/CB/CYB, SCON-CA/CAL/CB and RCM-P6AC only, and SCON Servo Press Type is not applicable)

| NTC1 | NTC0 | Function                                |
|------|------|-----------------------------------------|
| 0    | 0    | Do not use vibration control (default). |
| 0    | 1    | Select parameter set 1                  |
| 1    | 0    | Select parameter set 2                  |
| 1    | 1    | Select parameter set 3                  |

When vibration control is used, you can register a maximum of three parameter sets and move the actuator to each position by selecting a different parameter set every time.

For details, refer to the [Instruction manual of each controller].

## [6] Example of use

Examples of different operations are shown in (1) to (7) below.

- (1) Move by changing the target position. (All data other than the target position are the default values of their respective parameters.)

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the target position is changed to move the actuator.

complement: Controller's user parameters

- Default speed (parameter No. 8) → Maximum speed of the applicable actuator as specified in the catalog
- Default acceleration/deceleration (parameter No. 9) → Rated acceleration of the applicable actuator as specified in the catalog
- Default positioning band (parameter No. 10) → Default value = 0.1mm

Write the target position specification register (9900<sub>H</sub>) (Example 1)



Start of movement

(Example1) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|----------|--------------|
| 50                   | Need not be set.      |              |                               |          |              |

■ Query: 01 10 9900 0002 04 0000 1388 38AF

■ Response: 01 10 9900 0002 6F54

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field                                                  | RTU mode 8-bit data | Remarks                                                                                                       |
|--------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------|
| Start                                                  | -                   | Silent interval                                                                                               |
| Slave address                                          | 01                  | Axis No.0 + 1                                                                                                 |
| Function code                                          | 10                  |                                                                                                               |
| Start address                                          | 99 00               | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                    | 00 02               | Addresses 9900 <sub>H</sub> to 9901 <sub>H</sub> are written.                                                 |
| Number of bytes                                        | 04                  | 2 registers × 2 = 4 bytes → 4 <sub>H</sub>                                                                    |
| New data 1, 2 (target position)<br>Input unit (0.01mm) | 00 00               | All upper bits of the 32-bit data are "0".                                                                    |
|                                                        | 13 88               | 50mm×100 = 5000 → 1388 <sub>H</sub>                                                                           |
| Error check                                            | 38 AF               | CRC checksum calculation result → 38AF <sub>H</sub>                                                           |
| End                                                    | -                   | Silent interval                                                                                               |
| Total number of bytes                                  | 13                  |                                                                                                               |

(2) Move by changing the target position. (as well as data other than the target position).

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the actuator speed changed at a given time during movement.

Write the target position specification register (9900<sub>H</sub>) through acceleration/deceleration specification register (9906<sub>H</sub>)<sup>(Example2)</sup>



Start of movement

(Example 2) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%]         | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|------------------|--------------|
| 50                   | 0.1                   | 100          | 0.3                           | Need not be set. |              |

■ Query: 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 50CF

■ Response: 01 10 9900 0007 AF57

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field                                                           | RTU mode 8-bit data | Remarks                                                                                                       |
|-----------------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------|
| Start                                                           | -                   | Silent interval                                                                                               |
| Slave address                                                   | 01                  | Axis No.0 + 1                                                                                                 |
| Function code                                                   | 10                  |                                                                                                               |
| Start address                                                   | 99 00               | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                             | 00 07               | Addresses 9900 <sub>H</sub> to 9906 <sub>H</sub> are written.                                                 |
| Number of bytes                                                 | 0E                  | 7 registers × 2 = 14 bytes → E <sub>H</sub>                                                                   |
| New data 1, 2<br>(target position)<br>Input unit (0.01mm)       | 00 00               | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 13 88               | 50mm × 100 = 5000 → 1388 <sub>H</sub>                                                                         |
| New data 3, 4<br>(Positioning band)<br>Input unit (0.01mm)      | 00 00               | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 00 0                | 0.1mm × 100 = 10 → 000A <sub>H</sub>                                                                          |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                  | 00 00               | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 27 10               | 100mm/s × 100 = 10000 → 2710 <sub>H</sub>                                                                     |
| New data 7<br>(Acceleration/deceleration)<br>Input unit (0.01G) | 00 1E               | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                           |
| Error check                                                     | 50 CF               | CRC checksum calculation result → 50CF <sub>H</sub>                                                           |
| End                                                             | -                   | Silent interval                                                                                               |
| Total number of bytes                                           | 23                  |                                                                                                               |

## (3) Change the speed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the actuator speed changed at a given time during movement.

Write the target position specification register (9900<sub>H</sub>) through acceleration/deceleration specification register (9906<sub>H</sub>)(Example 2)



Start of movement



Write the speed specification registers (9904<sub>H</sub> and 9905<sub>H</sub>)(Example 3)



The actuator continues with the normal operation at the new speed

(Example 3) Change the speed from 100mm/s to 50mm/s while the actuator is moving.

| Target position<br>[mm] | Positioning band<br>[mm] | Speed<br>[mm/s] | Acceleration/<br>deceleration<br>[G] | Push<br>[%] | Control flag     |
|-------------------------|--------------------------|-----------------|--------------------------------------|-------------|------------------|
| 50                      | 0.1                      | 100 → 50        | 0.3                                  |             | Need not be set. |

- 1) Start the movement at a speed of 100mm/s. Refer to [above example (2) Move by changing the target position.].

■ Query: 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 50CF

■ Response: 01 10 9900 0007 AF57

- 2) Change the speed to 50mm/s.

■ Query: 01 10 9904 0002 04 0000 1388 395C

■ Response: 01 10 9904 0002 2E95

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message (Change the speed to 50mm/s. (Refer to the [Example 2] for the query message used to start the movement at 100mm/s)).

| Field                 | RTU mode<br>8-bit data | Remarks                                                                                                       |
|-----------------------|------------------------|---------------------------------------------------------------------------------------------------------------|
| Start                 | -                      | Silent interval                                                                                               |
| Slave address         | 01                     | Axis No.0 + 1                                                                                                 |
| Function code         | 10                     |                                                                                                               |
| Start address         | 99 04                  | The starting address corresponds to the setting of target position specification register 9904 <sub>H</sub> . |
| Number of registers   | 00 02                  | Addresses 9904 <sub>H</sub> to 9905 <sub>H</sub> are written.                                                 |
| Number of bytes       | 04                     | 2 registers × 2 = 4 bytes → 4 <sub>H</sub>                                                                    |
| New data 5, 6 (Speed) | 00 00                  | All upper bits of the 32-bit data are "0".                                                                    |
| Input unit (0.01mm/s) | 13 88                  | 50mm/s × 100 = 5000 → 1388 <sub>H</sub>                                                                       |
| Error check           | 39 5C                  | CRC checksum calculation result → 395C <sub>H</sub>                                                           |
| End                   | -                      | Silent interval                                                                                               |
| Total number of bytes | 13                     |                                                                                                               |

(4) Move in the incremental (pitch feed) mode.

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the pitch width is changed to move the actuator.

Write the target position specification register (9900<sub>H</sub>) through control flag specification register (9908<sub>H</sub>: Incremental setting) (Example 4)



Start of movement

### Complement

- Addresses 9900<sub>H</sub> and 9908<sub>H</sub> alone cannot be changed in a single data transmission. Since all addresses are sequential, send two messages if 9900<sub>H</sub> and 9908<sub>H</sub> alone are changed. If you want to send only one message, write all addresses from 9900<sub>H</sub> to 9908<sub>H</sub>.

(Example 4) Move in the incremental mode by setting the pitch to 10mm.

| Pitch<br>[mm] | Positioning band<br>[mm] | Speed<br>[mm/s] | Acceleration/<br>deceleration<br>[G] | Push<br>[%] | Control flag               |
|---------------|--------------------------|-----------------|--------------------------------------|-------------|----------------------------|
| 10            | 0.1                      | 100             | 0.3                                  | 0           | Incremental<br>(bit 3 = 1) |

■ Query: 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 F3A0

■ Response: 01 10 9900 0009 2E93

\* The query message is copied, except for the number of bytes and new data, and returned as a response.


## ■ Breakdown of Query Message

| Field                                                           | RTU mode<br>8-bit data | Remarks                                                                                                       |
|-----------------------------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------------|
| Start                                                           | -                      | Silent interval                                                                                               |
| Slave address                                                   | 01                     | Axis No.0 + 1                                                                                                 |
| Function code                                                   | 10                     |                                                                                                               |
| Start address                                                   | 99 00                  | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                             | 00 09                  | Addresses 9900 <sub>H</sub> to 9908 <sub>H</sub> are written.                                                 |
| Number of bytes                                                 | 12                     | 9 registers × 2 = 18 bytes → 12 <sub>H</sub>                                                                  |
| New data 1, 2<br>(target position)<br>Input unit (0.01mm)       | 00 00                  | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 03 E8                  | 10mm × 100 = 1000 → 03E8 <sub>H</sub>                                                                         |
| New data 3, 4<br>(Positioning band)<br>Input unit (0.01mm)      | 00 00                  | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 00 0A <sub>H</sub>     | 0.1mm × 100 = 10 → 000A <sub>H</sub>                                                                          |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                  | 00 00                  | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 27 10                  | 100mm/s × 100 = 10000 → 2710 <sub>H</sub>                                                                     |
| New data 7<br>(Acceleration/deceleration)<br>Input unit (0.01G) | 00 1E                  | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                           |
| New data 8 (Push)<br>Input unit [%]                             | 00 00                  | 0% → 0 <sub>H</sub>                                                                                           |
| New data 9 (Control flag)                                       | 00 08                  | (Incremental setting)<br>1000 <sub>b</sub> → 0008 <sub>H</sub>                                                |
| Error check                                                     | F3 A0                  | CRC checksum calculation result → F3A0 <sub>H</sub>                                                           |
| End                                                             | -                      | Silent interval                                                                                               |
| Total number of bytes                                           | 27                     |                                                                                                               |



## (5) Change the speed during incremental movement (pitch feed).

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.

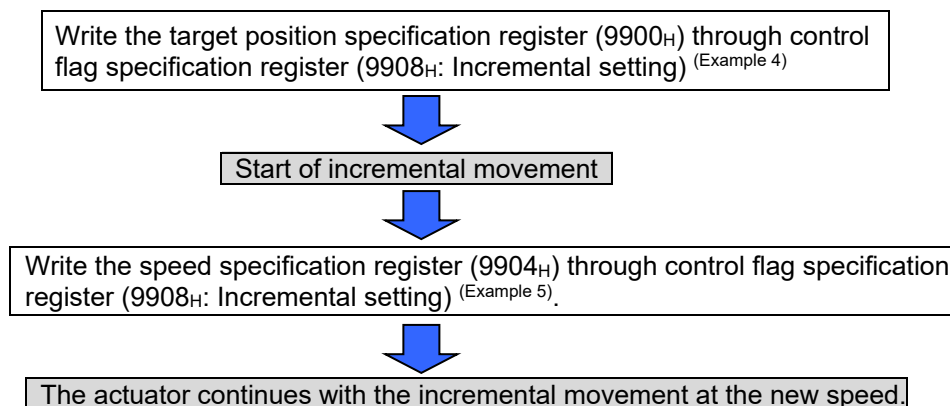

### Complement

- After the control flag specification register (9908<sub>H</sub>) is set, the register will return to the default value (0<sub>H</sub>: Normal movement) once the actuator starts moving. Accordingly, you must set the control flag specification register (9908<sub>H</sub>) and send it again if another incremental or push-motion operation is to be performed.

(Example 5) Change the speed from 100mm/s to 50mm/s while the actuator is moving.

| Pitch<br>[mm] | Positioning band<br>[mm] | Speed<br>[mm/s] | Acceleration/<br>deceleration<br>[G] | Push<br>[%] | Control flag               |
|---------------|--------------------------|-----------------|--------------------------------------|-------------|----------------------------|
| 10            | 0.1                      | 100 → 50        | 0.3                                  | 0           | Incremental<br>(bit 3 = 1) |

- 1) Start moving at a speed of 100mm/s. Refer to [above example 4 Moving in the incremental (pitch feed) mode].

■ Query: 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 F3A0

■ Response: 01 10 9900 0009 2E93

- 2) Change the speed to 50 mm/s.

■ Query: 01 10 9904 0005 0A 0000 1388 001E 0000 0008 BD83

■ Response: 01 10 9904 0005 6F57


\* The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message (Change the speed to 50mm/s. (Refer to the [above example] for the query message used to start the movement at 100mm/s)).

| Field                                                           | RTU mode<br>8-bit data | Remarks                                                                             |
|-----------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|
| Start                                                           | -                      | Silent interval                                                                     |
| Slave address                                                   | 01                     | Axis No.0 + 1                                                                       |
| Function code                                                   | 10                     |                                                                                     |
| Start address                                                   | 99 04                  | The start address is the target position specification register 9904 <sub>H</sub> . |
| Number of registers                                             | 00 05                  | Addresses 9904 <sub>H</sub> to 9908 <sub>H</sub> are written.                       |
| Number of bytes                                                 | 0A                     | 5 registers × 2 = 10 bytes → A <sub>H</sub>                                         |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                  | 00 00                  | All upper bits of the 32-bit data are "0".                                          |
|                                                                 | 13 88                  | 50mm/s × 100 = 5000 → 1388 <sub>H</sub>                                             |
| New data 7<br>(Acceleration/deceleration)<br>Input unit (0.01G) | 00 1E                  | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                 |
| New data 8 (Push)<br>Input unit [%]                             | 00 00                  | 0% → 0 <sub>H</sub>                                                                 |
| New data 9 (Control flag)                                       | 00 08                  | (Incremental setting)<br>1000 <sub>b</sub> → 0008 <sub>H</sub>                      |
| Error check                                                     | BD 83                  | CRC checksum calculation result → BD83 <sub>H</sub>                                 |
| End                                                             | -                      | Silent interval                                                                     |
| Total number of bytes                                           | 19                     |                                                                                     |

(6) Perform a push-motion operation. (changing pushing force during push-operation)

Conditions: Perform push-motion operation by changing the push force at a desired time while the actuator is pushing the work part.

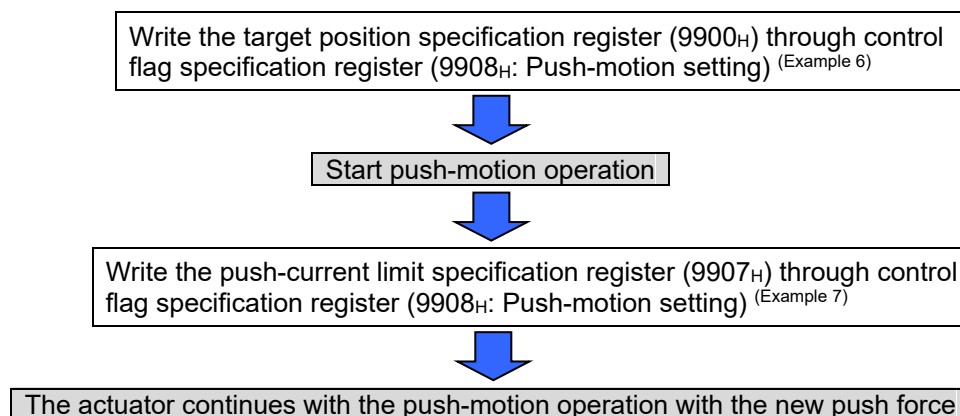

(Example 6) Perform a push-motion operation for 20mm from the 50mm position at a current-limiting value of 70%.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag                                    |
|----------------------|-----------------------|--------------|--------------------------------|----------|-------------------------------------------------|
| 50                   | 20                    | 100          | 0.3                            | 70       | Push-motion operation (bit 1 = 1, bit 2 = 0, 1) |

■ Query: 01 10 9900 0009 12 0000 1388 0000 07D0 0000 2710 001E 00B2 0006 C377

■ Response: 01 10 9900 0009 2E93

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

## ■ Breakdown of Query Message

| Field                                                           | RTU mode<br>8-bit data | Remarks                                                                                                       |
|-----------------------------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------------|
| Start                                                           | -                      | Silent interval                                                                                               |
| Slave address                                                   | 01                     | Axis No.0 + 1                                                                                                 |
| Function code                                                   | 10                     |                                                                                                               |
| Start address                                                   | 99 00                  | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                             | 00 09                  | Addresses 9900 <sub>H</sub> to 9908 <sub>H</sub> are written.                                                 |
| Number of bytes                                                 | 12                     | 9 registers × 2 = 18 bytes → 12 <sub>H</sub>                                                                  |
| New data 1, 2<br>(target position)<br>Input unit (0.01mm)       | 00 00                  | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 13 88                  | 50mm × 100 = 5000 → 1388 <sub>H</sub>                                                                         |
| New data 3, 4<br>(Positioning band)<br>Input unit (0.01mm)      | 00 00                  | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 07 D0                  | 20mm × 100 = 2000 → 07D0 <sub>H</sub>                                                                         |
| New data 5, 6(Speed)<br>Input unit (0.01mm/s)                   | 00 00                  | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | 27 10                  | 100mm/s × 100 = 10000 → 2710 <sub>H</sub>                                                                     |
| New data 7<br>(Acceleration/deceleration)<br>Input unit (0.01G) | 00 1E                  | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                           |
| New data 8 (Push)<br>Input unit [%]                             | 00 B2                  | 70% → B2 <sub>H</sub>                                                                                         |
| New data 9 (Control flag)                                       | 00 06                  | (Push setting)<br>0110 <sub>b</sub> → 0006 <sub>H</sub>                                                       |
| Error check                                                     | C3 77                  | CRC checksum calculation result → C377 <sub>H</sub>                                                           |
| End                                                             | -                      | Silent interval                                                                                               |
| Total number of bytes                                           | 27                     |                                                                                                               |

(Example 7) Change the push current limit from 70% to 50% during a push-motion operation.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag                                       |
|----------------------|-----------------------|--------------|--------------------------------|----------|----------------------------------------------------|
| 50                   | 20                    | 100          | 0.3                            | 70 → 50  | Push-motion operation<br>(bit 1 = 1, bit 2 = 0, 1) |

■ Query: 01 10 9907 0002 04 007F 0006 C5C5

■ Response: 01 10 9907 0002 DE95

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

#### ■ Breakdown of Query Message

| Field                               | RTU mode 8-bit data | Remarks                                                                           |
|-------------------------------------|---------------------|-----------------------------------------------------------------------------------|
| Start                               | -                   | Silent interval                                                                   |
| Slave address                       | 01                  | Axis No.0 + 1                                                                     |
| Function code                       | 10                  |                                                                                   |
| Start address                       | 99 07               | The start address is the target position specification register 9907 <sub>H</sub> |
| Number of registers                 | 00 02               | Addresses 9907 <sub>H</sub> to 9908 <sub>H</sub> are written.                     |
| Number of bytes                     | 04                  | 2 registers × 2 = 4 bytes → 4 <sub>H</sub>                                        |
| New data 8 (Push)<br>Input unit [%] | 00 7F               | 50% → 7F <sub>H</sub>                                                             |
| New data 9 (Control flag)           | 00 06               | (Push setting)<br>0110 <sub>b</sub> → 0006 <sub>H</sub>                           |
| Error check                         | C5 C5               | CRC checksum calculation result → C5C5 <sub>H</sub>                               |
| End                                 | -                   | Silent interval                                                                   |
| Total number of bytes               | 13                  |                                                                                   |

### (7) Note (changing positioning band during movement)

---



#### Caution

- The positioning band cannot be changed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.

→ Cannot be changed. If data is written, the data is reflected in the next positioning.

Write the target position specification register (9900<sub>H</sub>) through acceleration/deceleration specification register (9906<sub>H</sub>)



Start normal operation



Write the positioning band specification registers (9902<sub>H</sub> and 9903<sub>H</sub>)



The actuator continues with the normal operation at the original positioning band setting

Complement: Writing the positioning band specification registers alone cannot effect an actual movement command.

Therefore, the data changed by writing the positioning band specification registers (9902<sub>H</sub> and 9903<sub>H</sub>) will become effective when the next movement command is executed.

---

### 5.6.2 Writing Position Table Data

#### [1] Function

Position table data can be changed using this query.

Every time an access is made to the start address list (Address +0000<sub>H</sub> to +000E<sub>H</sub>), it is read out of the non-volatile memory in the unit of 1 position data, and gets stored to the non-volatile memory (EEPROM, FeRAM) after the writing is executed. Check the limit for number of writing from the [basic specifications described in an instruction manual for each controller].

- \* The EEPROM has a rewrite life of approx. 100, 000 times due to device limitations. If the position table data is written frequently, the EEPROM will reach its rewrite life quickly and a failure may occur. Accordingly, be careful not to let unexpected loops, etc., occur due to the logics on the host side.

There is no limit to number of writing for FeRAM.

#### [2] Start address list

In a query input, each address is calculated using the formula below:

$$1000_{\text{H}} + (16 \times \text{Position No.})_{\text{H}} + \text{Address (Offset)}_{\text{H}}$$

Example : Change the speed command register for position No. 200

$$1000_{\text{H}} + (16 \times 200 = 3200)_{\text{H}} + 4_{\text{H}}$$

$$= 1000_{\text{H}} + \text{C80}_{\text{H}} + 4_{\text{H}}$$

$$= 1\text{C84}_{\text{H}}$$

“1C84” becomes the input value for the start address field of this query.

**Note** The maximum position number varies depending on the controller model and the PIO pattern currently specified.

■ Position data change registers

| Address | Symbol | Name                        | Sign | Register size | Byte size | Input unit |
|---------|--------|-----------------------------|------|---------------|-----------|------------|
| +0000   | PCMD   | Target position             | ○    | 2             | 4         | 0.01mm     |
| +0002   | INP    | Positioning band            |      | 2             | 4         | 0.01mm     |
| +0004   | VCMD   | Speed command               |      | 2             | 4         | 0.01mm/s   |
| +0006   | ZNMP   | Individual zone boundary +  | ○    | 2             | 4         | 0.01mm     |
| +0008   | ZNLP   | Individual zone boundary -  | ○    | 2             | 4         | 0.01mm     |
| +000A   | ACMD   | Acceleration command        |      | 1             | 2         | 0.01G      |
| +000B   | DCMD   | Deceleration command        |      | 1             | 2         | 0.01G      |
| +000C   | PPOW   | Push-current limiting value |      | 1             | 2         | %          |
| +000D   | LPOW   | Load current threshold      |      | 1             | 2         | %          |
| +000E   | CTLF   | Control flag specification  |      | 1             | 2         |            |

\* Addresses starting with "+" indicate offsets.

Note RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC cannot write in to this address. They return an exceptional response.

[3] Query format

1 register = 2 bytes = 16 bit data

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data                       | Remarks                                                                                         |
|-------------------------|-------------------------------------------|----------------------------------------------|-------------------------------------------------------------------------------------------------|
| Start                   | -                                         |                                              | Silent interval                                                                                 |
| Slave address [H]       | 1                                         | Arbitrary                                    | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> if broadcast is specified |
| Function code [H]       | 1                                         | 10                                           | Numerical value specification                                                                   |
| Start address [H]       | 2                                         | Arbitrary                                    | Refer to [5.6.2 [2] Start address list]                                                         |
| Number of registers [H] | 2                                         | Arbitrary                                    | Refer to [5.6.2 [2] Start address list]                                                         |
| Number of bytes [H]     | 1                                         | In accordance<br>with the above<br>registers | A value corresponding to twice the<br>number of registers specified above is<br>input.          |
| Changed data 1 [H]      | 2                                         | -                                            | Refer to [5.6.2 [2] Start address list]                                                         |
| Changed data 2 [H]      | 2                                         | -                                            | Refer to [5.6.2 [2] Start address list]                                                         |
| Changed data 3 [H]      | 2                                         | -                                            | Refer to [5.6.2 [2] Start address list]                                                         |
| :                       | :                                         | -                                            | :                                                                                               |
| Error check [H]         |                                           | CRC (16 bits)                                |                                                                                                 |
| End                     | -                                         | -                                            | Silent interval                                                                                 |
| Total number of bytes   | Up to 256                                 | -                                            |                                                                                                 |



## [4] Response format

If the change is successful, a response message that is effectively a copy of the query message, except for the byte count and new data, will be returned.

| Field                   | Number of data items<br>(number of bytes) | RTU mode<br>8-bit data | Remarks                                                                                            |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------------------------------------------------|
| Start                   | -                                         | -                      | Silent interval                                                                                    |
| Slave address [H]       | 1                                         | Arbitrary              | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>"00 <sub>H</sub> " if broadcast is specified |
| Function code [H]       | 1                                         | 10                     | Numerical value specification                                                                      |
| Start address [H]       | 2                                         | Arbitrary              | Refer to [5.6.2 [2] Start address list0                                                            |
| Number of registers [H] | 2                                         | Arbitrary              | Refer to [5.6.2 [2] Start address list0                                                            |
| Error check [H]         | 2                                         | CRC (16 bits)          |                                                                                                    |
| End                     | -                                         | -                      | Silent interval                                                                                    |
| Total number of bytes   | 8                                         | -                      |                                                                                                    |

## [5] Detailed explanation of registers

■ Target position specification registers (PCMD)

The positioning target position in PTP Operation should be indicated in a position on the absolute coordinates. The value of this register is set in units of 0.01mm in a range of -999999 to 999999 (FFF0BDC1<sub>H</sub> (Note 1) to 000F423F<sub>H</sub>).

When the absolute coordinate is indicated, operation starts with 0.2mm in front (Note 2) of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900<sub>H</sub>) is rewritten. In other words, a numerical movement command can be issued simply by writing a target position in this register.

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

■ Positioning band Specification Register (INP)

This register is used in two different ways depending on the type of operation. The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete. The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01mm in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>).

Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later.



### Caution

- It is necessary that the positioning band is at or more than the value figured out with the formulas below.
  - For Servo motor:  $\text{Actuator Lead Length} \div \text{Encoder Pulse}$
  - For Pulse Motor:  $\text{Actuator Lead Length} \div \text{Encoder Pulse} \times 3$

Apply the servo motor formula for RCP6 Actuator

#### ■ Speed Specification Register (VCMD)

This register specifies the moving speed. The value of this register is set in units of 0.01mm/s in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

#### ■ Individual Zone Boundaries $\pm$ (ZNMP, ZNLP)

These registers output zone signals that are effective only during positioning, separately from the zone boundaries set by parameters.

Set in ZNMP the positive zone signal output boundary expressed using absolute coordinates, and set the negative zone signal output boundary in ZNLP. The corresponding bit in the zone register remains ON while the current position is within these positive and negative boundaries. The value of this register is set in units of 0.01mm, and in a range of -999999 to 999999 (FFF0BDC1<sub>H</sub> (Note 1) to 000F423F<sub>H</sub>) for both registers. However, ZNMP must be greater than ZNLP.

Set the same value in both ZNMP and ZNLP to disable the individual zone output.

Note 1 To set a negative value, use a two's complement.

#### ■ Acceleration specification register registers (ACMD)

This register specifies the acceleration during positioning. The value of this register is set in units of 0.01G in a range of 1 to 300 (1 to 012C<sub>H</sub>). If the specified value exceeds the maximum acceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

### ■ Deceleration specification register (ACMD)

This register specifies the deceleration during positioning.

The value of this register is set in units of 0.01G in a range of 1 to 300 (1 to 012C<sub>H</sub>). If the specified value exceeds the maximum deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

### ■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name            | Pushable range [%] | Settable range (input value) [H] |
|--------------------------------|--------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 (Note 1)  | 33 to B2                         |
| RCS2-RA13R                     | 20 to 200          | 33 to 1FE                        |

Note 1 The setting ranges may vary depending on the actuator.

For details, refer to the [IAI catalog] or [operation manual of actuator].

Operation should start once this register is overwritten. Therefore, it can be realized by this register when it is required to change the current limit during the pressing operation.

Sample push-motion current setting:

- When setting the current to 20%

$$255 (100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}} \text{ (Convert into hexadecimal number)}$$

### ■ Load Output Current Threshold (LPOW)

To perform load output judgment, set the current threshold in LPOW. Set an appropriate value according to the actuator used, just like the push current limit (PPOW). If load output judgment is not performed, set "0".

### ■ Control Flag Specification register (CTLF)

Refer to [5.6.1 [5] Control flag specification register].

## [6] Sample query

A sample query that rewrites all data of position No. 12 of axis No. 0 is shown below.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Individual zone boundary+ [mm] | Individual zone boundary- [mm] | Acceleration [G] | Deceleration [G] | Push [%] | Load Output Current Threshold [%] | Movement control |
|----------------------|-----------------------|--------------|--------------------------------|--------------------------------|------------------|------------------|----------|-----------------------------------|------------------|
| 100                  | 0.1                   | 200          | 60                             | 40                             | 0.01             | 0.3              | 0        | 0                                 | Normal movement  |

■ Query (silent intervals are inserted before and after the query)

01 10 10 C0 00 0F 1E 00 00 27 10 00 00 00 0A 00 00 4E 20 00 00 17 70 00 00 0F A0 00 01 00 1E 00 00 00 00 00 00 70 1E

■ Received response 01 10 10 C0 00 0F 84 F1

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field                                                                | RTU mode 8-bit data | Remarks                                                                                                               |
|----------------------------------------------------------------------|---------------------|-----------------------------------------------------------------------------------------------------------------------|
| Start                                                                | -                   | Silent interval                                                                                                       |
| Slave address                                                        | 01                  | Axis No.0 + 1                                                                                                         |
| Function code                                                        | 10                  |                                                                                                                       |
| Start address                                                        | 10 C0               | The start address is the target position specification register 10C0 <sub>H</sub> for position No. 12. <sup>(*)</sup> |
| Number of registers                                                  | 00 0F               | Total 15 registers of register symbols PCMD to CTLF are specified to be written.                                      |
| Number of bytes                                                      | 1E                  | 15 registers × 2 = 30 bytes → 1E <sub>H</sub>                                                                         |
| New data 1, 2<br>(Target position )<br>Input unit (0.01mm)           | 00 00               | All upper bits of the 32-bit data are "0".                                                                            |
|                                                                      | 27 10               | 100mm × 100 = 10000 → 2710 <sub>H</sub>                                                                               |
| New data 3, 4<br>(Positioning band)<br>Input unit (0.01mm)           | 00 00               | All upper bits of the 32-bit data are "0".                                                                            |
|                                                                      | 00 0A               | 0.1mm × 100 = 10 → 000A <sub>H</sub>                                                                                  |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                       | 00 00               | All upper bits of the 32-bit data are "0".                                                                            |
|                                                                      | 4E 20               | 200mm/s × 100 = 20000 → 4E20 <sub>H</sub>                                                                             |
| New data 7, 8<br>(Individual zone boundary+)<br>Input unit (0.01mm)  | 00 00               | All upper bits of the 32-bit data are "0".                                                                            |
|                                                                      | 17 70               | 60mm × 100 = 6000 → 1770 <sub>H</sub>                                                                                 |
| New data 9, 10<br>(Individual zone boundary-)<br>Input unit (0.01mm) | 00 00               | All upper bits of the 32-bit data are "0".                                                                            |
|                                                                      | 0F A0               | 40mm × 100 = 4000 → 0FA0 <sub>H</sub>                                                                                 |
| New data 11 (Acceleration)<br>Input unit (0.01G)                     | 00 01               | 0.01G × 100 = 1 → 0001 <sub>H</sub>                                                                                   |
| New data 12 (Deceleration)<br>Input unit (0.01G)                     | 00 1E               | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                                   |
| New data 13 (Push)<br>Input unit [%]                                 | 00 00               | 0% → 0 <sub>H</sub>                                                                                                   |

| Field                                     | RTU mode<br>8-bit data | Remarks                                                                                           |
|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------|
| New data 14 (Threshold)<br>Input unit [%] | 00 00L                 | 0% → 0 <sub>H</sub>                                                                               |
| New data 15 (Control flag)                | 00 00                  | All bits are "0", because normal operation is specified.<br>0000 <sub>b</sub> → 0000 <sub>H</sub> |
| Error check                               | 70 1E                  | CRC checksum calculation result → 701E <sub>H</sub>                                               |
| End                                       | -                      | Silent interval                                                                                   |
| Total number of bytes                     | 39                     |                                                                                                   |

\*1 Calculation of start address

Example: All data of position No. 12 is changed. Accordingly, the target position address of position No. 12 is set in the start address field of this query.

$$1000_{\text{H}} + (16 \times 12 = 192)_{\text{H}} + 0_{\text{H}}$$

$$= 1000_{\text{H}} + \text{C0}_{\text{H}} + 0_{\text{H}}$$

$$= 10\text{C0}_{\text{H}}$$

"10C0" becomes the input value for the start address field of this query.

Shown below are the screens of IAI's IA-OS, indicating how position data changes before and after a query message is sent.


(Note) It is not possible to connect both PC software and Modbus at the same time. The example below shows the case when switching the connection between IA-OS and Modbus.

■ Before a query is sent


| No. | Position [mm] | Velocity [mm/s] | Acceleration [G] | Deceleration [G] | Operation type (Pressing force[%]) | Load current threshold[%] | Positioning band[mm] / pressing band[mm] | Zone + side [mm] | Zone - side [mm] | Acceleration/deceleration mode | Positioning method |
|-----|---------------|-----------------|------------------|------------------|------------------------------------|---------------------------|------------------------------------------|------------------|------------------|--------------------------------|--------------------|
| 9   |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 10  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 11  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 12  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 13  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |

■ After a query is sent

| No. | Position [mm] | Velocity [mm/s] | Acceleration [G] | Deceleration [G] | Operation type (Pressing force[%]) | Load current threshold[%] | Positioning band[mm] / pressing band[mm] | Zone + side [mm] | Zone - side [mm] | Acceleration/deceleration mode | Positioning method  |
|-----|---------------|-----------------|------------------|------------------|------------------------------------|---------------------------|------------------------------------------|------------------|------------------|--------------------------------|---------------------|
| 9   |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |
| 10  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |
| 11  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |
| 12  | 0.00          | 200.00          | 0.01             | 0.30             | Positioning                        | 0                         | 0.10                                     | 60.00            | 40.00            | 0:Trapezoid                    | 0:Absolute position |
| 13  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |

\* The overwritten data is not displayed until the button  is pressed or the Edit Position Data window is reopened.



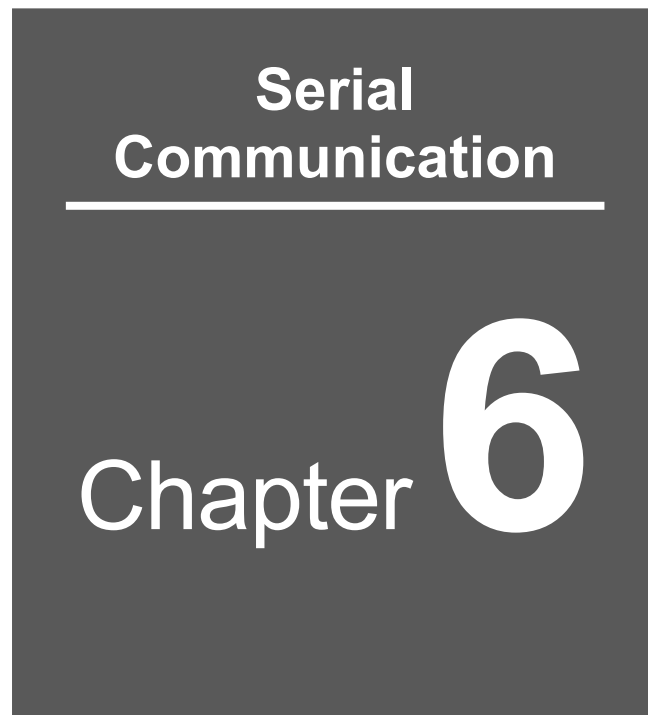

# Modbus ASCII

|        |                                                                                                        |      |
|--------|--------------------------------------------------------------------------------------------------------|------|
| 6.1    | Message Frames (Query and Response) .....                                                              | 6-1  |
| 6.2    | ASCII Code Table .....                                                                                 | 6-5  |
| 6.3    | List of ASCII Mode Queries.....                                                                        | 6-6  |
| 6.4    | Data and Status Reading (Function code 03) .....                                                       | 6-10 |
| 6.4.1  | Reading Consecutive Multiple Registers .....                                                           | 6-10 |
| 6.4.2  | Alarm Detail Description Reading (ALA0, ALC0, ALT0).....                                               | 6-14 |
| 6.4.3  | Position Data Description Reading (PCMD, INP, VCMD, ZNMP,<br>ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF) ..... | 6-16 |
| 6.4.4  | Total moving count Reading (TLMC).....                                                                 | 6-19 |
| 6.4.5  | Total moving distance Reading (ODOM) (in 1mm units).....                                               | 6-21 |
| 6.4.6  | Current Time Reading (TIMN) .....                                                                      | 6-23 |
| 6.4.7  | Total FAN Driving Time Reading (TFAN).....                                                             | 6-27 |
| 6.4.8  | Current Position Reading (PNOW) .....                                                                  | 6-29 |
| 6.4.9  | Currently Generated Alarm Code Reading (ALMC).....                                                     | 6-31 |
| 6.4.10 | I/O Port Input Signal Status Reading (DIPM) .....                                                      | 6-33 |
| 6.4.11 | I/O Port Output Signal Status Reading (DOPM) .....                                                     | 6-38 |
| 6.4.12 | Controller Status Signal Reading 1 (DSS1) .....                                                        | 6-43 |

|        |                                                              |       |
|--------|--------------------------------------------------------------|-------|
| 6.4.13 | Controller Status Signal Reading 2 (DSS2) .....              | 6-45  |
| 6.4.14 | Controller Status Signal Reading 3 (DSSE) .....              | 6-47  |
| 6.4.15 | Controller Status Signal Reading 4 (STAT) .....              | 6-49  |
| 6.4.16 | Current Speed Reading (VNOW) .....                           | 6-51  |
| 6.4.17 | Current Ampere Reading (CNOW) .....                          | 6-53  |
| 6.4.18 | Deviation Reading (DEVI) .....                               | 6-55  |
| 6.4.19 | Total Time after Power On Reading (STIM) .....               | 6-57  |
| 6.4.20 | Special Input Port Input Signal Status Reading (SIPM) .....  | 6-59  |
| 6.4.21 | Zone Output Signal Status Reading (ZONS) .....               | 6-61  |
| 6.4.22 | Positioning Completed Position Number Reading (POSS)         |       |
|        | Exected Program Number Register (Servo Press Type) (POSS) .. | 6-61  |
| 6.4.23 | Controller Status Signal Reading 5 (SSSE) .....              | 6-65  |
| 6.4.24 | Current Load Reading...SCON-CA/CB, PCON-CBP only .....       | 6-67  |
| 6.4.25 | Overload Level Monitor Reading (OLLV)                        |       |
|        | ...SCON-CA/CAL/CB Only .....                                 | 6-69  |
| 6.4.26 | Press Program Alarm Code Reading (ALMP)                      |       |
|        | ...Servo Press Type Only .....                               | 6-71  |
| 6.4.27 | Alarm Generated Press Program No. Reading (ALMP)             |       |
|        | ...Servo Press Type Only .....                               | 6-73  |
| 6.4.28 | Press Program Status Register Reading (PPST)                 |       |
|        | ...Servo Press Type Only .....                               | 6-75  |
| 6.4.29 | Press Program Judgement Status Register Reading (PPJD)       |       |
|        | ...Servo Press Type Only .....                               | 6-77  |
| 6.5    | Operation Commands and Data Rewrite                          |       |
|        | (Function code 05) .....                                     | 6-79  |
| 6.5.1  | Writing to Coil .....                                        | 6-79  |
| 6.5.2  | Safety Speed Enable/Disable Switching (SFTY) .....           | 6-80  |
| 6.5.3  | Servo ON/OFF (SON) .....                                     | 6-82  |
| 6.5.4  | Alarm Reset (ALRS) .....                                     | 6-84  |
| 6.5.5  | Brake Forced Release (BKRL) .....                            | 6-86  |
| 6.5.6  | Pause (STP) .....                                            | 6-88  |
| 6.5.7  | Home Return (HOME) .....                                     | 6-90  |
| 6.5.8  | Positioning Start Command (CSTR) .....                       | 6-92  |
| 6.5.9  | Jog/Inch Switching (JISL) .....                              | 6-94  |
| 6.5.10 | Teaching Mode Command (MOD) .....                            | 6-96  |
| 6.5.11 | Position Data Load Command (TEAC) .....                      | 6-98  |
| 6.5.12 | Jog+ Command (JOG+) .....                                    | 6-100 |



|        |                                                                                          |       |
|--------|------------------------------------------------------------------------------------------|-------|
| 6.5.13 | Jog- Command (JOG-)                                                                      | 6-102 |
| 6.5.14 | Start Positions 0 to 7 (ST0 to ST7) Movement Command<br>(Limited to solenoid valve mode) | 6-104 |
| 6.5.15 | Load Cell Calibration Command (CLBR)                                                     | 6-106 |
| 6.5.16 | PIO/Modbus Switching Setting (PMSL)                                                      | 6-109 |
| 6.5.17 | Deceleration Stop (STOP)                                                                 | 6-111 |
| 6.5.18 | Axis operation permission (ENMV) (Servo Press Type Only)                                 | 6-113 |
| 6.5.19 | Program Home Position Movement (PHOM)<br>(Servo Press Type Only)                         | 6-115 |
| 6.5.20 | Search Stop (SSTP) (Servo Press Type Only)                                               | 6-117 |
| 6.5.21 | Program compulsoly finish (FPST) (Servo Press Type Only)                                 | 6-119 |
| 6.5.22 | Program Start (PSTR) (Servo Press Type Only)                                             | 6-121 |
| 6.6    | Direct Writing of Control Information (Function code 06)                                 | 6-123 |
| 6.6.1  | Writing to Registers                                                                     | 6-123 |
| 6.7    | Direct Writing of Positioning Data (Function code 10)                                    | 6-128 |
| 6.7.1  | Numerical Value Movement Command                                                         | 6-128 |
| 6.7.2  | Writing Position Table Data                                                              | 6-145 |

## 6.1 Message Frames (Query and Response)

The message frame of the serial communication in Modbus protocol should be as stated in the table below.

| Start       | Address      | Function code | Data         | CRC Check    | End          |
|-------------|--------------|---------------|--------------|--------------|--------------|
| 1 character | 2 characters | 2 characters  | n characters | 2 characters | 2 characters |
| 1 byte      | 2 bytes      | 2 bytes       | nx2 bytes    | 2 bytes      | 2 bytes      |

### [1] Start

The Start field is equivalent to the header field and “:” (colon) is used in the ASCII mode. It is expressed as 3A<sub>H</sub> in ASCII code.

### [2] Address

This field specifies the addresses of connected RC controllers (01<sub>H</sub> to 10<sub>H</sub>).

Set Address:

Address = axis number + 1

in ASCII code.

Example) The axis number is 30<sub>H</sub> 32<sub>H</sub>.



### Caution

- The address is not equal to the corresponding axis number: be careful when making settings.
- ROBONET and RCP6S (RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC) + PLC Connection Unit are not applicable for ASCII Mode.

**[3] Function**

The table below summarizes the function codes and functions that can be used with RC controllers.

| Code [HEX]      | Name                      | Function                                  |
|-----------------|---------------------------|-------------------------------------------|
| 01 <sub>H</sub> | Read Coil Status          | Read coils/DOs.                           |
| 02 <sub>H</sub> | Read Input Status         | Read input statuses/DIs.                  |
| 03 <sub>H</sub> | Read Holding Registers    | Read holding registers.                   |
| 04 <sub>H</sub> | Read Input Registers      | Read input registers.                     |
| 05 <sub>H</sub> | Force Single Coil         | Write one coil/DO.                        |
| 06 <sub>H</sub> | Preset Single Register    | Write holding register.                   |
| 07 <sub>H</sub> | Read Exception Status     | Read exception statuses.                  |
| 0F <sub>H</sub> | Force Multiple Coils      | Write multiple coils/DOs at once.         |
| 10 <sub>H</sub> | Preset Multiple Registers | Write multiple holding registers at once. |
| 11 <sub>H</sub> | Report Slave ID           | Query a slave's ID.                       |
| 17 <sub>H</sub> | Read / Write Registers    | Read/write registers.                     |

Note This manual explains about   mark function codes.

## Reference

- The ROBONET gateway supports three types of function codes (03<sub>H</sub>, 06<sub>H</sub> and 10<sub>H</sub>). Refer to the [Separate ROBONET Instruction manual (ME0208)]

**[4] Data**

Use this field to add data specified by a function code. It is also allowed to omit data if data addition is not specified by function codes.

**[5] LRC Check**

In the ASCII mode, an error check field conforming to the LRC method is automatically <sup>\*1</sup> included in order to check the message content excluding the first colon and CR/LF. Moreover, checking is carried out regardless of the parity check method of individual characters in messages.

The LRC field consists of two ASCII code characters. The LRC value is calculated by the sender that appends the LRC field to the message. The recipient recalculates the LRC value while receiving the message, and compares the calculation result against the actual value received in the LRC field. If the two values do not match, an error will generate.

\* The host side must create a function that calculates the LRC value.

- LRC check calculation example (area is the target range of error check)

In case the message query is as follows: [':'] ['01'] ['05'] ['040B'] ['0000'] [LRC] [CR] [LF]

1) First, add all numerical values in units of bytes.

Total value added =  $01_H + 05_H + 04_H + 0B_H + 00_H + 00_H = 15_H$

2) Next, an 8-bit-based 2's complement of this value is computed, yielding the value

FFFFFFEB<sub>H</sub>. The LRC value is obtained by extracting the least significant byte.

Thus the LRC value is "EB".

[6] End

This is equivalent to the trailer (delimiter), and use "CR/LF" in the ASCII mode. In ASCII code, 00<sub>H</sub> and 0A<sub>H</sub> are displayed.

[7] Broadcast

It is possible to send a query containing same data to all connected axes by specifying the address 00<sub>H</sub>. In this case, no response is returned from the controllers.

Note, however, that the function codes etc. that can be used with this function are limited; care should be taken when using the function. Please check the function codes that can be used in [5.2 List of RTU Mode Queries].

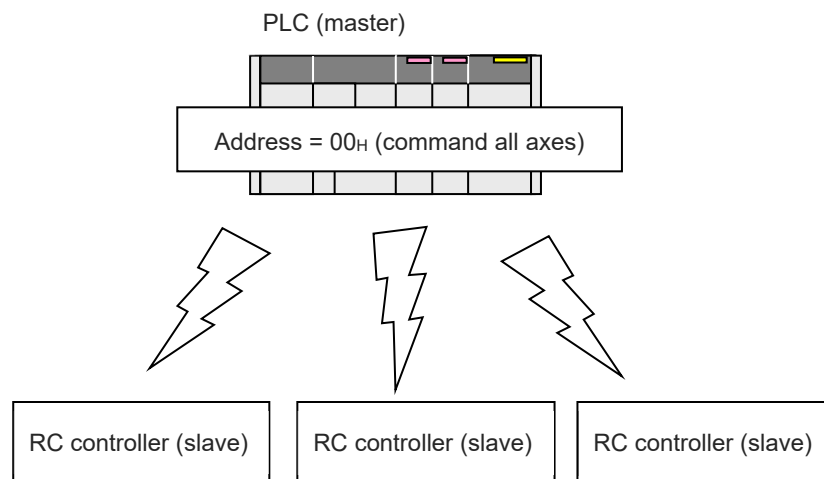


Fig. 6.1




### Caution

- The sizes of send/receive buffers are set to 256 bytes for the RC controllers, respectively. Make sure to keep the messages small enough such that messages sent from the host side do not exceed the receive buffer and data requests do not exceed send buffer.
- If the number of data items results in an odd number of bytes, caution must be taken for the reasons below.

The data is communicated on a byte-by-byte basis in Modbus communication. In many cases, however, the data is treated in units of 2 bytes on the master side. If the number of data items becomes odd, 00<sub>H</sub> (i.e., NULL) may be added automatically at the end of a packet in some cases.

Controllers are configured such that the Modbus RTU is basically used as the interface on the master side. Since the controller normally stands by for reception in the RTU mode, and then makes judgment whether the code is ASCII or not after the reception, it cannot manage header/delimiter fields. For this reason, communication in the ASCII mode is disabled in such cases.

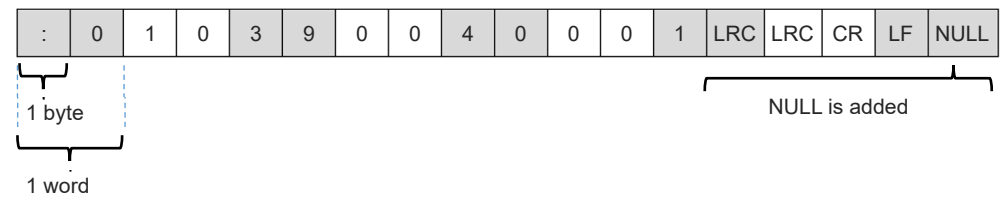

## 6.2 ASCII Code Table

ASCII Code (numbers and characters enclosed with • are converted and sent.)

| Most significant 3bit<br>Least significant 4bit | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7   |
|-------------------------------------------------|-----|-----|----|---|---|---|---|-----|
| 0                                               | NUL | DLE | SP | 0 | @ | P |   | p   |
| 1                                               | SOH | DC1 | !  | 1 | A | Q | a | q   |
| 2                                               | STX | DC2 | "  | 2 | B | R | b | r   |
| 3                                               | ETX | DC3 | #  | 3 | C | S | c | s   |
| 4                                               | EOT | DC4 | \$ | 4 | D | T | d | t   |
| 5                                               | ENQ | NAK | %  | 5 | E | U | e | u   |
| 6                                               | ACK | SYN | &  | 6 | F | V | f | v   |
| 7                                               | BEL | ETB | '  | 7 | G | W | g | w   |
| 8                                               | BS  | CAN | (  | 8 | H | X | h | x   |
| 9                                               | HT  | EM  | )  | 9 | I | Y | i | y   |
| A                                               | LF  | SUB | *  | : | J | Z | j | z   |
| B                                               | VT  | ESC | +  | ; | K | [ | k | {   |
| C                                               | FF  | IS4 | ,  | < | L | ¥ | l |     |
| D                                               | CR  | IS4 | -  | = | M | ] | m | }   |
| E                                               | SO  | IS4 | .  | > | N | ^ | n |     |
| F                                               | SI  | IS4 | /  | ? | O | — | o | DEL |

- NUL: Null character
- ETX: End of text
- ACK: Acknowledgment
- HT: Horizontal tab
- FF: Form feed
- SI: Shift in
- NAC: Negative acknowledgment
- CAN: Cancel
- ESC: Escape
- SOH: Start of header
- EOT: End of transmission
- BEL: Bell
- LF: Line feed
- CR: Carriage return
- DLE: Data link escape
- SYN: Synchronized characters
- EM: End of media
- SP: Space
- STX: Start of text
- ENQ: Enquiry
- BS: Backspace
- VT: Vertical tab
- SO: Shift out
- DC\*: Device control \*
- ETB: End of transmission block
- DEL: Delete

Example) "1" is 31<sub>H</sub> in ASCII code and "00110001" in binary number presentation.

## 6.3 List of ASCII Mode Queries

FC: Function code

PIO: Parallel I/O (input/output of an I/O connector)

\* The circle marks in the Simultaneous use with PIO and Broadcast columns indicate queries that can be used simultaneously with PIO and in broadcast communication, respectively.

| FC | Function                                                                            | Symbol               | Function Summary                                                                                                                                                                                                                                                                                                                                                                                                                       | Combination with PIO | Broad-cast | Reference |
|----|-------------------------------------------------------------------------------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|-----------|
| 03 | Multiple FC03 register reading                                                      | None                 | This function can be used to successively read multiple registers that use function 03.                                                                                                                                                                                                                                                                                                                                                | ○                    |            | 6.4.1     |
| 03 | Alarm detail description reading                                                    | ALA0<br>ALC0<br>ALT0 | This bit reads the alarm codes, alarm addresses, detail codes and alarm occurrence time (passed time) that lately occurred.                                                                                                                                                                                                                                                                                                            | ○                    |            | 6.4.2     |
| 03 | Position data <sup>(Note 1)</sup> reading                                           | Refer to right       | This bit reads the indicated number in the position data. (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF)                                                                                                                                                                                                                                                                                                                  | ○                    |            | 6.4.3     |
| 03 | Total moving count reading                                                          | TLMC                 | This bit reads the Total moving count.                                                                                                                                                                                                                                                                                                                                                                                                 | ○                    |            | 6.4.4     |
| 03 | Total moving distance reading                                                       | ODOM                 | This bit reads the Total moving distance in units of 1 m.                                                                                                                                                                                                                                                                                                                                                                              | ○                    |            | 6.4.5     |
| 03 | Current time reading                                                                | TIMN                 | This bit reads the current time. (PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB only)                                                                                                                                                                                                                                                                                                                                  | ○                    |            | 6.4.6     |
| 03 | Total FAN driving time reading                                                      | TFAN                 | This bit reads the Total FAN driving time. (PCON-CFA/CFB, SCON-CAL and SCON-CB (400W or more) only)                                                                                                                                                                                                                                                                                                                                    | ○                    |            | 6.4.7     |
| 03 | Current position reading                                                            | PNOW                 | This function reads the current actuator position in units of 0.01 mm.                                                                                                                                                                                                                                                                                                                                                                 | ○                    |            | 6.4.8     |
| 03 | Currently generated alarm code                                                      | ALMC                 | This function reads alarm codes that are presently detected.                                                                                                                                                                                                                                                                                                                                                                           | ○                    |            | 6.4.9     |
| 03 | I/O port input status reading                                                       | DIPM                 | This function reads the ON/OFF statuses of PIO input ports.                                                                                                                                                                                                                                                                                                                                                                            | ○                    |            | 6.4.10    |
| 03 | I/O port output status reading                                                      | DOPM                 | This function reads the ON/OFF statuses of PIO output ports.                                                                                                                                                                                                                                                                                                                                                                           | ○                    |            | 6.4.10    |
| 03 | Controller status signal reading 1 (device status 1) (Operation preparation status) | DSS1                 | This function reads the following 14 statuses:<br>(1) Emergency stop<br>(2) Safety speed enabled/disabled<br>(3) Controller ready<br>(4) Servo ON/OFF<br>(5) Missed work part in push-motion operation<br>(6) Major failure<br>(7) Minor failure<br>(8) Absolute error<br>(9) Brake<br>(10) Pause<br>(11) Home return completion<br>(12) Position complete<br>(13) Load cell calibration complete<br>(14) Load cell calibration status | ○                    |            | 6.4.12    |

### 6.3 List of ASCII Mode Queries

| FC | Function                                                                                           | Symbol | Function Summary                                                                                                                                                                                                                                                                                                                                                      | Combination with PIO | Broad-cast | Reference |
|----|----------------------------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|-----------|
| 03 | Controller status signal reading 2<br>(device status 2)<br>(Operation preparation 1 status)        | DSS2   | This function reads the following 15 statuses:<br>(1) Enable<br>(2) Load output judgment (check-range load current threshold)<br>(3) Torque level (load current threshold)<br>(4) Teaching mode (normal/teaching)<br>(5) Position data load (normal/complete)<br>(6) Jog+ (normal/command active)<br>(7) Jog- (normal/command active)<br>(8) Position complete 7 to 0 | ○                    |            | 6.4.13    |
| 03 | Controller status signal reading 3<br>(extended device status)<br>(Operation preparation 2 status) | DSSE   | This function reads the following 9 statuses:<br>(1) Emergency stop (emergency stop input port)<br>(2) Motor voltage low<br>(3) Operation mode (AUTO/MANU)<br>(4) Home return<br>(5) Push-motion operation in progress<br>(6) Excitation detection<br>(7) PIO/Modbus switching<br>(8) Position-data write completion status<br>(9) Moving                             | ○                    |            | 6.4.14    |
| 03 | Controller status signal reading 4<br>(System status)<br>(Controller status)                       | STAT   | This function reads the following 7 statuses:<br>(1) Automatic servo OFF<br>(2) Nonvolatile memory being accessed<br>(3) Operation mode (AUTO/MANU)<br>(4) Home return completion<br>(5) Servo ON/OFF<br>(6) Servo command<br>(7) Drive source ON (normal/cut off)                                                                                                    | ○                    |            | 6.4.15    |
| 03 | Current speed reading                                                                              | VNOW   | This function reads the current actuator speed in units of 0.01mm/s.                                                                                                                                                                                                                                                                                                  | ○                    |            | 6.4.16    |
| 03 | Current ampere reading                                                                             | CNOW   | This function reads the motor-torque current command value of the actuator in 1mA.                                                                                                                                                                                                                                                                                    | ○                    |            | 6.4.17    |
| 03 | Deviation reading                                                                                  | DEVI   | This function reads the deviation over a 1ms period in pulses.                                                                                                                                                                                                                                                                                                        | ○                    |            | 6.4.18    |
| 03 | Total power on time reading                                                                        | STIM   | Reads the accumulated time from the controller power-on in units of 1ms.                                                                                                                                                                                                                                                                                              | ○                    |            | 6.4.19    |
| 03 | Special input port input signal status reading<br>(Sensor input status)                            | SIPM   | This function reads the following 8 statuses:<br>(1) Command pulse NP<br>(2) Command pulse PP<br>(3) Mode switch<br>(4) Belt breakage sensor<br>(5) Home check sensor<br>(6) Overtravel sensor<br>(7) Creep sensor<br>(8) Limit sensor                                                                                                                                | ○                    |            | 6.4.20    |
| 03 | Zone output signal reading                                                                         | ZONS   | This function reads the following 6 statuses:<br>(1) LS2 (PIO pattern solenoid valve mode (3-point type))<br>(2) LS1 (PIO pattern solenoid valve mode (3-point type))<br>(3) LS0 (PIO pattern solenoid valve mode (3-point type))<br>(4) Position zone<br>(5) Zone 2<br>(6) Zone 1                                                                                    | ○                    |            | 6.4.21    |
| 03 | Positioning completed position number reading                                                      | POSS   | This function reads the following next statuses:<br>Complete position number bit 256 to 1                                                                                                                                                                                                                                                                             | ○                    |            | 6.4.22    |
|    | Exected program number register reading                                                            |        | Exected program number bit 32 to 1                                                                                                                                                                                                                                                                                                                                    |                      |            |           |



| FC | Function                                             | Symbol     | Function Summary                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Combination with PIO | Broad-cast | Reference |
|----|------------------------------------------------------|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|-----------|
| 03 | Controller status signal reading 5                   | SSSE       | This function reads the following 2 statuses:<br>(1) Cold start level alarm occurred/not occurred<br>(2) RTC (calendar) function used/not used (ERC3, PCON-CA/CFA/CB/CFB, ACON-CA/CB and DCON-CA/CB only)                                                                                                                                                                                                                                                                     | ○                    |            | 6.4.23    |
| 03 | Current load reading                                 | FBFC       | The current measurement on the load cell is read in units of 0.01N.                                                                                                                                                                                                                                                                                                                                                                                                           | ○                    |            | 6.4.24    |
| 03 | Press program status register reading                | PPST       | This function reads the following 12 statuses:<br>(1) Waiting<br>(2) While in returning operation<br>(3) While in depression operation<br>(4) Pressurize during the stop<br>(5) While in pressurizing operation<br>(6) While in probing operation<br>(7) While in approaching the operation<br>(8) Program home return during the movement<br>(9) Program alarm<br>(10) Program finished in normal condition<br>(11) While in executing program<br>(12) Program home position | ○                    |            | 6.4.28    |
| 03 | Press program judgement status register              | PPJD       | This function reads the following 6 statuses:<br>(1) Load judgement NG<br>(2) Load judgement OK<br>(3) Position (distance) judgement NG<br>(4) Position (distance) judgement OK<br>(5) Total judgement NG<br>(6) Total judgement OK                                                                                                                                                                                                                                           | ○                    |            | 6.4.29    |
| 05 | Safety speed enable/disable switching                | SFTY       | This function issues a command to enable/disable the safety speed.                                                                                                                                                                                                                                                                                                                                                                                                            |                      | ○          | 6.5.2     |
| 05 | Servo ON/OFF                                         | SON        | This function issues a command to turn the servo ON/OFF.                                                                                                                                                                                                                                                                                                                                                                                                                      |                      | ○          | 6.5.3     |
| 05 | Alarm reset                                          | ALRS       | This function issues a command to reset alarms/cancel the remaining travel.                                                                                                                                                                                                                                                                                                                                                                                                   |                      | ○          | 6.5.4     |
| 05 | Brake forced release                                 | BKRL       | This function issues a command to forcibly release the brake.                                                                                                                                                                                                                                                                                                                                                                                                                 |                      | ○          | 6.5.5     |
| 05 | Pause                                                | STP        | This function issues a pause command.                                                                                                                                                                                                                                                                                                                                                                                                                                         |                      | ○          | 6.5.6     |
| 05 | Home return                                          | HOME       | This function issues a home return operation command.                                                                                                                                                                                                                                                                                                                                                                                                                         |                      | ○          | 6.5.7     |
| 05 | Positioning start command                            | CSTR       | This signal starts a position number specified movement.                                                                                                                                                                                                                                                                                                                                                                                                                      |                      | ○          | 6.5.8     |
| 05 | Jog/inch switching                                   | JISL       | This function switches between the jogging mode and the inching mode                                                                                                                                                                                                                                                                                                                                                                                                          |                      | ○          | 6.5.9     |
| 05 | Teaching mode command                                | MOD        | This function switches between the normal mode and the teaching mode                                                                                                                                                                                                                                                                                                                                                                                                          |                      | ○          | 6.5.10    |
| 05 | Position data load command                           | TEAC       | This function issues a current position load command in the teaching mode.                                                                                                                                                                                                                                                                                                                                                                                                    |                      | ○          | 6.5.11    |
| 05 | Jog+ command                                         | JOG+       | This function issues a jogging/inching command in the direction opposite home.                                                                                                                                                                                                                                                                                                                                                                                                |                      | ○          | 6.5.12    |
| 05 | Jog- command                                         | JOG-       | This function issues a jogging/inching command in the direction of home.                                                                                                                                                                                                                                                                                                                                                                                                      |                      | ○          | 6.5.13    |
| 05 | Start positions 0 to 7 (ST0 to ST7) movement command | ST0 to ST7 | This function specifies position numbers effective only in the solenoid valve mode. The actuator can be operated with this command alone.                                                                                                                                                                                                                                                                                                                                     |                      | ○          | 6.5.14    |
| 05 | Load cell calibration command                        | CLBR       | Calibrate the load cell.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                      | ○          | 6.5.15    |

### 6.3 List of ASCII Mode Queries

| FC | Function                                    | Symbol | Function Summary                                                                                                                                                                                                                                                          | Combination with PIO | Broad-cast | Reference |
|----|---------------------------------------------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|-----------|
| 05 | PIO/Modbus switching setting                | PMSL   | This function issues a command to enable/disable PIO external command signals.                                                                                                                                                                                            |                      | ○          | 6.5.16    |
| 05 | Deceleration stop                           | STOP   | This function can decelerate the actuator to a stop.                                                                                                                                                                                                                      |                      | ○          | 6.5.17    |
| 05 | Axis operation permission                   | ENMV   | Setting can be made whether to permit the operation of the connected axes.                                                                                                                                                                                                |                      | ○          | 6.5.18    |
| 05 | Program home return movement                | PHOM   | Movement is made to the program home position set in each press program.                                                                                                                                                                                                  |                      | ○          | 6.5.19    |
| 05 | Search stop                                 | SSTP   | It can be stopped after search operation is complete.                                                                                                                                                                                                                     |                      | ○          | 6.5.20    |
| 05 | Program compulsoly finish                   | FPST   | It compulsoly finishes the press program.                                                                                                                                                                                                                                 |                      | ○          | 6.5.21    |
| 05 | Program executed                            | PSTR   | Press program execute it.                                                                                                                                                                                                                                                 |                      | ○          | 6.5.22    |
| 06 | Direct writing of control information write | -      | Change (write) the content of the controller's register.                                                                                                                                                                                                                  |                      | ○          | 6.6.1     |
| 10 | Numerical value movement command            | None   | This function can be used to send the "target position", "positioning band", "speed", "acceleration/deceleration", "push", and "control setting" in a single message to operate the actuator. Normal movement, relative movement and push-motion operation are supported. |                      | ○          | 6.7.1     |
| 10 | Writing position data table                 | None   | This function can be used to change all data of the specified position number for the specified axis.                                                                                                                                                                     |                      | ○          | 6.7.2     |

Note 1 For exception response, refer to [7.1 Responses at Errors (Exception Responses)].

## 6.4 Data and Status Reading (Function code 03)

### 6.4.1 Reading Consecutive Multiple Registers

#### [1] Function

These registers read the contents of registers in a slave. This function is not supported in broadcast communication.

#### [2] Start address list

With Controllers, the sizes of send/receive buffers are set to 256 bytes, respectively. Accordingly, a maximum of 123 registers worth of data consisting of 247 bytes (one register uses two bytes), which is 9 bytes (header + slave address + function code + error check + trailer) of 256 bytes, can be queried in the ASCII mode. In other words, all of the data listed below can be queried in a single communication. It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

| Address [H]                                                        | Symbol | Name                                                              | Sign | Register size | Byte |
|--------------------------------------------------------------------|--------|-------------------------------------------------------------------|------|---------------|------|
| 0500                                                               | ALA0   | Alarm detail code                                                 |      | 1             | 2    |
| 0501                                                               | ALA0   | Alarm address                                                     |      | 1             | 2    |
| 0502                                                               | -      | Always "0"                                                        | -    | 1             | 2    |
| 0503                                                               | ALC0   | Alarm code                                                        |      | 1             | 2    |
| 0504, 0505                                                         | ALT0   | Alarm occurrence time                                             |      | 2             | 4    |
| (Note)<br>Assignment is made in order from small position numbers. | PCMD   | Target position                                                   | ○    | 2             | 4    |
|                                                                    | INP    | Positioning band                                                  | ○    | 2             | 4    |
|                                                                    | VCMD   | Speed command                                                     |      | 2             | 4    |
|                                                                    | ZNMP   | Individual zone boundary +                                        | ○    | 2             | 4    |
|                                                                    | ZNLP   | Individual zone boundary -                                        | ○    | 2             | 4    |
|                                                                    | ACMD   | Acceleration command                                              |      | 1             | 2    |
|                                                                    | DCMD   | Deceleration command                                              |      | 1             | 2    |
|                                                                    | PPOW   | Push-current limiting value                                       |      | 1             | 2    |
|                                                                    | LPOW   | Load current threshold                                            |      | 1             | 2    |
|                                                                    | CTLF   | Control flag specification                                        |      | 1             | 2    |
| 8400, 8401                                                         | TLMC   | Total moving count <sup>(Note 1)</sup>                            |      | 2             | 4    |
| 8402, 8403                                                         | ODOM   | Total moving distance <sup>(Note 1)</sup>                         |      | 2             | 4    |
| 841E, 841F                                                         | TIMN   | Current time<br>(SCON-CA/CAL/CB only)                             |      | 2             | 4    |
| 8420, 8421                                                         | TIMN   | Current time<br>(PCON-CA/CFA/CB/CFB only)                         |      | 2             | 4    |
| 8422, 8423                                                         | TIMN   | Current time<br>(ACON-CA/CB, DCON-CA/CB only)                     |      | 2             | 4    |
| 842A, 842B                                                         | TFAN   | Total FAN driving time<br>(SCON-CAL, SCON-CB (400W or more) only) |      | 2             | 4    |
| 842E, 842F                                                         | TFAN   | Total FAN driving time<br>(PCON-CFA/CFB only)                     |      | 2             | 4    |

## 6.4 Data and Status Reading (Function code 03)

| Address [H] | Symbol | Name                                           | Sign | Register size | Byte |
|-------------|--------|------------------------------------------------|------|---------------|------|
| 9000, 9001  | PNOW   | Current position monitor                       | ○    | 2             | 4    |
| 9002        | ALMC   | Currently generated alarm code query           |      | 1             | 2    |
| 9003        | DIPM   | Input port query                               |      | 1             | 2    |
| 9004        | DOPM   | Output port monitor query                      |      | 1             | 2    |
| 9005        | DSS1   | Device status query 1                          |      | 1             | 2    |
| 9006        | DSS2   | Device status query 2                          |      | 1             | 2    |
| 9007        | DSSE   | Expansion device status query                  |      | 1             | 2    |
| 9008, 9009  | STAT   | System status query                            |      | 2             | 4    |
| 900A, 900B  | VNOW   | Current speed monitor                          | ○    | 2             | 4    |
| 900C, 900D  | CNOW   | Current ampere monitor                         | ○    | 2             | 4    |
| 900E, 900F  | DEVI   | Deviation monitor                              | ○    | 2             | 4    |
| 9010, 9011  | STIM   | System timer query                             |      | 2             | 4    |
| 9012        | SIPM   | Special input port query                       |      | 1             | 2    |
| 9013        | ZONS   | Zone status query                              |      | 1             | 2    |
| 9014        | POSS   | Positioning complete position No. status query |      | 1             | 2    |
| 9015        | SSSE   | Exected program No. register (Servo Press)     |      | 1             | 2    |
| 901E        | FBFC   | Expansion system status register               | ○    | 2             | 4    |
| 9020        | OLLV   | Current load data monitor                      |      | 1             | 2    |
| 9022        | ALMP   | Overload level monitor                         |      | 1             | 2    |
| 9023        | ALMP   | Press program alarm code                       |      | 1             | 2    |
| 9024        | PPST   | Alarm generated press program No.              |      | 1             | 2    |
| 9025        | PPJD   | Pres program status register                   |      | 1             | 2    |

Note 1 PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3 only

## [3] Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register (1 address) = 2 bytes = 16-bit data

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  |                      | ':'                               |                                                       |
| Slave address [H]       | 1                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 1                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | Arbitrary                         | Refer to [6.4.1 [2] Start address list].              |
| Number of registers [H] | 4                    | Arbitrary                         | Refer to [6.4.1 [2] Start address list].              |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 8                    | -                                 |                                                       |

## [4] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | -                                 | Number of specified registers in a query format × 2   |
| Data 1 [H]               | 4                    | -                                 |                                                       |
| Data 2 [H]               | 4                    | -                                 |                                                       |
| Data 3 [H]               | 4                    | -                                 |                                                       |
| Data 4 [H]               | 4                    | -                                 |                                                       |
| :                        | :                    | -                                 |                                                       |
| :                        | :                    | -                                 |                                                       |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | Up to 256            | -                                 |                                                       |

## [5] Query sample

A sample query that queries addresses 9000<sub>H</sub> to 9009<sub>H</sub> of a controller of axis No. 0 is shown below.

- Query

010390000000A62 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ','                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '0'                               | 39303030                      |
| Number of registers [H] | '0', '0', '0', 'A'                               | 30303041                      |
| Error check [H]         | '6', '2'<br>(in accordance with LRC calculation) | 3632                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

- Response

010314000000000000B80162002000800031C7000800111C [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ','                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '1', '4' (20 bytes = 10 registers)               | 3134                          |
| Data 1 [H]               | '0', '0', '0', '0', '0', '0', '0', '0'           | 3030303030303030              |
| Data 2 [H]               | '0', '0', '0', '0'                               | 30303030                      |
| Data 3 [H]               | 'B', '8', '0', '1'                               | 42383031                      |
| Data 4 [H]               | '6', '2', '0', '0'                               | 36323030                      |
| Data 5 [H]               | '2', '0', '0', '0'                               | 32303030                      |
| Data 6 [H]               | '8', '0', '0', '0'                               | 38303030                      |
| Data 7 [H]               | '3', '1', 'C', '7'                               | 33314337                      |
| Data 8 [H]               | '0', '0', '0', '8', '0', '0', '1', '1'           | 3030303830303131              |
| Error check [H]          | '1', 'C'<br>(in accordance with LRC calculation) | 3143                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.2 Alarm Detail Description Reading (ALA0, ALC0, ALT0)

#### [1] Function

This bit reads the alarm codes, alarm detail codes and alarm occurrence time that lately occurred. When any alarm is not issued, it is "0H".

For details, refer to [4.3.2 [1] to [3]].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                          |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                    |
| Start address [H]       | 4                    | '0', '5', '0', '0'                | Alarm detail code                                        |
| Number of registers [H] | 4                    | '0', '0', '0', '6'                | Reading addresses 0500 <sub>H</sub> to 0505 <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                          |
| Total number of bytes   | 17                   | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string         | Remarks                                               |
|--------------------------|----------------------|-------------------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                                       |                                                       |
| Slave address [H]        | 2                    | Arbitrary                                 | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                                  | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', 'C'                                  | 12 bytes = Reading 6 registers                        |
| Data 1 [H]               | 4                    | Alarm detail code                         | Alarm detail code (0500 <sub>H</sub> ) [HEX]          |
| Data 2 [H]               | 4                    | Alarm address                             | Alarm address (0501 <sub>H</sub> ) [HEX]              |
| Data 3 [H]               | 8                    | Alarm code                                | Alarm code [HEX]                                      |
| Data 4 [H]               | 8                    | Alarm occurrence time <sup>(Note 1)</sup> | Alarm occurrence time [HEX]                           |
| Error check [H]          | 2                    | LRC calculation result                    |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                                |                                                       |
| Total number of bytes    | 35                   | -                                         |                                                       |

Note 1 The contents of display should differ between the models equipped with RTC (calendar feature) and those not equipped with it.

(1) When parameter is "Enable" in RTC equipped with RTC: Displays alarm occurrence time

(2) When parameter is "Disable" in RTC equipped with RTC: Displays time [ms] passed after the power is turned on

(3) For models not quipped with RTC: Displays time [ms] passed after the power is turned on

## [4] Query sample

Here shows an example to read content of the alarm (Address 0500<sub>H</sub> to 0505<sub>H</sub>) occurred last in controller on Axis No. 0.

- Query

010305000006F1 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ‘.’                                              | 3A                            |
| Slave address [H]       | ‘0’, ‘1’                                         | 3031                          |
| Function code [H]       | ‘0’, ‘3’                                         | 3033                          |
| Start address [H]       | ‘0’, ‘5’, ‘0’, ‘0’                               | 30353030                      |
| Number of registers [H] | ‘0’, ‘0’, ‘0’, ‘6’                               | 30303036                      |
| Error check [H]         | ‘F’, ‘1’<br>(in accordance with LRC calculation) | 4631                          |
| Trailer                 | ‘CR’, ‘LF’                                       | 0D0A                          |

The response to the query is as follows.

- Response

01030C0000FFFF000000E82AD1D07B24 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ‘.’                                              | 3A                            |
| Slave address [H]        | ‘0’, ‘1’                                         | 3031                          |
| Function code [H]        | ‘0’, ‘3’                                         | 3033                          |
| Number of data bytes [H] | ‘0’, ‘C’ (12 bytes = 6 registers)                | 3043                          |
| Data 1 [H]               | ‘0’, ‘0’, ‘0’, ‘0’                               | 30303030                      |
| Data 2 [H]               | ‘F’, ‘F’, ‘F’, ‘F’                               | 46464646                      |
| Data 3 [H]               | ‘0’, ‘0’, ‘0’, ‘0’, ‘0’, ‘0’, ‘E’, ‘8’           | 3030303030304538              |
| Data 4 [H]               | ‘2’, ‘A’, ‘D’, ‘1’, ‘D’, ‘0’, ‘7’, ‘B’           | 3241443144303742              |
| Error check [H]          | ‘2’, ‘4’<br>(in accordance with LRC calculation) | 3234                          |
| Trailer                  | ‘CR’, ‘LF’                                       | 0D0A                          |

Alarm detail code: 0000<sub>H</sub> ..... No detail code

Alarm address: FFFF<sub>H</sub> ..... Disable (no detail code)

Alarm code: 00E8<sub>H</sub> = 0E8 (Encoder AB phase break error) <sup>(Note 1)</sup>

Alarm occurrence time: 2AD1D07B<sub>H</sub> (conversion) ⇒ 2022/10/06 17:44:42

(Refer to [4.3.2 [4]] for how to convert the alarm occurred time)

Note If the response example is simply an example and will vary depending on various conditions.

Note 1 For the detail of an alarm code, refer to the [instruction manual of the each controller].



### 6.4.3 Position Data Description Reading (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF)

#### [1] Function

This reads the value set in the indicated position number.

#### [2] Start address list

The buffer size of sending and receiving of RC Controller is 256 bytes for each.

Accordingly, a maximum of 123 registers' worth of data consisting of 256 bytes (one register uses two bytes), except 9 bytes (header + slave address + function code + error check + trailer) of the above 247 bytes, can be queried in the ASCII mode. In other words, all of the data listed below can be queried in a single communication.

It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

| Address [H]  | Top Address of Each Position Number [H]               | Offset from Top Address [H] | Symbol | Registers name              | Sign | Register size | Byte | Unit                         |
|--------------|-------------------------------------------------------|-----------------------------|--------|-----------------------------|------|---------------|------|------------------------------|
| 1000 to 3FFF | Top Address = 1000 <sub>H</sub> + (16 × position No.) | +0                          | PCMD   | Target position             | ○    | 2             | 4    | 0.01mm                       |
|              |                                                       | +2                          | INP    | Positioning band            | ○    | 2             | 4    | 0.01mm                       |
|              |                                                       | +4                          | VCMD   | Speed command               |      | 2             | 4    | 0.01mm/s                     |
|              |                                                       | +6                          | ZNMP   | Individual zone boundary +  | ○    | 2             | 4    | 0.01mm                       |
|              |                                                       | +8                          | ZNLP   | Individual zone boundary -  | ○    | 2             | 4    | 0.01mm                       |
|              |                                                       | +A                          | ACMD   | Acceleration command        |      | 1             | 2    | 0.01G                        |
|              |                                                       | +B                          | DCMD   | Deceleration command        |      | 1             | 2    | 0.01G                        |
|              |                                                       | +C                          | PPOW   | Push-current limiting value |      | 1             | 2    | %<br>(100%=FF <sub>H</sub> ) |
|              |                                                       | +D                          | LPOW   | Load current threshold      |      | 1             | 2    | %<br>(100%=FF <sub>H</sub> ) |
|              |                                                       | +E                          | CTLF   | Control flag specification  |      | 1             | 2    |                              |

In a query input, each address is calculated using the formula below:

$$1000_{\text{H}} + (16 \times \text{Position number})_{\text{H}} + \text{Address (Offset)}_{\text{H}}$$

Example: Change the speed command register for position No. 200

$$\begin{aligned}
 1000_{\text{H}} + (16 \times 200_{\text{D}})_{\text{H}} + 4_{\text{H}} &= 1000_{\text{H}} + (3200_{\text{D}})_{\text{H}} + 4_{\text{H}} \\
 &= 1000_{\text{H}} + \text{C80}_{\text{H}} + 4_{\text{H}} \\
 &= 1\text{C84}_{\text{H}}
 \end{aligned}$$

Therefore, for Position No. 200, "1C84<sub>H</sub>" should be the input value in the query start address.

**Note** The maximum position number varies depending on the controller model and the PIO pattern currently specified.

## [3] Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register (1 address) = 2 bytes = 16-bit data

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | Arbitrary                         | Refer to [6.4.1 [2] Start address list].              |
| Number of registers [H] | 4                    | Arbitrary                         |                                                       |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | CR/LF                             |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

## [4] Response format

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                                   |
|--------------------------|----------------------|-----------------------------------|-----------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                           |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )     |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                     |
| Number of data bytes [H] | 2                    | -                                 | Total number of bytes of registers specified in the query |
| Data 1 [H]               | 4                    | -                                 |                                                           |
| Data 2 [H]               | 4                    | -                                 |                                                           |
| Data 3 [H]               | 4                    | -                                 |                                                           |
| Data 4 [H]               | 4                    | -                                 |                                                           |
| :                        | :                    | -                                 |                                                           |
| :                        | :                    | -                                 |                                                           |
| Error check [H]          | 2                    | LRC calculation result            |                                                           |
| Trailer                  |                      | CR/LF                             |                                                           |
| Total number of bytes    | Up to 256            |                                   |                                                           |

## [5] Query sample

Shown below is an example for a use referring to the “target position”, “positioning band” and “Speed command” in Position No. 1 (Address 1010<sub>H</sub> to 1015<sub>H</sub>) on Axis No. 0 controller.

- Query

010310100006D6 [CR] [LF]

| Field                   | ASCII mode fixed character string            | Converted ASCII code data [H] |
|-------------------------|----------------------------------------------|-------------------------------|
| Header                  | ‘:’                                          | 3A                            |
| Slave address [H]       | ‘0’, ‘1’                                     | 3031                          |
| Function code [H]       | ‘0’, ‘3’                                     | 3033                          |
| Start address [H]       | ‘1’, ‘0’, ‘1’, ‘0’                           | 31303130                      |
| Number of registers [H] | ‘0’, ‘0’, ‘0’, ‘6’ (6 registers)             | 30303036                      |
| Error check [H]         | ‘D’, ‘6’(in accordance with LRC calculation) | 4436                          |
| Trailer                 | ‘CR’, ‘LF’                                   | 0D0A                          |

The response to the query is as follows.

- Response

01030C000007D000001F4000003A98E8 [CR] [LF]

| Field                    | ASCII mode fixed character string                               | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------------------------|-------------------------------|
| Header                   | ‘:’                                                             | 3A                            |
| Slave address [H]        | ‘0’, ‘1’                                                        | 3031                          |
| Function code [H]        | ‘0’, ‘3’                                                        | 3033                          |
| Number of data bytes [H] | ‘0’, ‘C’(12 bytes = 6 registers)                                | 3043                          |
| Data 1 [H]               | ‘0’, ‘0’, ‘0’, ‘0’, ‘0’, ‘7’, ‘D’, ‘0’ (target position query)  | 3030303030374430              |
| Data 2 [H]               | ‘0’, ‘0’, ‘0’, ‘0’, ‘1’, ‘F’, ‘4’, ‘0’ (positioning band query) | 3030303031463430              |
| Data 3 [H]               | ‘0’, ‘0’, ‘0’, ‘0’, ‘3’, ‘A’, ‘9’, ‘8’ (speed command query)    | 3030303033413938              |
| Error check [H]          | ‘E’, ‘8’ (in accordance with LRC calculation)                   | 4538                          |
| Trailer                  | ‘CR’, ‘LF’                                                      | 0D0A                          |

Target position “7D0<sub>H</sub>” → Convert into decimal number → 2000<sub>D</sub> × [unit 0.01mm] = 20.00mm

Positioning band “1F40<sub>H</sub>” → Convert into decimal number → 8000<sub>D</sub> × [unit 0.01mm] = 80.00mm

Speed command “3A98<sub>H</sub>” → Convert into decimal number → 15000<sub>D</sub> × [unit 0.01mm] = 150.00mm

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.4 Total moving count Reading (TLMC)

#### [1] Function

This bit reads the total moving count. For details, refer to [4.3.2 [8]].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  |                      | ‘:’                               |                                                          |
| Slave address [H]       | 1                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 1                    | ‘0’, ‘3’                          | Register reading code                                    |
| Start address [H]       | 2                    | ‘8’, ‘4’, ‘0’, ‘0’                | Total moving count                                       |
| Number of registers [H] | 2                    | ‘0’, ‘0’, ‘0’, ‘2’                | Reading addresses 8400 <sub>H</sub> to 8401 <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 |                      | ‘CR’, ‘LF’                        |                                                          |
| Total number of bytes   | 8                    | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   |                      | ‘:’                               |                                                       |
| Slave address [H]        | 1                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 1                    | ‘0’, ‘3’                          | Register reading code                                 |
| Number of data bytes [H] | 1                    | ‘0’, ‘4’                          | 4 bytes = Reading 2 registers                         |
| Data 1 [H]               | 2                    | Total moving count                | Total moving count [HEX] (most significant digit)     |
| Data 2 [H]               | 2                    | Total moving count                | Total moving count [HEX] (least significant digit)    |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  |                      | ‘CR’, ‘LF’                        |                                                       |
| Total number of bytes    | 9                    | -                                 |                                                       |

## [4] Query sample

Here shows an example to read the total moving count (Address 8400<sub>H</sub> to 8401<sub>H</sub>) of an actuator connected to the controller on Axis No. 0.

- Query

01 03 8400 0002 76 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ‘.’                                              | 3A                            |
| Slave address [H]       | ‘0’, ‘1’                                         | 3031                          |
| Function code [H]       | ‘0’, ‘3’                                         | 3033                          |
| Start address [H]       | ‘8’, ‘4’, ‘0’, ‘0’                               | 38343030                      |
| Number of registers [H] | ‘0’, ‘0’, ‘0’, ‘2’                               | 30303032                      |
| Error check [H]         | ‘7’, ‘6’<br>(in accordance with LRC calculation) | 3736                          |
| Trailer                 | ‘CR’, ‘LF’                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 021F D7 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ‘.’                                              | 3A                            |
| Slave address [H]        | ‘0’, ‘1’                                         | 3031                          |
| Function code [H]        | ‘0’, ‘3’                                         | 3033                          |
| Number of data bytes [H] | ‘0’, ‘4’                                         | 3034                          |
| Data 1 [H]               | ‘0’, ‘0’, ‘0’, ‘0’                               | 30303030                      |
| Data 2 [H]               | ‘0’, ‘2’, ‘1’, ‘F’                               | 30323146                      |
| Error check [H]          | ‘D’, ‘7’<br>(in accordance with LRC calculation) | 4337                          |
| Trailer                  | ‘CR’, ‘LF’                                       | 0D0A                          |

The Total moving distance is 21F<sub>H</sub> → Convert into decimal number → 543times

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.5 Total moving distance Reading (ODOM) (in 1mm units)

#### [1] Function

The total drive distance (Address 8402<sub>H</sub> to 8403<sub>H</sub>) of an actuator connected to the controller on Axis No. 0 is to be read in the unit of 1m.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                          |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                    |
| Start address [H]       | 4                    | '8', '4', '0', '2'                | Total moving distance                                    |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading addresses 8402 <sub>H</sub> to 8403 <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                          |
| Total number of bytes   | 17                   | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data 1 [H]               | 4                    | Total moving distance             | Total moving distance [HEX] (most significant digit)  |
| Data 2 [H]               | 4                    | Total moving distance             | Total moving distance [HEX] (least significant digit) |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |

## [4] Query sample

Here shows an example to read the total moving distance (Address 8402<sub>H</sub> to 8403<sub>H</sub>) of an actuator connected to the controller on Axis No. 0.

- Query

01 03 8402 0002 74 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ‘.’                                              | 3A                            |
| Slave address [H]       | ‘0’, ‘1’                                         | 3031                          |
| Function code [H]       | ‘0’, ‘3’                                         | 3033                          |
| Start address [H]       | ‘8’, ‘4’, ‘0’, ‘2’                               | 38343032                      |
| Number of registers [H] | ‘0’, ‘0’, ‘0’, ‘2’                               | 30303032                      |
| Error check [H]         | ‘7’, ‘4’<br>(in accordance with LRC calculation) | 3734                          |
| Trailer                 | ‘CR’, ‘LF’                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 409E 1A [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ‘.’                                              | 3A                            |
| Slave address [H]        | ‘0’, ‘1’                                         | 3031                          |
| Function code [H]        | ‘0’, ‘3’                                         | 3033                          |
| Number of data bytes [H] | ‘0’, ‘4’                                         | 3034                          |
| Data 1 [H]               | ‘0’, ‘0’, ‘0’, ‘0’                               | 30303030                      |
| Data 2 [H]               | ‘4’, ‘0’, ‘9’, ‘E’                               | 34303945                      |
| Error check [H]          | ‘1’, ‘A’<br>(in accordance with LRC calculation) | 3141                          |
| Trailer                  | ‘CR’, ‘LF’                                       | 0D0A                          |

The total moving distance is 409E<sub>H</sub> → Convert into decimal number → 16542m

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.6 Current Time Reading (TIMN)

#### [1] Function

This bit reads the current time.

- \* PCON-CA/CFA/CB/CFB/CBP, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB (including servo pressing type) only.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string                                                                                                       | Remarks                                                                              |
|-------------------------|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Header                  | 1                    | ':'                                                                                                                                     |                                                                                      |
| Slave address [H]       | 2                    | Arbitrary                                                                                                                               | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )                                |
| Function code [H]       | 2                    | '0', '3'                                                                                                                                | Register reading code                                                                |
| Start address [H]       | 4                    | SCON-CA/CAL/CB:<br>'8', '4', '1', 'E'<br>PCON-CA/CFA/CB/CFB/CBP:<br>'8', '4', '2', '0'<br>ACON-CA/CB, DCON-CA/CB:<br>'8', '4', '2', '2' | 841E: SCON-CA/CAL/CB<br>8420: PCON-CA/CFA/CB/CFB/CBP<br>8422: ACON-CA/CB, DCON-CA/CB |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                                                                                                                      | Reading 2 registers form start address                                               |
| Error check [H]         | 2                    | LRC calculation result                                                                                                                  |                                                                                      |
| Trailer                 | 2                    | 'CR', 'LF'                                                                                                                              |                                                                                      |
| Total number of bytes   | 17                   | -                                                                                                                                       |                                                                                      |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | Current time                      | Refer to [6.4.6 [4]] for conversion at time.          |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |



## [4] Conversion of Read Data into Time

The read data output the current time by the setting on the controller.

- (1) For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance.
- (2) When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [s] since the power to the controller is turned on.

## (1) How current time is calculated

The data of current time shows the seconds passed from the origin time (00hr:00min:00sec 1January2000).

Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below:

- 1) Passed second S should be converted into a decimal number.

- 2) M, H, D, Y and L should be figured out based on S.

$M = S/60$  (decimal fraction to be rounded down)

$H = M/60$  (decimal fraction to be rounded down)

$D = H/24$  (decimal fraction to be rounded down)

$Y = D/365.25$  (decimal fraction to be rounded down)

$L$  (Leap year) =  $Y/4$  (decimal fraction to be rounded up)

- 3) SA, MA, HA and DA should be figured out.

Assuming the second of time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below:

$SA = \text{Remainder of } S/60$

$MA = \text{Remainder of } M/60$

$HA = \text{Remainder of } H/24$

$DA = D - (Y \times 365 + L)$

\* Year and day can be figured out by subtracting the number of days in each month from DA.

$YA = Y + 2000$  (A.D.)

Example of Calculation: When current time data is output as 2AD2F1CE<sub>H</sub>

- 1) Convert into decimal number:

$$S = 2AD2F1CE_H \Rightarrow 718467534$$

- 2) Calculate M, H, D, Y and L.

$$M = 718467534/60 = 11974458 \text{ (decimal fraction to be rounded down)}$$

$$H = 11974458/60 = 199574 \text{ (decimal fraction to be rounded down)}$$

$$D = 199574/24 = 8315 \text{ (decimal fraction to be rounded down)}$$

$$Y = 8315/365.25 = 22 \text{ (decimal fraction to be rounded down)}$$

$$L = 22/4 = 6 \text{ (decimal fraction to be rounded up)}$$

- 3) SA, MA, HA and DA should be figured out.

$$SA = \text{Remainder of } 718467534/60 = 54$$

$$MA = \text{Remainder of } 11974458/60 = 18$$

$$HA = \text{Remainder of } 199574/24 = 14$$

$$DA = 8315 - (22 \times 365 + 6)$$

= 279 (279 days has passed in 2022 year and the time of alarm issuance is on the day 280.)

$$\text{Year and day} = 280 - \{31 \text{ (Jan)} - 29 \text{ (Feb)} - 31 \text{ (Mar)} - 30 \text{ (Apr)} - 31 \text{ (May)}$$

$$- 30 \text{ (Jun)} - 31 \text{ (Jul)} - 31 \text{ (Aug)} - 30 \text{ (Sep)}\}$$

= 7 (As the number reduced for October would make a negative number, the read out date should be October 7)

$$YA = 22 + 2000 = 2022$$

As figured out with the calculation above, the current time is 14:18:54 7Oct2022.

- (2) How to Calculate Current time

Example of Calculation: When current time data is output as E1B8B<sub>H</sub>

$$SA = \text{Remainder of } 9024555/60 = 15$$

$$MA = \text{Remainder of } 15409/60 = 49$$

Convert into decimal number: E1B8B<sub>H</sub>  $\Rightarrow$  924555

Therefore, it means 924555s (15min. 49sec. 256h) has passed since the power was turned on.

## [5] Query sample

A sample query that reads the current Time of PCON-CA (Address 8420<sub>H</sub> to 8421<sub>H</sub>) with axis No. 0 is shown below.

- Query

01 03 8420 0002 56 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '8', '4', '2', '0'                               | 38343230                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '5', '6'<br>(in accordance with LRC calculation) | 3536                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 172C 1B8B 56 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4'                                         | 3034                          |
| Data [H]                 | '1', '7', '2', 'C', '1', 'B', '8', 'B'           | 3137324331423842              |
| Error check [H]          | '5', '6'<br>(in accordance with LRC calculation) | 3536                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Current time is 14h:43m:23s April 26, 2012.

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.7 Total FAN Driving Time Reading (TFAN)

#### [1] Function

This bit reads the Total FAN driving time (in 1s unit)

\* PCON-CFA/CFB, SCON-CAL, SCON-CB (400W or more) only.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string                                                             | Remarks                                                         |
|-------------------------|----------------------|-----------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| Header                  | 1                    | ':'                                                                                           |                                                                 |
| Slave address [H]       | 2                    | Arbitrary                                                                                     | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )           |
| Function code [H]       | 2                    | '0', '3'                                                                                      | Register reading code                                           |
| Start address [H]       | 4                    | SCON-CAL, SCON-CB (400W or more)<br>'8', '4', '2', 'A'<br>PCON-CFA/CFB:<br>'8', '4', '2', 'E' | 842A: SCON-CAL,<br>SCON-CB (400W or more)<br>842E: PCON-CFA/CFB |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                                                                            | Reading 2 registers form start address                          |
| Error check [H]         | 2                    | LRC calculation result                                                                        |                                                                 |
| Trailer                 | 2                    | 'CR', 'LF'                                                                                    |                                                                 |
| Total number of bytes   | 17                   | -                                                                                             |                                                                 |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                                |
|--------------------------|----------------------|-----------------------------------|--------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                        |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )  |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                  |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                          |
| Data 1 [H]               | 4                    | Total FAN driving time            | Total FAN driving time [HEX] (most significant digit)  |
| Data 2 [H]               | 4                    | Total FAN driving time            | Total FAN driving time [HEX] (least significant digit) |
| Error check [H]          | 2                    | LRC calculation result            |                                                        |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                        |
| Total number of bytes    | 19                   | -                                 |                                                        |

## [4] Query sample

A sample query that reads the total FAN driving time (Address 842E<sub>H</sub> to 842F<sub>H</sub>) of a controller with axis No. 0 (PCON-CFB) is shown below.

- Query

01 03 842E 0002 48 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '8', '4', '2', 'E'                               | 38343245                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '4', '8'<br>(in accordance with LRC calculation) | 3438                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 02AF 47 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4'                                         | 3034                          |
| Data 1 [H]               | '0', '0', '0', '0'                               | 30303030                      |
| Data 2 [H]               | '0', '2', 'A', 'F'                               | 30324146                      |
| Error check [H]          | '4', '7'<br>(in accordance with LRC calculation) | 3437                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The total FAN driving time is "000002AF<sub>H</sub>" → Convert into decimal number → 687s

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.8 Current Position Reading (PNOW)

#### [1] Function

This query reads the current in units of 0.01mm. The sign is effective.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '0', '0'                | Current position monitor                              |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading 2 registers form start address                |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string    | Remarks                                               |
|--------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                                  |                                                       |
| Slave address [H]        | 2                    | Arbitrary                            | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                             | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                             | 4 bytes = Reading 2 registers                         |
| Data 1 [H]               | 4                    | In accordance with the current value | Current position data [HEX] (most significant digit)  |
| Data 2 [H]               | 4                    | In accordance with the current value | Current position data [HEX] (least significant digit) |
| Error check [H]          | 2                    | LRC calculation result               |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                           |                                                       |
| Total number of bytes    | 19                   | -                                    |                                                       |

## [4] Query sample

A sample query that reads the current position (Address 9000<sub>H</sub> to 9001<sub>H</sub>) in a controller of axis No. 0 is shown below.

- Query

01 03 9000 0002 6A [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ','                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '0'                               | 39303030                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '6', 'A'<br>(in accordance with LRC calculation) | 3641                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 1388 5D [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ','                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers)                 | 3034                          |
| Data 1 [H]               | '0', '0', '0', '0'                               | 30303030                      |
| Data 2 [H]               | '1', '3', '8', '8'                               | 31333838                      |
| Error check [H]          | '5', 'D'<br>(in accordance with LRC calculation) | 3544                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The current position is "1388<sub>H</sub>" → Convert into decimal number → 5000s

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.9 Currently Generated Alarm Code Reading (ALMC)

#### [1] Function

This query reads the code indicating the normal status or alarm status (cold start level, operation cancellation level and message level) of the controller.

In the normal status, "00<sub>H</sub>" is stored.

For details on alarm codes, refer to the [Instruction manual of each controller].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '0', '2'                | Currently generated alarm code                        |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9002 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Alarm code                        | Alarm code [HEX]                                      |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |



## [4] Query sample

A sample query that reads the alarm code (Address 9002<sub>H</sub>) of a controller with axis No. 0 is shown below.

- Query

01 03 9002 0001 69 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '2'                               | 39303032                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '6', '9'<br>(in accordance with LRC calculation) | 3639                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 00E8 12 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '0', 'E', '8'                               | 30304538                      |
| Error check [H]          | '1', '2'<br>(in accordance with LRC calculation) | 3132                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Alarm code: 00E8<sub>H</sub> = 0E8 (A-, B-Phase Line Breakage Error) <sup>(Note 1)</sup>

Note If the response example is simply an example and will vary depending on various conditions.

Note 1 For details on alarm codes, refer to the [Instruction manual of each controller].

### 6.4.10 I/O Port Input Signal Status Reading (DIPM)

#### [1] Function

This query reads the port input value of the RC controller regardless of the PIO pattern.

The status of the port to which a signal is currently input as recognized by the RC controller is read.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '0', '3'                | Input port monitor register                           |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9003 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | DI input value                    | Port input value [HEX]                                |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads input ports (Address 9003<sub>H</sub>) in a controller of axis No. 0 is shown below.

- Query

01 03 9003 0001 68 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '3'                               | 39303033                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '6', '8'<br>(in accordance with LRC calculation) | 3638                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 B801 14 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | 'B', '8', '0', '1'                               | 42383031                      |
| Error check [H]          | '1', '4'<br>(in accordance with LRC calculation) | 3134                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The input port data area is B801<sub>H</sub> → Convert into binary number: 1011100000000001<sub>b</sub>

| Bit15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 1     | 0      | 1      | 1      | 1      | 0      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 1     |
| IN15  | IN14   | IN13   | IN12   | IN11   | IN10   | IN9   | IN8   | IN7   | IN6   | IN5   | IN4   | IN3   | IN2   | IN1   | IN0   |

Note If the response example is simply an example and will vary depending on various conditions.

## [5] Port assignment

For details, refer to the [instruction manual for each RC controller].

- Write the port assignment of PIO patterns to each RC controller.
- 0 indicates that response data is always "0".

| Port | PCON-C/CF/CA/CFA/CB/CFB |               |       |       |      |      | Other than PCON-C/CF |      |
|------|-------------------------|---------------|-------|-------|------|------|----------------------|------|
|      | PIO pattern             |               |       |       |      |      | (Pulse Train Mode)   |      |
|      | 0                       | 1             | 2     | 3     | 4    | 5    | 6                    | 7    |
| IN0  | PC1                     | PC1           | PC1   | PC1   | ST0  | ST0  | SON                  | SON  |
| IN1  | PC2                     | PC2           | PC2   | PC2   | ST1  | ST1  | RES                  | RES  |
| IN2  | PC4                     | PC4           | PC4   | PC4   | ST2  | ST2  | HOME                 | HOME |
| IN3  | PC8                     | PC8           | PC8   | PC8   | ST3  | 0    | TL                   | TL   |
| IN4  | PC16                    | PC16          | PC16  | PC16  | ST4  | 0    | CSTP                 | CSTP |
| IN5  | PC32                    | PC32          | PC32  | PC32  | ST5  | 0    | DCLR                 | DCLR |
| IN6  | 0                       | MODE          | PC64  | PC64  | ST6  | 0    | BKRL                 | BKRL |
| IN7  | 0                       | JISL          | PC128 | PC128 | 0    | 0    | RMOD                 | RMOD |
| IN8  | 0                       | JOG+          | 0     | PC256 | 0    | 0    | 0                    | RSTR |
| IN9  | BKRL                    | JOG-          | BKRL  | BKRL  | BKRL | BKRL | 0                    | 0    |
| IN10 | RMOD                    | RMOD          | RMOD  | RMOD  | RMOD | RMOD | 0                    | 0    |
| IN11 | HOME                    | HOME          | HOME  | HOME  | HOME | 0    | 0                    | 0    |
| IN12 | *STP                    | *STP          | *STP  | *STP  | *STP | 0    | 0                    | 0    |
| IN13 | CSTR                    | CSTR/<br>PWRT | CSTR  | CSTR  | 0    | 0    | 0                    | 0    |
| IN14 | RES                     | RES           | RES   | RES   | RES  | RES  | 0                    | 0    |
| IN15 | SON                     | SON           | SON   | SON   | SON  | SON  | 0                    | 0    |

|                   | PCON-CYB    |     |     |      |      |                            | PCON-PLB/POB                                     |      |      | PCON-PL/PO                                       |      |              |
|-------------------|-------------|-----|-----|------|------|----------------------------|--------------------------------------------------|------|------|--------------------------------------------------|------|--------------|
|                   | PIO pattern |     |     |      |      |                            | PIO pattern                                      |      |      | PIO pattern                                      |      |              |
| Port              | 0           | 1   | 2   | 3    | 4    | 5                          | 6                                                | 0    | 1    | 2                                                | 0    | 1            |
| IN0               | PC1         | ST0 | ST0 | ST0  | ST0  | A Selected Number (Note 1) | Control by Serial Communication Command (Note 2) | SON  | SON  | Control by Serial Communication Command (Note 2) | SON  | SON          |
| IN1               | PC2         | ST1 | ST1 | 0    | ST1  |                            |                                                  | RES  | RES  |                                                  | TL   | TL           |
| IN2               | PC4         | ST2 | ST2 | 0    | ASTR |                            |                                                  | HOME | HOME |                                                  | HOME | HOME         |
| IN3               | PC8         | ST3 | 0   | 0    | 0    |                            |                                                  | TL   | TL   |                                                  | RES  | RES/<br>DCLR |
| IN4               | HOME        | ST4 | SON | SON  | SON  |                            |                                                  | CSTP | CSTP |                                                  | 0    | 0            |
| IN5               | *STR        | ST5 | 0   | *STR | *STR |                            |                                                  | DCLR | DCLR |                                                  | 0    | 0            |
| IN6               | CSTR        | ST6 | 0   | 0    | 0    |                            |                                                  | BKRL | BKRL |                                                  | 0    | 0            |
| IN7               | RES         | RES | RES | RES  | RES  |                            | 0                                                | RSTR |      | 0                                                | 0    |              |
| IN8<br>to<br>IN15 | 0           | 0   | 0   | 0    | 0    | 0                          | 0                                                | 0    | 0    | 0                                                | 0    | 0            |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.

Refer to [PCON-CYB/PLB/POB instruction manual (ME0353)].

(Note 2) PLB/POB is complied with the serial communication mode in the firmware version PCON (v0005) or later.

Even though the I/O port input signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

| Port | ACON-C/CA/CB, DCON-C/CA/CB |               |       |       |      |      | Other than ACON-C/CF |      |
|------|----------------------------|---------------|-------|-------|------|------|----------------------|------|
|      | PIO pattern                |               |       |       |      |      | (Pulse Train Mode)   |      |
|      | 0                          | 1             | 2     | 3     | 4    | 5    | 6                    | 7    |
| IN0  | PC1                        | PC1           | PC1   | PC1   | ST0  | ST0  | SON                  | SON  |
| IN1  | PC2                        | PC2           | PC2   | PC2   | ST1  | ST1  | RES                  | RES  |
| IN2  | PC4                        | PC4           | PC4   | PC4   | ST2  | ST2  | HOME                 | HOME |
| IN3  | PC8                        | PC8           | PC8   | PC8   | ST3  | 0    | TL                   | TL   |
| IN4  | PC16                       | PC16          | PC16  | PC16  | ST4  | 0    | CSTP                 | CSTP |
| IN5  | PC32                       | PC32          | PC32  | PC32  | ST5  | 0    | DCLR                 | DCLR |
| IN6  | 0                          | MODE          | PC64  | PC64  | ST6  | 0    | BKRL                 | BKRL |
| IN7  | 0                          | JISL          | PC128 | PC128 | 0    | 0    | RMOD                 | RMOD |
| IN8  | 0                          | JOG+          | 0     | PC256 | 0    | 0    | 0                    | RSTR |
| IN9  | BKRL                       | JOG-          | BKRL  | BKRL  | BKRL | BKRL | 0                    | 0    |
| IN10 | RMOD                       | RMOD          | RMOD  | RMOD  | RMOD | RMOD | 0                    | 0    |
| IN11 | HOME                       | HOME          | HOME  | HOME  | HOME | 0    | 0                    | 0    |
| IN12 | *STP                       | *STP          | *STP  | *STP  | *STP | 0    | 0                    | 0    |
| IN13 | CSTR                       | CSTR/<br>PWRT | CSTR  | CSTR  | 0    | 0    | 0                    | 0    |
| IN14 | RES                        | RES           | RES   | RES   | RES  | RES  | 0                    | 0    |
| IN15 | SON                        | SON           | SON   | SON   | SON  | SON  | 0                    | 0    |

|                   | ACON-CYB, DCON-CYB |     |     |      |      |                            |                                                  | ACON, DCON-PLB/POB |      |                                                  | ACON-PL/PO  |              |
|-------------------|--------------------|-----|-----|------|------|----------------------------|--------------------------------------------------|--------------------|------|--------------------------------------------------|-------------|--------------|
|                   | PIO pattern        |     |     |      |      |                            |                                                  | PIO pattern        |      |                                                  | PIO pattern |              |
| Port              | 0                  | 1   | 2   | 3    | 4    | 5                          | 6                                                | 0                  | 1    | 2                                                | 0           | 1            |
| IN0               | PC1                | ST0 | ST0 | ST0  | ST0  | A Selected Number (Note 1) | Control by Serial Communication Command (Note 2) | SON                | SON  | Control by Serial Communication Command (Note 2) | SON         | SON          |
| IN1               | PC2                | ST1 | ST1 | 0    | ST1  |                            |                                                  | RES                | RES  |                                                  | TL          | TL           |
| IN2               | PC4                | ST2 | ST2 | 0    | ASTR |                            |                                                  | HOME               | HOME |                                                  | HOME        | HOME         |
| IN3               | PC8                | ST3 | 0   | 0    | 0    |                            |                                                  | TL                 | TL   |                                                  | RES         | RES/<br>DCLR |
| IN4               | HOME               | ST4 | SON | SON  | SON  |                            |                                                  | CSTP               | CSTP |                                                  | 0           | 0            |
| IN5               | *STR               | ST5 | 0   | *STR | *STR |                            |                                                  | DCLR               | DCLR |                                                  | 0           | 0            |
| IN6               | CSTR               | ST6 | 0   | 0    | 0    |                            |                                                  | BKRL               | BKRL |                                                  | 0           | 0            |
| IN7               | RES                | RES | RES | RES  | RES  |                            |                                                  | 0                  | RSTR |                                                  | 0           | 0            |
| IN8<br>to<br>IN15 | 0                  | 0   | 0   | 0    | 0    | 0                          |                                                  | 0                  | 0    |                                                  | 0           | 0            |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.

For details, refer to [ACON-CYB/PLB/POB and DCON-CYB/PLB/POB instruction manual (ME0354)].

(Note 2) PLB/POB is complied with the serial communication mode in the firmware version ACON (v0002) and DCON (v0001) or later.

Even though the I/O port input signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

|      | SCON-C/CA/CAL/CB |               |       |       |      |      | SCON-CA/CB |      | SCON-C/CA/CB       |            |
|------|------------------|---------------|-------|-------|------|------|------------|------|--------------------|------------|
|      | PIO pattern      |               |       |       |      |      |            |      | (Pulse Train Mode) |            |
| Port | 0                | 1             | 2     | 3     | 4    | 5    | 6          | 7    | 0                  | 1 (Note 1) |
| IN0  | PC1              | PC1           | PC1   | PC1   | ST0  | ST0  | PC1        | ST0  | SON                | SON        |
| IN1  | PC2              | PC2           | PC2   | PC2   | ST1  | ST1  | PC2        | ST1  | RES                | RES        |
| IN2  | PC4              | PC4           | PC4   | PC4   | ST2  | ST2  | PC4        | ST2  | HOME               | HOME       |
| IN3  | PC8              | PC8           | PC8   | PC8   | ST3  | 0    | PC8        | ST3  | TL                 | TL         |
| IN4  | PC16             | PC16          | PC16  | PC16  | ST4  | 0    | PC16       | ST4  | CSTP               | CSTP       |
| IN5  | PC32             | PC32          | PC32  | PC32  | ST5  | 0    | 0          | 0    | DCLR               | DCLR       |
| IN6  | 0                | MODE          | PC64  | PC64  | ST6  | 0    | 0          | 0    | BKRL               | BKRL       |
| IN7  | 0                | JISL          | PC128 | PC128 | 0    | 0    | 0          | 0    | RMOD               | RMOD       |
| IN8  | 0                | JOG+          | 0     | PC256 | 0    | 0    | CLBR       | CLBR | 0                  | RSTR       |
| IN9  | BKRL             | JOG-          | BKRL  | BKRL  | BKRL | BKRL | BKRL       | BKRL | 0                  | 0          |
| IN10 | RMOD             | RMOD          | RMOD  | RMOD  | RMOD | RMOD | RMOD       | RMOD | 0                  | 0          |
| IN11 | HOME             | HOME          | HOME  | HOME  | HOME | 0    | HOME       | HOME | 0                  | 0          |
| IN12 | *STP             | *STP          | *STP  | *STP  | *STP | 0    | *STP       | *STP | 0                  | 0          |
| IN13 | CSTR             | CSTR/<br>PWRT | CSTR  | CSTR  | 0    | 0    | CSTR       | 0    | 0                  | 0          |
| IN14 | RES              | RES           | RES   | RES   | RES  | RES  | RES        | RES  | 0                  | 0          |
| IN15 | SON              | SON           | SON   | SON   | SON  | SON  | SON        | SON  | 0                  | 0          |

(Note 1) This mode is not equipped in SCON-C/CA.

|      | SCON-CB     | ERC2 (PIO Type) |      |      |      | ERC3 (PIO Type) |      |      |
|------|-------------|-----------------|------|------|------|-----------------|------|------|
|      | Servo press | PIO pattern     |      |      |      | PIO pattern     |      |      |
| Port | -           | 0               | 1    | 2    | 3    | 0               | 1    | 2    |
| IN0  | PC1         | PC1             | ST0  | PC1  | PC1  | PC1             | ST0  | PC1  |
| IN1  | PC2         | PC2             | ST1  | PC2  | PC2  | PC2             | ST1  | PC2  |
| IN2  | PC4         | PC4             | ST2  | PC4  | PC4  | PC4             | ST2  | PC4  |
| IN3  | PC8         | HOME            | 0    | PC8  | PC8  | HOME            | 0    | PC8  |
| IN4  | PC16        | CSTR            | RES  | CSTR | CSTR | CSTR            | RES  | CSTR |
| IN5  | PC32        | *STP            | *STP | *STP | *STP | *STP            | *STP | *STP |
| IN6  | PSTR        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN7  | RHOM        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN8  | ENMV        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN9  | FPST        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN10 | CLBR        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN11 | BKRL        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN12 | RMOD        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN13 | HOME        | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN14 | RES         | 0               | 0    | 0    | 0    | 0               | 0    | 0    |
| IN15 | SON         | 0               | 0    | 0    | 0    | 0               | 0    | 0    |

### 6.4.11 I/O Port Output Signal Status Reading (DOPM)

#### [1] Function

This query reads the port output value of the RC controller regardless of the PIO pattern.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '0', '4'                | Output port monitor register                          |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading addresses 9004 <sub>H</sub>                   |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | DO output value                   | Port output value [HEX]                               |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that output port (Address 9004<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9004 0001 67 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '4'                               | 39303034                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '6', '7'<br>(in accordance with LRC calculation) | 3637                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 7400 86 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '7', '4', '0', '0'                               | 37343030                      |
| Error check [H]          | '8', '6'<br>(in accordance with LRC calculation) | 3836                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The input port data area is 7400<sub>H</sub> → Convert into binary number: 0111010000000000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 0      | 1      | 1      | 1      | 0      | 1      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| OUT15  | OUT14  | OUT13  | OUT12  | OUT11  | OUT10  | OUT9  | OUT8  | OUT7  | OUT6  | OUT5  | OUT4  | OUT3  | OUT2  | OUT1  | OUT0  |

Note If the response example is simply an example and will vary depending on various conditions.



## [5] Port assignment

For details, refer to the [Instruction manual for each RC controller].

- Write the port assignment of PIO patterns to each RC controller.
- 0 indicates that response data is always "0".

| Port              | PCON-C/CF/CA/CFA/CB/CFB |                 |                         |                         |                         |                 | Other than PCON-C/CF |       |
|-------------------|-------------------------|-----------------|-------------------------|-------------------------|-------------------------|-----------------|----------------------|-------|
|                   | PIO pattern             |                 |                         |                         |                         |                 | (Pulse Train Mode)   |       |
|                   | 0                       | 1               | 2                       | 3                       | 4                       | 5               | 6                    | 7     |
| OUT0              | PM1                     | PM1             | PM1                     | PM1                     | PE0                     | LS0             | PWR                  | PWR   |
| OUT1              | PM2                     | PM2             | PM2                     | PM2                     | PE1                     | LS1             | SV                   | SV    |
| OUT2              | PM4                     | PM4             | PM4                     | PM4                     | PE2                     | LS2             | INP                  | INP   |
| OUT3              | PM8                     | PM8             | PM8                     | PM8                     | PE3                     | 0               | HEND                 | HEND  |
| OUT4              | PM16                    | PM16            | PM16                    | PM16                    | PE4                     | 0               | TLR                  | TLR   |
| OUT5              | PM32                    | PM32            | PM32                    | PM32                    | PE5                     | 0               | *ALM                 | *ALM  |
| OUT6              | MOVE                    | MOVE            | PM64                    | PM64                    | PE6                     | 0               | *EMGS                | *EMGS |
| OUT7              | ZONE1                   | MODES           | PM128                   | PM128                   | ZONE1                   | ZONE1           | RMDS                 | RMDS  |
| OUT8              | PZONE/<br>ZONE2         | PZONE/<br>ZONE1 | PZONE/<br>ZONE1         | PM256                   | PZONE/<br>ZONE2         | PZONE/<br>ZONE2 | ALM1                 | ALM1  |
| OUT9              | RMDS                    | RMDS            | RMDS                    | RMDS                    | RMDS                    | RMDS            | ALM2                 | ALM2  |
| OUT10             | HEND                    | HEND            | HEND                    | HEND                    | HEND                    | HEND            | ALM4                 | ALM4  |
| OUT11             | PEND                    | PEND/<br>WEND   | PEND                    | PEND                    | PEND                    | 0               | ALM8                 | ALM8  |
| OUT12             | SV                      | SV              | SV                      | SV                      | SV                      | SV              | *ALML                | *ALML |
| OUT13             | *EMGS                   | *EMGS           | *EMGS                   | *EMGS                   | *EMGS                   | *EMGS           | 0                    | REND  |
| OUT14             | *ALM                    | *ALM            | *ALM                    | *ALM                    | *ALM                    | *ALM            | ZONE1                | ZONE1 |
| OUT15<br>(Note 1) | LOAD/<br>TRQS/<br>*ALML | *ALML           | LOAD/<br>TRQS/<br>*ALML | LOAD/<br>TRQS/<br>*ALML | LOAD/<br>TRQS/<br>*ALML | *ALML           | ZONE2                | ZONE2 |

(Note 1) Signals available for output may differ depending on models.

For details, refer to the [Instruction manual of each controller].

|                    | PCON-CYB        |      |                 |                 |                 |                            | PCON-PLB/POB                                     |           |           | PCON-PL/PO                                       |      |             |
|--------------------|-----------------|------|-----------------|-----------------|-----------------|----------------------------|--------------------------------------------------|-----------|-----------|--------------------------------------------------|------|-------------|
|                    | PIO pattern     |      |                 |                 |                 |                            | PIO pattern                                      |           |           | PIO pattern                                      |      |             |
| Port               | 0               | 1    | 2               | 3               | 4               | 5                          | 6                                                | 0         | 1         | 2                                                | 0    | 1           |
| OUT0               | PM1             | PE0  | LS0             | LS0/<br>PE0     | LS0/<br>PE0     | A Selected Number (Note 2) | Control by Serial Communication Command (Note 3) | PWR       | PWR       | Control by Serial Communication Command (Note 3) | SV   | SV          |
| OUT1               | PM2             | PE1  | LS1             | LS1/<br>PE1     | LS1/<br>PE1     |                            |                                                  | SV        | SV        |                                                  | INP  | INP/<br>TLR |
| OUT2               | PM4             | PE2  | LS2             | PSFL            | PSFL            |                            |                                                  | INP       | INP       |                                                  | HEND | HEND        |
| OUT3               | PM8             | PE3  | HEND            | HEND            | HEND            |                            |                                                  | HEND      | HEND      |                                                  | *ALM | *ALM        |
| OUT4               | HEND            | PE4  | SV              | SV              | SV              |                            |                                                  | TLR       | TLR       |                                                  | 0    | 0           |
| OUT5               | PZONE/<br>ZONE1 | PE5  | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 |                            |                                                  | ZONE<br>1 | ZONE<br>1 |                                                  | 0    | 0           |
| OUT6               | PEND            | PE6  | *ALML           | *ALML           | *ALML           |                            |                                                  | *ALML     | REND      |                                                  | 0    | 0           |
| OUT7               | *ALM            | *ALM | *ALM            | *ALM            | *ALM            |                            |                                                  | *ALM      | *ALM      |                                                  | 0    | 0           |
| OUT8<br>~<br>OUT15 | 0               | 0    | 0               | 0               | 0               | 0                          | 0                                                | 0         | 0         | 0                                                | 0    | 0           |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

For details, refer to [PCON-CYB/PLB/POB instruction manual (ME0353)].

(Note 3) PLB/POB is complied with the serial communication mode in the firmware version PCON (v0005) or later.

Even though the I/O port output signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

| Port              | ACON-C/CA/CB, DCON-C/CA/CB |                 |                 |                 |                 |                 | Other than ACON-C/CF |       |
|-------------------|----------------------------|-----------------|-----------------|-----------------|-----------------|-----------------|----------------------|-------|
|                   | PIO pattern                |                 |                 |                 |                 |                 | (Pulse Train Mode)   |       |
|                   | 0                          | 1               | 2               | 3               | 4               | 5               | 6                    | 7     |
| OUT0              | PM1                        | PM1             | PM1             | PM1             | PE0             | LS0             | PWR                  | PWR   |
| OUT1              | PM2                        | PM2             | PM2             | PM2             | PE1             | LS1             | SV                   | SV    |
| OUT2              | PM4                        | PM4             | PM4             | PM4             | PE2             | LS2             | INP                  | INP   |
| OUT3              | PM8                        | PM8             | PM8             | PM8             | PE3             | 0               | HEND                 | HEND  |
| OUT4              | PM16                       | PM16            | PM16            | PM16            | PE4             | 0               | TLR                  | TLR   |
| OUT5              | PM32                       | PM32            | PM32            | PM32            | PE5             | 0               | *ALM                 | *ALM  |
| OUT6              | MOVE                       | MOVE            | PM64            | PM64            | PE6             | 0               | *EMGS                | *EMGS |
| OUT7              | ZONE1                      | MODES           | PM128           | PM128           | ZONE1           | ZONE1           | RMDS                 | RMDS  |
| OUT8              | PZONE/<br>ZONE2            | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PM256           | PZONE/<br>ZONE2 | PZONE/<br>ZONE2 | ALM1                 | ALM1  |
| OUT9              | RMDS                       | RMDS            | RMDS            | RMDS            | RMDS            | RMDS            | ALM2                 | ALM2  |
| OUT10             | HEND                       | HEND            | HEND            | HEND            | HEND            | HEND            | ALM4                 | ALM4  |
| OUT11             | PEND                       | PEND/<br>WEND   | PEND            | PEND            | PEND            | 0               | ALM8                 | ALM8  |
| OUT12             | SV                         | SV              | SV              | SV              | SV              | SV              | *ALML                | *ALML |
| OUT13             | *EMGS                      | *EMGS           | *EMGS           | *EMGS           | *EMGS           | *EMGS           | 0                    | REND  |
| OUT14             | *ALM                       | *ALM            | *ALM            | *ALM            | *ALM            | *ALM            | ZONE1                | ZONE1 |
| OUT15<br>(Note 1) | *BALM<br>/*ALML            | *BALM<br>/*ALML | *BALM<br>/*ALML | *BALM<br>/*ALML | *BALM<br>/*ALML | *BALM<br>/*ALML | ZONE2                | ZONE2 |

(Note 1) The available output should differ depending on models.

For details, refer to the [Instruction manual of each controller].

|                     | ACON-CYB, DCON-CYB |      |                 |                 |                 |                            |                                                  | ACON, DCON-PLB/POB |           |                                                  | ACON-PL/PO  |             |
|---------------------|--------------------|------|-----------------|-----------------|-----------------|----------------------------|--------------------------------------------------|--------------------|-----------|--------------------------------------------------|-------------|-------------|
|                     | PIO pattern        |      |                 |                 |                 |                            |                                                  | PIO pattern        |           |                                                  | PIO pattern |             |
| Port                | 0                  | 1    | 2               | 3               | 4               | 5                          | 6                                                | 0                  | 1         | 2                                                | 0           | 1           |
| OUT0                | PM1                | PE0  | LS0             | LS0/<br>PE0     | LS0/<br>PE0     | A Selected Number (Note 2) | Control by Serial Communication Command (Note 3) | PWR                | PWR       | Control by Serial Communication Command (Note 3) | SV          | SV          |
| OUT1                | PM2                | PE1  | LS1             | LS1/<br>PE1     | LS1/<br>PE1     |                            |                                                  | SV                 | SV        |                                                  | INP         | INP/<br>TLR |
| OUT2                | PM4                | PE2  | LS2             | PSFL            | PSFL            |                            |                                                  | INP                | INP       |                                                  | HEND        | HEND        |
| OUT3                | PM8                | PE3  | HEND            | HEND            | HEND            |                            |                                                  | HEND               | HEND      |                                                  | *ALM        | *ALM        |
| OUT4                | HEND               | PE4  | SV              | SV              | SV              |                            |                                                  | TLR                | TLR       |                                                  | 0           | 0           |
| OUT5                | PZONE/<br>ZONE1    | PE5  | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 |                            |                                                  | ZONE<br>1          | ZONE<br>1 |                                                  | 0           | 0           |
| OUT6                | PEND               | PE6  | *ALML           | *ALML           | *ALML           |                            |                                                  | *ALML              | REND      |                                                  | 0           | 0           |
| OUT7                | *ALM               | *ALM | *ALM            | *ALM            | *ALM            |                            |                                                  | *ALM               | *ALM      |                                                  | 0           | 0           |
| OUT8<br>to<br>OUT15 | 0                  | 0    | 0               | 0               | 0               | 0                          |                                                  | 0                  | 0         |                                                  | 0           | 0           |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

For details, refer to [ACON-CYB/PLB/POB and DCON-CYB/PLB/POB instruction manual (ME0353)].

(Note 3) PLB/POB is complied with the serial communication mode in the firmware version ACON (v0002) and DCON (v0001) or later.

Even though the I/O port output signal status is read out in the condition of PIO Pattern 6, the values should all be 0.

|       | SCON-C/CA/CAL/CB |                 |                 |       |                 |                 | SCON-CA/CB      |                 | SCON-C/CA/CB             |                 |
|-------|------------------|-----------------|-----------------|-------|-----------------|-----------------|-----------------|-----------------|--------------------------|-----------------|
|       | PIO pattern      |                 |                 |       |                 |                 |                 |                 | (Pulse Train Mode)       |                 |
| Port  | 0                | 1               | 2               | 3     | 4               | 5               | 6               | 7               | 0                        | 1(Notes 1)      |
| OUT0  | PM1              | PM1             | PM1             | PM1   | PE0             | LS0             | PM1             | PE0             | PWR                      | PWR             |
| OUT1  | PM2              | PM2             | PM2             | PM2   | PE1             | LS1             | PM2             | PE1             | SV                       | SV              |
| OUT2  | PM4              | PM4             | PM4             | PM4   | PE2             | LS2             | PM4             | PE2             | INP                      | INP             |
| OUT3  | PM8              | PM8             | PM8             | PM8   | PE3             | 0               | PM8             | PE3             | HEND                     | HEND            |
| OUT4  | PM16             | PM16            | PM16            | PM16  | PE4             | 0               | PM16            | PE4             | TLR                      | TLR             |
| OUT5  | PM32             | PM32            | PM32            | PM32  | PE5             | 0               | TRQS            | TRQS            | *ALM                     | *ALM            |
| OUT6  | MOVE             | MOVE            | PM64            | PM64  | PE6             | 0               | LOAD            | LOAD            | *EMGS                    | *EMGS           |
| OUT7  | ZONE1            | MODES           | PM128           | PM128 | ZONE1           | ZONE1           | CEND            | CEND            | RMDS                     | RMDS            |
| OUT8  | PZONE/<br>ZONE2  | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | PM256 | PZONE/<br>ZONE2 | PZONE/<br>ZONE2 | PZONE/<br>ZONE1 | PZONE/<br>ZONE1 | ALM1                     | ALM1            |
| OUT9  | RMDS             | RMDS            | RMDS            | RMDS  | RMDS            | RMDS            | RMDS            | RMDS            | ALM2                     | ALM2            |
| OUT10 | HEND             | HEND            | HEND            | HEND  | HEND            | HEND            | HEND            | HEND            | ALM4                     | ALM4            |
| OUT11 | PEND             | PEND/<br>WEND   | PEND            | PEND  | PEND            | 0               | PEND            | PEND            | ALM8                     | ALM8            |
| OUT12 | SV               | SV              | SV              | SV    | SV              | SV              | SV              | SV              | *OVLW/<br>*ALML(Notes 2) | *OVLW/<br>*ALML |
| OUT13 | *EMGS            | *EMGS           | *EMGS           | *EMGS | *EMGS           | *EMGS           | *EMGS           | *EMGS           | 0                        | REND            |
| OUT14 | *ALM             | *ALM            | *ALM            | *ALM  | *ALM            | *ALM            | *ALM            | *ALM            | ZONE1                    | ZONE1           |
| OUT15 | *BALM            | *BALM           | *BALM           | *BALM | *BALM           | *BALM           | *BALM           | *BALM           | ZONE2                    | ZONE2           |

(Note 1) This mode is not equipped in SCON-C/CA.

(Note 2) SCON-C is not equipped with \*OVLW and \*ALML outputs.

|       | SCON-CB     | ERC2 (PIO Type) |      |      |      | ERC3 (PIO Type) |      |                 |
|-------|-------------|-----------------|------|------|------|-----------------|------|-----------------|
|       | Servo press | PIO pattern     |      |      |      | PIO pattern     |      |                 |
| Port  | -           | 0               | 1    | 2    | 3    | 0               | 1    | 2               |
| OUT0  | PCMP        | PEND            | PE0  | PEND | PEND | PEND            | PE0  | PEND            |
| OUT1  | PRUN        | HEND            | PE1  | HEND | HEND | HEND            | PE1  | HEND            |
| OUT2  | PORG        | ZONE            | PE2  | ZONE | ZONE | ZONE 1          | PE2  | PZONE/<br>ZONE1 |
| OUT3  | APRC        | *ALM            | *ALM | *ALM | *ALM | *ALM            | *ALM | *ALM            |
| OUT4  | SERC        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT5  | PRSS        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT6  | PSTP        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT7  | MPHM        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT8  | JDOK        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT9  | JDNG        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT10 | CEND        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT11 | RMDS        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT12 | HEND        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT13 | SV          | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT14 | *ALM        | 0               | 0    | 0    | 0    | 0               | 0    | 0               |
| OUT15 | *ALML       | 0               | 0    | 0    | 0    | 0               | 0    | 0               |

### 6.4.12 Controller Status Signal Reading 1 (DSS1)

#### [1] Function

This bit reads the internal status of the controller.

For status details, refer to [4.3.2 [12] Data of device status register 1].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '0', '5'                | Device status register 1                              |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9005 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Status 1                          | Status 1 [HEX]                                        |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the device status (Address 9005<sub>H</sub>) of a controller with axis No. 0 is shown below.

- Query

01 03 9005 0001 66 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '5'                               | 39303035                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '6', '6'<br>(in accordance with LRC calculation) | 3636                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 3088 42 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '3', '0', '8', '8'                               | 33303838                      |
| Error check [H]          | '4', '2'<br>(in accordance with LRC calculation) | 3432                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of device status register 1:

3088<sub>H</sub> → Convert into binary number: 0011000010001000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| EMGS   | SFTY   | PWR    | SV     | PSFL   | ALMH   | ALML  | ABER  | BKRL  | -     | STP   | HEND  | PEND  | CEND  | CLBS  | -     |
| 0      | 0      | 1      | 1      | 0      | 0      | 0     | 0     | 1     | 0     | 0     | 0     | 1     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.13 Controller Status Signal Reading 2 (DSS2)

#### [1] Function

This bit reads the internal status of the controller.

For status details, refer to [4.3.2 [13] Data of device status register 2].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '0', '6'                | Device status register 2                              |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9006 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Status 2                          | Status 2 [HEX]                                        |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the device status (Address 9006<sub>H</sub>) of a controller with axis No. 0 is shown below.

- Query

01 03 9006 0001 65 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '6'                               | 39303036                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '6', '5'<br>(in accordance with LRC calculation) | 3635                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 8000 7A [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '8', '0', '0', '0'                               | 38303030                      |
| Error check [H]          | '7', 'A'<br>(in accordance with LRC calculation) | 3741                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of device status register 2:

8000<sub>H</sub> → Convert into binary number: 1000000000000000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| ENBS   | -      | LOAD   | TRQS   | MODS   | TEAC   | JOG+  | JOG-  | PE7   | PE6   | PE5   | PE4   | PE3   | PE2   | PE1   | PE0   |
| 1      | 0      | 0      | 0      | 0      | 0      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.14 Controller Status Signal Reading 3 (DSSE)

#### [1] Function

This bit reads internal status (expansion device) of the controller.

For status details, refer to [4.3.2 [14] Data of expansion device status register].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '0', '7'                | Expansion device status register                      |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9007 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Expansion status                  | Expansion status [HEX]                                |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |



## [4] Query sample

A sample query that reads the expansion device status (Address 9007<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9007 0001 64 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '7'                               | 39303037                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '6', '4'<br>(in accordance with LRC calculation) | 3634                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 33C7 00 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '3', '3', 'C', '7'                               | 33334337                      |
| Error check [H]          | '0', '0'<br>(in accordance with LRC calculation) | 3030                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of expansion device status register 2:

33C2<sub>H</sub> → Convert into binary number: 0011001111000010<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| EMGP   | MPUV   | RMDS   | -      | GHMS   | PUSH   | PSNS  | PMSS  | -     | -     | MOVE  | -     | -     | -     | -     | -     |
| 0      | 0      | 1      | 1      | 0      | 0      | 1     | 1     | 1     | 1     | 0     | 0     | 0     | 0     | 1     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.15 Controller Status Signal Reading 4 (STAT)

#### [1] Function

This bit reads the internal operation status of the controller.

For status details, refer to [4.3.2 [15] Data of system status registers].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                          |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                    |
| Start address [H]       | 4                    | '9', '0', '0', '8'                | System status register                                   |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading addresses 9008 <sub>H</sub> to 9009 <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                          |
| Total number of bytes   | 17                   | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | System status                     | System status [HEX]                                   |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the system status (Address 9008<sub>H</sub> to 9009<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9008 0002 62 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', '8'                               | 39303038                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '6', '2'<br>(in accordance with LRC calculation) | 3632                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 000C 0011 DB [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers)                 | 3034                          |
| Data [H]                 | '0', '0', '0', 'C', '0', '0', '1', '1'           | 3030304330303131              |
| Error check [H]          | 'D', 'B'<br>(in accordance with LRC calculation) | 4442                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of system status register:

000C 0011<sub>H</sub> → Convert into binary number: 0000000000001100 0000000000010001<sub>b</sub>

| Bit 31 | Bit 30 | Bit 29 | Bit 28 | Bit 27 | Bit 26 | Bit 25 | Bit 24 | Bit 23 | Bit 22 | Bit 21 | Bit 20 | Bit 19 | Bit 18 | Bit 17 | Bit 16 |
|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| BATL   | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | ASOF   | AEEP   |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 1      | 1      | 0      | 0      |
| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9  | Bit 8  | Bit 7  | Bit 6  | Bit 5  | Bit 4  | Bit 3  | Bit 2  | Bit 1  | Bit 0  |
| -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | -      | RMDS   | HEND   | SV     | SON    | MPOW   |
| 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 0      | 1      | 0      | 0      | 0      | 1      |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.16 Current Speed Reading (VNOW)

#### [1] Function

The monitored data of actual motor speed is read. The speed may be positive or negative depending on the moving direction of the actuator.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                          |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                    |
| Start address [H]       | 4                    | '9', '0', '0', 'A'                | Current speed monitor                                    |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading addresses 900A <sub>H</sub> to 900B <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                          |
| Total number of bytes   | 17                   | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | Current speed                     | Current speed [HEX]<br>The unit is 0.01 mm/s.         |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the current speed monitor (Address 900A<sub>H</sub> to 900B<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 900A 0002 60 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', 'A'                               | 39303041                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '6', '0'<br>(in accordance with LRC calculation) | 3630                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 07C8 D6 [CR] [LF]

| Field                    | ASCII mode fixed character string      | Converted ASCII code data [H]      |
|--------------------------|----------------------------------------|------------------------------------|
| Header                   | ':'                                    | 3A                                 |
| Slave address [H]        | '0', '1'                               | 3031                               |
| Function code [H]        | '0', '3'                               | 3033                               |
| Number of data bytes [H] | '0', '4'                               | 3034                               |
| Data [H]                 | '0', '0', '0', '0', '0', '7', 'C', '8' | 3030303030374338                   |
| Error check [H]          | 'D', '6'                               | In accordance with CRC calculation |
| Trailer                  | 'CR', 'LF'                             |                                    |

Example 1 The current speed is "000007C8<sub>H</sub>" → Convert into decimal number → 1992 (× 0.01mm/s)

Therefore, the current speed monitor is 19.92mm/s

Example 2 When the current speed reading is "FFFFFF070<sub>H</sub>" (moving in the direction opposite to the example above)

FFFFFFFF<sub>H</sub> - FFFFFFF070<sub>H</sub> + 1 (make sure to add 1) = F90<sub>H</sub>

Convert into decimal number → 3984 (× 0.01mm/s)

Therefore, the current speed is 39.84mm/s

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.17 Current Ampere Reading (CNOW)

#### [1] Function

This bit reads the monitor data of the motor current (torque current command value).

The unit is [mA].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                          |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                    |
| Start address [H]       | 4                    | '9', '0', '0', 'C'                | Current ampere monitor                                   |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading addresses 900C <sub>H</sub> to 900D <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                          |
| Total number of bytes   | 17                   | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | Motor current monitor             | Motor current monitor [HEX]<br>The unit is [mA]       |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |

## [4] Query sample

A sample query that read the current ampere monitor (Address 900C<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 900C 0002 5E [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', 'C'                               | 39303043                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '5', 'E'<br>(in accordance with LRC calculation) | 3545                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 01C8 2F [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers)                 | 3034                          |
| Data [H]                 | '0', '0', '0', '0', '0', '1', 'C', '8'           | 3030303030314338              |
| Error check [H]          | '2', 'F'<br>(in accordance with LRC calculation) | 3246                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The monitor value is "000001C8<sub>H</sub>" → Convert into decimal number → 456

Therefore, the current ampere monitor value is 456mA.

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.18 Deviation Reading (DEVI)

#### [1] Function

This bit reads the deviation over a 1ms period between the position command value and the feedback value (actual position).

The unit is [pulse].

The number of pulses per one motor revolution in mechanical angle varies depending on the encoder used.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                          |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                    |
| Start address [H]       | 4                    | '9', '0', '0', 'E'                | Deviation monitor                                        |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading addresses 900E <sub>H</sub> to 900F <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                          |
| Total number of bytes   | 17                   | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | Deviation monitor                 | Deviation monitor [HEX]<br>The unit is [pulse]        |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |



## [4] Query sample

A sample query that reads the deviation monitor (Address 900E<sub>H</sub> to 900F<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 900E 0002 5C [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ','                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '0', 'E'                               | 39303045                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '5', 'C'<br>(in accordance with LRC calculation) | 3543                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 0083 75 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ','                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers)                 | 3034                          |
| Data [H]                 | '0', '0', '0', '0', '0', '0', '8', '3'           | 3030303030303833              |
| Error check [H]          | '7', '5'<br>(in accordance with LRC calculation) | 3735                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The monitor value is "00000083<sub>H</sub>" → Convert into decimal number →131

Therefore, the deviation over a 1ms period between the position command value and the feedback value (actual position) is 131pulses.

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.19 Total Time after Power On Reading (STIM)

#### [1] Function

This bit reads the total time since the controller power was turned on.

The unit is [ms].

The timer value is not cleared by software reset.

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                  |
|-------------------------|----------------------|-----------------------------------|----------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                          |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )    |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                    |
| Start address [H]       | 4                    | '9', '0', '1', '0'                | System timer                                             |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading addresses 9010 <sub>H</sub> to 9011 <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                          |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                          |
| Total number of bytes   | 17                   | -                                 |                                                          |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | System timer                      | System timer [HEX]<br>The unit is [ms]                |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the system timer value (Address 9010<sub>H</sub> to 9011<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9010 0002 5A [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '1', '0'                               | 39303130                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '5', 'A'<br>(in accordance with LRC calculation) | 3541                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0238 C094 6A [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4 (4 bytes = 2 registers)'                 | 3034                          |
| Data [H]                 | '0', '2', '3', '8', 'C', '0', '9', '4'           | 3032333843303934              |
| Error check [H]          | '6', 'A'<br>(in accordance with LRC calculation) | 3641                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The system timer is "0238 C094<sub>H</sub>" → Convert into decimal number → 37273748ms

The total time since the controller power was turned on is 10.353 hours.

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.20 Special Input Port Input Signal Status Reading (SIPM)

#### [1] Function

This bit reads the status of input ports other than the normal input port.

For status details, refer to [4.3.2 [16] Data of special input port monitor registers].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '1', '2'                | Special input port monitor                            |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading addresses 9012 <sub>H</sub>                   |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Special input port monitor        | Refer to the list in [4.3.2 [16]]                     |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the special input port (Address 9012<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9012 0001 59 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '1', '2'                               | 39303132                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '5', '9'<br>(in accordance with LRC calculation) | 3539                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 0300 F7 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '3', '0', '0'                               | 30333030                      |
| Error check [H]          | 'F', '7'<br>(in accordance with LRC calculation) | 4637                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of special input port monitor:

0300<sub>H</sub> → Convert into binary number: 0000001100000000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | NP     | -      | PP     | -      | -      | -     | MDSW  | -     | -     | -     | BLCT  | HMCK  | OT    | CREP  | LS    |
| 0      | 0      | 0      | 0      | 0      | 0      | 1     | 1     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.21 Zone Output Signal Status Reading (ZONS)

#### [1] Function

This bit reads the status of zone.

For status details, refer to [4.3.2 [17] Data of zone status registers].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '1', '3'                | Zone status query                                     |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9013 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Zone status                       | Refer to [4.3.2 [17]]                                 |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the zone output signal (Address 9013<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9013 0001 58 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '1', '3'                               | 39303133                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '5', '8'<br>(in accordance with LRC calculation) | 3538                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 0000 FA [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '0', '0', '0'                               | 30303030                      |
| Error check [H]          | 'F', 'A'<br>(in accordance with LRC calculation) | 4641                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of zone output signal monitor:

0003<sub>H</sub> → Convert into binary number: 0000000000000000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | LS2    | LS1    | LS0    | -      | -      | -     | ZP    | -     | -     | -     | -     | -     | -     | Z2    | Z1    |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 1     | 1     |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.22 Positioning Completed Position Number Reading (POSS) Exected Program Number Register (Servo Press Type) (POSS)

#### [1] Function

This bit reads the position complete number or exected program number.

For status details, refer to [4.3.2 [18] Position number status register / Exected program number registers • For SCON Servo Press Type].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '1', '4'                | Position number / Exected program number status       |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9014 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string               | Remarks                                               |
|--------------------------|----------------------|-------------------------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                                             |                                                       |
| Slave address [H]        | 2                    | Arbitrary                                       | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                                        | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                                        | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Position number / Exected program number status | Refer to the list in [4.3.2 [18]]                     |
| Error check [H]          | 2                    | LRC calculation result                          |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                                      |                                                       |
| Total number of bytes    | 15                   | -                                               |                                                       |



## [4] Query sample

A sample query that reads the positioning completed position (Address 9014<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9014 0001 57 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '1', '4'                               | 39303134                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '5', '7'<br>(in accordance with LRC calculation) | 3537                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 0003 FA [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '0', '0', '3'                               | 30303033                      |
| Error check [H]          | 'F', 'A'<br>(in accordance with LRC calculation) | 4641                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of positioning completed position:

0003<sub>H</sub> → Convert into binary number: 0000000000000011<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | -      | -      | -      | -      | -      | PM512 | PM256 | PM128 | PM64  | PM32  | PM16  | PM8   | PM4   | PM2   | PM1   |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 1     | 1     |

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.23 Controller Status Signal Reading 5 (SSSE)

#### [1] Function

This query reads the internal operation status of the controller.

For status details, refer to [4.3.2 [19] Data of expansion system status register].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '1', '5'                | Expansion system status register                      |
| Number of registers [H] | 1                    | '0', '0', '0', '1'                | Reading addresses 9015 <sub>H</sub>                   |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 14                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Expansion system status           | Refer to the list in [4.3.2 [19]]                     |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the expansion system status (Address 9015<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9015 0001 56 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '1', '5'                               | 39303135                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '5', '6'<br>(in accordance with LRC calculation) | 3536                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 0100 F9 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2'                                         | 3032                          |
| Data [H]                 | '0', '1', '0', '0'                               | 30313030                      |
| Error check [H]          | 'F', '9'<br>(in accordance with LRC calculation) | 4639                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of expansion system status register:

0100<sub>H</sub> → Convert into binary number: 0000000100000000<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | -      | -      | -      | ALMC   | -      | -     | RTC   | -     | -     | -     | -     | -     | -     | -     | -     |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 1     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

**6.4.24 Current Load Reading...SCON-CA/CB, PCON-CBP only****[1] Function**

The monitored data of load cell measurement (push force) is read.

The unit is 0.01N.

**[2] Query format**

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                |
|-------------------------|----------------------|-----------------------------------|--------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                        |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )  |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                  |
| Start address [H]       | 4                    | '9', '0', '1', 'E'                | Load monitor                                           |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading address 901E <sub>H</sub> to 901F <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                        |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                        |
| Total number of bytes   | 17                   | -                                 |                                                        |

**[3] Response format**

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | Position number status            | Current push force [N]<br>Unit: 0.01 N                |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the load cell current measurement (Address 901E<sub>H</sub> to 901F<sub>H</sub>) on the load cell connected to controller axis 0.

- Query

01 03 900A 0002 4C [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '1', 'E'                               | 39393145                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '4', 'C'<br>(in accordance with LRC calculation) | 3443                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 03E4 11 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers)                 | 3034                          |
| Data [H]                 | '0', '0', '0', '0'                               | 30303030                      |
| Error check [H]          | '0', '3', 'E', '4'                               | 30334534                      |
| Trailer                  | '1', '1'<br>(in accordance with LRC calculation) | 3131                          |

Example 1) The current measurement on the load cell is

000003E4<sub>H</sub> → Convert into decimal number → 996 (× 0.01N) → 9.96N

The current push force is 9.96N

Example 2) If the current measurement reading on the load cell is "FFFFFF35<sub>H</sub>" (tensile state <sup>(Note 1)</sup>),

FFFFFFF<sub>H</sub>-FFFFFF35<sub>H</sub> + 1 <sup>(\*)</sup> → Convert into decimal number → 203 (× 0.01N) → 2.03

Therefore, the current tensile force <sup>(Note 1)</sup> is 2.03N.

Note 1 The pulling operation is applicable only for the pulse pressing

\*1 As it is a complement of 2, make sure to add "1".

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.25 Overload Level Monitor Reading (OLLV)...SCON-CA/CAL/CB Only

#### [1] Function

Current load level to the motor is read in ratio.

The unit is 1%.

For status details, refer to [4.3.2 [20] Overload level monitors].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                |
|-------------------------|----------------------|-----------------------------------|--------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                        |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )  |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                  |
| Start address [H]       | 4                    | '9', '0', '2', '0'                | Overload level monitor                                 |
| Number of registers [H] | 4                    | '0', '0', '0', '2'                | Reading address 9020 <sub>H</sub> to 9021 <sub>H</sub> |
| Error check [H]         | 2                    | LRC calculation result            |                                                        |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                        |
| Total number of bytes   | 17                   | -                                 |                                                        |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '4'                          | 4 bytes = Reading 2 registers                         |
| Data [H]                 | 8                    | Overload level                    | Unit: 1%                                              |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 19                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the overload level (Address 9020<sub>H</sub> to 9021<sub>H</sub>) on the actuator connected to controller axis No. 0 is shown below.

- Query

01 03 9020 0002 4A [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '2', '0'                               | 39303230                      |
| Number of registers [H] | '0', '0', '0', '2'                               | 30303032                      |
| Error check [H]         | '4', 'A'<br>(in accordance with LRC calculation) | 3441                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 04 0000 0046 B2 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers)                 | 3034                          |
| Data [H]                 | '0', '0', '0', '0', '0', '0', '4', '6'           | 3030303030303436              |
| Error check [H]          | 'B', '2'<br>(in accordance with LRC calculation) | 4232                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Example 1) The current overload level is

0000046<sub>H</sub> → Convert into decimal number → 70

The current overload level is 70%.

Note If the response example is simply an example and will vary depending on various conditions.

### 6.4.26 Press Program Alarm Code Reading (ALMP)...Servo Press Type Only

#### [1] Function

Codes to show the program condition or alarm status are read.

00<sub>H</sub> is output in the normal condition.

For alarm code details, refer to the [instruction manual of servo press type controller].

Also, for the register details, refer to [4.3.2 [21] Press program alarm codes].

#### [2] Query format

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '2', '2'                | Press program alarm codes                             |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9022 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

#### [3] Response format

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Alarm code                        | Alarm code [HEX]                                      |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |



## [4] Query sample

Here shows an example to read an alarm code (Address 9022<sub>H</sub>) of a pressing program occurred in the controller on Axis No. 0.

- Query

01 03 9022 0001 49 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '2', '2'                               | 39303232                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '4', '9'<br>(in accordance with LRC calculation) | 3439                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 0003 F7 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '0', '0', '3'                               | 30303033                      |
| Error check [H]          | 'F', '7'<br>(in accordance with LRC calculation) | 4637                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Current generated alarm code is 0003<sub>H</sub>

0003<sub>H</sub> → It is the Press program alarm codes 03 "Program startup at axis operation".

Check in [Troubleshooting pages in Servo-Pressing Feature Instruction Manual (ME0345) for SCON-CB Controller] for the details of the pressing program alarm codes.

Note If the response example is simply an example and will vary depending on various conditions.

**6.4.27 Alarm Generated Press Program No. Reading (ALMP)...Servo Press Type Only****[1] Function**

The press program number that an alarm is issued is read.

00<sub>H</sub> is output in the normal condition.

For the register details, refer to [4.3.2 [22] Alarm generated press program No.].

**[2] Query format**

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '2', '3'                | Alarm generated program No.                           |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9023 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

**[3] Response format**

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Program No.                       | Alarm generated program No. [HEX]                     |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

Here shows an example to read the pressing program number occurred in the pressing program alarm (Address 9023<sub>H</sub>) in the controller on Axis No. 0.

- Query

01 03 9023 0001 48 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '2', '3'                               | 39303233                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '4', '8'<br>(in accordance with LRC calculation) | 3438                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 00 05 F5[CR][LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '0', '0', '5'                               | 30303035                      |
| Error check [H]          | 'F', '5'<br>(in accordance with LRC calculation) | 4635                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

The pressing program number occurred in the pressing program alarm is 0005<sub>H</sub> → No. 5

Note If the response example is simply an example and will vary depending on various conditions.

**6.4.28 Press Program Status Register Reading (PPST)...Servo Press Type Only****[1] Function**

Internal operation condition in the press program is read.

For the register details, refer to [4.3.2 [23] Press program status registers].

**[2] Query format**

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 4                    | '9', '0', '2', '4'                | Press program status register                         |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9024 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 17                   | -                                 |                                                       |

**[3] Response format**

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string | Remarks                                               |
|--------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                               |                                                       |
| Slave address [H]        | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                          | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                          | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Press program status register     | Press program status [HEX]                            |
| Error check [H]          | 2                    | LRC calculation result            |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes    | 15                   | -                                 |                                                       |

## [4] Query sample

A sample query that reads the press program status (Address 9024<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9024 0001 47 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ': '                                             | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '2', '4'                               | 39303234                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '4', '7'<br>(in accordance with LRC calculation) | 3437                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 0102 05 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ': '                                             | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '1', '0', '2'                               | 30313032                      |
| Error check [H]          | '0', '5'<br>(in accordance with LRC calculation) | 3035                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of press program status:

0102<sub>H</sub> → Convert into binary number: 0000000100000010<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | WAIT   | RTRN   | DCMP   | PSTP   | PRSS   | SERC  | APRC  | -     | -     | -     | MPHM  | PALM  | PCMP  | PRUN  | PORG  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 1     | 0     | 0     | 0     | 0     | 0     | 0     | 1     | 0     |

Note If the response example is simply an example and will vary depending on various conditions.

**6.4.29 Press Program Judgement Status Register Reading (PPJD)...Servo Press Type Only****[1] Function**

Judgement condition in the press program is read.

For the register details, refer to [4.3.2 [24] Press program judgement status register].

**[2] Query format**

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                               |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------|
| Header                  | 1                    | ':'                               |                                                       |
| Slave address [H]       | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]       | 2                    | '0', '3'                          | Register reading code                                 |
| Start address [H]       | 2                    | '9', '0', '2', '5'                | Press program judgement status register               |
| Number of registers [H] | 4                    | '0', '0', '0', '1'                | Reading address 9025 <sub>H</sub>                     |
| Error check [H]         | 2                    | LRC calculation result            |                                                       |
| Trailer                 | 2                    | 'CR', 'LF'                        |                                                       |
| Total number of bytes   | 15                   | -                                 |                                                       |

**[3] Response format**

A response message contains 16 bits of data per register.

| Field                    | Number of characters | ASCII mode fixed character string       | Remarks                                               |
|--------------------------|----------------------|-----------------------------------------|-------------------------------------------------------|
| Header                   | 1                    | ':'                                     |                                                       |
| Slave address [H]        | 2                    | Arbitrary                               | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> ) |
| Function code [H]        | 2                    | '0', '3'                                | Register reading code                                 |
| Number of data bytes [H] | 2                    | '0', '2'                                | 2 bytes = Reading 1 register                          |
| Data [H]                 | 4                    | Press program judgement status register | Press program judgement status [HEX]                  |
| Error check [H]          | 2                    | LRC calculation result                  |                                                       |
| Trailer                  | 2                    | 'CR', 'LF'                              |                                                       |
| Total number of bytes    | 15                   | ':'                                     |                                                       |

## [4] Query sample

A sample query that reads the press program judgement status (Address 9025<sub>H</sub>) of a controller of axis No. 0 is shown below.

- Query

01 03 9025 0001 46 [CR] [LF]

| Field                   | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|-------------------------------|
| Header                  | ':'                                              | 3A                            |
| Slave address [H]       | '0', '1'                                         | 3031                          |
| Function code [H]       | '0', '3'                                         | 3033                          |
| Start address [H]       | '9', '0', '2', '5'                               | 39303235                      |
| Number of registers [H] | '0', '0', '0', '1'                               | 30303031                      |
| Error check [H]         | '4', '6'<br>(in accordance with LRC calculation) | 3436                          |
| Trailer                 | 'CR', 'LF'                                       | 0D0A                          |

The response to the query is as follows.

- Response

01 03 02 0105 F4 [CR] [LF]

| Field                    | ASCII mode fixed character string                | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header                   | ':'                                              | 3A                            |
| Slave address [H]        | '0', '1'                                         | 3031                          |
| Function code [H]        | '0', '3'                                         | 3033                          |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register)                  | 3032                          |
| Data [H]                 | '0', '1', '0', '5'                               | 30313035                      |
| Error check [H]          | 'F', '4'<br>(in accordance with LRC calculation) | 4634                          |
| Trailer                  | 'CR', 'LF'                                       | 0D0A                          |

Contents of press program judgement status:

0105<sub>H</sub> → Convert into binary number: 0000000100000101<sub>b</sub>

| Bit 15 | Bit 14 | Bit 13 | Bit 12 | Bit 11 | Bit 10 | Bit 9 | Bit 8 | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| -      | -      | -      | -      | -      | -      | -     | -     | -     | -     | LJNG  | LJOK  | PJNG  | PJOK  | JDNG  | JDOK  |
| 0      | 0      | 0      | 0      | 0      | 0      | 0     | 1     | 0     | 0     | 0     | 0     | 0     | 1     | 0     | 1     |

Note If the response example is simply an example and will vary depending on various conditions.

## 6.5 Operation Commands and Data Rewrite (Function code 05)

### 6.5.1 Writing to Coil

#### [1] Function

Change (write) the status of DO (Discrete Output) of a slave to either ON or OFF.

In case of broadcast transmission, the coils at the specified address of all slaves are rewritten.

#### [2] Start address list

| Address [H] | Symbol | Function                               |
|-------------|--------|----------------------------------------|
| 0401        | SFTY   | Safety speed command                   |
| 0403        | SON    | Servo ON command                       |
| 0407        | ALRS   | Alarm reset command                    |
| 0408        | BKRL   | Brake forced-release command           |
| 040A        | STP    | Pause command                          |
| 040B        | HOME   | Home return command                    |
| 040C        | CSTR   | Positioning start command              |
| 0411        | JISL   | Jog/inch switching                     |
| 0414        | MOD    | Teaching mode command                  |
| 0415        | TEAC   | Position data load command             |
| 0416        | JOG+   | Jog+ command                           |
| 0417        | JOG-   | Jog- command                           |
| 0418        | ST7    | Start position 7 (solenoid valve mode) |
| 0419        | ST6    | Start position 6 (solenoid valve mode) |
| 041A        | ST5    | Start position 5 (solenoid valve mode) |
| 041B        | ST4    | Start position 4 (solenoid valve mode) |
| 041C        | ST3    | Start position 3 (solenoid valve mode) |
| 041D        | ST2    | Start position 2 (solenoid valve mode) |
| 041E        | ST1    | Start position 1 (solenoid valve mode) |
| 041F        | ST0    | Start position 0 (solenoid valve mode) |
| 0426        | CLBR   | Load cell calibration command          |
| 0427        | PMSL   | PIO/Modbus switching specification     |
| 042C        | STOP   | Deceleration stop                      |
| 049B        | ENMV   | Axis operation permission              |
| 049C        | PHOM   | Program home return movement           |
| 049D        | SSTP   | Search stop                            |
| 049E        | FPST   | Program compulsoly finish              |
| 049F        | PSTR   | Program start                          |



### 6.5.2 Safety Speed Enable/Disable Switching (SFTY)

#### [1] Function

This query “enables/disables” the speed specified by user parameter No. 35, “Safety speed.”  
Enabling the safety speed in the MANU mode will limit the speeds of all movement commands.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ‘:’                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | ‘0’, ‘5’                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | ‘0’, ‘4’, ‘0’, ‘1’                | Safety speed command                                                                                 |
| Changed data [H]      | 4                    | Arbitrary                         | Safety speed enabled: ‘F’, ‘F’, ‘0’, ‘0’<br>Safety speed disabled: ‘0’, ‘0’, ‘0’, ‘0’                |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | ‘CR’, ‘LF’                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format

If the change is successful, the response message will be the same as the query.  
If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) A sample query that “enables” the safety speed of a controller of axis No. 0 is shown below.

- Query (Safety speed enabled)

Fixed character string: 01050401FF00F6 [CR] [LF]

Conversion data: 3A 30 31 30 35 30 34 30 31 46 46 30 30 46 36 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ‘:’                                              | 3A                            |
| Slave address [H] | ‘0’, ‘1’                                         | 3031                          |
| Function code [H] | ‘0’, ‘5’                                         | 3035                          |
| Start address [H] | ‘0’, ‘4’, ‘0’, ‘1’                               | 30343031                      |
| Changed data [H]  | ‘F’, ‘F’, ‘0’, ‘0’                               | 46463030                      |
| Error check [H]   | ‘F’, ‘6’<br>(in accordance with LRC calculation) | 4636                          |
| Trailer           | ‘CR’, ‘LF’                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

(2) A sample query that “disables” the safety speed of a controller of axis No. 0 is shown below.

- Query (Safety speed disabled)

Character string: 010504010000F5 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 31 30 30 30 30 46 35 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ‘:’                                              | 3A                            |
| Slave address [H] | ‘0’, ‘1’                                         | 3031                          |
| Function code [H] | ‘0’, ‘5’                                         | 3035                          |
| Start address [H] | ‘0’, ‘4’, ‘0’, ‘1’                               | 30343031                      |
| Changed data [H]  | ‘0’, ‘0’, ‘0’, ‘0’                               | 46463030                      |
| Error check [H]   | ‘F’, ‘5’<br>(in accordance with LRC calculation) | 4635                          |
| Trailer           | ‘CR’, ‘LF’                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.3 Servo ON/OFF (SON)

#### [1] Function

Control ON/OFF of the servo.

When "Servo ON" is specified by the new data, the servo will turn ON after elapse of the manufacturer parameter "Servo ON delay time"(\*1). However, the following conditions must be satisfied:

#### [Condition]

- The EMG status (bit 15) in device status register 1 (9005<sub>H</sub>) is "0".
- The major failure status (bit 10) in device status register 1 (9005<sub>H</sub>) is "0".
- The enable status (bit 15) in device status register 2 (9006<sub>H</sub>) is "1".
- The auto servo OFF status (bit 17) in the system status register (9008<sub>H</sub>) is "0".

\*1 "Servo-On Latency" is a parameter for the manufacturer's adjustment.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                           |
|-----------------------|----------------------|-----------------------------------|---------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                   |
| Slave address [H]     | 2                    | Arbitrary                         | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                        |
| Start address [H]     | 4                    | '0', '4', '0', '3'                | Servo ON/OFF command                                                                              |
| Changed data [H]      | 4                    | Arbitrary                         | Servo ON: 'F', 'F', '0', '0'<br>Servo OFF: '0', '0', '0', '0'                                     |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                   |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                   |
| Total number of bytes | 17                   | -                                 |                                                                                                   |

\* If a teaching tool is taken off after the servo is turned off on the teaching tool before having a communication with the host, servo-on/off with communication to the host will not be available.

In order to recover the condition, either the power on the controller should be rebooted or the connection to SIO Port is to be disconnected while the servo is turned on.

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) A sample query that turns on the “servo ON” of a controller of axis No. 0 is shown below.

- Query (servo ON)

Character string: 01050403FF00F4 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 33 46 46 30 30 46 34 0D 0A

| Field             | ASCII mode fixed character string             | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Header            | ‘:’                                           | 3A                            |
| Slave address [H] | ‘0’, ‘1’                                      | 3031                          |
| Function code [H] | ‘0’, ‘5’                                      | 3035                          |
| Start address [H] | ‘0’, ‘4’, ‘0’, ‘3’                            | 30343033                      |
| Changed data [H]  | ‘F’, ‘F’, ‘0’, ‘0’                            | 46463030                      |
| Error check [H]   | ‘F’, ‘4’ (in accordance with LRC calculation) | 4634                          |
| Trailer           | ‘CR’, ‘LF’                                    | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

(2) A sample query that turns on the “servo OFF” of a controller of axis No. 0 is shown below.

- Query (servo OFF)

Character string: 010504030000F3 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 33 30 30 30 30 46 33 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ‘:’                                              | 3A                            |
| Slave address [H] | ‘0’, ‘1’                                         | 3031                          |
| Function code [H] | ‘0’, ‘5’                                         | 3035                          |
| Start address [H] | ‘0’, ‘4’, ‘0’, ‘3’                               | 30343033                      |
| Changed data [H]  | ‘0’, ‘0’, ‘0’, ‘0’                               | 30303030                      |
| Error check [H]   | ‘F’, ‘3’<br>(in accordance with LRC calculation) | 4633                          |
| Trailer           | ‘CR’, ‘LF’                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.4 Alarm Reset (ALRS)

#### [1] Function

When the alarm reset edge is turned on (the data is first set to FF00<sub>H</sub> and then changed to 0000<sub>H</sub>), alarms will be reset.

If any alarm cause has not been removed, the same alarm will be generated again. If the alarm reset edge is turned on while the actuator is paused, the remaining travel will be cancelled.

When alarms are reset, make sure to write changed data of 0000<sub>H</sub> to restore the normal status.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                           |
|-----------------------|----------------------|-----------------------------------|---------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                   |
| Slave address [H]     | 2                    | Arbitrary                         | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                        |
| Start address [H]     | 4                    | '0', '4', '0', '7'                | Alarm reset command                                                                               |
| Changed data [H]      | 4                    | Arbitrary                         | Alarm reset command ON: 'F', 'F', '0', '0'<br>Alarm reset command OFF: '0', '0', '0', '0'         |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                   |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                   |
| Total number of bytes | 17                   | ':'                               |                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that resets the alarms of a controller of axis No. 0 is shown below.

- Query

First time (Execute alarm reset)

Character string: 010504030000F3 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 33 30 30 30 30 46 33 0D 0A

Second time (Restore normal status)

Character string: 010504030000F3 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 33 30 30 30 30 46 33 0D 0A

| Field             | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header            | ‘:’                                                                                                                           | 3A                                            |
| Slave address [H] | ‘0’, ‘1’                                                                                                                      | 3031                                          |
| Function code [H] | ‘0’, ‘5’                                                                                                                      | 3035                                          |
| Start address [H] | ‘0’, ‘4’, ‘0’, ‘7’                                                                                                            | 30343037                                      |
| Changed data [H]  | First time: ‘F’, ‘F’, ‘0’, ‘0’ (*1)<br>Second time: ‘0’, ‘0’, ‘0’, ‘0’                                                        | First time: 46463030<br>Second time: 30303030 |
| Error check [H]   | First time: ‘F’, ‘0’<br>(in accordance with LRC calculation)<br>Second time: ‘E’, ‘F’<br>(in accordance with LRC calculation) | First time: 4630<br>Second time: 4546         |
| Trailer           | ‘CR’, ‘LF’                                                                                                                    | 0D0A                                          |

\*1 Write 0000<sub>H</sub> after resetting alarms to restore the normal status.

\* If the change is successful, the response message will be the same as the query.

### 6.5.5 Brake Forced Release (BKRL)

#### [1] Function

Brake control is linked to servo ON/OFF. The brake can be forcefully released even when the servo is ON.



#### Caution

- Once it gets unnecessary for brake compulsory release, make sure to have 0000H written with the changed data and set it back to the normal condition. The brake would not work while the servo is off if the brake compulsory release is kept on. If it is a condition that the unit is installed vertically, a workpiece would drop and may cause a risk of injury or workpiece being damaged.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                                           |
|-----------------------|----------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                                   |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01H to 10H)<br>00H when broadcast is specified                                                   |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                                        |
| Start address [H]     | 4                    | '0', '4', '0', '8'                | Break forced release command                                                                                      |
| Changed data [H]      | 4                    | Arbitrary                         | Break forced release command ON:<br>'F', 'F', '0', '0'<br>Break forced release command OFF:<br>'0', '0', '0', '0' |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                                   |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                                   |
| Total number of bytes | 17                   | -                                 |                                                                                                                   |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that forcefully releases the break of a controller of axis No. 0 is shown below.

- Query

First time (Execute break forced release)

Character string: 01050405FF00F2 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 35 46 46 30 30 46 32 0D 0A

Second time (Restore normal status)

Character string: 010504050000F1 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 35 30 30 30 30 46 31 0D 0A

| Field             | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header            | ':'                                                                                                                           | 3A                                            |
| Slave address [H] | '0', '1'                                                                                                                      | 3031                                          |
| Function code [H] | '0', '5'                                                                                                                      | 3035                                          |
| Start address [H] | '0', '4', '0', '8'                                                                                                            | 30343035                                      |
| Changed data [H]  | First time: 'F', 'F', '0', '0' (*1)<br>Second time: '0', '0', '0', '0'                                                        | First time: 46463030<br>Second time: 30303030 |
| Error check [H]   | First time: 'F', '2'<br>(in accordance with LRC calculation)<br>Second time: 'F', '1'<br>(in accordance with LRC calculation) | First time: 4632<br>Second time: 4631         |
| Trailer           | 'CR', 'LF'                                                                                                                    |                                               |

\*1 (After the brake compulsory release, write 0000<sub>H</sub> and set it back to the normal condition.)

\* If the change is successful, the response message will be the same as the query.



### 6.5.6 Pause (STP)

#### [1] Function

If the pause command is transmitted during movement, the actuator decelerates and stops.

If the status is set back to normal again, the actuator resumes moving for the remaining distance.

As long as the pause command is being transmitted, all motor movement is inhibited.

If the alarm reset command bit is set while the actuator is paused, the remaining travel will be cancelled.

If this bit is set during home return, the movement command will be held if the actuator has not yet reversed after contacting the mechanical end. If the actuator has already reversed after contacting the mechanical end, home return will be repeated from the beginning.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ‘.’                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | ‘0’, ‘5’                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | ‘0’, ‘4’, ‘0’, ‘A’                | Pause command                                                                                        |
| Changed data [H]      | 4                    | Arbitrary                         | Pause command ON: ‘F’, ‘F’, ‘0’, ‘0’<br>Pause command OFF: ‘0’, ‘0’, ‘0’, ‘0’                        |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | ‘CR’, ‘LF’                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that pauses a controller of axis No. 0 is shown below.

- Query

First time (Pause command)

Character string: 0105040AFF00ED [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 41 46 46 30 30 45 44 0D 0A

Second time (Pause release)

Character string: 0105040A0000EC [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 41 30 30 30 30 45 43 0D 0A

| Field             | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header            | ':'                                                                                                                           | 3A                                            |
| Slave address [H] | '0', '1'                                                                                                                      | 3031                                          |
| Function code [H] | '0', '5'                                                                                                                      | 3035                                          |
| Start address [H] | '0', '4', '0', 'A'                                                                                                            | 30343041                                      |
| Changed data [H]  | First time: 'F', 'F', '0', '0'<br>Second time: '0', '0', '0', '0'                                                             | First time: 46463030<br>Second time: 30303030 |
| Error check [H]   | First time: 'E', 'D'<br>(in accordance with LRC calculation)<br>Second time: 'E', 'C'<br>(in accordance with LRC calculation) | First time: 4544<br>Second time: 4543         |
| Trailer           | -                                                                                                                             |                                               |

If the change is successful, the response message will be the same as the query.

### 6.5.7 Home Return (HOME)

#### [1] Function

Home return operation will start if a rising edge in the home return command signal is detected (the data is first set to 0000<sub>H</sub> and then changed to FF00<sub>H</sub>). Upon home return completion, the HEND bit will become “1”. This command can be input as many times as desired even after home return completion.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ‘:’                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | ‘0’, ‘5’                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | ‘0’, ‘4’, ‘0’, ‘B’                | Home return command                                                                                  |
| Changed data [H]      | 4                    | Arbitrary                         | Home return command ON: ‘F’, ‘F’, ‘0’, ‘0’<br>Home return command OFF: ‘0’, ‘0’, ‘0’, ‘0’            |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | ‘CR’, ‘LF’                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

\* The servo must be ON before a home return command is issued.

If a teaching pendant is connected before the control establishes communication with the host, the servo is turned OFF, and then the teaching pendant is removed, the servo cannot be turned ON/OFF via commands received from omit the host.

In this case, restore the RC controller power, or make sure the SIO port connection is removed while the servo is ON.

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that executes home return operation of a controller of axis No. 0 is shown below.

- Query

First time (Set normal status)

Character string: 0105040B0000EB [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 42 30 30 30 30 45 42 0D 0A

Second time (Execute home return)

Character string: 0105040BFF00EC [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 42 46 46 30 30 45 43 0D 0A

| Field                           | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header                          | ':'                                                                                                                           | 3A                                            |
| Slave address [H]               | '0', '1'                                                                                                                      | 3031                                          |
| Function code [H]               | '0', '5'                                                                                                                      | 3035                                          |
| Start address [H]               | '0', '4', '0', 'B'                                                                                                            | 30343042                                      |
| Changed data [H] <sup>(*)</sup> | First time: '0', '0', '0', '0'<br>Second time: 'F', 'F', '0', '0'                                                             | First time: 30303030<br>Second time: 46463030 |
| Error check [H]                 | First time: 'E', 'B'<br>(in accordance with LRC calculation)<br>Second time: 'E', 'C'<br>(in accordance with LRC calculation) | First time: 4542<br>Second time: 4543         |
| Trailer                         | 'CR', 'LF'                                                                                                                    | 0D0A                                          |

\*1 Send data twice to set the edge.

\* If the change is successful, the response message will be the same as the query.

### 6.5.8 Positioning Start Command (CSTR)

#### [1] Function

If the rising edge of the positioning start command is detected (the data is first set to 0000<sub>H</sub> and then changed to FF00<sub>H</sub>), the actuator will move to the position specified by the position number stored in the position number command register (POSR:0D03<sub>H</sub>). If nothing is done after the position start command (FF00<sub>H</sub> is read and no new data is written), a position complete will not be output even when the actuator enters the positioning band. Have 0000<sub>H</sub> written with the changed data, and turn the home-return command "off".

If this command is executed when home return has never been performed after the power was turned on (when the HEND bit is "0"), the actuator will perform home return and then start moving to the target position.

\* The target position, speed and all other operation parameters must be set in the position table (nonvolatile memory) of the controller in advance.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                               |
|-----------------------|----------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                       |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified  |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                            |
| Start address [H]     | 4                    | '0', '4', '0', 'C'                | Positioning start command                                                                             |
| Changed data [H]      | 4                    | Arbitrary                         | Positioning start command ON: 'F', 'F', '0', '0'<br>Positioning start command OFF: '0', '0', '0', '0' |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                       |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                       |
| Total number of bytes | 17                   | -                                 |                                                                                                       |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that moves the actuator of a controller of axis No. 0 to the position specified by the position number stored in the position number command register (POSR: 0D03<sub>H</sub>) is shown below.

- Query

First time (Movement command)

Character string: 0105040CFF00EB [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 43 46 46 30 30 45 42 0D 0A

Second time (Normal status)

Character string: 0105040C0000EA [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 30 43 30 30 30 30 45 41 0D 0A

| Field                           | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header                          | ','                                                                                                                           | 3A                                            |
| Slave address [H]               | '0', '1'                                                                                                                      | 3031                                          |
| Function code [H]               | '0', '5'                                                                                                                      | 3035                                          |
| Start address [H]               | '0', '4', '0', 'C'                                                                                                            | 30343043                                      |
| Changed data [H] <sup>(*)</sup> | First time: 'F', 'F', '0', '0'<br>Second time: '0', '0', '0', '0'                                                             | First time: 46463030<br>Second time: 30303030 |
| Error check [H]                 | First time: 'E', 'B'<br>(in accordance with LRC calculation)<br>Second time: 'E', 'A'<br>(in accordance with LRC calculation) | First time: 4542<br>Second time: 4541         |
| Trailer                         | 'CR', 'LF'                                                                                                                    | 0D0A                                          |

\*1 Once actuator operation has started, turn the position start command "off".

\* If the change is successful, the response message will be the same as the query.

### 6.5.9 Jog/Inch Switching (JISL)

#### [1] Function

This bit switches between jogging and inching. When the changed data is 0000<sub>H</sub>, the jog operation should be performed by operating JOG+ (Start address: 0416<sub>H</sub>) / JOG- (Start address: 0417<sub>H</sub>). When it is FF00<sub>H</sub>, the inching operation should be performed by operating JOG+ (Start address: 0416<sub>H</sub>) / JOG- (Start address: 0417<sub>H</sub>).

If this bit switches while the actuator is jogging, the actuator will decelerate to a stop.

If this bit switches while the actuator is inching, the inching movement will continue.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | '0', '4', '1', '1'                | Jog/Inch Switching                                                                                   |
| Changed data [H]      | 4                    | Arbitrary                         | Inching operation: 'F', 'F', '0', '0'<br>Jogging operation: '0', '0', '0', '0'                       |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) A sample query that switches the operation of a controller of axis No. 0 to inching is shown below.

- Query (Setting the inching operation)

Character string: 01050411FF00E6 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 31 31 46 46 30 30 45 36 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ': '                                             | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '1', '1'                               | 30343131                      |
| Changed data [H]  | 'F', 'F', '0', '0'                               | 46463030                      |
| Error check [H]   | 'E', '6'<br>(in accordance with LRC calculation) | 4536                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

(2) A sample query that switches the operation of a controller of axis No. 0 to jog is shown below.

- Query (Setting the jog operation)

Character string: 010504110000E5 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 31 31 30 30 30 30 45 35 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ': '                                             | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '1', '1'                               | 30343131                      |
| Changed data [H]  | '0', '0', '0', '0'                               | 30303030                      |
| Error check [H]   | 'E', '5'<br>(in accordance with LRC calculation) | 4536                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.



### 6.5.10 Teaching Mode Command (MOD)

#### [1] Function

This bit switches between the positioning mode and teaching mode.

It should be transmitted to the teaching mode once the changed data get into FF00<sub>H</sub> and should be transmitted to the positioning mode if into 0000<sub>H</sub>. However, it has to be under the following conditions.

[Condition]

- The CSTR bit (bit 3) in details of device controller register 1 (0D00<sub>H</sub>) is "0".
- The CSTR bit (bit 10) in details of device controller register 2 (0D01<sub>H</sub>) is "0".
- JOG+/JOG- bits (bit 8, 9) in details of device controller register 2 (0D01<sub>H</sub>) are both "0".
- ST# bits (bit 0 to 7) in details of device controller register 2 (0D01<sub>H</sub>) are all "0".
- Actuators are stopped (even Push operation is not being conducted)

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | '0', '4', '1', '4'                | Switch between the positioning mode and the teaching mode.                                           |
| Changed data [H]      | 4                    | Arbitrary                         | Teaching mode: 'F', 'F', '0', '0'<br>Positioning mode: '0', '0', '0', '0'                            |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) A sample query that switches the operation mode of a controller of axis No. 0 to teaching mode is shown below.

- Query (Setting the teaching mode)

Character string: :01050414FF00E3 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 31 34 46 46 30 30 45 33 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ':'                                              | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '1', '4'                               | 30343134                      |
| Changed data [H]  | 'F', 'F', '0', '0'                               | 46463030                      |
| Error check [H]   | 'E', '3'<br>(in accordance with LRC calculation) | 4533                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

(2) A sample query that switches the operation mode of a controller of axis No. 0 to positioning mode is shown below.

- Query (Setting the positioning mode)

Character string: :010504140000E2 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 31 34 30 30 30 30 45 32 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ':'                                              | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '1', '4'                               | 30343134                      |
| Changed data [H]  | '0', '0', '0', '0'                               | 30303030                      |
| Error check [H]   | 'E', '2'<br>(in accordance with LRC calculation) | 4532                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.11 Position Data Load Command (TEAC)

#### [1] Function

The current position is acquired by writing this command (write FF00<sub>H</sub>) when the teaching mode command (refer to [6.5.10]) is FF00<sub>H</sub> (teaching command).

The current position data will be written in the position number specified by the position number command register (Start address: 9800<sub>H</sub>) when the aforementioned condition was detected.

If other position data fields are empty, the default parameter values will be written at the same time in the empty fields other than the target position (positioning band INP, speed VCMD, acceleration/deceleration speed ACMD, and control flag CTLF).

After sending this command (write FF00<sub>H</sub>), keep the status as is for 20ms or longer.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | '0', '4', '1', '5'                | Position data load command                                                                           |
| Changed data [H]      | 4                    | Arbitrary                         | Position data load command<br>ON: 'F', 'F', '0', '0'<br>OFF: '0', '0', '0', '0'                      |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that acquires the current position when a controller of axis No. 0 is in the teaching mode is shown below.

- Query

Character string: 01050415FF00E2 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 31 35 46 46 30 30 45 32 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ','                                              | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '1', '5'                               | 30343135                      |
| Changed data [H]  | 'F', 'F', '0', '0'                               | 46463030                      |
| Error check [H]   | 'E', '2'<br>(in accordance with LRC calculation) | 4532                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.



### Caution

- Alarm Code: 093 "Home-Return Incomplete PWRT Signal Detected" should be generated when this command (FF00<sub>H</sub> Writing) is detected continuously for 20ms or more while in the status of the home-return incomplete.

### 6.5.12 Jog+ Command (JOG+)

#### [1] Function

The actuator performs either jog or inching operation.

- If the jog+ command (changed data FF00<sub>H</sub>) is sent when the jog/inch switching command (refer to [6.5.9]) is set to 0000<sub>H</sub> (set to jog), the actuator will jog in the direction opposite home. The speed and acceleration/deceleration speed conform to the “PIO jog speed” set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.  
If the jog+ command (changed data 0000<sub>H</sub>) is sent or the jog- command (refer to [6.5.13], changed data FF00<sub>H</sub>) is sent while the actuator is moving jog, the actuator will decelerate to a stop.
- If the jog+ command rising edge is set (the data is first set to 0000<sub>H</sub> and changed to FF00<sub>H</sub>) while the jog/inch switching command (refer to [6.5.9]) is FF00<sub>H</sub> (set to inching), the actuator will inch in the direction opposite home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 “PIO jogging speed”, user parameter No. 48 “PIO inching distance”, and rated acceleration/deceleration speed, respectively.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ‘.’                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | ‘0’, ‘5’                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | ‘0’, ‘4’, ‘1’, ‘6’                | Jog+ command                                                                                         |
| Changed data [H]      | 4                    | Arbitrary                         | Jog+ command: ‘F’, ‘F’, ‘0’, ‘0’<br>Command OFF: ‘0’, ‘0’, ‘0’, ‘0’                                  |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | ‘CR’, ‘LF’                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) Axis No. 0 should be operated in jog in the positive direction (opposite home position).

## ● Query

Character string: 01050416FF00E1 [CR] [LF]Hexadecimal: 3A 30 31 30 35 30 34 31 36 46 46 30 30 45 31 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ‘,’                                              | 3A                            |
| Slave address [H] | ‘0’, ‘1’                                         | 3031                          |
| Function code [H] | ‘0’, ‘5’                                         | 3035                          |
| Start address [H] | ‘0’, ‘4’, ‘1’, ‘6’                               | 30343136                      |
| Changed data [H]  | ‘F’, ‘F’, ‘0’, ‘0’                               | 46463030                      |
| Error check [H]   | ‘E’, ‘1’<br>(in accordance with LRC calculation) | 4531                          |
| Trailer           | ‘CR’, ‘LF’                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

(2) Axis No. 0 should be operated in inching in the positive direction (opposite home position).

## ● Query (Inching operation: First time • Inching operation, Second time • Restore normal status)

First time: Character string: 01050416FF00E1 [CR] [LF]Hexadecimal: 3A 30 31 30 35 30 34 31 36 46 46 30 30 45 31 0D 0ASecond time: Character string: 010504160000E0 [CR] [LF]Hexadecimal: 3A 30 31 30 35 30 34 31 36 30 30 30 30 45 30 0D 0A

| Field                           | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header                          | ‘,’                                                                                                                           | 3A                                            |
| Slave address [H]               | ‘0’, ‘1’                                                                                                                      | 3031                                          |
| Function code [H]               | ‘0’, ‘5’                                                                                                                      | 3035                                          |
| Start address [H]               | ‘0’, ‘4’, ‘1’, ‘6’                                                                                                            | 30343046                                      |
| Changed data [H] <sup>(*)</sup> | First time: ‘F’, ‘F’, ‘0’, ‘0’<br>Second time: ‘0’, ‘0’, ‘0’, ‘0’<br>* Restore the normal status.                             | First time: 46463030<br>Second time: 30303030 |
| Error check [H]                 | First time: ‘E’, ‘1’<br>(in accordance with LRC calculation)<br>Second time: ‘E’, ‘0’<br>(in accordance with LRC calculation) | First time: 4531<br>Second time: 4530         |
| Trailer                         | ‘CR’, ‘LF’                                                                                                                    | 0D0A                                          |

\*1 After the actuator operation, turn Jog + Command "off".

\* If the change is successful, the response message will be the same as the query.

### 6.5.13 Jog- Command (JOG-)

#### [1] Function

The actuator performs either jog or inching operation.

- If the jog- command (changed data FF00<sub>H</sub>) is sent when the jog/inch switching command (refer to [6.5.9]) is set to 0000<sub>H</sub> (set to jog), the actuator will jog in the direction of home. The speed and acceleration/deceleration speed conform to the "PIO jog speed" set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.  
If the jog- command (changed data 0000<sub>H</sub>) is sent or the jog+ command (refer to [6.5.12], changed data FF00<sub>H</sub>) is sent while the actuator is moving, the actuator will decelerate to a stop.
- If the jog- command rising edge is set (the data is first set to 0000<sub>H</sub> and changed to FF00<sub>H</sub>) while the jog/inch switching command (refer to [6.5.9]) is FF00<sub>H</sub> (set to inching), the actuator will inch in the direction opposite home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 "PIO jogging speed", user parameter No. 48 "PIO inching distance", and rated acceleration/deceleration speed, respectively.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | '0', '4', '1', '7'                | Jog- command                                                                                         |
| Changed data [H]      | 4                    | Arbitrary                         | Jog- command: 'F', 'F', '0', '0'<br>Command OFF: '0', '0', '0', '0'                                  |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

(1) Axis No. 0 should be operated in jog in the negative direction (towards home position).

## ● Query

Character string: 01050417FF00E0 [CR] [LF]Hexadecimal: 3A 30 31 30 35 30 34 31 37 46 46 30 30 45 30 0D 0A

| Field             | ASCII mode fixed character string            | Converted ASCII code data [H] |
|-------------------|----------------------------------------------|-------------------------------|
| Header            | ': '                                         | 3A                            |
| Slave address [H] | '0', '1'                                     | 3031                          |
| Function code [H] | '0', '5'                                     | 3035                          |
| Start address [H] | '0', '4', '1', '7'                           | 30343137                      |
| Changed data [H]  | 'F', 'F', '0', '0'                           | 46463030                      |
| Error check [H]   | 'E', '0'(in accordance with LRC calculation) | 4530                          |
| Trailer           | 'CR', 'LF'                                   | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

(2) Axis No. 0 should be operated in inching in the negative direction (towards home position).

## ● Query (Inching operation: First time • Inching operation, Second time • Restore normal status)

First time: Character string: 01050417FF00E0 [CR] [LF]Hexadecimal: 3A 30 31 30 35 30 34 31 37 46 46 30 30 45 30 0D 0ASecond time: Character string: 010504170000DF [CR] [LF]Hexadecimal: 3A 30 31 30 35 30 34 31 37 30 30 30 30 44 46 0D 0A

| Field                           | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header                          | ': '                                                                                                                          | 3A                                            |
| Slave address [H]               | '0', '1'                                                                                                                      | 3031                                          |
| Function code [H]               | '0', '5'                                                                                                                      | 3035                                          |
| Start address [H]               | '0', '4', '1', '7'                                                                                                            | 30343047                                      |
| Changed data [H] <sup>(*)</sup> | First time: 'F', 'F', '0', '0'<br>Second time: '0', '0', '0', '0'                                                             | First time: 46463030<br>Second time: 30303030 |
| Error check [H]                 | First time: 'E', '0'<br>(in accordance with LRC calculation)<br>Second time: 'D', 'F'<br>(in accordance with LRC calculation) | First time: 4530<br>Second time: 4446         |
| Trailer                         | 'CR', 'LF'                                                                                                                    | 0D0A                                          |

\*1 After the actuator operation, turn Jog - Command "off".

\* If the change is successful, the response message will be the same as the query.



### 6.5.14 Start Positions 0 to 7 (ST0 to ST7) Movement Command (Limited to solenoid valve mode)

#### [1] Function

The actuator moves to the specified position number position.

The movement command for start position 0 to 7 is effective only when solenoid valve mode is selected.

The movement command is sent by enabling either one of ST0 to ST7 in [6.5.14 [5] Start address] (write new value FF00<sub>H</sub> when 0000<sub>H</sub> is set).

If a position other than the valid start positions is selected, Alarm code: 085 "Moving position number error" will be generated.

Either level operation or edge operation can be selected using user parameter No. 27, "Movement command type."

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | Arbitrary                         | Refer to [6.5.14 [5] Start address]                                                                  |
| Changed data [H]      | 4                    | Arbitrary                         | *1 Operation command ON: 'F', 'F', '0', '0'<br>Operation command OFF: '0', '0', '0', '0'             |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

\*1 If user parameter No. 27, "Movement command type" is set to "level operation", the actuator decelerates to a stop by overwriting FF00<sub>H</sub> with 0000<sub>H</sub>.

#### [3] Response format

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that moves a controller of axis No. 0 to start position 2 is shown below.  
An example of start position setting.

| No. | Position<br>[mm] | Speed<br>[mm/s] | Acceleration<br>[G] | Deceleration<br>[G] |
|-----|------------------|-----------------|---------------------|---------------------|
| 0   | 0.00             | 533.00          | 0.30                | 0.30                |
| 1   | 25.00            | 533.00          | 0.30                | 0.30                |
| 2   | 50.00            | 533.00          | 0.30                | 0.30                |

- Query(First time: Write 0000<sub>H</sub> to set the edge, Second time: Movement command)  
 First time: Character string: 0105041D0000D9 [CR] [LF]  
 Hexadecimal: 3A 30 31 30 35 30 34 31 44 30 30 30 30 44 39 0D 0A  
 Second time: Character string: 0105041DFF00DA [CR] [LF]  
 Hexadecimal: 3A 30 31 30 35 30 34 31 44 46 46 30 30 44 41 0D 0A

| Field             | ASCII mode<br>fixed character string                                                                                          | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header            | ': '                                                                                                                          | 3A                                            |
| Slave address [H] | '0', '1'                                                                                                                      | 3031                                          |
| Function code [H] | '0', '5'                                                                                                                      | 3035                                          |
| Start address [H] | '0', '4', '1', 'D'                                                                                                            | 30343044                                      |
| Changed data [H]  | First time: '0', '0', '0', '0'<br>Second time: 'F', 'F', '0', '0'                                                             | First time: 30303030<br>Second time: 46463030 |
| Error check [H]   | First time: 'D', '9'<br>(in accordance with LRC calculation)<br>Second time: 'D', 'A'<br>(in accordance with LRC calculation) | First time: 4439<br>Second time: 4441         |
| Trailer           | 'CR', 'LF'                                                                                                                    | 0D0A                                          |

\* If the change is successful, the response message will be the same as the query.

## [5] Start address

| Address | Symbol | Name             | Function           |
|---------|--------|------------------|--------------------|
| 0418    | ST7    | Start Position 7 | Move to position 7 |
| 0419    | ST6    | Start Position 6 | Move to position 6 |
| 041A    | ST5    | Start Position 5 | Move to position 5 |
| 041B    | ST4    | Start Position 4 | Move to position 4 |
| 041C    | ST3    | Start Position 3 | Move to position 3 |
| 041D    | ST2    | Start Position 2 | Move to position 2 |
| 041E    | ST1    | Start Position 1 | Move to position 1 |
| 041F    | ST0    | Start Position 0 | Move to position 0 |

### 6.5.15 Load Cell Calibration Command (CLBR)

#### [1] Function (SCON-CA/CB Servo press connection type only)

The dedicated load cell is calibrated.

The factory setting of your load cell is that the ON status corresponds to a no-load state. If you want to define the reference state as a condition where a work part (load) is installed, calibrate the load cell.

Also calibrate the load cell in other situations as necessary (readjustment, inspection, etc.).

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 2                    | '0', '4', '2', '6'                | Load cell calibration command                                                                        |
| Changed data [H]      | 2                    | Arbitrary                         | Calibration command: 'F', 'F', '0', '0'<br>Normal operation: '0', '0', '0', '0'                      |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response format


If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

#### [4] Calibration procedure

- 1) Stop the actuator operation. (The load cell cannot be calibrated while the actuator is performing any axis operation or push-motion operation or being paused, in which case 0E1 (load cell calibration error) alarm generates.)
- 2) Turn this signal ON and keep it ON for at least 20ms.
- 3) When the calibration is complete, the calibration complete signal (CEND of device status register 1 explained in 4.3.2 (12)) turns ON. After confirming that the CEND has turned ON, turn OFF the CLBR.

If the calibration is not completed in the normal condition, Alarm Code: 0E1 "Loadcell Calibration Error" should occur.

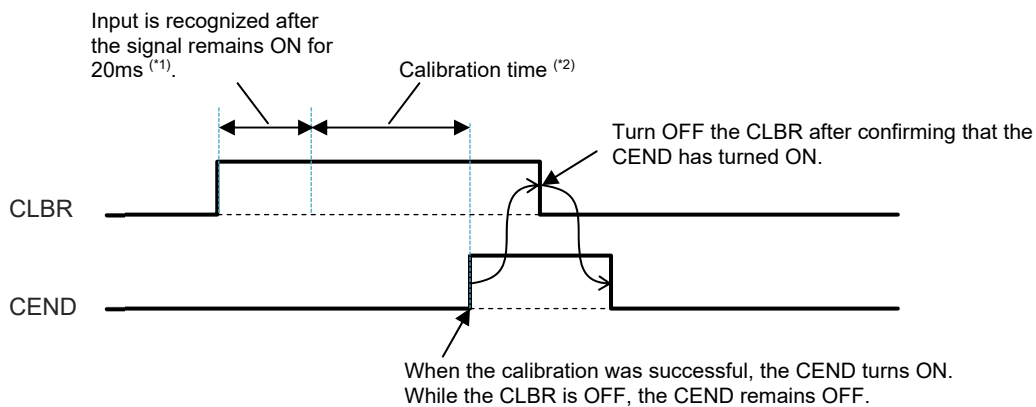

\*1 If the CLBR is turned OFF during this period, calibration will not be performed because the signal is not yet recognized as having been input.

\*2 If the CLBR is turned OFF during this period, an alarm will generate.



#### Caution

- Normal operation commands are not accepted while the CLBR is ON. Turn the command off after the calibration is completed.

## [5] Query sample

Calibrate the dedicated load cell connected to controller axis 0.

- Query

First time: Character string: 01050426FF00D1 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 32 36 46 30 30 44 31 0D 0A

Second time: Character string: 010504260000D0 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 32 36 30 30 30 30 44 30 0D 0A

| Field             | ASCII mode fixed character string                                 | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------|-----------------------------------------------|
| Header            | ':'                                                               | 3A                                            |
| Slave address [H] | '0', '1'                                                          | 3031                                          |
| Function code [H] | '0', '5'                                                          | 3035                                          |
| Start address [H] | First time: 'F', 'F', '0', '0'<br>Second time: '0', '0', '0', '0' | 30343236                                      |
| Changed data [H]  | 'F', 'F', '0', '0'                                                | First time: 46463030<br>Second time: 30303030 |
| Error check [H]   | 'D', '1'<br>(in accordance with LRC calculation)                  | First time: 4431<br>Second time: 4430         |
| Trailer           | 'CR', 'LF'                                                        | 0D0A                                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.16 PIO/Modbus Switching Setting (PMSL)

#### [1] Function

PIO external command signals can be enabled or disabled.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ','                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | '0', '4', '2', '7'                | PIO/Modbus switching setting                                                                         |
| Changed data [H]      | 4                    | Arbitrary                         | *1 Enable Modbus commands: 'F', 'F', '0', '0'<br>Disable Modbus commands: '0', '0', '0', '0'         |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

- \*1
- Enable Modbus commands (ON) (disable PIO command): FF00<sub>H</sub>  
(Operation via PIO signals is not possible).
  - Disable Modbus commands (OFF) (enable PIO command): 0000<sub>H</sub>  
(Operation via external PIO signals is possible).

### Complement

- If the Modbus command is enabled, the PIO status at change is maintained.  
If the Modbus command is switched to disabled, the operation status changes according to the current PIO status. Note that even if the status of signals that operate via edge detection has been changed, edge detection is ignored.

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

A sample query that enables the Modbus command of the operation of a controller of axis No. 0 is shown below.

- Query

Character string: 01050427FF00D0 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 32 37 46 46 30 30 44 30 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ','                                              | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '2', '7'                               | 30343237                      |
| Changed data [H]  | 'F', 'F', '0', '0'                               | 46463030                      |
| Error check [H]   | 'D', '0'<br>(in accordance with LRC calculation) | 4430                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.



### Caution

- In the models equipped with operation model setting switch, it should be set to "PIO Command Valid" when it is set to AUTO mode, and "PIO Command Invalid" when set to MANU mode.
- On a non-PIO model, the default setting is "Disable PIO commands."
- If IAI's tool (teaching pendant or PC software) is connected, "Teaching modes 1, 2" and "Monitor modes 1, 2" are available as tool modes. The correspondence between these modes and PIO enable/disable specifications are as follows:
  - "Monitor modes 1, 2" → "Enable PIO commands"
  - "Teaching modes 1, 2" → "Disable PIO commands"

### 6.5.17 Deceleration Stop (STOP)

#### [1] Function

The actuator will start decelerating to a stop when the deceleration stop command edge (write FF00<sub>H</sub>) is turned on.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                                                   |
|-----------------------|----------------------|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                                           |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified                      |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                                                |
| Start address [H]     | 4                    | '0', '4', '2', 'C'                | Deceleration stop setting                                                                                                 |
| Changed data [H]      | 4                    | Arbitrary                         | Deceleration stop command:<br>'F', 'F', '0', '0'<br>* The controller automatically resets the value to '0', '0', '0', '0' |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                                           |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                                           |
| Total number of bytes | 17                   | -                                 |                                                                                                                           |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.



## [4] Query sample

A sample query that decelerates to a stop of a controller of axis No. 0 is shown below.

- Query

Character string: 0105042CFF00CB [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 32 43 46 46 30 30 43 42 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ','                                              | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '2', 'C'                               | 30343243                      |
| Changed data [H]  | 'F', 'F', '0', '0'                               | 46463030                      |
| Error check [H]   | 'C', 'B'<br>(in accordance with LRC calculation) | 4342                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.18 Axis operation permission (ENMV) (Servo Press Type Only)

#### [1] Function

The setting can be switched on permission activated/inactivated.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                                                  |
|-----------------------|----------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                                          |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified                     |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                                               |
| Start address [H]     | 4                    | '0', '4', '9', 'B'                | Axis operation permission setting                                                                                        |
| Changed data [H]      | 4                    | Arbitrary                         | Axis operation permission activated:<br>F', 'F', '0', '0'<br>Axis operation permission inactivated:<br>0', '0', '0', '0' |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                                          |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                                          |
| Total number of bytes | 17                   | -                                 |                                                                                                                          |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

Movement of the actuator connected to Axis No. 0 gets activated.

- Query

Character string: 0105049BFF005C [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 42 46 46 30 30 35 43 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ': '                                             | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '9', 'B'                               | 30343942                      |
| Changed data [H]  | 'F', 'F', '0', '0'                               | 46463030                      |
| Error check [H]   | '5', 'C'<br>(in accordance with LRC calculation) | 3543                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

**6.5.19 Program Home Position Movement (PHOM) (Servo Press Type Only)****[1] Function**

Raise the program home-return edge (write FF00<sub>H</sub> under the condition of change data being 0000<sub>H</sub>), and the movement will be made to the program home position set in each press program.

**[2] Query format**

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                                                             |
|-----------------------|----------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ‘:’                               |                                                                                                                                     |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified                                |
| Function code [H]     | 2                    | ‘0’, ‘5’                          | Write to a single coil DO.                                                                                                          |
| Start address [H]     | 4                    | ‘0’, ‘4’, ‘9’, ‘C’                | Program home position movement setting                                                                                              |
| Changed data [H]      | 4                    | Arbitrary                         | Program home position movement execution ON: ‘F’, ‘F’, ‘0’, ‘0’<br>Program home position movement execution OFF: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                                                     |
| Trailer               | 2                    | ‘CR’, ‘LF’                        |                                                                                                                                     |
| Total number of bytes | 17                   | -                                 |                                                                                                                                     |

**[3] Response**

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

Movement of the actuator connected to Axis No. 0 gets activated.

- Query (First time: Write the 0000<sub>H</sub> twice to raise the edge, Second time: Movement command)

First time: Character string: 0105049C00005A [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 43 30 30 30 30 35 41 0D 0A

Second time: Character string: 0105049CFF005B [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 43 46 46 30 30 35 42 0D 0A

| Field             | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header            | ‘:’                                                                                                                           | 3A                                            |
| Slave address [H] | ‘0’, ‘1’                                                                                                                      | 3031                                          |
| Function code [H] | ‘0’, ‘5’                                                                                                                      | 3035                                          |
| Start address [H] | ‘0’, ‘4’, ‘9’, ‘C’                                                                                                            | 30343943                                      |
| Changed data [H]  | First time: ‘0’, ‘0’, ‘0’, ‘0’<br>Second time: ‘F’, ‘F’, ‘0’, ‘0’                                                             | First time: 30303030<br>Second time: 46463030 |
| Error check [H]   | First time: ‘5’, ‘A’<br>(in accordance with LRC calculation)<br>Second time: ‘5’, ‘B’<br>(in accordance with LRC calculation) | First time: 3542<br>Second time: 3541         |
| Trailer           | ‘CR’, ‘LF’                                                                                                                    | 0D0A                                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.20 Search Stop (SSTP) (Servo Press Type Only)

#### [1] Function

Setting can be switched whether to finish the press program or not after search operation is completed.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                                            |
|-----------------------|----------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ‘:’                               |                                                                                                                    |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified               |
| Function code [H]     | 2                    | ‘0’, ‘5’                          | Write to a single coil DO.                                                                                         |
| Start address [H]     | 4                    | ‘0’, ‘4’, ‘9’, ‘D’                | Search operation stop setting                                                                                      |
| Changed data [H]      | 4                    | Arbitrary                         | Stopped after search operation:<br>‘F’, ‘F’, ‘0’, ‘0’<br>Not stopped after search operation:<br>‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                                    |
| Trailer               | 2                    | ‘CR’, ‘LF’                        |                                                                                                                    |
| Total number of bytes | 17                   | -                                 |                                                                                                                    |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

After search of the actuator connected to Axis No. 0, press program will be stopped.

- Query

Character string: 0105049DFF005A [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 44 46 46 30 30 35 41 0D 0A

| Field             | ASCII mode fixed character string                | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------|-------------------------------|
| Header            | ': '                                             | 3A                            |
| Slave address [H] | '0', '1'                                         | 3031                          |
| Function code [H] | '0', '5'                                         | 3035                          |
| Start address [H] | '0', '4', '9', 'D'                               | 30343944                      |
| Changed data [H]  | 'F', 'F', '0', '0'                               | 46463030                      |
| Error check [H]   | '5', 'A'<br>(in accordance with LRC calculation) | 3541                          |
| Trailer           | 'CR', 'LF'                                       | 0D0A                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.21 Program compulsory finish (FPST) (Servo Press Type Only)

#### [1] Function

Raise the press program compulsory complete edge (write FF00<sub>H</sub> under the condition of change data being 0000<sub>H</sub>), and the press program will be compulsorily finished. While the change data retains FF00<sub>H</sub>, the start command of the press program cannot be received.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                                      |
|-----------------------|----------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                              |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified         |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                                   |
| Start address [H]     | 4                    | '0', '4', '9', 'E'                | Program compulsory finish setting                                                                            |
| Changed data [H]      | 4                    | Arbitrary                         | Program compulsory finish ON:<br>'F', 'F', '0', '0'<br>Program compulsory finish OFF:<br>'0', '0F', '0', '0' |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                              |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                              |
| Total number of bytes | 17                   | -                                 |                                                                                                              |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.



## [4] Query sample

Press program of the actuator connected to Axis No. 0 will be compulsorily finished.

- Query (First time: Write the 0000<sub>H</sub> twice to raise the edge, Second time: Compulsoly finish)

First time: Character string: 0105049E000058 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 45 30 30 30 35 38 0D 0A

Second time: Character string: 0105049EFF0059 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 45 46 46 30 30 35 39 0D 0A

| Field             | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header            | ‘,’                                                                                                                           | 3A                                            |
| Slave address [H] | ‘0’, ‘1’                                                                                                                      | 3031                                          |
| Function code [H] | ‘0’, ‘5’                                                                                                                      | 3035                                          |
| Start address [H] | ‘0’, ‘4’, ‘9’, ‘E’                                                                                                            | 30343945                                      |
| Changed data [H]  | First time: ‘0’, ‘0’, ‘0’, ‘0’<br>Second time: ‘F’, ‘F’, ‘0’, ‘0’                                                             | First time: 30303030<br>Second time: 46463030 |
| Error check [H]   | First time: ‘5’, ‘8’<br>(in accordance with LRC calculation)<br>Second time: ‘5’, ‘9’<br>(in accordance with LRC calculation) | First time: 3538<br>Second time: 3539         |
| Trailer           | ‘CR’, ‘LF’                                                                                                                    | 0D0A                                          |

\* If the change is successful, the response message will be the same as the query.

### 6.5.22 Program Start (PSTR) (Servo Press Type Only)

#### [1] Function

Raise the program start edge (write FF00<sub>H</sub> under the condition of change data being 0000<sub>H</sub>), and the press program in the program number set in POSR Register will be executed.

#### [2] Query format

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '5'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | '0', '4', '9', 'F'                | Press program Start setting                                                                          |
| Changed data [H]      | 4                    | Arbitrary                         | Press program Start ON: 'F', 'F', '0', '0'<br>Press program Start OFF: '0', '0', '0', '0'            |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

#### [3] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [4] Query sample

Press program of the actuator connected to Axis No. 0 will be executed.

- Query (First time: Write the 0000<sub>H</sub> twice to raise the edge, Second time: Press program executed)

First time: Character string: 0105049F000057 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 46 30 30 30 30 35 37 0D 0A

Second time: Character string: 0105049FFF0058 [CR] [LF]

Hexadecimal: 3A 30 31 30 35 30 34 39 46 46 46 30 30 35 38 0D 0A

| Field             | ASCII mode fixed character string                                                                                             | Converted ASCII code data [H]                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| Header            | ': '                                                                                                                          | 3A                                            |
| Slave address [H] | '0', '1'                                                                                                                      | 3031                                          |
| Function code [H] | '0', '5'                                                                                                                      | 3035                                          |
| Start address [H] | '0', '4', '9', 'F'                                                                                                            | 30343946                                      |
| Changed data [H]  | First time: '0', '0', '0', '0'<br>Second time: 'F', 'F', '0', '0'                                                             | First time: 30303030<br>Second time: 46463030 |
| Error check [H]   | First time: '5', '7'<br>(in accordance with LRC calculation)<br>Second time: '5', '8'<br>(in accordance with LRC calculation) | First time: 3537<br>Second time: 3538         |
| Trailer           | 'CR', 'LF'                                                                                                                    | 0D0A                                          |

\* If the change is successful, the response message will be the same as the query.

## 6.6 Direct Writing of Control Information (Function code 06)

### 6.6.1 Writing to Registers

#### [1] Function

These queries change (write) data in registers of a slave.

In case of broadcast, data of registers of the same address of all slaves is changed.

For the details of each register, refer to

- [4.3.2 [5] Details of device controller register 1]
- [4.3.2 [6] Details of device controller register 2]
- [4.3.2 [7] details of the position number command register and position movement specification register and program number command register (Servo Press) type]

#### [2] Start address list

| Address | Symbol | Name                                                                 | Byte |
|---------|--------|----------------------------------------------------------------------|------|
| 0D00    | DRG1   | Device control register 1                                            | 2    |
| 0D01    | DRG2   | Device control register 2                                            | 2    |
| 0D03    | POSR   | Position number command register/<br>Program number command register | 2    |
| 9800    | POSR   | Position movement command register                                   | 2    |

The registers above are control command registers. The bits of these registers are assigned to input ports by PIO patterns when “PIO/Modbus Switch Status (PMSS) (refer to [4.3.2 [14]])” is set to disable Modbus commands (enable PIO commands). These registers can be rewritten when the Modbus commands are enabled (PIO commands are disabled).

## [3] Query format

Specify the address and data of the register whose data is to be changed in the query message.  
Data to be changed shall be specified as 16-bit data in the changed data area of the query.

| Field                 | Number of characters | ASCII mode fixed character string | Remarks                                                                                              |
|-----------------------|----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------|
| Header                | 1                    | ':'                               |                                                                                                      |
| Slave address [H]     | 2                    | Arbitrary                         | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> when broadcast is specified |
| Function code [H]     | 2                    | '0', '6'                          | Write to a single coil DO.                                                                           |
| Start address [H]     | 4                    | Arbitrary                         | [Refer to [6.6.1 [2] Start address list]                                                             |
| Changed data [H]      | 4                    | -                                 | Refer to List of changed data<br>[4.3.2 [5]] to [4.3.2 [7]]                                          |
| Error check [H]       | 2                    | LRC calculation result            |                                                                                                      |
| Trailer               | 2                    | 'CR', 'LF'                        |                                                                                                      |
| Total number of bytes | 17                   | -                                 |                                                                                                      |

## [4] Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to [7.1 Responses at Errors (Exception Responses)]) will be returned, or no response will be returned.

## [5] Query sample

Examples of different operations are shown in (1) to (3) below.

(1) A sample query that turns the servo ON a controller of axis No. 0 on and then executes home return operation is performed.

- Query

- First time: 01 06 0D 00 10 00 DC [CR] [LF] (Servo ON)
- Second time: 01 06 0D 00 10 10 CC [CR] [LF] (Home return)

| Field             | Number of characters                                                    | ASCII mode fixed character string             | Remarks                                                                                                                                                                            |
|-------------------|-------------------------------------------------------------------------|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header            | ‘:’                                                                     | 3A                                            |                                                                                                                                                                                    |
| Slave address [H] | ‘0’, ‘1’                                                                | 3031                                          | Axis No.0 + 1                                                                                                                                                                      |
| Function code [H] | ‘0’, ‘6’                                                                | 3036                                          |                                                                                                                                                                                    |
| Start address [H] | ‘0’, ‘D’, ‘0’, ‘0’                                                      | 30443030                                      | First time: Device control register 1<br>Second time: Device control register 1                                                                                                    |
| Changed data [H]  | First time:<br>‘1’, ‘0’, ‘0’, ‘0’<br>Second time:<br>‘1’, ‘0’, ‘1’, ‘0’ | First time: 31303030<br>Second time: 31303130 | First time: Device control register 1 is ON<br>Second time: Device control register 1 (SON + HOME) is ON<br>(Keep the servo ON bit “1” in cases other than when the servo is OFF). |
| Error check       | First time: ‘D’, ‘C’<br>Second time: ‘C’, ‘C’                           | First time: 4443<br>Second time: 4343         | In accordance with LRC calculation                                                                                                                                                 |
| Trailer           | ‘CR’, ‘LF’                                                              | 0D0A                                          |                                                                                                                                                                                    |

- \* Home return is not performed even if 1010<sub>H</sub> is sent to change the data while the servo is OFF (Refer to [Timing Chart at Startup described in Each RC Controller Instruction Manual])
- \* To keep the previous status, send the previous status even if there is no change. As in the example above, keep the servo ON bit as “1” at home return as well.

\* If the change is successful, the response message will be the same as the query.

(2) Move to position No. 1 using the position movement specification register (Address 9800<sub>H</sub>).

Have the operation in [Previous page (1)] to complete the home-return operation before having this operation.

- Query

01 06 98 00 00 01 60 [CR] [LF]

| Field             | Number of characters | ASCII mode fixed character string | Remarks                                  |
|-------------------|----------------------|-----------------------------------|------------------------------------------|
| Header            | ':'                  | 3A                                |                                          |
| Slave address [H] | '0', '1'             | 3031                              | Axis No.0 + 1                            |
| Function code [H] | '0', '6'             | 3036                              |                                          |
| Start address [H] | '9', '8', '0', '0'   | 39383030                          | Position movement specification register |
| Changed data [H]  | '0', '0', '0', '1'   | 30303031                          | Specify position No. 1 (*1)              |
| Error check       | '6', '0'             | 3630                              | In accordance with LRC calculation       |
| Trailer           | 'CR', 'LF'           | 0D0A                              |                                          |

\*1 As soon as a position number is written to this register, the actuator starts moving.

The CSTR (start signal) is not required.

\* If the change is successful, the response message will be the same as the query.

(3) Move to position No. 1 using the position number command register (Address 0D03<sub>H</sub>).

Have the operation in (1) to complete the home-return operation before having this operation.

- Query

- First time: 01 06 0D 03 00 01 BA A6 (Specify position No. 1)
- Second time: 01 06 0D 00 10 00 86 A6 (Turn OFF the CSTR (start signal))
- Third time: 01 06 0D 00 10 08 87 60 (Turn ON the CSTR (start signal))

| Field             | Number of characters                                                                                | ASCII mode fixed character string                                     | Remarks                                                                                                                                            |
|-------------------|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Header            | ':'                                                                                                 | 3A                                                                    |                                                                                                                                                    |
| Slave address [H] | '0', '1'                                                                                            | 3031                                                                  | Axis No.0 + 1                                                                                                                                      |
| Function code [H] | '0', '6'                                                                                            | 3036                                                                  |                                                                                                                                                    |
| Start address [H] | First time: '0', 'D', '0', '3'<br>Second time: '0', 'D', '0', '0'<br>Third time: '0', 'D', '0', '0' | First time: 30443033<br>Second time: 30443030<br>Third time: 30443030 | First time: Specify position No.<br>Second time: Device control register 1<br>Third time: Device control register 1                                |
| Changed data [H]  | First time: '0', '0', '0', '1'<br>Second time: '1', '0', '0', '0'<br>Third time: '1', '0', '0', '8' | First time: 30303031<br>Second time: 31303030<br>Third time: 31303038 | First time: Specify position No. 1<br>Second time: Device control register 1 (SON) is ON<br>Third time: Device control register 1 (SON+CSTR) is ON |
| Error check       | First time: 'E', '8'<br>Second time: 'D', 'C'<br>Third time: 'D', '4'                               | First time: 4538<br>Second time: 4443<br>Third time: 4434             | In accordance with LRC calculation                                                                                                                 |
| Trailer           | 'CR', 'LF'                                                                                          | 0D0A                                                                  |                                                                                                                                                    |

\* To keep the previous status, send the previous status even if there is no change.

As in the example above, keep the SON (servo ON) bit as "1" at other than servo OFF.

\* If the change is successful, the response message will be the same as the query.



## 6.7 Direct Writing of Positioning Data (Function code 10)

### 6.7.1 Numerical Value Movement Command

#### [1] Function

Specify the target position in PTP positioning operation using absolute coordinates. It is possible to command the actuator to move via numerical values by writing directly to the group of registers at addresses from 9900<sub>H</sub> to 9908<sub>H</sub> (can be set in one message).

Values of all registers, other than the control flag specification register (Address: 9908<sub>H</sub>), will become effective once the values are sent. If there is no need to change the target position, positioning band, speed, acceleration/deceleration, push-current limiting value and control specification, therefore, each subsequent numerical movement command can be issued simply by writing a desired register that can effect an actual movement command based on changing of the applicable register alone (refer to [[2] Start address list]).

#### [2] Start address list

This group of registers is used to move the actuator by specifying the target position coordinates, positioning band, speed acceleration/deceleration, push-operation current limit control specification flags and so on as numerical values.

Data of start addresses in the list (6 registers in total) can be changed with one transmission.

| Address<br>[H] | Symbol | Name                                                     | Sign | Able to effect an actual<br>movement command by<br>changing the applicable<br>register alone | Register<br>size | Byte<br>size | Unit     |
|----------------|--------|----------------------------------------------------------|------|----------------------------------------------------------------------------------------------|------------------|--------------|----------|
| 9900           | PCMD   | Target position<br>specification register                | ○    | ○                                                                                            | 2                | 4            | 0.01mm   |
| 9902           | INP    | Positioning band<br>specification register               |      | ×                                                                                            | 2                | 4            | 0.01mm   |
| 9904           | VCMD   | Speed specification<br>register                          |      | ○                                                                                            | 2                | 4            | 0.01mm/s |
| 9906           | ACMD   | Acceleration/deceleration<br>specification register      |      | ○                                                                                            | 1                | 2            | 0.01G    |
| 9907           | PPOW   | Push-current limiting<br>value specification<br>register |      | ○                                                                                            | 1                | 2            | %        |
| 9908           | CTLF   | Control flag specification<br>register                   |      | ×<br>Initialization after each<br>movement                                                   | 1                | 2            | -        |

## [3] Query format

1 register = 2 bytes = 16-bit data

| Field                   | Number of characters<br>(number of bytes) | ASCII mode<br>fixed character<br>string                | Remarks                                                                                            |
|-------------------------|-------------------------------------------|--------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Header                  | 1                                         | ':'                                                    |                                                                                                    |
| Slave address [H]       | 2                                         | Arbitrary                                              | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> if broadcast is specified |
| Function code [H]       | 2                                         | '1', '0'                                               | Numerical value specification                                                                      |
| Start address [H]       | 4                                         | Arbitrary                                              | Refer to [6.7.1 [2] Start address list]                                                            |
| Number of registers [H] | 4                                         | Arbitrary                                              | Refer to [6.7.1 [2] Start address list]                                                            |
| Number of bytes [H]     | 2                                         | In accordance<br>with the number<br>of registers above | Input a number doubled to the register<br>count indicated above                                    |
| Changed data 1 [H]      | 4                                         | -                                                      | Refer to [6.7.1 [2] Start address list]                                                            |
| Changed data 2 [H]      | 4                                         | -                                                      | Refer to [6.7.1 [2] Start address list]                                                            |
| Changed data 3 [H]      | 4                                         | -                                                      | Refer to [6.7.1 [2] Start address list]                                                            |
| :                       | :                                         | -                                                      | :                                                                                                  |
| Error check [H]         | 2                                         | LRC calculation<br>result                              |                                                                                                    |
| Trailer                 | 2                                         | 'CR', 'LF'                                             |                                                                                                    |
| Total number of bytes   | Up to 256                                 | -                                                      |                                                                                                    |

## [4] Response format

When normally changed, the response message responds with a copy of the query message excluding the number of bytes and changed data.

| Field                   | Number of characters<br>(number of bytes) | ASCII mode<br>fixed character<br>string | Remarks                                                                                            |
|-------------------------|-------------------------------------------|-----------------------------------------|----------------------------------------------------------------------------------------------------|
| Header                  | 1                                         | ':'                                     |                                                                                                    |
| Slave address [H]       | 2                                         | Arbitrary                               | Axis number + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> if broadcast is specified |
| Function code [H]       | 2                                         | '1', '0'                                | Numerical value specification                                                                      |
| Start address [H]       | 4                                         | Arbitrary                               | Refer to [6.7.1 [2] Start address list]                                                            |
| Number of registers [H] | 4                                         | Arbitrary                               | Refer to [6.7.1 [2] Start address list]                                                            |
| Error check [H]         | 2                                         | LRC calculation<br>result               |                                                                                                    |
| Trailer                 | 2                                         | 'CR', 'LF'                              |                                                                                                    |
| Total number of bytes   | 17                                        | -                                       |                                                                                                    |

## [5] Detailed explanation of registers

## ■ Target position specification register (PCMD)

This register specifies the target position in PTP positioning operation using absolute coordinates. The value of this register is set in units of 0.01mm in a range of –999999 to 999999 (FFF0BDC1<sub>H</sub> (Note 1) to 000F423F<sub>H</sub>). When the absolute coordinate is indicated, operation starts with 0.2mm in front (Note 2) of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900<sub>H</sub>) is rewritten. In other words, a numerical movement command can be issued simply by writing a target position in this register.

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

## ■ Positioning band register (INP)

This register is used in two different ways depending on the type of operation. The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete. The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01mm in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>). Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later. Changing this register alone will not start actuator movement.

**Caution**

- It is necessary that the positioning band is at or more than the value figured out with the formulas below.
  - For Servo motor: Actuator Lead Length ÷ Encoder Pulse
  - For Pulse Motor: Actuator Lead Length ÷ Encoder Pulse × 3

Apply the servo motor formula for RCP6 Actuator

## ■ Speed specification register (VCMD)

This register specifies the moving speed. The value of this register is set in units of 0.01mm/s in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this lower word of this register is rewritten. In other words, the speed can be changed while the actuator is moving, simply by rewriting this register.

### ■ Acceleration/deceleration specification register (ACMD)

This register specifies the acceleration or deceleration. The value of this register is set in units of 0.01G in a range of 1 to 300 (0001<sub>H</sub> to 012C<sub>H</sub>). If the specified value exceeds the maximum acceleration or deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this register is rewritten. In other words, the acceleration/deceleration can be changed while the actuator is moving, simply by rewriting this register.

### ■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name            | Pushable range [%] | Settable range (input value) [H] |
|--------------------------------|--------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 (Note 1)  | 33 to B2                         |
| RCS2-RA13R                     | 20 to 200          | 33 to 1FE                        |

Note 1 The setting ranges may vary depending on the actuator.

For details, refer to the [IAI catalog] or [instruction manual of actuator].

The actuator will start moving when this register is rewritten. In other words, the current limiting value can be changed during push-motion operation simply by rewriting this register.

Sample push-motion current setting

- When setting the current to 20%


$255 (100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}}$  (convert into hexadecimal number)

### ■ Control Flag Specification Register (CTLF)

Set the method of operation.

If push-motion operation or incremental operation (pitch feed) is selected, set this register every time a movement command is issued. (This is because the register will be overwritten with the default value every time the actuator moves.)

CTLF bit structure



The details of each signal are described in the next page.

- Bit 1 (PUSH) = 0: Normal operation (default)  
1: Push-motion operation
- Bit 2 (DIR) = 0: The direction of push-motion operation after completion of approach is defined as the forward direction (default).  
1: The direction of push-motion operation after completion of approach is defined as the reverse direction.

This bit is used to calculate the direction of final stop position from PCMD. If this bit is set incorrectly, therefore, the target position will deviate from the specified position by a distance corresponding to  $2 \times \text{INP}$ , as shown in the figure below.

If bit 1 is set to "0", the setting of this bit is invalid.

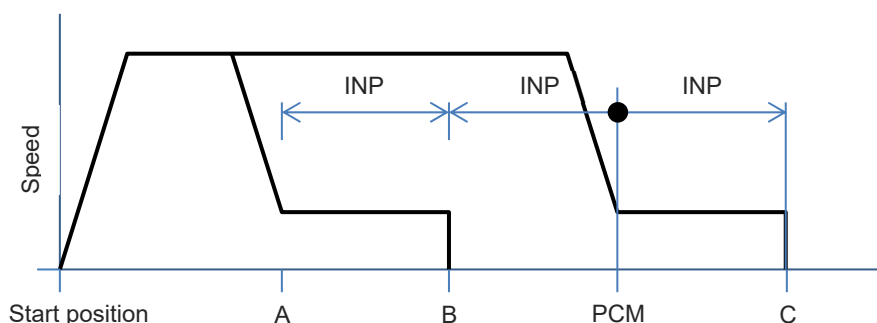


Fig. 6.7-1 Operating Direction in Push-motion Operation

- Bit 3 (INC) = 0: Normal operation (default)  
1: Incremental operation (pitch feed)

Setting this bit to "1" will enable the actuator to operate relative to the current position. In this operation, the actuator behaves differently between normal operation and push-motion operation (CTLF bit 1). While the travel is calculated with respect to the target position (PCMD) in normal operation, it is calculated relative to the current position in push-motion operation (when bit 1 = 1).

Here, since relative coordinate calculation involves adding up pulses in [mm], followed by conversion, unlike a calculation method involving addition after pulse conversion, "repeated relative movements will not cause position deviation as a result of cumulative errors corresponding to fraction pulses that are not divisible with certain lead settings".

- Bit 4 (GSL0), 5 (GSL1) = Refer to the table below  
(ACON-CA/CB/CYB, SCON-CA/CAL/CB/ Servo Press Type)

**Do not attempt to change the number from “0” for those other than the models above.**

**Doing so may cause an error in operation.**

| GSL1 | GSL0 | Function                         |
|------|------|----------------------------------|
| 0    | 0    | Select parameter set 0 (default) |
| 0    | 1    | Select parameter set 1           |
| 1    | 0    | Select parameter set 2           |
| 1    | 1    | Select parameter set 3           |

You can register a maximum of four servo gain parameter sets consisting of six parameters and move the actuator to each position by selecting a different parameter set every time.

For details, refer to the [Instruction manual of each controller].

- Bit 6 (MOD0), 7 (MOD1) = Refer to the table below  
(ACON-C/CY/SE/CA/CB/CYB, DCON-CA/CB/CYB, PCON-CA/CFA/CB/CFB/CYB, SCON-C/CA/CAL/CB, ERC3 only and and SCON Servo Press Type is not applicable)

| MOD1 | MOD0 | Function                    |
|------|------|-----------------------------|
| 0    | 0    | Trapezoid pattern (default) |
| 0    | 1    | S-motion                    |
| 1    | 0    | Primary delay filter        |
| 1    | 1    | Cannot be used.             |

These signals are used to select the acceleration/deceleration pattern characteristics. Set one of the patterns before issuing an actuator movement command.

For details, refer to the [Instruction manual of each controller].

- Bit 12 (NTC0), 13 (NTC1) = Refer to the table below  
(ACON-CA/CB/CYB, SCON-CA/CAL/CB and RCM-P6AC only, and SCON Servo Press Type is not applicable)

| NTC1 | NTC0 | Function                                |
|------|------|-----------------------------------------|
| 0    | 0    | Do not use vibration control (default). |
| 0    | 1    | Select parameter set 1                  |
| 1    | 0    | Select parameter set 2                  |
| 1    | 1    | Select parameter set 3                  |

When vibration control is used, you can register a maximum of three parameter sets and move the actuator to each position by selecting a different parameter set every time.

For details, refer to the [Instruction manual of each controller].

## [6] Example of use

Examples of different operations are shown in (1) to (7) below.

- (1) Move by changing the target position. (All data other than the target position are the default values of their respective parameters.)

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the target position is changed to move the actuator.

complement: Controller's user parameters

- Default speed (parameter No. 8) → Maximum speed of the applicable actuator as specified in the catalog
- Default acceleration/deceleration (parameter No. 9) → Rated acceleration of the applicable actuator as specified in the catalog
- Default positioning band (parameter No. 10) → Default value = 0.1mm

Write the target position specification register (9900<sub>H</sub>) (Example 1)



Start of movement

(Example1) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|----------|--------------|
| 50                   | Need not be set.      |              |                               |          |              |

■ Query: 01 10 9900 0002 04 0000 1388 B5 [CR] [LF]

■ Response: 01 10 9900 0002 54 [CR] [LF]

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field                                                   | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks                                                                                                       |
|---------------------------------------------------------|-----------------------------------|-------------------------------|---------------------------------------------------------------------------------------------------------------|
| Header                                                  | ': '                              | 3A                            |                                                                                                               |
| Slave address                                           | '0', '1'                          | 3031                          | Axis No.0 + 1                                                                                                 |
| Function code                                           | '1', '0'                          | 3130                          |                                                                                                               |
| Start address                                           | '9', '9', '0', '0'                | 39393030                      | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                     | '0', '0', '0', '2'                | 30303032                      | Addresses 9900 <sub>H</sub> to 9901 <sub>H</sub> are written.                                                 |
| Number of bytes                                         | '0', '4'                          | 3034                          | 2 registers × 2 = 4 bytes → 4 <sub>H</sub>                                                                    |
| New data 1, 2 (target position)<br>Input unit (0.01 mm) | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                         | '1', '3', '8', '8'                | 31333838                      | 50mm × 100 = 5000 → 1388 <sub>H</sub>                                                                         |
| Error check                                             | 'B', '5'                          | 4235                          | CRC checksum calculation result → 38AF <sub>H</sub>                                                           |
| Trailer                                                 | 'CR', 'LF'                        | 0D0A                          |                                                                                                               |
| Total number of bytes                                   | 27                                | -                             |                                                                                                               |

- (2) Move by changing the target position. (as well as data other than the target position).

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the actuator speed changed at a given time during movement.

Write the target position specification register (9900<sub>H</sub>) through acceleration/deceleration specification register (9906<sub>H</sub>)<sup>(Example2)</sup>



Start of movement

(Example 2) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%]         | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|------------------|--------------|
| 50                   | 0.1                   | 100          | 0.3                           | Need not be set. |              |

■ Query: 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 47 [CR] [LF]

■ Response: 01 10 9900 0007 4F [CR] [LF]

\* The query message is copied, except for the number of bytes and new data, and returned as a response.


#### ■ Breakdown of Query Message

| Field                                                        | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks                                                                                                       |
|--------------------------------------------------------------|-----------------------------------|-------------------------------|---------------------------------------------------------------------------------------------------------------|
| Header                                                       | ':'                               | 3A                            |                                                                                                               |
| Slave address                                                | '0', '1'                          | 3031                          | Axis No.0 + 1                                                                                                 |
| Function code                                                | '1', '0'                          | 3130                          |                                                                                                               |
| Start address                                                | '9', '9', '0', '0'                | 39393030                      | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                          | '0', '0', '0', '7'                | 30303039                      | Addresses 9900 <sub>H</sub> to 9906 <sub>H</sub> are written.                                                 |
| Number of bytes                                              | '0', 'E'                          | 3132                          | 7 registers × 2 = 14 bytes → E <sub>H</sub>                                                                   |
| New data 1, 2 (target position)<br>Input unit (0.01mm)       | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                              | '1', '3', '8', '8'                | 31333838                      | 50mm × 100 = 5000 → 1388 <sub>H</sub>                                                                         |
| New data 3, 4 (Positioning band)<br>Input unit (0.01mm)      | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                              | '0', '0', '0', 'A'                | 30303041                      | 0.1mm × 100 = 10 → 000A <sub>H</sub>                                                                          |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)               | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                              | '2', '7', '1', '0'                | 32373130                      | 100mm/s × 100 = 10000 → 2710 <sub>H</sub>                                                                     |
| New data 7 (Acceleration/deceleration)<br>Input unit (0.01G) | '0', '0', '1', 'E'                | 30303145                      | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                           |
| Error check                                                  | '4', '7'                          | 3437                          | CRC checksum calculation result → 50CF <sub>H</sub>                                                           |
| Trailer                                                      | 'CR', 'LF'                        | 0D0A                          |                                                                                                               |
| Total number of bytes                                        | 47                                | -                             |                                                                                                               |



## (3) Change the speed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the actuator speed changed at a given time during movement.

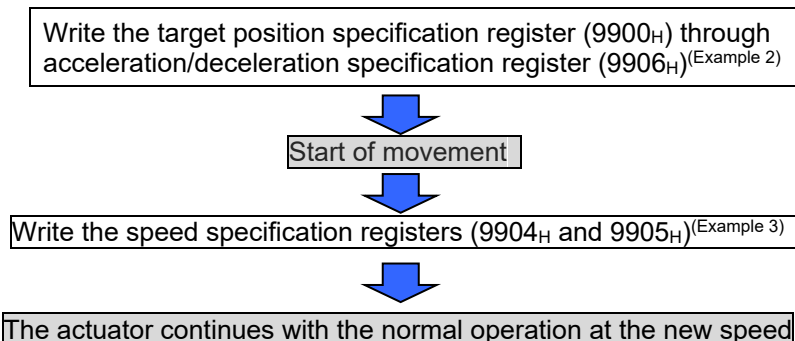

(Example 3) Change the speed from 100mm/s to 50mm/s while the actuator is moving.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag     |
|----------------------|-----------------------|--------------|-------------------------------|----------|------------------|
| 50                   | 0.1                   | 100 → 50     | 0.3                           |          | Need not be set. |

- 1) Start the movement at a speed of 100mm/s. Refer to [above example (2) Move by changing the target position.].

■ Query: 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 47 [CR] [LF]

■ Response: 01 10 9900 0007 4F [CR] [LF]

- 2) Change the speed to 50mm/s.

■ Query: 01 10 9904 0002 04 0000 1388 B1 [CR] [LF]

■ Response: 01 10 9904 0002 50 [CR] [LF]

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

- Breakdown of Query Message (Change the speed to 50mm/s. (Refer to the [Example 2] for the query message used to start the movement at 100mm/s.))

| Field                                          | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks                                                                                                       |
|------------------------------------------------|-----------------------------------|-------------------------------|---------------------------------------------------------------------------------------------------------------|
| Header                                         | ','                               | 3A                            |                                                                                                               |
| Slave address                                  | '0', '1'                          | 3031                          | Axis No.0 + 1                                                                                                 |
| Function code                                  | '1', '0'                          | 3130                          |                                                                                                               |
| Start address                                  | '9', '9', '0', '4'                | 39393034                      | The starting address corresponds to the setting of target position specification register 9904 <sub>H</sub> . |
| Number of registers                            | '0', '0', '0', '2'                | 30303032                      | Addresses 9904 <sub>H</sub> to 9905 <sub>H</sub> are written.                                                 |
| Number of bytes                                | '0', '4'                          | 3034                          | 2 registers × 2 = 4 bytes → 4 <sub>H</sub>                                                                    |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s) | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                | '1', '3', '8', '8'                | 31333838                      | 50mm/s × 100 = 5000 → 1388 <sub>H</sub>                                                                       |
| Error check                                    | 'B', '1'                          | 4231                          | CRC checksum calculation result → 395C <sub>H</sub>                                                           |
| Trailer                                        | 'CR', 'LF'                        | 0D0A                          |                                                                                                               |
| Total number of bytes                          | 27                                | -                             |                                                                                                               |

(4) Move in the incremental (pitch feed) mode.

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the pitch width is changed to move the actuator.

Write the target position specification register (9900<sub>H</sub>) through control flag specification register (9908<sub>H</sub>: Incremental setting) (Example 4)



Start of movement

Complement

- Addresses 9900<sub>H</sub> and 9908<sub>H</sub> alone cannot be changed in a single data transmission. Since all addresses are sequential, send two messages if 9900<sub>H</sub> and 9908<sub>H</sub> alone are changed. If you want to send only one message, write all addresses from 9900<sub>H</sub> to 9908<sub>H</sub>.

(Example 4) Move in the incremental mode by setting the pitch to 10mm.

| Pitch<br>[mm] | Positioning band<br>[mm] | Speed<br>[mm/s] | Acceleration/<br>deceleration<br>[G] | Push<br>[%] | Control flag               |
|---------------|--------------------------|-----------------|--------------------------------------|-------------|----------------------------|
| 10            | 0.1                      | 100             | 0.3                                  | 0           | Incremental<br>(bit 3 = 1) |

■ Query: 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 E9 [CR] [LF]

■ Response: 01 10 9900 0009 4D [CR] [LF]


\* The query message is copied, except for the number of bytes and new data, and returned as a response.

### ■ Breakdown of Query Message

| Field                                                           | ASCII mode<br>fixed character string | Converted ASCII<br>code data [H] | Remarks                                                                                                       |
|-----------------------------------------------------------------|--------------------------------------|----------------------------------|---------------------------------------------------------------------------------------------------------------|
| Header                                                          | ':'                                  | 3A                               |                                                                                                               |
| Slave address                                                   | '0', '1'                             | 3031                             | Axis No.0 + 1                                                                                                 |
| Function code                                                   | '1', '0'                             | 3130                             |                                                                                                               |
| Start address                                                   | '9', '9', '0', '0'                   | 39393030                         | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                             | '0', '0', '0', '9'                   | 30303039                         | Addresses 9900 <sub>H</sub> to 9908 <sub>H</sub> are written.                                                 |
| Number of bytes                                                 | '1', '2'                             | 3132                             | 9 registers × 2 = 18 bytes → 12 <sub>H</sub>                                                                  |
| New data 1, 2<br>(target position)<br>Input unit (0.01mm)       | '0', '0', '0', '0'                   | 30303030                         | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | '0', '3', 'E', '8'                   | 30334538                         | 10mm × 100 = 1000 → 03E8 <sub>H</sub>                                                                         |
| New data 3, 4<br>(Positioning band)<br>Input unit (0.01mm)      | '0', '0', '0', '0'                   | 30303030                         | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | '0', '0', '0', 'A'                   | 30303041                         | 0.1mm × 100 = 10 → 000A <sub>H</sub>                                                                          |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                  | '0', '0', '0', '0'                   | 30303030                         | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | '2', '7', '1', '0'                   | 32373130                         | 100mm/s × 100 = 10000 → 2710 <sub>H</sub>                                                                     |
| New data 7<br>(Acceleration/deceleration)<br>Input unit (0.01G) | '0', '0', '1', 'E'                   | 30303145                         | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                           |
| New data 8 (Push)<br>Input unit [%]                             | '0', '0', '0', '0'                   | 30303030                         | 0% → 0 <sub>H</sub>                                                                                           |
| New data 9 (Control flag)                                       | '0', '0', '0', '8'                   | 30303038                         | (Incremental setting)<br>1000 <sub>b</sub> → 0008 <sub>H</sub>                                                |
| Error check                                                     | 'E', '9'                             | 4539                             | CRC checksum calculation result → F3A0 <sub>H</sub>                                                           |
| Trailer                                                         | 'CR', 'LF'                           | 0D0A                             |                                                                                                               |
| Total number of bytes                                           | 55                                   | -                                |                                                                                                               |

(5) Change the speed during incremental movement (pitch feed).

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.

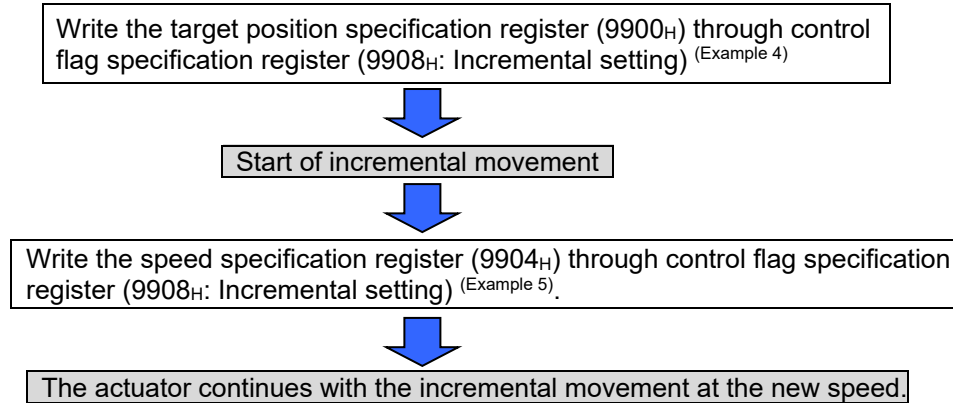


---

### Complement

- After the control flag specification register (9908<sub>H</sub>) is set, the register will return to the default value (0<sub>H</sub>: Normal movement) once the actuator starts moving. Accordingly, you must set the control flag specification register (9908<sub>H</sub>) and send it again if another incremental or push-motion operation is to be performed.
-

(Example 5) Change the speed from 100mm/s to 50mm/s while the actuator is moving.

| Pitch<br>[mm] | Positioning band<br>[mm] | Speed<br>[mm/s] | Acceleration/<br>deceleration<br>[G] | Push<br>[%] | Control flag               |
|---------------|--------------------------|-----------------|--------------------------------------|-------------|----------------------------|
| 10            | 0.1                      | 100 → 50        | 0.3                                  | 0           | Incremental<br>(bit 3 = 1) |

- 1) Start moving at a speed of 100mm/s. Refer to [above example 4 Moving in the incremental (pitch feed) mode].

■ Query: 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 E9 [CR] [LF]

■ Response: 01 10 9900 0009 4D [CR] [LF]

- 2) Change the speed to 50mm/s.

■ Query: 01 10 9904 0005 0A 0000 1388 001E 0000 0008 82 [CR] [LF]

■ Response: 01 10 9904 0005 4D [CR] [LF]

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message (Change the speed to 50mm/s. (Refer to the [above example] for the query message used to start the movement at 100mm/s.))

| Field                                                           | ASCII mode<br>fixed character string | Converted ASCII<br>code data [H] | Remarks                                                                             |
|-----------------------------------------------------------------|--------------------------------------|----------------------------------|-------------------------------------------------------------------------------------|
| Header                                                          | ': '                                 | 3A                               |                                                                                     |
| Slave address                                                   | '0', '1'                             | 3031                             | Axis No.0 + 1                                                                       |
| Function code                                                   | '1', '0'                             | 3130                             |                                                                                     |
| Start address                                                   | '9', '9', '0', '4'                   | 39393034                         | The start address is the target position specification register 9904 <sub>H</sub> . |
| Number of registers                                             | '0', '0', '0', '5'                   | 30303032                         | Addresses 9904 <sub>H</sub> to 9908 <sub>H</sub> are written.                       |
| Number of bytes                                                 | '0', 'A'                             | 3034                             | 5 registers × 2 = 10 bytes → A <sub>H</sub>                                         |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                  | '0', '0', '0', '0'                   | 30303030                         | All upper bits of the 32-bit data are "0".                                          |
|                                                                 | '1', '3', '8', '8'                   | 31333838                         | 50mm/s × 100 = 5000 → 1388 <sub>H</sub>                                             |
| New data 7<br>(Acceleration/deceleration)<br>Input unit (0.01G) | '0', '0', '1', 'E'                   | 30303145                         | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                 |
| New data 8 (Push)<br>Input unit [%]                             | '0', '0', '0', '0'                   | 30303030                         | 0% → 0 <sub>H</sub>                                                                 |
| New data 9<br>(Control flag)                                    | '0', '0', '0', '8'                   | 30303038                         | (Incremental setting)<br>1000 <sub>b</sub> → 0008 <sub>H</sub>                      |
| Error check                                                     | '8', '2'                             | 3832                             | LRC checksum calculation result → 82 <sub>H</sub>                                   |
| Trailer                                                         | 'CR', 'LF'                           | 0D0A                             |                                                                                     |
| Total number of bytes                                           | 39                                   | -                                |                                                                                     |

(6) Perform a push-motion operation. (changing pushing force during push-operation)

Conditions: Perform push-motion operation by changing the push force at a desired time while the actuator is pushing the work part.

Write the target position specification register (9900<sub>H</sub>) through control flag specification register (9908<sub>H</sub>: Push-motion setting) (Example 6)



Start push-motion operation



Write the push-current limit specification register (9907<sub>H</sub>) through control flag specification register (9908<sub>H</sub>: Push-motion setting) (Example 7)



The actuator continues with the push-motion operation with the new push force

The example of query and response are described in the next page.

(Example 6) Perform a push-motion operation for 20mm from the 50mm position at a current-limiting value of 70%.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag                                    |
|----------------------|-----------------------|--------------|-------------------------------|----------|-------------------------------------------------|
| 50                   | 20                    | 100          | 0.3                           | 70       | Push-motion operation (bit 1 = 1, bit 2 = 0, 1) |

■ Query: 01 10 9900 0009 12 0000 1388 0000 07D0 0000 2710 001E 00B2 0006  
BC [CR] [LF]

■ Response: 01 10 9900 0009 4D [CR] [LF]

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

#### ■ Breakdown of Query Message

| Field                                                           | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks                                                                                                       |
|-----------------------------------------------------------------|-----------------------------------|-------------------------------|---------------------------------------------------------------------------------------------------------------|
| Header                                                          | ':'                               | 3A                            |                                                                                                               |
| Slave address                                                   | '0', '1'                          | 3031                          | Axis No.0 + 1                                                                                                 |
| Function code                                                   | '1', '0'                          | 3130                          |                                                                                                               |
| Start address                                                   | '9', '9', '0', '0'                | 39393030                      | The starting address corresponds to the setting of target position specification register 9900 <sub>H</sub> . |
| Number of registers                                             | '0', '0', '0', '9'                | 30303039                      | Addresses 9900 <sub>H</sub> to 9908 <sub>H</sub> are written.                                                 |
| Number of bytes                                                 | '1', '2'                          | 3132                          | 9 registers × 2 = 18 bytes → 12 <sub>H</sub>                                                                  |
| New data 1, 2 (target position)<br>Input unit (0.01mm)          | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | '1', '3', '8', '8'                | 31333838                      | 50mm × 100 = 5000 → 1388 <sub>H</sub>                                                                         |
| New data 3, 4<br>(Positioning band)<br>Input unit (0.01mm)      | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | '0', '7', 'D', '0'                | 30374430                      | 20mm × 100 = 2000 → 07D0 <sub>H</sub>                                                                         |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                  | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                    |
|                                                                 | '2', '7', '1', '0'                | 32373130                      | 100mm/s × 100 = 10000 → 2710 <sub>H</sub>                                                                     |
| New data 7<br>(Acceleration/deceleration)<br>Input unit (0.01G) | '0', '0', '1', 'E'                | 30303145                      | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                           |
| New data 8 (Push)<br>Input unit [%]                             | '0', '0', 'B', '2'                | 30304232                      | 70% → B2 <sub>H</sub>                                                                                         |
| New data 9 (Control flag)                                       | '0', '0', '0', '6'                | 30303036                      | (Push setting)<br>0110 <sub>b</sub> → 0006 <sub>H</sub>                                                       |
| Error check                                                     | 'B', 'C'                          | 4243                          | LRC checksum calculation result → BC <sub>H</sub>                                                             |
| Trailer                                                         | 'CR', 'LF'                        | 0D0A                          |                                                                                                               |
| Total number of bytes                                           | 55                                | -                             |                                                                                                               |

(Example 7) Change the push current limit from 70% to 50% during a push-motion operation.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag                                       |
|----------------------|-----------------------|--------------|--------------------------------|----------|----------------------------------------------------|
| 50                   | 20                    | 100          | 0.3                            | 70 → 50  | Push-motion operation<br>(bit 1 = 1, bit 2 = 0, 1) |

■ Query: 01 10 9907 0002 04 007F 0006 C4 [CR] [LF]

■ Response: 01 10 9907 0002 4D [CR] [LF]

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

#### ■ Breakdown of Query Message

| Field                               | ASCII mode<br>fixed character string | Converted ASCII<br>code data [H] | Remarks                                                                              |
|-------------------------------------|--------------------------------------|----------------------------------|--------------------------------------------------------------------------------------|
| Header                              | ':'                                  | 3A                               |                                                                                      |
| Slave address                       | '0', '1'                             | 3031                             | Axis No.0 + 1                                                                        |
| Function code                       | '1', '0'                             | 3130                             |                                                                                      |
| Start address                       | '9', '9', '0', '7'                   | 39393037                         | The start address is the target position<br>specification register 9907 <sub>H</sub> |
| Number of registers                 | '0', '0', '0', '2'                   | 30303032                         | Addresses 9907 <sub>H</sub> to 9908 <sub>H</sub> are written.                        |
| Number of bytes                     | '0', '4'                             | 3034                             | 2 registers × 2 = 4 bytes → 4 <sub>H</sub>                                           |
| New data 8 (Push)<br>Input unit [%] | '0', '0', '7', 'F'                   | 30303746                         | 50% → 7 F <sub>H</sub>                                                               |
| New data 9 (Control flag)           | '0', '0', '0', '6'                   | 30303036                         | (Push setting)<br>0110 <sub>b</sub> → 0006 <sub>H</sub>                              |
| Error check                         | 'C', '4'                             | 4334                             | CRC checksum calculation result → C5C5 <sub>H</sub>                                  |
| Trailer                             | 'CR', 'LF'                           | 0D0A                             |                                                                                      |
| Total number of bytes               | 27                                   | -                                |                                                                                      |



## (7) Note (changing positioning band during movement)

**Caution**

- The positioning band cannot be changed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.

→ Cannot be changed. If data is written, the data is reflected in the next positioning.

Write the target position specification register (9900<sub>H</sub>) through acceleration/deceleration specification register (9906<sub>H</sub>)



Start normal operation



Write the positioning band specification registers (9902<sub>H</sub> and 9903<sub>H</sub>)



The actuator continues with the normal operation at the original positioning band setting

Complement: Writing the positioning band specification registers alone cannot effect an actual movement command.

Therefore, the data changed by writing the positioning band specification registers (9902<sub>H</sub> and 9903<sub>H</sub>) will become effective when the next movement command is executed.

### 6.7.2 Writing Position Table Data

#### [1] Function

Position table data can be changed using this query.

Every time an access is made to the start address list (Address +0000<sub>H</sub> to +000E<sub>H</sub>), it is read out of the non-volatile memory in the unit of 1 position data, and gets stored to the non-volatile memory (EEPROM, FeRAM) after the writing is executed. Check the limit for number of writing from the [basic specifications described in an instruction manual for each controller].

\* There is no limit to number of writing for FeRAM.

The EEPROM has a rewrite life of approx. 100, 000 times due to device limitations. If the position table data is written frequently, the EEPROM will reach its rewrite life quickly and a failure may occur. Accordingly, be careful not to let unexpected loops, etc., occur due to the logics on the host side.

#### [2] Start address list

In a query input, each address is calculated using the formula below:

$$1000_{\text{H}} + (16 \times \text{Position No.})_{\text{H}} + \text{Address (Offset)}_{\text{H}}$$

Example : Change the speed command register for position No. 200

$$1000_{\text{H}} + (16 \times 200 = 3200)_{\text{H}} + 4_{\text{H}}$$

$$= 1000_{\text{H}} + \text{C80}_{\text{H}} + 4_{\text{H}}$$

$$= 1\text{C84}_{\text{H}}$$

“1C84” becomes the input value for the start address field of this query.

**Note** The maximum position number varies depending on the controller model and the PIO pattern currently specified.

### ■ Position data change registers

| Address | Symbol | Name                        | Sign | Register size | Byte size | Input unit |
|---------|--------|-----------------------------|------|---------------|-----------|------------|
| +0000   | PCMD   | Target position             | ○    | 2             | 4         | 0.01mm     |
| +0002   | INP    | Positioning band            |      | 2             | 4         | 0.01mm     |
| +0004   | VCMD   | Speed command               |      | 2             | 4         | 0.01mm/s   |
| +0006   | ZNMP   | Individual zone boundary +  | ○    | 2             | 4         | 0.01mm     |
| +0008   | ZNLP   | Individual zone boundary -  | ○    | 2             | 4         | 0.01mm     |
| +000A   | ACMD   | Acceleration command        |      | 1             | 2         | 0.01G      |
| +000B   | DCMD   | Deceleration command        |      | 1             | 2         | 0.01G      |
| +000C   | PPOW   | Push-current limiting value |      | 1             | 2         | %          |
| +000D   | LPOW   | Load current threshold      |      | 1             | 2         | %          |
| +000E   | CTLF   | Control flag specification  |      | 1             | 2         |            |

\* Addresses starting with “+” indicate offsets.

Note RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC cannot write in to this address. They return an exceptional response.

### [3] Query format

1 register = 2 bytes = 16 bit data

| Field                   | Number of characters | ASCII mode fixed character string                | Remarks                                                                                         |
|-------------------------|----------------------|--------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Header                  | 1                    | ‘:’                                              |                                                                                                 |
| Slave address [H]       | 2                    | Arbitrary                                        | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> if broadcast is specified |
| Function code [H]       | 2                    | ‘1’, ‘0’                                         | Numerical value specification                                                                   |
| Start address [H]       | 4                    | Arbitrary                                        | Refer to [6.7.2 [2] Start address list]                                                         |
| Number of registers [H] | 4                    | Arbitrary                                        | Refer to [6.7.2 [2] Start address list]                                                         |
| Number of bytes [H]     | 2                    | In accordance with the number of registers above | A value corresponding to twice the number of registers specified above is input.                |
| Changed data 1 [H]      | 4                    | -                                                | Refer to [6.7.2 [2] Start address list]                                                         |
| Changed data 2 [H]      | 4                    | -                                                | Refer to [6.7.2 [2] Start address list]                                                         |
| Changed data 3 [H]      | 4                    | -                                                | Refer to [6.7.2 [2] Start address list]                                                         |
| :                       | :                    | -                                                | :                                                                                               |
| Error check [H]         | 2                    | LRC calculation result                           |                                                                                                 |
| Trailer                 | 2                    | ‘CR’, ‘LF’                                       |                                                                                                 |
| Total number of bytes   | Up to 256            | -                                                |                                                                                                 |

## [4] Response format

If the change is successful, a response message that is effectively a copy of the query message, except for the byte count and new data, will be returned.

| Field                   | Number of characters | ASCII mode fixed character string | Remarks                                                                                         |
|-------------------------|----------------------|-----------------------------------|-------------------------------------------------------------------------------------------------|
| Header                  | -                    | -                                 |                                                                                                 |
| Slave address [H]       | 1                    | Arbitrary                         | Axis No. + 1 (01 <sub>H</sub> to 10 <sub>H</sub> )<br>00 <sub>H</sub> if broadcast is specified |
| Function code [H]       | 1                    | 10                                | Numerical value specification                                                                   |
| Start address [H]       | 2                    | Arbitrary                         | Refer to [6.7.2 [2] Start address list]                                                         |
| Number of registers [H] | 2                    | Arbitrary                         | Refer to [6.7.2 [2] Start address list]                                                         |
| Error check [H]         | 2                    | CRC (16 bits)                     |                                                                                                 |
| Trailer                 | -                    | -                                 |                                                                                                 |
| Total number of bytes   | 8                    | -                                 |                                                                                                 |

## [5] Detailed explanation of registers

■ Target position specification registers (PCMD)

The positioning target position in PTP Operation should be indicated in a position on the absolute coordinates. The value of this register is set in units of 0.01mm in a range of -999999 to 999999 (FFF0BDC1<sub>H</sub> (Note 1) to 000F423F<sub>H</sub>).

When the absolute coordinate is indicated, operation starts with 0.2mm in front (Note 2) of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900<sub>H</sub>) is rewritten. In other words, a numerical movement command can be issued simply by writing a target position in this register.

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

■ Positioning band Specification Register (INP)

This register is used in two different ways depending on the type of operation. The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete. The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01mm in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>).

Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later.



## Caution

- It is necessary that the positioning band is at or more than the value figured out with the formulas below.
    - For Servo motor:  $\text{Actuator Lead Length} \div \text{Encoder Pulse}$
    - For Pulse Motor:  $\text{Actuator Lead Length} \div \text{Encoder Pulse} \times 3$
- Apply the servo motor formula for RCP6 Actuator

### ■ Speed Specification Register (VCMD)

This register specifies the moving speed. The value of this register is set in units of 0.01mm/s in a range of 1 to 999999 (00000001<sub>H</sub> to 000F423F<sub>H</sub>). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

### ■ Individual Zone Boundaries $\pm$ (ZNMP, ZNLP)

These registers output zone signals that are effective only during positioning, separately from the zone boundaries set by parameters.

Set in ZNMP the positive zone signal output boundary expressed using absolute coordinates, and set the negative zone signal output boundary in ZNLP. The corresponding bit in the zone register remains ON while the current position is within these positive and negative boundaries. The value of this register is set in units of 0.01mm, and in a range of -999999 to 999999 (FFF0BDC1<sub>H</sub> (Note 1) to 000F423F<sub>H</sub>) for both registers. However, ZNMP must be greater than ZNLP.

Set the same value in both ZNMP and ZNLP to disable the individual zone output.

Note 1 To set a negative value, use a two's complement.

### ■ Acceleration specification register registers (ACMD)

This register specifies the acceleration during positioning. The value of this register is set in units of 0.01G in a range of 1 to 300 (1 to 012C<sub>H</sub>). If the specified value exceeds the maximum acceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

### ■ Deceleration specification register (ACMD)

This register specifies the deceleration during positioning.

The value of this register is set in units of 0.01G in a range of 1 to 300 (1 to 012C<sub>H</sub>). If the specified value exceeds the maximum deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

### ■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name            | Pushable range [%] | Settable range (input value) [H] |
|--------------------------------|--------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 (Note 1)  | 33 to B2                         |
| RCS2-RA13R                     | 20 to 200          | 33 to 1FE                        |

Note 1 The setting ranges may vary depending on the actuator.

For details, refer to the [IAI catalog] or [operation manual of actuator].

Operation should start once this register is overwritten. Therefore, it can be realized by this register when it is required to change the current limit during the pressing operation.

Sample push-motion current setting:

- When setting the current to 20%

$$255 (100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}} \text{ (Convert into hexadecimal number)}$$

### ■ Load Output Current Threshold (LPOW)

To perform load output judgment, set the current threshold in LPOW. Set an appropriate value according to the actuator used, just like the push current limit (PPOW). If load output judgment is not performed, set "0".

### ■ Control Flag Specification register (CTLF)

Refer to [6.7.1 [5] Control flag specification register].

## [6] Sample query

A sample query that rewrites all data of position No. 12 of axis No. 0 is shown below.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Individual zone boundary+ [mm] | Individual zone boundary- [mm] | Acceleration [G] | Deceleration [G] | Push [%] | Load Output Current Threshold [%] | Movement control |
|----------------------|-----------------------|--------------|--------------------------------|--------------------------------|------------------|------------------|----------|-----------------------------------|------------------|
| 100                  | 0.1                   | 200          | 60                             | 40                             | 0.01             | 0.3              | 0        | 0                                 | Normal movement  |

## ■ Query:

01 10 10C0 000F 1E 0000 2710 0000 000A 0000 4E20 0000 1770 0000 0FA0 0001 001E  
0000 0000 0000 EE [CR] [LF]

■ Received response: 01 10 10C0 000F 10 [CR] [LF]

\* The query message is copied, except for the number of bytes and new data, and returned as a response.

## ■ Breakdown of Query Message

| Field                                                                | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks                                                                                                   |
|----------------------------------------------------------------------|-----------------------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------|
| Header                                                               | ':'                               | 3A                            |                                                                                                           |
| Slave address                                                        | '0', '1'                          | 3031                          | Axis No.0 + 1                                                                                             |
| Function code                                                        | '1', '0'                          | 3130                          |                                                                                                           |
| Start address                                                        | '1', '0', 'C', '0'                | 31304330                      | The start address is the target position specification register 10C0 <sub>H</sub> for position No. 12. *1 |
| Number of registers                                                  | '0', '0', '0', 'F'                | 30303046                      | Total 15 registers of register symbols PCMD to CTLF are specified to be written.                          |
| Number of bytes                                                      | '1', 'E'                          | 3145                          | 15 registers × 2 = 30 bytes → 1E <sub>H</sub>                                                             |
| New data 1, 2<br>(Target position )<br>Input unit (0.01mm)           | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                |
|                                                                      | '2', '7', '1', '0'                | 32373130                      | 100mm × 100 = 10000 → 2710 <sub>H</sub>                                                                   |
| New data 3, 4<br>(Positioning band)<br>Input unit (0.01mm)           | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                |
|                                                                      | '0', '0', '0', 'A'                | 30303041                      | 0.1mm × 100 = 10 → 000A <sub>H</sub>                                                                      |
| New data 5, 6 (Speed)<br>Input unit (0.01mm/s)                       | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                |
|                                                                      | '4', 'E', '2', '0'                | 34453230                      | 200mm/s × 100 = 20000 → 4E20 <sub>H</sub>                                                                 |
| New data 7, 8<br>(Individual zone boundary+)<br>Input unit (0.01mm)  | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                |
|                                                                      | '1', '7', '7', '0'                | 31373730                      | 60mm × 100 = 6000 → 1770 <sub>H</sub>                                                                     |
| New data 9, 10<br>(Individual zone boundary-)<br>Input unit (0.01mm) | '0', '0', '0', '0'                | 30303030                      | All upper bits of the 32-bit data are "0".                                                                |
|                                                                      | '0', 'F', 'A', '0'                | 30464130                      | 40mm × 100 = 4000 → 0FA0 <sub>H</sub>                                                                     |
| New data 11<br>(Acceleration)<br>Input unit (0.01G)                  | '0', '0', '0', '1'                | 30303031                      | 0.01G × 100 = 1 → 0001 <sub>H</sub>                                                                       |
| New data 12<br>(Deceleration)<br>Input unit (0.01G)                  | '0', '0', '1', 'E'                | 30303145                      | 0.3G × 100 = 30 → 001E <sub>H</sub>                                                                       |
| New data 13 (Push)<br>Input unit [%]                                 | '0', '0', '0', '0'                | 30303030                      | 0% → 0 <sub>H</sub>                                                                                       |

## 6.7 Direct Writing of Positioning Data (Function code 10)

| Field                                     | ASCII mode<br>fixed character string | Converted<br>ASCII code<br>data [H] | Remarks                                                                                              |
|-------------------------------------------|--------------------------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| New data 14 (Threshold<br>Input unit [%]) | '0', '0', '0', '0'                   | 30303030                            | 0% → 0 <sub>H</sub>                                                                                  |
| New data 15 (Control flag)                | '0', '0', '0', '0'                   | 30303030                            | All bits are "0", because normal operation is<br>specified.<br>0000 <sub>b</sub> → 0000 <sub>H</sub> |
| Error check                               | 'E', 'E'                             | 4545                                | CRC checksum calculation result → 701E <sub>H</sub>                                                  |
| Trailer                                   | 'CR', 'LF'                           | 0D0A                                |                                                                                                      |
| Total number of bytes                     | 79                                   | -                                   |                                                                                                      |

\*1 Calculation of start address

Example: All data of position No. 12 is changed. Accordingly, the target position address of position No. 12 is set in the start address field of this query.

$$1000_{\text{H}} + (16 \times 12 = 192)_{\text{H}} + 0_{\text{H}}$$

$$= 1000_{\text{H}} + \text{C0}_{\text{H}} + 0_{\text{H}}$$

$$= 10\text{C0}_{\text{H}}$$

"10C0" becomes the input value for the start address field of this query.

Shown below are the screens of IAI's IA-OS, indicating how position data changes before and after a query message is sent.


(Note) It is not possible to connect both PC software and Modbus at the same time. The example below shows the case when switching the connection between IA-OS and Modbus.

### ■ Before a query is sent

| No. | Position [mm] | Velocity [mm/s] | Acceleration [G] | Deceleration [G] | Operation type (Pressing force[%]) | Load current threshold[%] | Positioning band[mm] / pressing band[mm] | Zone + side [mm] | Zone - side [mm] | Acceleration/deceleration mode | Positioning method |
|-----|---------------|-----------------|------------------|------------------|------------------------------------|---------------------------|------------------------------------------|------------------|------------------|--------------------------------|--------------------|
| 9   |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 10  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 11  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 12  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |
| 13  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                    |

### ■ After a query is sent

| No. | Position [mm] | Velocity [mm/s] | Acceleration [G] | Deceleration [G] | Operation type (Pressing force[%]) | Load current threshold[%] | Positioning band[mm] / pressing band[mm] | Zone + side [mm] | Zone - side [mm] | Acceleration/deceleration mode | Positioning method  |
|-----|---------------|-----------------|------------------|------------------|------------------------------------|---------------------------|------------------------------------------|------------------|------------------|--------------------------------|---------------------|
| 9   |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |
| 10  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |
| 11  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |
| 12  | 0.00          | 200.00          | 0.01             | 0.30             | Positioning                        | 0                         | 0.10                                     | 60.00            | 40.00            | 0:Trapezoid                    | 0:Absolute position |
| 13  |               |                 |                  |                  |                                    |                           |                                          |                  |                  |                                |                     |

\* The overwritten data is not displayed until the button  is pressed or the Edit Position Data window is reopened.



**Serial  
Communication**

---

**Chapter 7**

# Troubleshooting

|     |                                                            |     |
|-----|------------------------------------------------------------|-----|
| 7.1 | Responses at Errors (Exception Responses).....             | 7-1 |
| 7.2 | Notes .....                                                | 7-4 |
| 7.3 | Countermeasure When Communication Not Well Established ... | 7-5 |

### 7.1 Responses at Errors (Exception Responses)

In each query (command), except for a broadcast query message, the master issues a query by expecting a “successful” response (response), and the applicable slave must return a response to the query. If the query is processed successfully, the slave returns a “successful” response. If an error occurs, however, the slave returns an exception response.

The slave responds to a query in one of the following four ways:

- (1) The slave receives the query successfully, processes it successfully, and then returns a “successful” response.
- (2) The slave returns no response because the query could not be received due to a communication error, etc. The master generates a timeout error.
- (3) The slave also returns no response if the query is received but is found invalid because a LRC/CRC error is detected. In this case, the master also generates a timeout error.
- (4) If the query is received properly without generating errors but it cannot be processed for some reason (such as when the applicable register does not exist), the slave returns an exception response that contains an exception code indicating the content of exception.

Example of exception response generation

[1] Sample query message using Read Input Status

| Field             | Sample value [Hex] | ASCII mode character string | RTU mode 8 bits [Hex] |
|-------------------|--------------------|-----------------------------|-----------------------|
| Header            |                    | ‘.’                         | None                  |
| Slave address     | 03 <sub>H</sub>    | ‘0’, ‘3’                    | 03                    |
| Function code     | 02 <sub>H</sub>    | ‘0’, ‘2’                    | 02                    |
| Start address [H] | 04 <sub>H</sub>    | ‘0’, ‘4’                    | 04                    |
| Start address (L) | A1 <sub>H</sub>    | ‘A’, ‘1’                    | A1                    |
| Number of DIs [H] | 00 <sub>H</sub>    | ‘0’, ‘0’                    | 00                    |
| Number of DIs (L) | 14 <sub>H</sub>    | ‘1’, ‘4’                    | 14                    |
| Error check       |                    | LRC (2 characters)          | CRC (16 bits)         |
| Trailer           |                    | CR/LF                       | None                  |
| Total bytes       |                    | 17                          | 8                     |

If input status 04A1<sub>H</sub> does not exist, the following exception response will be returned.

[2] Sample exception response from a slave

| Field          | Sample value [Hex] | ASCII mode character string | RTU mode 8 bits [Hex] |
|----------------|--------------------|-----------------------------|-----------------------|
| Header         |                    | ‘.’                         | None                  |
| Slave address  | 03 <sub>H</sub>    | ‘0’, ‘3’                    | 03                    |
| Function code  | 82 <sub>H</sub>    | ‘8’, ‘2’                    | 82                    |
| Exception code | 02 <sub>H</sub>    | ‘0’, ‘2’                    | 02                    |
| Error check    |                    | LRC (2 characters)          | CRC (16 bits)         |
| Trailer        |                    | CR/LF                       | None                  |
| Total bytes    |                    | 11                          | 5                     |

The exception response consists of the slave address field, function code field, and data field. In the slave address field, the applicable slave address is set as in the slave address field of a “successful” response. In the function code field, the function code in the query is set, and then the MSB (most significant bit of the function code) of this field is set to “1”. This allows the master to recognize that the message is not a “successful” response, but an exception response. An exception code indicating the content of exception is set in the data field.

Example) Query function code "02<sub>H</sub>" (00000010<sub>b</sub>)  
 Exception response function code "82<sub>H</sub>" (10000010<sub>b</sub>)

### ■ Exception codes

The table below lists the exception codes that may generate in controllers, as well as the contents of respective codes.

| Code [Hex]      | Exception code       | Function                                                                                         | Remarks                                                                                                   |
|-----------------|----------------------|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| 01 <sub>H</sub> | Illegal Function     | Indicates that the function is invalid.                                                          | The query cannot be executed because a major error has occurred on the slave side due to function errors. |
| 02 <sub>H</sub> | Illegal Data Address | Indicates that the data address is invalid.                                                      | Use of the data address value is not permitted.                                                           |
| 03 <sub>H</sub> | Illegal Data Value   | Indicates that the data is invalid.                                                              | Use of the data value is not permitted.                                                                   |
| 04 <sub>H</sub> | Slave Device Failure | Indicates that the query cannot be executed because an irremediable error occurred in the slave. | The query cannot be executed because a major error has occurred on the slave side.                        |

## 7.2 Notes

- When referencing registers using Modbus functions, registers belonging to multiple categories cannot be read simultaneously using a single message. To reference registers belonging to multiple categories, read them using multiple messages by classifying the corresponding addresses by category.
- The explanations in this specification apply commonly to RC controller Series models supporting “Protocol M”. For the specifications and other items specific to each model, refer to the [RC controller’s instruction manual] that comes with the applicable controller.
- In SCON Series, when the ASCII data with only header and trailer with nothing inside such as “:¥r¥n” is received, it should generate Alarm Code: 0FA “CPU Error”.

## 7.3 Countermeasure When Communication Not Well Established


Select an applicable item and perform the processing enclosed with □.

The specific processing details are explained after the flowchart; check the details indicated by the \* symbol.

○ = Yes, × = No


Symptom: Cannot communicate normally!

Was communication possible until now?

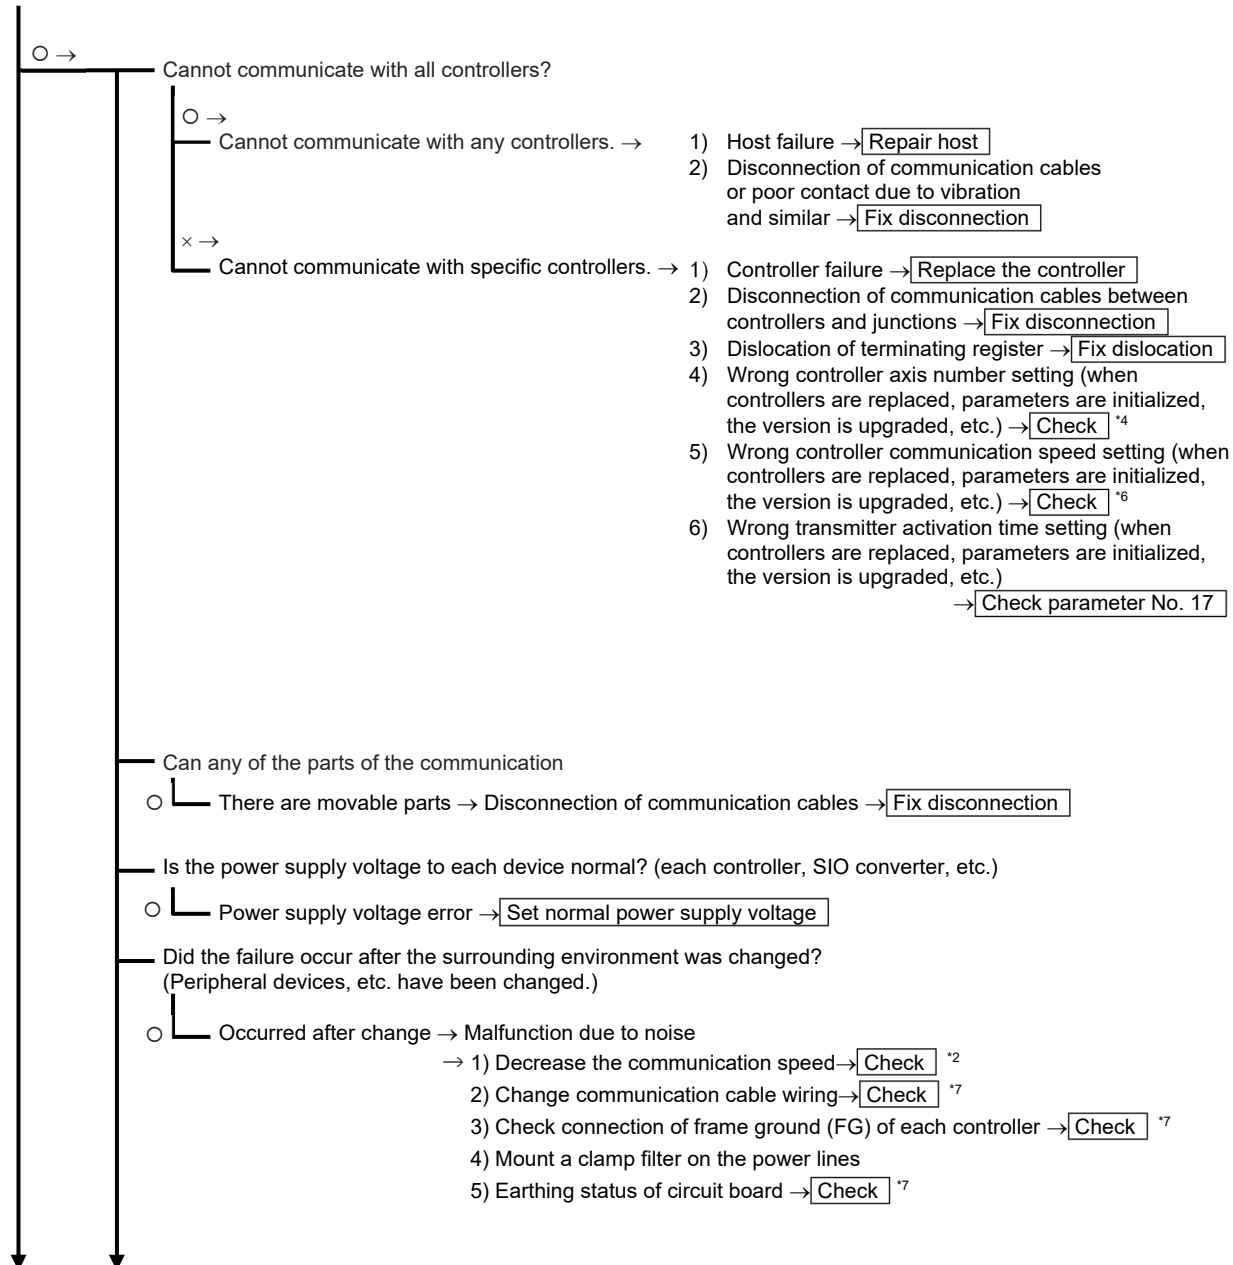


Continue to the next page

Continued from the previous page

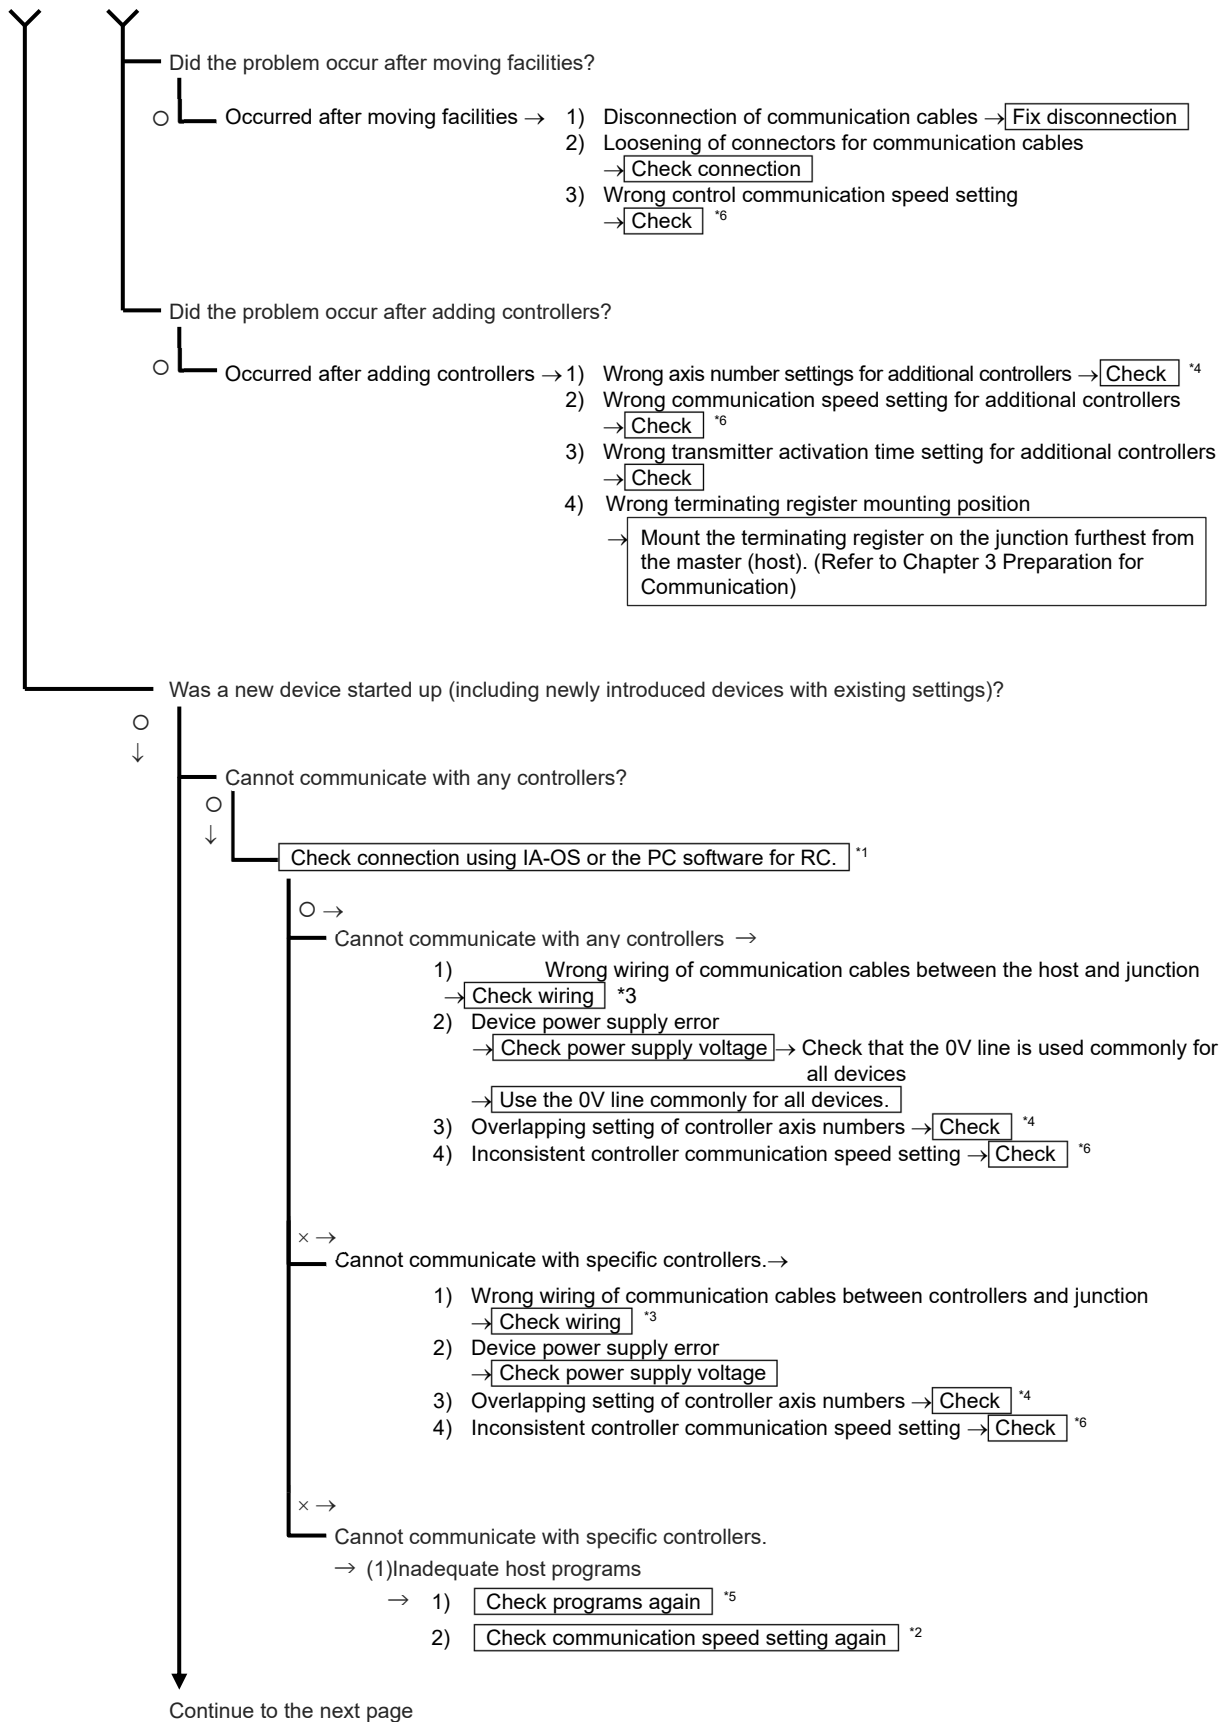

Continued from the previous page

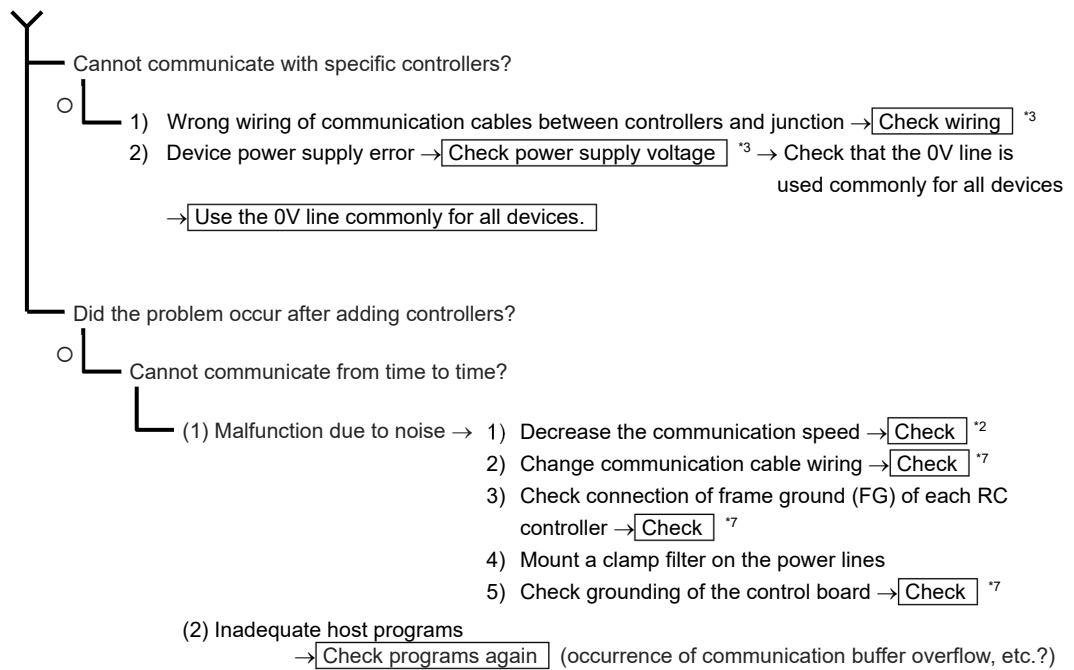

\*1 Connect a PC to the host following the procedure explained in sections [3.1.1], [3.2] and [3.3]

1) Start the PC software.

2) Select “Application Setting” from the “Setting” menu.

Check that the port is set to the port number of the PC used and that the last axis number is set to a value larger than the number of connected axes in the Communication Setting window.

(If any settings are wrong, correct the settings and then restart the PC software for RC.)

3) Select “Edit/Teach” from the “Position” menu.

The Position Data Edit Axis Selection window appears, displaying the connected axes. Axes for which connected axis numbers are displayed can communicate normally.

\*2 Refer to [3.6] to decrease the communication speed.

\*3 Refer to [3.1], [3.2] and [3.3] to check wiring again.

\*4 Refer to [3.5] to check the axis number settings again (check that there are no overlapping numbers).

\*5 Check again that the procedure in section [3.4] is followed correctly.




- 1) If queries other than those that use a function code 03 are used, check that the PIO/Modbus switching in sections [5.4.16] (RTU) and [6.5.16] (ASCII) is set to the Modbus side.
  - 2) Unless the RC controller is restarted using the PC software for RC, the communication speed setting selected when connecting the PC software for RC is maintained. In this case, restart the RC controller.
- \*6 Refer to [3.6] to check the communication speed setting again.  
Set the same communication speed for all RC controllers as well as the host.
- \* Check 5 2).
  - \* The baud rate of an RC controller automatically switches to 9600bps if it detects a break (space) signal lasting 150ms or longer from the SIO port.  
In some PCs, transmission lines are placed in break condition when the communication port is not open. That if such PCs are used, the baud rate of the connected RC controllers may be set to 9600 bps unintentionally.
- \*7 Wire communication cables such that they do not run in parallel with power cables and cables that send pulse signals.  
Check that the communication cable is properly shielded (recommendation: 1-point ground).  
Check that the setting environment and noise countermeasures live up to the specifications given in the instruction manual of each RC controller.

If the problems are not solved after checking above step, please contact us.

In this case, please let us know about the phenomena occurring and the result of checking the items in the flowchart as well.



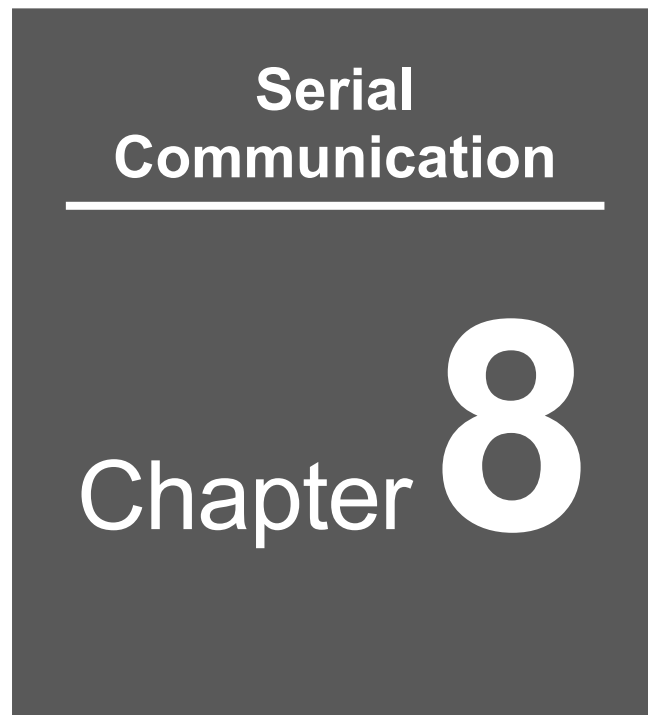

# Reference Materials

|       |                                                          |     |
|-------|----------------------------------------------------------|-----|
| 8.1   | CRC Check Calculation .....                              | 8-1 |
| 8.2   | Configuration of Systems that Use both SIO and PIO ..... | 8-2 |
| 8.3   | Regarding Option Units .....                             | 8-4 |
| 8.3.1 | SIO converter .....                                      | 8-4 |
| 8.3.2 | Controller Link Cable .....                              | 8-8 |
| 8.3.3 | PLC Connection Unit (RCP6S only) .....                   | 8-9 |

## 8-1

ME0162-11A

```

unsigned short CalcCRC16Swap(
 unsigned char* puchMsg,
 unsigned short usDataLen)
{
 unsigned char uchCRCHI = 0xFF;
 unsigned char uchCRCLO = 0xFF;
 unsigned int uIndex;

 while(usDataLen--)
 {
 uIndex = uchCRCHI ^ *puchMsg++;
 uchCRCHI = uchCRCLO ^ auchCRCHI[uIndex];
 uchCRCLO = auchCRCLO[uIndex];
 }
 return (uchCRCHI << 8 | uchCRCLO);
}

const unsigned char auchCRCHI[] =
/* Table of CRC values for high-order byte */
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
};

const unsigned char auchCRCLO[] =
/* Table of CRC values for low-order byte */
0x00, 0xC0, 0xC1, 0x01, 0xC3, 0x03, 0x02, 0xC2, 0xC6, 0x06, 0x07, 0xC7, 0x05, 0xC5, 0xC4, 0x04,
0xCC, 0x0C, 0x0D, 0xCD, 0x0F, 0xCF, 0xCE, 0x0E, 0x0A, 0xCA, 0xCB, 0x0B, 0xC9, 0x09, 0x08, 0xC8,
0xD8, 0x18, 0x19, 0xD9, 0x1B, 0xDB, 0xDA, 0x1A, 0x1E, 0xDE, 0xDF, 0x1F, 0xDD, 0x1D, 0x1C, 0xDC,
0x14, 0xD4, 0xD5, 0x15, 0xD7, 0x17, 0x16, 0xD6, 0xD2, 0x12, 0x13, 0xD3, 0x11, 0xD1, 0xD0, 0x10,
0xF0, 0x30, 0x31, 0xF1, 0x33, 0xF3, 0x32, 0xF2, 0x36, 0xF6, 0x37, 0xF7, 0x35, 0xF5, 0x34, 0xF4,
0x3C, 0xFC, 0xFD, 0x3D, 0xFF, 0x3F, 0xFE, 0xFA, 0x3A, 0x3B, 0xFB, 0x39, 0xF9, 0x38, 0xF8,
0x28, 0xE8, 0xE9, 0x29, 0xEB, 0x2B, 0xEA, 0xEE, 0x2E, 0x2F, 0xEF, 0x2D, 0xED, 0xEC, 0x2C,
0xE4, 0x24, 0x25, 0xE5, 0x27, 0xE7, 0xE6, 0x26, 0x22, 0xE2, 0xE3, 0x23, 0xE1, 0x21, 0x20, 0xE0,
0xA0, 0x60, 0x61, 0xA1, 0x63, 0xA3, 0xA2, 0x62, 0x66, 0xA6, 0xA7, 0x67, 0xA5, 0x65, 0xA4, 0xA4,
0x6C, 0xAC, 0xAD, 0x6D, 0xAF, 0x6F, 0xAE, 0xAA, 0x6A, 0x6B, 0xAB, 0x69, 0xA9, 0xA8, 0x68,
0x78, 0xB8, 0xB9, 0x79, 0xBB, 0x7B, 0xBA, 0xBE, 0x7E, 0xBF, 0x7D, 0xBD, 0xBC, 0x7C,
0xB4, 0x74, 0x75, 0xB5, 0x77, 0xB7, 0xB6, 0x76, 0x72, 0xB2, 0xB3, 0x73, 0xB1, 0x71, 0x70, 0xB0,
0x50, 0x90, 0x91, 0x51, 0x93, 0x53, 0x52, 0x92, 0x96, 0x56, 0x57, 0x97, 0x55, 0x95, 0x94, 0x54,
0x9C, 0x5C, 0x5D, 0x9D, 0x5F, 0x9F, 0x9E, 0x5E, 0x5A, 0x9A, 0x9B, 0x5B, 0x99, 0x59, 0x58, 0x98,
0x88, 0x48, 0x49, 0x89, 0x4B, 0x8B, 0x8A, 0x4A, 0x4E, 0x8E, 0x8F, 0x4F, 0x8D, 0x4D, 0x4C, 0x8C,
0x44, 0x84, 0x85, 0x45, 0x87, 0x47, 0x46, 0x86, 0x82, 0x42, 0x43, 0x83, 0x41, 0x81, 0x80, 0x40,
};


```

It is possible to monitor the current position and other values via the SIO (communication) by running the controller with PIO. All queries that use “function code 03” for either RTU and ASCII can be monitored. Set the [PIO/Modbus Switchover in 5.4.16 or 6.5.16] to PIO, and for the controllers equipped with the operation mode setting switch, set it to AUTO when in use. The following controller models can use both PIO and SIO. (Safety Category Type described)

- [1] Example 1 of system configuration that uses both SIO and PIO




### [2] Example 2 of system configuration that uses both SIO and PIO

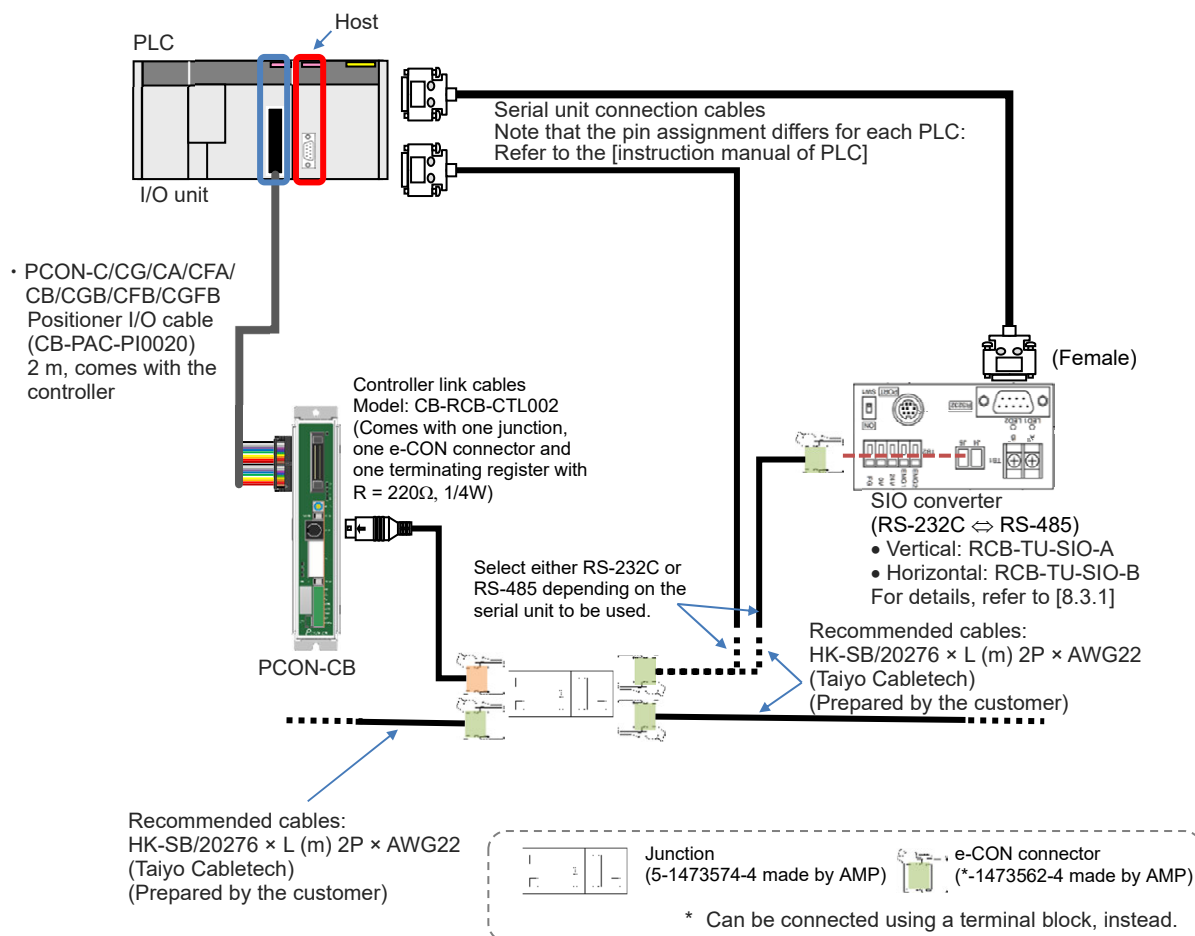

## 8.3 Regarding Option Units

### 8.3.1 SIO converter

It is a unit to mutually convert between RS-232C and RS-485.

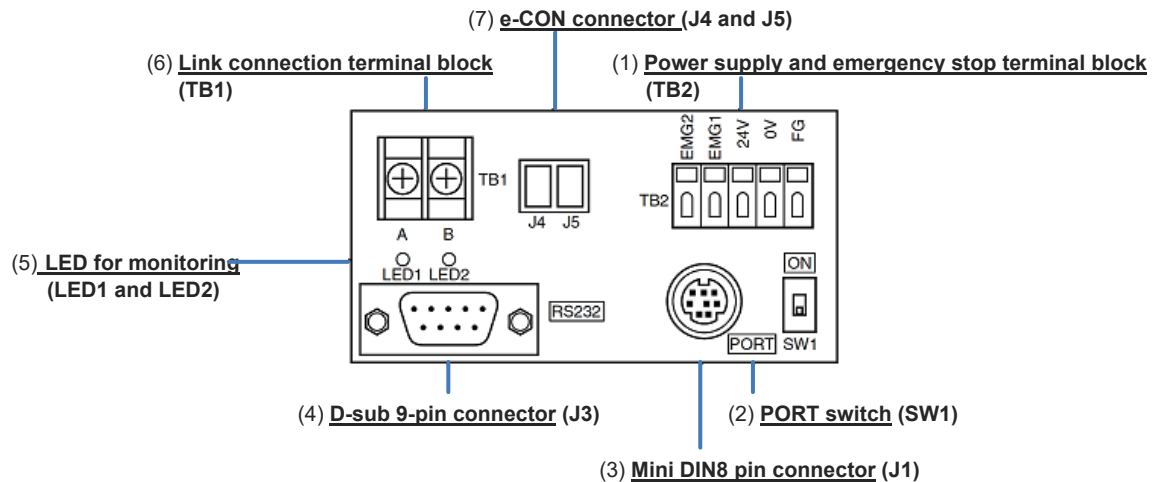

#### (1) Power supply and emergency stop terminal block (TB2)


| Terminal Symbol | Contents                                                                                                                                                                                                                                                                                                                                                        |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| EMG1, EMG2      | If PORT Switch is turned to the on side, the emergency stop switch signal on the teaching pendant should be output and EMG1 and EMG2 should get short-circuited if it is turned to the off side.<br>Take the signals out from here if it is necessary to reflect the emergency stop switch on the teaching pendant to the emergency stop circuit in the system. |
| 24V             | Positive side of 24V DC power supply (It is the power supply for teaching pendant and conversion circuit)                                                                                                                                                                                                                                                       |
| 0V              | Negative side of 24V DC power supply                                                                                                                                                                                                                                                                                                                            |
| FG              | Frame ground                                                                                                                                                                                                                                                                                                                                                    |

Note 0V is connected to Pin 7 (GND) on the communication connector of the controller.

#### ● Connection method

For cables to be connected, use those that comply with the required specifications below.

| Item                   | Specification                                                                                            |
|------------------------|----------------------------------------------------------------------------------------------------------|
| Compatible wires       | Single wire: $\varnothing$ 0.8 to 1.2mm<br>Twisted wire: AWG size 20 to 18 (0.5 to 0.75mm <sup>2</sup> ) |
| Unsheathed Wire Length | 10mm                                                                                                     |

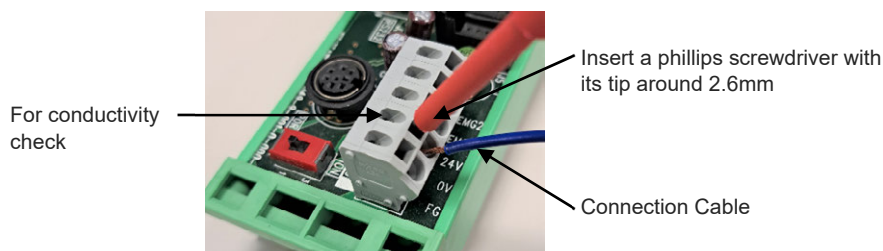

### (2) PORT switch (SW1)

It is a switch to turnover between enable/disable for the connector in (3).

Set it to the on side when it is to be used and to the off side when not to be used.

The emergency stop button switch signal output (between EMG1 and EMG2) should also be Turned over between enable/disable on the teaching pendant at the same time.

### (3) Mini DIN8 pin connector (J1)

It is the inlet for the PC teaching software and the teaching pendant.

### (4) D-sub 9-pin connector

A connector for connection with the PC. (RS-232C)

It should be used when operation is to be performed using the SIO communication.

### (5) LED for monitoring (LED1 and LED2)

LED1: Turns on/flashes when the RC controller is transmitting

LED2: Turns on/flashes when the RS-232C side is transmitting

### (6) Link connection terminal block (TB1)

This is the connection port to obtain communication connection with the controller.


“A” on the left should be connected to the communication line (SGA) of the controller.

(To be connected with Pin 1 of (7) inside)

“B” on the right should be connected to the communication line (SGB) of the controller.

(To be connected with Pin 2 of (7) inside)

\* For the wiring with SGA and SGB to be connected to TB1, it is required to use a shielded twisted pair cable.

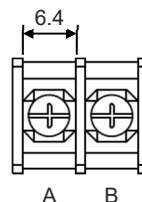

Terminal screw: M3 × 6

### (7) e-CON connector (J4 and J5)


It is to be used when connection is to be established to a controller with e-CON connector without using (6).

The controller link cable (CB-RCB-CTL002) of an option can be connected directly.




## ◆ External Dimensions


[1] DIN Rail Vertical Mount Type (Model: RCB-TU-SIO-A)

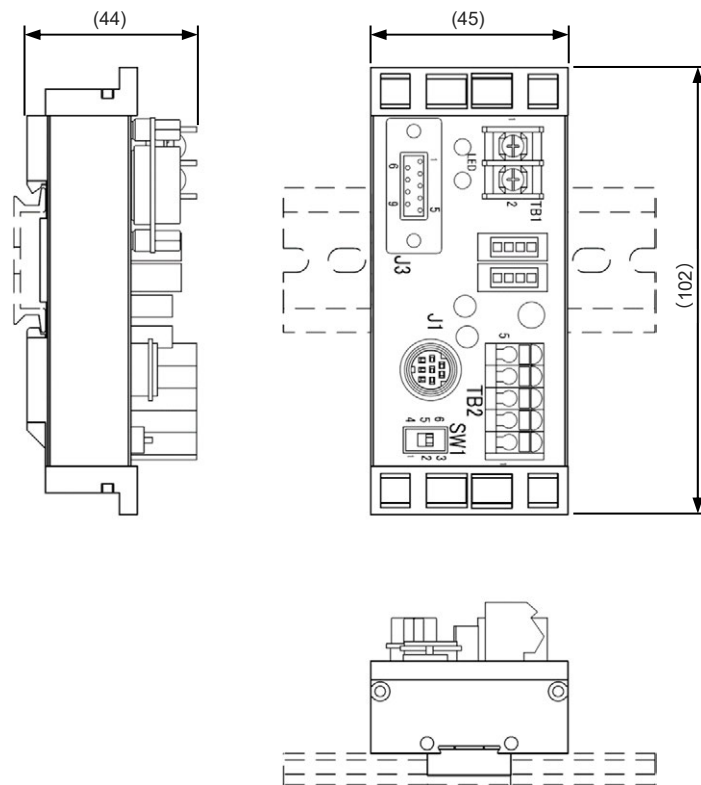

## ◆ Leg Element Top Side Dimensions

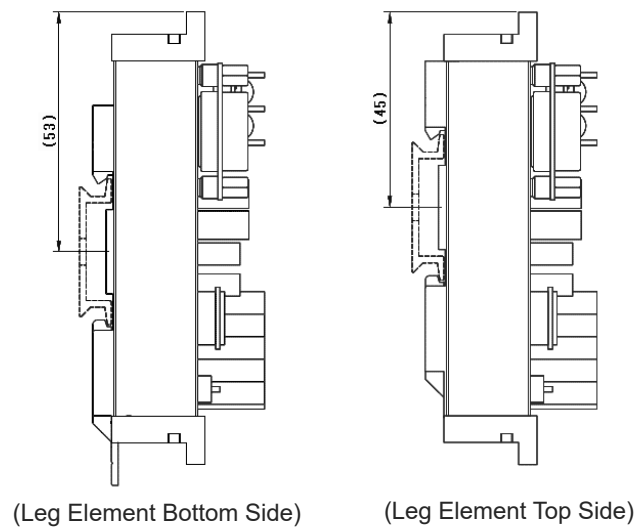


[2] DIN Rail Horizontal Mount Type (Model: RCB-TU-SIO-B)

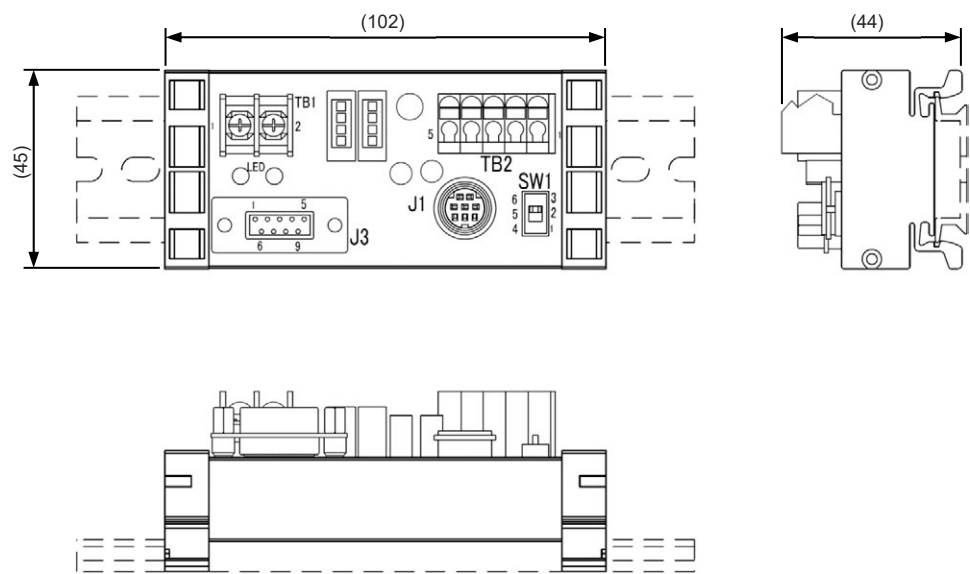




### 8.3.2 Controller Link Cable

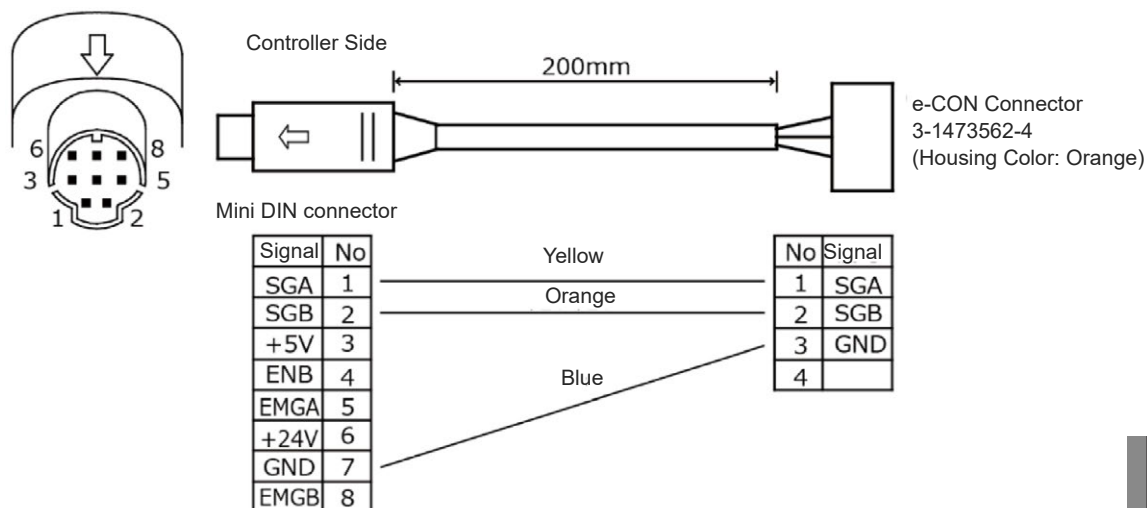It should be used when connecting a controller to the serial communication link.




[Controller link cable accessories]

|             | Part Name                                  | Shape                                                                               | Quantity | Remarks                                                                               |
|-------------|--------------------------------------------|-------------------------------------------------------------------------------------|----------|---------------------------------------------------------------------------------------|
| Accessories | 4-way junction                             |  | 1        | Single product model number:<br>5-1473574-4<br>(Manufactured by AMP)                  |
|             | e-CON Connector                            |  | 1        | Single product model number:<br>4-1473562-4<br>(Manufactured by AMP)<br>* Green       |
|             | Terminal Resistance with a e-CON connector |  | 1        | Connector model number:<br>4-1473562-4<br>(Equipped with resistor with<br>220Ω, 1/4W) |

8.3.3 PLC Connection Unit (RCP6S only)


It is a unit to connect when it is required to operate RCP6S Actuator with the serial communication.

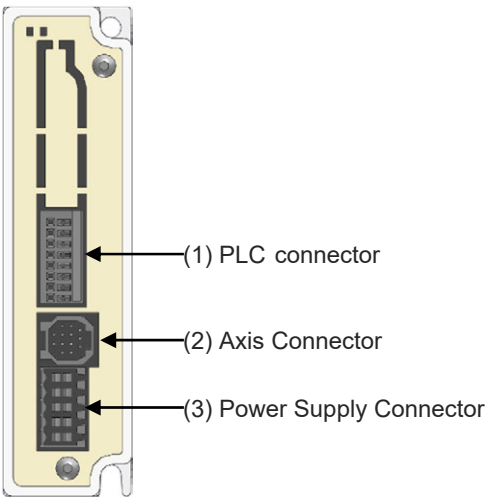

(1) PLC Connector (0138-1108-BK manufactured by DINKLE)

A connector for link connection with an RC controller

- SD+: Connect to pin 1 (SGA) of the communication connector of the RC controller
- SD-: Connect to pin 2 (SGB) of the communication connector of the RC controller
- 0V: Connect to the 0V on the power.

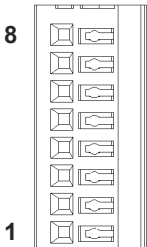

| Pin No. | Signal Name | Description                 |
|---------|-------------|-----------------------------|
| 1       | SD+         | Serial Communication Line + |
| 2       | SD-         | Serial Communication Line - |
| 3       | GND         | 0V                          |
| 4 to 8  | NC          | Do not connect to them.     |



Caution


- At any area other than the teaching board, can access to the position data. “0” should be read in even if readout query gets conducted.
- For RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC, connect a teaching tool such as PC software to the teaching board in order to edit the position data.

## (2) Axis Connector

It is a connection inlet to connect RCP6S actuator. Connection is to be made with a dedicated cable. Refer to the [instruction manual of each actuator].

## (3) Power Supply Connector (PLC unit side model number: 0156-2B10-BK manufactured by DINKLE)


Cable side model number: 0156-2B10-BK manufactured by DINKLE

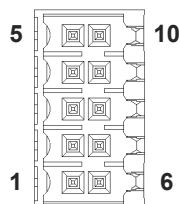

| Pin No. | Signal name | Description                                |
|---------|-------------|--------------------------------------------|
| 1       | FG          | Frame ground                               |
| 2       | NC          | Do not connect to them.                    |
| 3       | EMGS        | Emergency Stop Status                      |
| 4       | -           | Do not connect to them.                    |
| 5       | -           | Do not connect to them.                    |
| 6       | NC          | Do not connect to them.                    |
| 7       | GND         | 0V                                         |
| 8       | CP          | Control Power Supply 24V DC<br>0.3A input  |
| 9       | MP          | Voltage                                    |
|         |             | Motor Types                                |
|         |             | Current Amperage                           |
| 10      | BK          | For brake release, 24V DC, 0.7A max. input |

\* Compatible wires: Single wire: Ø 0.5 to 1.5mm,  
Twisted wire: AWG16 to 20 (strip length 10mm)

### ◆ Example for Power Supply Connector Wiring

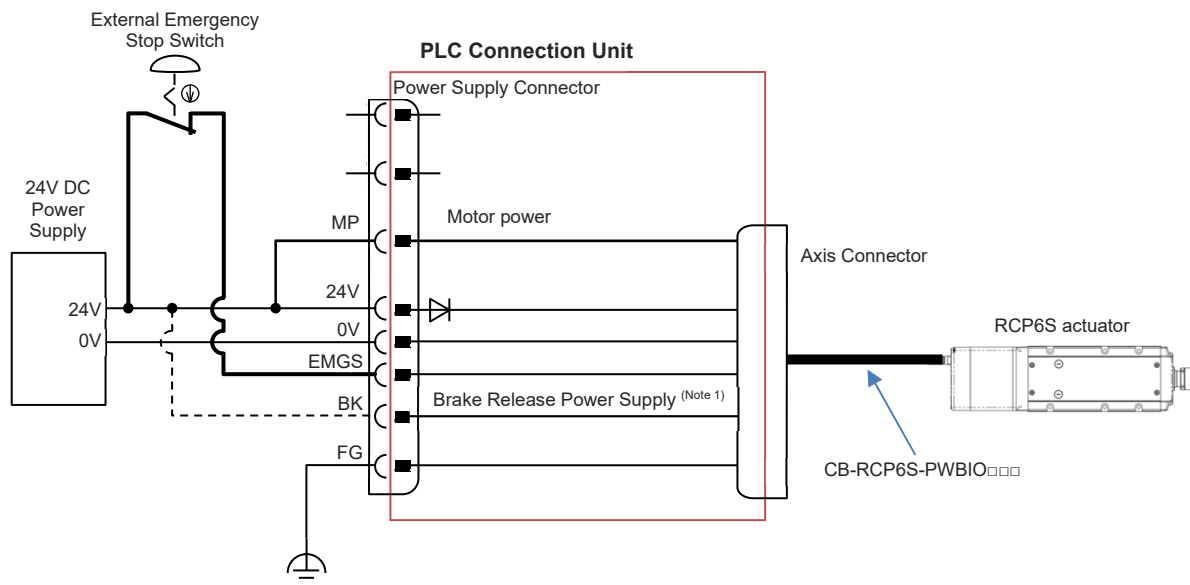

Note 1 It should be used when the brake on an actuator equipped with brake is to be released compulsorily.




### Caution


- When supplying the power by turning ON/OFF the 24V DC, keep the 0V being connected and have the +24V supplied/disconnected (cut one side only). In case of cut on both sides, the electric potential may get unstable if 0V is cut first. It may cause malfunction of components inside the controller.
- The rating for the emergency stop status (EMGS) is 24V DC and 10mA or less.
- Leave for 1s or more after shutting the power off before rebooting.
- Do not attempt to supply only the monitor power without supplying the control power.
- The voltage supplied to a controller may drop and lead to an alarm due to the cable diameter and cable length. In such a case, it is necessary to adjust the output voltage to get the controller supply voltage to 24V.

## ◆ External dimensions

## [1] Screw Fixing Type

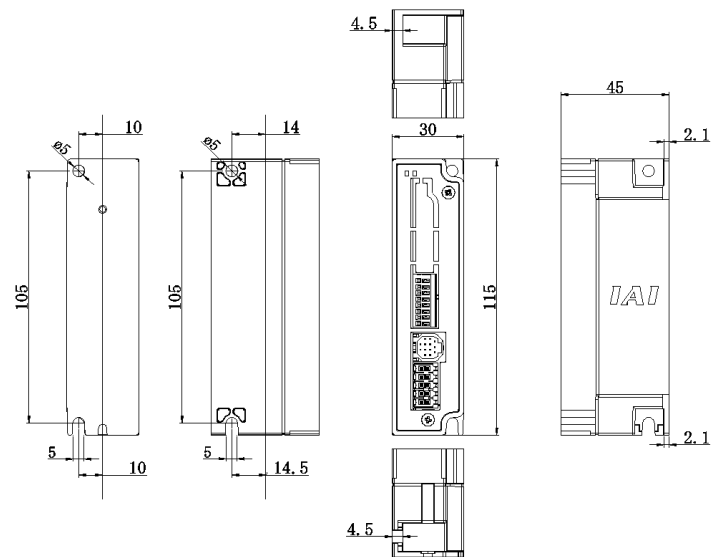


## [2] DIN Rail Fixing Type

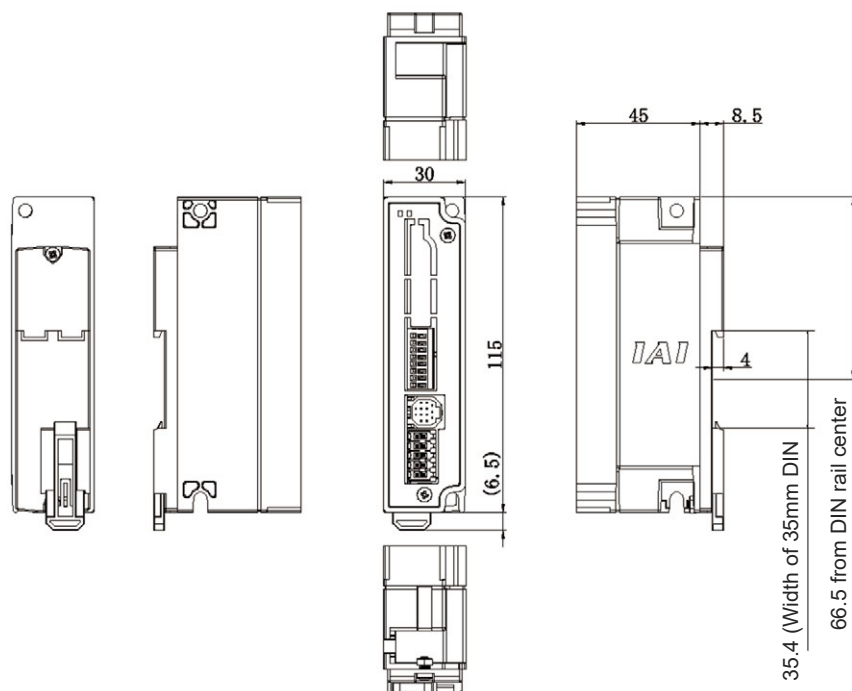

#### ◆ Heat Radiation and Installation

Designing the layout and build the structure considering the size of the control box, layout of the controllers and cooling for installation and heat radiation of RCB-P6PLC, so the ambient temperature around the controllers is 40°C or lower.

To fix the units in the control box, use the attachment holes on top and bottom of the unit for the screw fixed type, and use the DIN rails for the DIN rail fixed type.

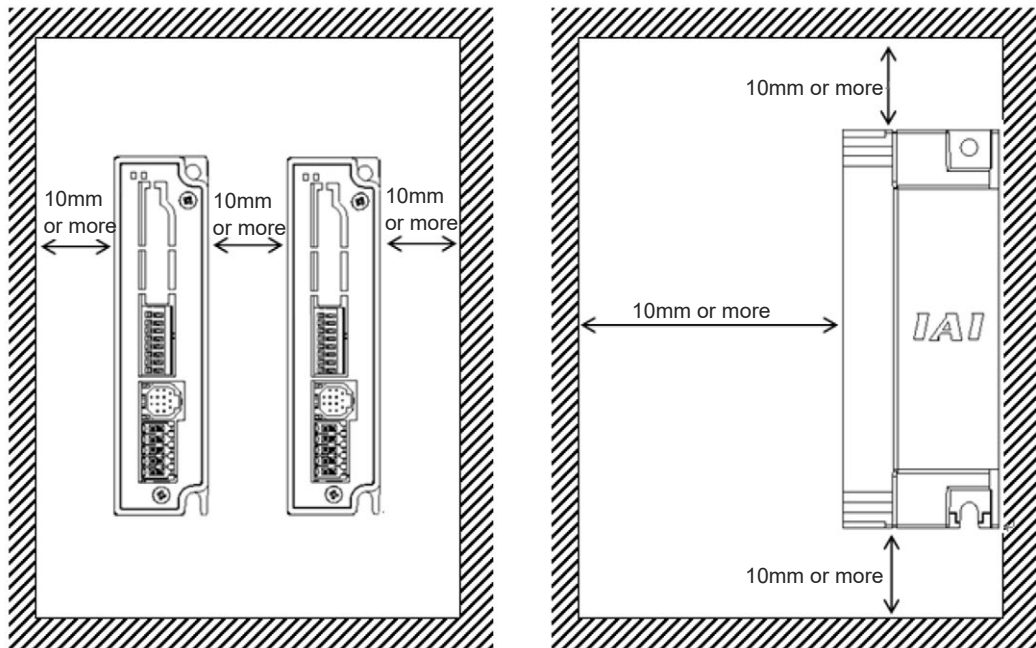



## Revision History

| Revision date | Revised content                                                                                                                                                                                                                                                                                                                                          |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2011.06       | <p>Fourth Edition</p> <ul style="list-style-type: none"> <li>Added "Safety Guide."</li> <li>Added SCON-CA to the supported models.<br/>(Added the load cell calibration command, complete and measurement read commands and registers.)</li> <li>Readjusted the specification of query 06.</li> <li>Readjusted the specification of query 10.</li> </ul> |
| 2011.10       | <p>Fifth Edition</p> <ul style="list-style-type: none"> <li>SCON-CA added to applicable models<br/>(Load cell calibration command, complete, calculated value reading command and register added)</li> </ul>                                                                                                                                             |
| 2012.10       | <p>Sixth Edition</p> <ul style="list-style-type: none"> <li>ERC3, PCON-CA/CFA added to applicable models<br/>(Maintenance information reading command and register added)</li> </ul>                                                                                                                                                                     |
| 2013.06       | <p>Seventh Edition</p> <ul style="list-style-type: none"> <li>Position data reading command added, caution added to the top regarding replacement in relation to message level error outputs</li> </ul>                                                                                                                                                  |
| 2015.10       | <p>Eighth Edition</p> <ul style="list-style-type: none"> <li>Servo-press related items added (Query 03, 05)<br/>(Change page: P. 30 to 32, 51 to 59, 81, 84, 118, 124 to 134, 167 to 177, 229, 232, 266, 272 to 282, 315 to 325)</li> </ul>                                                                                                              |
| 2016.01       | <p>Ninth Edition</p> <ul style="list-style-type: none"> <li>RCP6_PLC connection unit related contents added<br/>(Changed and added pages: Before contents, pg. 13, pg. 17 to pg. 20, pg. 372 to pg. 375)</li> </ul>                                                                                                                                      |
| 2017.01       | <p>9B/9C Edition</p> <ul style="list-style-type: none"> <li>Correction made and explanation added</li> </ul>                                                                                                                                                                                                                                             |
| 2018.07       | <p>Tenth Edition</p> <ul style="list-style-type: none"> <li>Following models added to applicable models<br/>PCON-CYB/PLB/POB, ACON-CYB/PLB/POB, DCON-CYB /PLB/POB, RCM-P6PC, RCM-P6AC and RCM-P6DC</li> <li>Description added for restrictions for RCP6S Series</li> <li>Correction made</li> </ul>                                                      |
| 2018.08       | <p>10B Edition</p> <ul style="list-style-type: none"> <li>Description corrected for models applicable for TFAN</li> <li>Correction made</li> </ul>                                                                                                                                                                                                       |
| 2023.10       | <p>Eleventh Edition</p> <ul style="list-style-type: none"> <li>Full-Scale Revision</li> </ul>                                                                                                                                                                                                                                                            |







## **IAI Corporation**

Head Office: 577-1 Obane Shimizu-KU Shizuoka City Shizuoka 424-0103, Japan  
TEL +81-54-364-5105 FAX +81-54-364-2589  
website: [www.iai-robot.co.jp/](http://www.iai-robot.co.jp/)

## **IAI America, Inc.**

Head Office: 2690 W. 237th Street, Torrance, CA 90505  
TEL +1-310-891-6015 FAX +1-310-891-0815  
Chicago Office: 110 East State Parkway, Schaumburg, IL 60173  
TEL +1-847-908-1400 FAX +1-847-908-1399  
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066  
TEL +1-678-354-9470 FAX +1-678-354-9471  
website: [www.intelligentactuator.com](http://www.intelligentactuator.com)

Technical Support available in Europe

## **IAI Industrieroboter GmbH**

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany  
TEL +49(0)6196-88950 FAX +49(0)6196-889524  
website: [www.iai-automation.com](http://www.iai-automation.com)

Technical Support available in Great Britain



Duttons Way, Shadsworth Business Park, Blackburn, Lancashire, BB1 2QR, United Kingdom  
TEL +44(0)1254-685900  
website: [www.lcautomation.com](http://www.lcautomation.com)

## **IAI (Shanghai) Co., Ltd.**

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China  
TEL+86-21-6448-4753 FAX +86-21-6448-3992  
website: [www.iai-robot.com](http://www.iai-robot.com)

## **IAI Robot (Thailand) Co., Ltd.**

825 PhairojKijja Tower 7th Floor, Debaratana RD., Bangna-Nuea, Bangna, Bangkok 10260, Thailand  
TEL +66-2-361-4458 FAX +66-2-361-4456  
website: [www.iai-robot.co.th](http://www.iai-robot.co.th)